

INSTRUCTION MANUAL ENCLOSED


**ATTENTION**

**IF YOU HAVE ANY PROBLEMS OR QUESTIONS, EMAIL OR  
CALL CUSTOMER SERVICE BEFORE YOU RETURN THIS  
PRODUCT TO THE STORE WHERE IT WAS PURCHASED.**






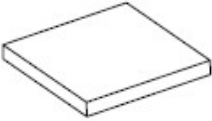


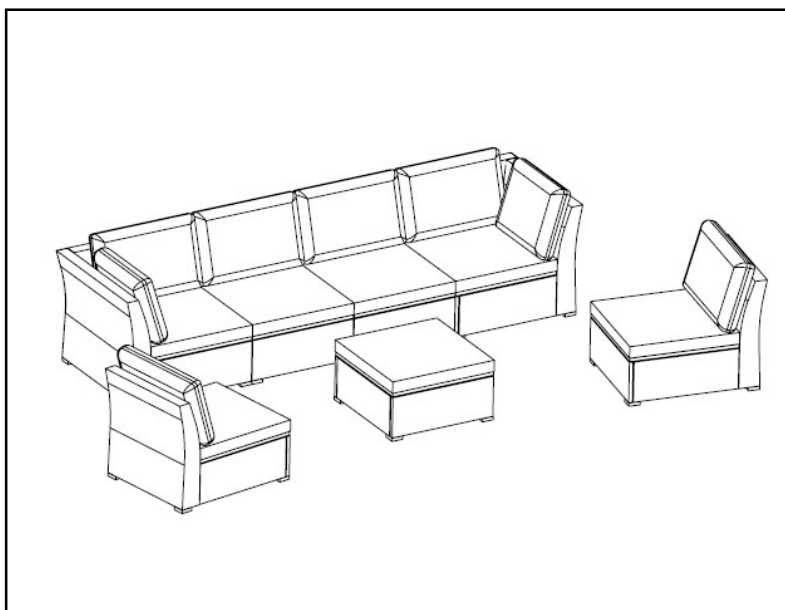




# INSTRUCTION MANUAL ENCLOSED

## OUTDOOR SOFA SET

### OUTDOOR SOFA CORNER ASSEMBLY INSTRUCTION



PARTS LIST		
Part	Description	Quantity
<i>PARTS</i>		
A	Armrest	2
B	Backrest	2
C	Seat	2
D	Side Frame	2
E	Front Frame	2
F	Seat Cushion	2
G	Back Cuhion #1	2
H	Back Cushion #2	2
<i>HARDWARE</i>		
1	Bolt M6x25mm	32
2	Bolt M6x40mm	10
3	Steel Washer M6	26
4	Allen Key	1
5	Plastic Leg	8

<p>A</p>  <p>x2</p>	<p>B</p>  <p>x2</p>	<p>C</p>  <p>x2</p>	<p>D</p>  <p>x2</p>
<p>E</p>  <p>x2</p>	<p>F</p>  <p>x2</p>	<p>G</p>  <p>x2</p>	<p>H</p>  <p>x2</p>
<p>1</p>  <p>x32 M6x25mm</p>	<p>2</p>  <p>x10 M6x40mm</p>	<p>3</p>  <p>x26</p>	<p>4</p>  <p>x1</p>
<p>5</p>  <p>x8</p>			

## PLEASE READ AND FOLLOW ALL SAFETY TIPS


### GETTING STARTED

1. Before assembly, CAREFULLY use scissors or utility knife to cut and unwrap all parts. Make sure you do not discard the hardware.


#### Warm Tips:

1. The plastic covers on some metal parts are just for product protection. Please remove it before assembly.
2. Please follow the sequence of AI during assembly.
3. Do not tighten the screws until all of them are in right positions.


1.Position Armrest (A) and Backrest (B) by the pre-drilled threads. Use Allen Key (4) to fasten Bolts (1) with Washers (3). It should have 2 bolts fastened. Do not tighten bolts. (Photo 1)

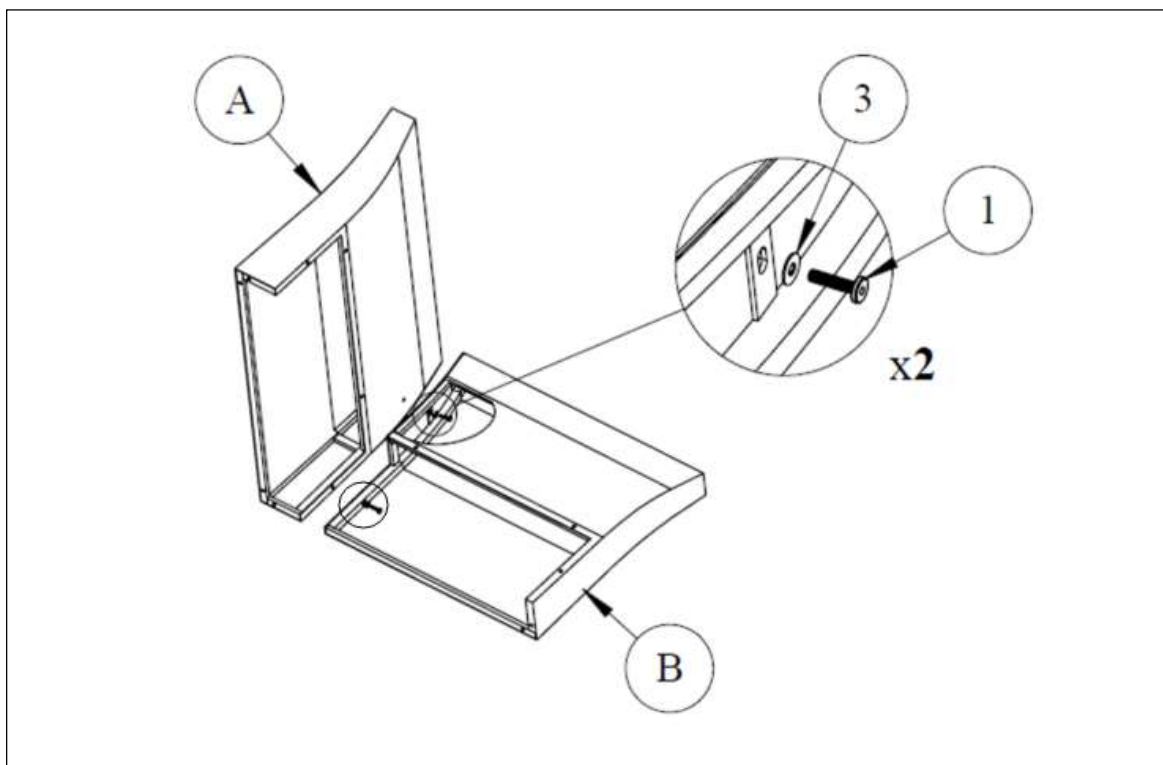


2.Position Seat (C) and frame (1) by the pre-drilled thread. Use Allen Key (4) to fasten Bolts (2) with Washers (3). It should have 4 bolts fastened. Do not tighten bolts. (Photo 2)

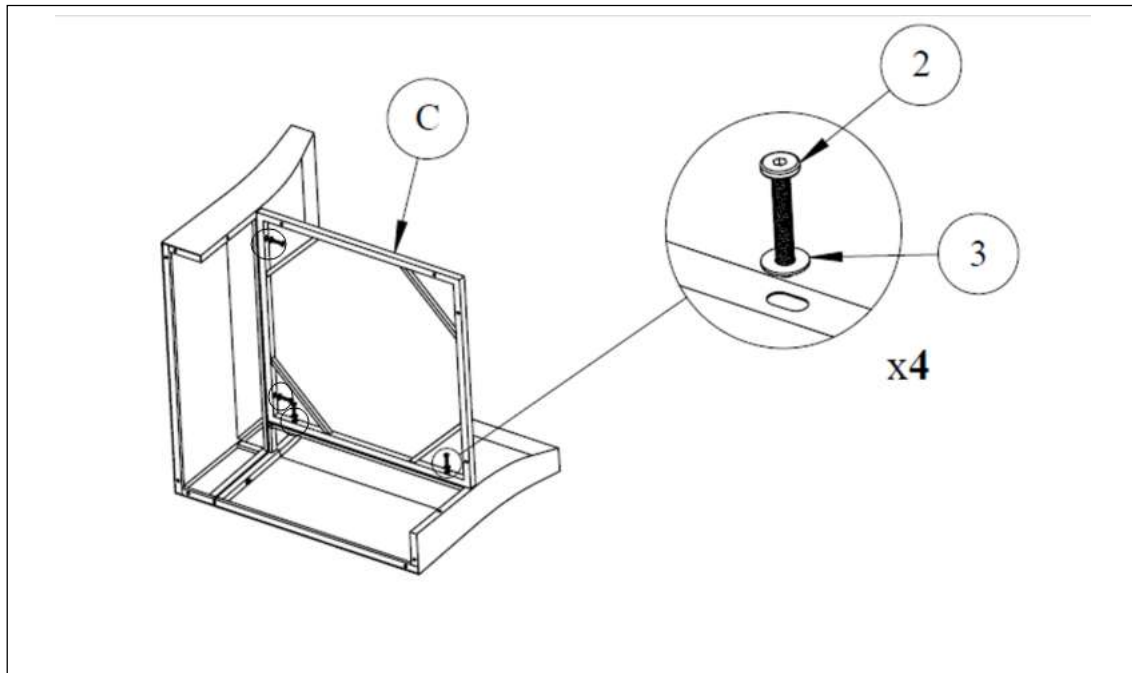


3.Position Side Frame (D) and frame (2) by the pre-drilled threads. Use Allen Key (4) to fasten Bolts (1) with Washers (3). It should have 3 bolts fastened. Do not tighten bolts. (Photo 3)

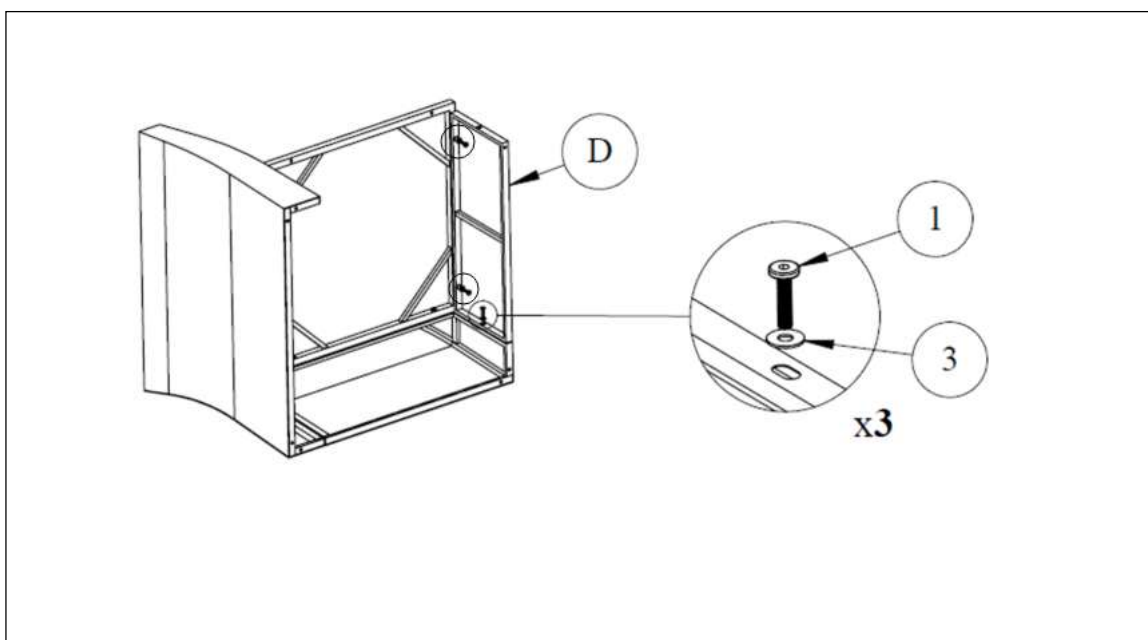


4.Position Front Frame (E) and frame (3) by the pre-drilled threads. Use Allen Key (4) to fasten Bolts (1) with Washers (3). It should have 4 bolts fastened. Do not tighten bolts. (Photo 4)

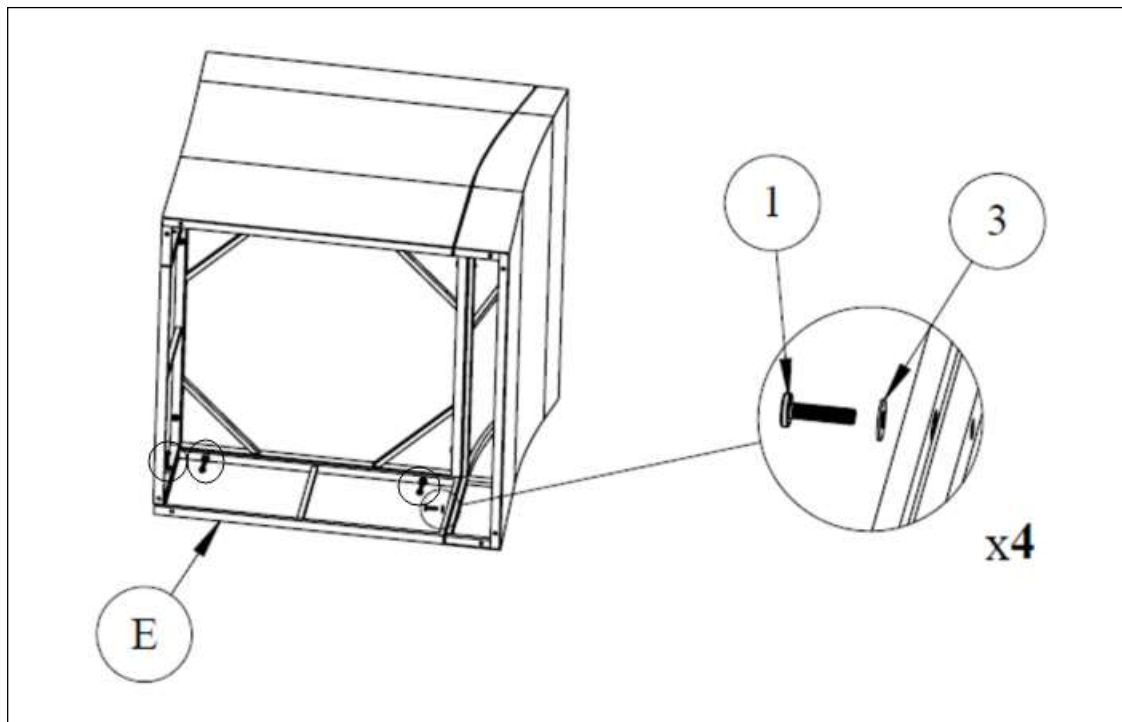

5.Align Plastic Leg (5) to the frame body by the pre-drilled threads with Bolts (1). It should have 4 plastic legs and 8 bolts fastened. Tighten all bolts. (Photo 5)

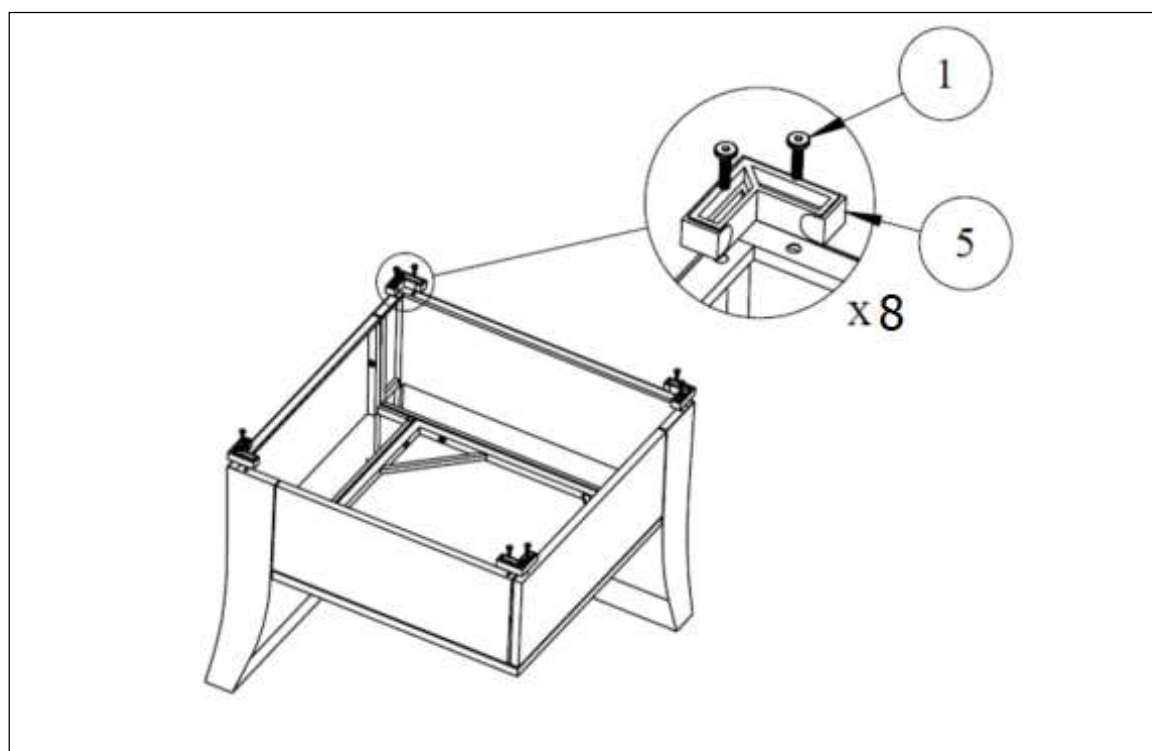

6. Place Seat Cushion (F) on the seat first, and then place 2 Back Cushions (H&G) above it. (Photo 6).

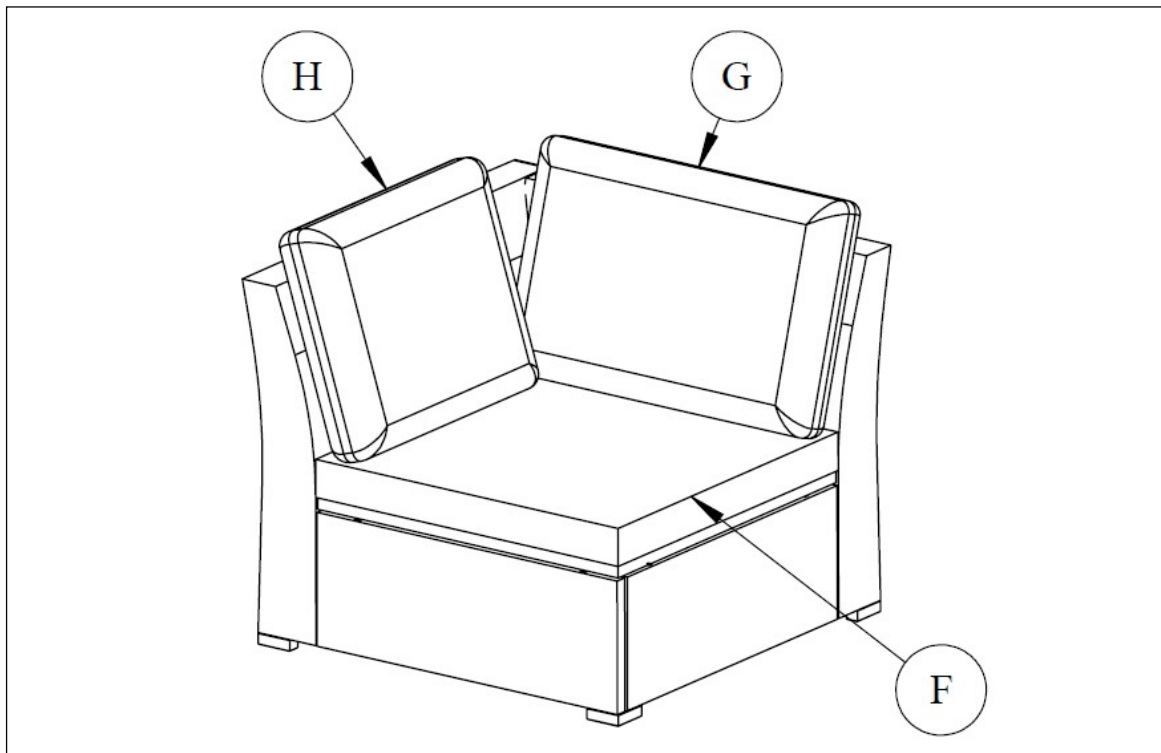


7. Follow the same instruction for the 2nd

You have completed assembling the furniture – enjoy!



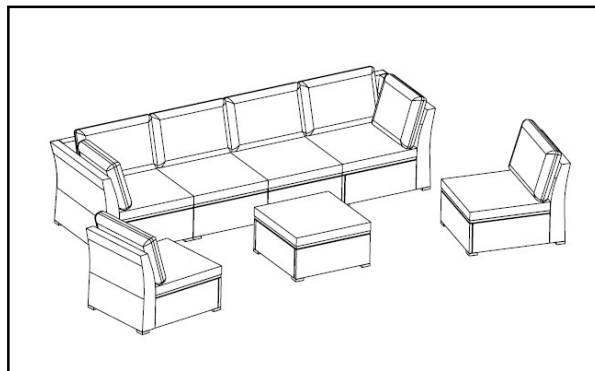


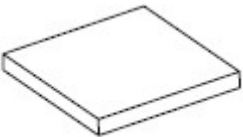






# OUTDOOR SOFA SET

## OUTDOOR SOFA MIDDLE ASSEMBLY INSTRUCTION



PARTS LIST		
Part	Description	Quantity
PARTS		
I	Backrest	4
J	Seat	4
D	Left Frame	4
K	Right Frame	4
L	Front Frame	4
F	Seat Cushion	4
G	Back Cushion	4
HARDWARE		
1	Bolt M6x25mm	72
2	Bolt M6x40mm	8
3	Steel Washer M6	48
4	Allen Key	2
5	Plastic Leg	16



I  x4	J  x4	D  x4	K  x4
L  x4	F  x4	G  x4	1  x72 M6x25mm
2  x8 M6x40mm	3  x48	4  x2	5  x16

## PLEASE READ AND FOLLOW ALL SAFETY TIPS

### GETTING STARTED

1. Before assembly, CAREFULLY use scissors or utility knife to cut and unwrap all parts. Make sure you do not discard the hardware.


### Warm Tips:

1. The plastic covers on some metal parts are just for product protection, Please remove it before assembly.
2. Please follow the sequence of AI during assembly.
3. Do not tighten the screws until all of them are in right positions.


1. First, position Left Frame (D) & Right Frame (K) and Front Frame (L) by the pre-drilled threads. Use Allen Key(4) to fasten Bolts (1) with washer(3). Each frame should have 1 bolt fastened, total 3 bolts fastened. (Photo 1). Do not tighten bolts.

And Position Right Frame (K) and Front Frame (L) and Left Frame (D) to Seat (J) by pre-drilled threads. Use Allen Key (4) to fasten Bolts (1) with Washers (3). Each frame should have 2 bolts fastened, it should have 6 bolts fastened. (Photo 1) Do not tighten bolts.


This step total has 8 bolts fastened.

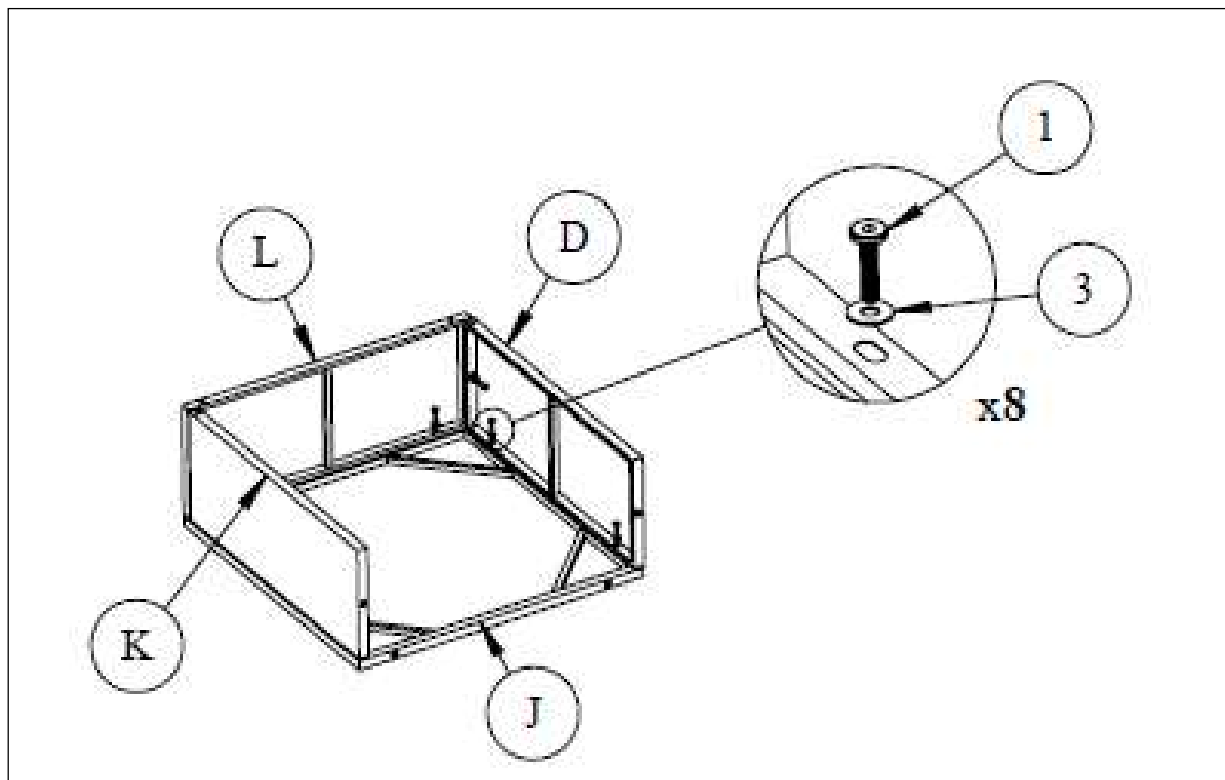


2.Align Backrest (I) to the frame (1) by pre-drilled threads. Use Allen Key (4) to fasten Bolts with Washers (3). Long side should have 2 Bolts (2) fastened and the short side should have 2 Bolts (1) fastened. (Photo 2)

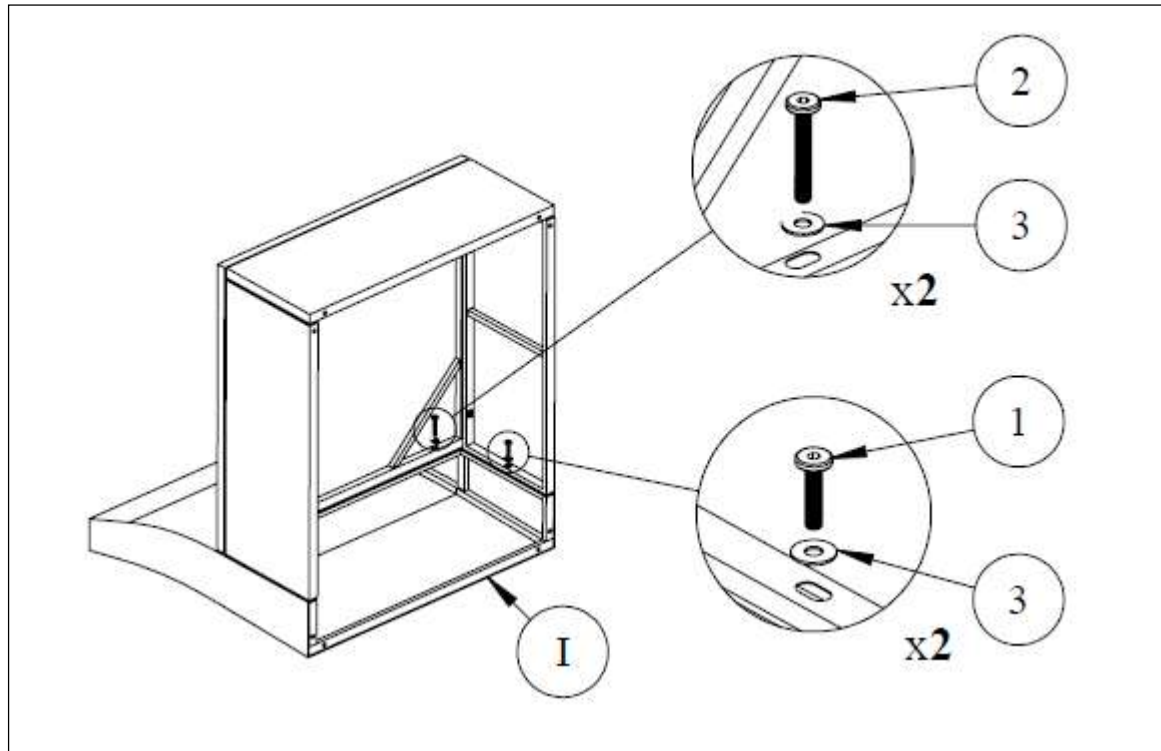

3.Align Plastic Leg (5) to the frame body by the pre-drilled threads with Bolts (1). It should have 4 plastic legs and 8 bolts fastened. (Photo 3)

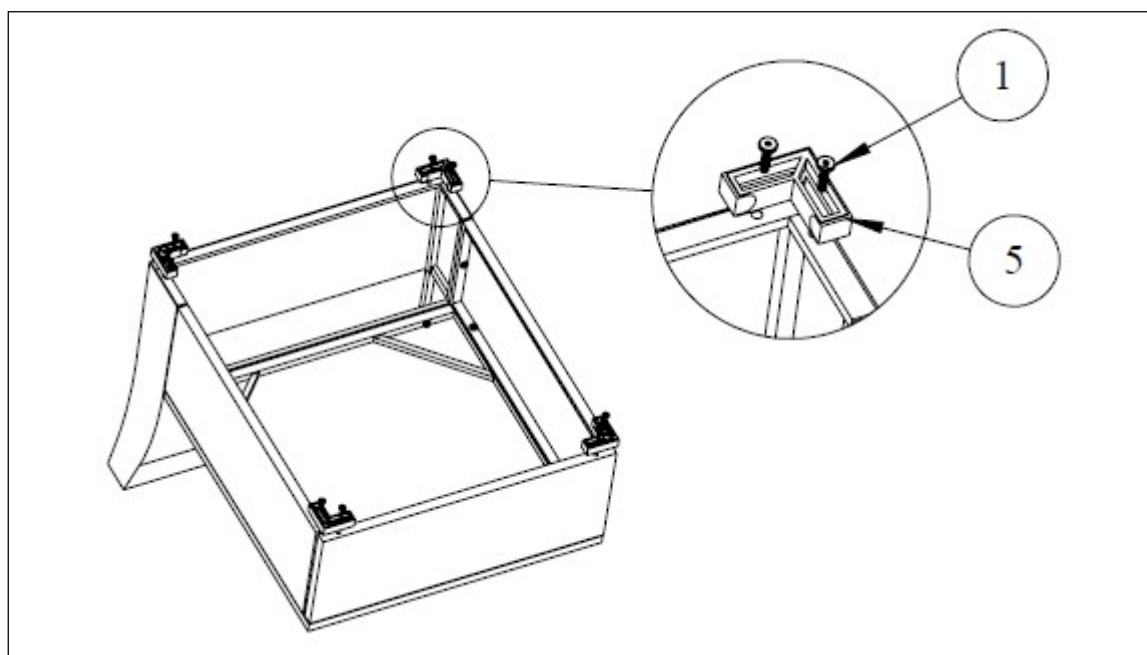

4. Place Seat Cushion (F) on the seat first, and then place 1 Back Cushion (G) above it. (Photo 4).

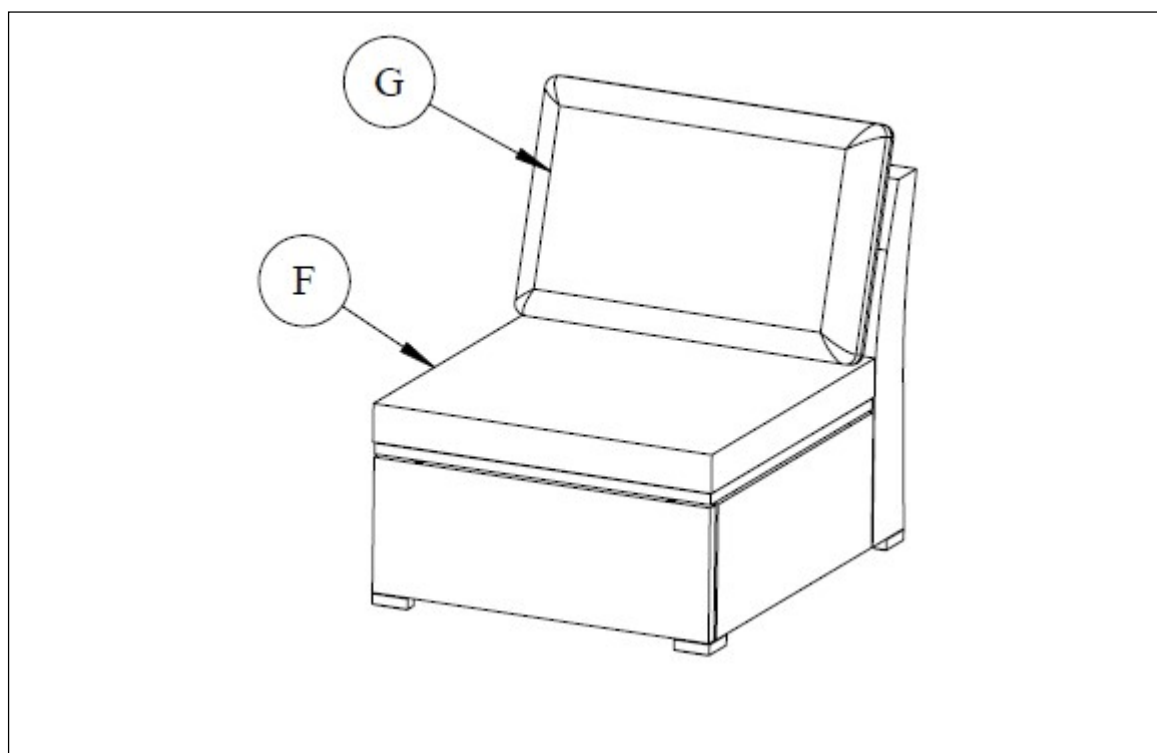


5. Follow the same instruction for the other 3 Middle chairs.




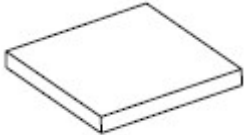




You have completed assembling the furniture – enjoy!
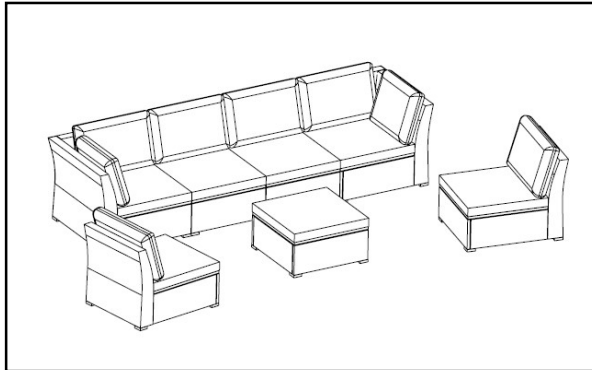
# OUTDOOR SOFA SET

## OUTDOOR SOFA STOOL ASSEMBLY INSTRUCTION



PARTS LIST		
Part	Description	Quantity
<i>PARTS</i>		
M	Seat	1
N	Side Frame	2
L	Front & Back Frame	2
F	Seat Cushion	1
<i>HARDWARE</i>		
1	Bolt M6x25mm	20
3	Steel Washer M6	12
4	Allen Key	1
5	Plastic Leg	4

<b>M</b>  x1	<b>N</b>  x2	<b>L</b>  x2	<b>F</b>  x1
<b>1</b>  x20 M6x25mm	<b>3</b>  x12	<b>4</b>  x1	<b>5</b>  x4

## PLEASE READ AND FOLLOW ALL SAFETY TIPS


### GETTING STARTED

1. Before assembly, CAREFULLY use scissors or utility knife to cut and unwrap all parts. Make sure you do not discard the hardware.


#### Warm Tips:

1. The plastic covers on some metal parts are just for product protection, Please remove it before assembly.
2. Please follow the sequence of AI during assembly.
3. Do not tighten the screws until all of them are in right positions.


1. Position Side Frame (N) and Front & Back Frame (L) to Seat (M) by pre-drilled threads. Use Allen Key (4) to fasten Bolts (1) with Washers (3). It should have 12 bolts fastened. (Photo 1)

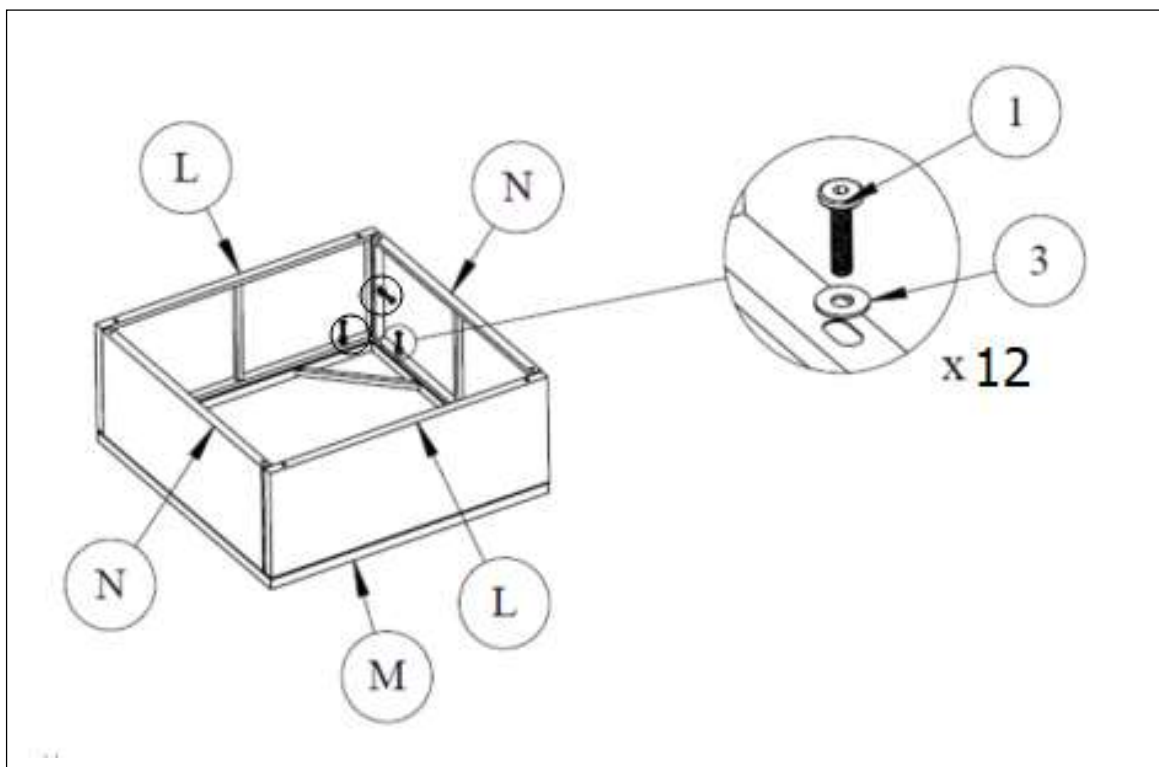

2.Align Plastic Leg (5) to the frame body by the pre-drilled threads with Bolts (1). It should have 4 plastic legs and 8 bolts fastened. (Photo 2)

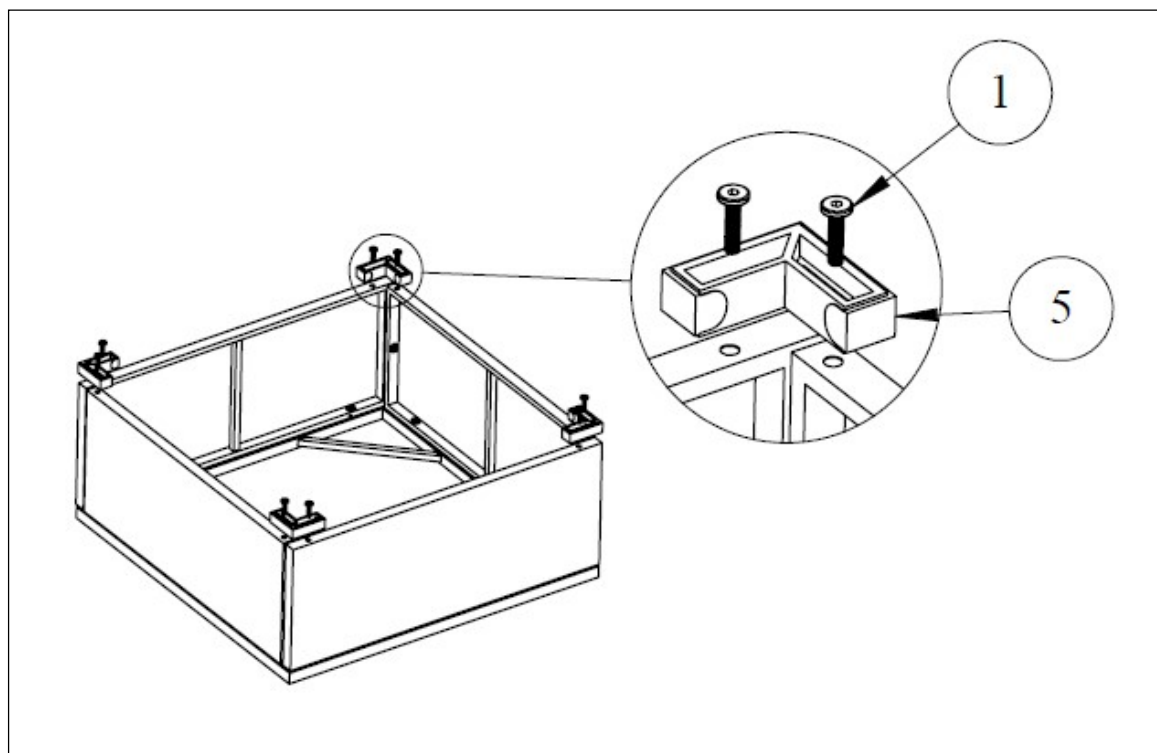

3.Place Seat Cushion (F) on the seat. (Photo 3).

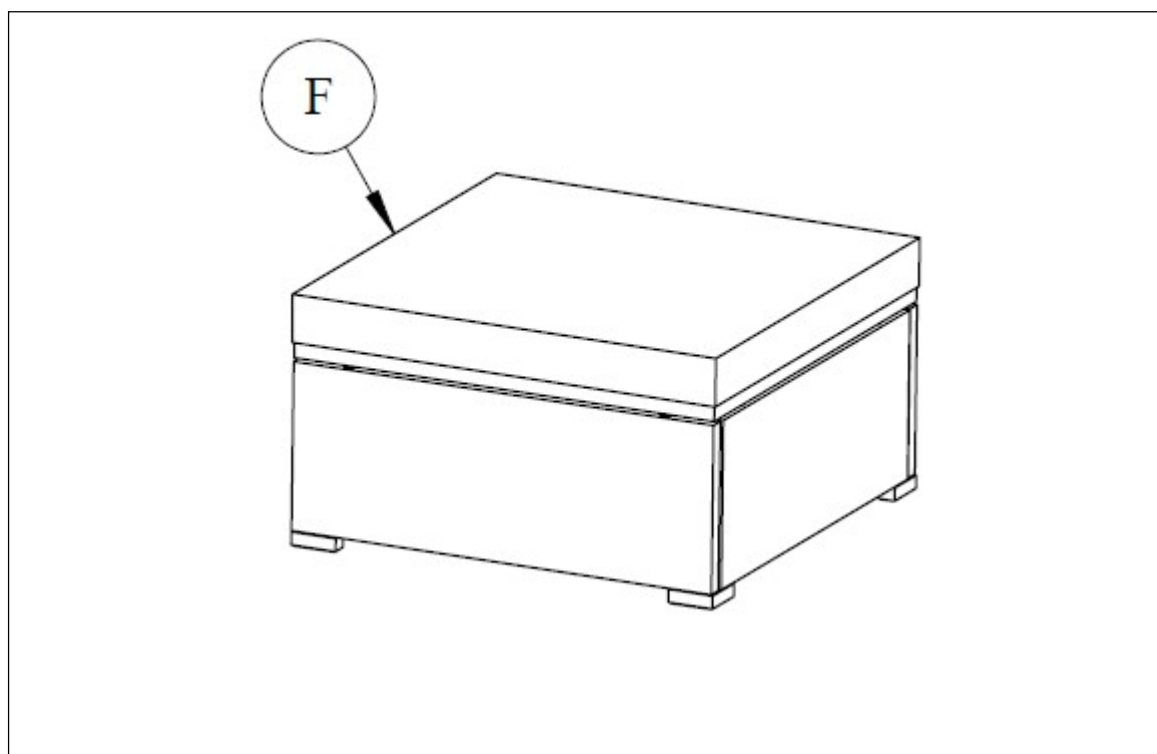

You have completed assembling the furniture – enjoy!