

Assembly Directions for *Garden Bench*

#PGB04800



PACKAGE CONTENTS


- 1 Seat
- 1 Back
- 2 Arms w/Legs
- 1 Cross Brace
- 1 Hardware Package

HARDWARE PACKAGE

- 4 • ¼" x 2½" Allen Head Bolts
- 4 • ¼" x 3 1/2" Allen Head Bolts
- 8 • ¼" x Flange Nuts
- 4 • 2½" Bulge Head Sq. Drive Screws
- 1 • Allen Wrench

TOOLS NEEDED


- Hammer
- 7/16" Wrench
- Allen Wrench (Included)



Use to measure bolts

Step #1

Fasten the Arm Assembly to the Seat and the Back using 2 • $\frac{1}{4}$ " x 3 $\frac{1}{2}$ " and 2 • $\frac{1}{4}$ " x 2 $\frac{1}{2}$ " Allen Head Bolts.

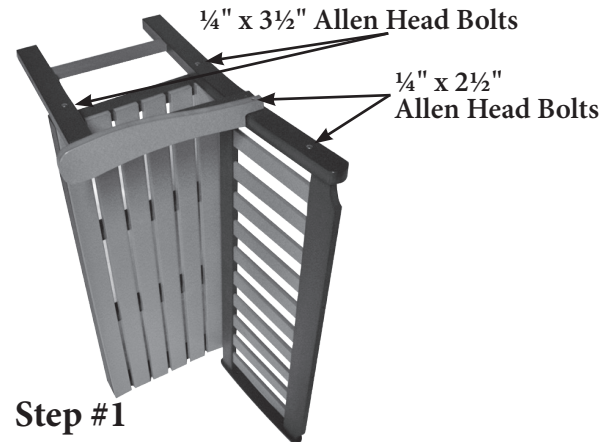

Step #2

Turn the Garden Bench on the other side and repeat **Step #1**.



Step #3

Set Garden Bench upright and fasten the Cross Brace using 4 • 2 $\frac{1}{2}$ " Screws.

