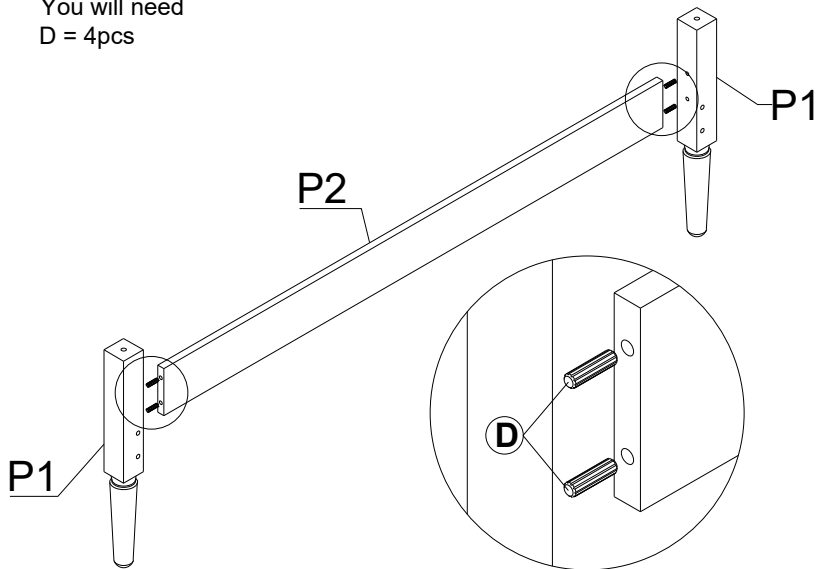



SW 8620-F/Q/K

1. Attach the Headboard Panel (P2) to the Headboard post (P1).
You will need
D = 4pcs



2. Attach the Headboard Frames (P3) to the Headboard post (P1).
You will need
A = 4pcs
E = 1pc
I = 2pcs

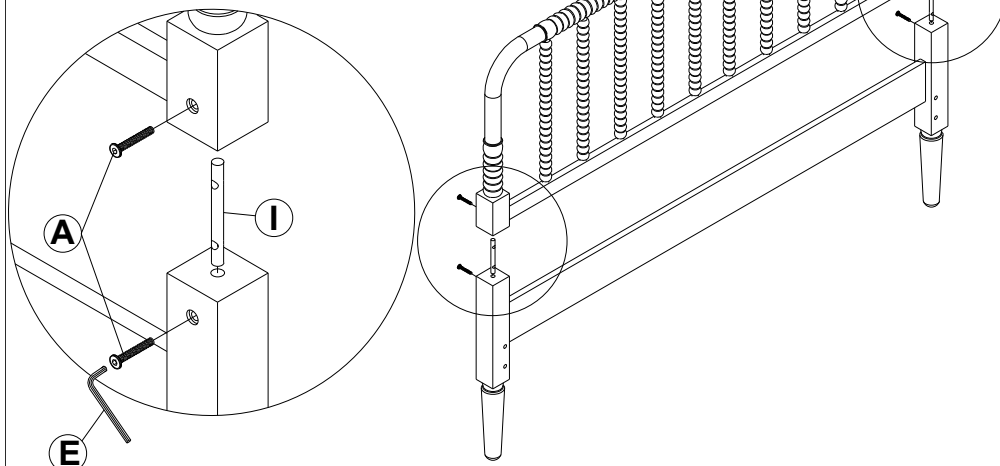BACK VIEW











3. Attach the Footboard Post (P4) to the Footboard Frames (P5).
Attach the Footboard Post (P4) to the Footboard Frames (P5).



WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

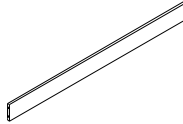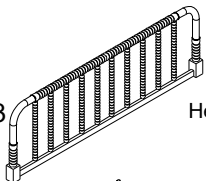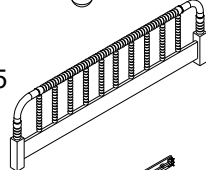PART LIST

P1		Headboard Post	=	L-1pc R-1pc
P2		Headboard Panel	=	1pc
P3		Headboard Frames	=	1pc
P4		Footboard Post	=	2pcs
P5		Footboard Frames	=	1pc
P6		Side Rail	=	2pcs
P7		Center Rail	=	2pcs
P8		Bed Slats	=	14pcs
P9		Support Leg	=	4pcs


HARDWARE LIST

A		M6 X 40MM JCBC	=	4pcs
B		M6 X 50MM JCBC	=	4pcs
C		M8 X 20MM JCBB	=	8pcs
D		WOOD DOWEL M8 X 30MM	=	4pcs
E		ALLEN KEY M4	=	1pc
F		ALLEN KEY M5	=	1pc
G		M4 X 25MM SCREW	=	8pcs
H		ADJUSTER	=	4pcs
I		METAL PIN Ø10 X 100MM	=	2pcs




SW 8620-F/Q/K

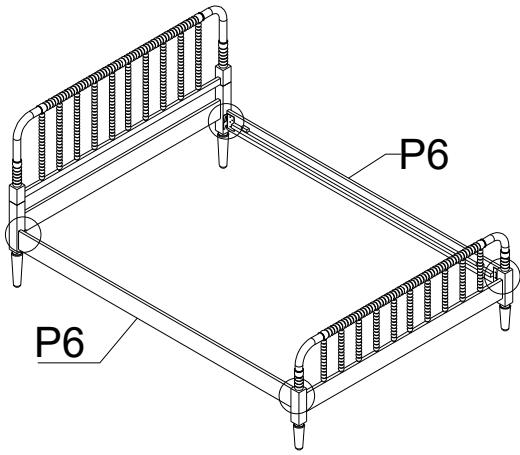
4.



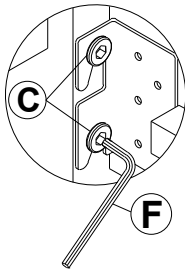Attach the Side Rail (P6) to the Footboard Frames (P5) and Headboard Post (P1) using hardware:
C = 8pcs
F = 1pc



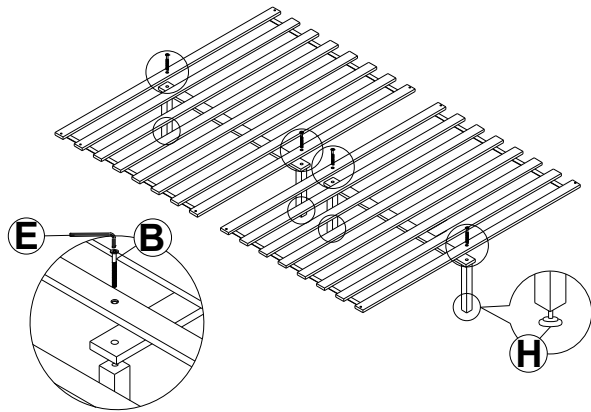
5.




Fix the adjuster (H) to the support leg (P9) using hardware:
H = 4pcs

Attach the support leg (P9) to the center rail (P7) and bed slats (P8) using hardware:
B = 4pcs
E = 1pc

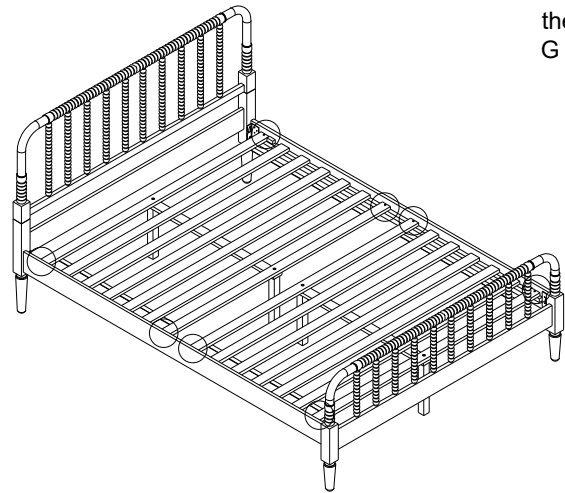6.




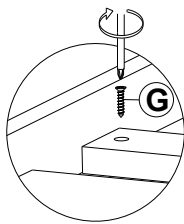Lay the bed slats (P8) between the side rail (P6) using hardware:
G = 8pcs



****Apply pressure with your knee to the side rail whilst attaching the slats to ensure that the slats are flush against the inside of side rail****







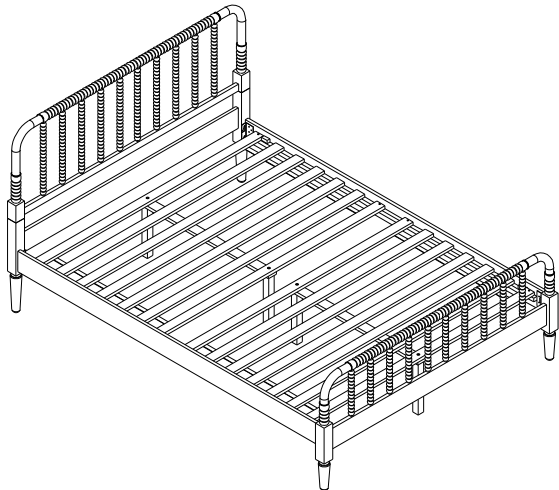
ASSEMBLY COMPLETE





WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

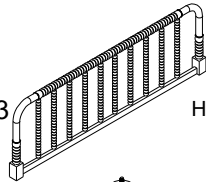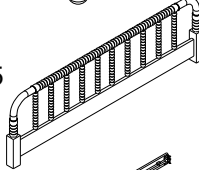PART LIST

P1		Headboard Post	=	L-1pc R-1pc
P2		Headboard Panel	=	1pc
P3		Headboard Frames	=	1pc
P4		Footboard Post	=	2pcs
P5		Footboard Frames	=	1pc
P6		Side Rail	=	2pcs
P7		Center Rail	=	2pcs
P8		Bed Slats	=	14pcs
P9		Support Leg	=	4pcs

HARDWARE LIST


A		M6 X 40MM JCBC	=	4pcs
B		M6 X 50MM JCBC	=	4pcs
C		M8 X 20MM JCBB	=	8pcs
D		WOOD DOWEL M8 X 30MM	=	4pcs
E		ALLEN KEY M4	=	1pc
F		ALLEN KEY M5	=	1pc
G		M4 X 25MM SCREW	=	8pcs
H		ADJUSTER	=	4pcs
I		METAL PIN 10 X 100MM	=	2pcs



ASSEMBLY INSTRUCTION


SW 8000-88D7D

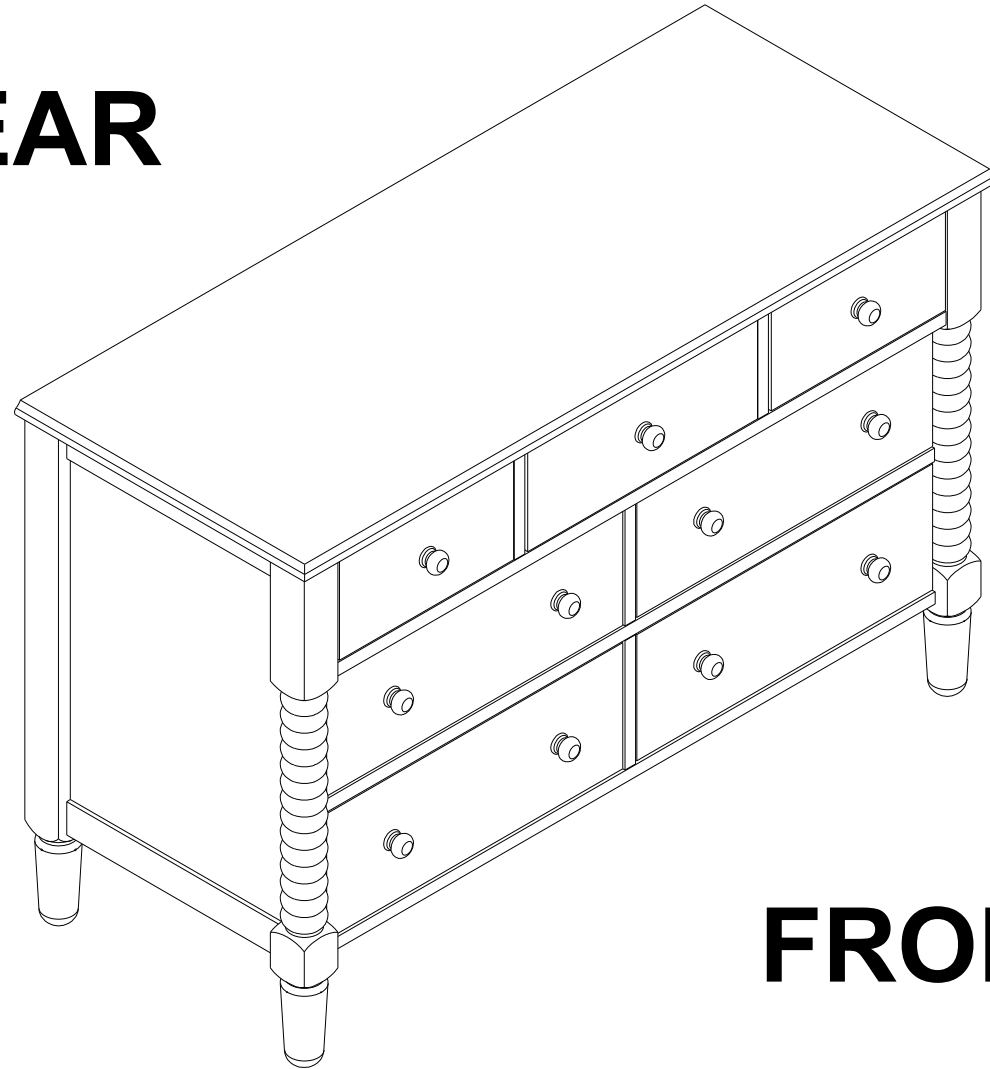REAR

























FRONT






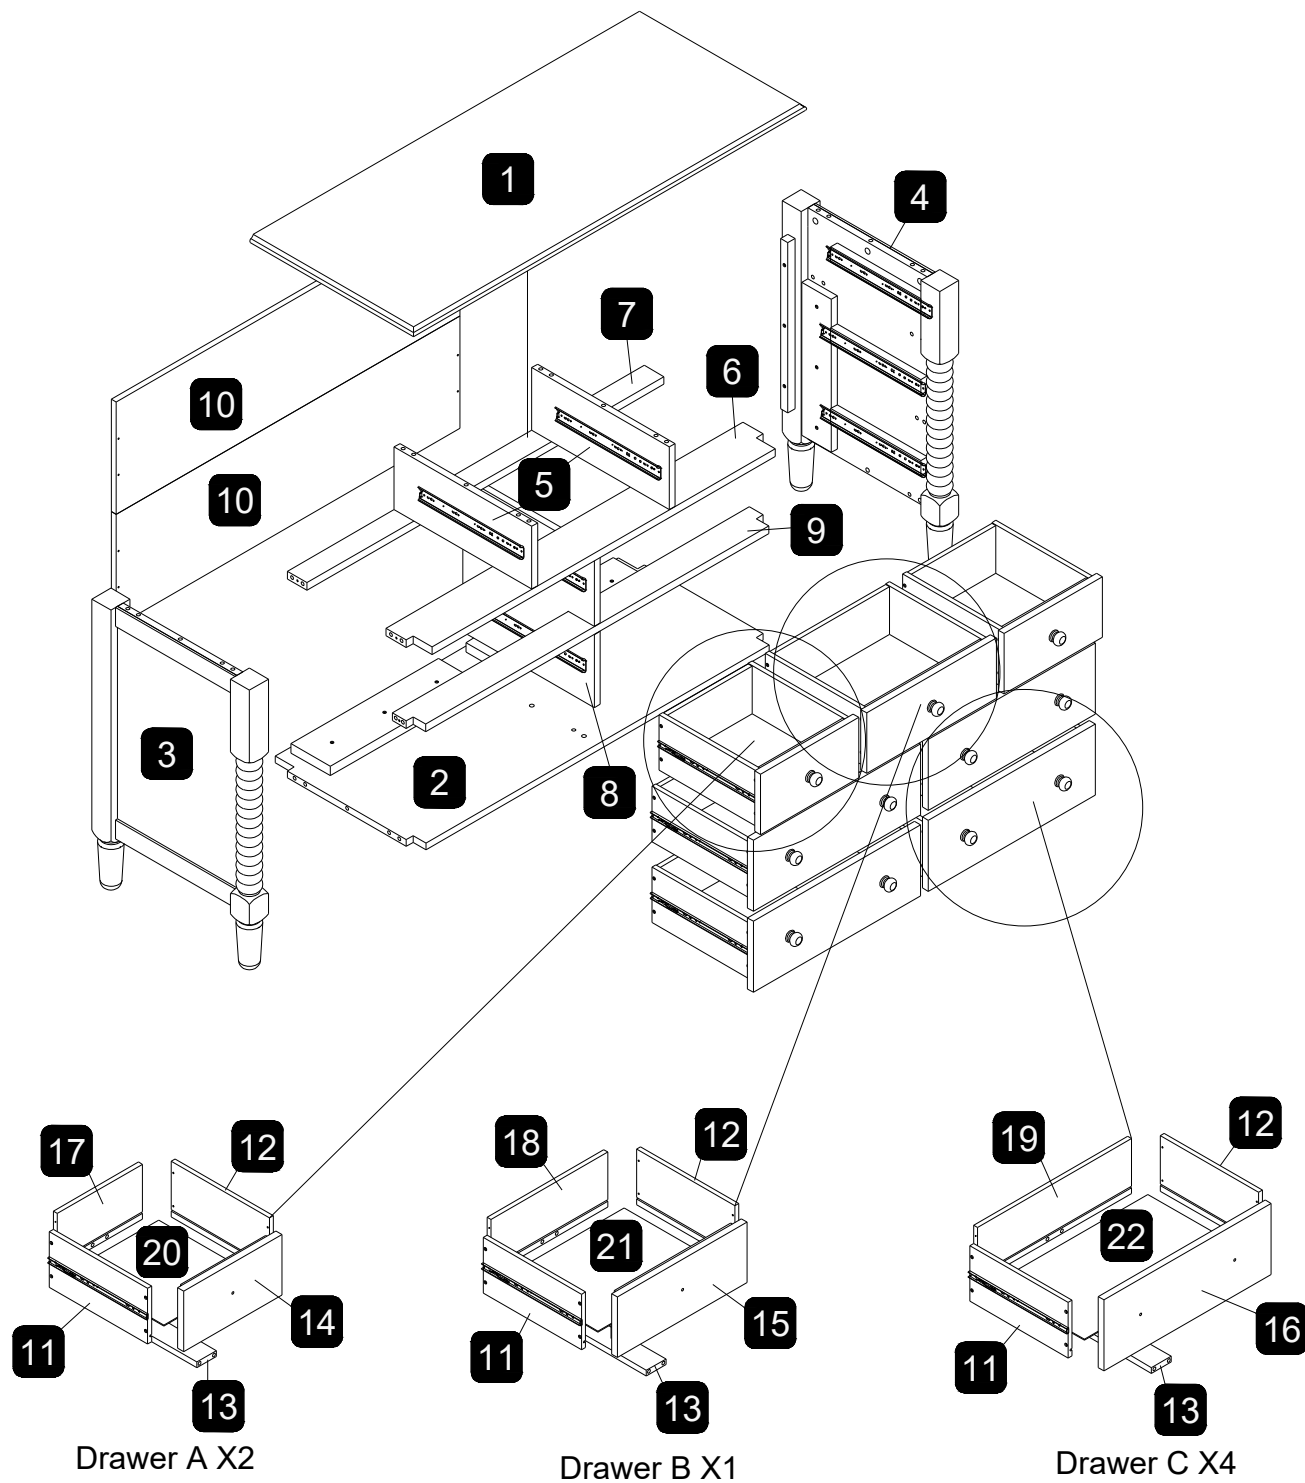


PART LIST

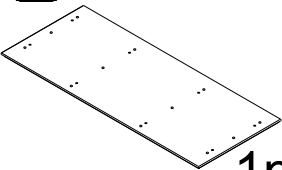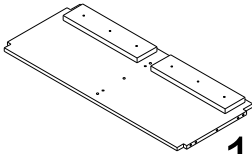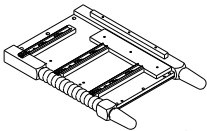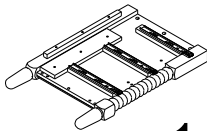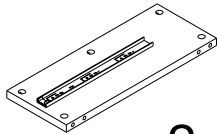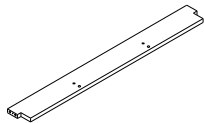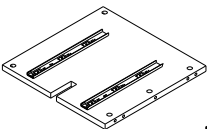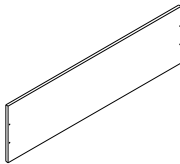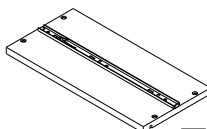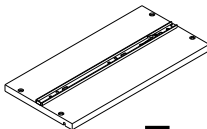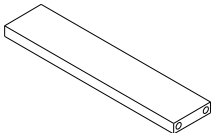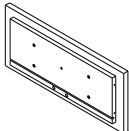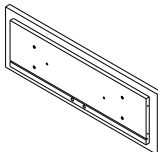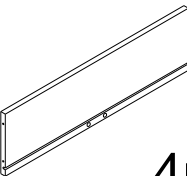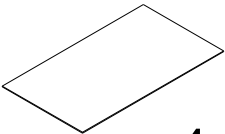1 Top Panel  1pc	2 Bottom Panel  1pc	3 Side Panel(left)  1pc	4 Side Panel(right)  1pc	5 Upper Division  2pcs	6 Upper Front Rail  1pc
7 Upper Rail  1pc	8 Lower Division  1pc	9 Lower Rail  1pc	10 Back Panel  2pcs	11 Drawer Side Panel(left)  7pcs	12 Drawer Side Panel(right)  7pcs
13 Drawer Support Rail  7pcs	14 Drawer A Front Panel  2pcs	15 Drawer B Front Panel  1pc	16 Drawer C Front Panel  4pcs	17 Drawer A Rear Panel  2pcs	18 Drawer B Rear Panel  1pc
19 Drawer C Rear Panel  4pcs	20 Drawer A Base Panel  2pcs	21 Drawer B Base Panel  1pc	22 Drawer C Base Panel  4pcs		


HARDWARE LIST


A MINI FIX SPREADING BOLT 24MM  27pcs	B MINIFIX HOUSING Ø15*12MM  27pcs	C WOOD DOWEL M8*30MM  60pcs	D CSK SCREW M4*30MM  14pcs	E CSK SCREW M4*25MM  56pcs	F HANDLE  11sets
--	--	---	--	--	--

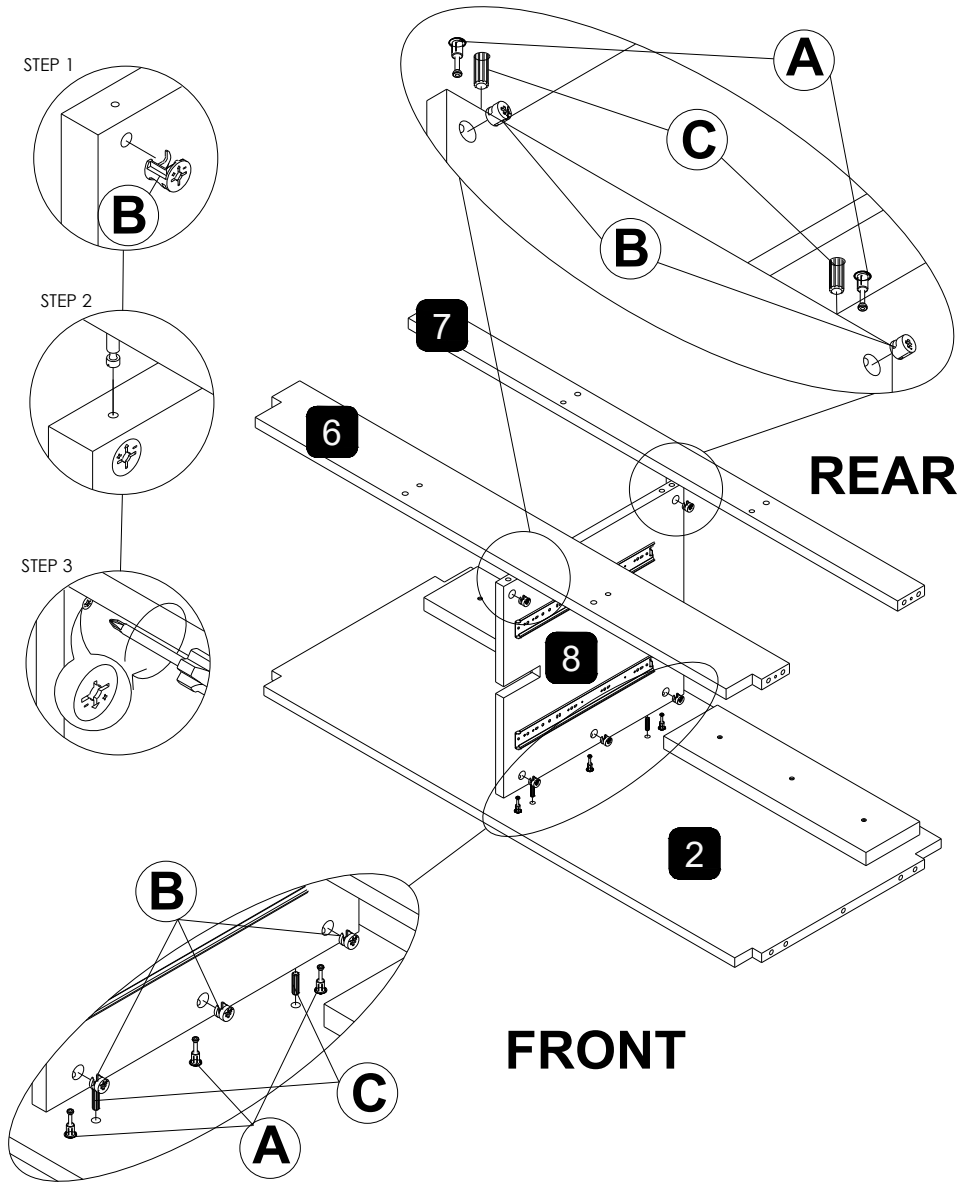STEP 1




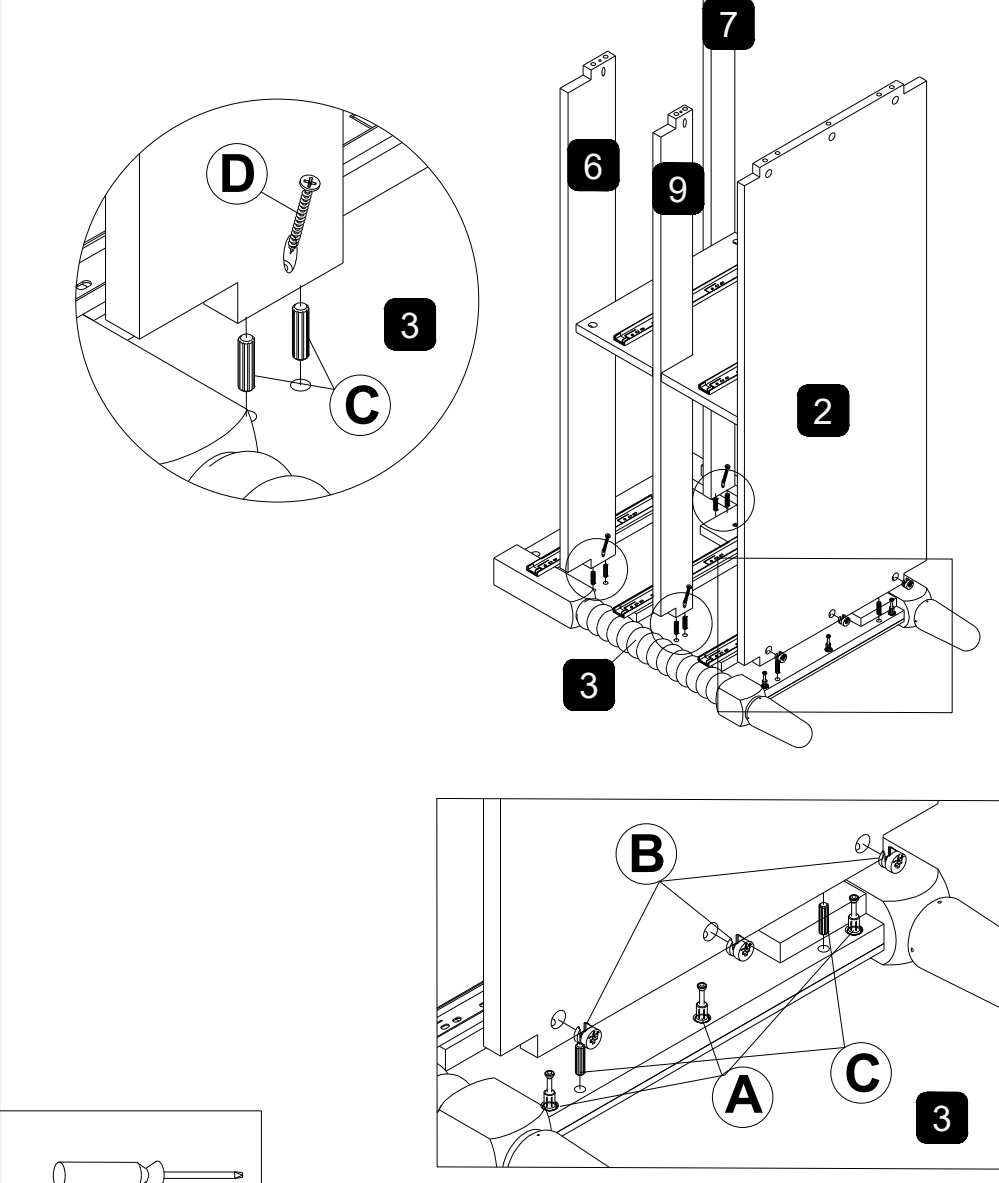
STEP 2





A X 5pcs



B X 5pcs



C X 4pcs







A X 3pcs


B X 3pcs






C X 8pcs


D X 3pcs

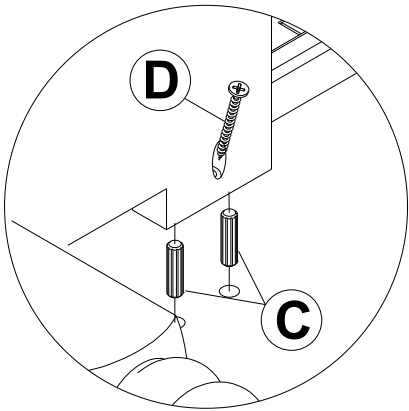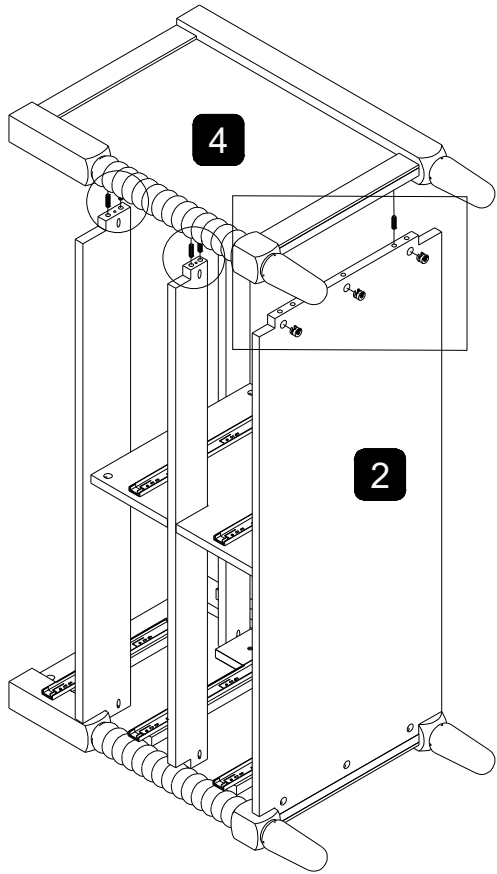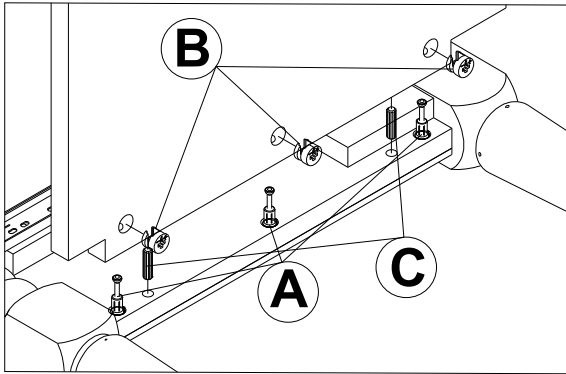STEP 3



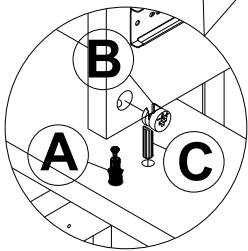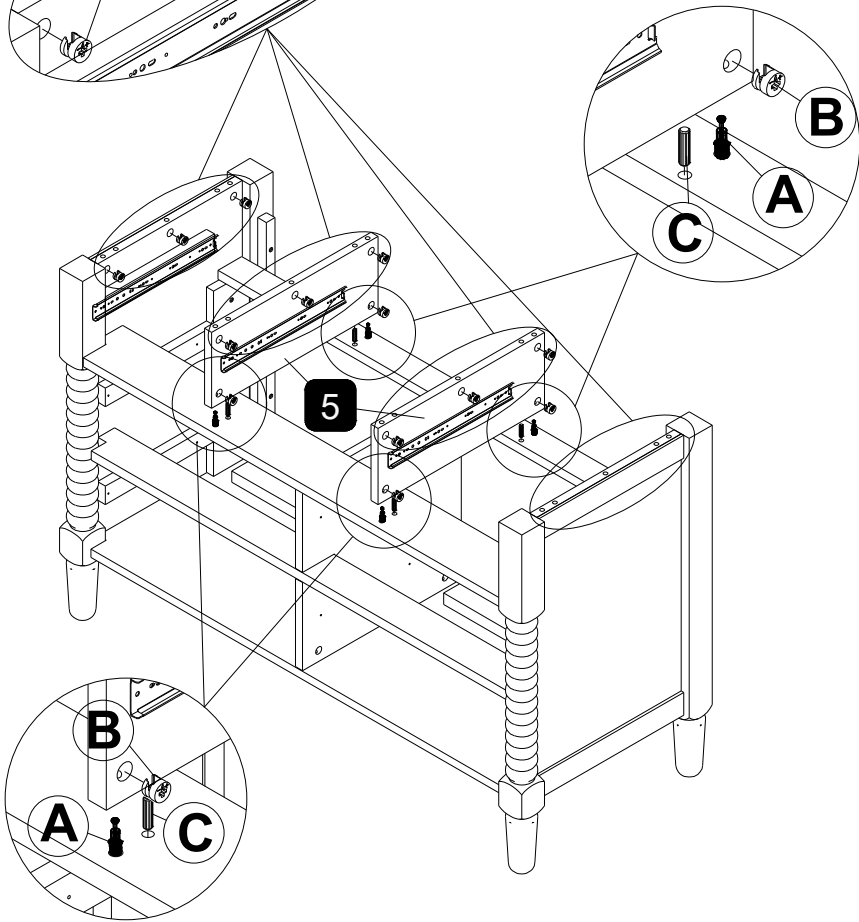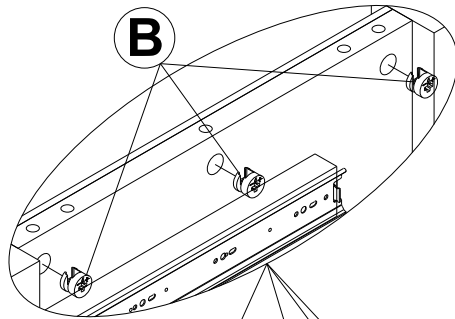STEP 4



A X 3pcs




B X 3pcs



C X 8pcs



D X 3pcs



A X 4pcs



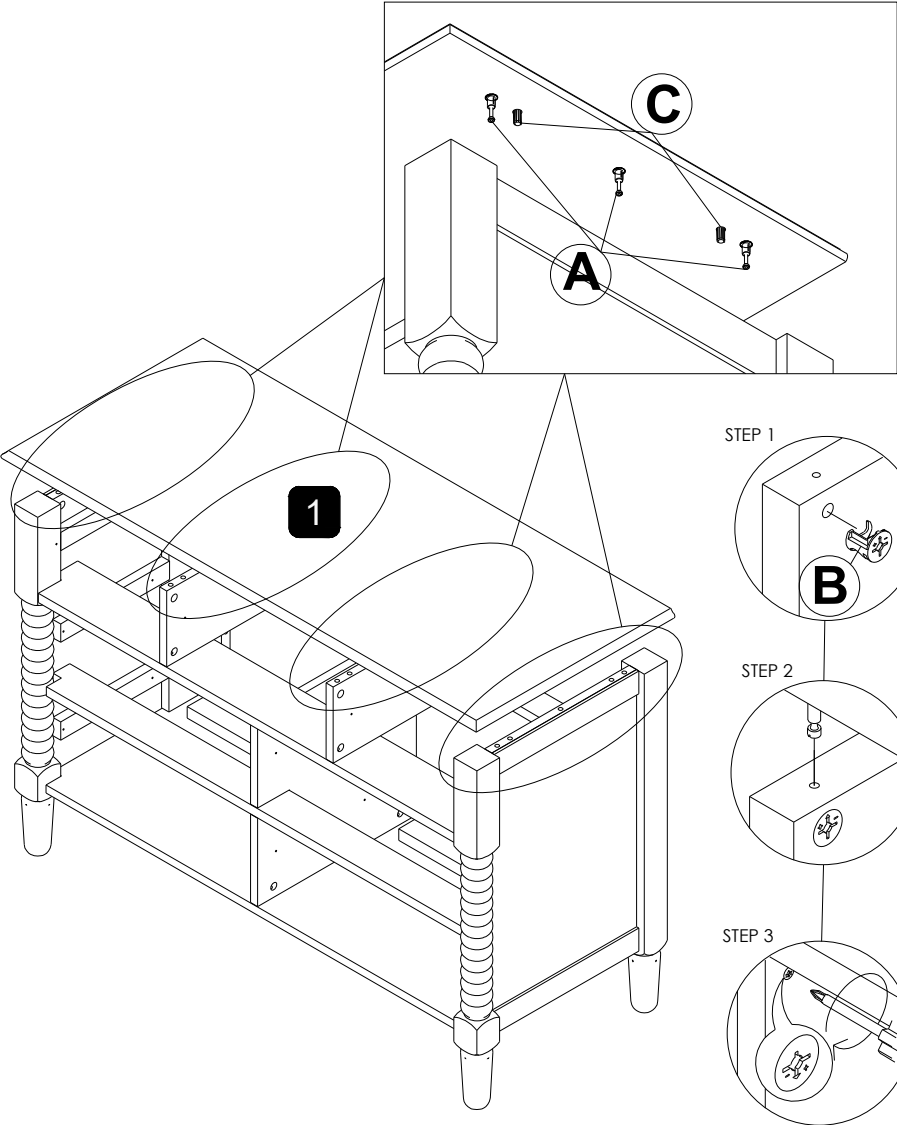
B X 16pcs




C X 4pcs




STEP 5



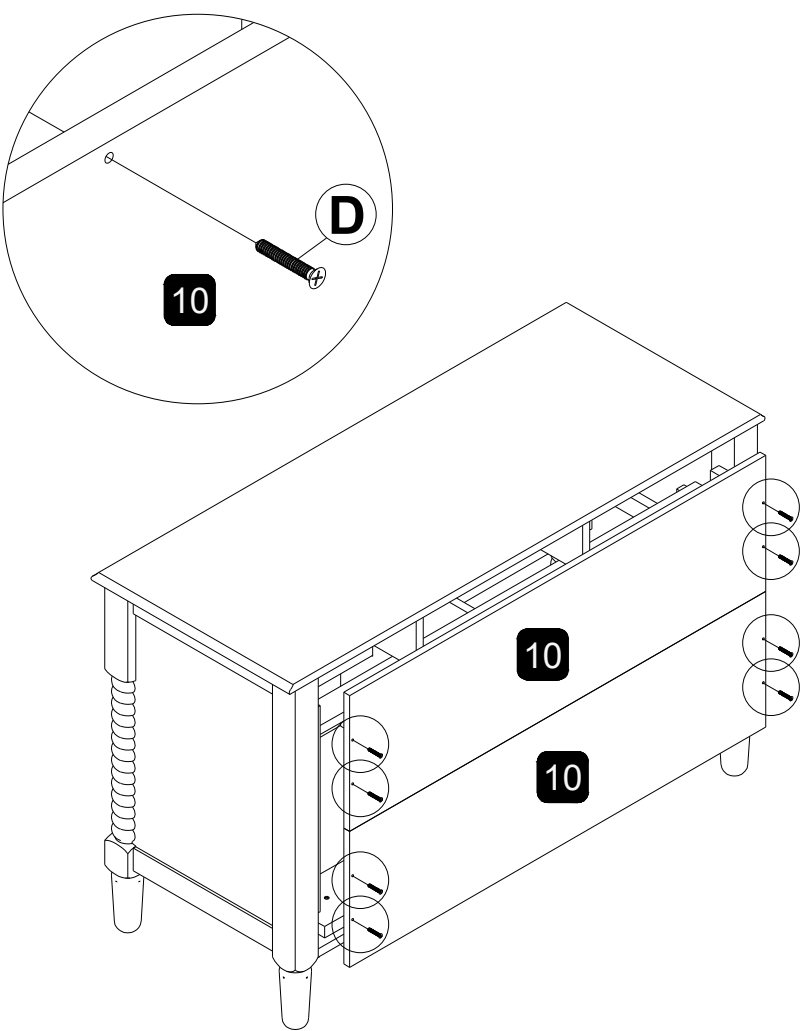
STEP 6



						
A X 12pcs	C X 8pcs		D X 8pcs			


STEP 7

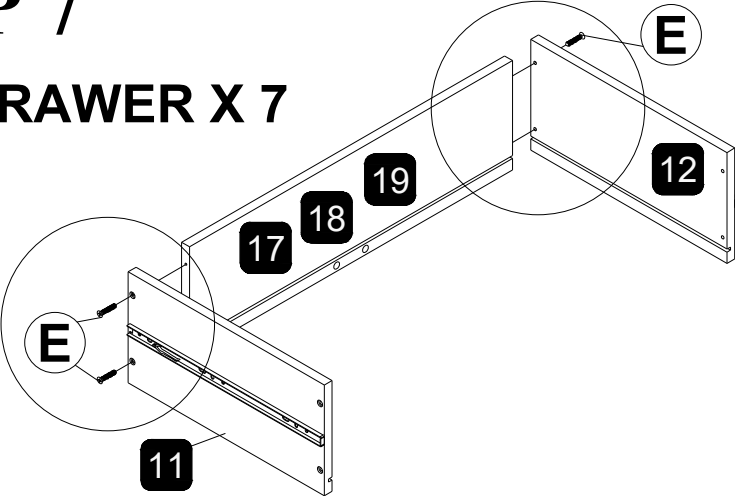
DRAWER X 7



STEP 8

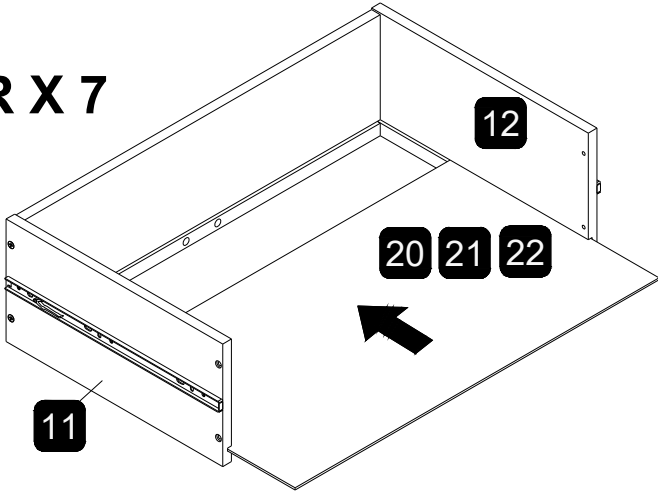
DRAWER X 7



 E X 28pcs			
--	--	--	--

STEP 9

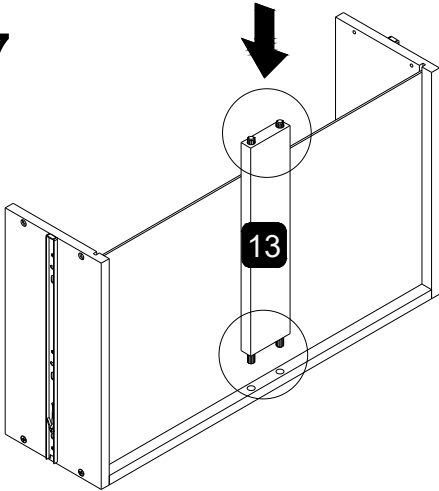
DRAWER X 7




 C X 28pcs			
--	--	--	--


STEP 10

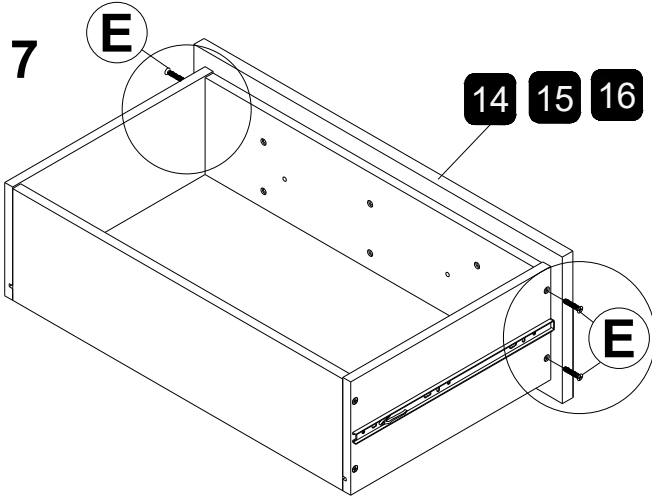DRAWER X 7





 E X 28pcs			
--	--	--	---

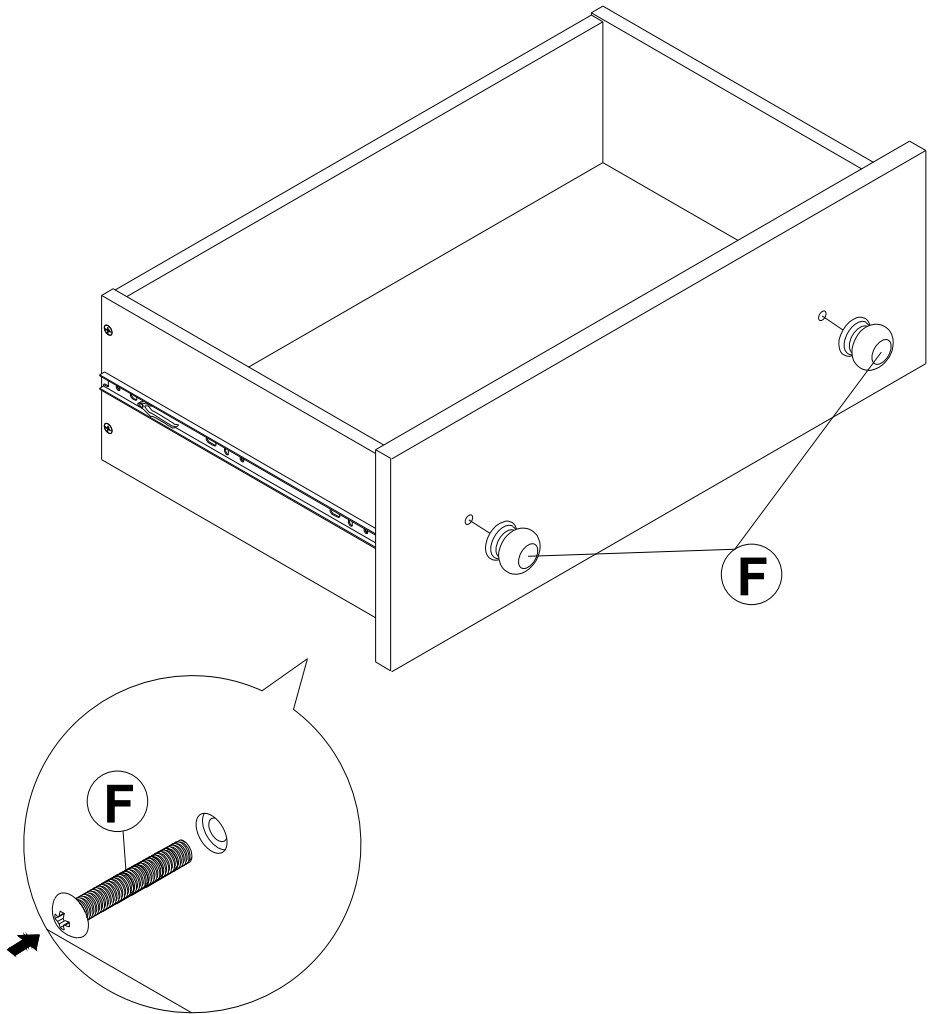STEP 11



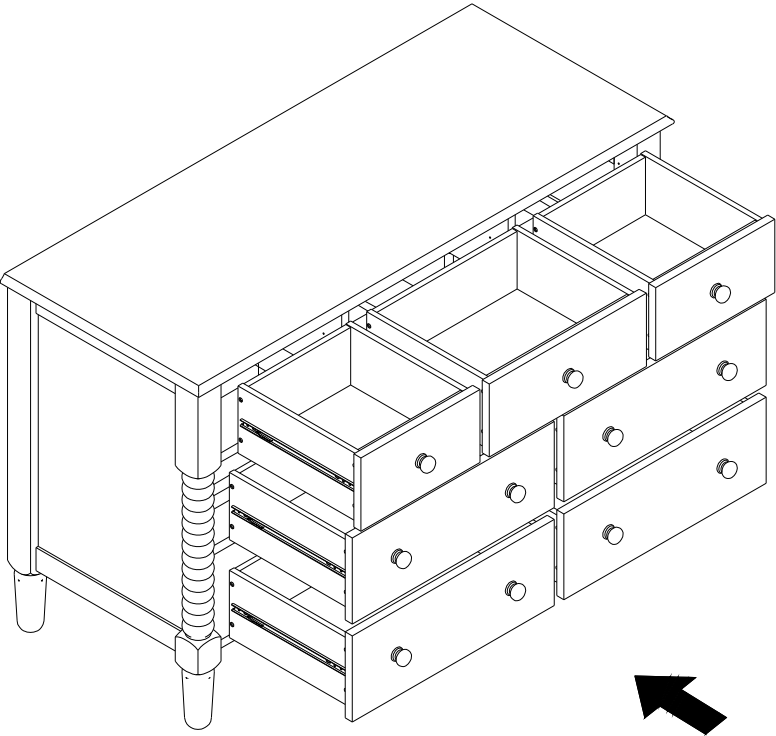
STEP 12



 F X 11sets							
---	--	--	--	--	--	--	--

ASSEMBLY COMPLETE

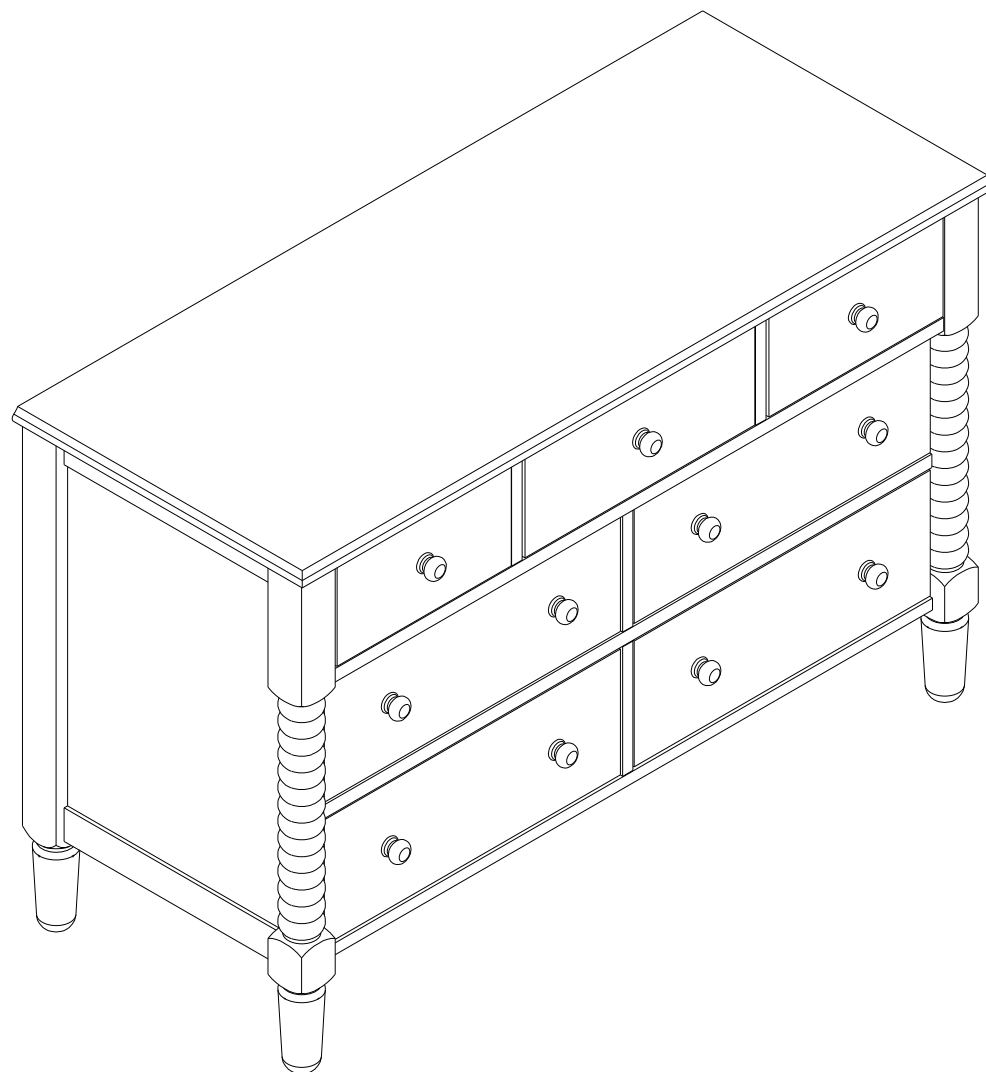
CONTINUE TO ASSEMBLY
ANTI TIPPING KITS



ASSEMBLY INSTRUCTION

SW 8000-88NS











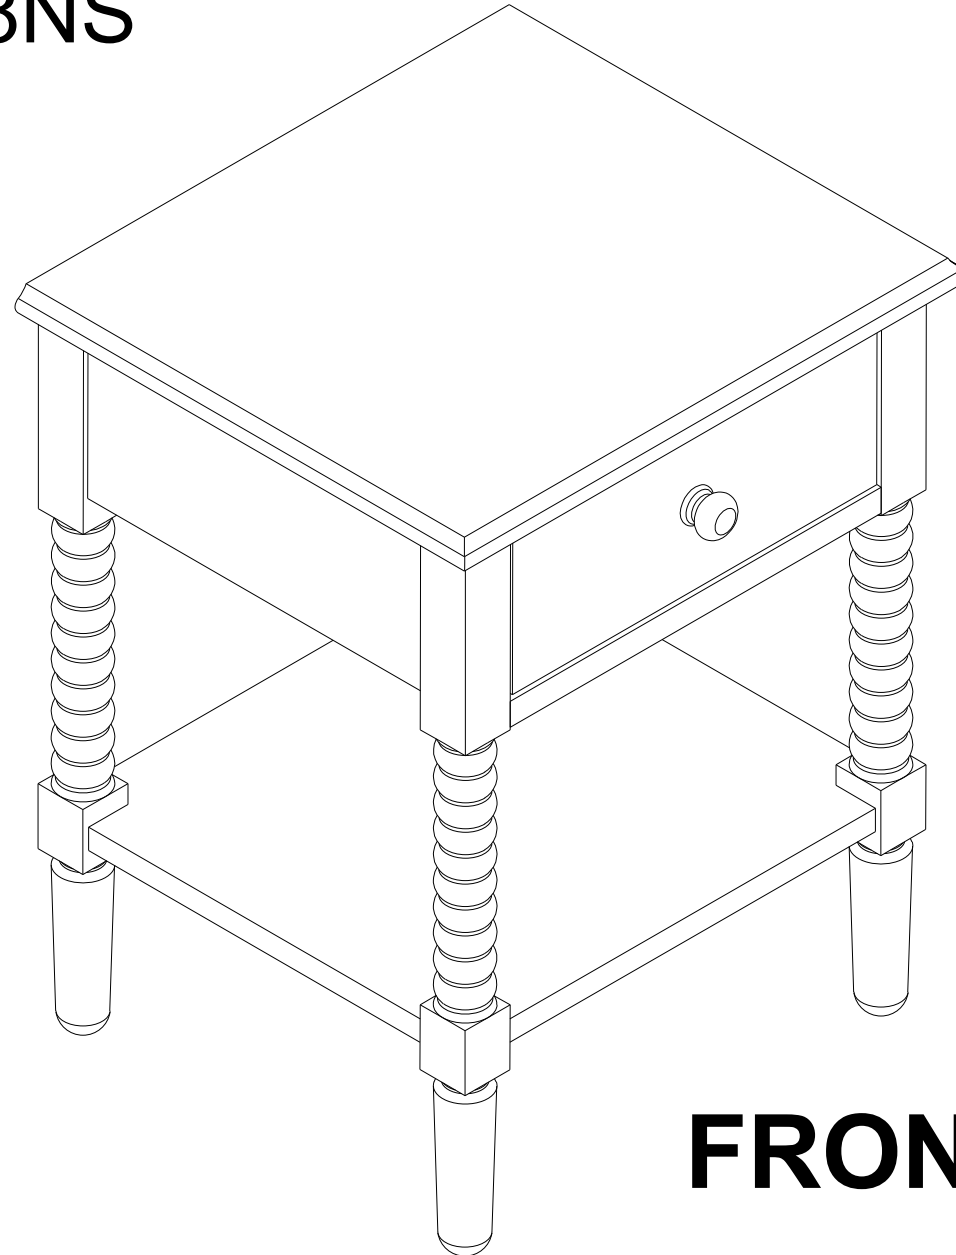
REAR







FRONT



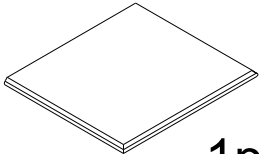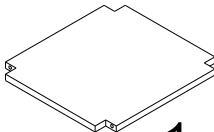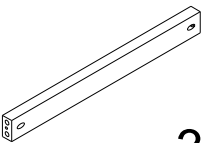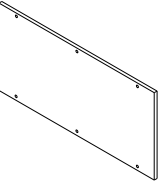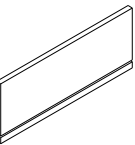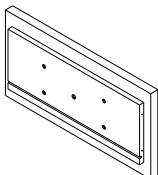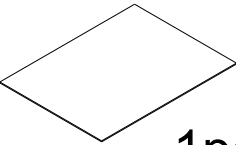
PART LIST

1 Top Panel  1pc	2 Bottom Panel  1pc	3 Side Panel(left)  1pc	4 Side Panel(right)  1pc	5 Support Rail  3pcs	6 Back Panel  1pc
7 Drawer Side Panel(left)  1pc	8 Drawer Side Panel(right)  1pc	9 Drawer Back Panel  1pc	10 Drawer Front Panel  1pc	11 Drawer Base Panel  1pc	

HARDWARE LIST

A MINI FIX SPREADING BOLT 24MM  8pcs	B MINIFIX HOUSING Ø15*12MM  8pcs	C WOOD DOWEL M8*30MM  16pcs	D CSK SCREW M4*30MM  6pcs	E CSK SCREW M4*25MM  8pcs	F PAN HEAD M3.5*16MM  6pcs
G HANDLE  1 sets					

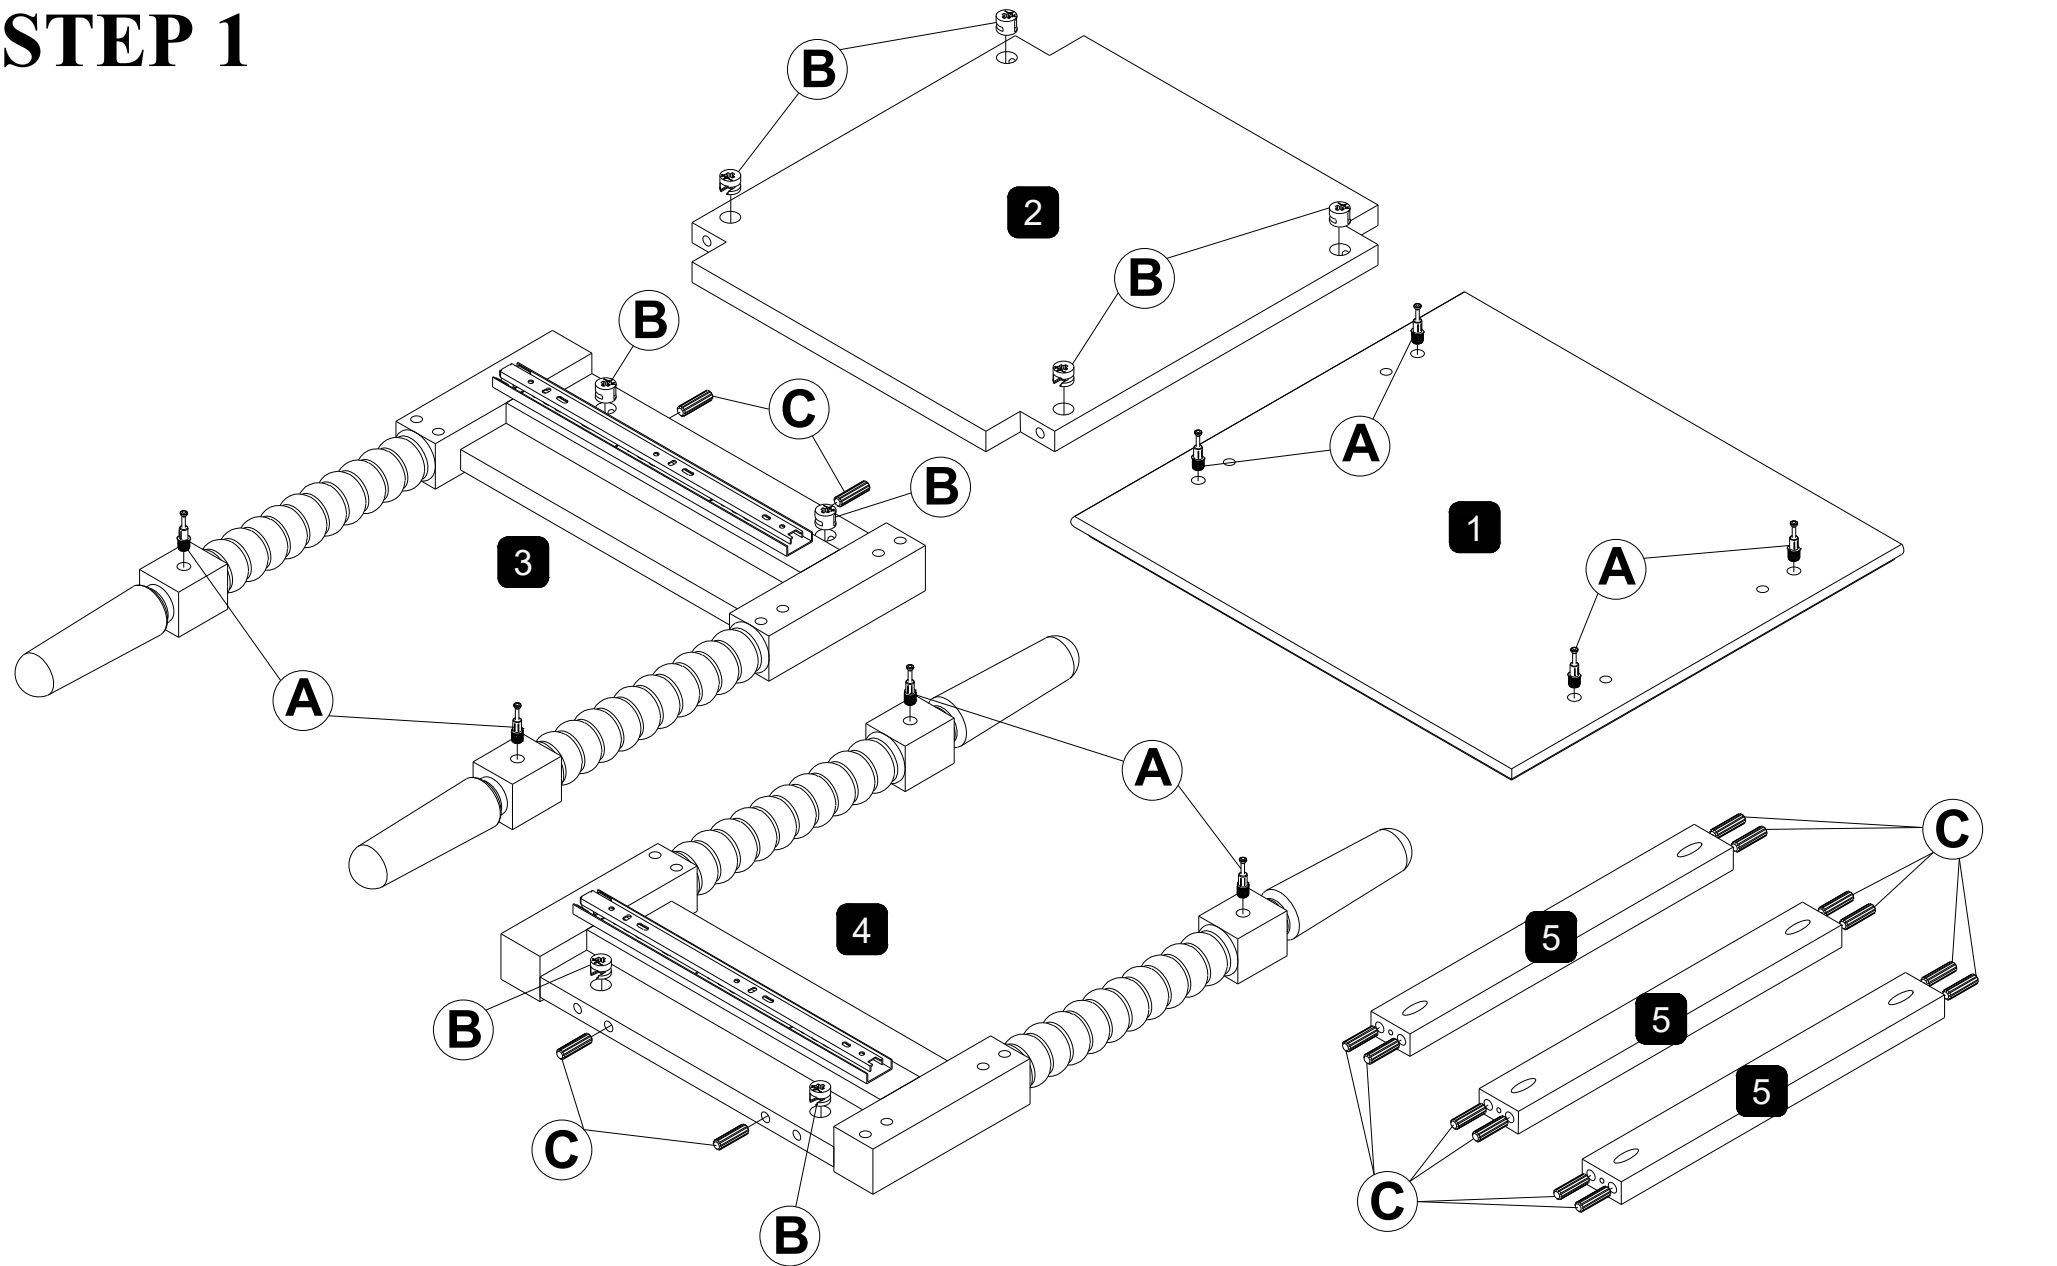
STEP 1



A X 8pcs




B X 8pcs






C X 16pcs

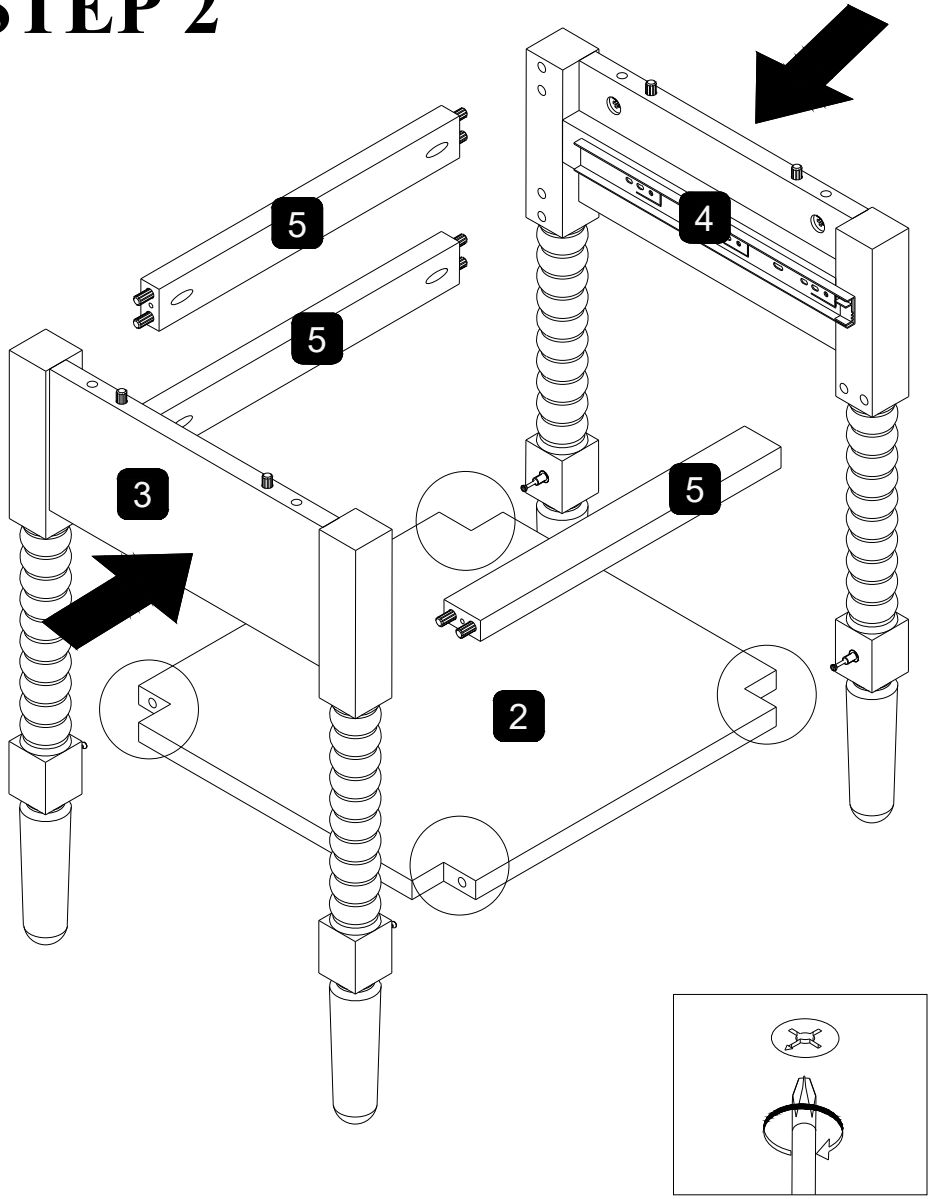STEP 2





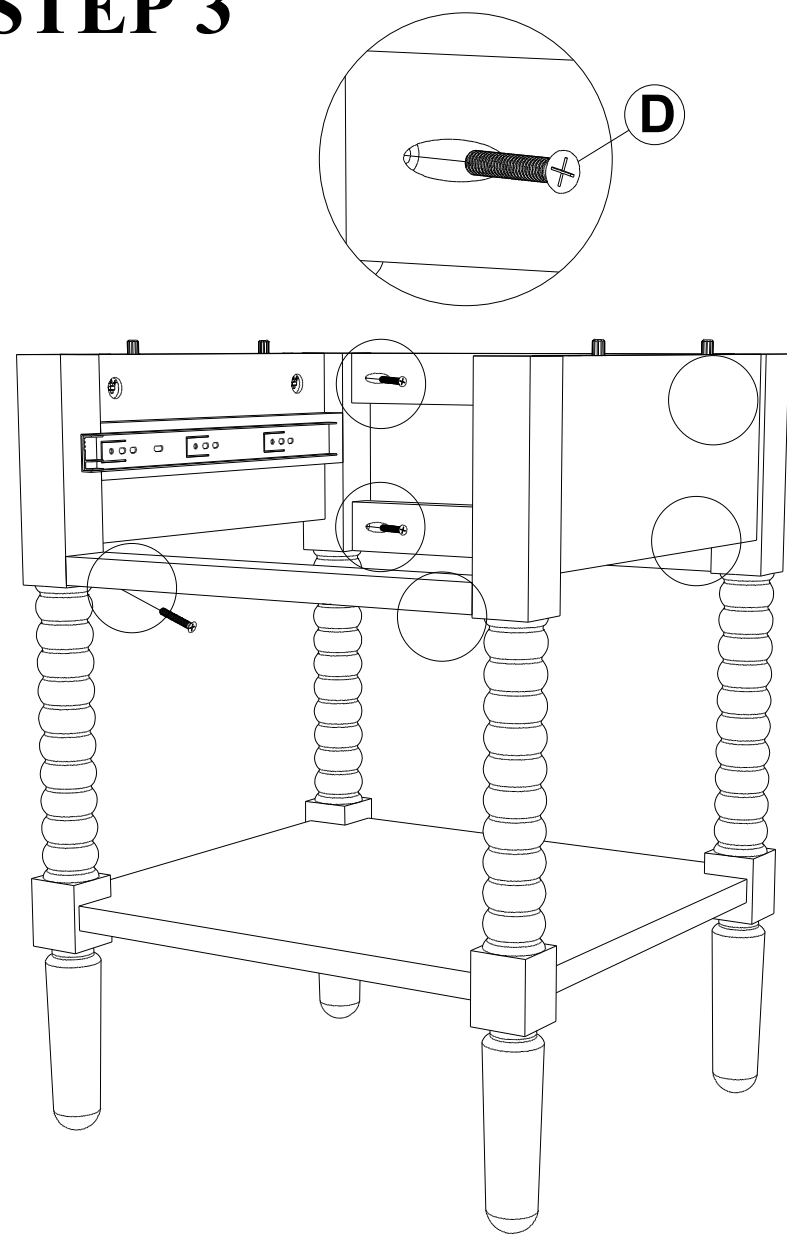STEP 3





D X 6pcs

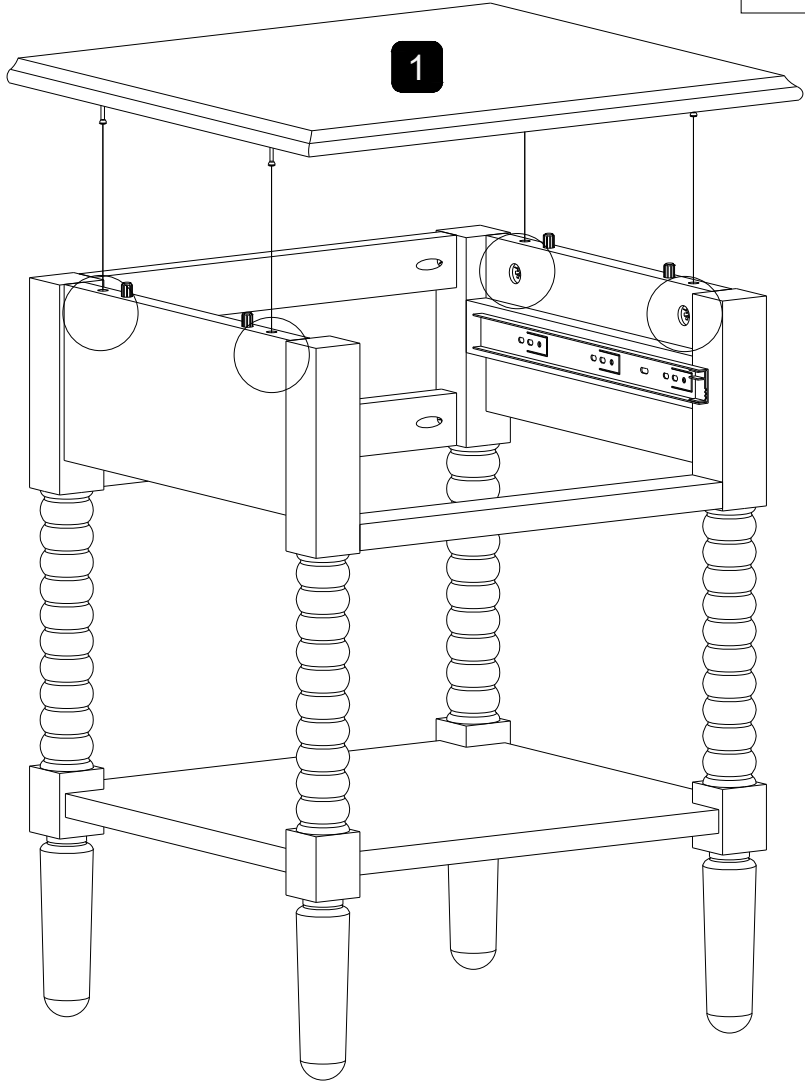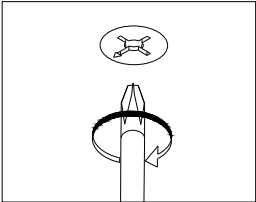STEP 4




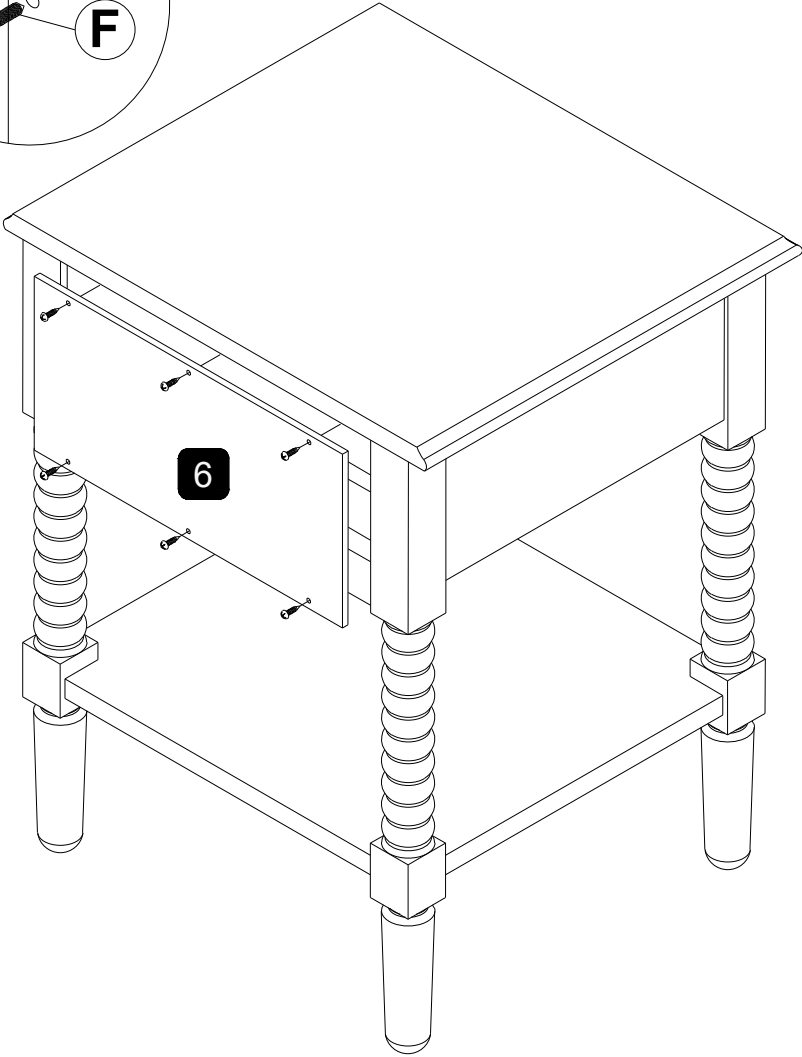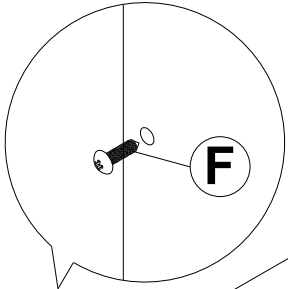STEP 5





F X 6pcs

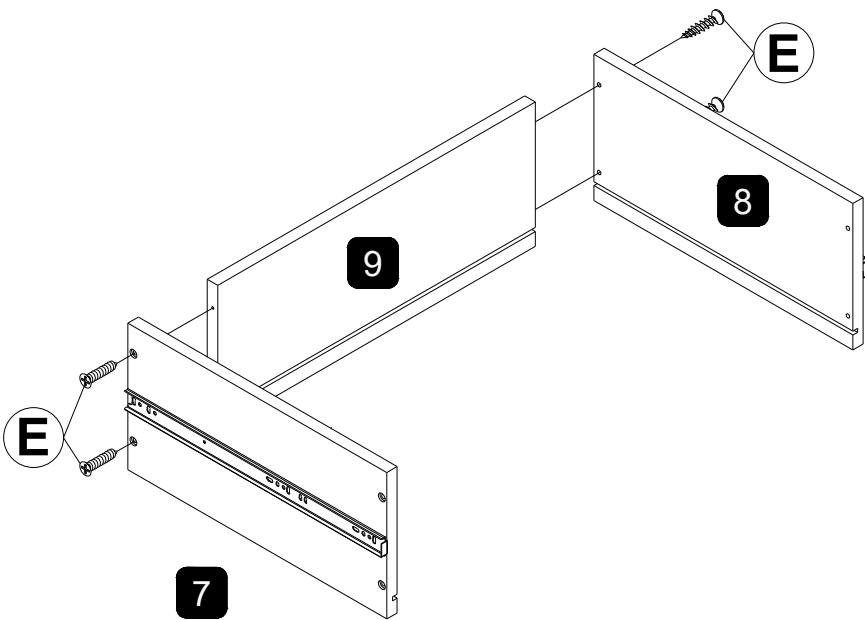STEP 6




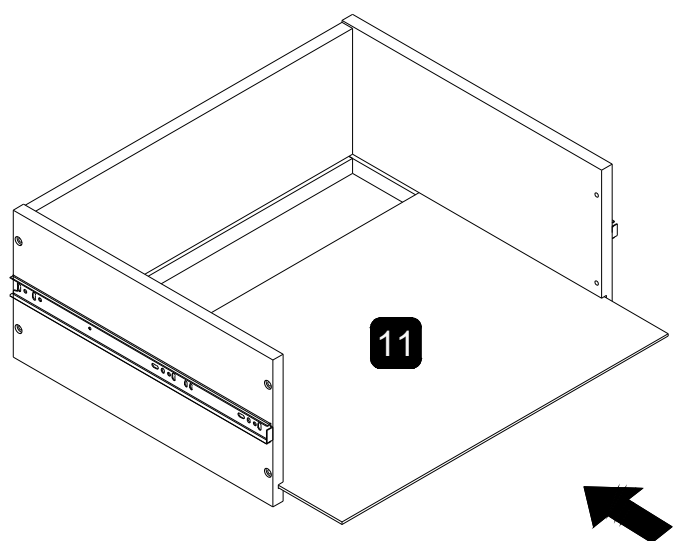STEP 7







E X 4pcs

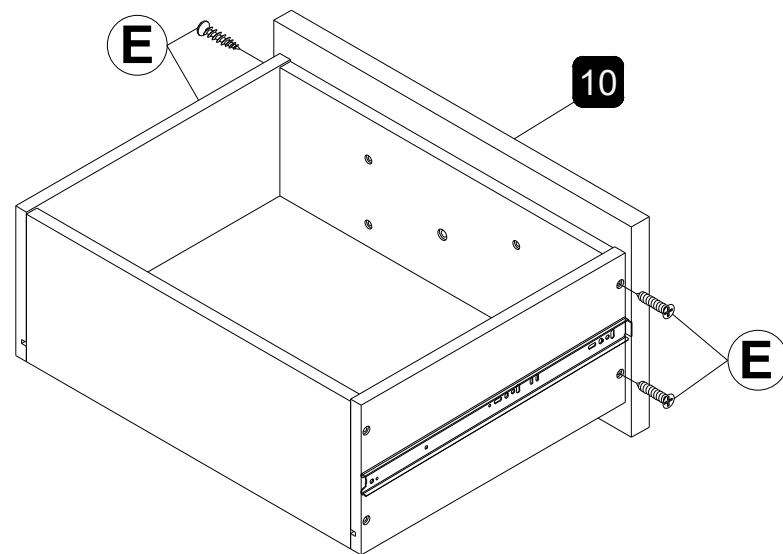STEP 8



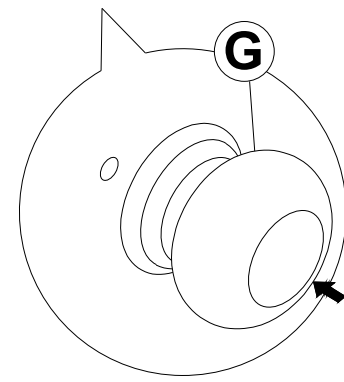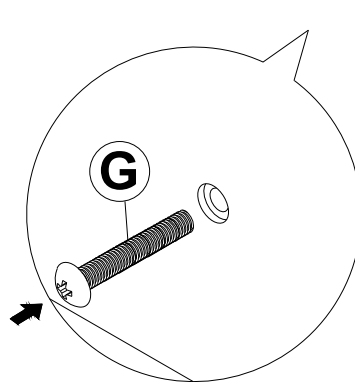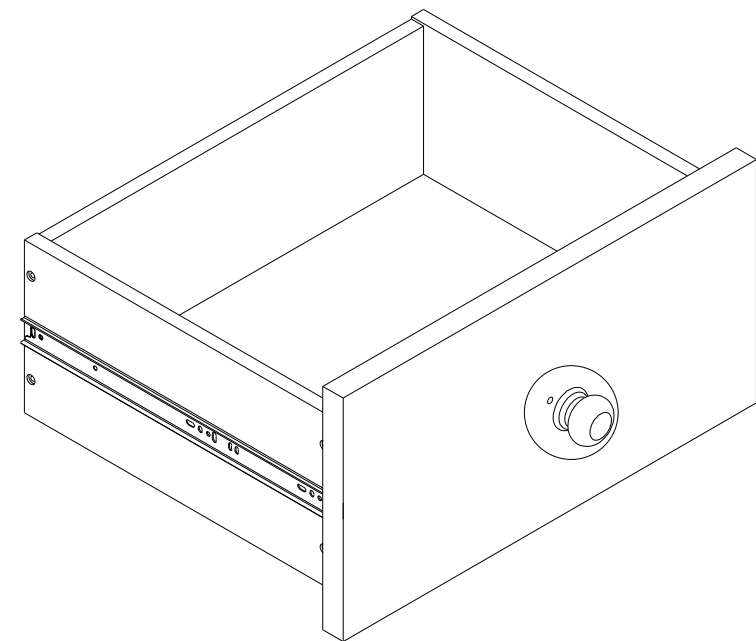STEP 9




E X 4pcs




G X 1set

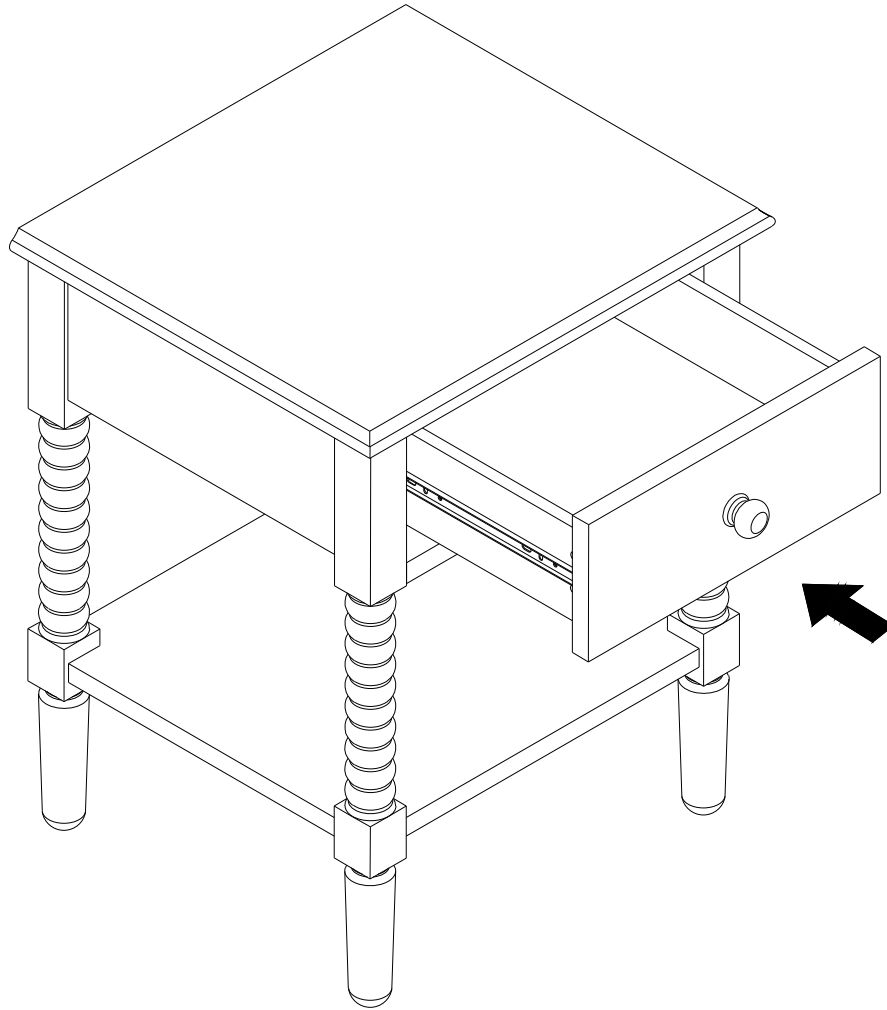STEP 10



ASSEMBLY COMPLETE

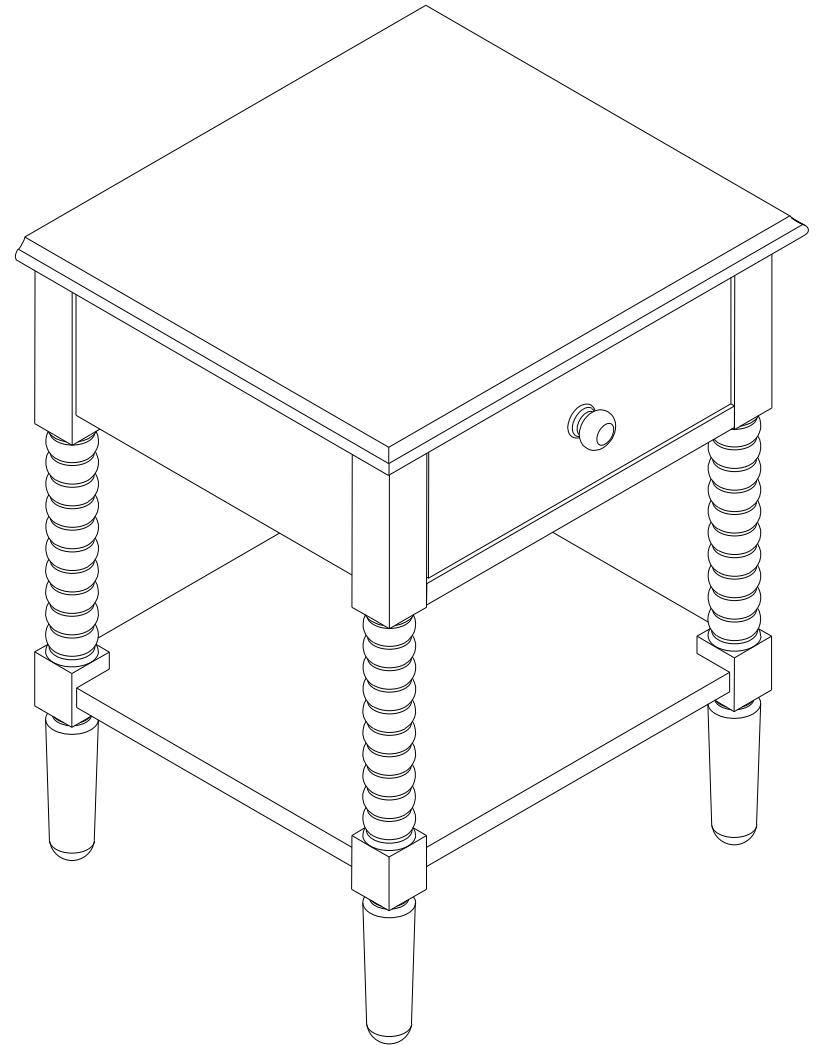

ASSEMBLY INSTRUCTION


SW 8000-88CH5D

REAR





















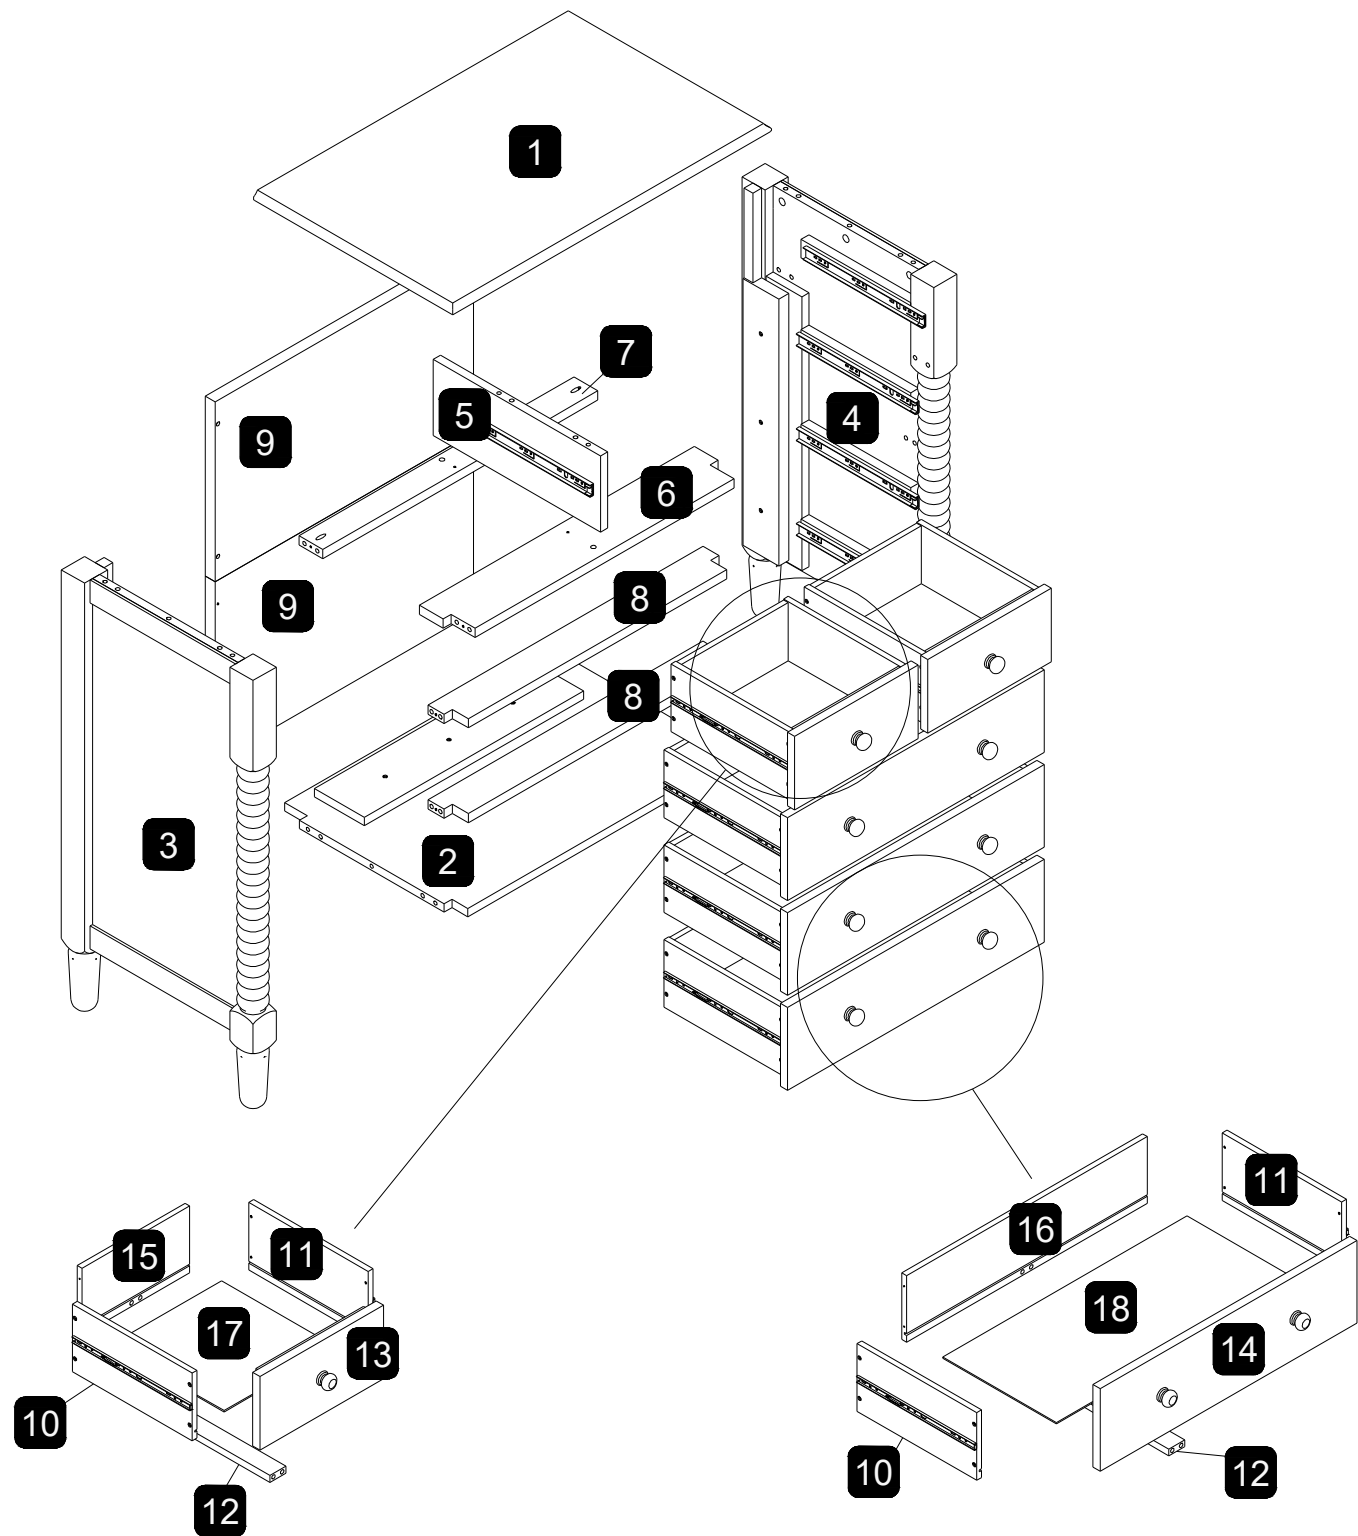FRONT









PART LIST

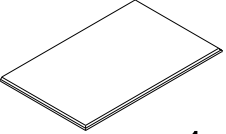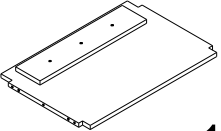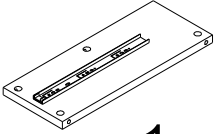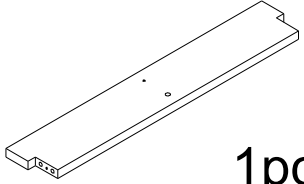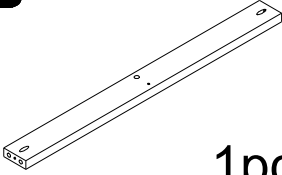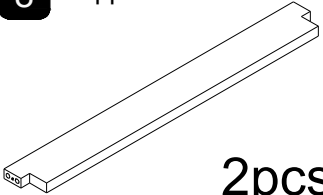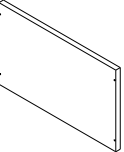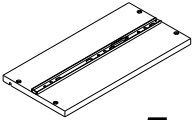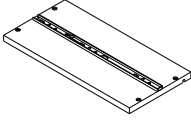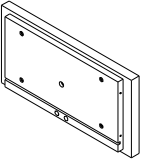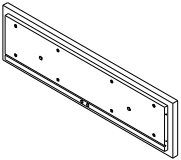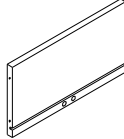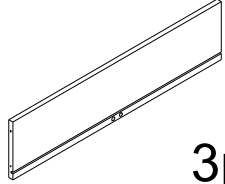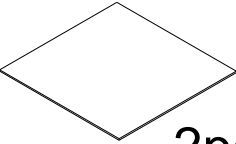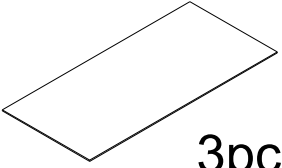1 Top Panel  1pc	2 Bottom Panel  1pc	3 Side Panel(left)  1pc	4 Side Panel(right)  1pc	5 Division  1pc	6 Upper Front Rail  1pc
7 Upper Rear Rail  1pc	8 Support rail  2pcs	9 Back Panel  2pcs	10 Drawer Side Panel(left)  5pcs	11 Drawer Side Panel(right)  5pcs	12 Drawer Support Rail  5pcs
13 Upper Drawer Front Panel  2pcs	14 Lower Drawer Front Panel  3pcs	15 Upper Drawer Rear Panel  2pcs	16 Lower Drawer Rear Panel  3pcs	17 Upper Drawer Base Panel  2pcs	18 Lower Drawer Base Panel  3pcs



HARDWARE LIST

A MINI FIX SPREADING BOLT 24MM  16pcs	B MINIFIX HOUSING Ø15*12MM  16pcs	C WOOD DOWEL M8*30MM  46pcs	D CSK SCREW M4*30MM  18pcs	E CSK SCREW M4*25MM  40pcs	F HANDLE  8sets
--	--	---	--	--	---

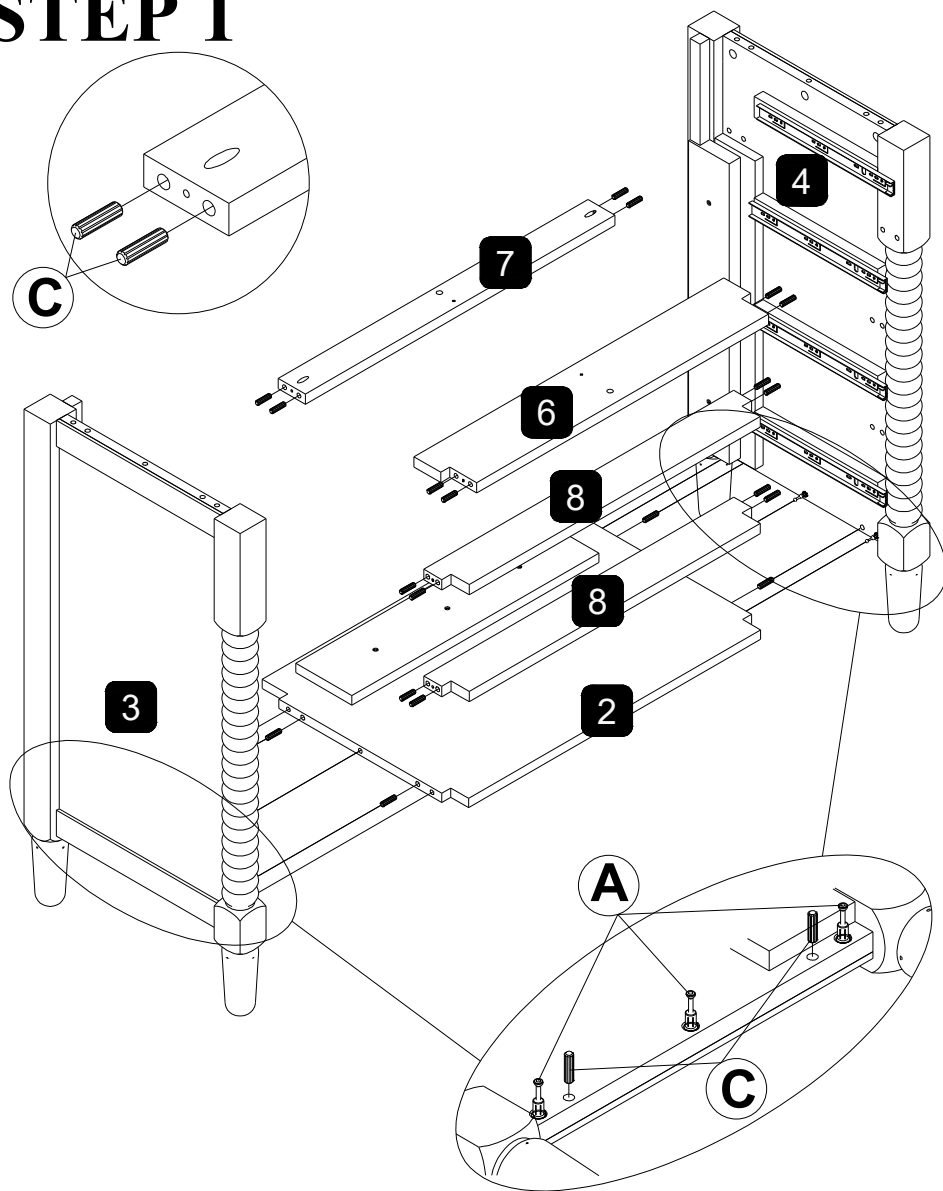STEP 1



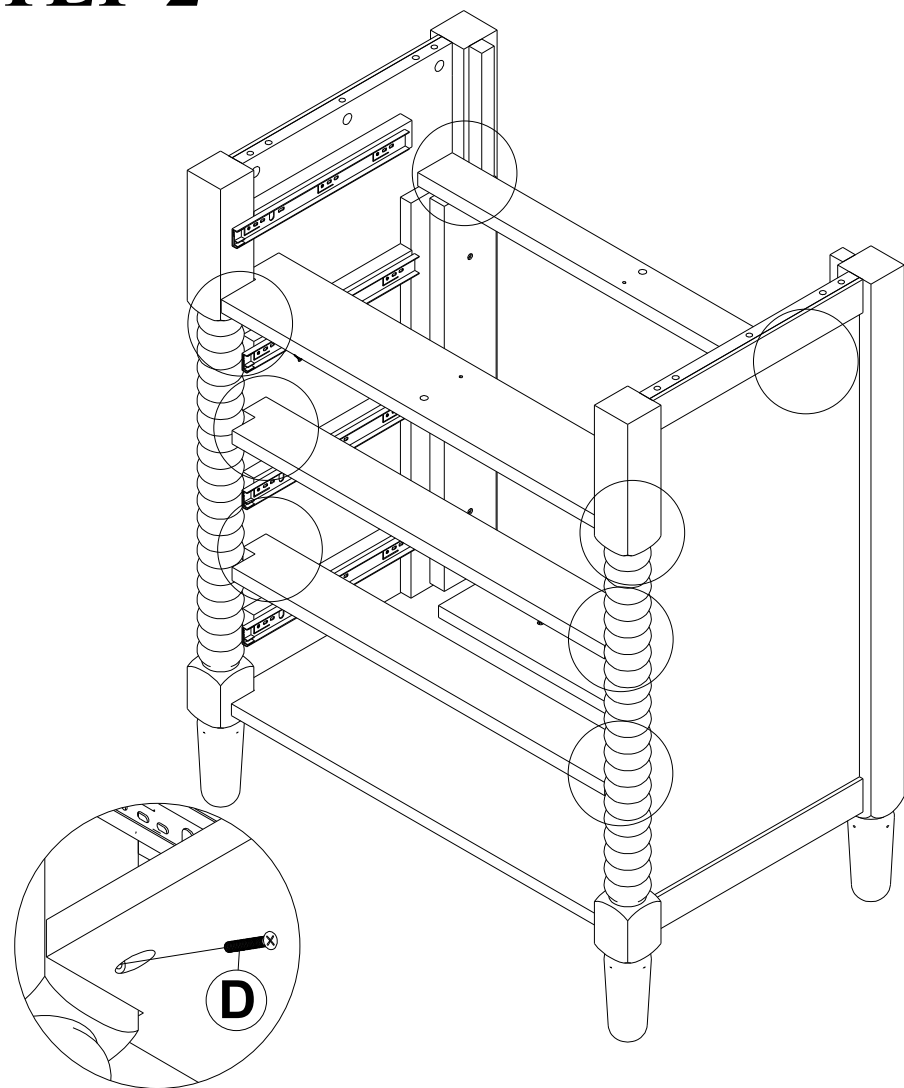
STEP 2



A X 6pcs






C X 20pcs




D X 8pcs



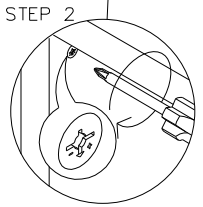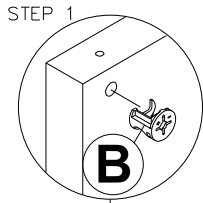
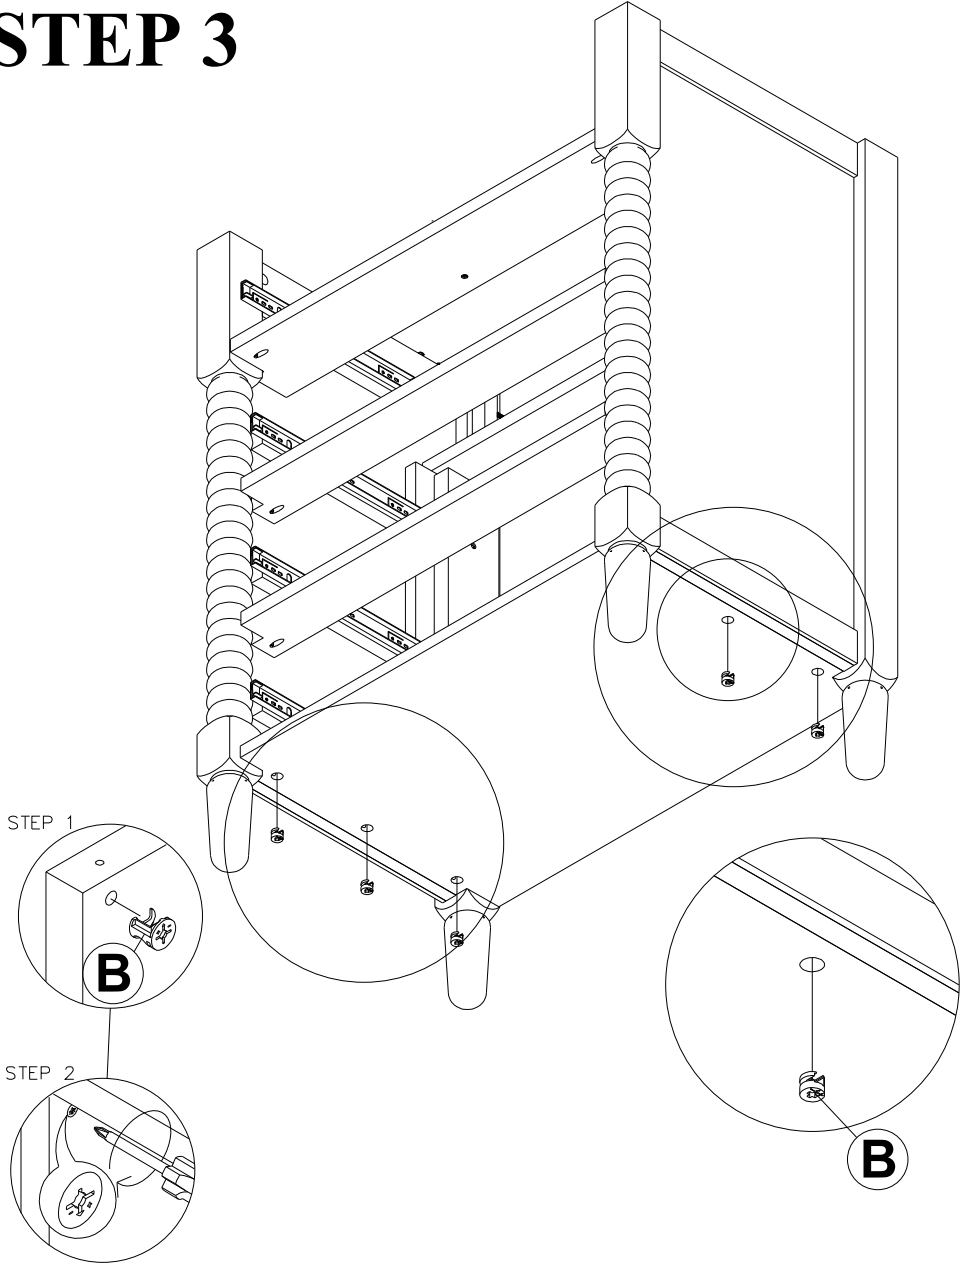
STEP 3




B X 6pcs



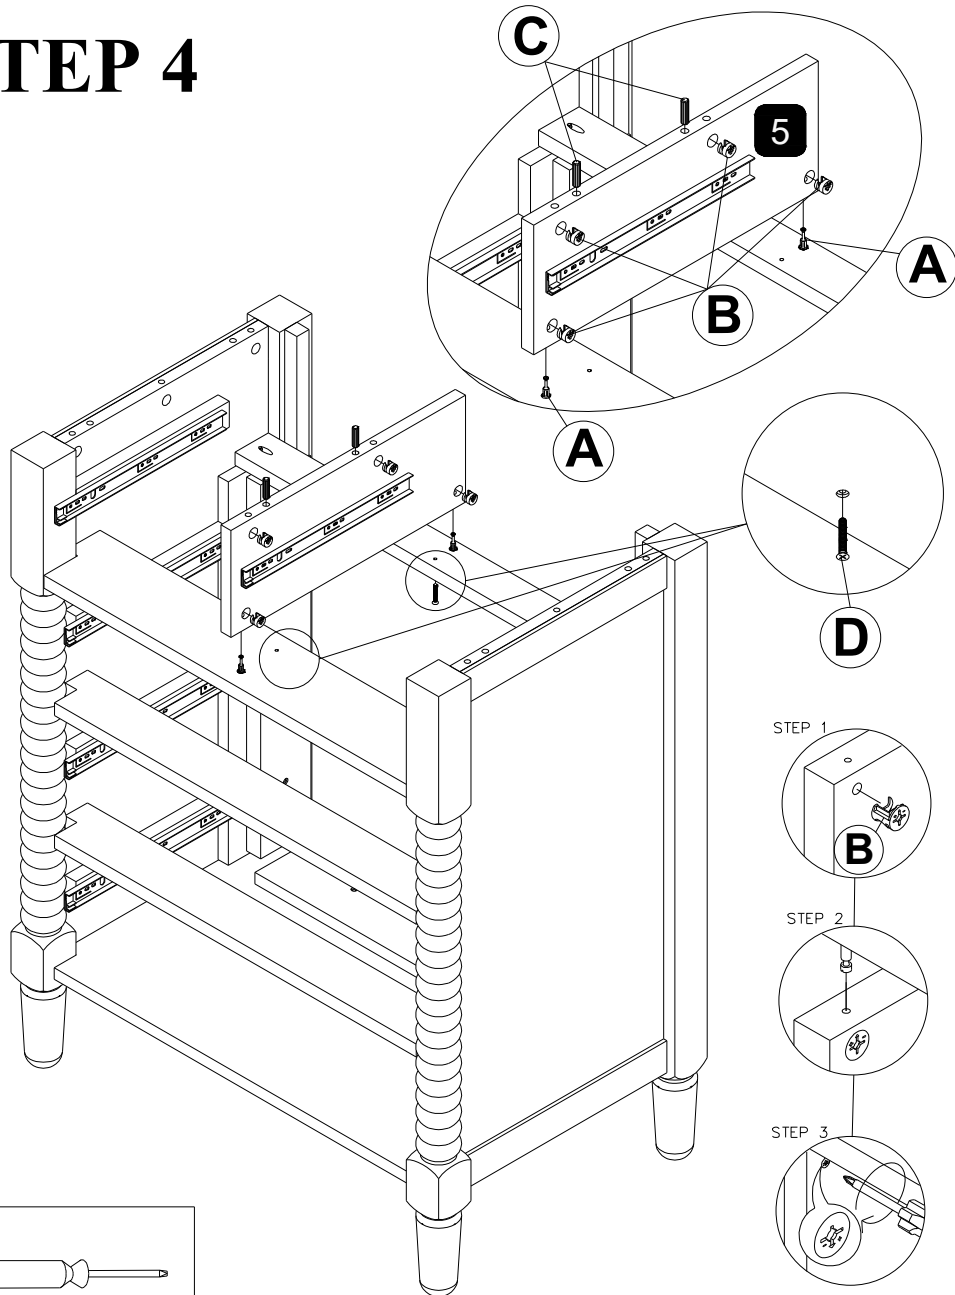
STEP 4










A X 2pcs


B X 4pcs




C X 2pcs


D X 2pcs

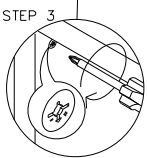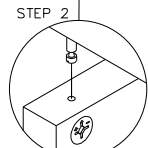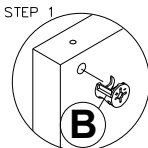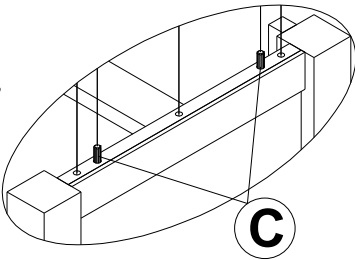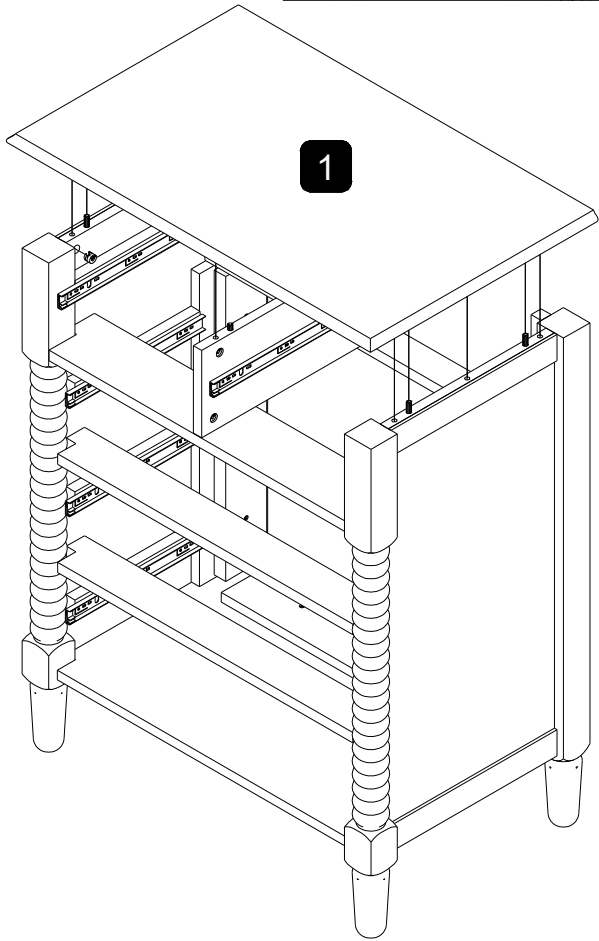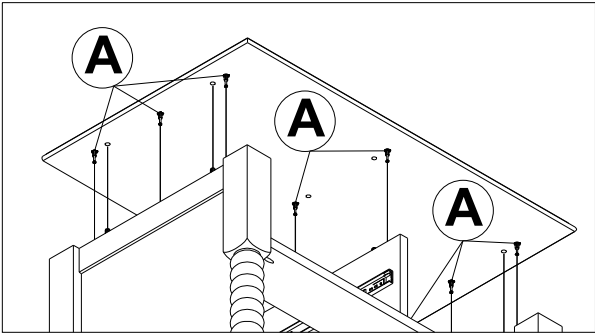STEP 5



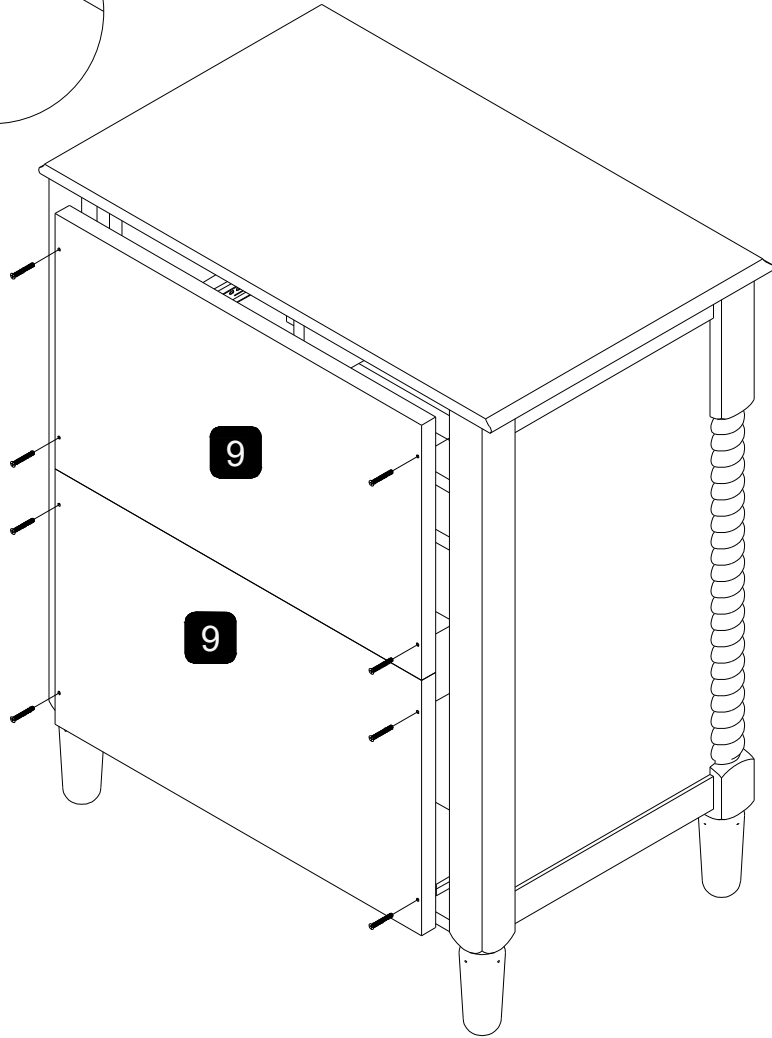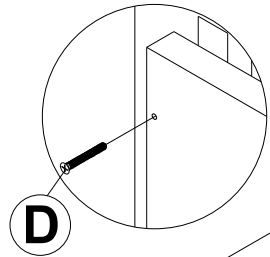STEP 6



A X 8pcs



B X 6pcs



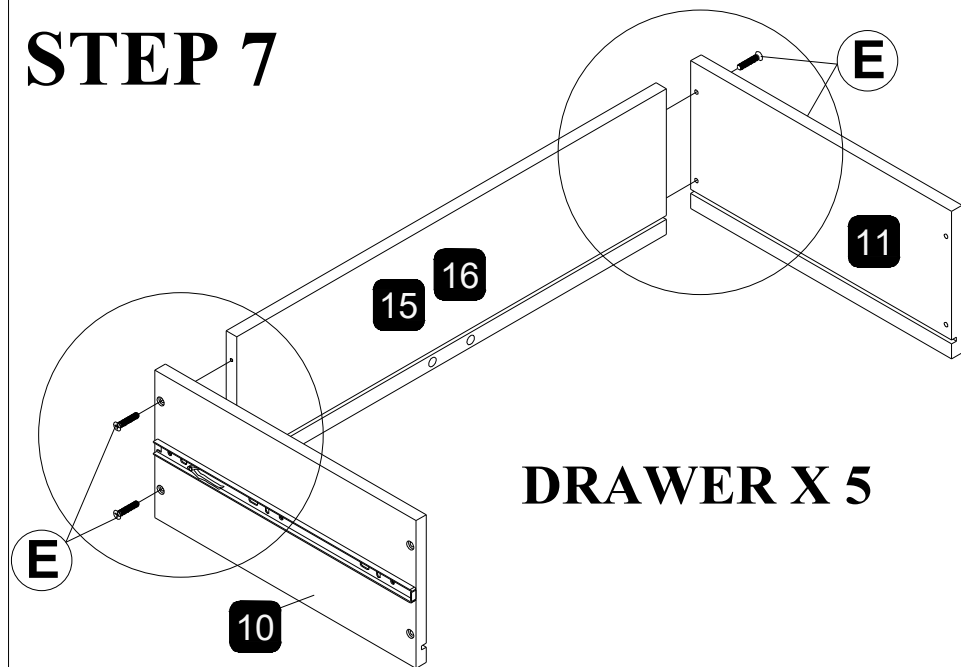
C X 4pcs






D X 8pcs



STEP 7



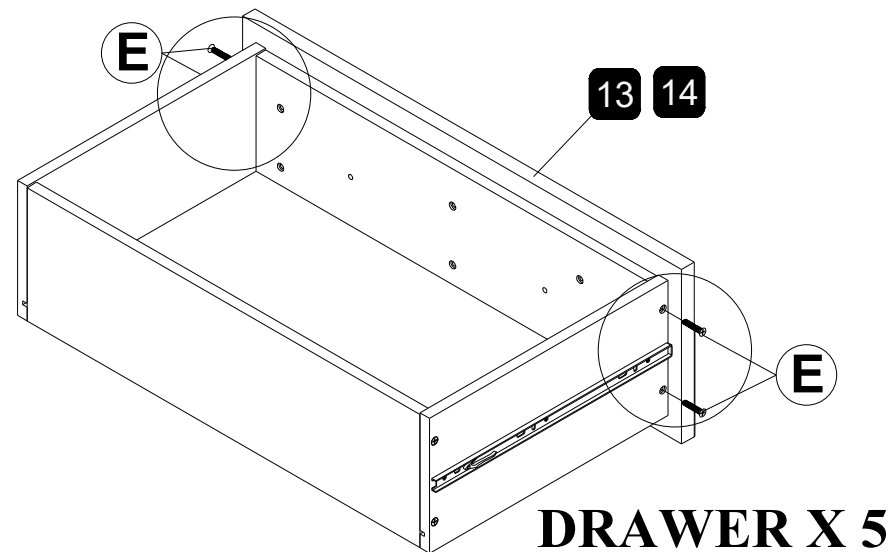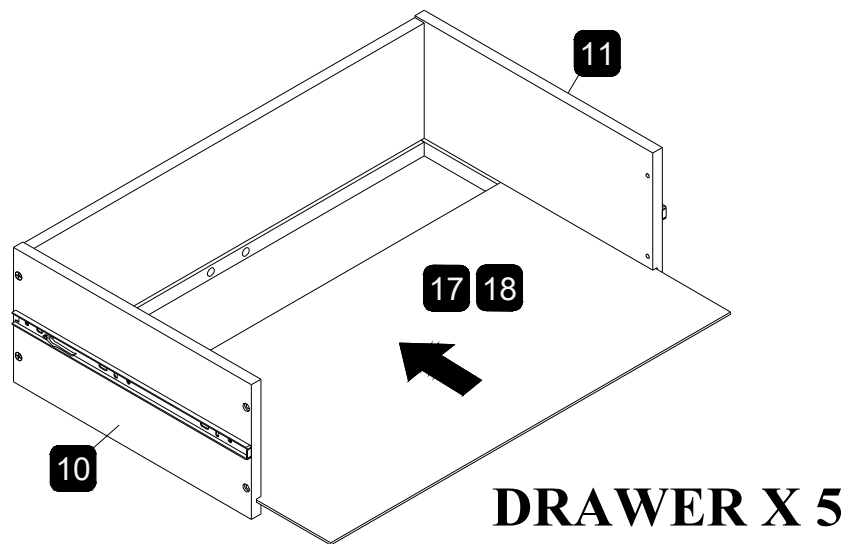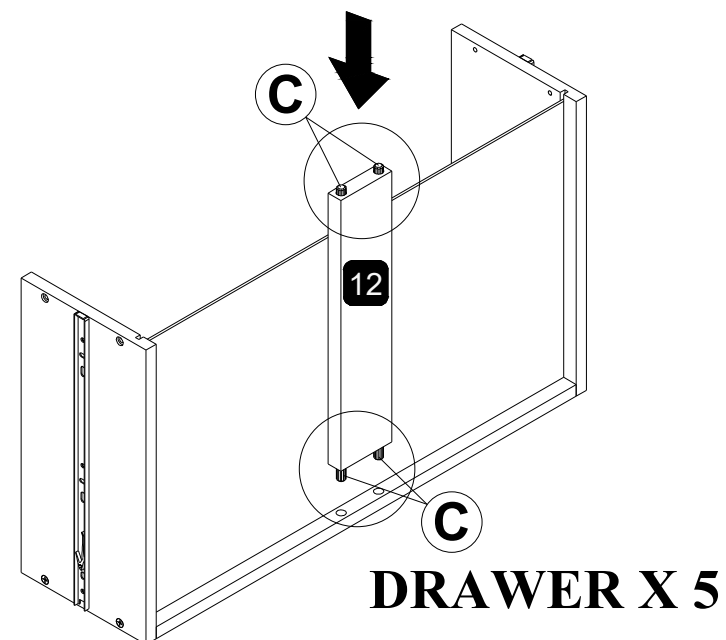STEP 8



E X 20pcs

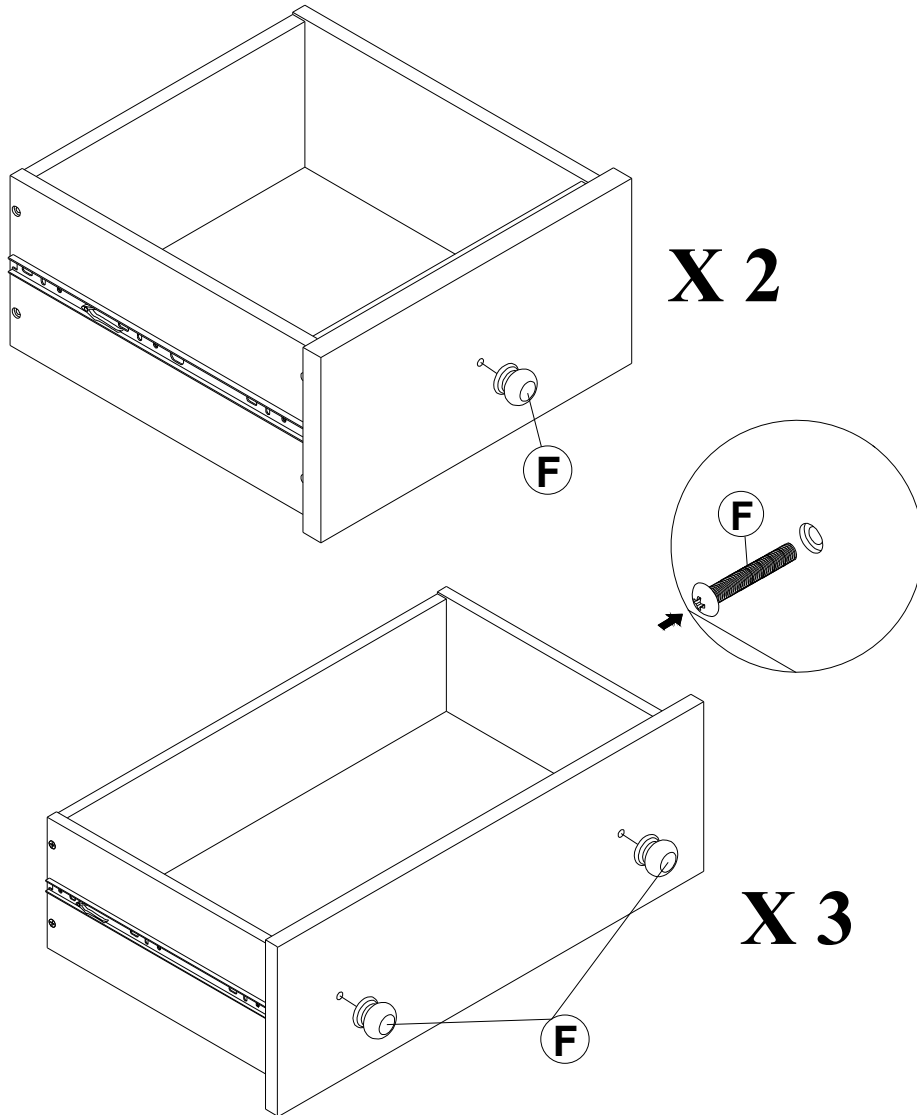


C X 20pcs




E X 20pcs

STEP 9



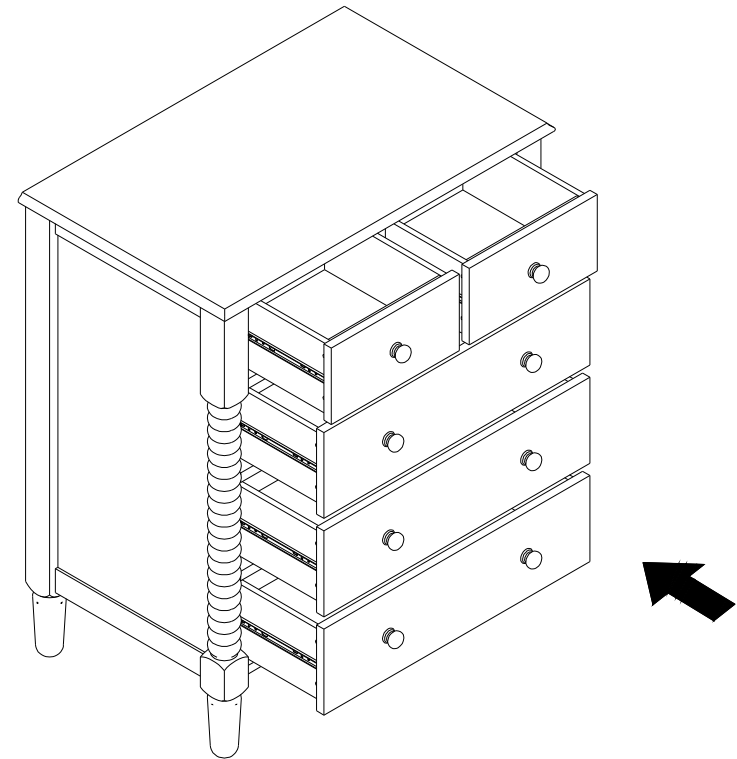STEP 10




F X 8sets

ASSEMBLY COMPLETE

CONTINUE TO ASSEMBLY
ANTI TIPPING KITS

