CAMMOO

Reliable, Durable, Dependable


# 4-Tier Wire Deck Shelf

## ⚠ NOTES:

1. Please read and follow all safety rules and operating instructions before first use.
2. Check that all parts are present before assembling. If anything is missing, please contact us immediately.
3. **Returns:** Contact us for a free return shipping label to avoid any unexpected costs to you.
4. **Message Us:** Via the platform (Go to "Your Orders" and find this purchase).

We are committed to resolving your issue!

# PRODUCT STRUCTURE DIAGRAM

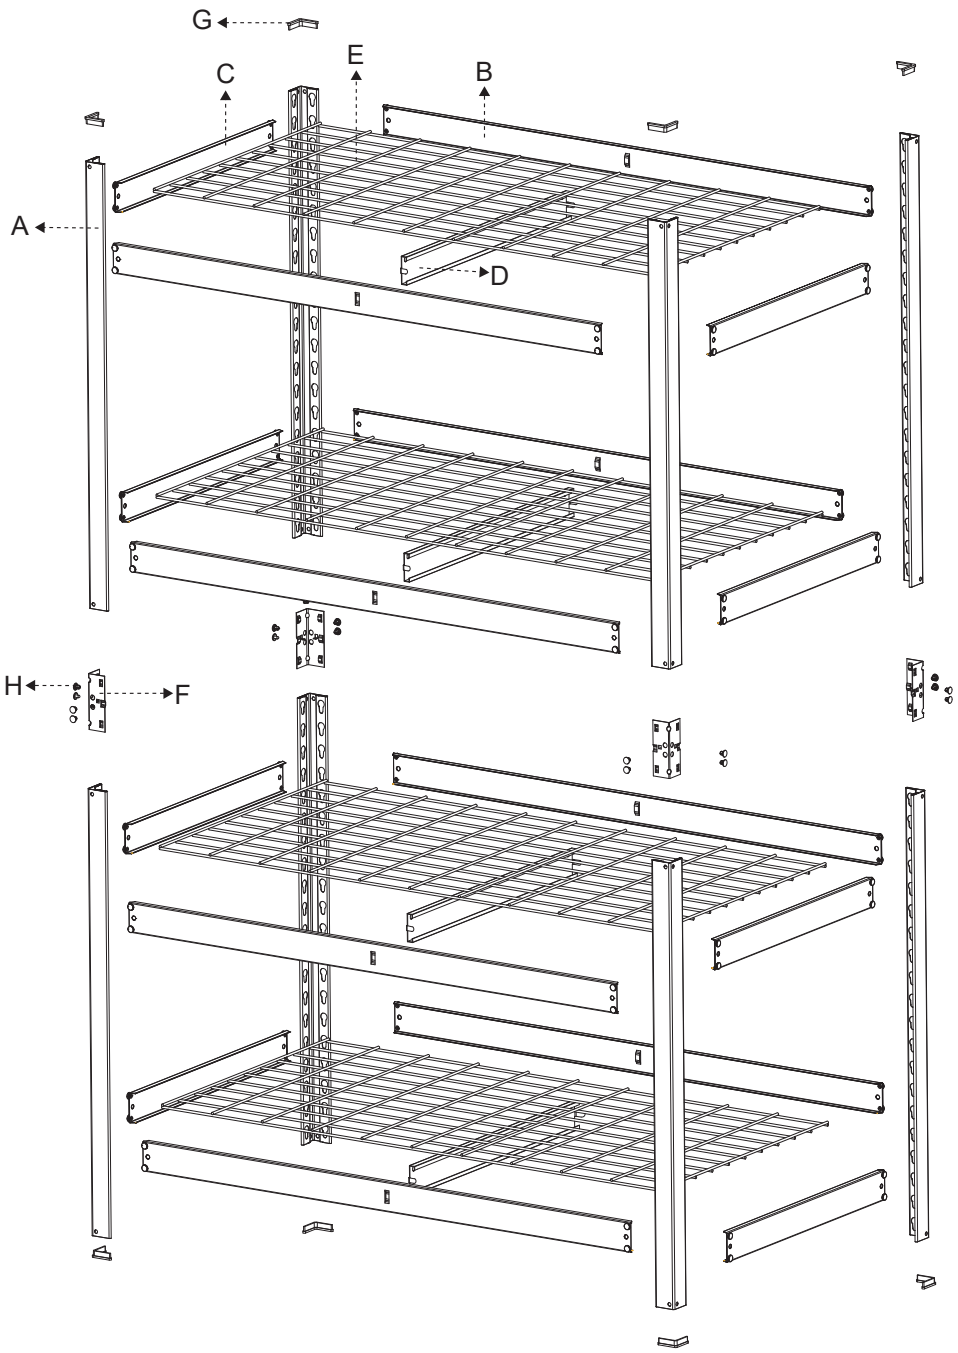

# PRECAUTIONS & SAFETY GUIDELINES

## Precautions





To extend service life, place the product in a cool, dry environment.

## Important Safety Instructions

1. Wear protective gloves throughout the assembly process to avoid cuts from metal parts.
2. Do not stack items too high on the top of the rack to prevent tipping over.
3. Always assemble the unit on a flat and level surface. Do not assemble on carpet, as this may affect performance or create a safety hazard.
4. Do not stand on the unit or use it as a ladder.
5. Distribute weight evenly on each shelf. Always place heavier items on the bottom shelf. Do not exceed the maximum load capacity indicated for each shelf board.
6. It is recommended that assembly be performed by at least two people to ensure safety.

# COMPONENTS LIST

**⚠ Warning:**
Before use, inspect all parts. Contact us immediately if any parts are missing or damaged.


| Part No. | Description | Picture | Qty / pcs |
|---|---|---|---|
| A | Vertical Bar |  | 8 |
| B | Long Support Bar |  | 8 |
| C | Short Support Bar |  | 8 |
| D | Center Brace |  | 4 |
| E | Wire Deck |  | 4 |
| F | Connector Pin |  | 4 |
| G | Rubber Feet |  | 16 |
| H | Plastic Locking Pin |  | 16 |
| I | Linkage Clip |  | 2 |
| J | Work Gloves |  | 1 |
| K | Rubber Mallet |  | 1 |
| L | Tag |   | 1 |
| M | Identification Plate |   | 4 |
| N | Magnetic Sticker |  | 4 |


# INSTALLATION STEPS

## Step 1: Install Rubber Feet

| Part No. | A | G | K | J |
|---|---|---|---|---|
| Picture |  |  |  |  |
| Qty / pcs | 4 | 4 | 1 | 1 |

- Connect the bottom of **Part A** to **Part G**, and then tap firmly with a rubber mallet(K).

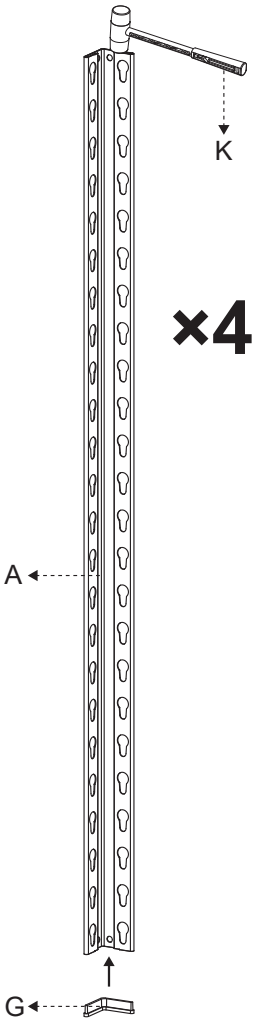

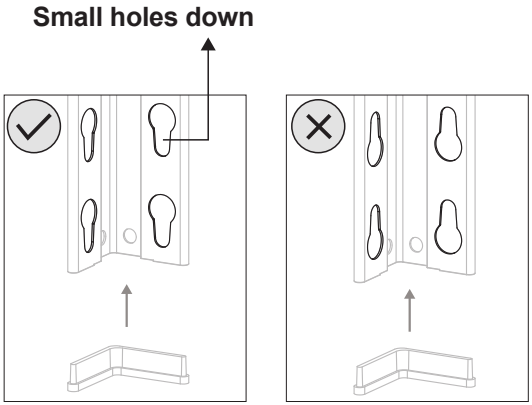



## Step 2: Install Short Support Bars


| Part No. | C | K | J |
|---|---|---|---|
| Picture |  |  |  |
| Qty / pcs | 4 | 1 | 1 |

- Connect **Part C** to **Part A**, and tap firmly with a rubber mallet (K) until the support bar completely covers the small hole.

**NOTE:** Leave one hole empty at top & bottom.

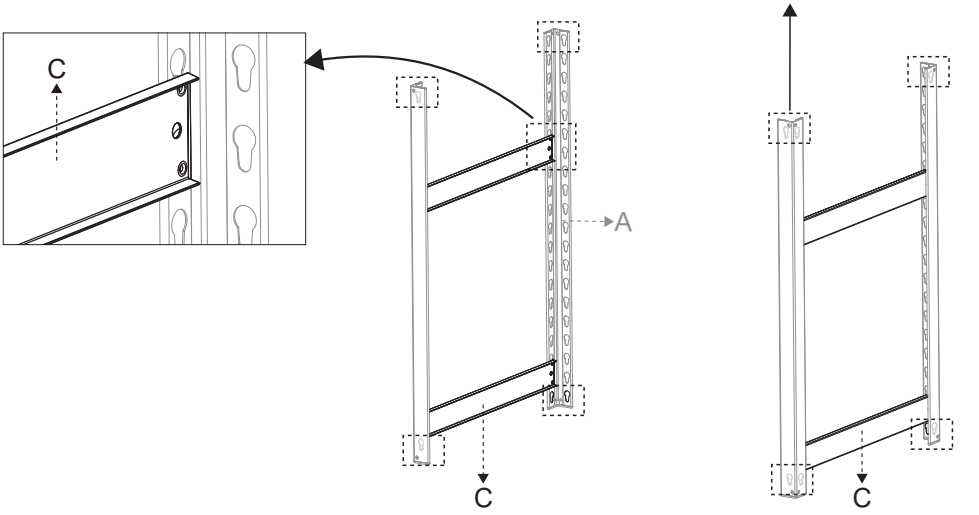


Parts C on both sides must be installed at the same height.

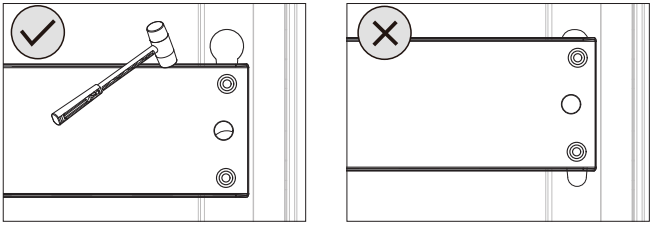


**NOTE:** Make sure it is firmly seated.


## Step 3: Install Long Support Bars

| Part No. | B | K | J |
|---|---|---|---|
| Picture |  |  |  |
| Qty / pcs | 4 | 1 | 1 |

- Connect **Part B** to **Part A**, and tap firmly with a rubber mallet (K) until the support bar completely covers the small hole.

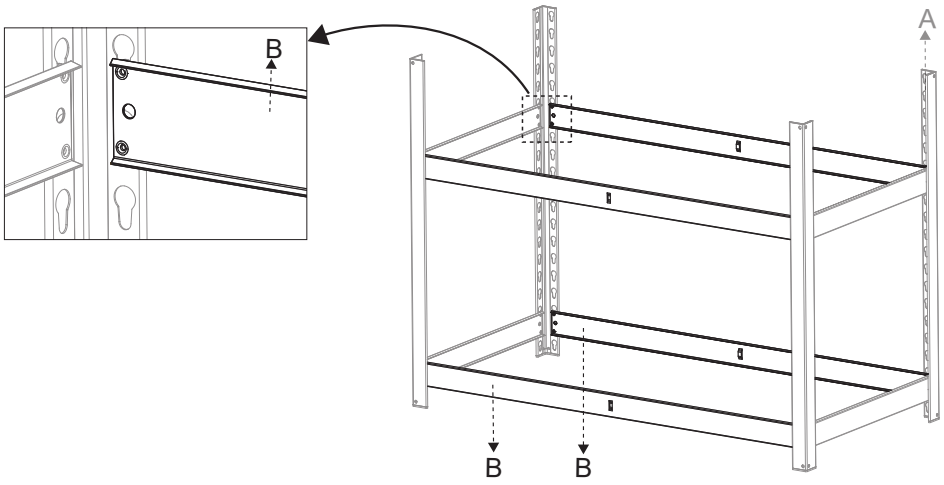



Parts B on both sides must be installed at the same height.

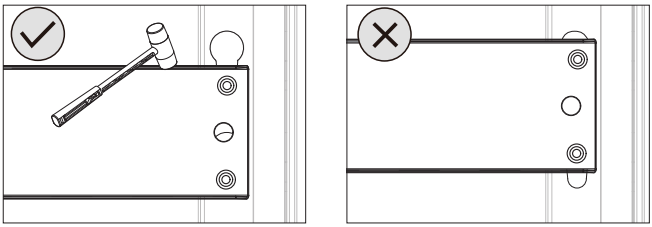


**NOTE:** Make sure it is firmly seated.

## Step 4: Install Connector Pins

| Part No. | F | K | J |
|---|---|---|---|
| Picture |  |  |  |
| Qty / pcs | 4 | 1 | 1 |

- Insert **Part F** in the direction shown in the illustration, and then tap firmly with a rubber mallet (K).

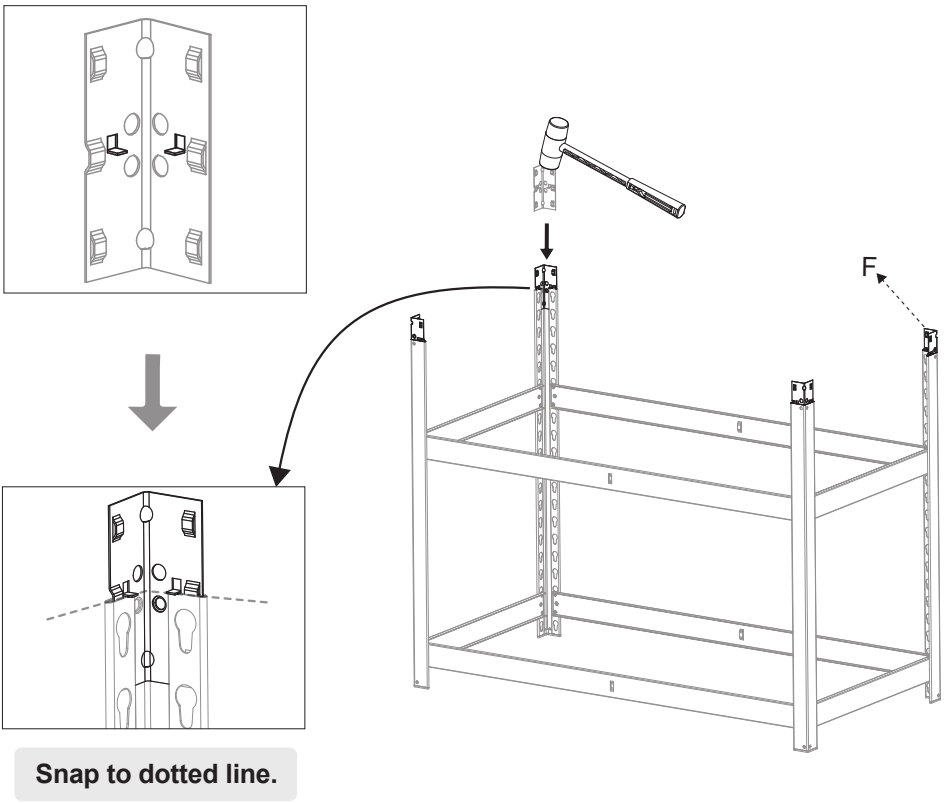



**Snap to dotted line.**

## Step 5: Install Vertical Bar

| Part No. | A | K | J |
|---|---|---|---|
| Picture |  |  |  |
| Qty / pcs | 4 | 1 | 1 |


- Connect **Part A** to **Part F**, and then tap firmly with a rubber mallet (K).

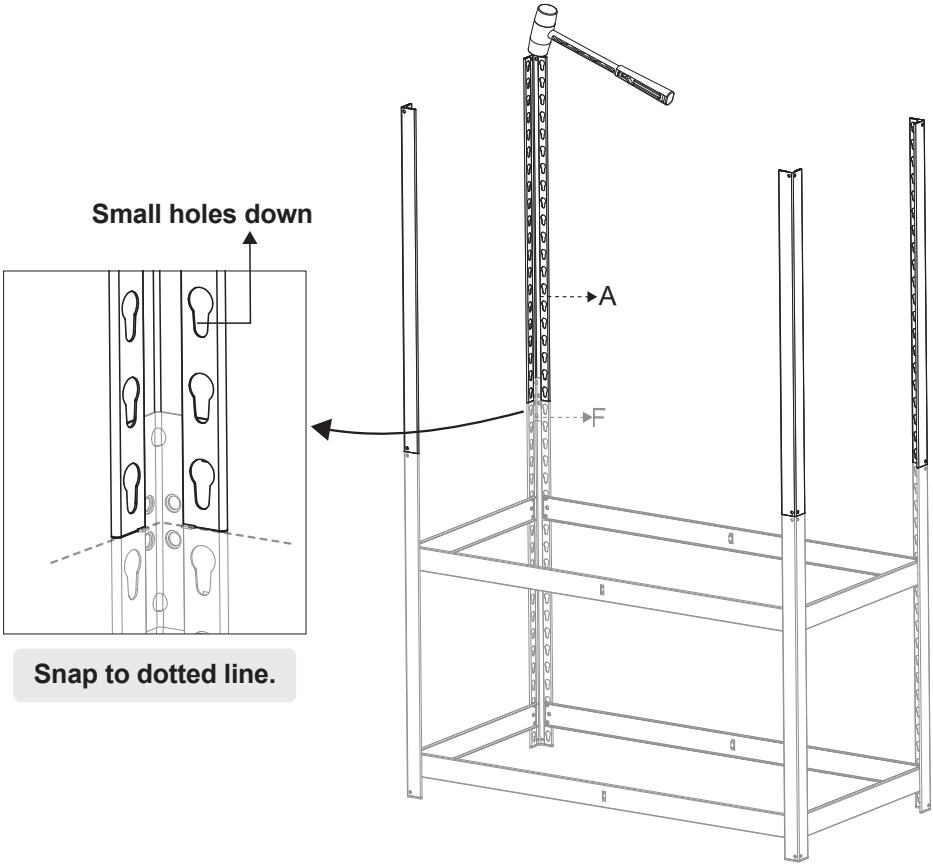

## Step 6: Install Plastic Locking Pin

| Part No. | H | J |
|---|---|---|
| Picture |  |  |
| Qty / pcs | 16 | 1 |


- Separate the Locking Pin, then insert its **H1** and **H2** into **Part F**'s round holes in sequence.

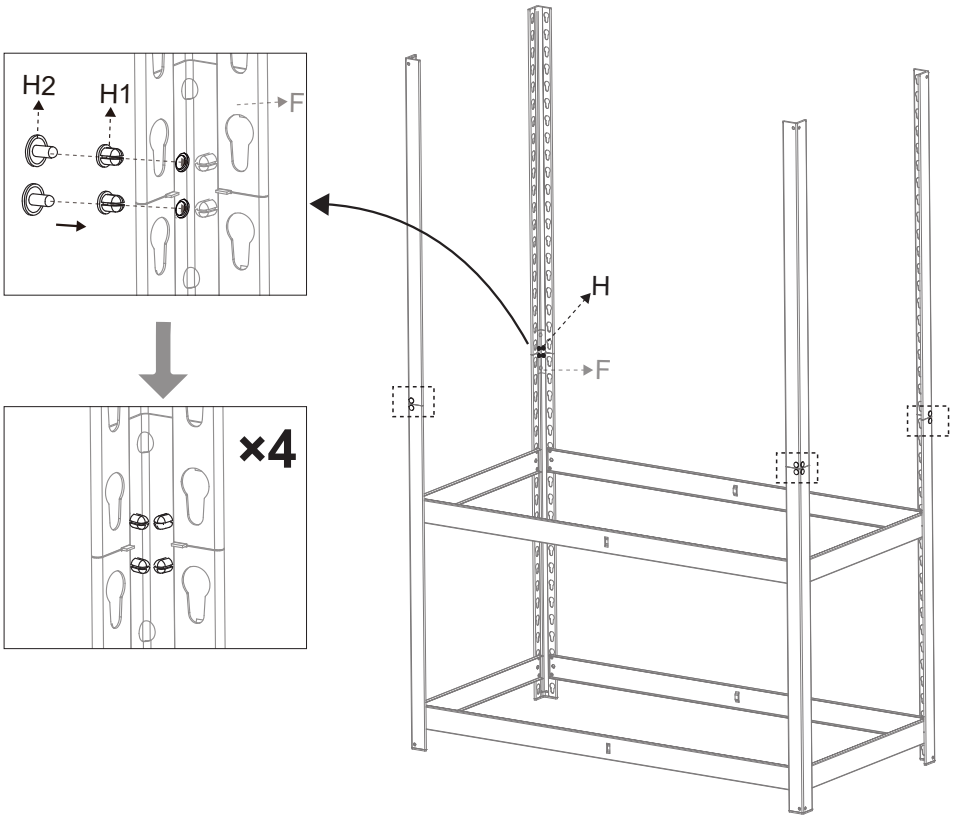

## Step 7: Install the Top Long / Short Support Bars

| Part No. | B | C | K | J |
|---|---|---|---|---|
| Picture |  |  |  |  |
| Qty / pcs | 4 | 4 | 1 | 1 |

- Connect **Part B / C** to **Part A**, and tap firmly with a rubber mallet until the support bar completely covers the small hole.

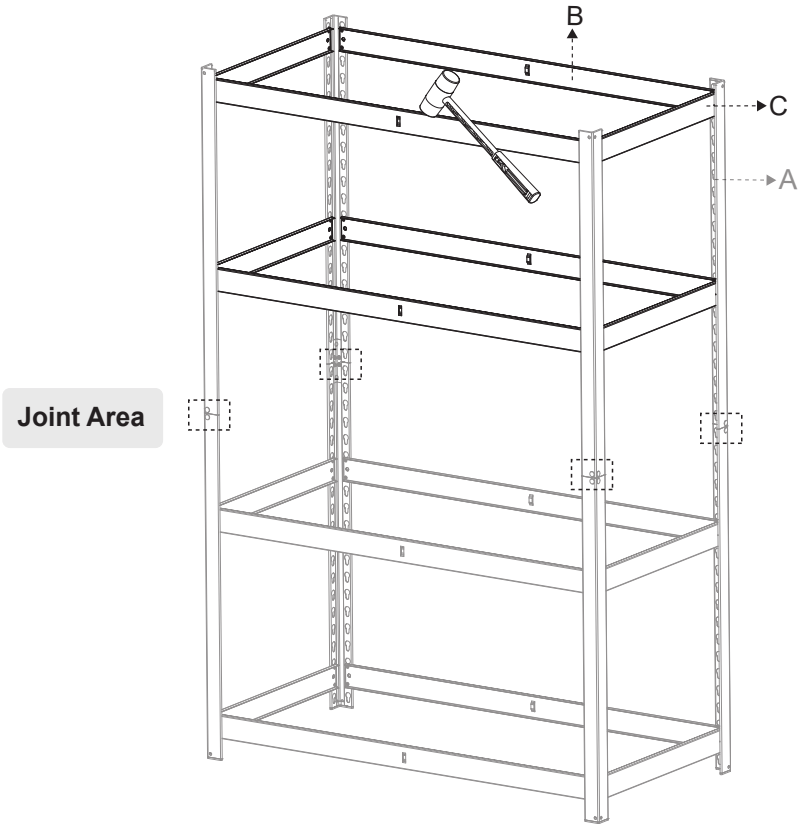



**⚠NOTES:**


1. Parts B and C on both sides must be installed at the same height.
2. Do not connect Part B / C at the joint of Part A, to avoid abnormal stress.

## Step 8: Install Center Brace

| Part No. | D | J |
|---|---|---|
| Picture |  |  |
| Qty / pcs | 4 | 1 |


- Snap **Part D** into the groove on **Part B**, one after another.

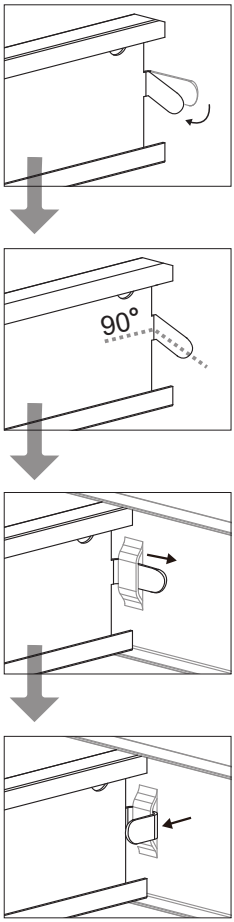

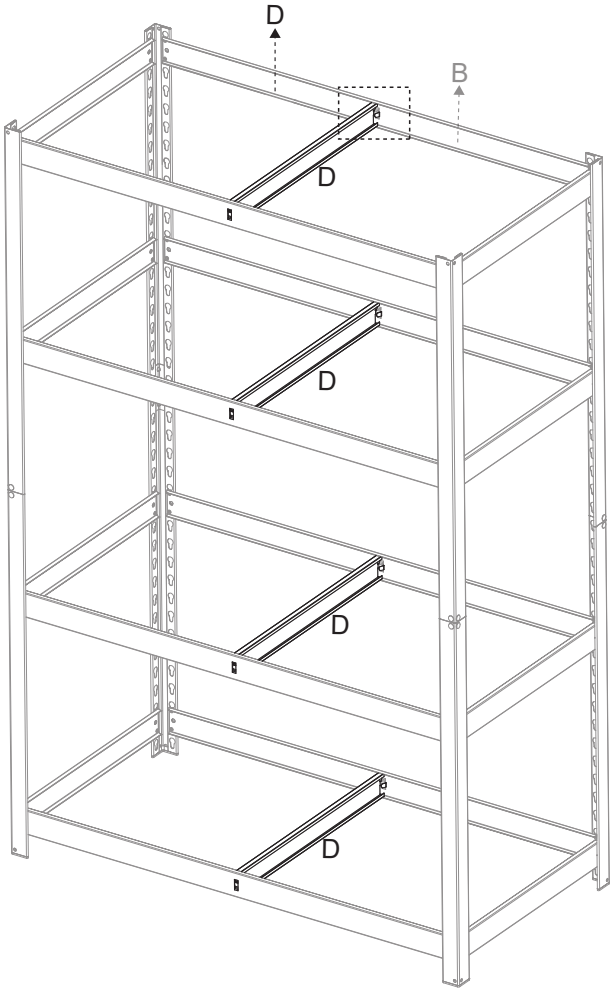




⚠ **NOTE:** For enhanced stability, it is recommended to bend this piece an additional 90° using a flat-head screwdriver.


## Step 9: Install Wire Deck

| Part No. | E | J |
|---|---|---|
| Picture |  |  |
| Qty / pcs | 4 | 1 |

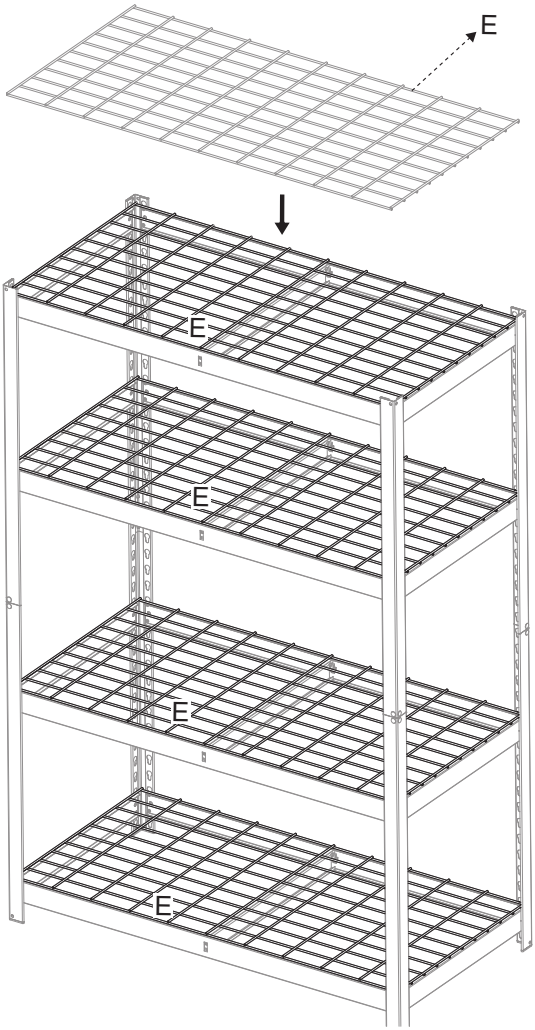
- Place **Part E** inside the support bar on each shelf level.



## Step 10: Attach Rubber Feet

| Part No. | G | K | J |
|---|---|---|---|
| Picture |  |  |  |
| Qty / pcs | 4 | 1 | 1 |


- Snap **Part G** into the four corners at the top, and then tap firmly with a rubber mallet (K).

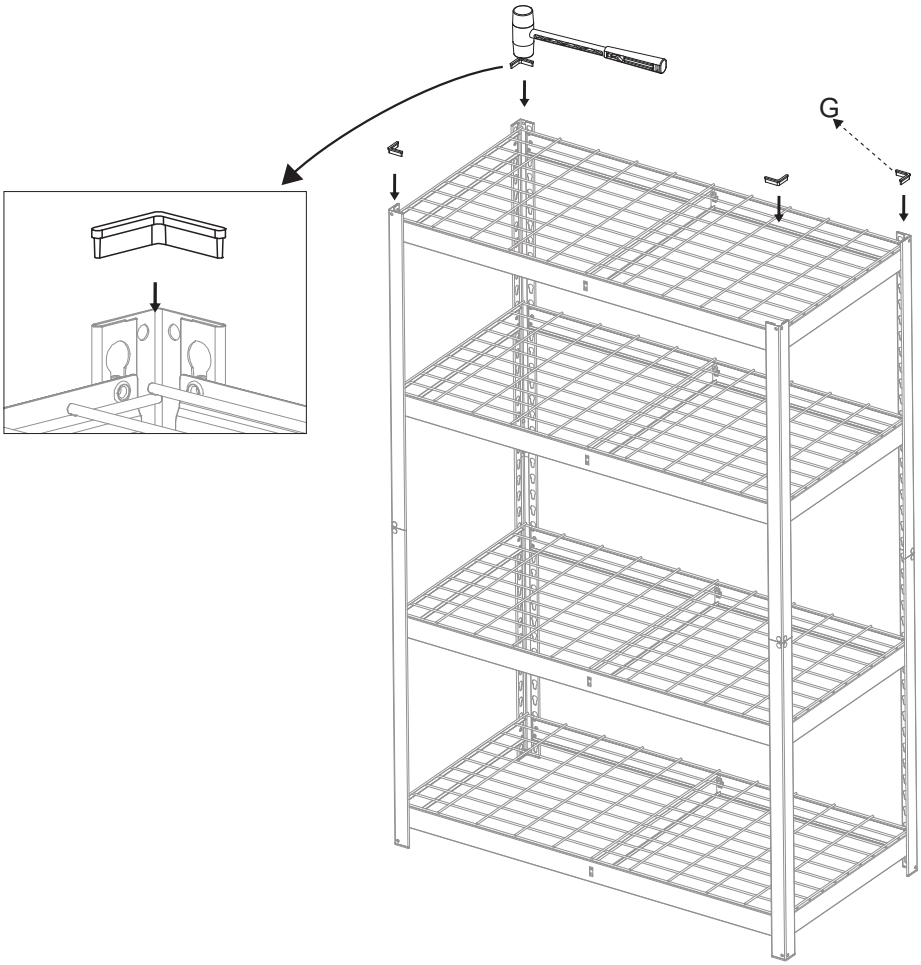

## Step 11: Mount Tag / Identification Plate


| Part No. | L | M | N |
|---|---|---|---|
| Picture |  |  |  |
| Qty / pcs | 1 | 4 | 4 |


- Hang the Tag (L) on any suitable location of Part A.
- Attach the Identification Plate (M) to any position on Part B.

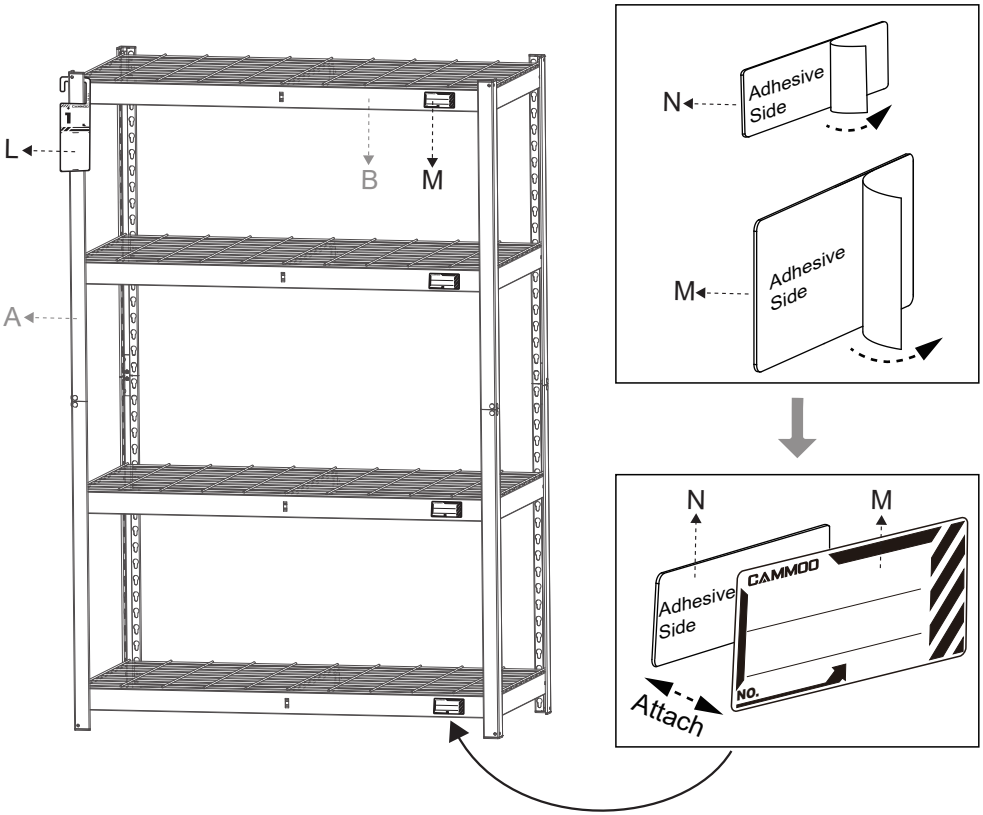


**Tip:** Made for dry-erase markers. Write, erase, and reuse.

## Step 12: Install Linkage Clip (Optional)

| Part No. | I | J |
|---|---|---|
| Picture |  |  |
| Qty / pcs | 2 | 1 |

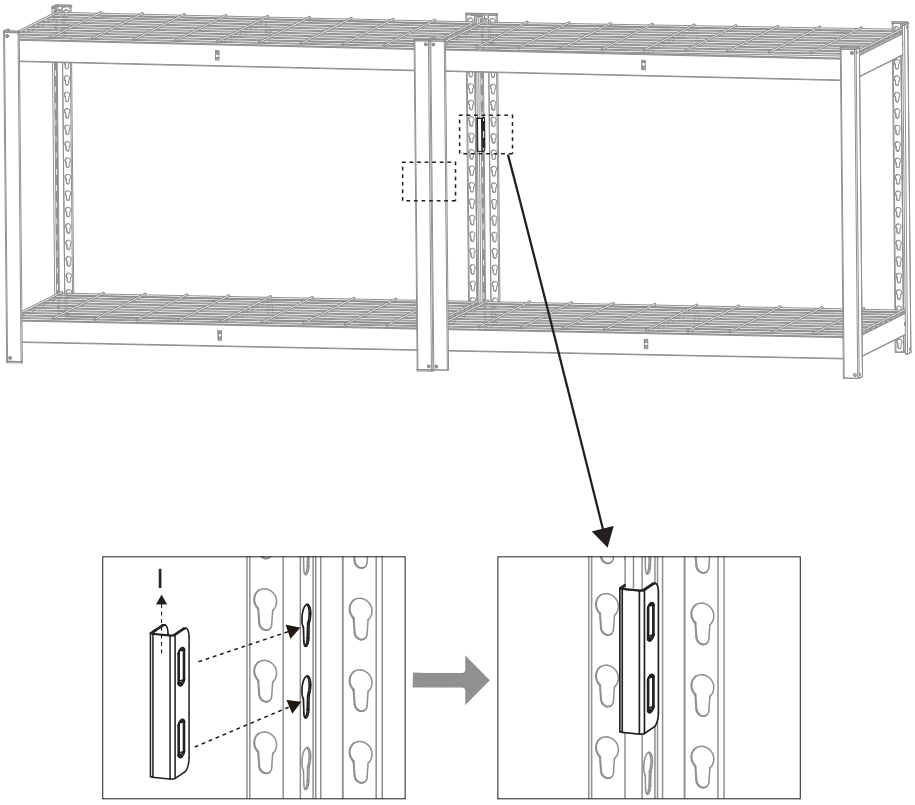


**⚠NOTE:**
To enhance stability when using multiple racks or separating into two units, use Part I.

Manufacturer: Shenzhen Cammoo Trade Co., Ltd.

Add: Fortune Building 39H-W2, 88 Fuhua 3rd Road, Gangxia Community, Futian Street, Futian District, Shenzhen City, Guangdong, China, 518000.

**MADE IN CHINA**