



Installation Steps

1

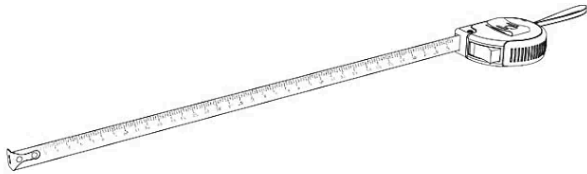


Measure and mark target point

2

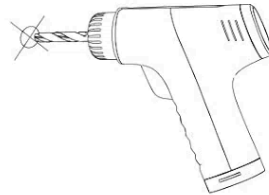

Drill holes at the positioning marks with a drilling machine

3

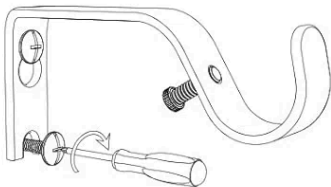


Drill holes, install the brackets with screws and anchors

4




Attach the 5/8" fixed rod With the connector

5

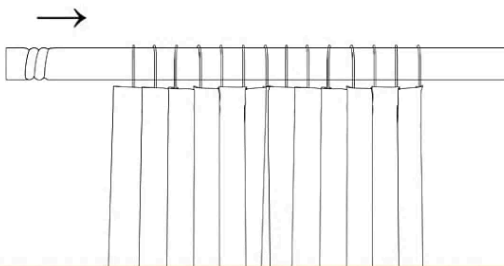

Put the curtain through the curtain rod

6

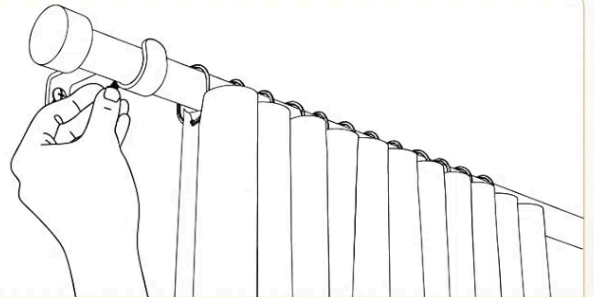

Tighten screws to fix the rod