
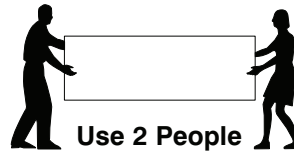


9020 1 Drawer Night Stand


Assembly Instructions

WI-0925

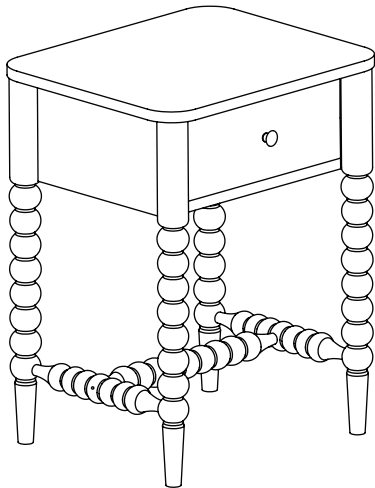


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

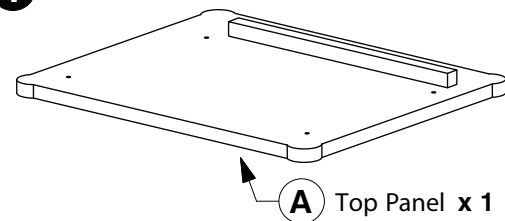


A Top Panel x 1

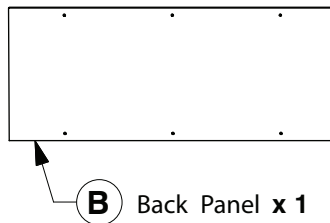


B Back Panel x 1




C Support Bar x 2

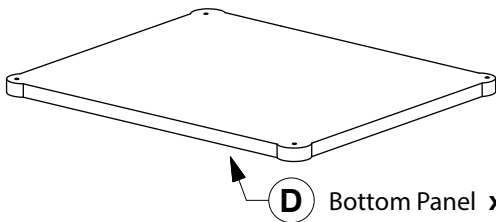


D Bottom Panel x 1

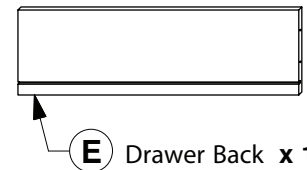


E Drawer Back x 1

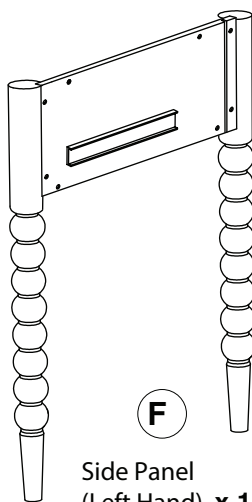


F Side Panel (Left Hand) x 1

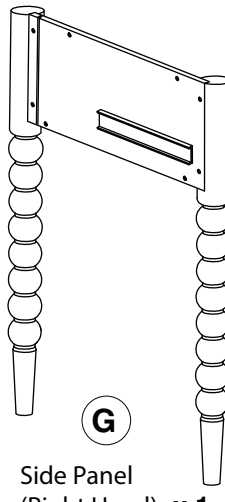


G Side Panel (Right Hand) x 1

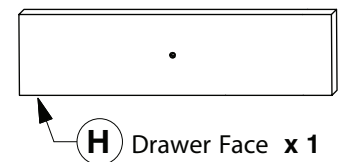


H Drawer Face x 1

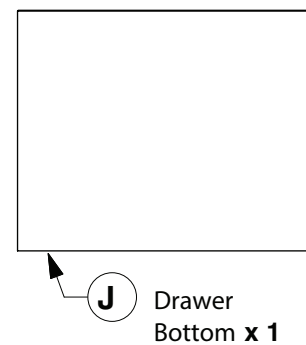

J Drawer Bottom x 1



K Drawer Side (Left Hand) x 1



L Drawer Side (Right Hand) x 1


M Post x 4

9020 1 Drawer Night Stand


Assembly Instructions

WI-0925


2 Hardware List

- | | | | | |
|---|---|--|---|---|
| 
1 M6 x 15mm
JCB x 8 | 
2 M6 x
30mm JCB
x 4 | 
3 'L' Bracket
(5005-3) x 4 | 
4 M4 x 20mm
Wood Screw x 4 | 
5 M4 x 16mm
Wood Screw x 6 |
| 
6 M4 x 25mm
Wood Screw x 8 | 
7 Handle
(1005) x 1 | 
8 M4 x 22mm
Wood Screw x 1 | 
9 Allen Key
x 1 | |


3 Assemble the Drawer Sides (K & L) to the Drawer Face (H).

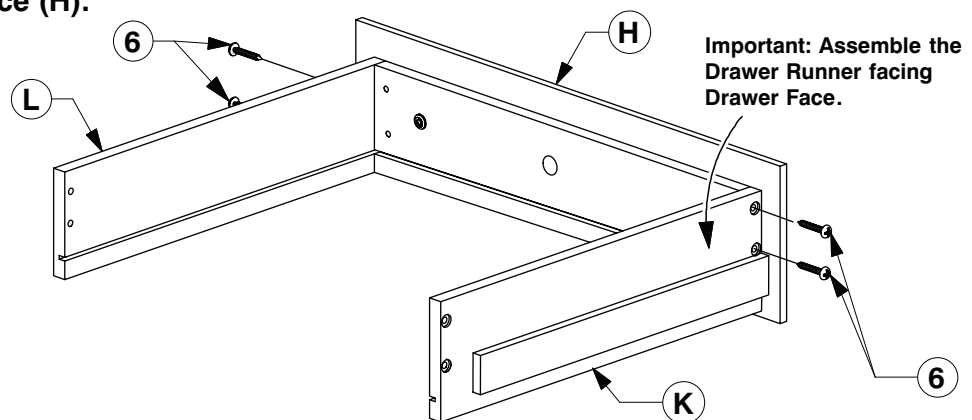

4 Slide the Drawer Bottom (J) into the groove on the Drawer Sides (K & L).

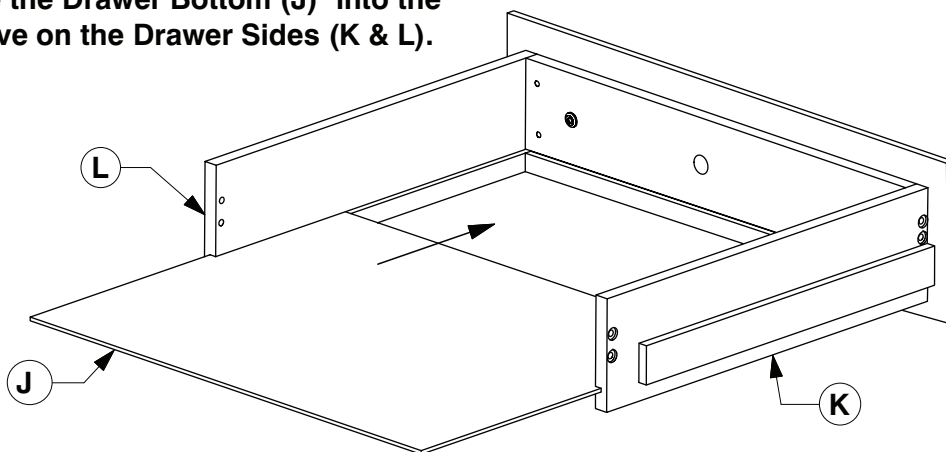

5 Assemble the Drawer Back (E) to the Drawer Sides (K & L). Fit the Handle to the Drawer Face (H).

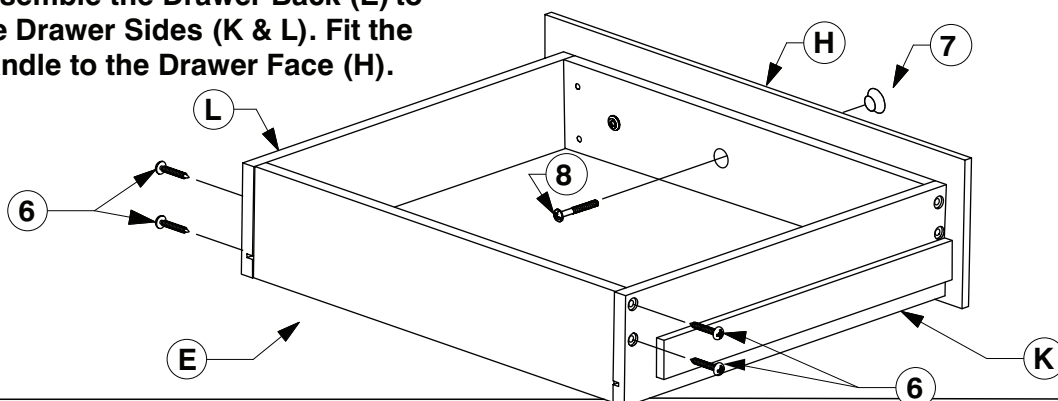


9020 1 Drawer Night Stand


Assembly Instructions

WI-0925

- 6** Fit the 'L' Bracket (6) to the Side Panel (F & G).

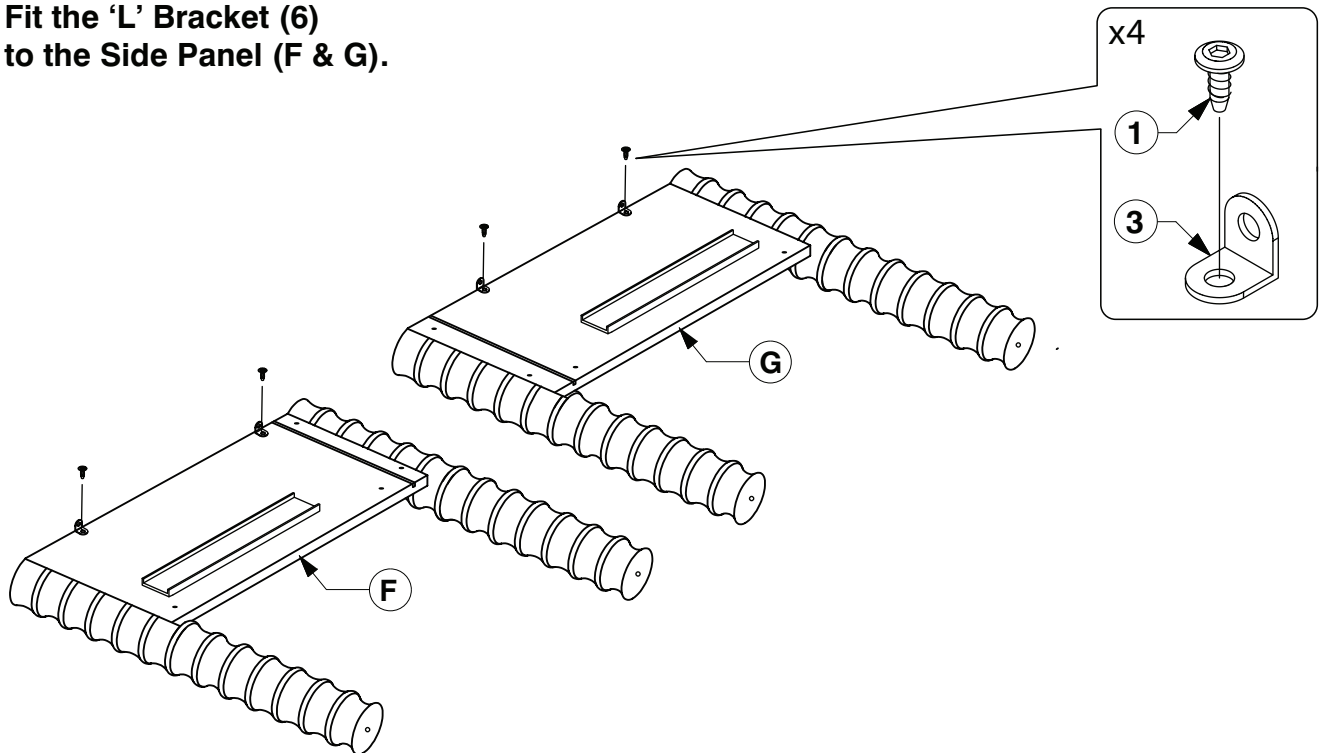

- 7** Assemble the Side Panel (F & G) to the Top Panel (A).



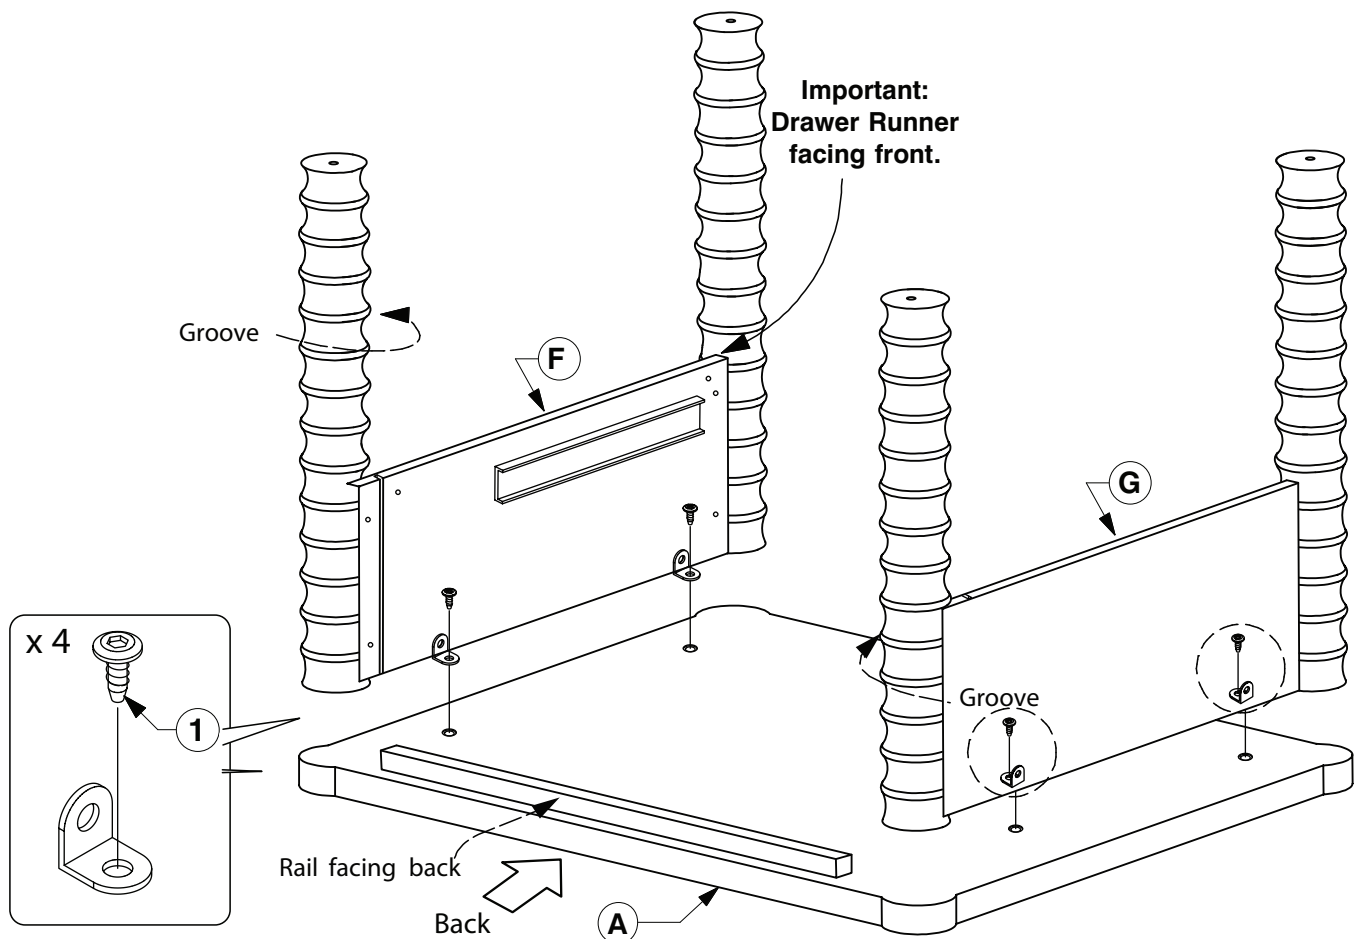


9020 1 Drawer Night Stand


Assembly Instructions

WI-0925

- 8** Fit the Support Bar (C) to the Side Panel (F & G).

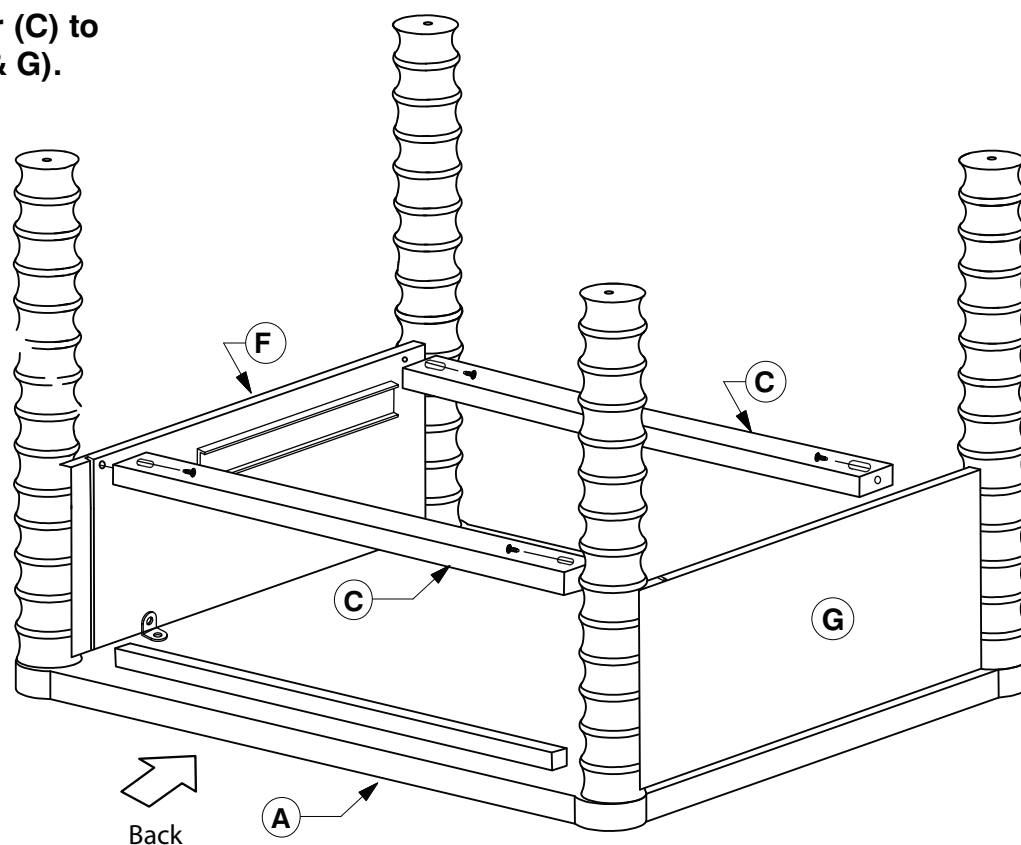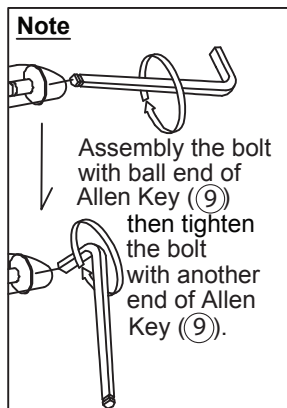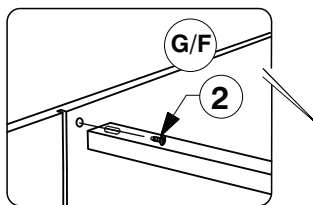

- 9** Slide the Back Panel (B) into the on the back of the Side Panel (F & G).

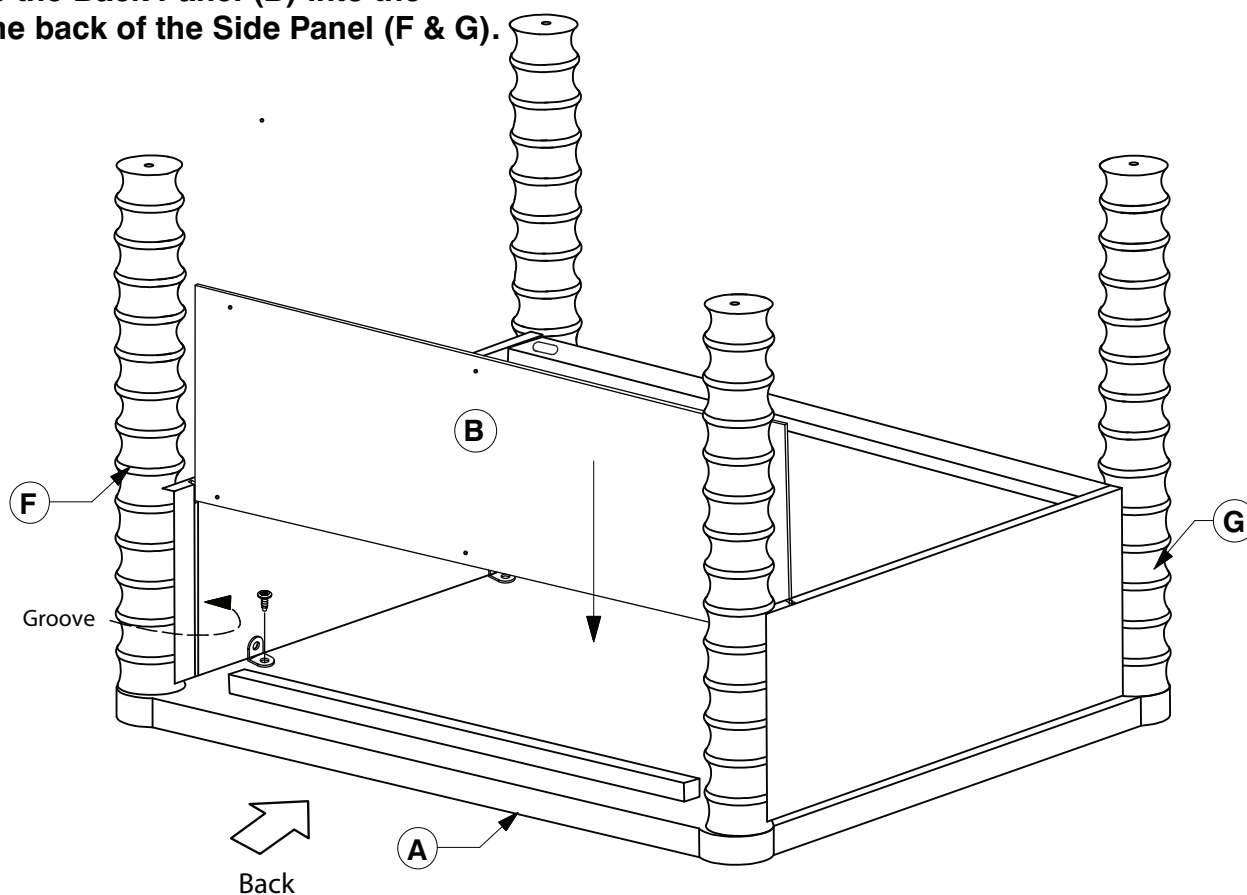


9020 1 Drawer Night Stand


Assembly Instructions

WI-0925

- 10** Fix the Post (M) and Bottom Panel (D) to the Side Panel (F & G).

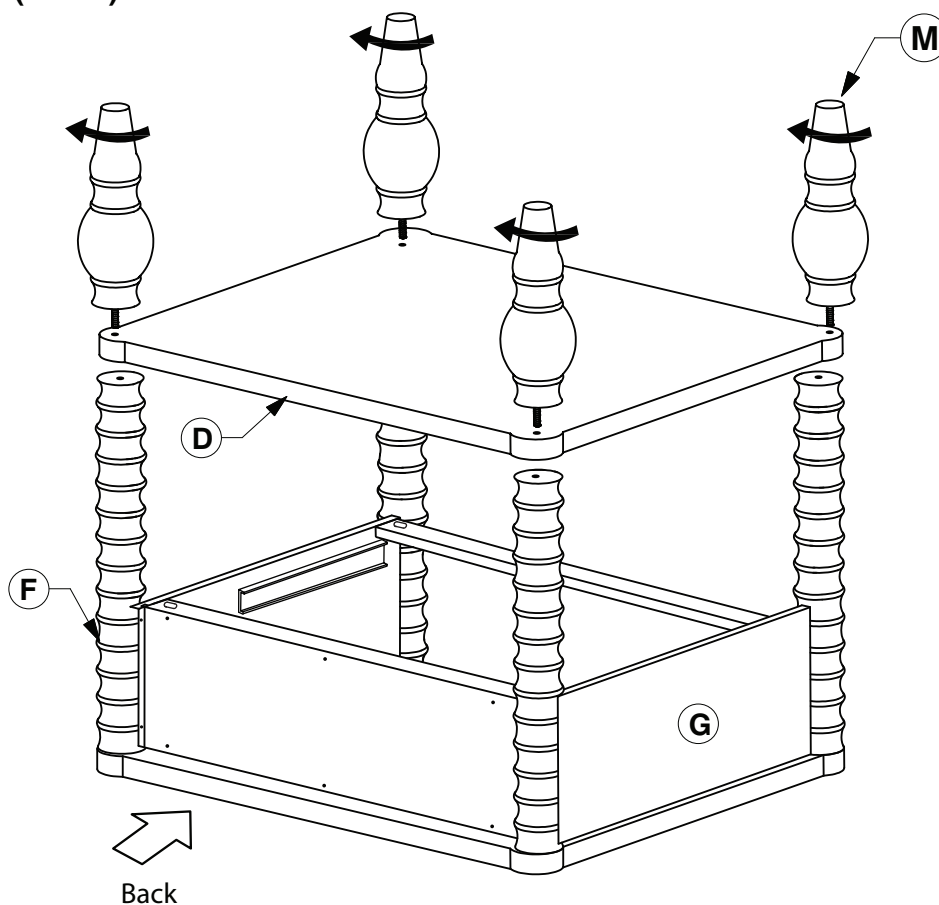

- 11** Screw the Back Panel (B) to the Side Panel (F & G).

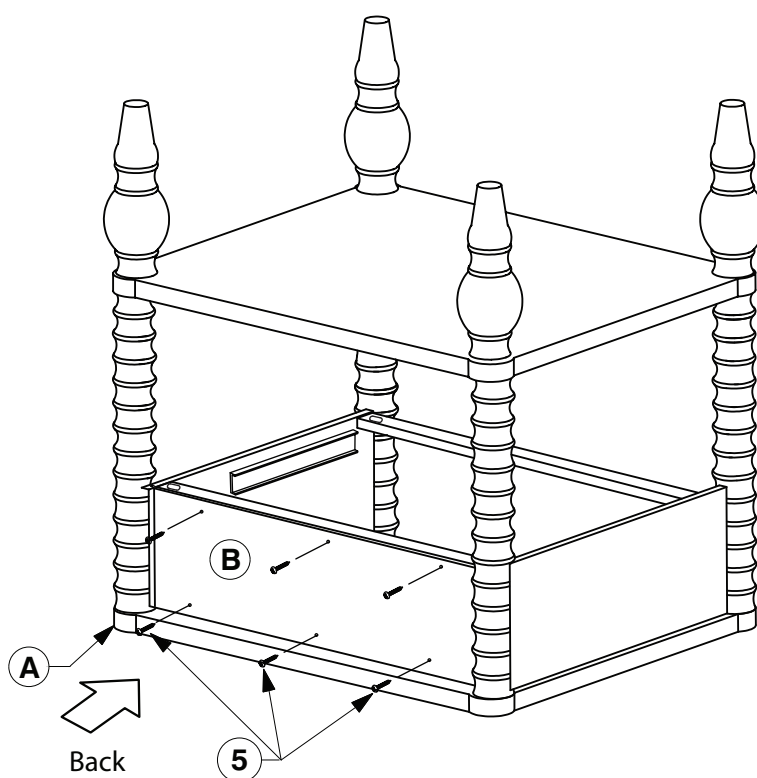


9020 1 Drawer Night Stand

Assembly Instructions


WI-0925

12 Fit the Drawer Face (H) to the Casegood Body.

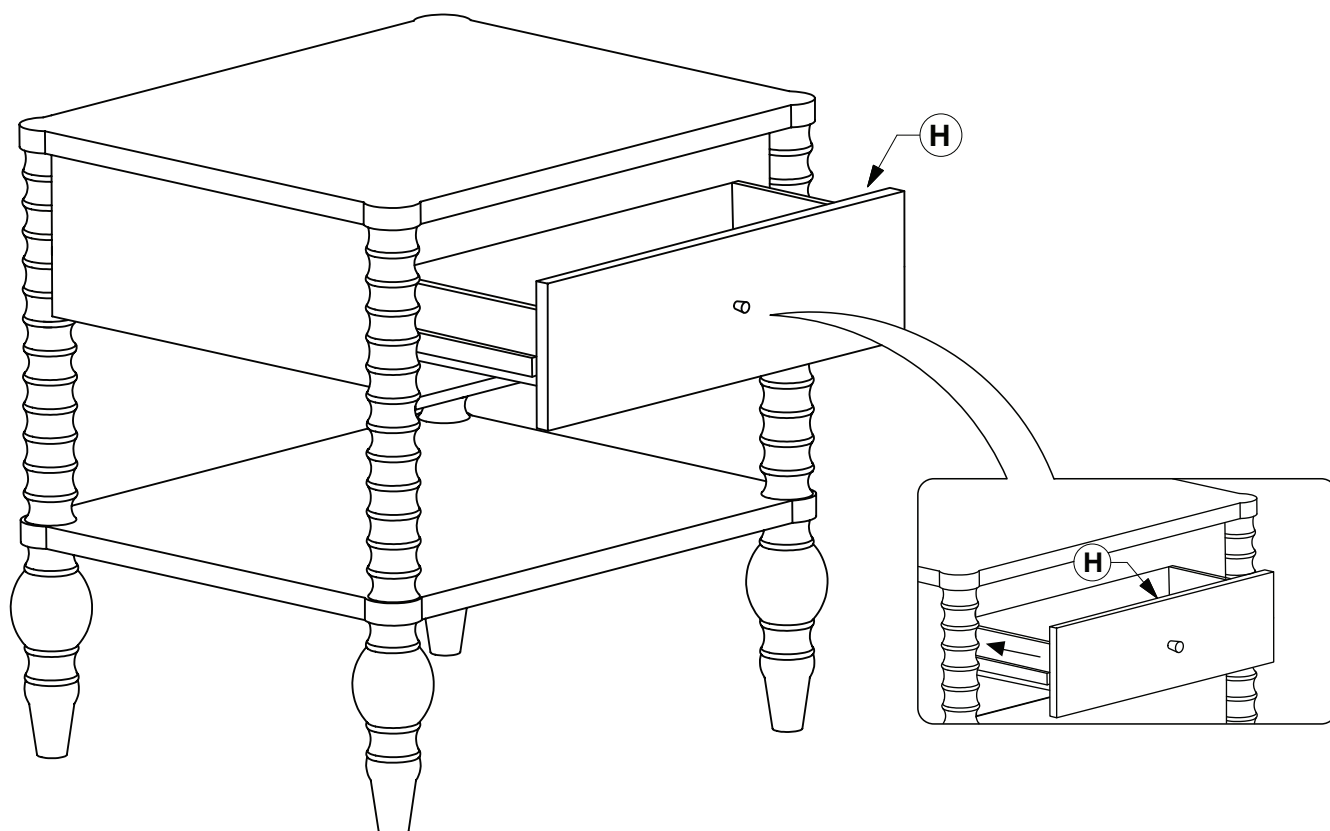

13 Adjust the Drawer Face (H).

* NOTE: Before fitting the Wood Screws .
Losen the JCBs on the Drawer Face if
the face needs alignment .

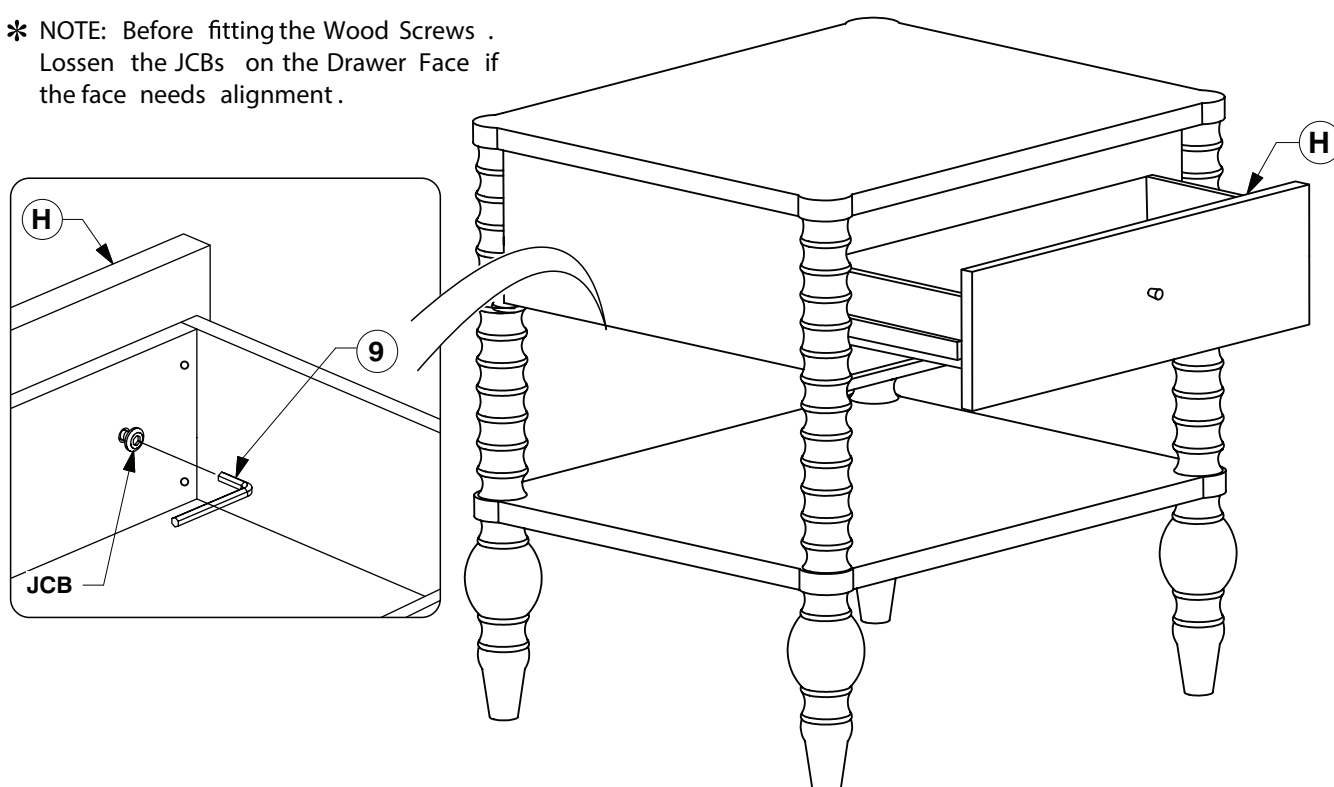

9020 1 Drawer Night Stand

Assembly Instructions

WI-0925

- 14** After the Drawer Faces (H) are aligned, secure with wood screws.

