







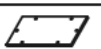





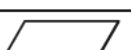


CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
The use of steam or water-based cleaners may cause excessive shrinking or staining.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.

Part List and Hardware List












PIECE	DESCRIPTION	PICTURE	QUANTITY
A	TOP PANEL		1X
B	LEFT PANEL		1X
C	RIGHT PANEL		1X
D	FRAME		2X
E	BOTTOM PANEL		1X
F	SIDE BACK PANEL		2X
G	CENTER BACK PANEL		1X
H	LEG		4X
I	UPPER DRAWER FRONT		1X
J	DRAWER LEFT		3X
K	DRAWER RIGHT		3X
L	DRAWER BACK		3X
M	DRAWER BASE		3X
N	DRAWER SUPPORT		3X
O	LOWER DRAWER FRONT		2X

Product Dimensions: 36"W x 18"D x 36"H



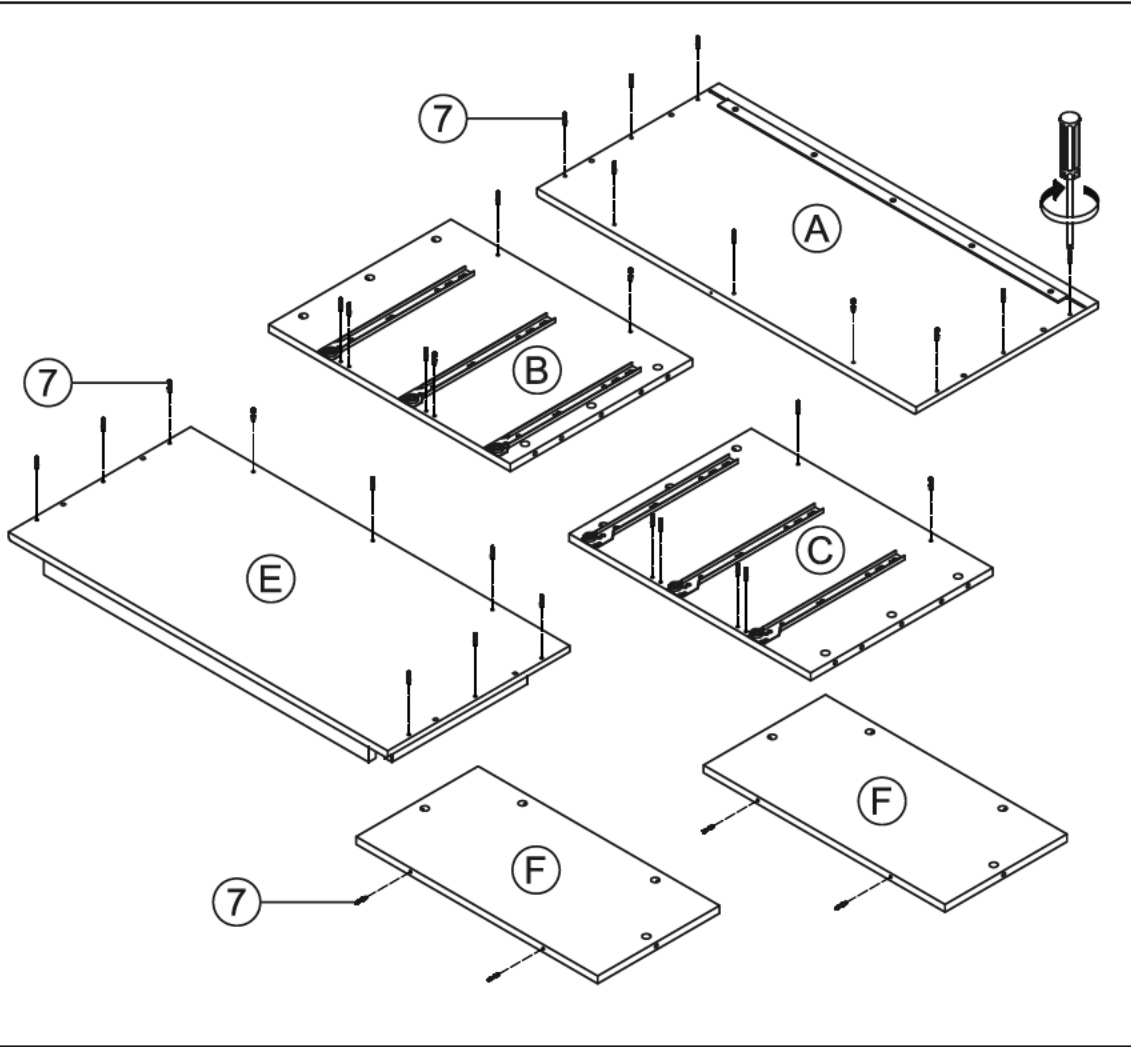
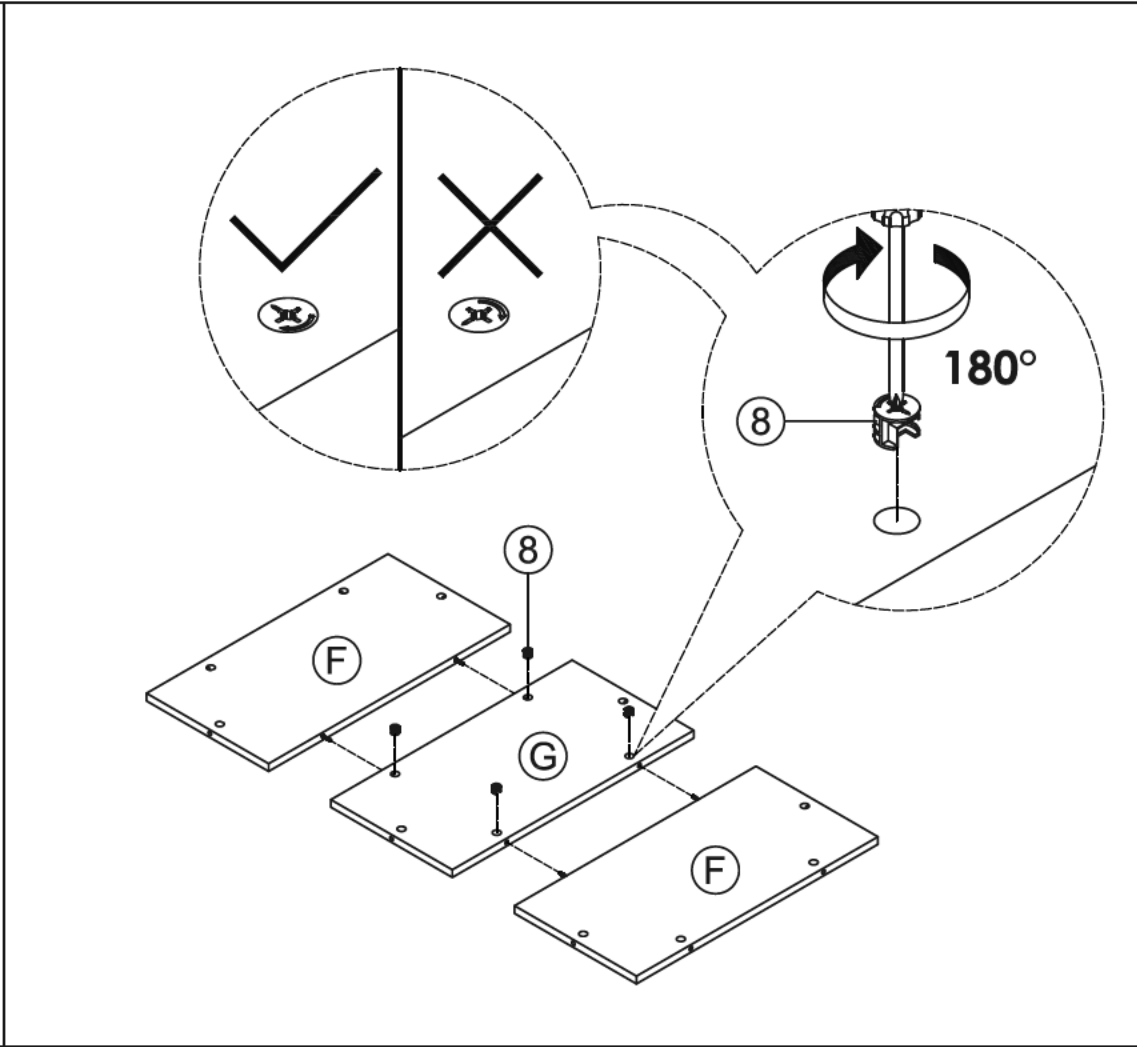
WEIGHT CAPACITY :
TOP : 110 LBS
DRAWER : 30 LBS

**WARNING: DO NOT OVER TORQUE
BOLTS/SCREWS**

PIECE	DESCRIPTION	PICTURE	QUANTITY
1	BOLT	M6x65mm 	8X
2	SPRING WASHER		8X
3	FLAT WASHER		8X
4	1 1/4" FLAT HEAD SCREW	M3x32mm 	33X
5	3/4" FLAT HEAD SCREW	M3x19mm 	18X
6	1/2" FLAT HEAD SCREW	M3x13mm 	12X
7	CAMBOLT		34X
8	CAMLOCK		34X
9	HANDLE		6X
10	WOODEN DOWEL		8X
11	ALLEN KEY		1X

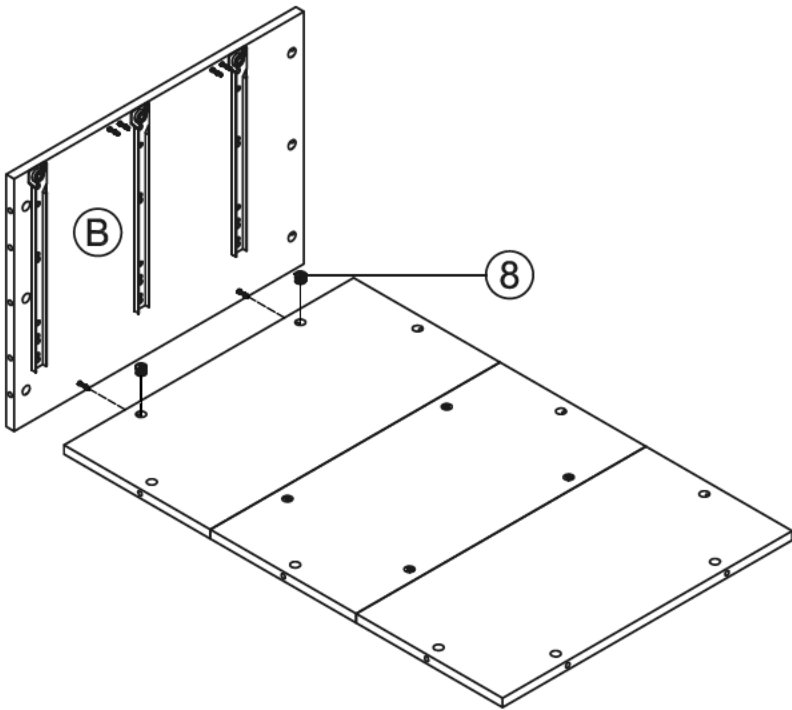
PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver

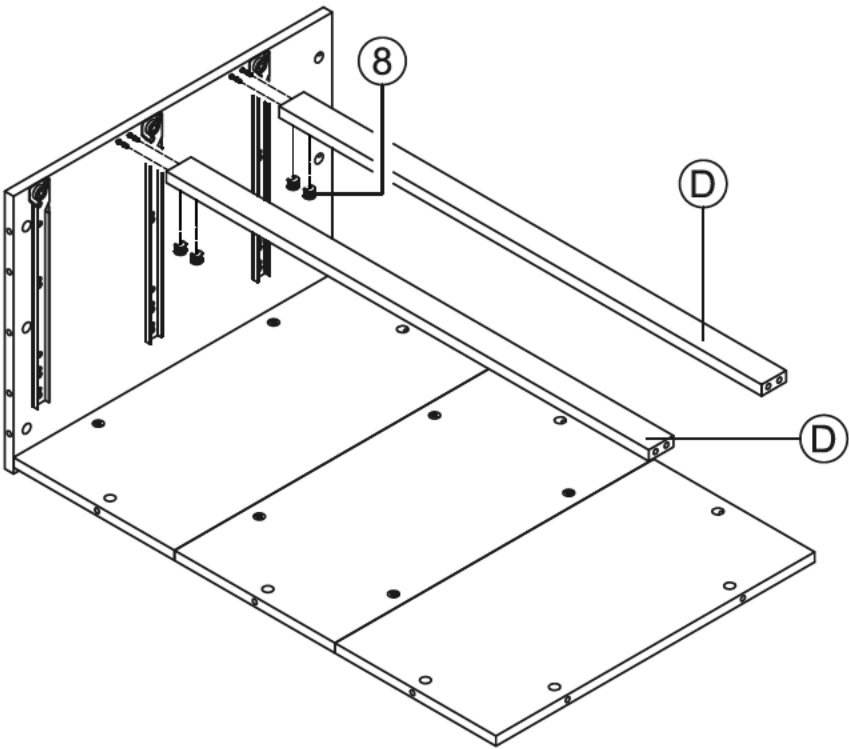
 <p>This diagram illustrates the first step of assembly. It shows five panels: a top panel (A), a left side panel (B), a right side panel (C), a bottom panel (E), and two side back panels (F). Each panel has several pre-drilled holes. Numbered callouts (7) point to these holes on panels A, B, C, E, and F. A Phillips screwdriver is shown inserting a cambolt into one of the holes on panel A.</p>	 <p>This diagram illustrates the second step of assembly. It shows three panels: a center back panel (G) and two side back panels (F). Numbered callouts (8) point to the camlocks on panels F and G. A circular inset shows a close-up of a camlock with a checkmark on the correct side and an 'X' on the incorrect side. Another circular inset shows a camlock being rotated 180 degrees, indicated by a curved arrow and the text '180°'.</p>
<p>STEP 1 ATTACH CAMBOLTS TO TOP PANEL, LEFT AND RIGHT PANELS, BOTTOM PANEL AND SIDE BACK PANELS.</p>	<p>STEP 2 ATTACH SIDE BACK PANELS TO CENTER BACK PANEL USING CAMLOCKS.</p>

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver



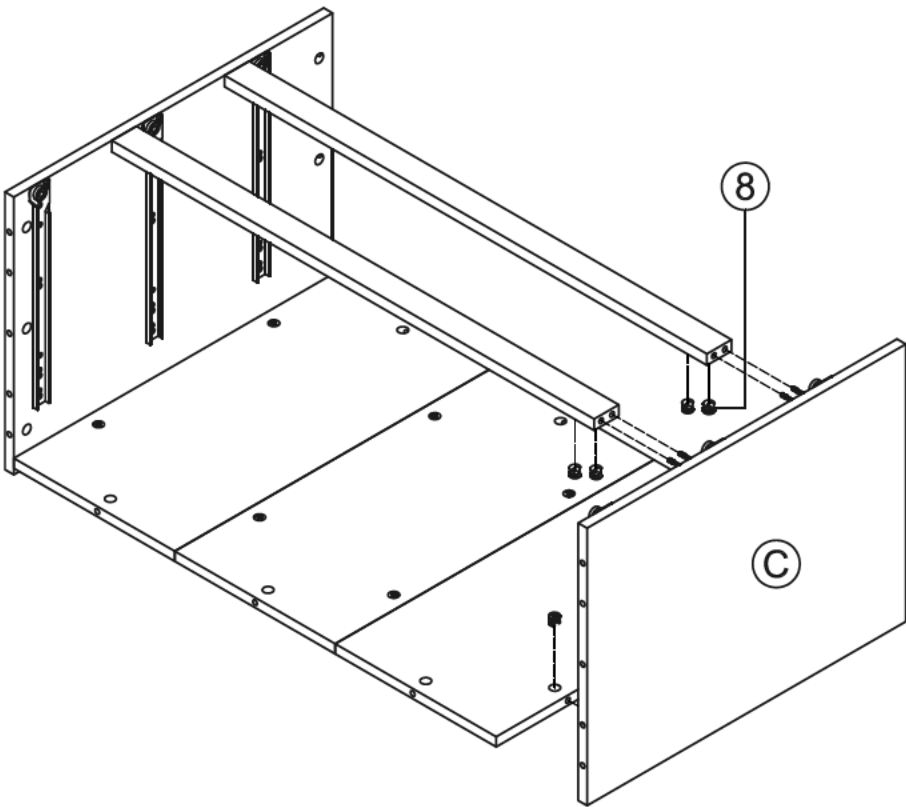
STEP 3 ATTACH LEFT PANEL TO UNIT USING CAMLOCKS.



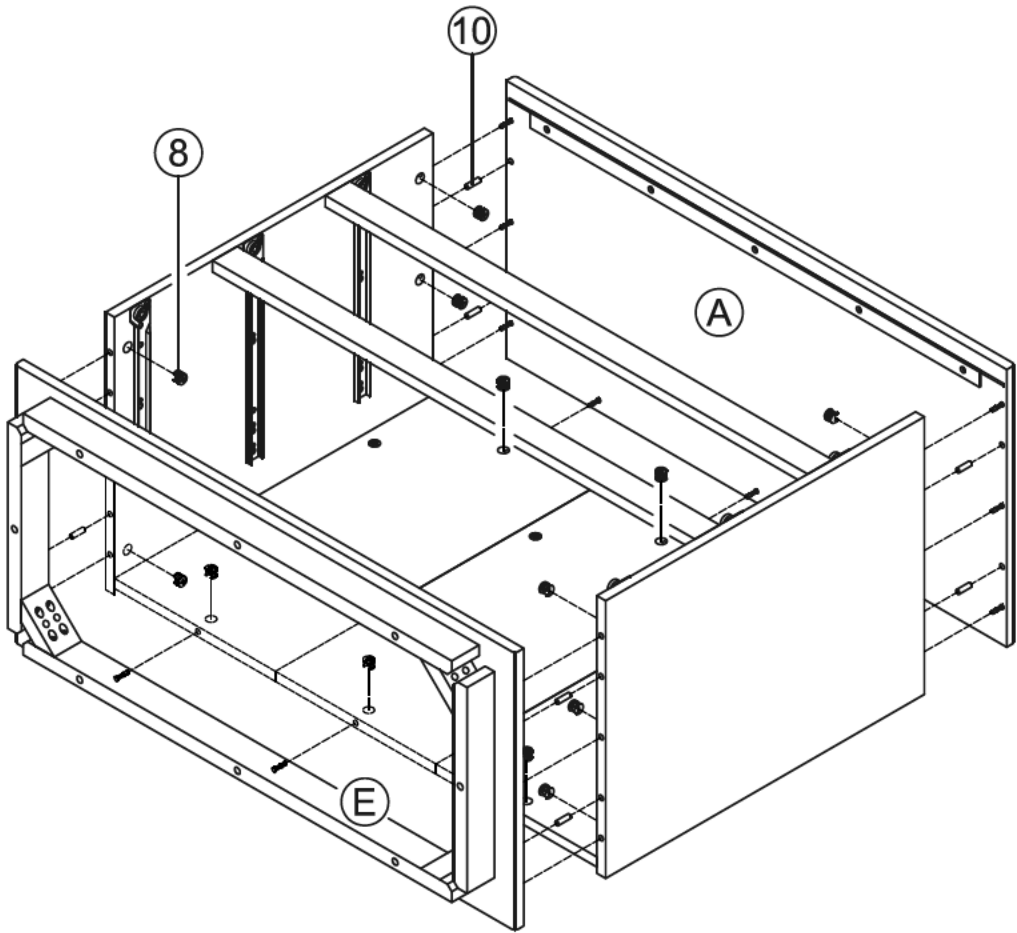
STEP 4 ATTACH FRAMES TO UNIT USING CAMLOCKS.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver



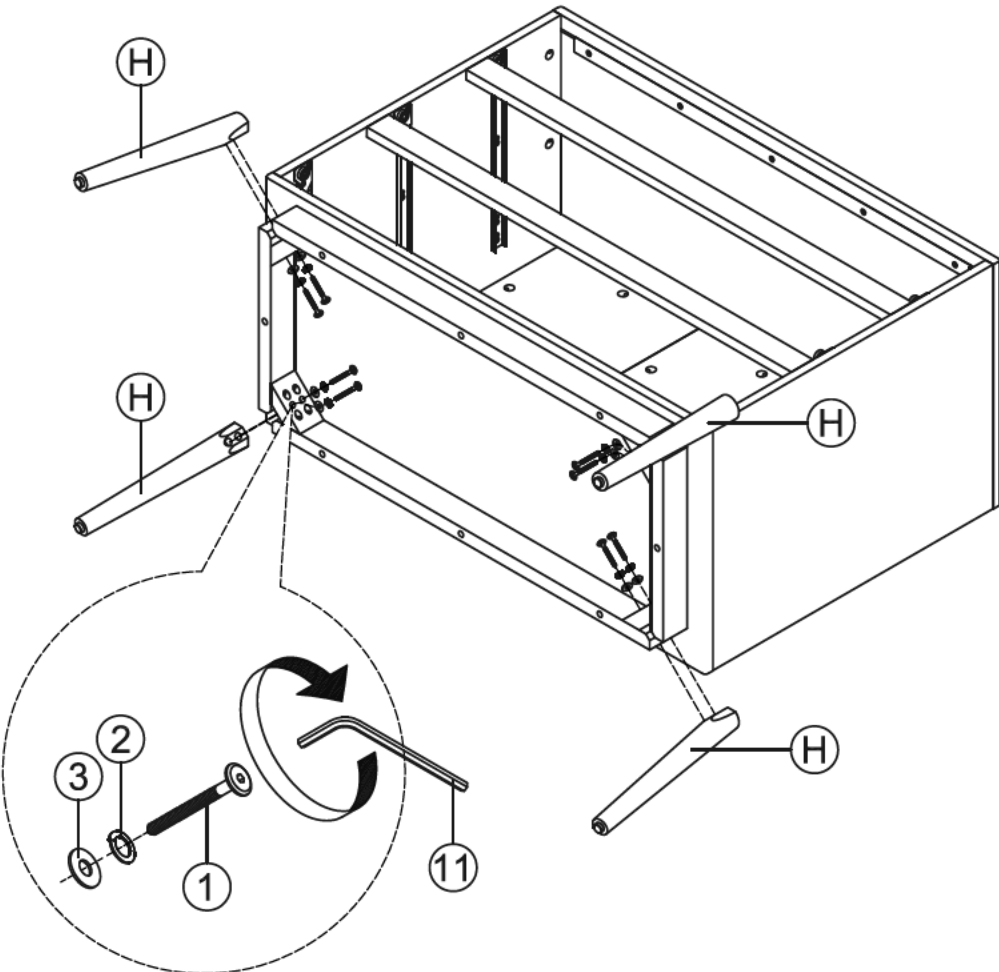
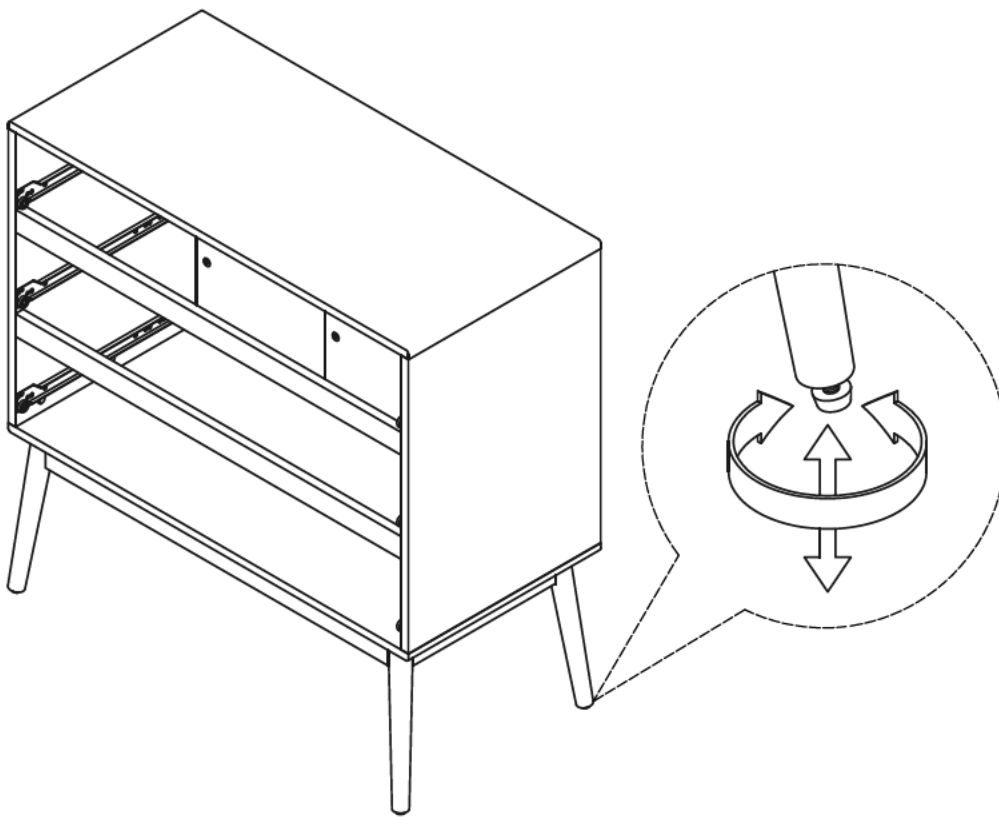
STEP 5 ATTACH RIGHT PANEL TO UNIT USING CAMLOCKS.



STEP 6 ATTACH TOP AND BOTTOM PANELS TO UNIT USING CAMLOCKS AND WOODEN DOWELS.

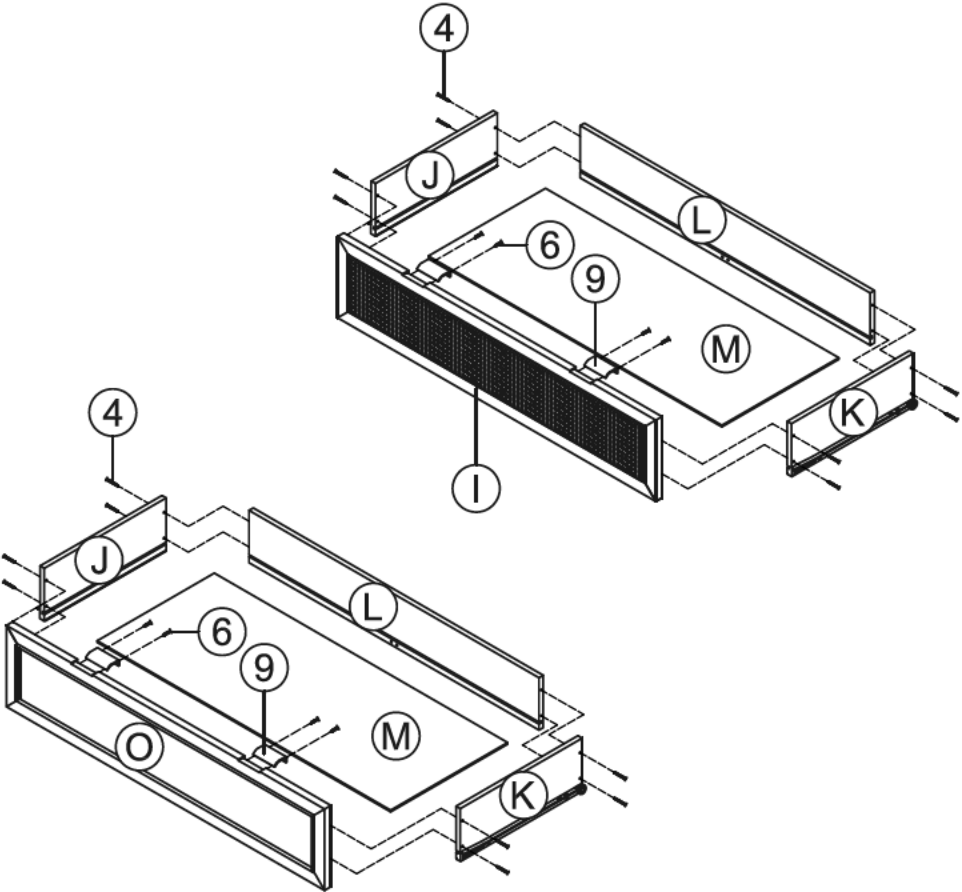
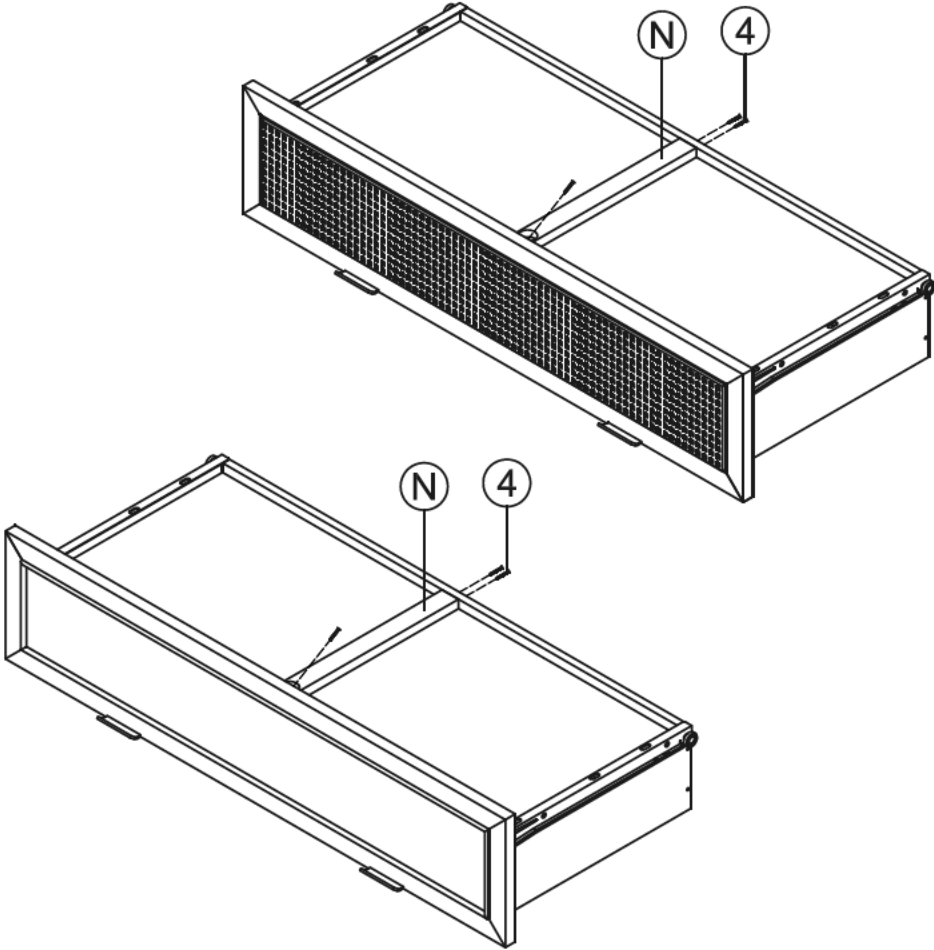
PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver

	
<p>STEP 7 ATTACH LEGS TO UNIT USING BOLTS, SPRING WASHERS AND FLAT WASHERS. TIGHTEN BOLTS USING ALLEN KEY.</p>	<p>STEP 8 ADJUST THE ADJUSTER THAT HAS ALREADY BEEN ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT.</p>

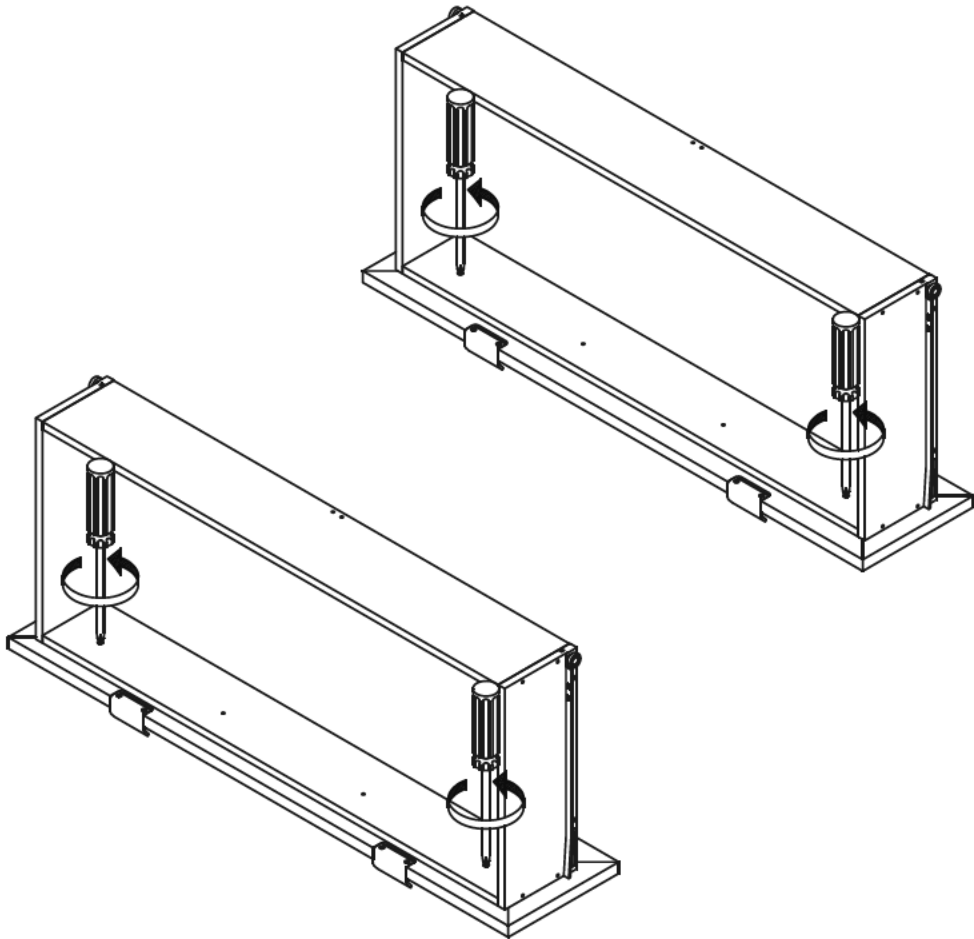
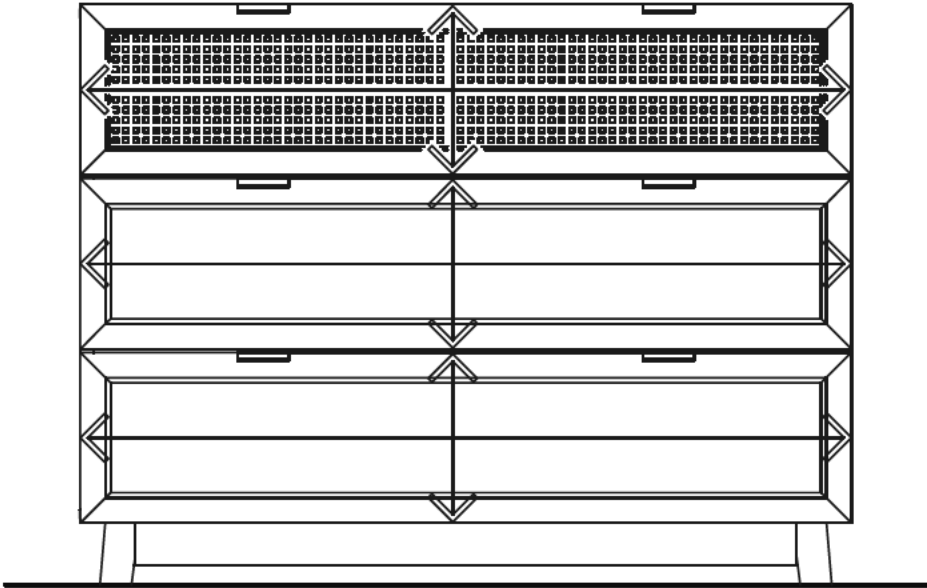
PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver

	
<p>STEP 9 ATTACH HANDLES TO UPPER AND LOWER DRAWER FRONT USING 1/2" FLAT HEAD SCREWS. ATTACH DRAWER LEFT AND RIGHT TO DRAWER BACK USING 1 1/4" FLAT HEAD SCREWS. SLIDE DRAWER BASE INTO THE GROOVE. ATTACH UPPER AND LOWER DRAWER FRONT TO DRAWER LEFT AND RIGHT USING 1 1/4" FLAT HEAD SCREWS.</p>	<p>STEP 10 ATTACH DRAWER SUPPORTS TO THE BOTTOM SIDE OF DRAWERS USING 1 1/4" FLAT HEAD SCREWS.</p>

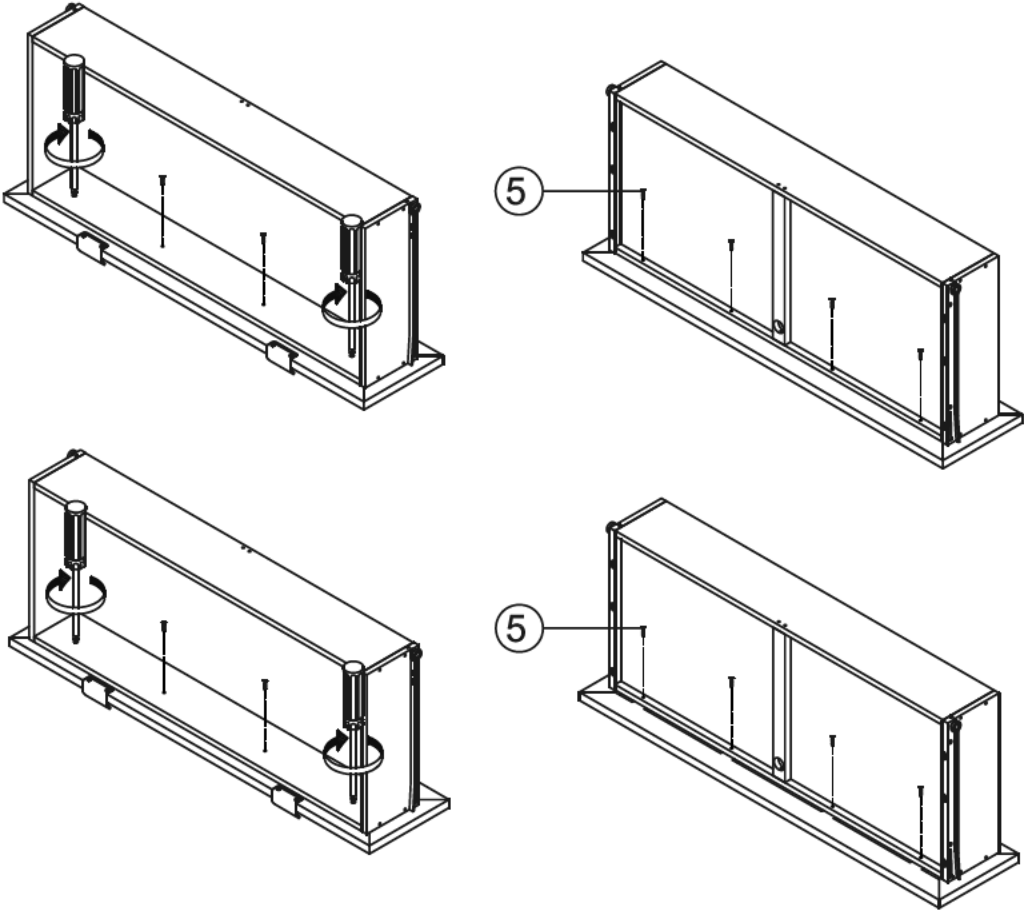
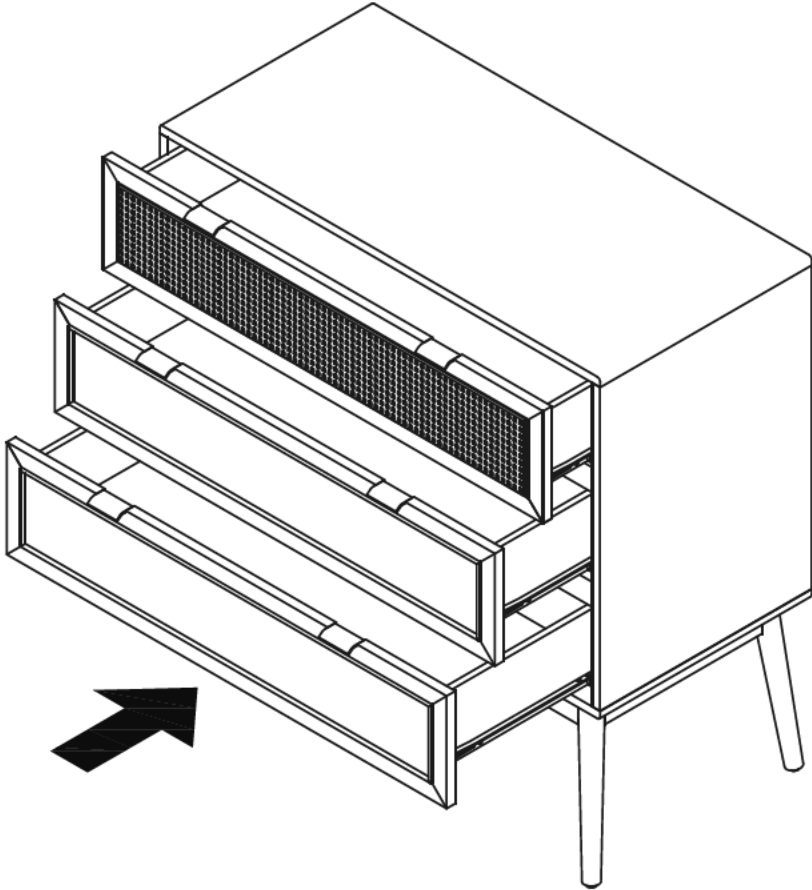
PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver

 The diagram shows two perspective views of the upper and lower drawer fronts. In each view, a Phillips screwdriver is shown with a circular arrow indicating the loosening of a screw. The screws are located on the back of the drawer fronts, where they are attached to the main unit frame.	 The diagram shows a front view of the assembled unit, which is a tall cabinet with four shelves. The top shelf is filled with a grid of small square objects, likely representing a storage bin. Arrows indicate the adjustment of the drawer front panel, showing it being moved left or right and up or down to achieve proportional gaps.
<p>STEP 11 LOOSEN SLIGHTLY THE SCREWS PRE-INSTALLED ON THE BACK OF THE UPPER AND LOWER DRAWER FRONTS.</p>	<p>STEP 12 INSERT THE DRAWER INTO THE UNIT, THEN ADJUST THE DRAWER FRONT PANEL LEFT OR RIGHT AND UP OR DOWN UNTIL THE DRAWER GAPS LOOK PROPORTIONAL.</p>

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver

	
<p>STEP 13 PULL THE DRAWER OPEN SLOWLY AND RE-TIGHTEN THE SCREWS FROM STEP 11. MAKE SURE THE FRONT PANEL DOES NOT MOVE AND LOCK THE DRAWER FRONT PANEL INTO POSITION WITH 3/4" FLAT HEAD SCREWS.</p>	<p>STEP 14 SLIDE THE DRAWERS INTO UNIT.</p>