


# PATH LIGHT Installation Instructions



SUITABLE FOR WET LOCATION

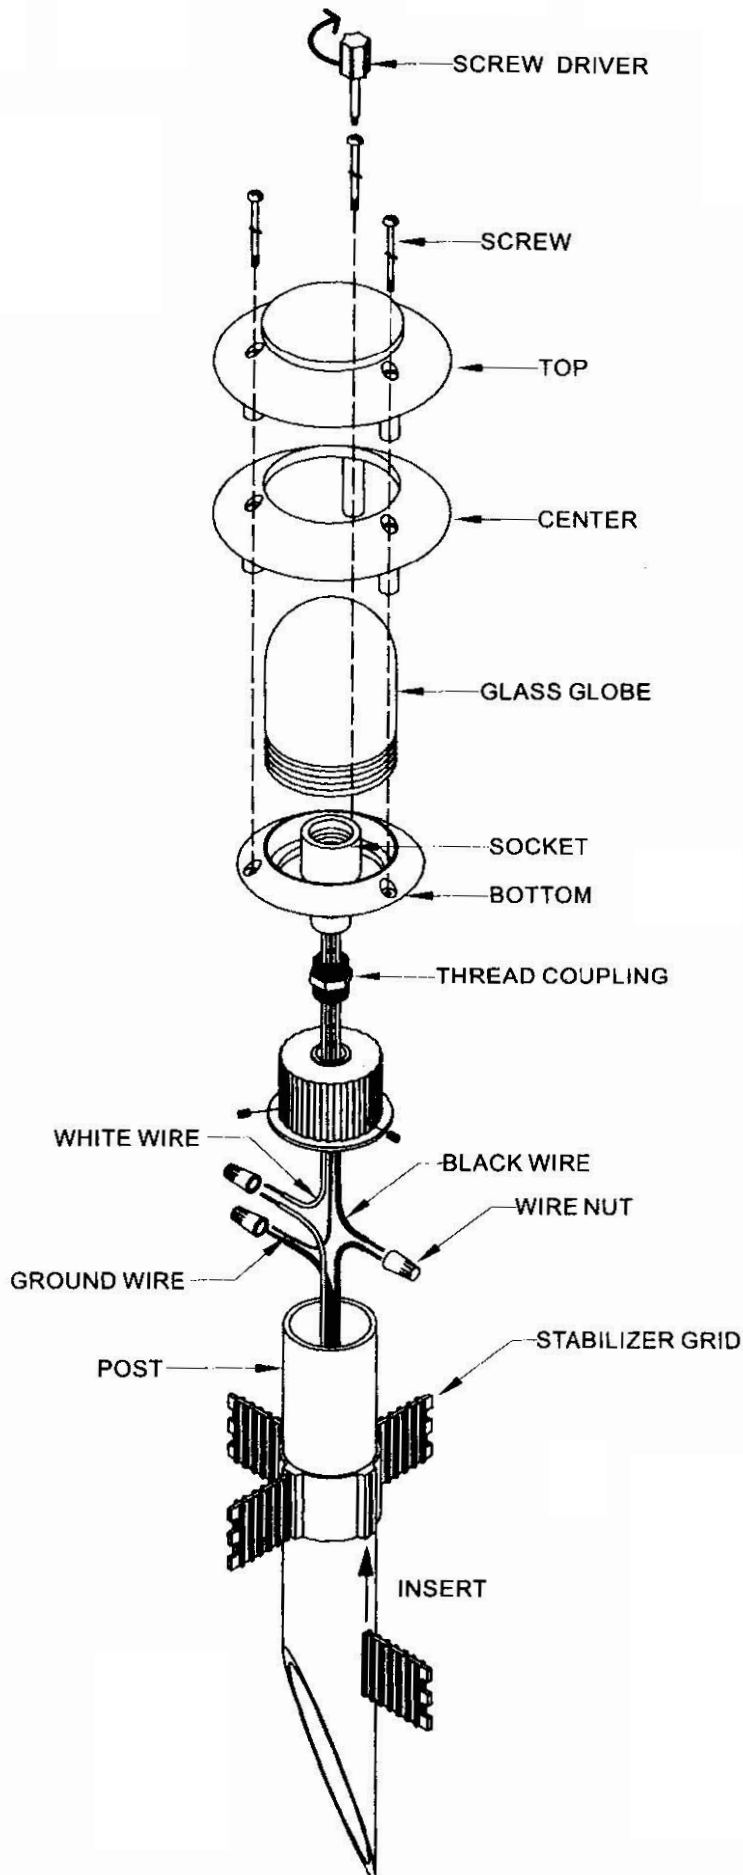

- TURN OFF POWER
- LOOSEN THREE SCREW FROM THE TOP AND GLASS GLOBE
- INSTALL THREADED COUPLING INTO THE BOTTOM AND POSITION THE BOTTOM UNIT ON THE STAKE POST
- CONNECT WIRES USING WIRE NUTS EACH SUPPLY WIRE TO CORRESPONDING SOCKET WIRES
- INSTALL "A TYPE" BULB 75 W (2-LOUVER)  
100 W (3-LOUVER)
- TURN ON POWER

