

Thank you for purchasing your new Item. We are sure you are going to be pleased with it.



### **DO NOT RETURN TO THE STORE !**








If parts are missing or damaged, we will gladly ship your replacements parts free of charge.

### **Read Before Beginning Assembly**


- If you need any assistance with your new item or if you are missing any parts please call our office or you can email us your inquiries . We will be happy to assist and walk you through your assembly process.
- Work in a spacious area, preferably on carpet near where the item will be used.
- Although most items are easy to assemble, we recommend an extra pair of hands to make it easier on you.
- Check your item list to make sure all your parts and hardware are included before you begin the assembly process.
- It is important to follow each step as instructed to avoid any unwanted obstacles.

# ASSEMBLY INSTRUCTIONS

Thank you for purchasing this quality products. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

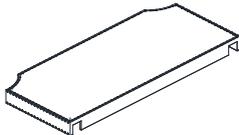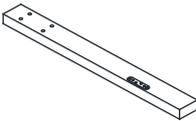
PARTS LIST			
No	Shape	Specification	Quantity
1		Headboard	1 PC
2		Headboard Leg-Left	1 PC
3		Headboard Leg-Right	1 PC
4		Side rail Support	2 PCS
5		Side rail - Left	2 PCS
6		Side rail - Right	2 PCS
7		Footboard	1 PC
8		Support rail	1 PC
9		Support leg	4 PCS
10		Footboard leg	2 PCS
11		Slats	2 PCS

HARDWARE LIST			
No	Shape	Specification	Quantity
A		Bolt $\Phi 5/16"$ x 13mm	8 PCS
B		Bolt $\Phi 5/16"$ x 65mm	12 PCS
C		Bolt $\Phi 1/4"$ x 40mm	8 PCS
D		Bolt $\Phi 1/4"$ x 30mm	4 PCS
E		Flat washer $\Phi 5/16"$	20 PCS
F		Lock washer $\Phi 5/16"$	20 PCS
G		Flat washer $\Phi 1/4"$	12 PCS
H		Lock washer $\Phi 1/4"$	12 PCS
I		Wood screw $\Phi 4$ x 20mm	24 PCS
J		Allen wrench	1 PC

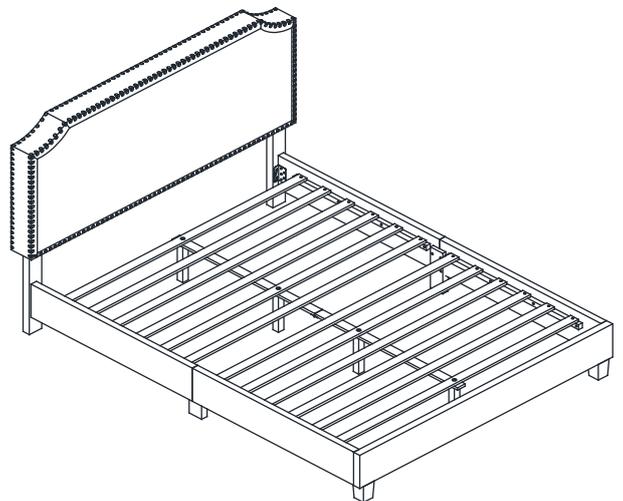

STEP 1:


Unzip the black non-woven fabric on the back of headboard and take out all the parts.

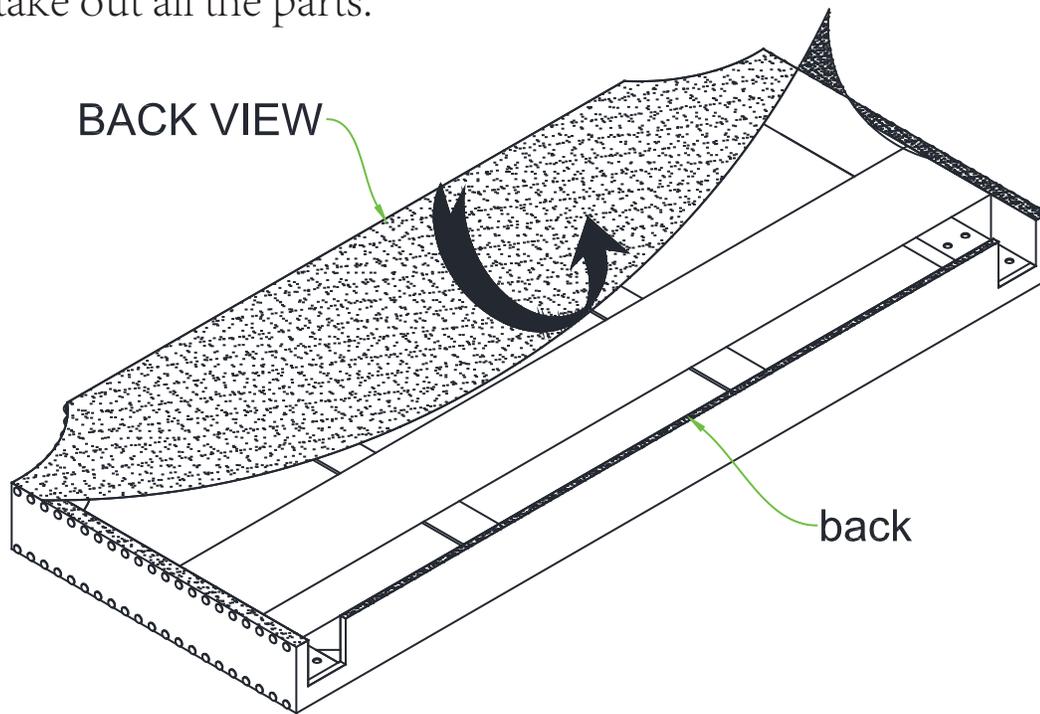

ATTENTION: Zip black non-woven fabric after taking out all the parts.


STEP 2:

Attach the headboard legs to headboard in the right height position to match your mattress thickness.

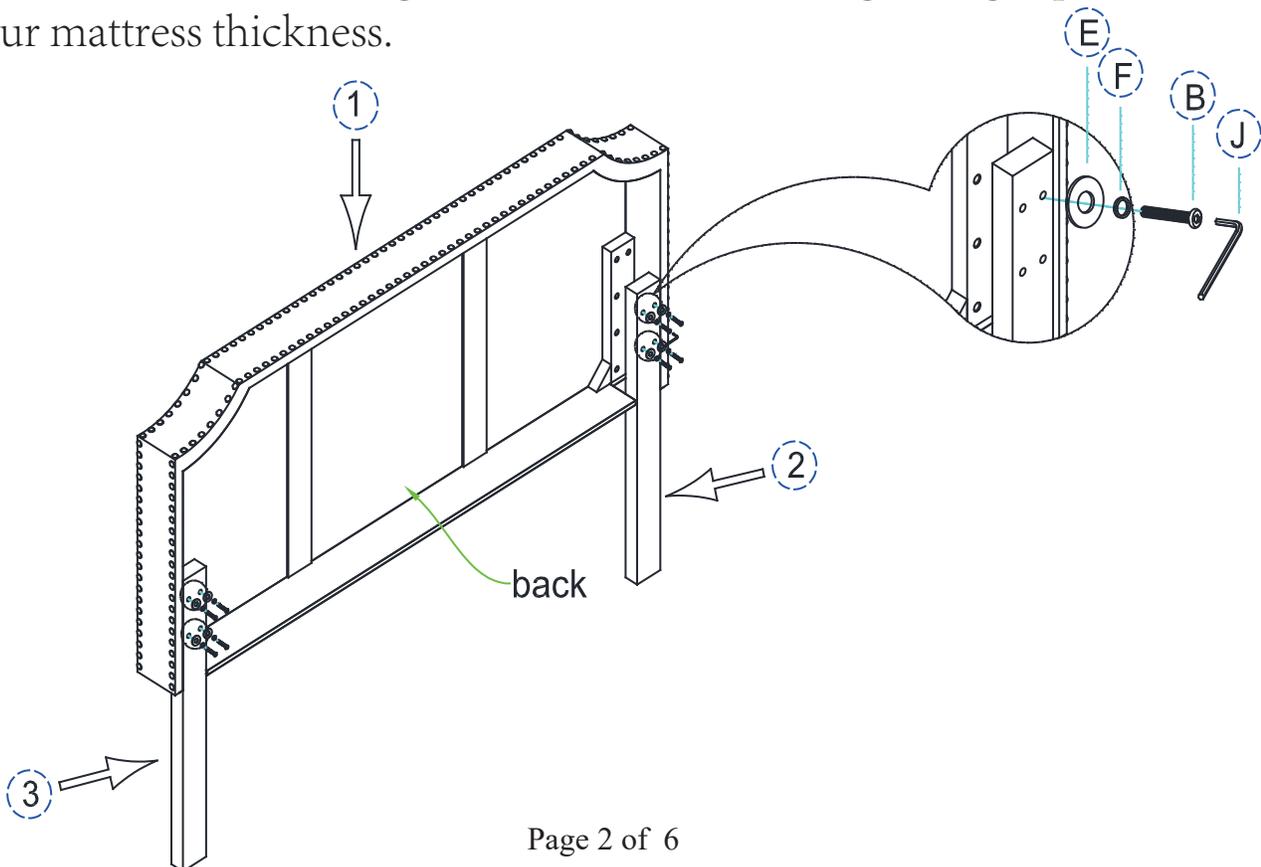

STEP 3:

Bolt the footboard legs to footboard.

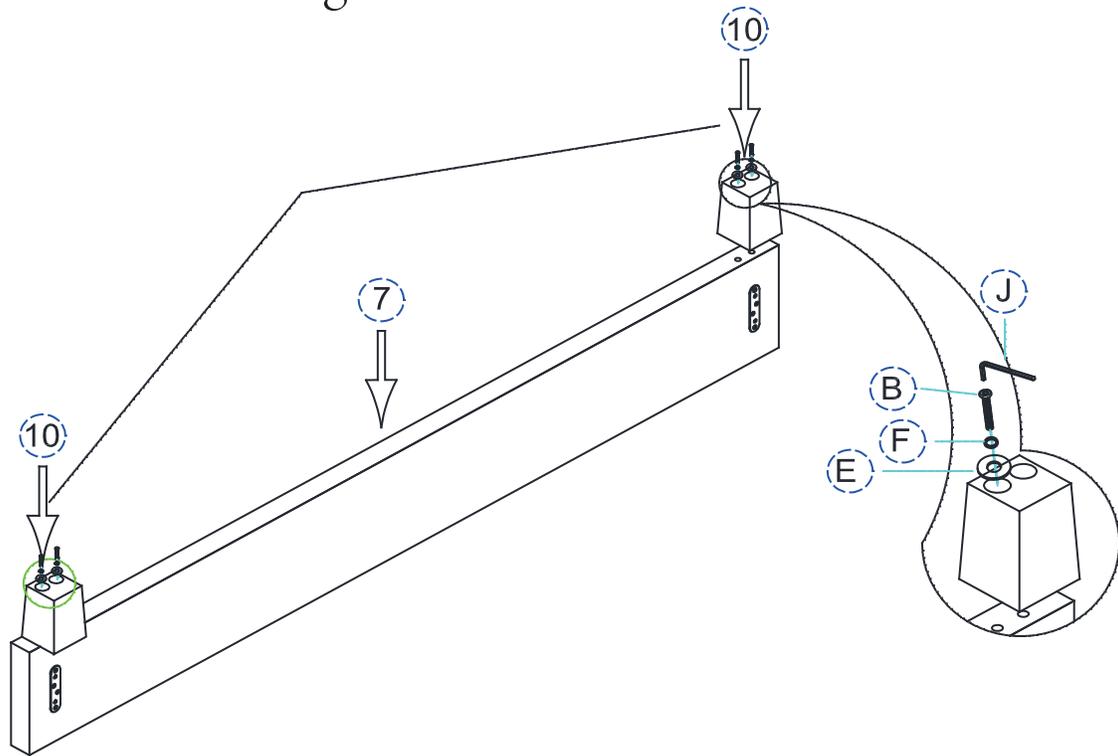


STEP 4:

A. Attach the siderail support wood to siderails. The U-shape cut should be toward the top of siderail.

5 is the siderail hook on the left.


6 is the siderail hook on the right.

B. Attach the support legs to the middle of siderail.

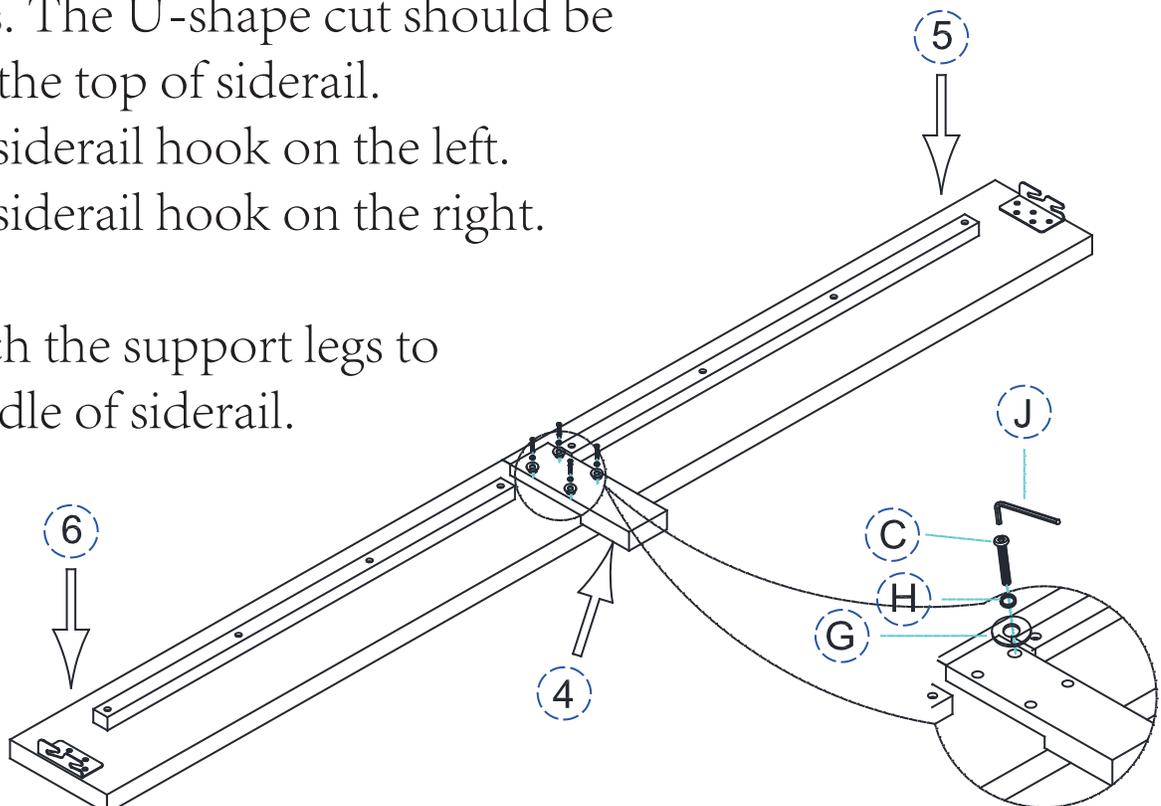


STEP 5:

Attach short bolt (A) to the headboard bracket and footboard bracket.

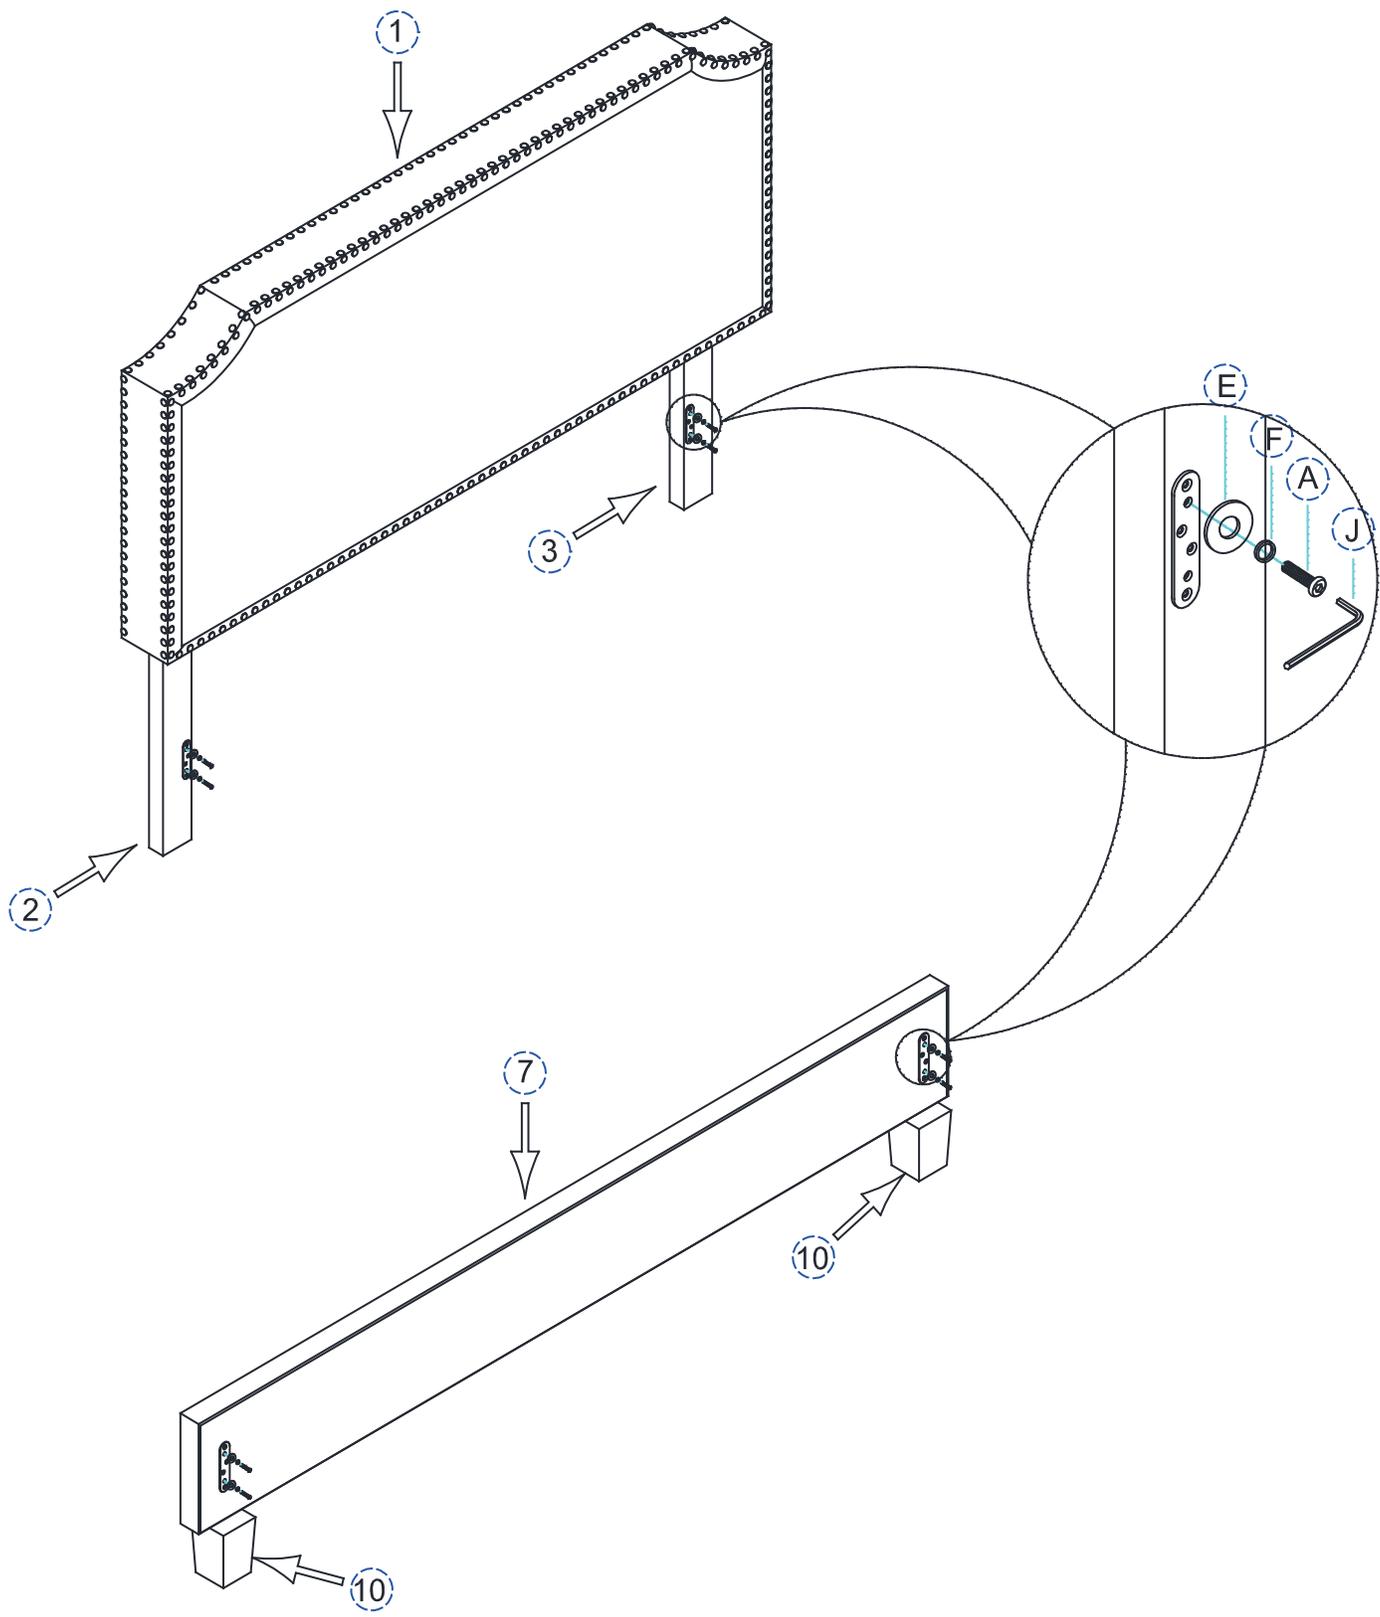


STEP 6:

Hook the siderail(5,6) to headboard leg(2,3) & footboard (7) by pushing hook down to the bolt.

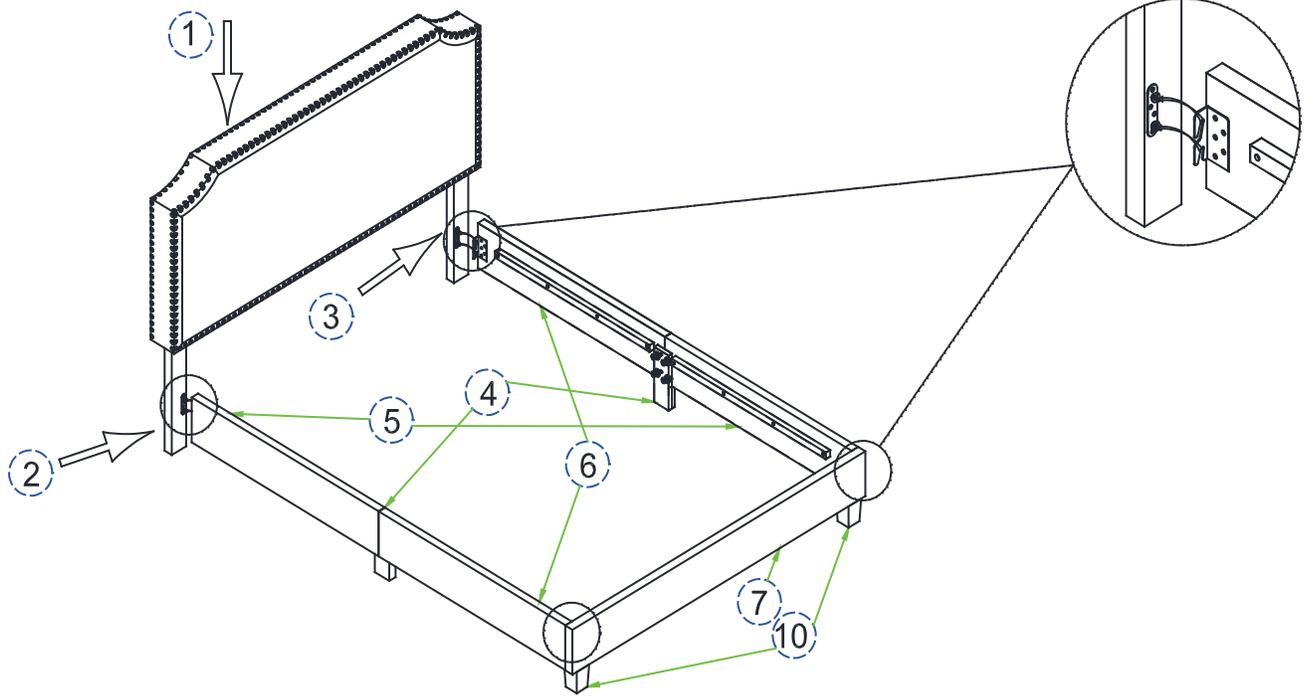


STEP 7:

Tighten the bolts.

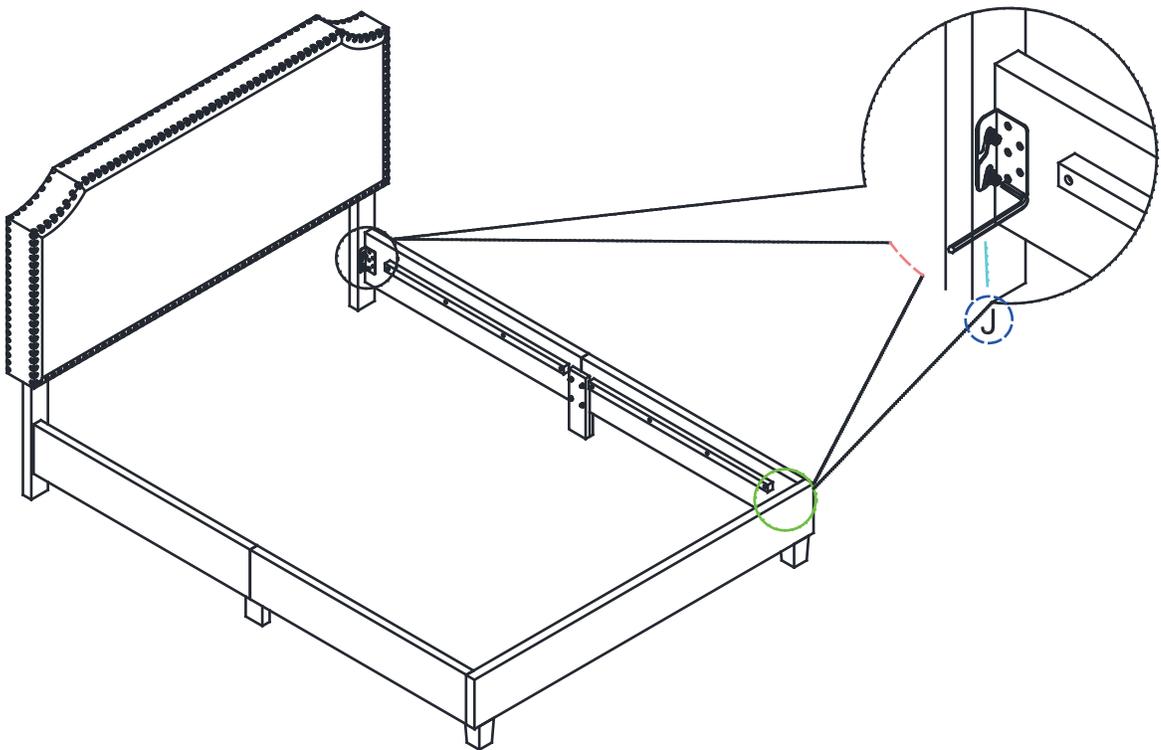

STEP 8:

Attach the support legs (9) to the slats (11) & support rail (8)

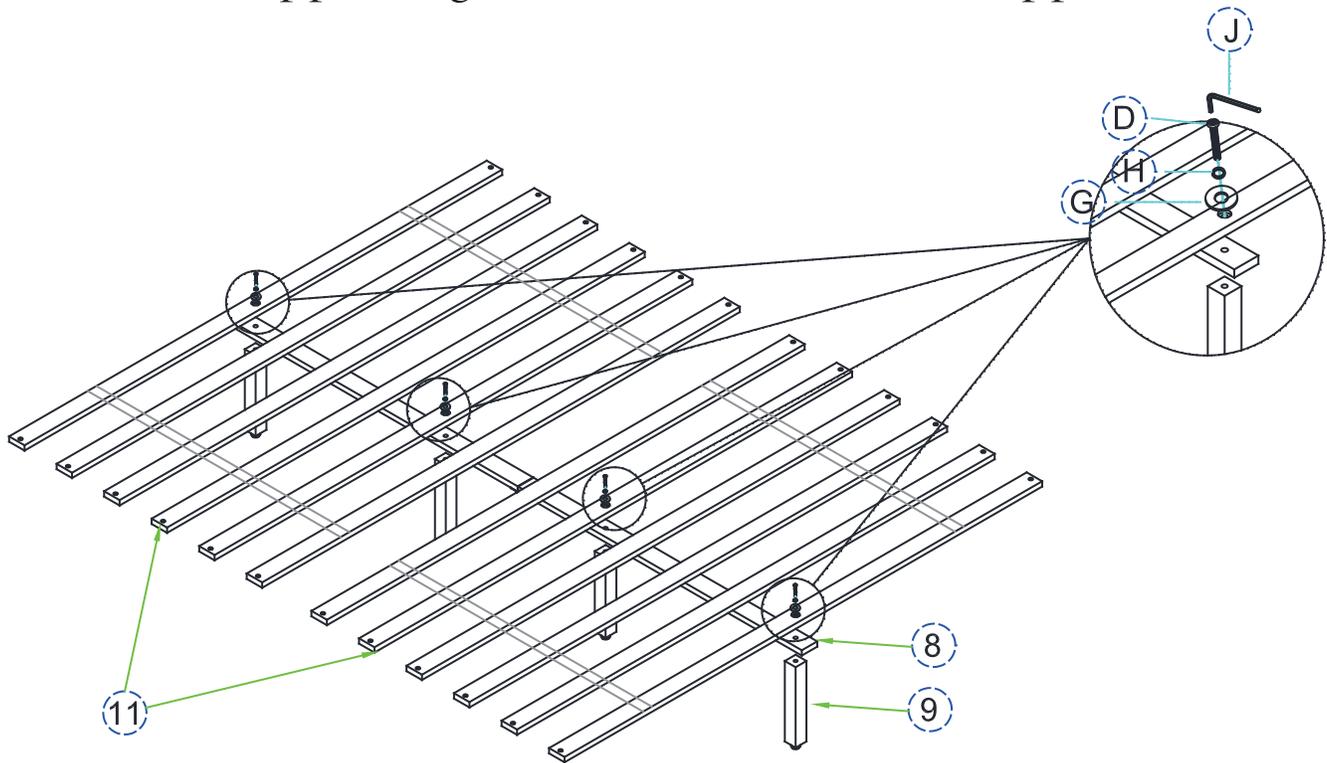

STEP 9:

Install the slats(11) to siderail by screw the slats ends to the siderail support wood, the slats position should be sitting inside of the U-shape cut of support wood.

