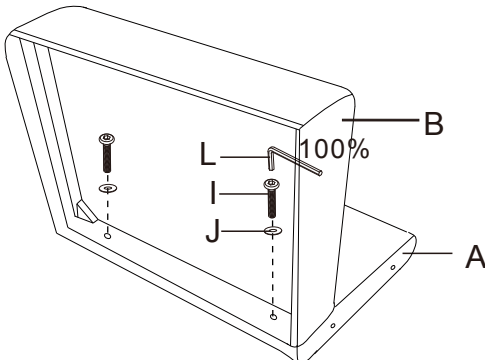
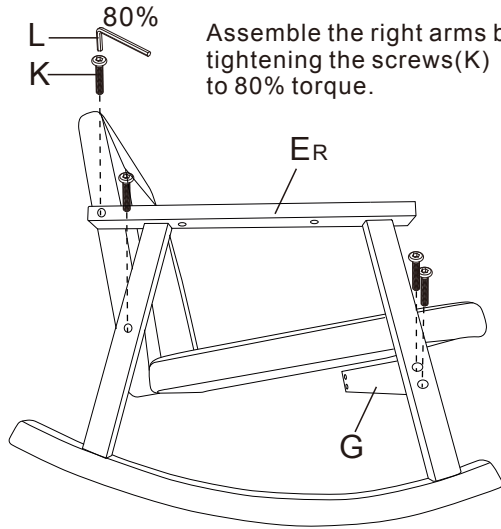
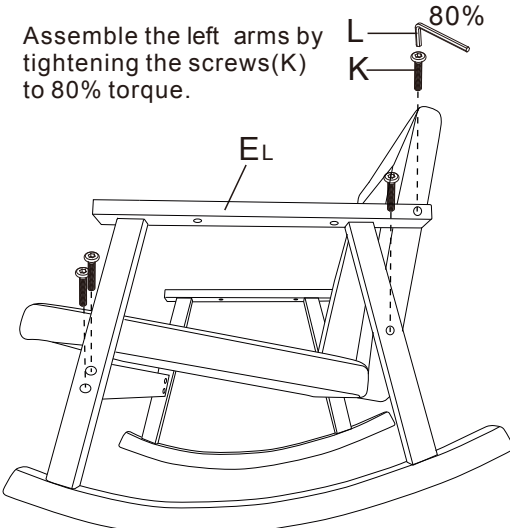
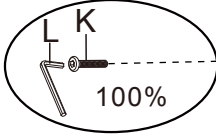
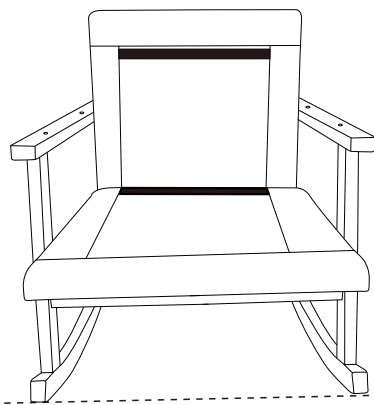
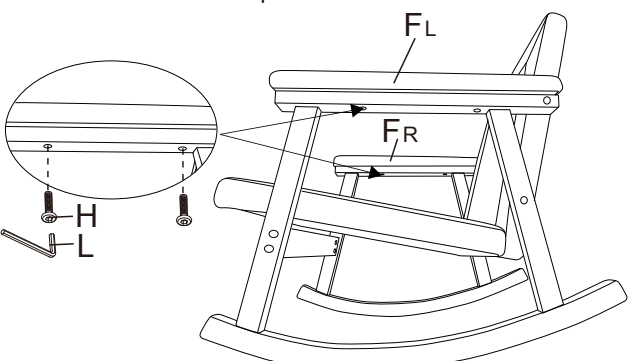


ASSEMBLY INSTRUCTIONS

Ax1  Back	Bx1  Seat	Cx1  Pillow	Dx1  Seat cushion	Ex1(R&L)  Armrests	Fx1(R&L)  Armrest upholstery panel
Gx1  Front crossbar	Hx4  M6*35mm Screws	Ix2  M8*50mm Screws	Jx2  Washers	Kx8  M8*60mm Screws	Lx1  Allen key
1 Connect the back(A) with the seat(B) by tightening the screws(I) to 100% torque. 			2 Assemble the right arms by tightening the screws(K) to 80% torque. 		
3 Assemble the left arms by tightening the screws(K) to 80% torque. 			4 Tightening the screws(K) to 100% torque.  		
5 Assemble the armrest upholstery panel(F) to the armrests by tightening the screws(H) to 100% torque. 			6 Put the seat cushion(D) and pillow(C) on the chair. 