



ASSEMBLY INSTRUCTIONS

Parts:

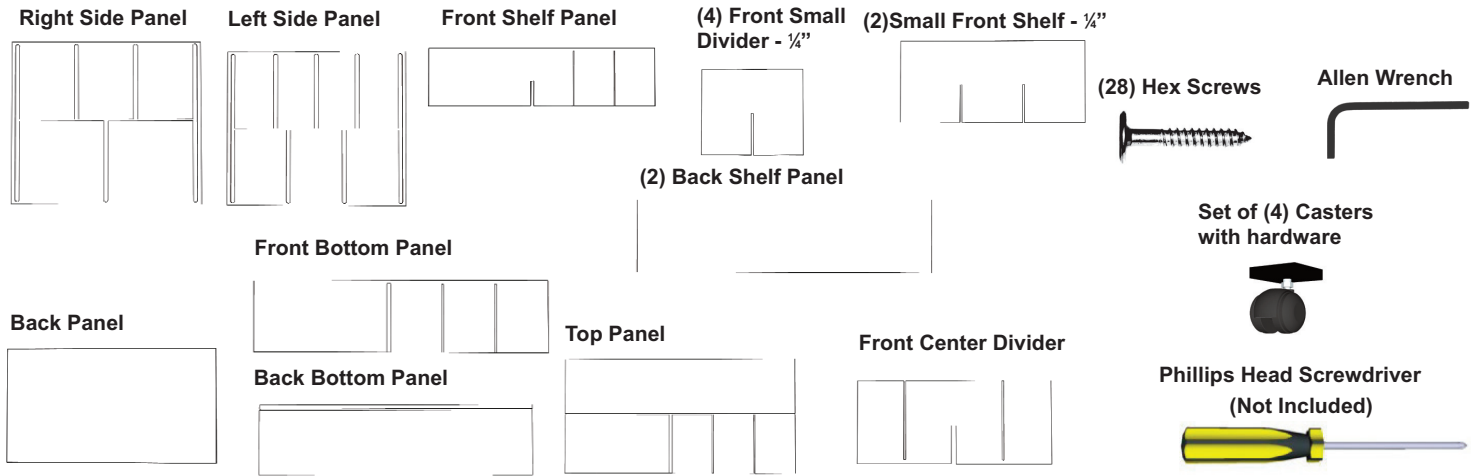

Notice - KEEP BACK GROOVES ALIGNED - Do Not Drill!

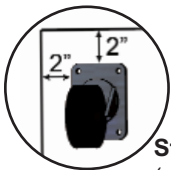

Step 1: Using phillips head screwdriver (not included) and hardware provided, attach casters to **Bottom Panels** as shown.

Step 3: Insert **Front Shelf Panel** into mortise of **Left Side Panel**. Make sure to align back grooves. Insert hex screws into pre-drilled holes in **Left Side Panel**. Tighten down halfway.


Step 2: Insert **Top Panel** into mortise of **Left Side Panel**. Make sure to align back grooves. Insert hex screws into pre-drilled holes in **Left Side Panel**. Tighten down halfway.

Step 4: Insert **Front Center Divider** into mortise of **Top Panel**. Make sure to align notches of **Front Center Divider** with **Center Shelf**. Insert hex screws into pre-drilled holes in **Top Panel**. Tighten down halfway.


Step 5: Insert **Front Bottom Panel** into mortise of **Left Side Panel**. Make sure to align back grooves. Insert hex screws into pre-drilled holes in **Left Side Panel**. Tighten down halfway.

Step 6: Insert **Small Front Shelf** into mortises of **Left Side Panel** and **Front Center Divider**.


ASSEMBLY INSTRUCTIONS

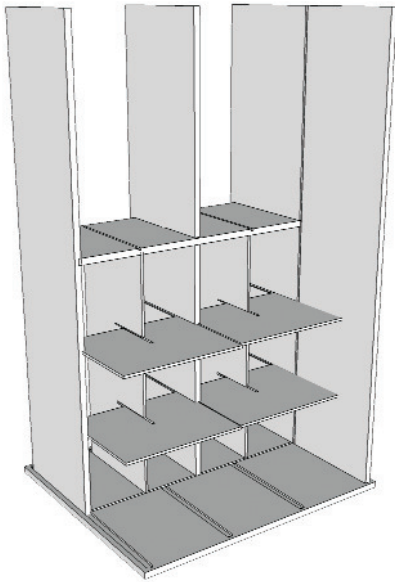


Step 7: Insert **Front Small Divider** $\frac{1}{4}$ " into mortises of **Top Panel** and **Front Shelf Panel** or **Front Bottom Panel** and **Front Shelf Panel** aligning notches in the **Front Center Divider**. Repeat for remaining **Small Divider** $\frac{1}{4}$ ".

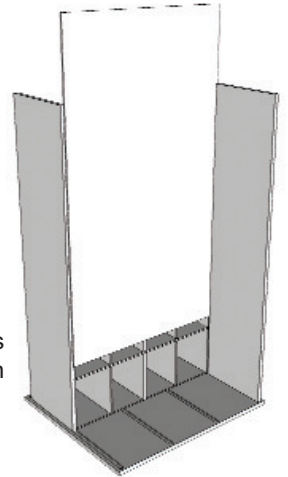


Step 8: Insert sides of **Back Panel** into back grooves of **Top Panel**. Slide down until edge rests firmly in back groove of **Left Side Panel**.

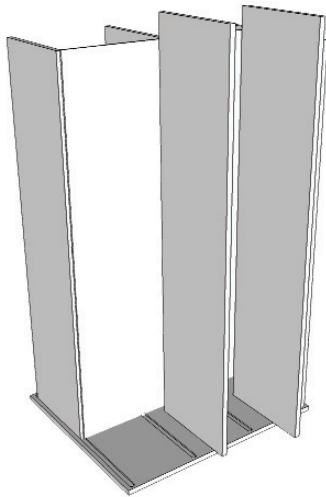


Step 8: Insert **Back Shelf Panel** into the mortises of the **Left Side Panel**. Insert hex screws into pre-drilled holes in **Left Side Panel**. Tighten down halfway.

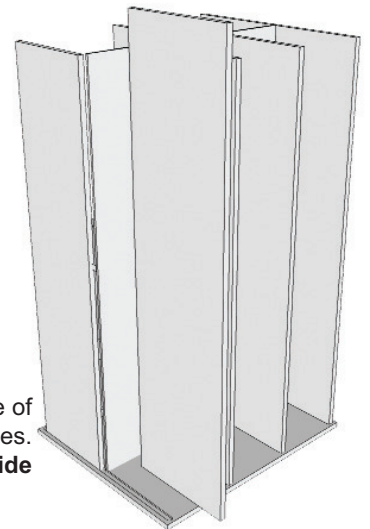

Step 9: Insert **Back Bottom Panel** into mortise of **Left Side Panel**. Make sure to align back grooves. Insert hex screws into pre-drilled holes in **Left Side Panel**. Tighten down halfway.

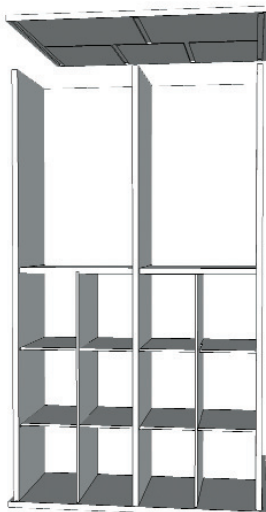

Step 11: Install **Right Side Panel** so that edge of assembled pieces fit firmly into mortises and back grooves. Insert hex screws into pre-drilled holes in **Right Side Panel**. Tighten down halfway.

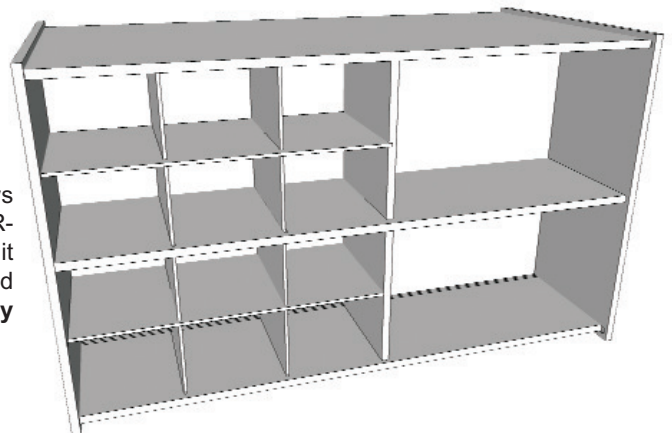

Step 12: Tighten all screws snugly. **DO NOT OVER-TIGHTEN**. Rotate unit so that it rests on **Bottom Panel** and edges of **Side Panels**. **Assembly is now complete.**