


TV STAND

Assembly Instructions - Please keep for future reference

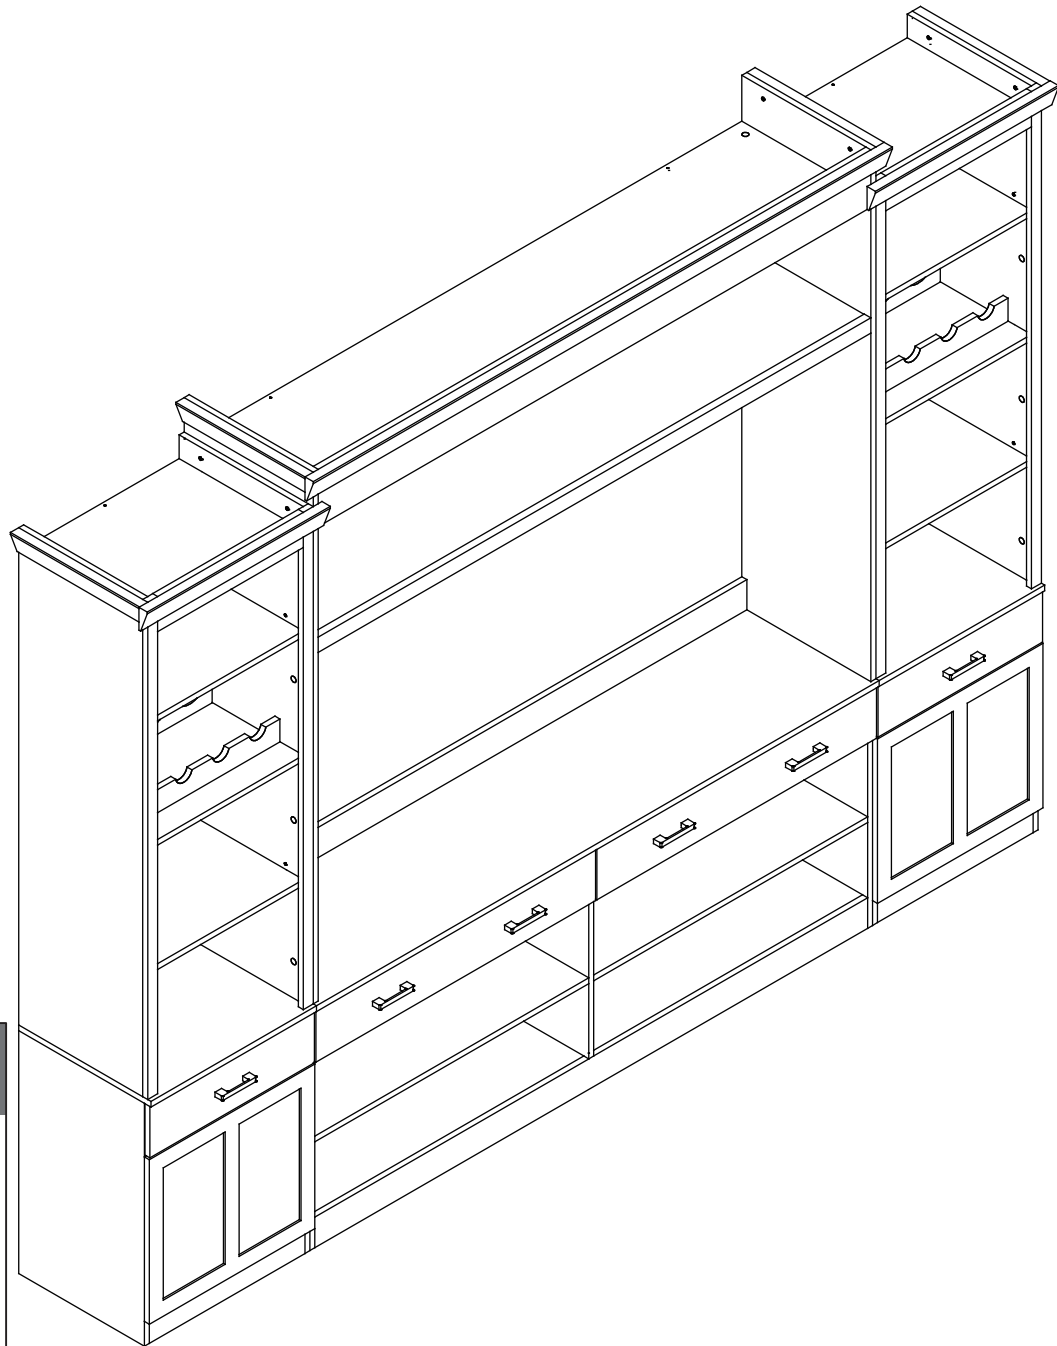

Dimensions

Width- 106.3inch

Depth-15.75inch

Height-80.51inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions












To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required

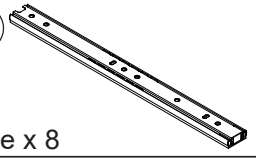 (A) Cam Bolt x 135+2	 (B) 6*30mm Dowel x 134+2	 (C) Cam lock x 135+2	 (D) 4*30mm Screw x 35+2
 (E) Rebound device x 2set	 (F) 4*40mm Screw x 12+1	 (G) 4*20mm Screw x 24+2	 (H) 6*20mm Dowel x 15+1
 (I) 2.6*10mm Screw x 22+2	 (J) 3*12mm Screw x 32+2	 (K) Slide x 8	 (L) Shelf support pin x 16+1
 (M) 3.5*14mm Hinge x 4set	 (N) Allen key x 1	 (O) Bracket x 5	 (P) 6*30mm Screw x 4
 (Q) 4*18mm Handle x 6set	 (R) Anti-tipping Device x4	 (S) Perfect fit x50	

Tools required Not Included



Phillips screwdriver
(medium & large)

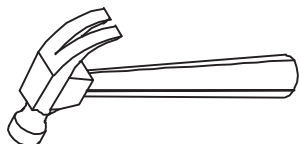


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

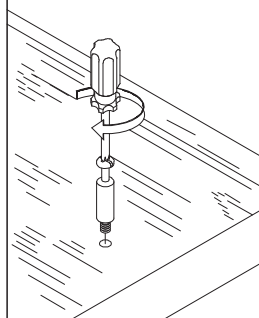

Step 2

Push the male camlock into the entry hole.

2

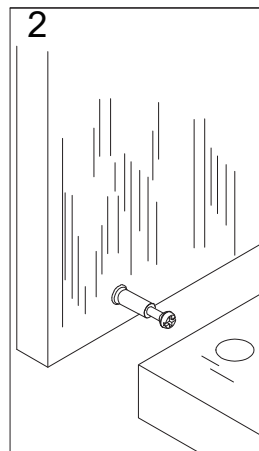


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

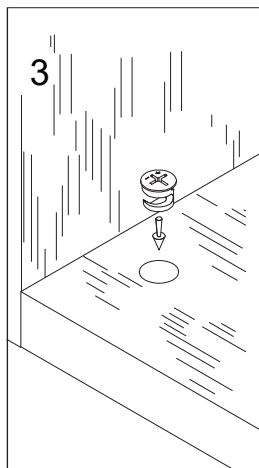


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

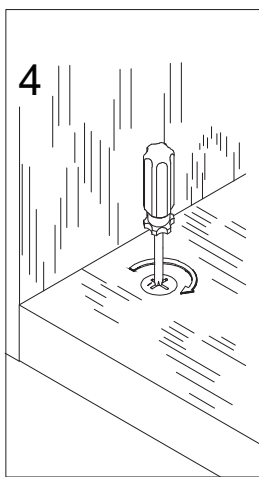















Assembly Instructions

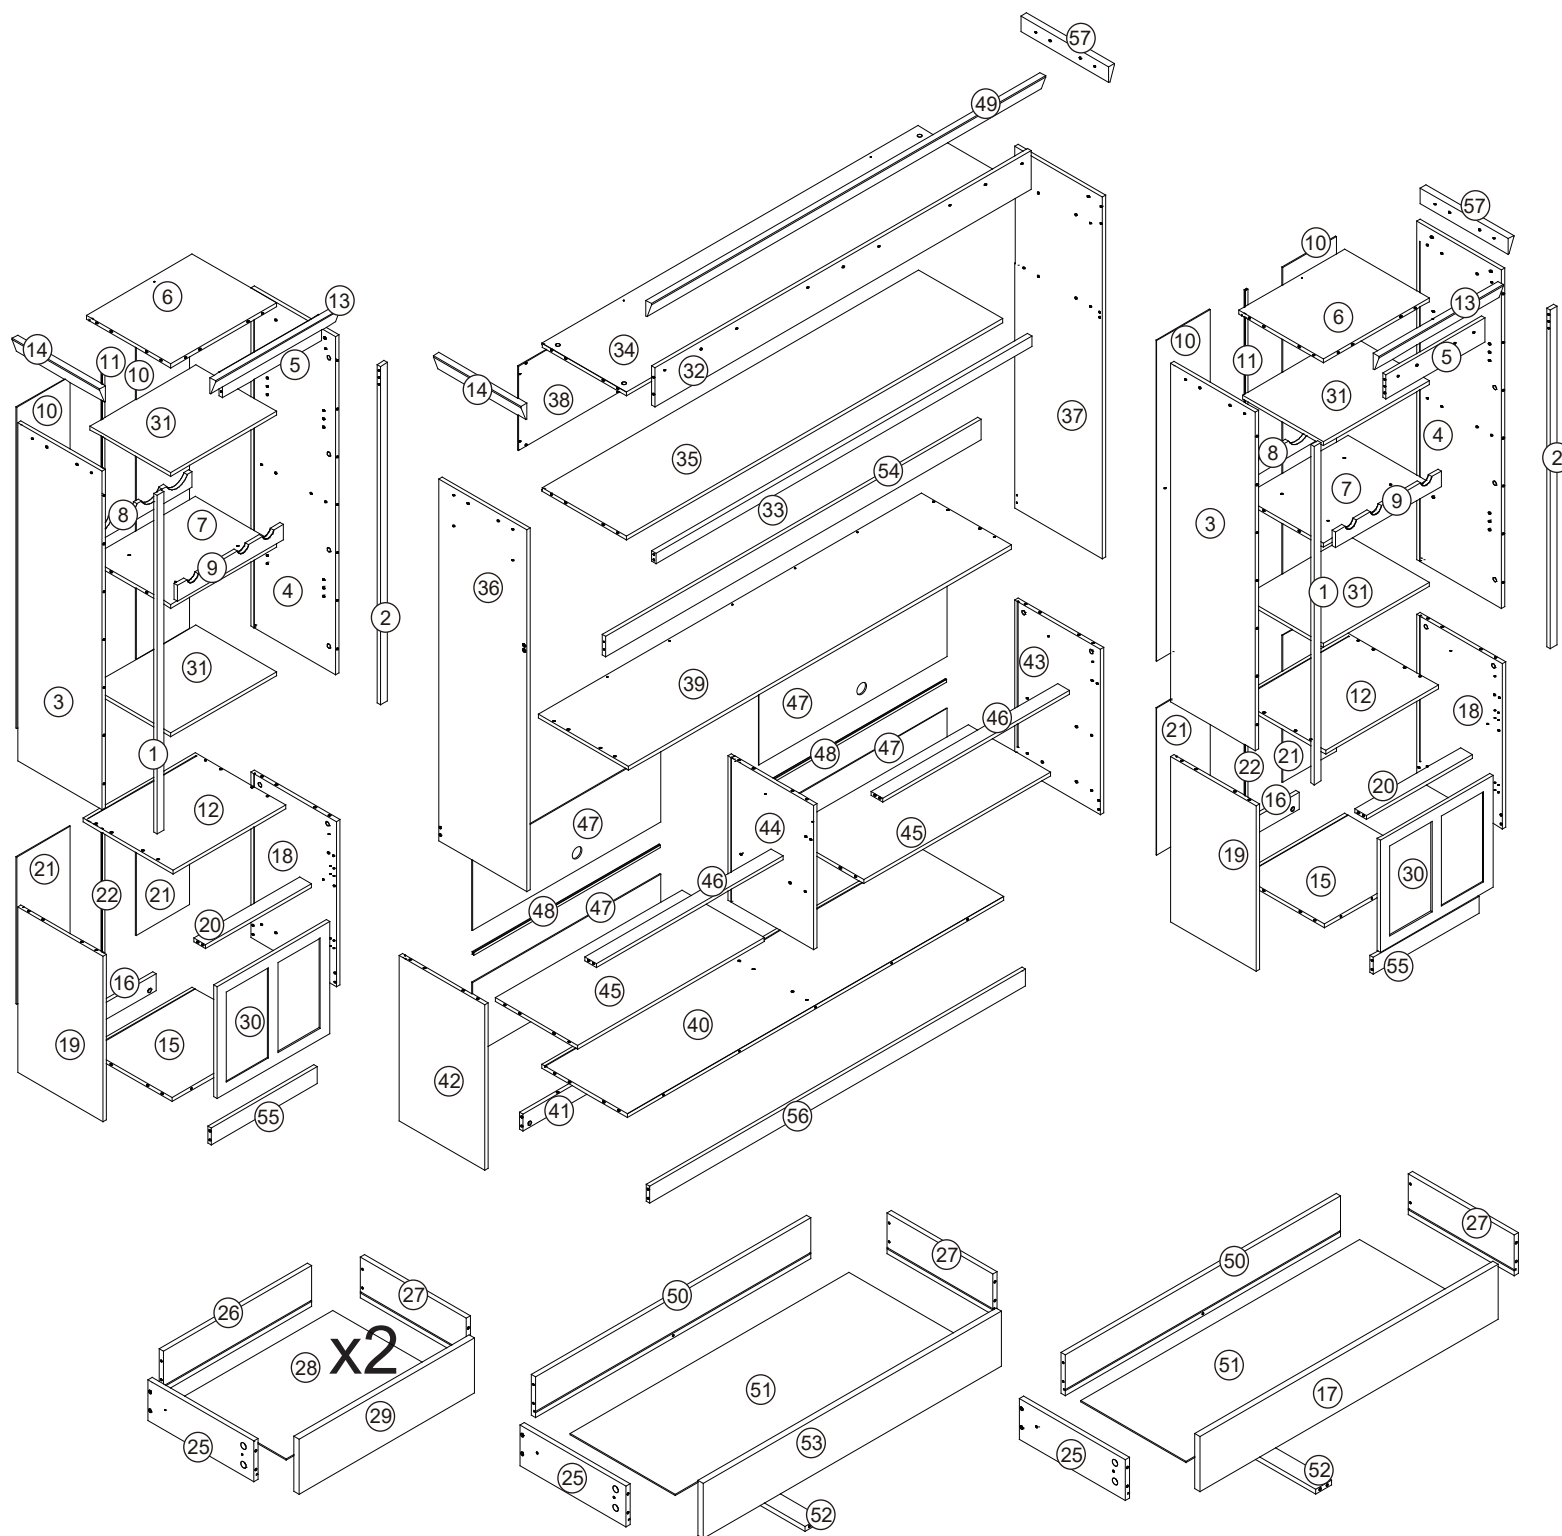
















PART LIST

There are 3 boxes of this product.

N721P249238

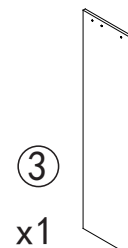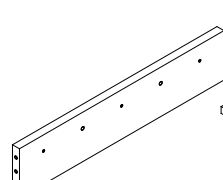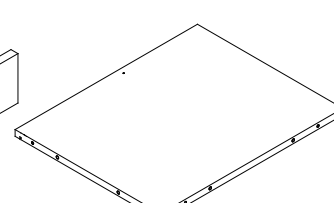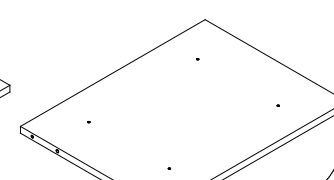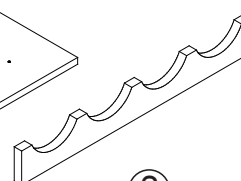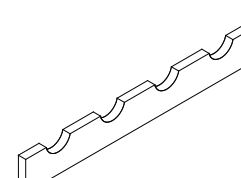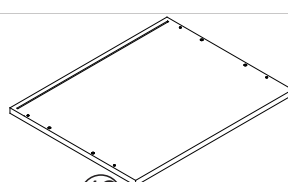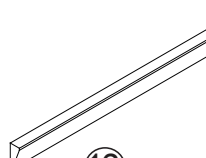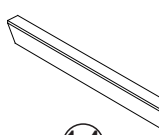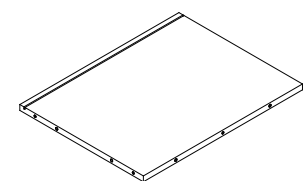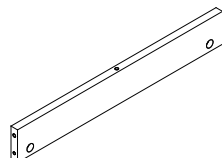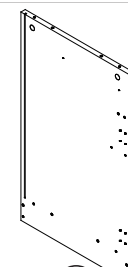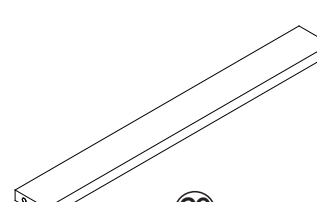 ① x1 Counter Receipt 1300x30x15mm	 ② x1 Counter Receipt 1300x30x15mm	 ③ x1 Upper Cabinet side panel 1300x375x15mm	 ④ x1 Upper Cabinet side panel 1300x375x15mm	
 ⑤ x1 Roof front section 440x92x15mm	 ⑥ x1 tip plate 470x375x15mm	 ⑦ x1 Upper Cabinet fixed laminate 470x360x15mm	 ⑧ x1 The wine cabinet 460x60x15mm	 ⑨ x1 The wine cabinet 460x60x15mm
 ⑩ x2 Upper Cabinet back panel 1233x240x3mm	 ⑪ x1 Back slats	 ⑫ x1 kneading board 500x400x15mm	 ⑬ x1 Styling strip 553x60x25mm	 ⑭ x1 Styling strip 390x60x25mm
 ⑮ x1 base plate 470x365x15mm	 ⑯ x1 Drain 470x65x15mm	 ⑰ x1 Side panel of lower cabinet 635x380x15mm	 ⑱ x1 Side panel of lower cabinet 635x380x15mm	 ⑳ x1 Lower Cabinet horizontal bar 470x52x15mm














PART LIST

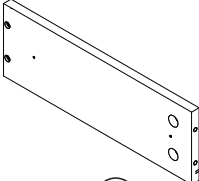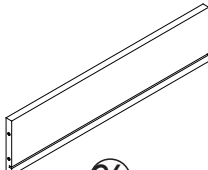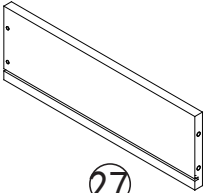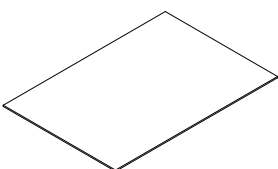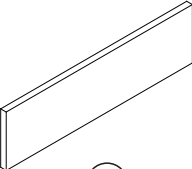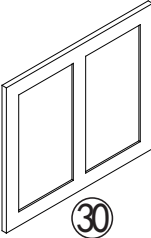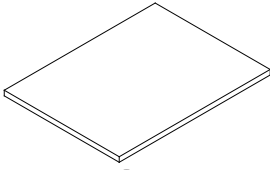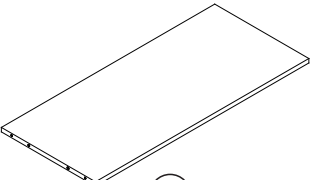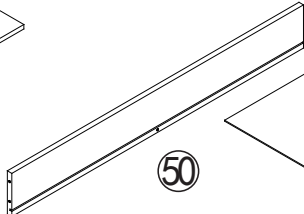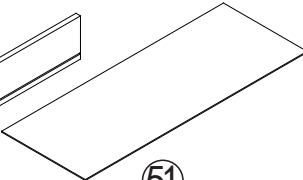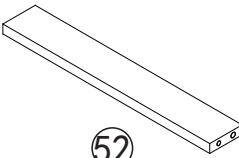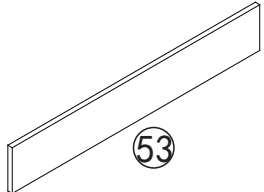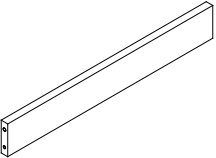 ②① x2 Lower Cabinet back panel 565x240x3mm	 ②② x1 Back slats	 ②⑤ x2 Drawer side panel 300x100x12mm	 ②⑥ x1 Back panel of drawer 420x100x12mm	 ②⑦ x2 Drawer side panel 300x100x12mm
 ②⑧ x1 Drawer back panel 430x298x3mm	 ②⑨ x1 Drawer Panel 497x135x15mm	 ③⑦ x1 door plank 500x430x15mm	 ③① x2 Active laminate 470x358x15mm	 ④② x1 Side panel of lower cabinet 635x380x15mm
 ④⑤ x1 Upper Cabinet fixed laminate 827x365x15mm	 ⑤⑦ x1 Back panel of drawer 780x100x12mm	 ⑤① x1 Drawer back panel 790x298x3mm	 ⑤② x1 Drawer drawers 288x45x12mm	 ⑤③ x1 Drawer Panel 845x135x15mm
 ⑤⑤ x1 Drain 470x80x15mm				
















PART LIST

There are 3 boxes of this product.

N721P249239

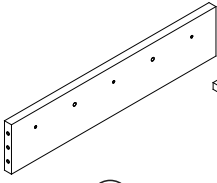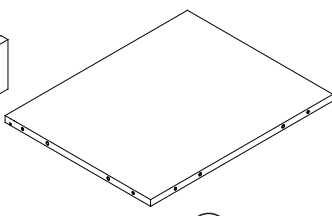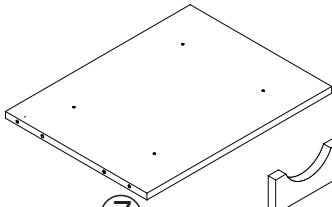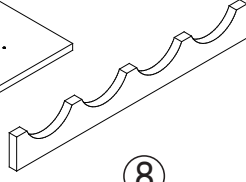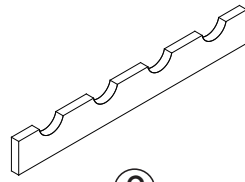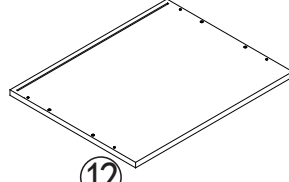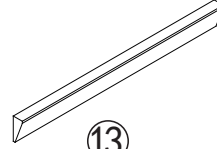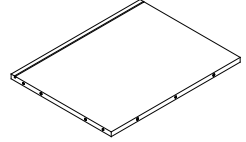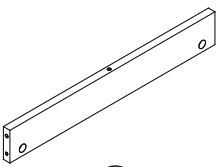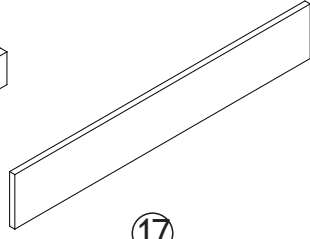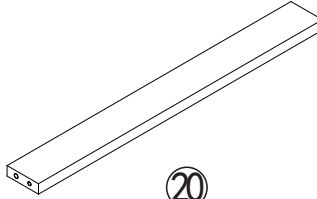 ① x1 Counter Receipt 1300x30x15mm	 ② x1 Counter Receipt 1300x30x15mm	 ③ x1 Upper Cabinet side panel 1300x375x15mm	 ④ x1 Upper Cabinet side panel 1300x375x15mm	
 ⑤ x1 Roof front section 440x92x15mm	 ⑥ x1 tip plate 470x375x15mm	 ⑦ x1 Upper Cabinet fixed laminate 470x360x15mm	 ⑧ x1 The wine cabinet 460x60x15mm	 ⑨ x1 The wine cabinet 460x60x15mm
 ⑩ x2 Upper Cabinet back panel 1233x240x3mm	 ⑪ x1 Back slats	 ⑫ x1 kneading board 500x400x15mm	 ⑬ x1 Styling strip 553x60x25mm	 ⑮ x1 base plate 470x365x15mm
 ⑯ x1 Drain 470x65x15mm	 ⑰ x1 Drawer Panel 845x135x15mm	 ⑱ x1 Side panel of lower cabinet 635x380x15mm	 ⑲ x1 Side panel of lower cabinet 635x380x15mm	 ⑳ x1 Lower Cabinet horizontal bar 470x52x15mm


















PART LIST

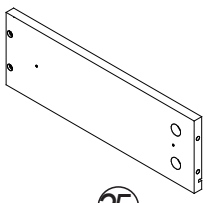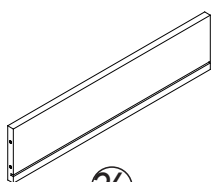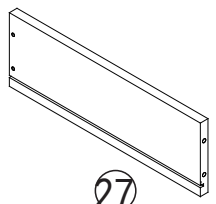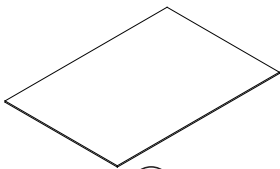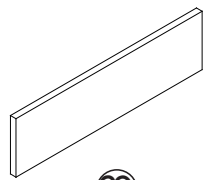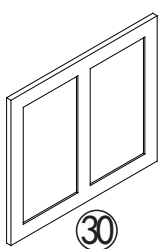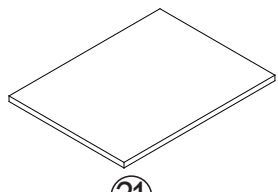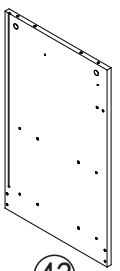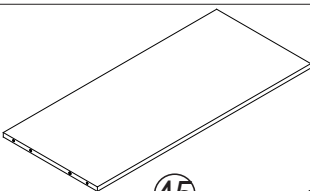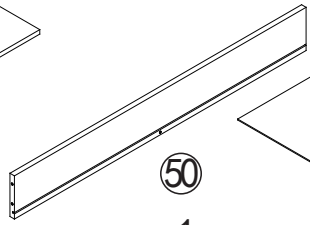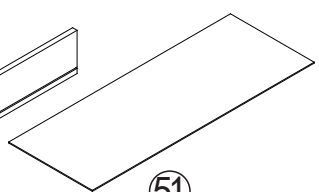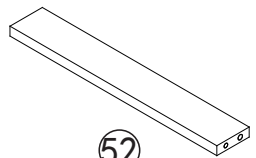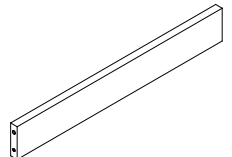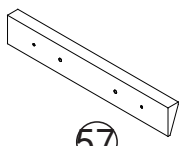 21 x2 Lower Cabinet back panel 565x240x3mm	 22 x1 Back slats	 25 x2 Drawer side panel 300x100x12mm	 26 x1 Back panel of drawer 420x100x12mm	 27 x2 Drawer side panel 300x100x12mm
 28 x1 Drawer back panel 430x298x3mm	 29 x1 Drawer Panel 497x135x15mm	 30 x1 door plank 500x430x15mm	 31 x2 Active laminate 470x358x15mm	 43 x1 Side panel of lower cabinet 635x380x15mm
 45 x1 Upper Cabinet fixed laminate 827x365x15mm	 50 x1 Back panel of drawer 780x100x12mm	 51 x1 Drawer back panel 790x298x3mm	 52 x1 Drawer drawers 288x45x12mm	 55 x1 Drain 470x80x15mm
 57 x1 Styling strip 390x60x25mm				


PART LIST

There are 3 boxes of this product.

N721P249240

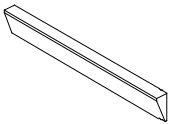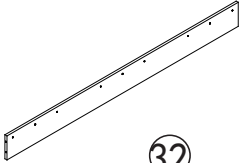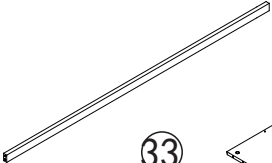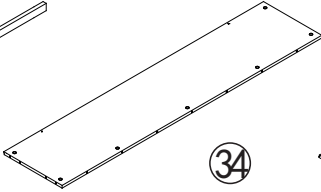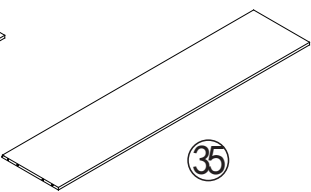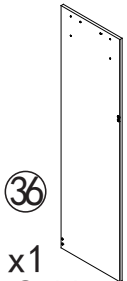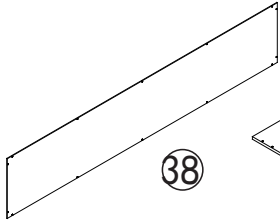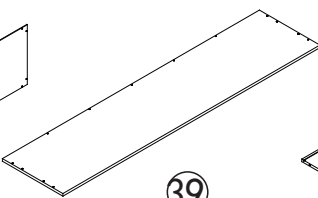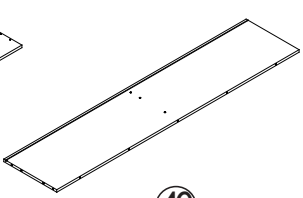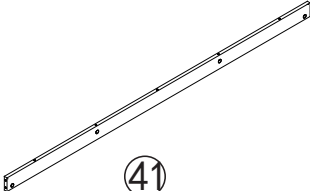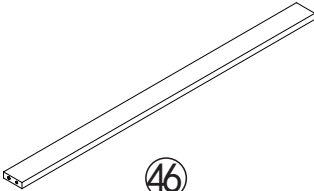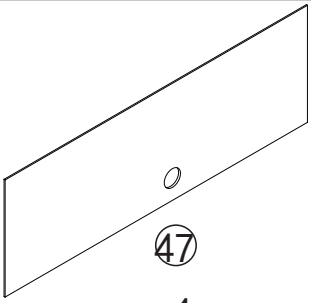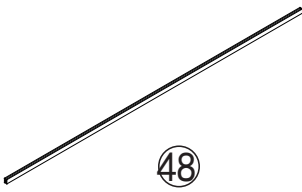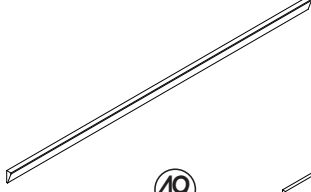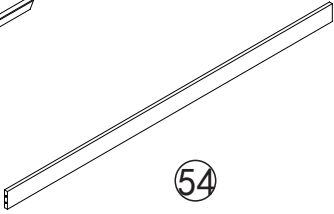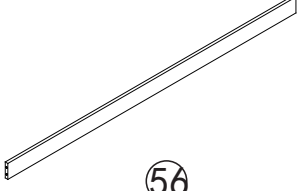 ⑭ x1 Styling strip 390x60x25mm	 ③② x1 Roof front section 1670x150x15mm	 ③③ x1 Square tube 1670x40x20mm	 ③④ x1 tip plate 1670x375x15mm	 ③⑤ x1 Upper Cabinet fixed laminate 1670x375x15mm
 ③⑥ x1 Upper Cabinet side panel 1390x390x15mm	 ③⑦ x1 Upper Cabinet side panel 1390x390x15mm	 ③⑧ x1 Upper Cabinet back panel 1688x323x3mm	 ③⑨ x1 kneading board 1700x400x15mm	 ④⑦ x1 base plate 1670x365x15mm
 ④① x1 Drain 1670x65x15mm	 ④④ x1 Medium vertical plate 555x380x15mm	 ④⑥ x2 Lower Cabinet horizontal bar 827x52x15mm	 ④⑦ x4 Lower Cabinet back panel 282x375x3mm	
 ④⑧ x2 Back slats	 ④⑨ x1 Styling strip 1750x60x25mm	 ⑤④ x1 Dackspace 1670x79x15mm	 ⑤⑥ x1 Drain 1670x80x15mm	

PART LIST

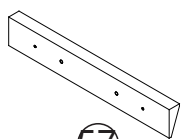

57

x1

Styling strip

390x60x25mm




Hardware kit x1


Assembly Instructions

Step 1

x2

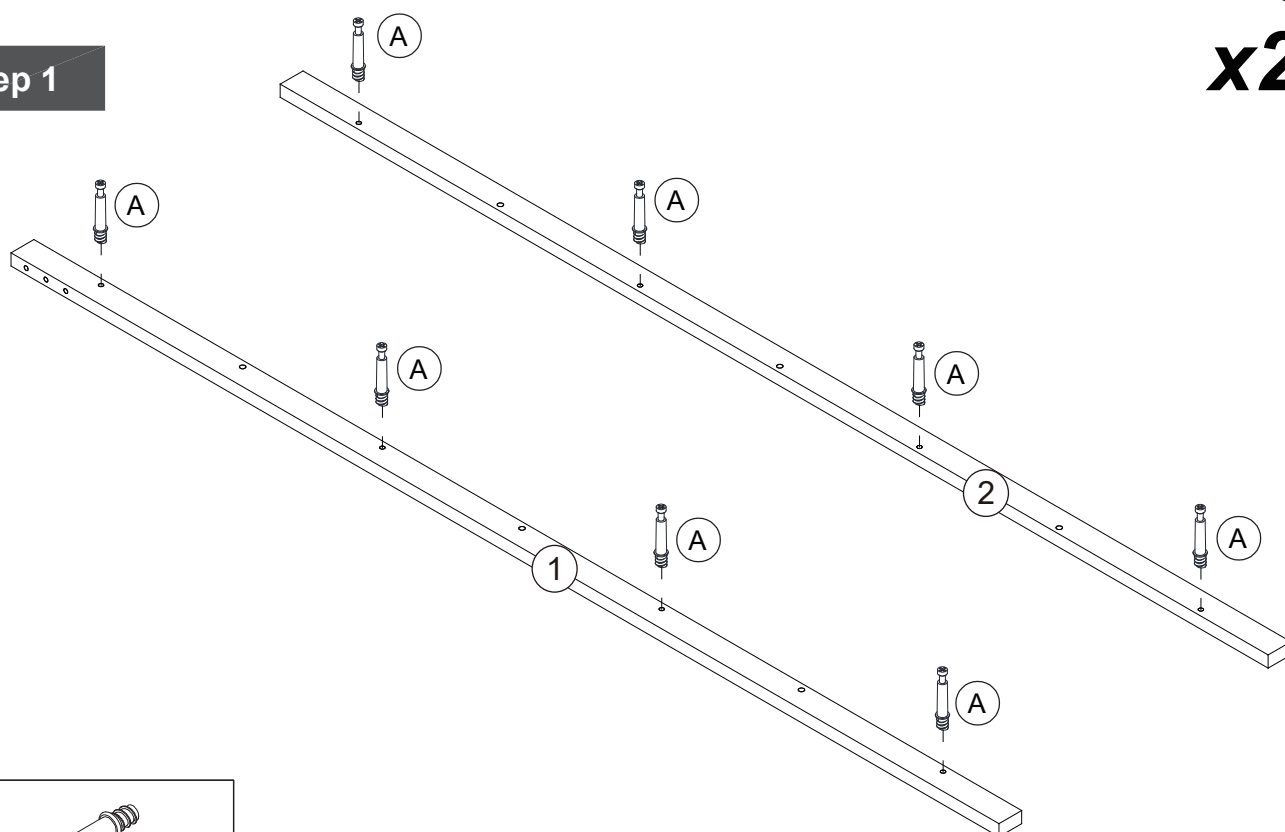


A




Cam Bolt x 16

Step 2


x2

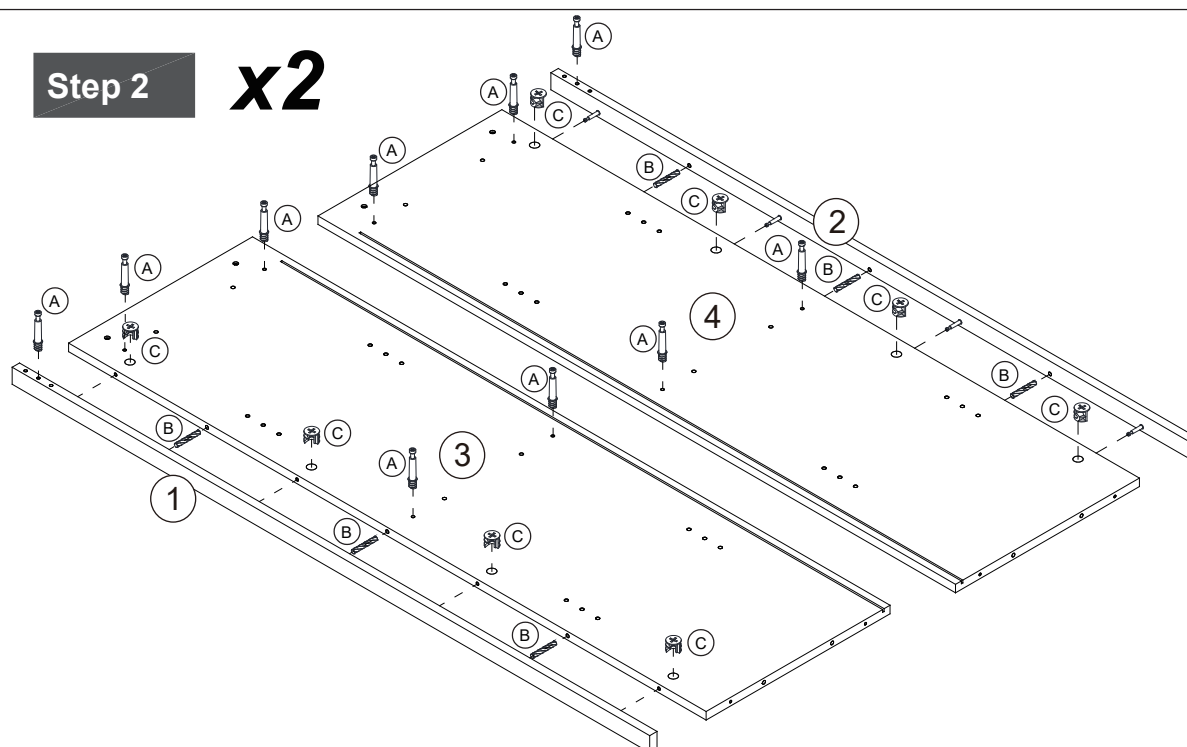


step1

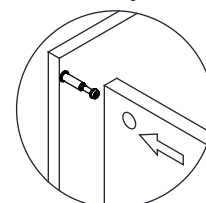


step2

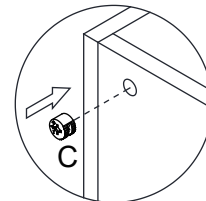

step3

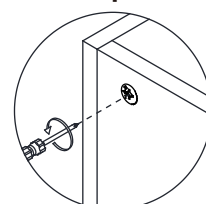

A



Cam Bolt x 20

B



6*30mm Dowel x 12

C





Cam Bolt x 16


Assembly Instructions

Step 3

x2

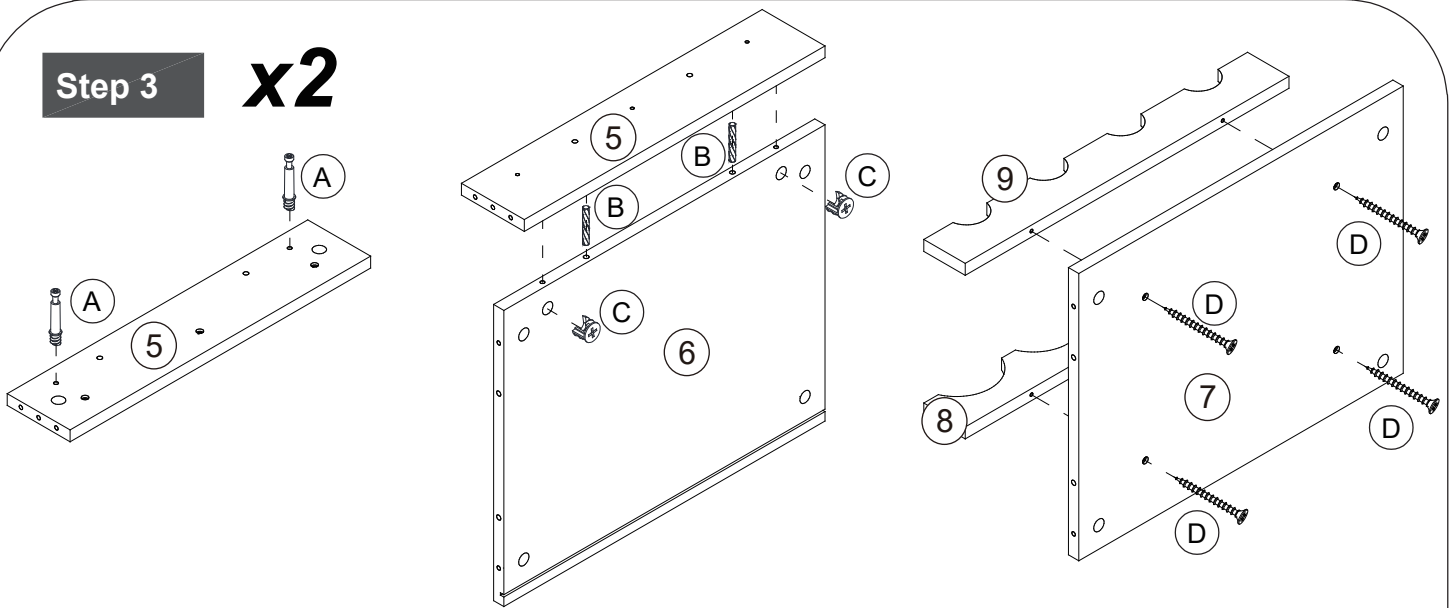


(D)  4*30mm Screw x 8	(B)  6*30mm Dowel x 4
(A)  Cam Bolt x 4	(C)  Cam lock x 4

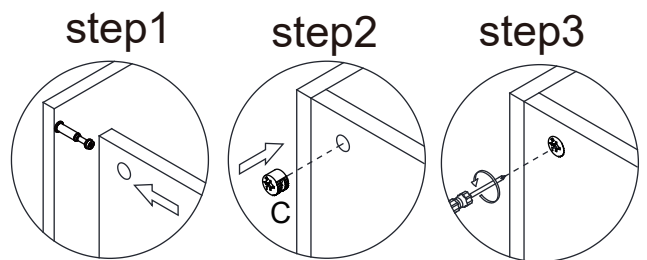

Step 4

x2

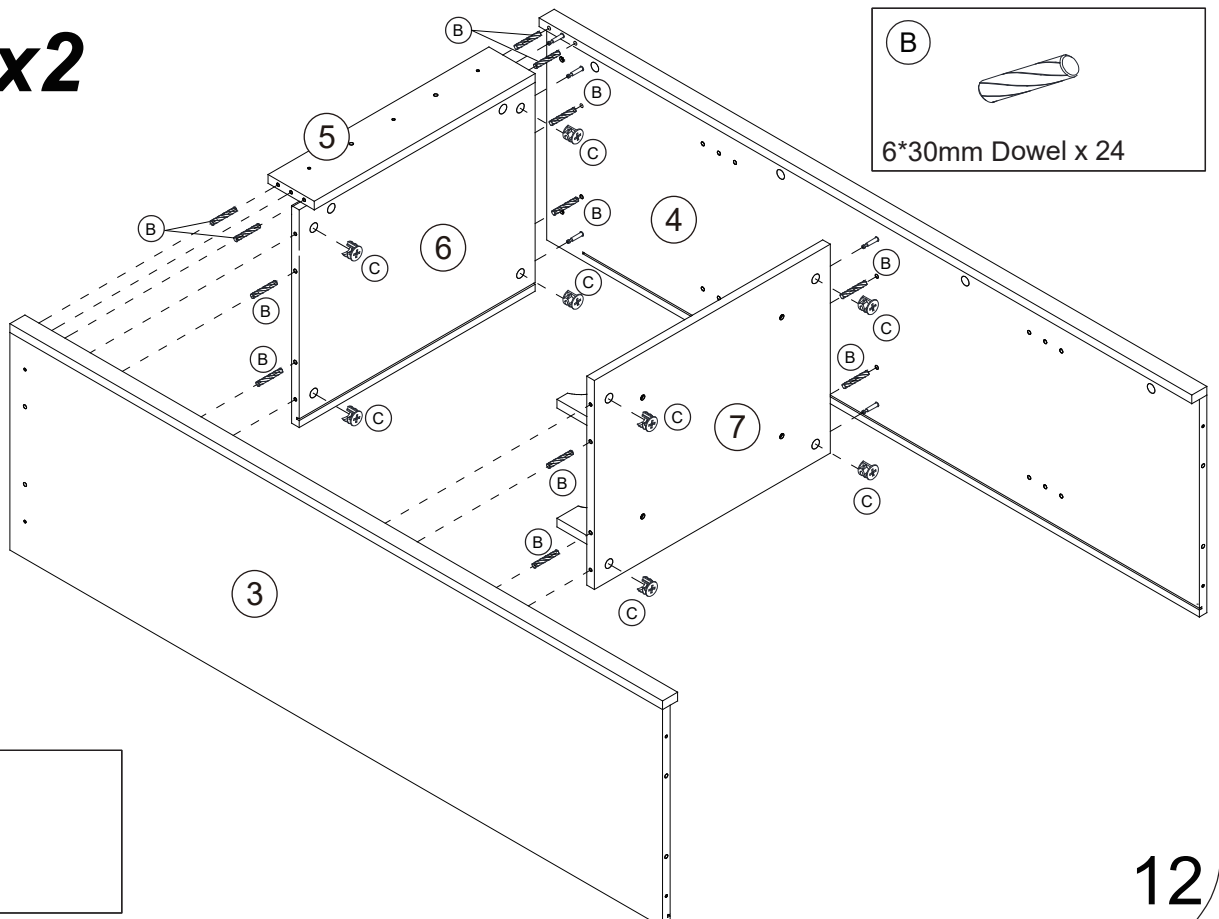


(B)  6*30mm Dowel x 24

(C)  Cam Bolt x 16

Assembly Instructions


Step 5

x2

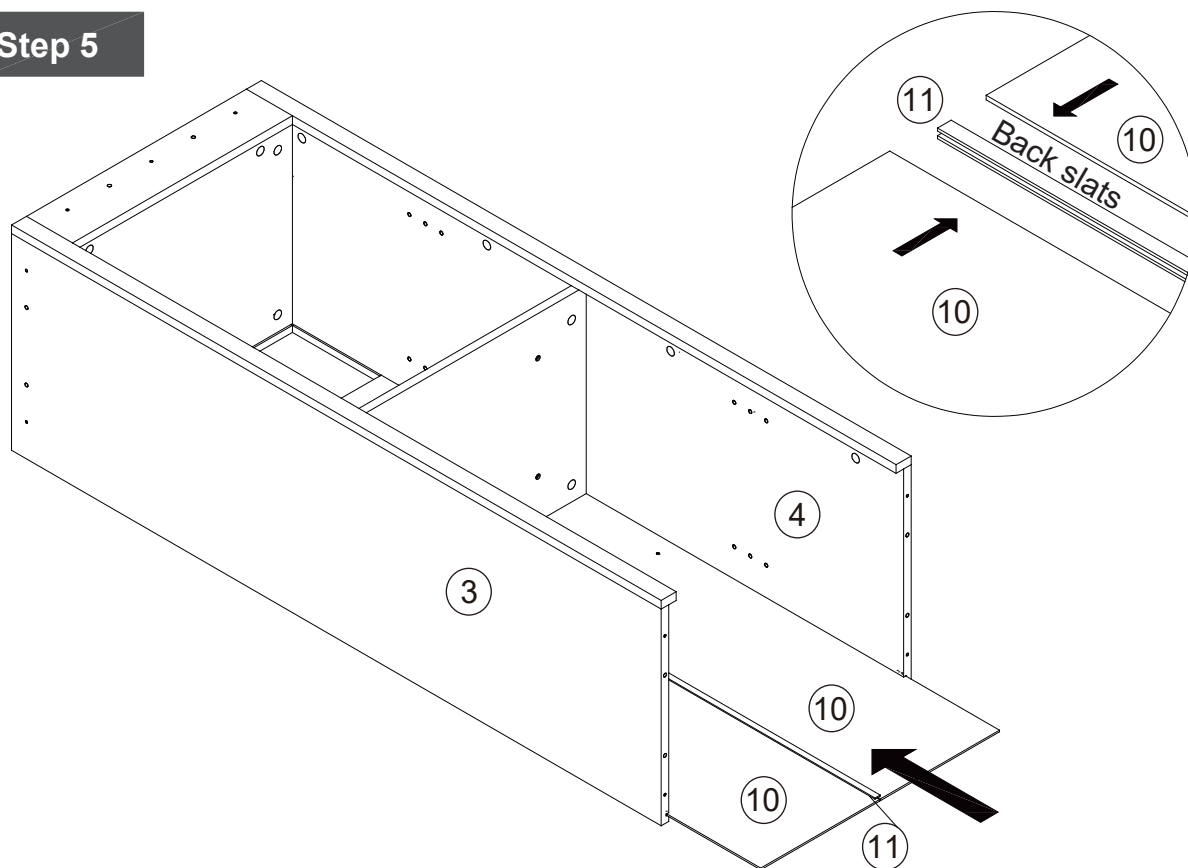


Step 6

x2

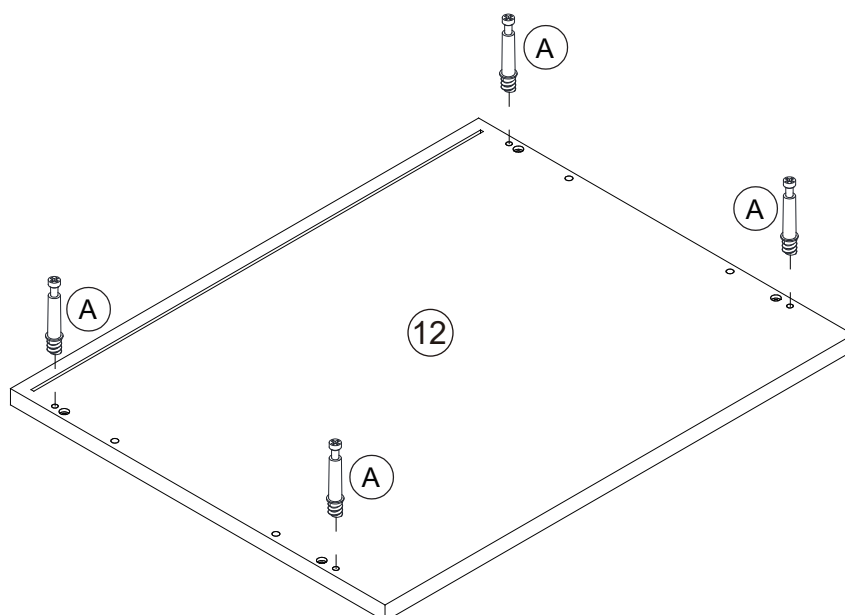

A




Cam Bolt x 8

13


Assembly Instructions

Step 7

x2

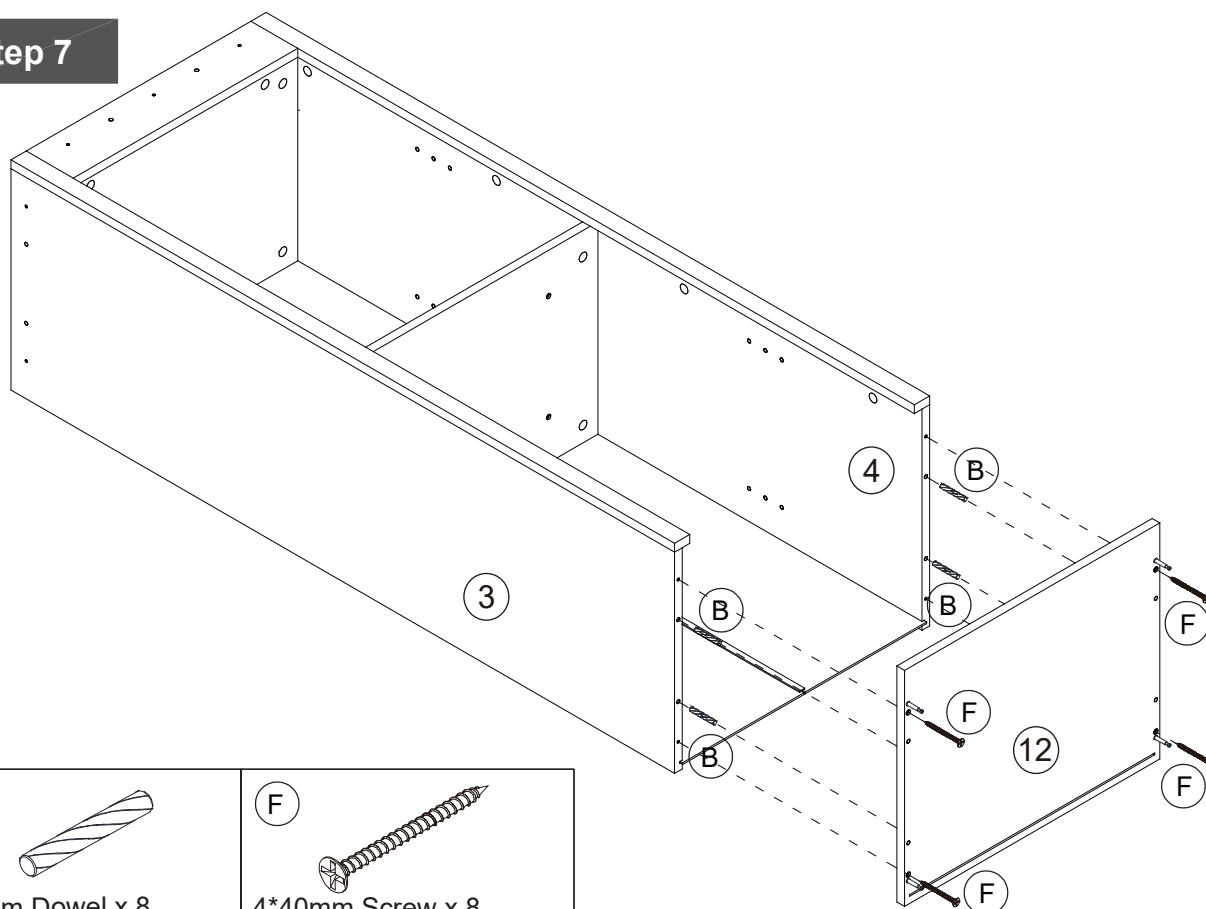

(B)




6*30mm Dowel x 8

(F)



4*40mm Screw x 8

Step 8

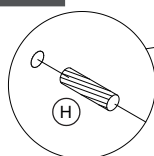

(I)

(13)

(5)

(14)

(13)

(5)

(57)

(4)

(10)

(10)

(3)

(4)

(10)

(10)

(3)

(I)



2.6*10mm Screw x 8

(H)



6*20mm Dowel x 8

(G)



4*20mm Screw x 10

(C)





Cam Bolt x 4

14

Assembly Instructions


Step 9

x2

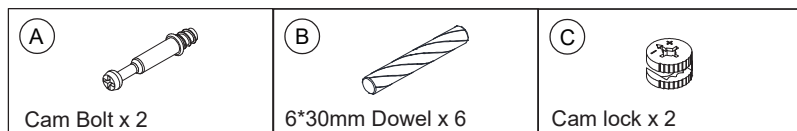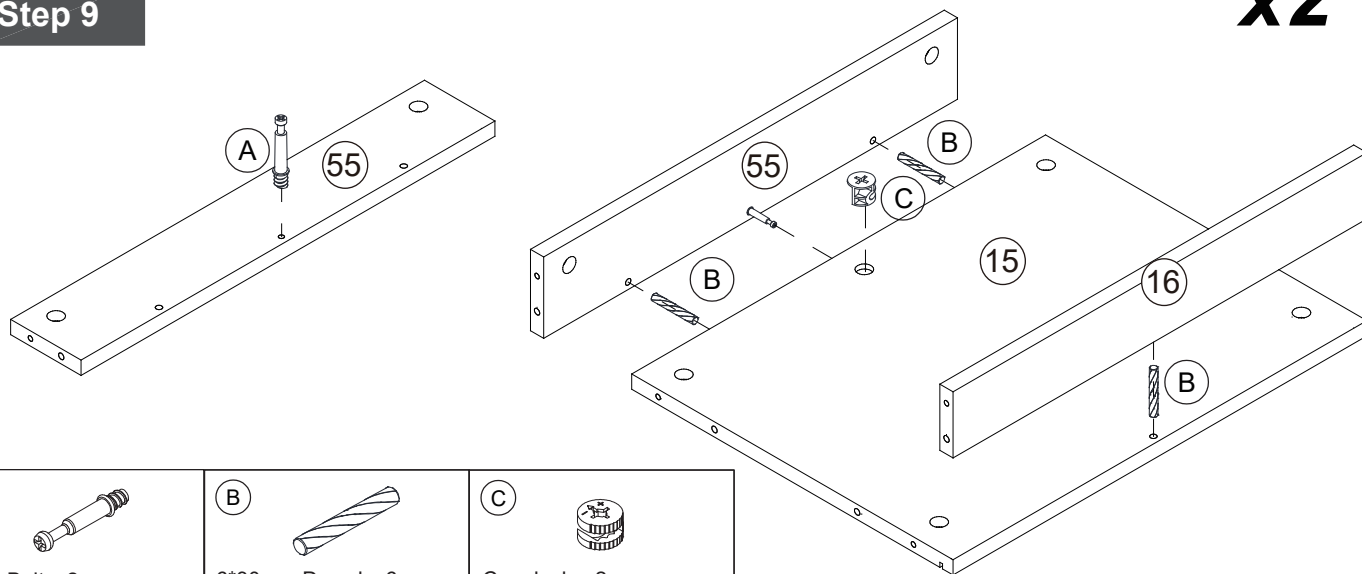

Step 10




x8

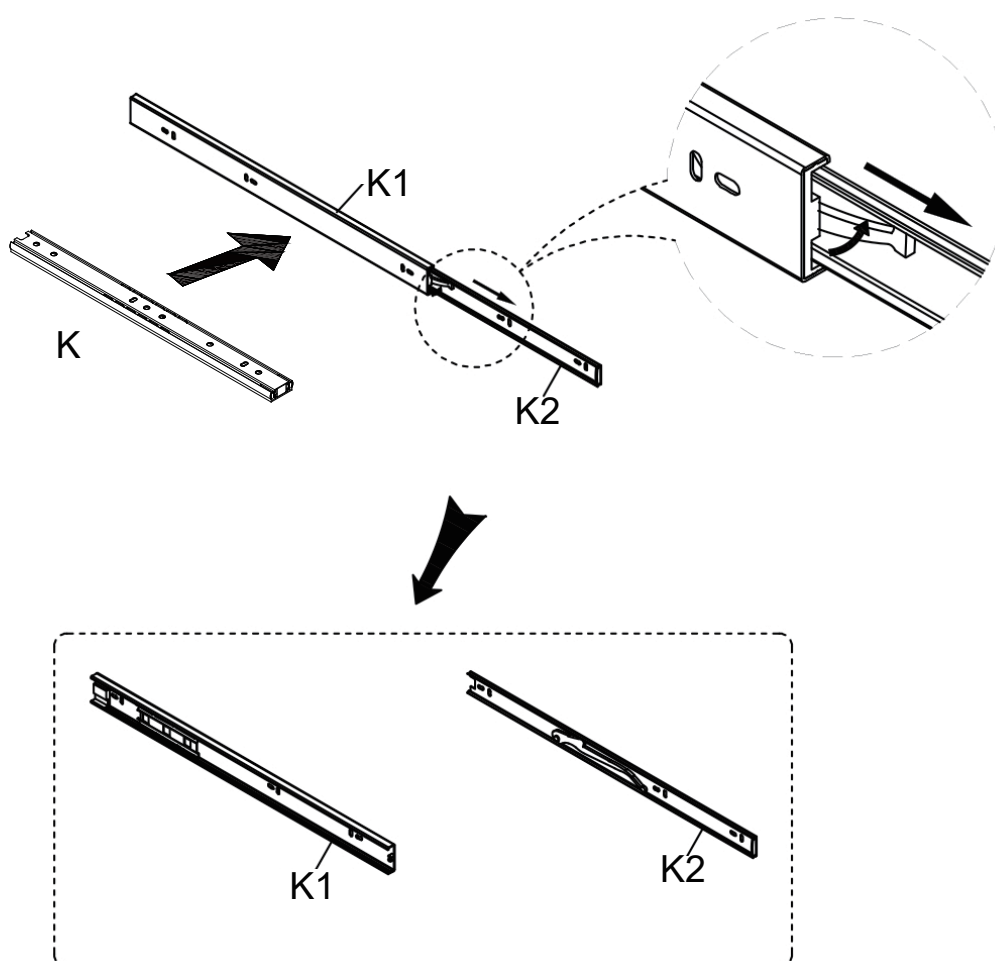




15

Assembly Instructions

Step 11

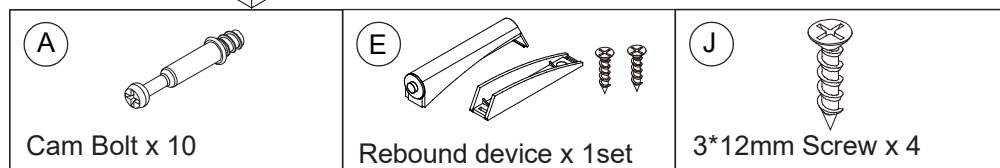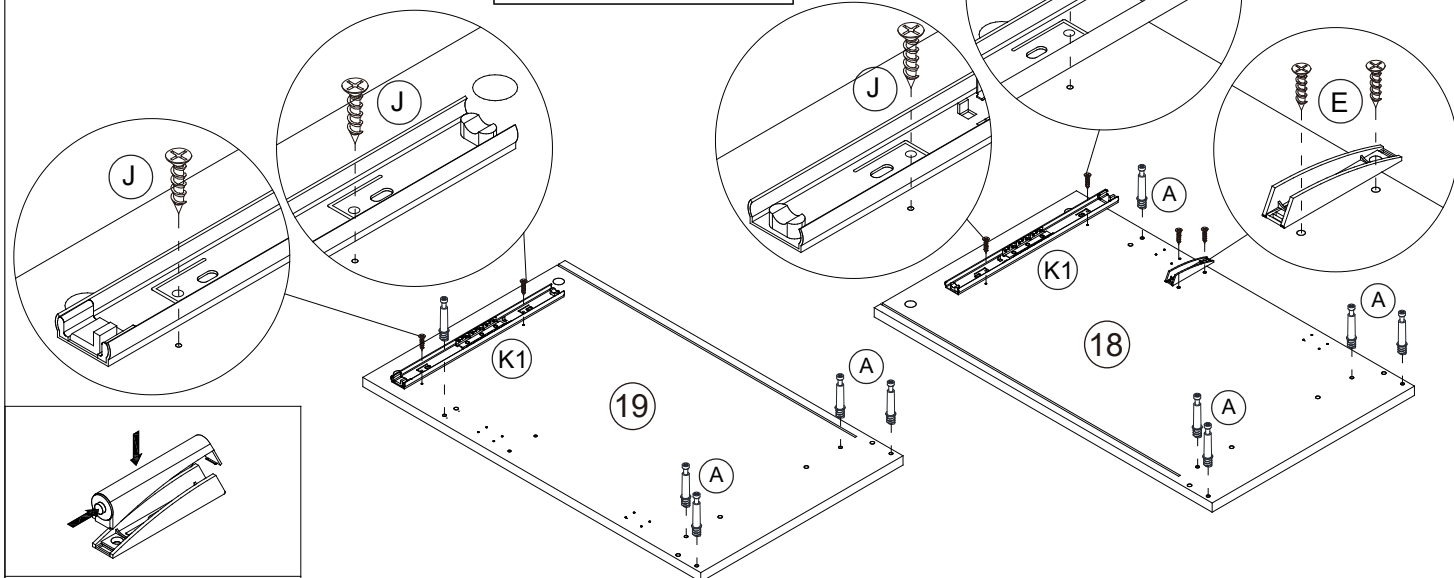
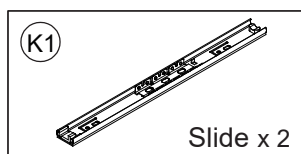


Step 12

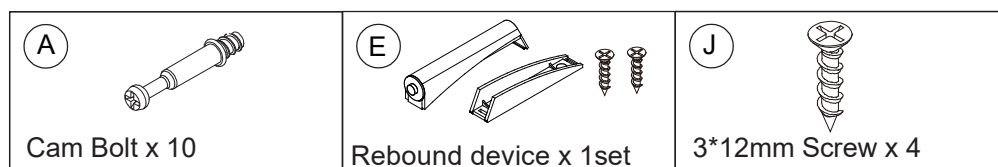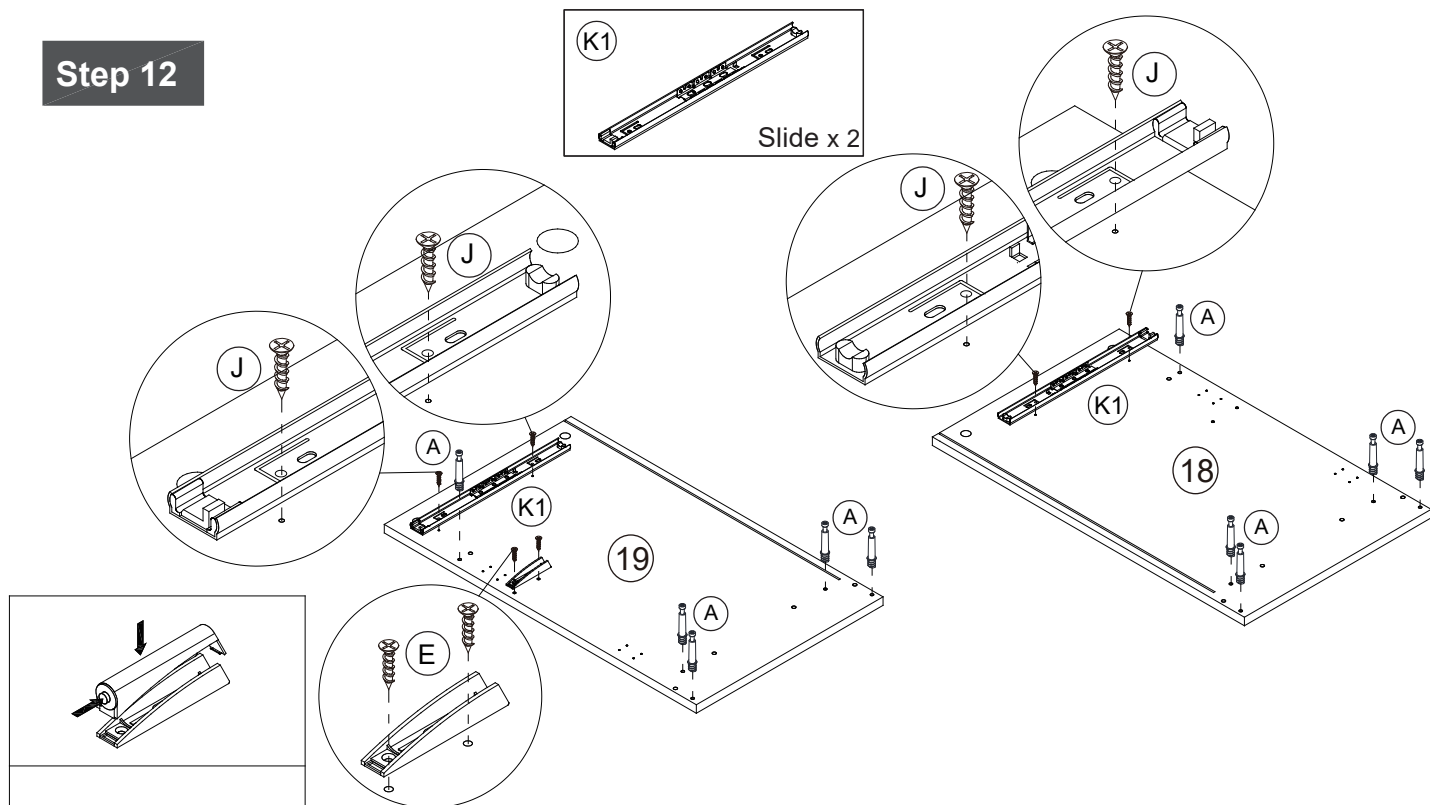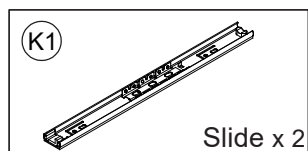

Assembly Instructions

Step 13

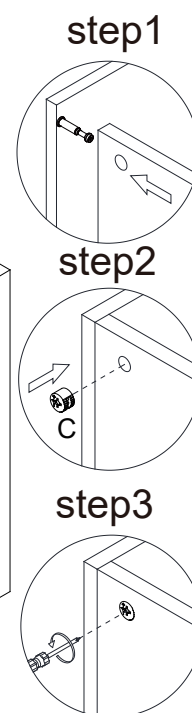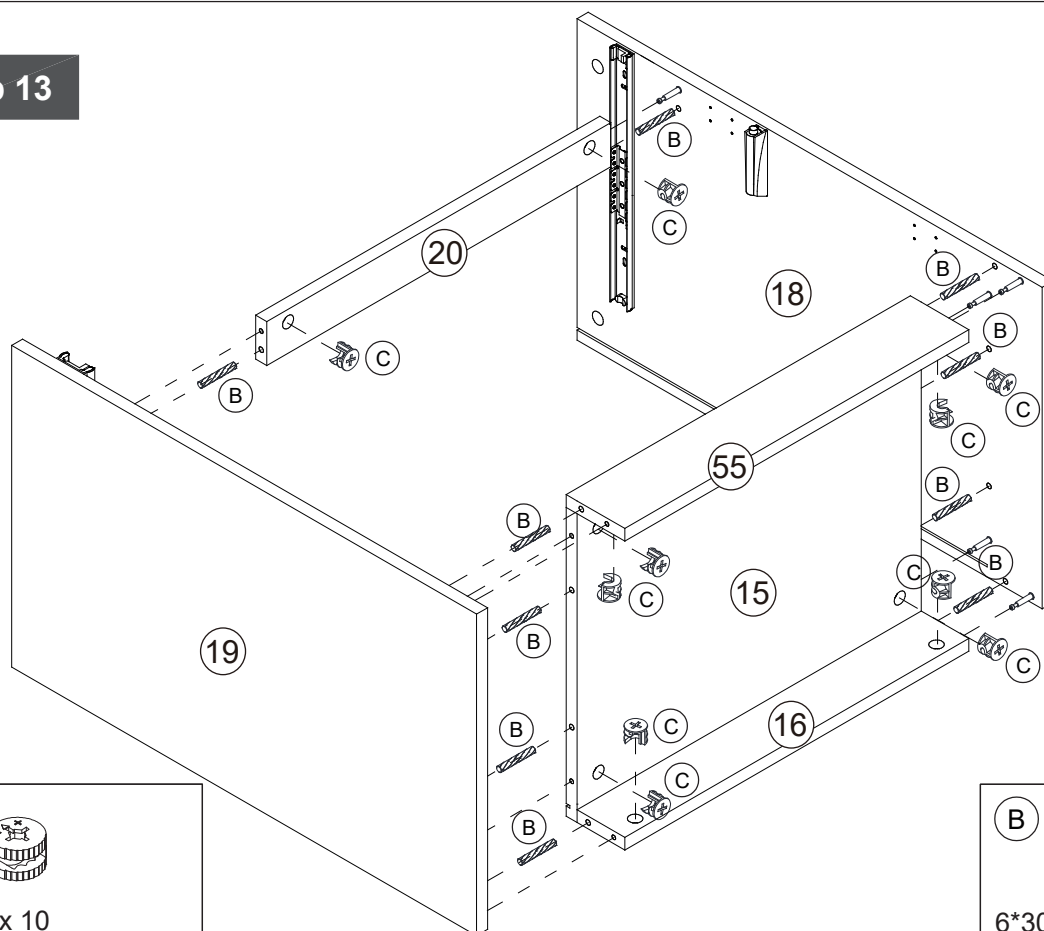


(C)





Cam Bolt x 10

(B)




6*30mm Dowel x 10

Step 14

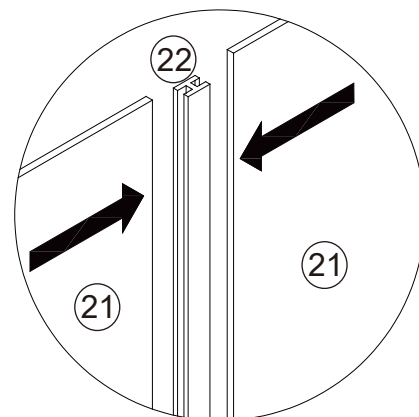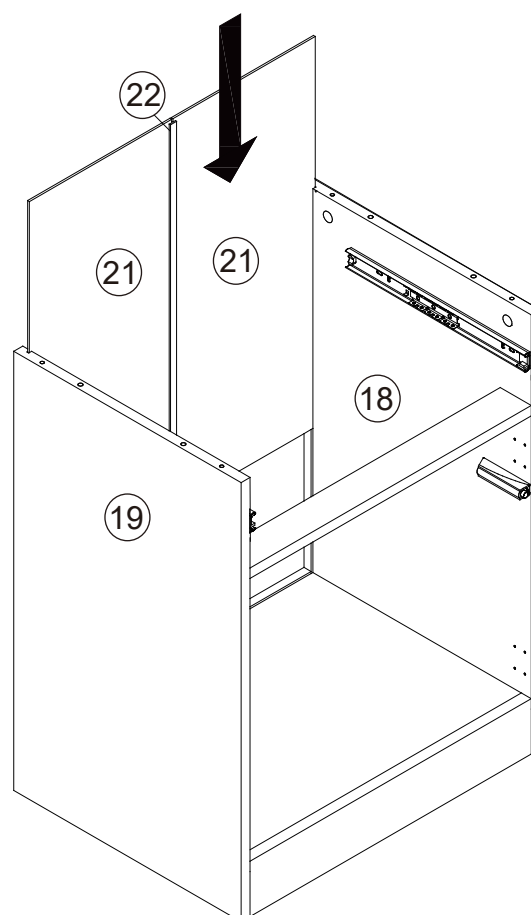


Assembly Instructions


Step 15

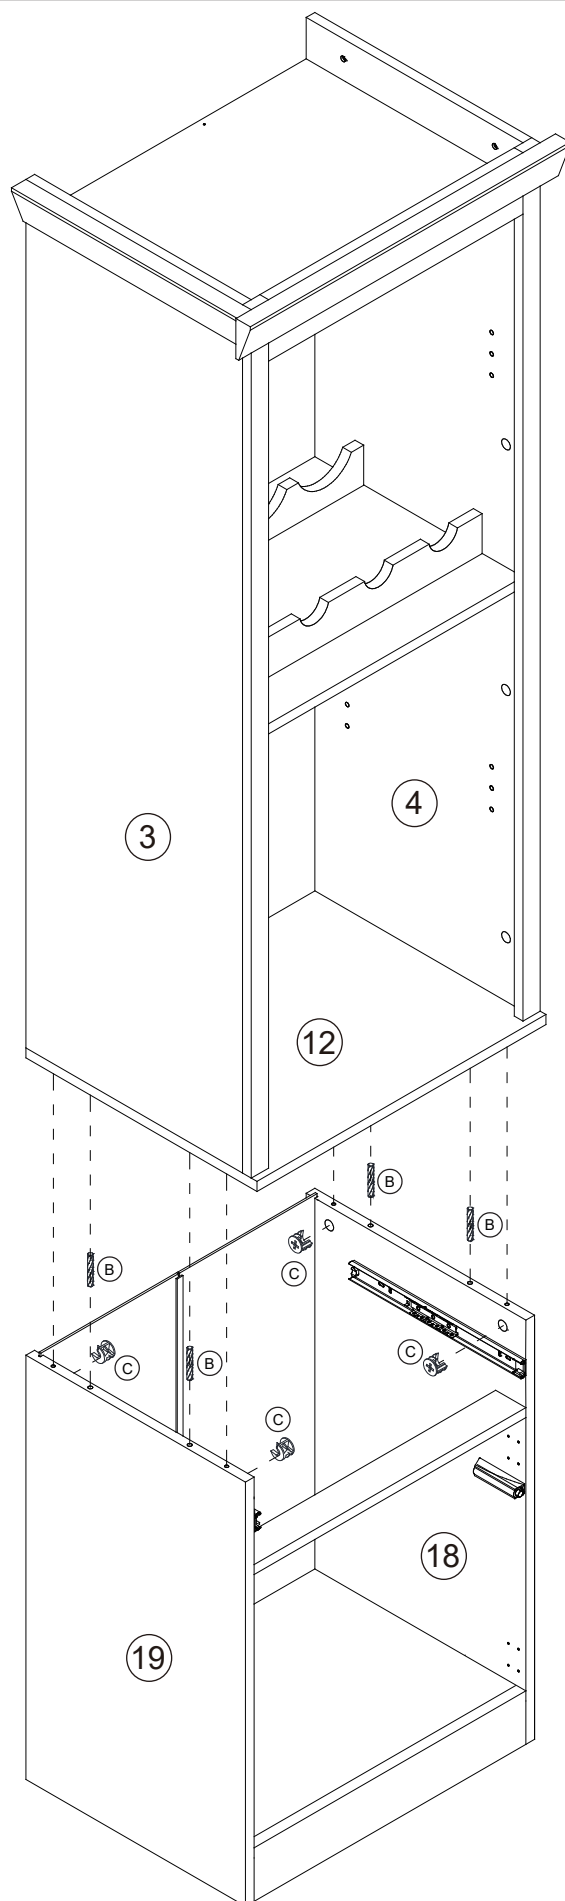


step1

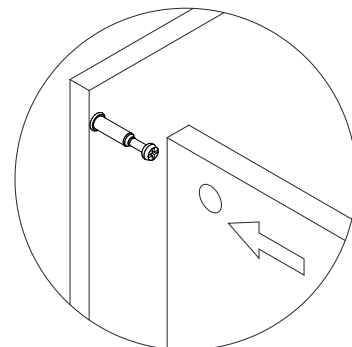

step2

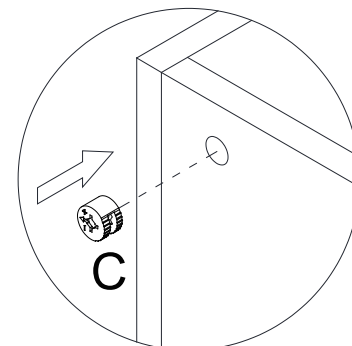


step3

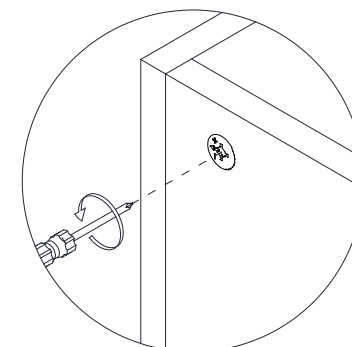


(C)	
Cam lock x 4	
(B)	
6*30mm Dowel x 4	

Assembly Instructions

Step 16

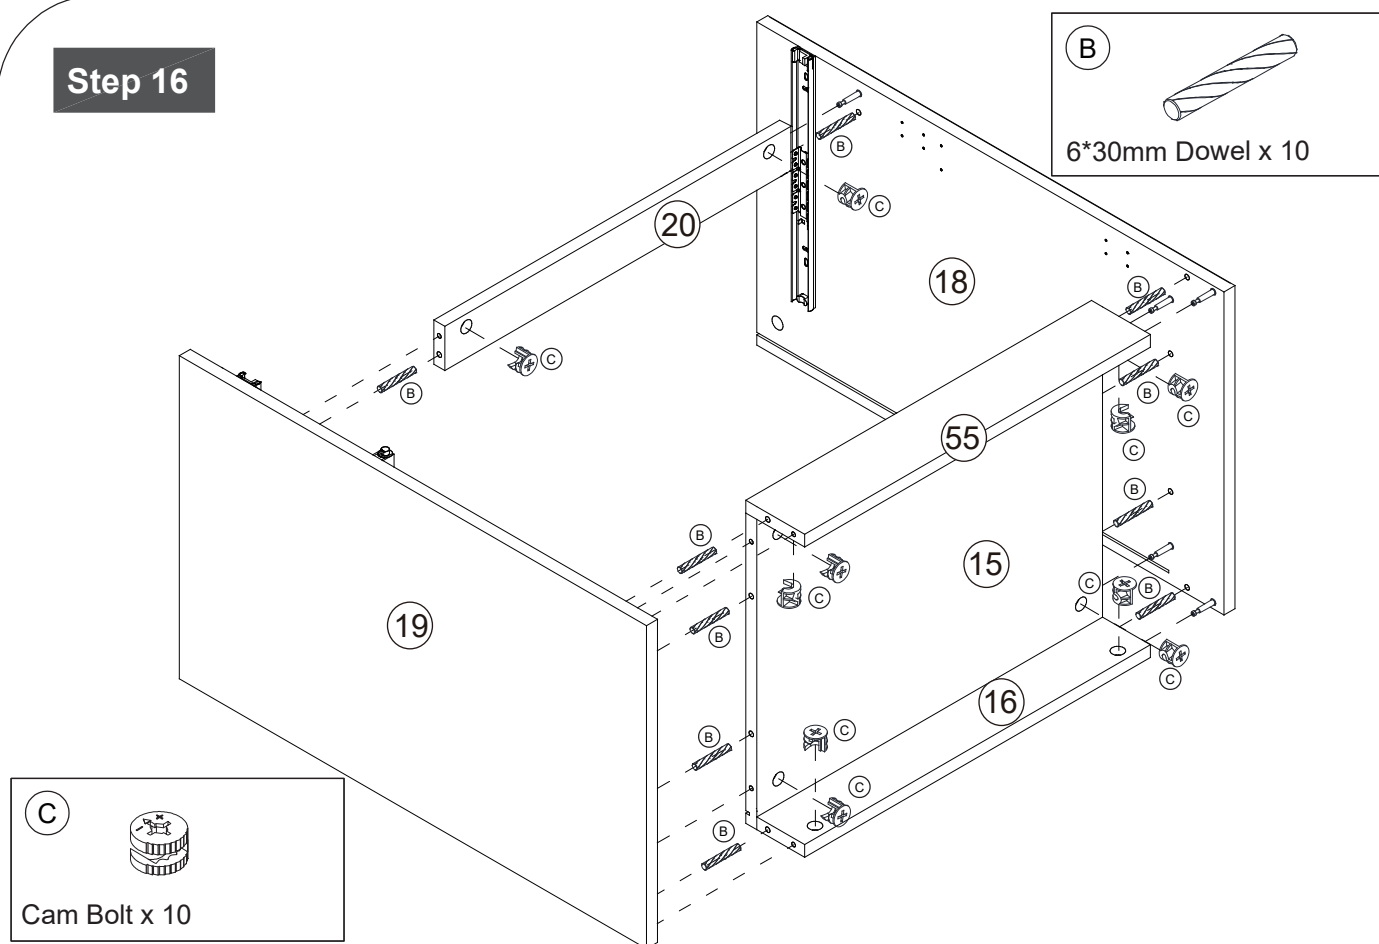


Step 17

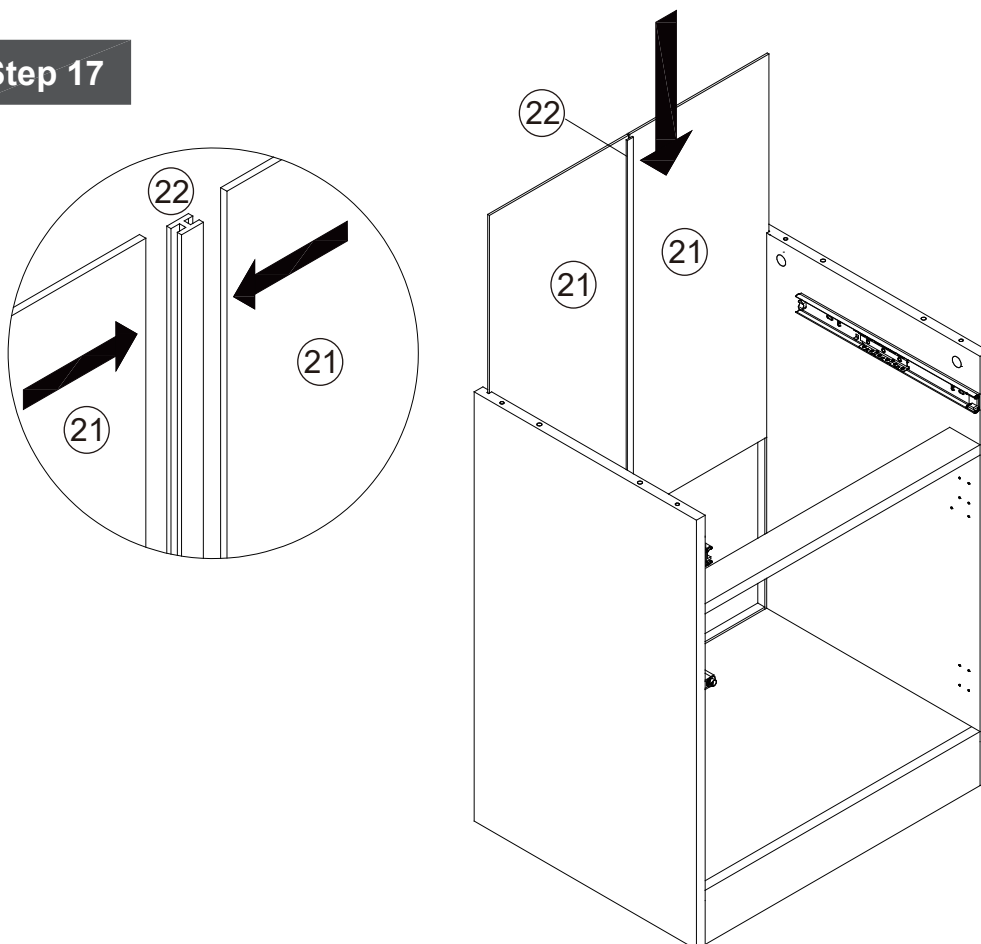


Assembly Instructions


Step 18

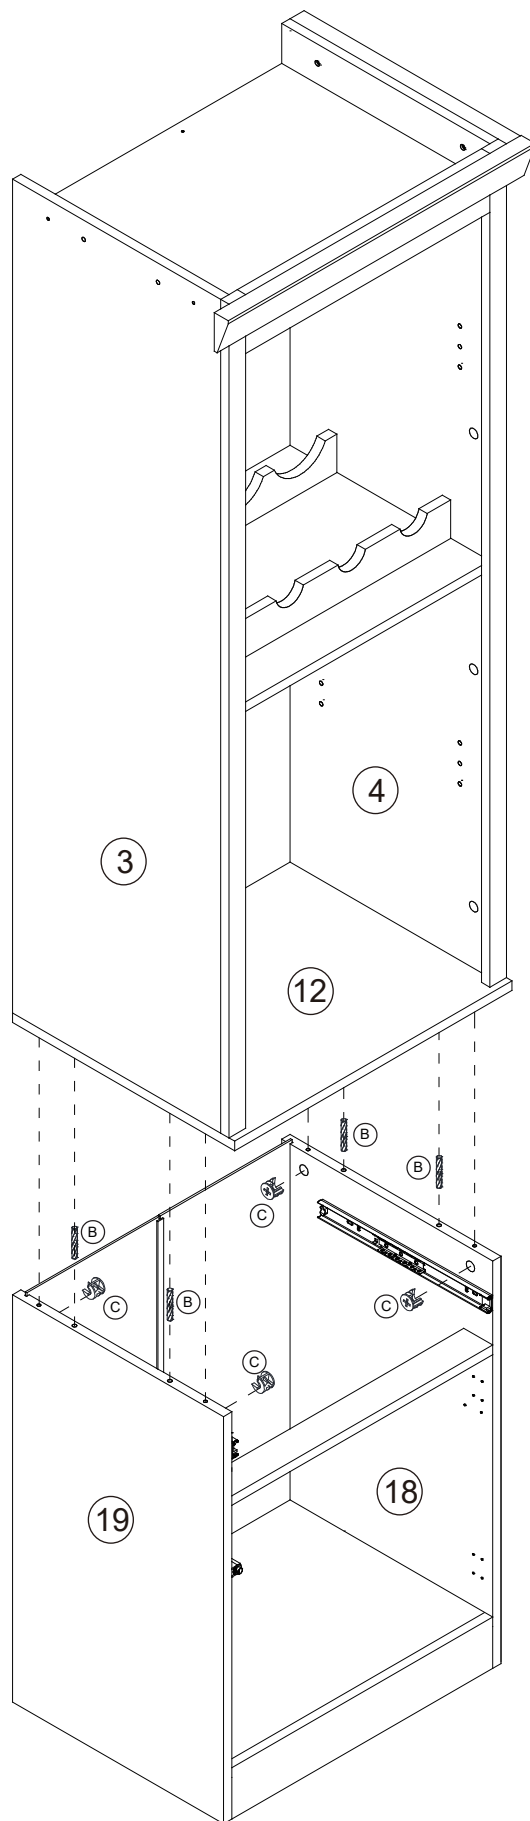



step1

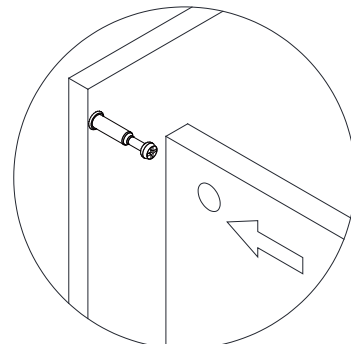

step2

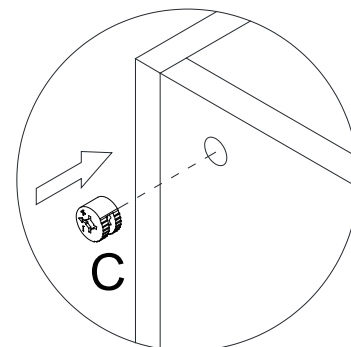



step3

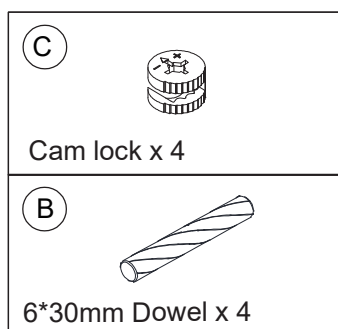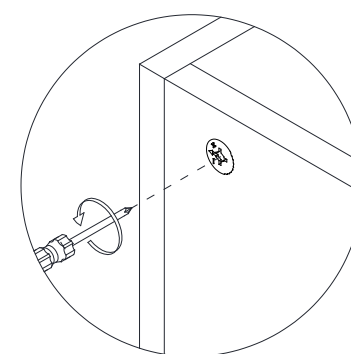


Assembly Instructions

Step 19

x2

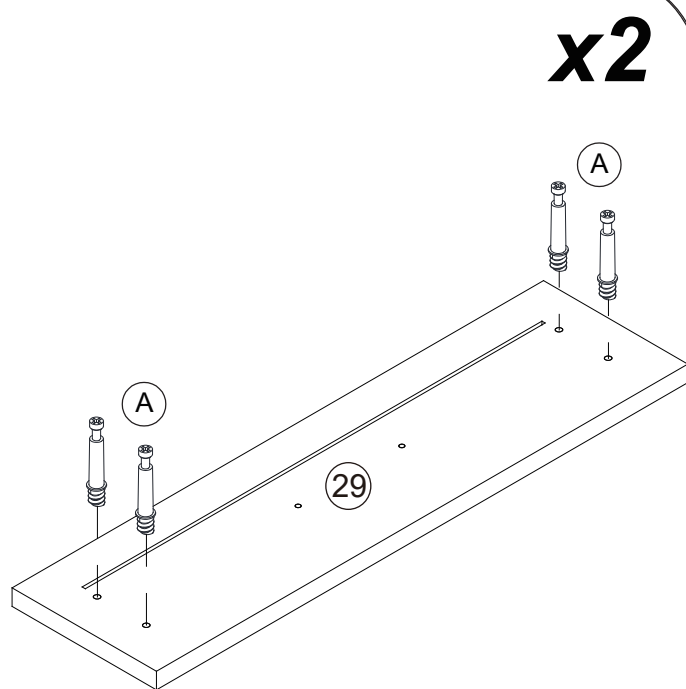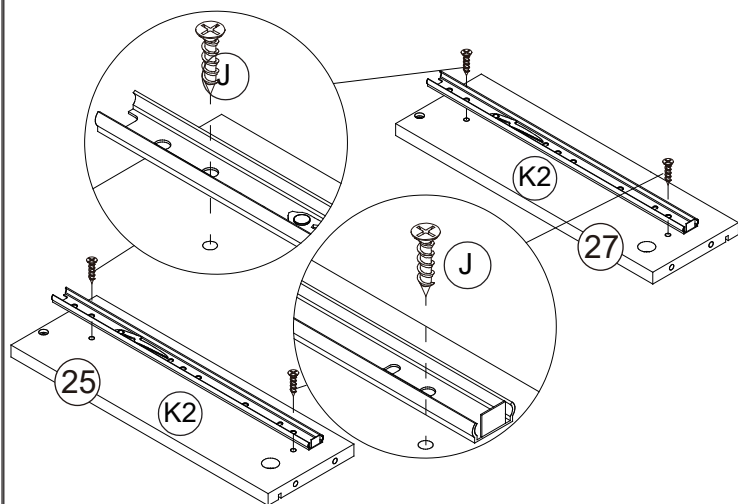

A




Cam Bolt x 8

J



3*12mm Screw x 8



K2

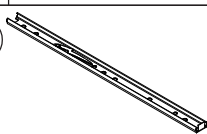

Slide x 4

Step 20

x2


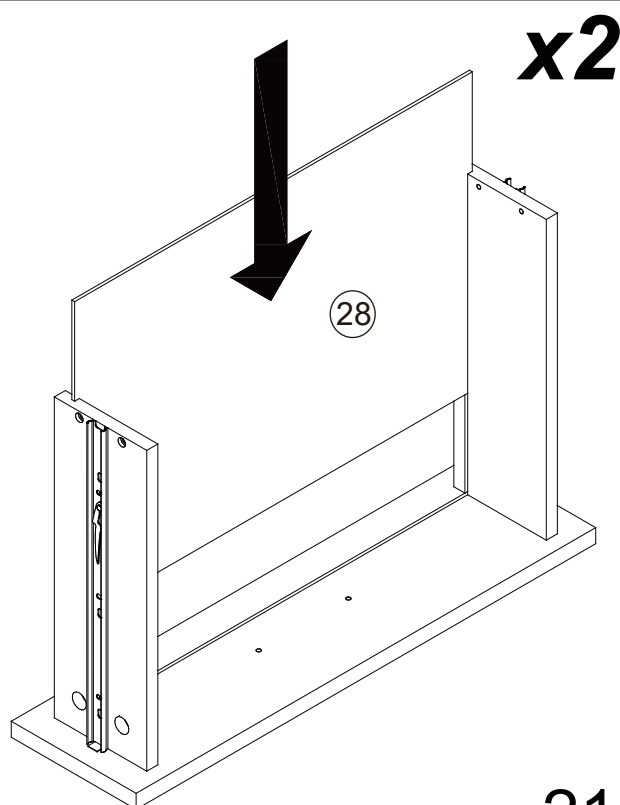
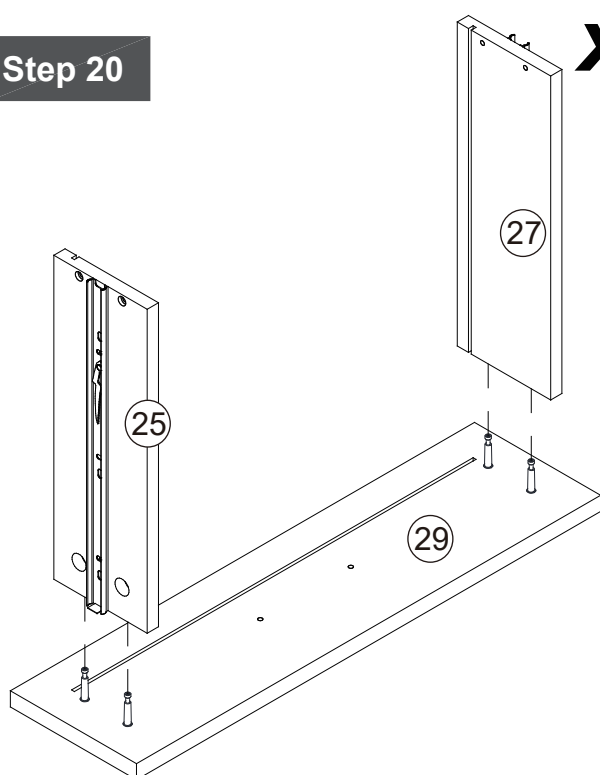


21


Assembly Instructions

Step 21

x2

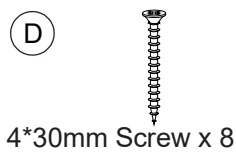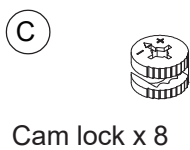
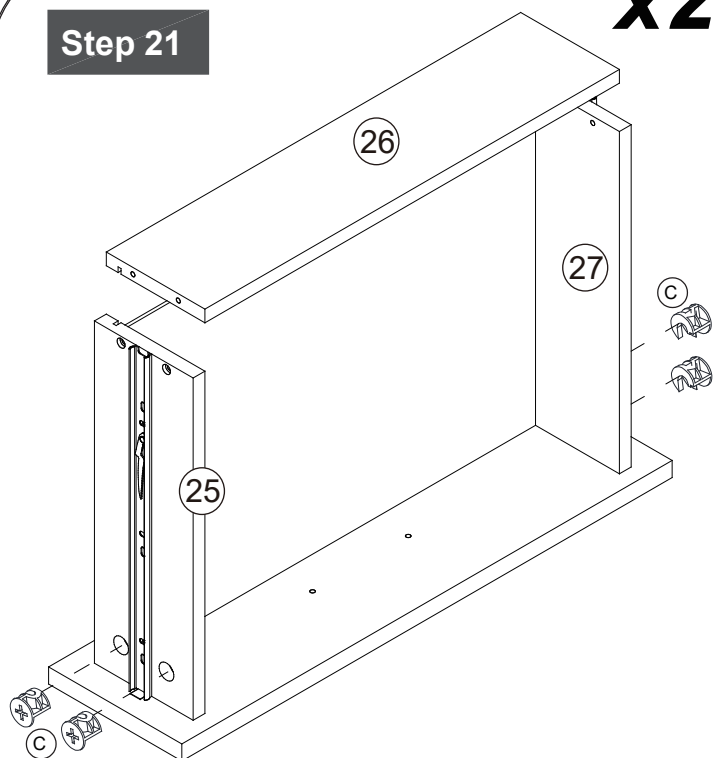


x2

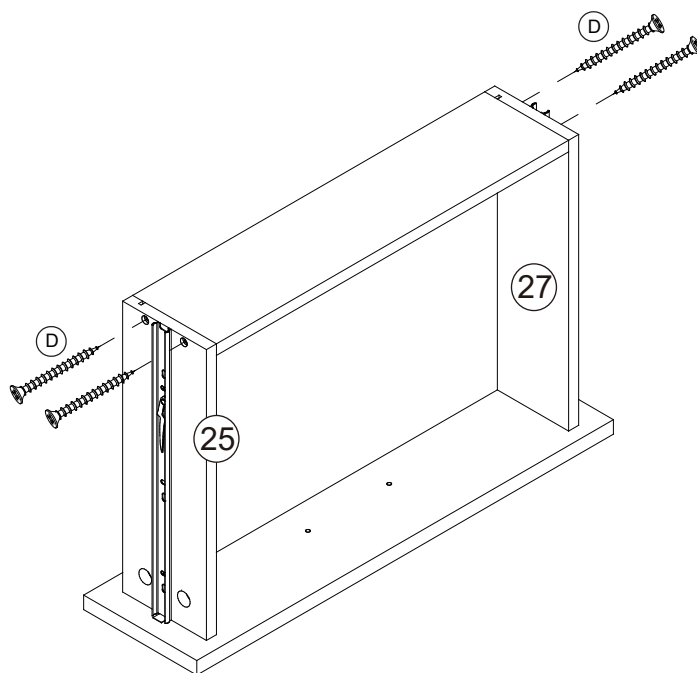

Step 22


x2

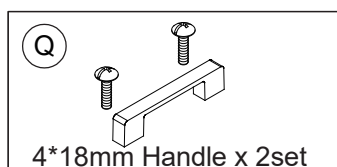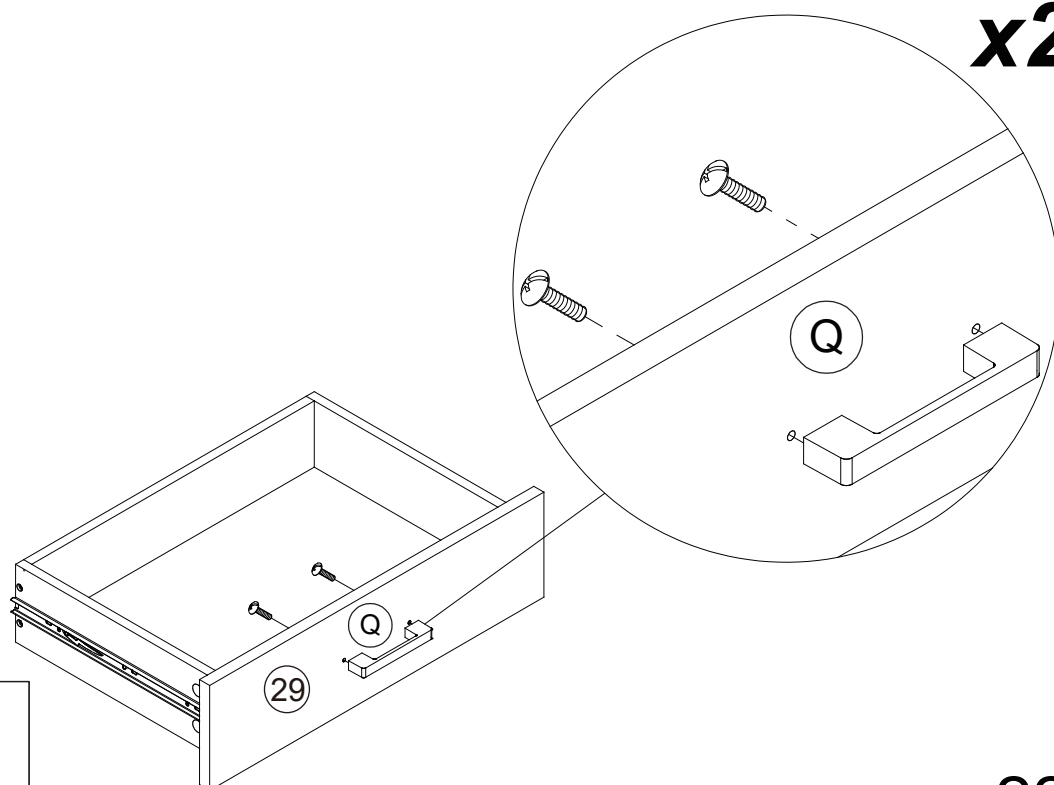

22

Assembly Instructions

Step 23

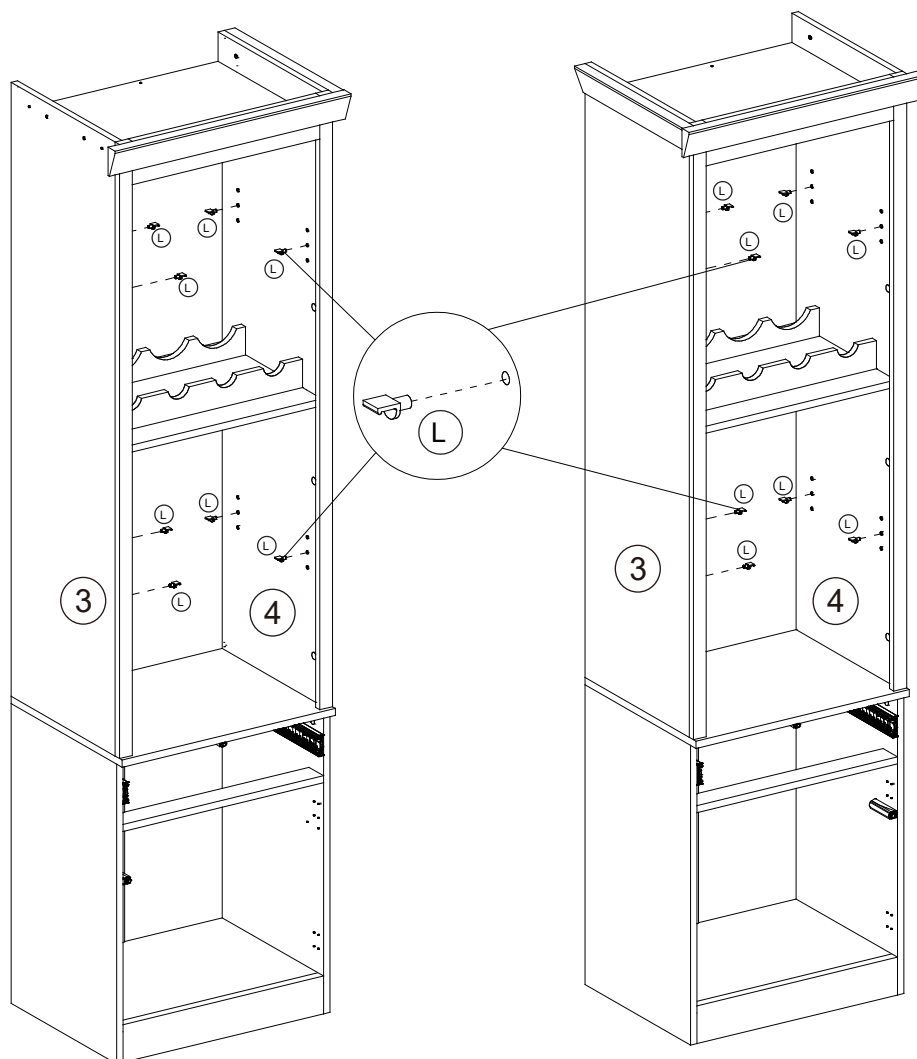


L




Shelf support pin x 16

Step 24

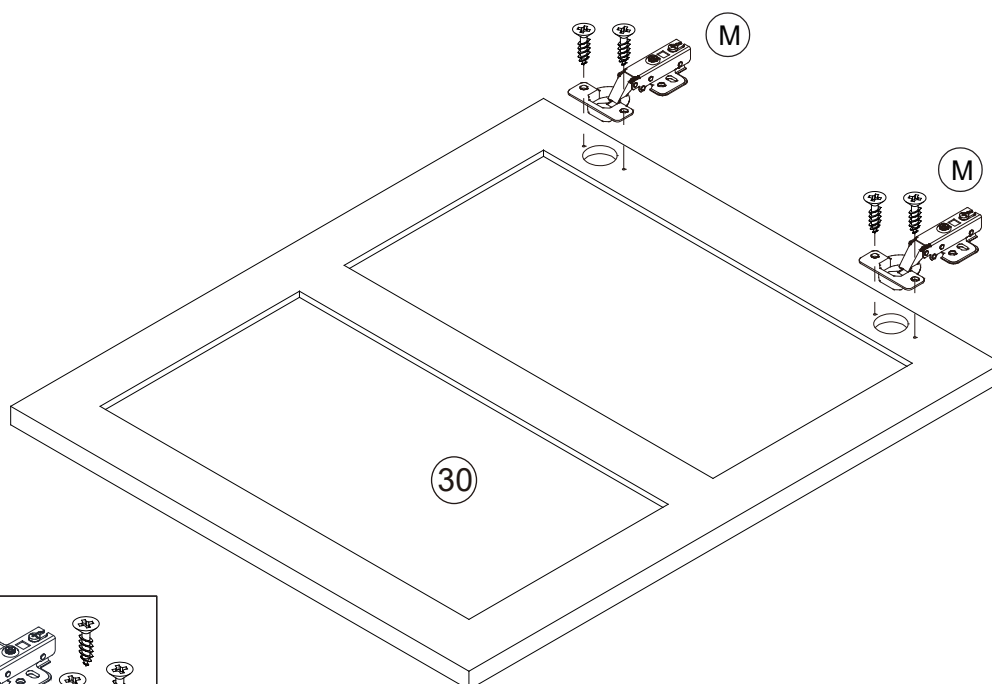

x2

M




3.5*14mm Hinge x 4set


23

Assembly Instructions


Step 25

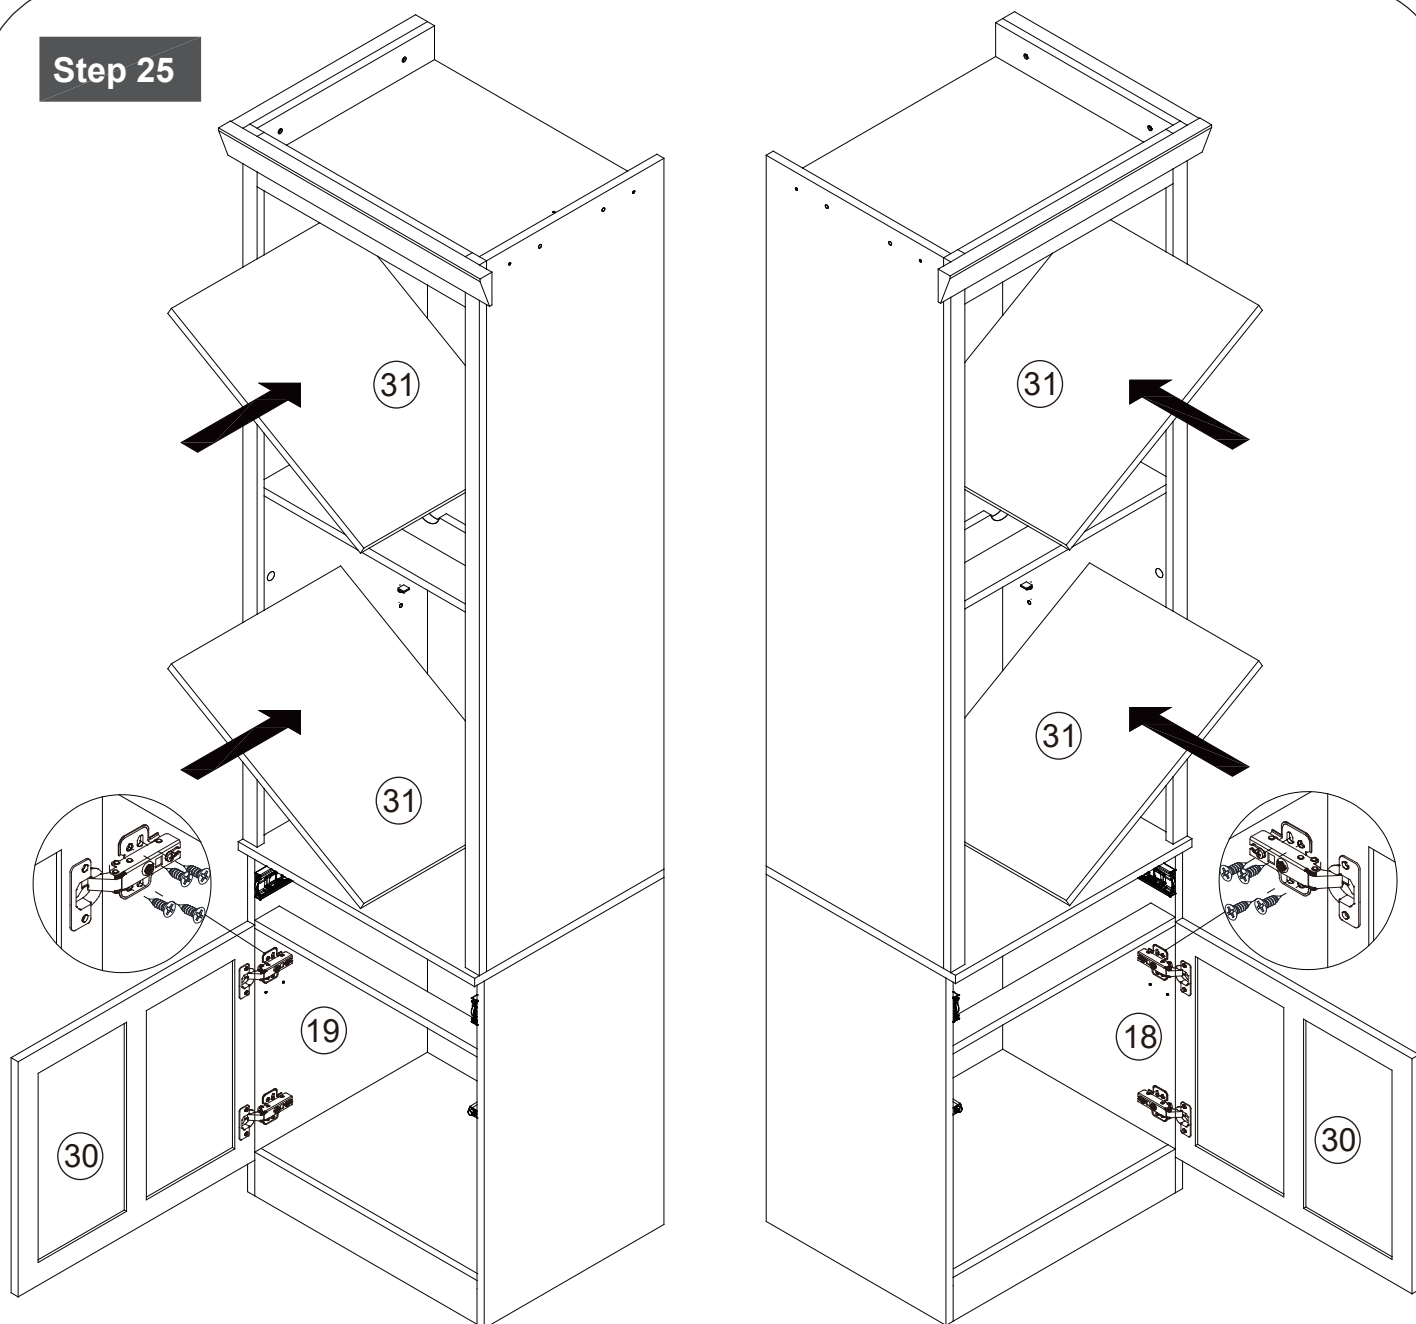


If the door can't close, please adjust the hinges as below.

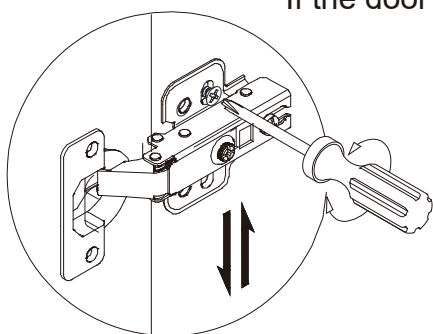

This is used to adjust the door panel in the up and down direction.

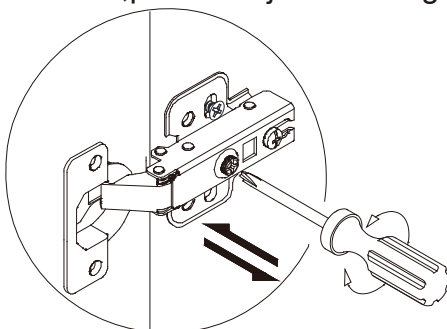


This is used to adjust the door panel in the left and right direction.

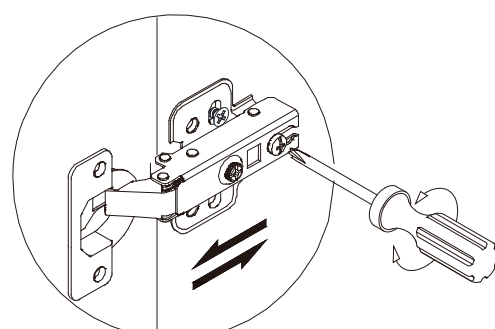

This is used to adjust the door panel in the front and rear.


Assembly Instructions

Step 26

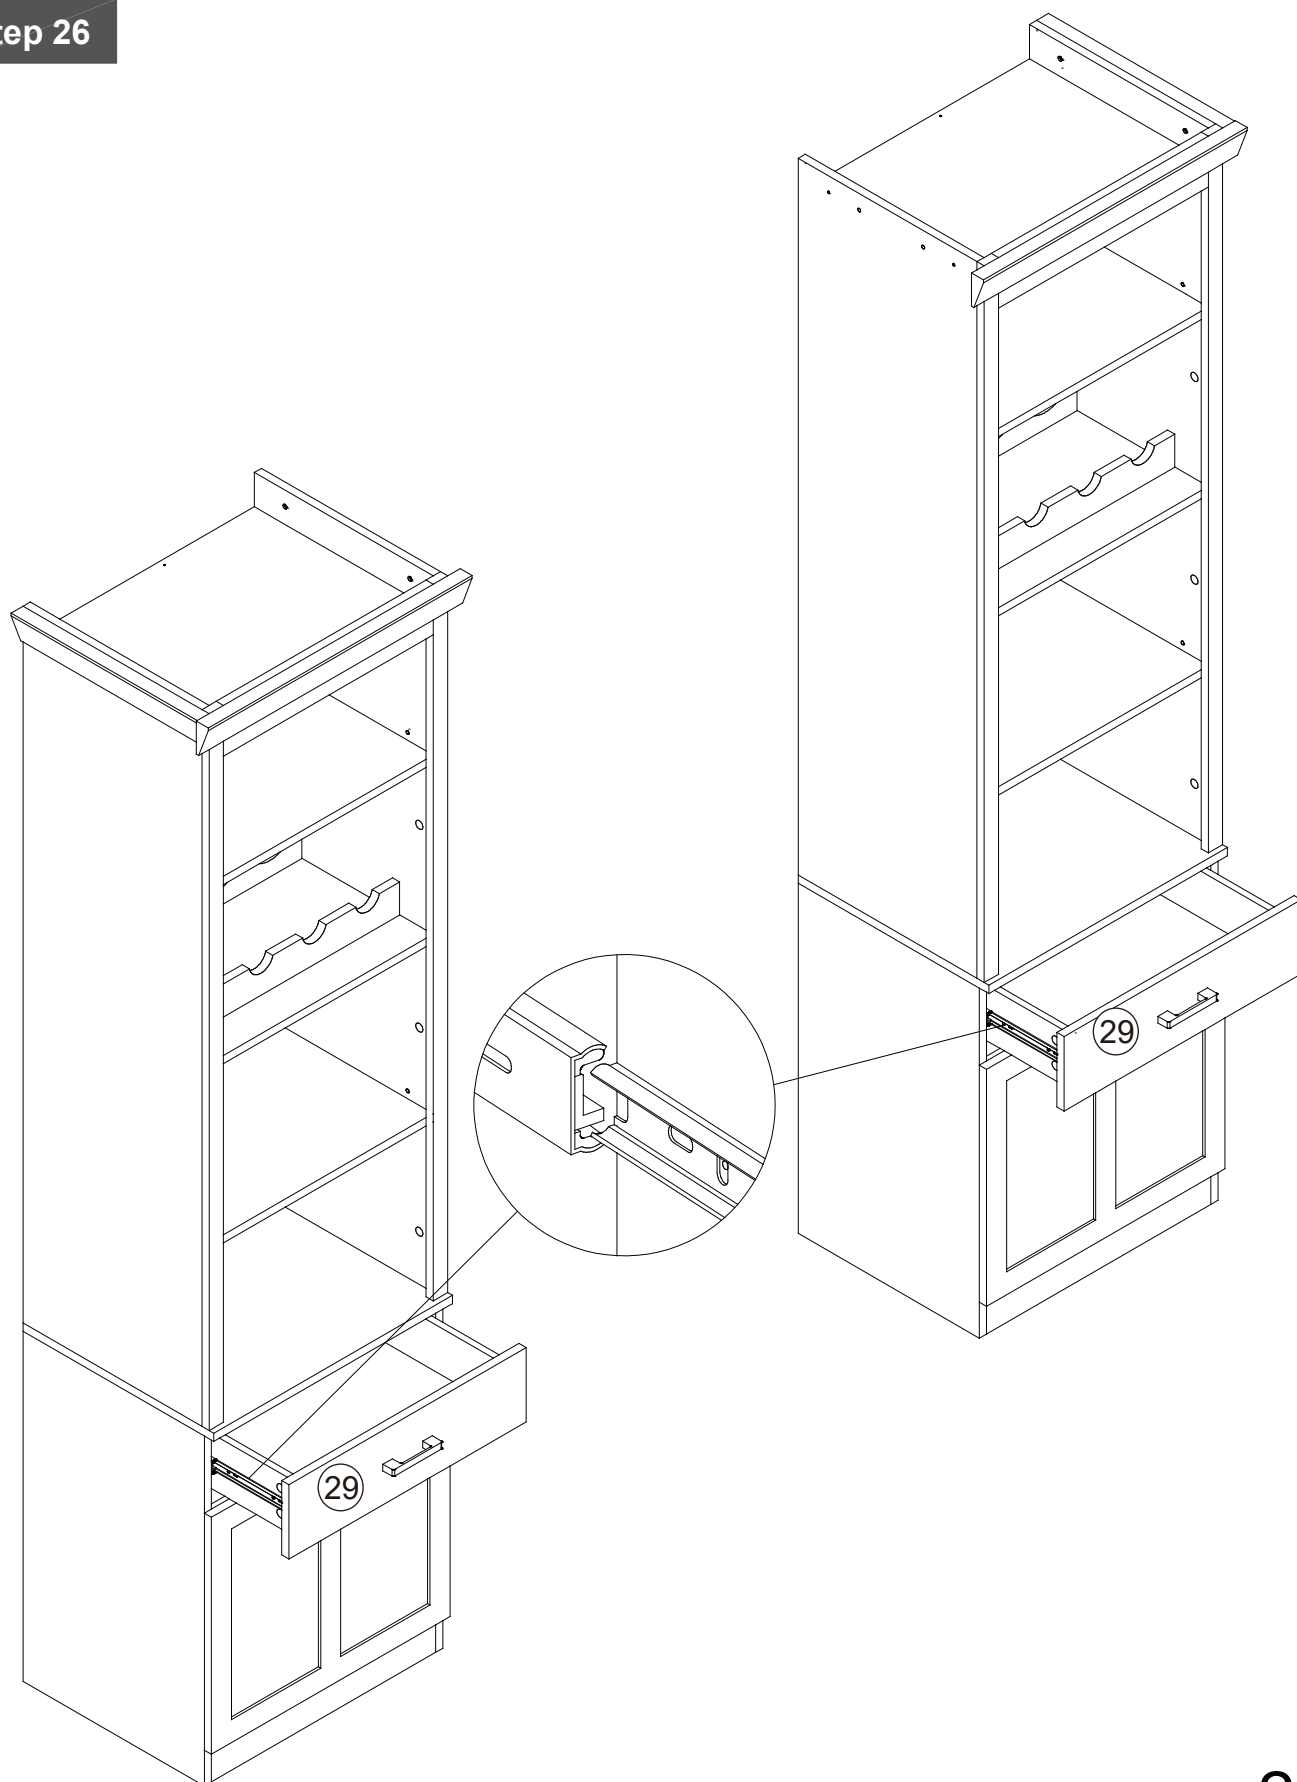


Assembly Instructions

Step 27


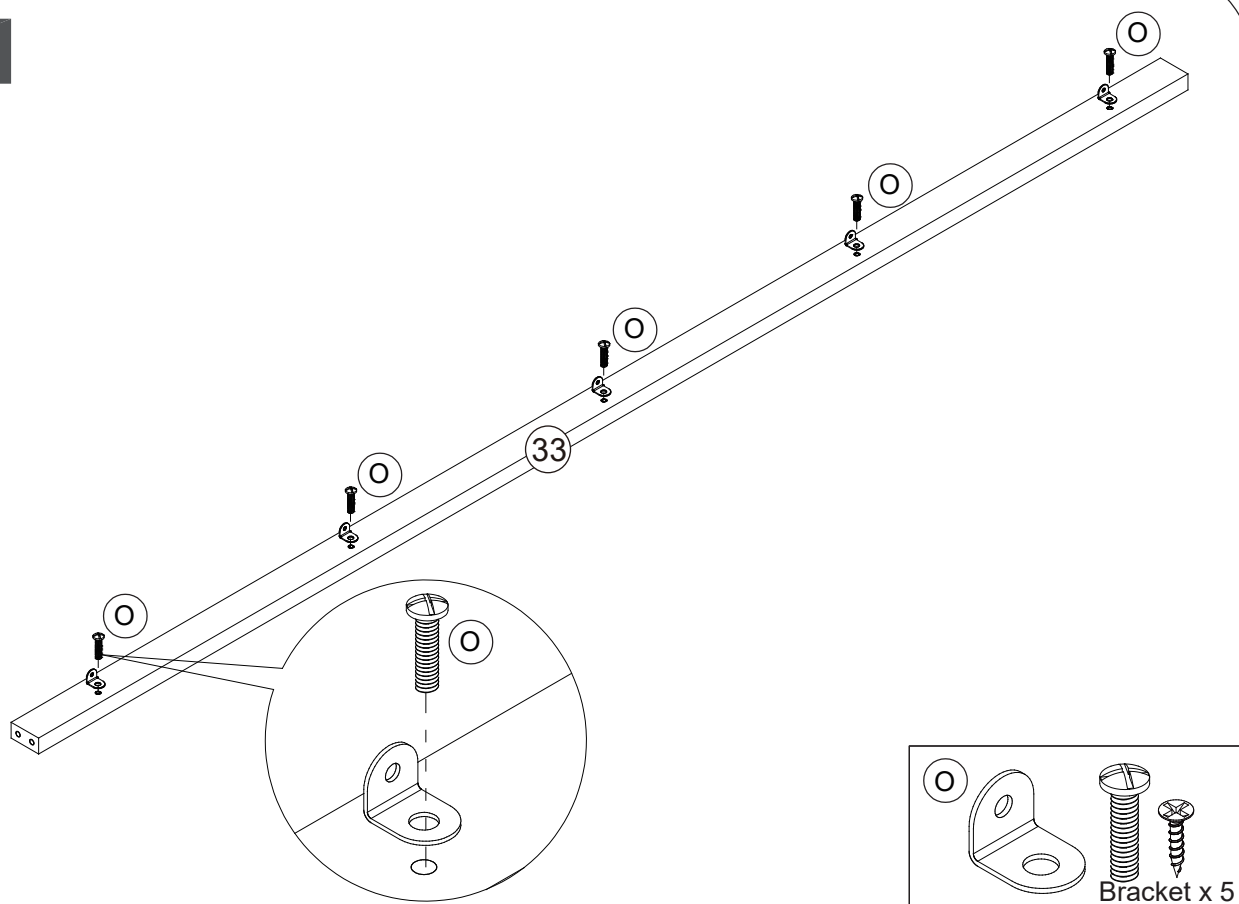


Step 28



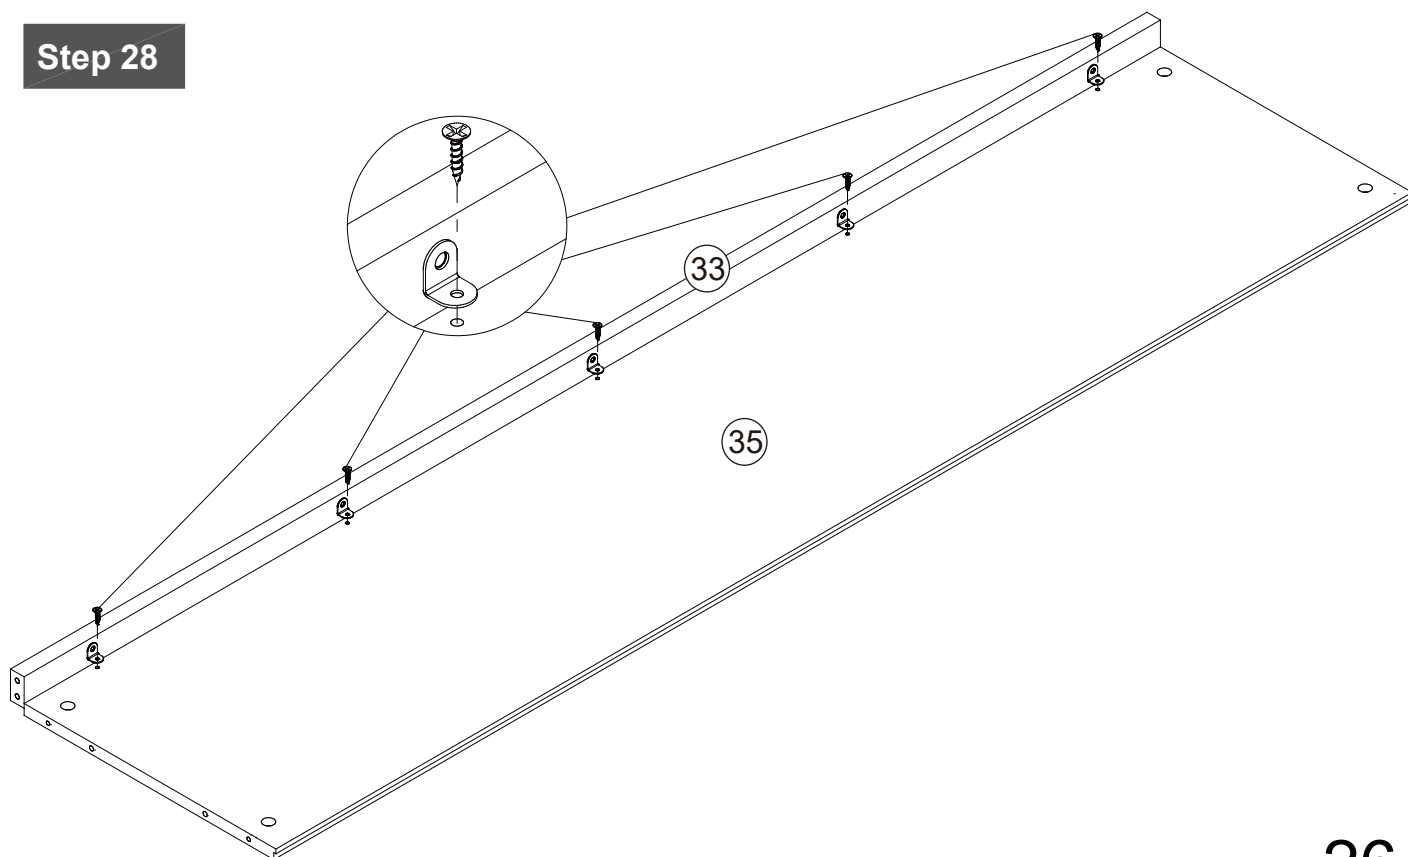


Assembly Instructions

Step 29

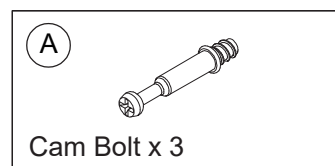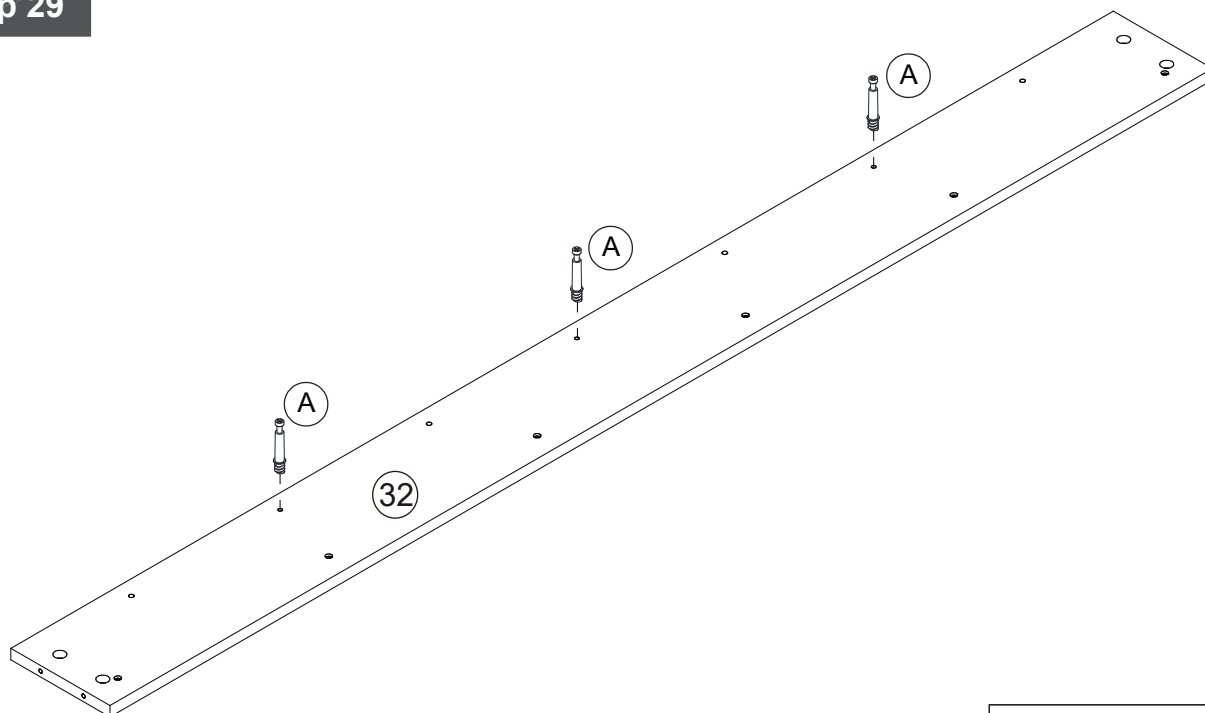


Step 30

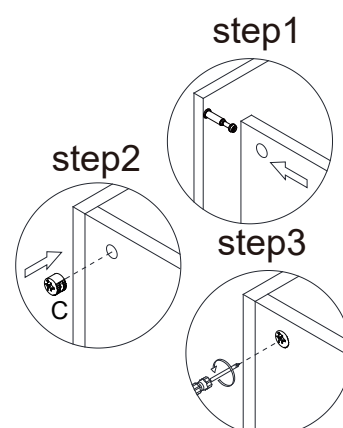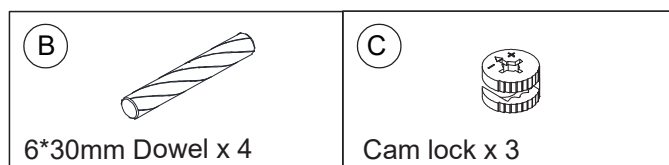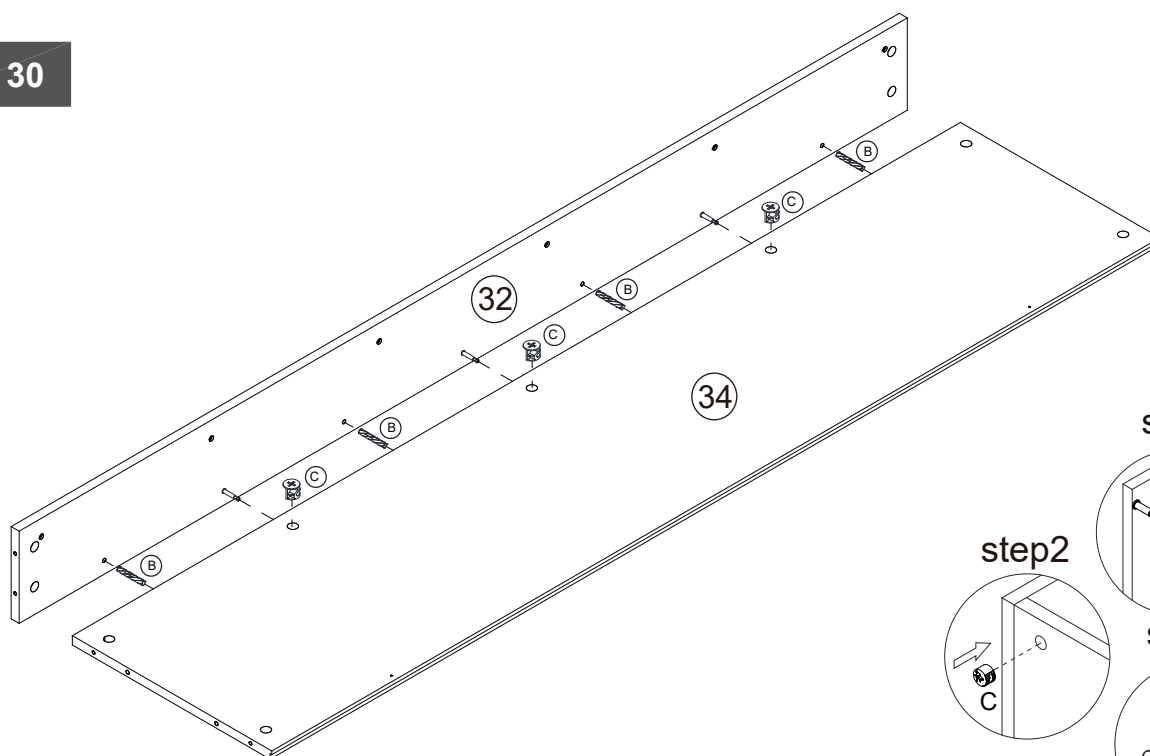


Assembly Instructions

Step 31

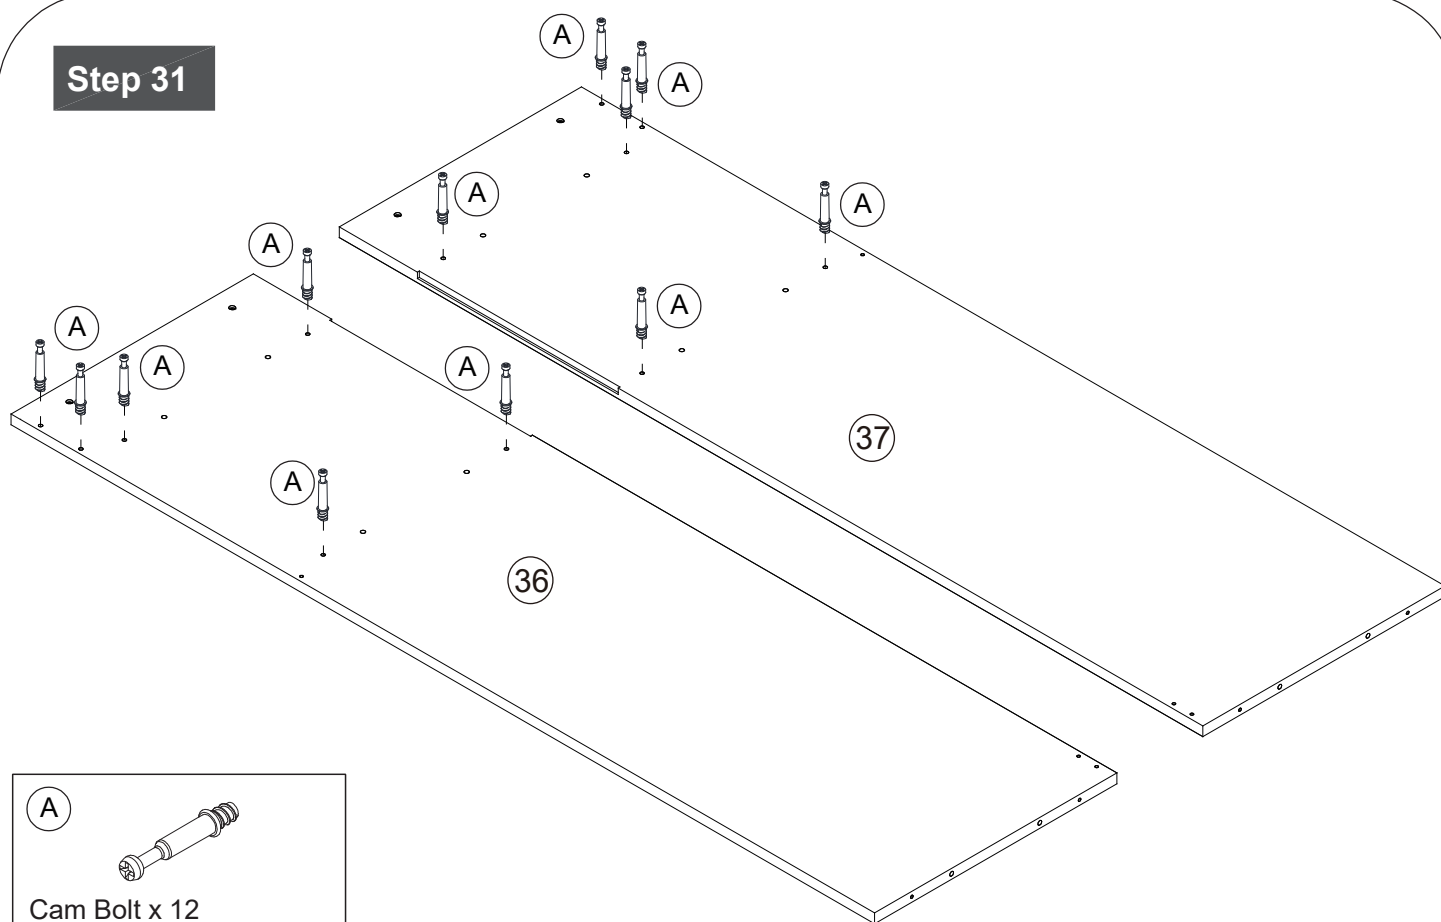

Step 32

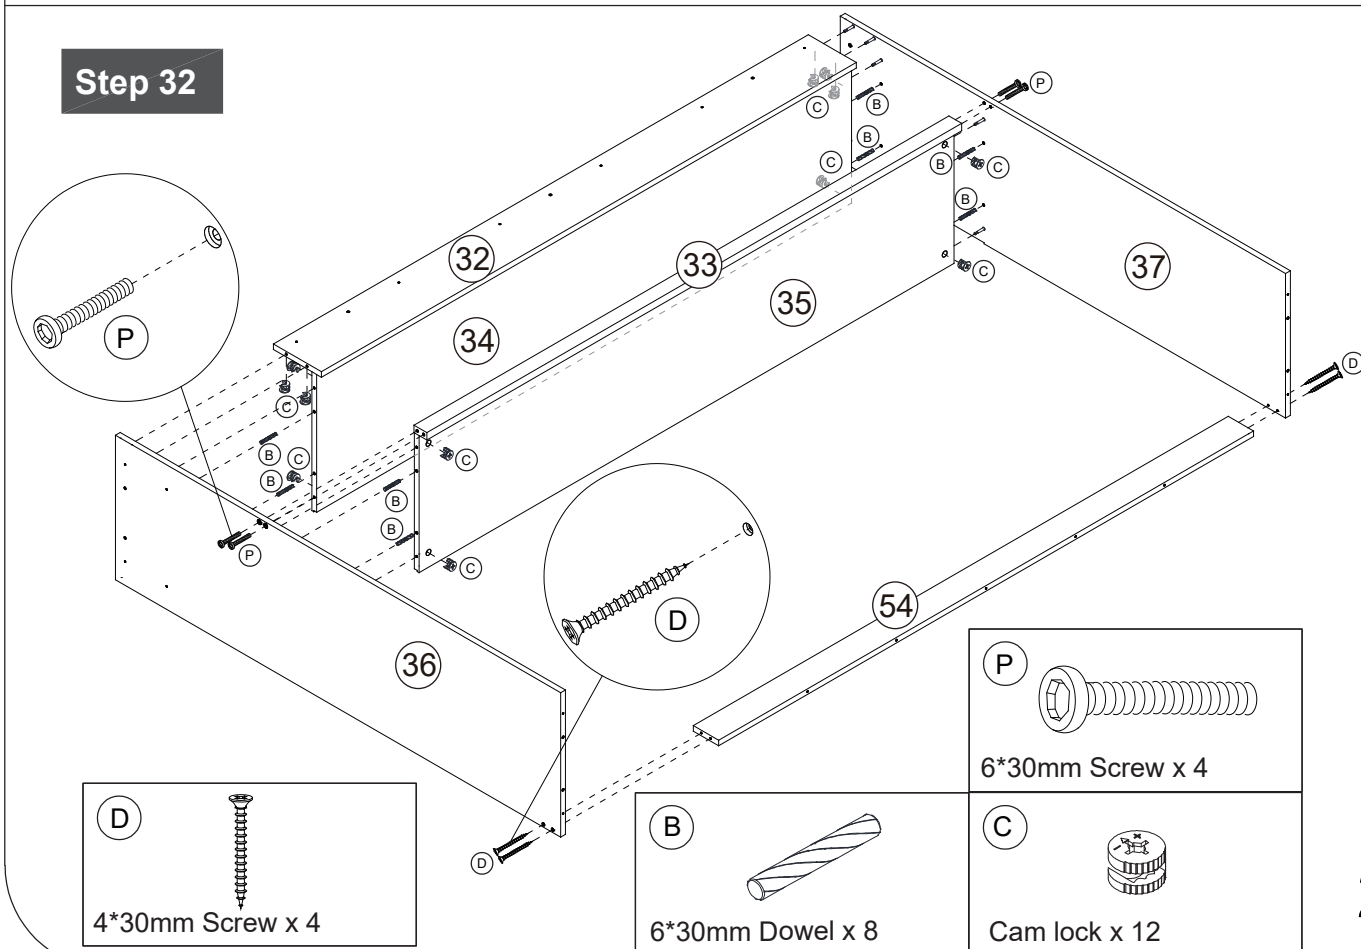


Assembly Instructions


Step 33

Please flip carefully!

It's better if two people work together in this step.

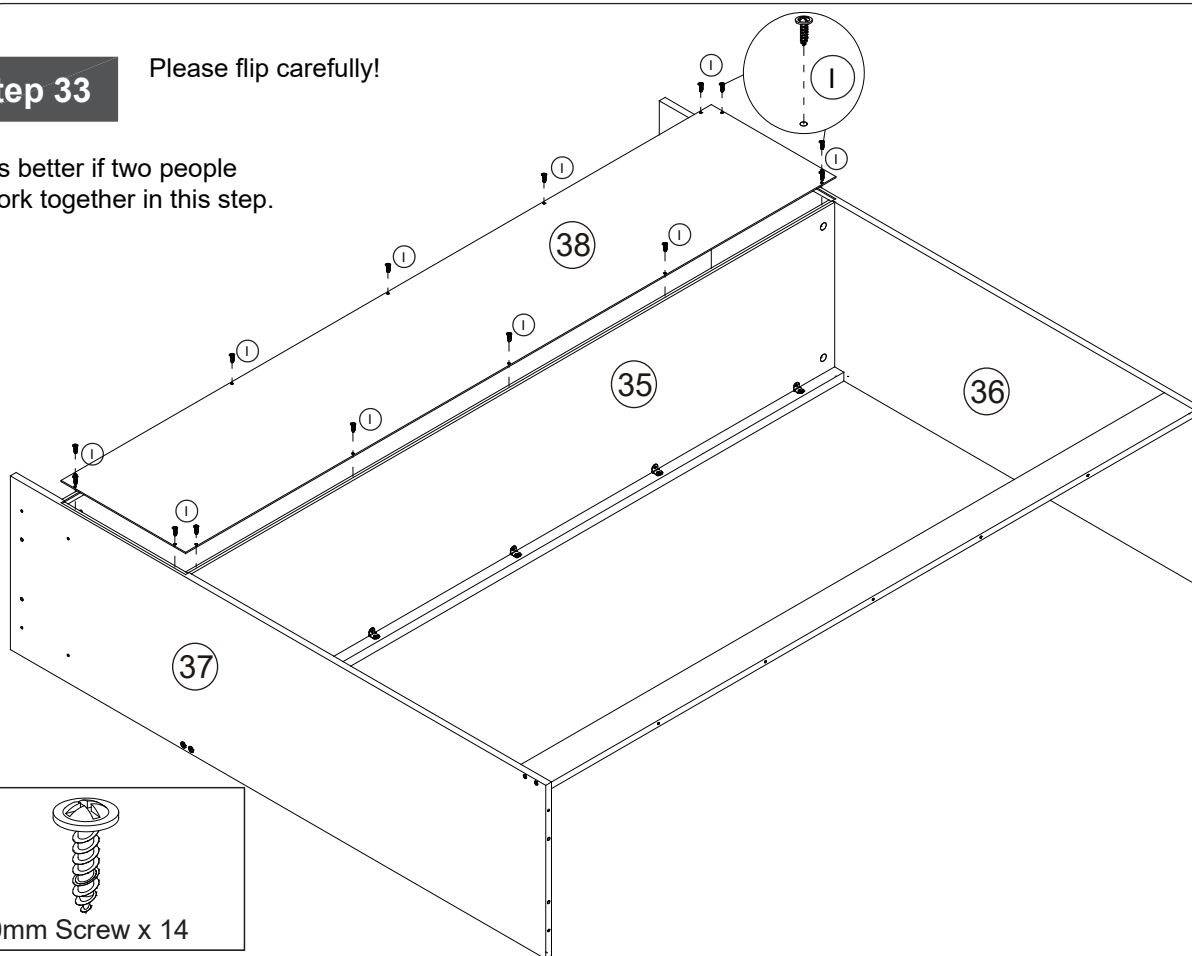


I




2.6*10mm Screw x 14

Step 34

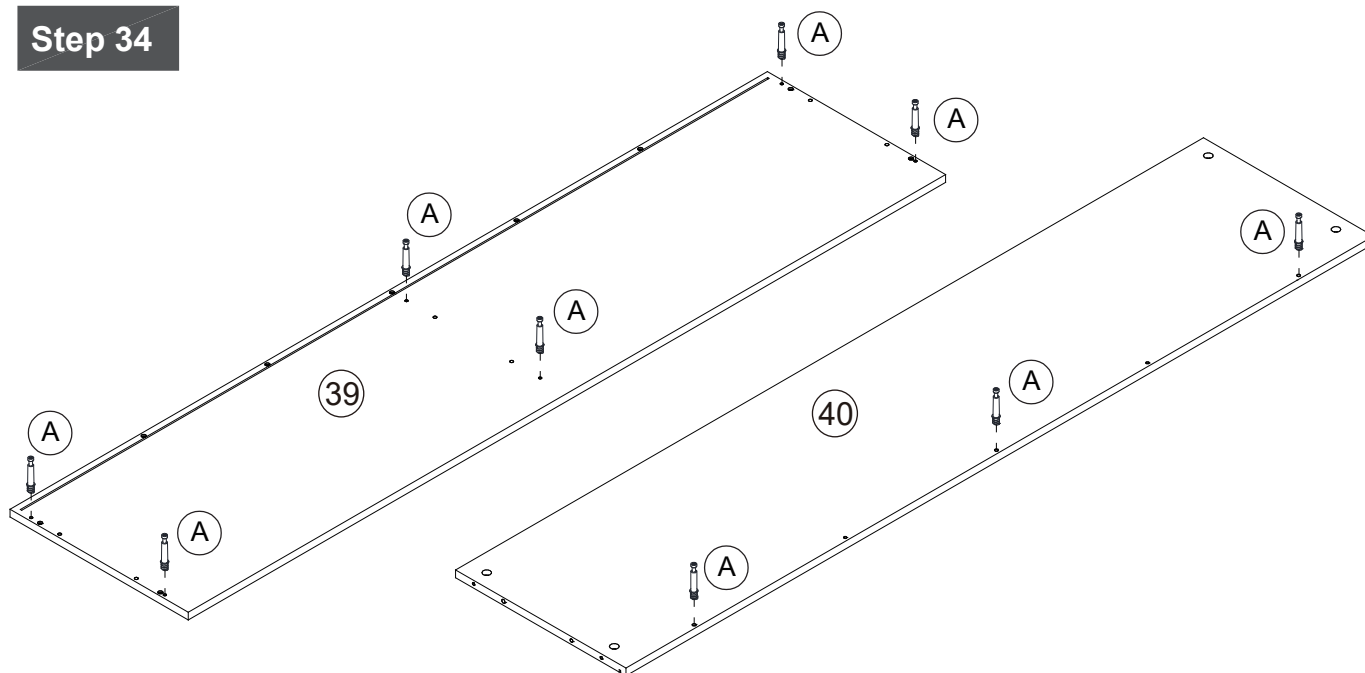


A




Cam Bolt x 9

Assembly Instructions

Step 35

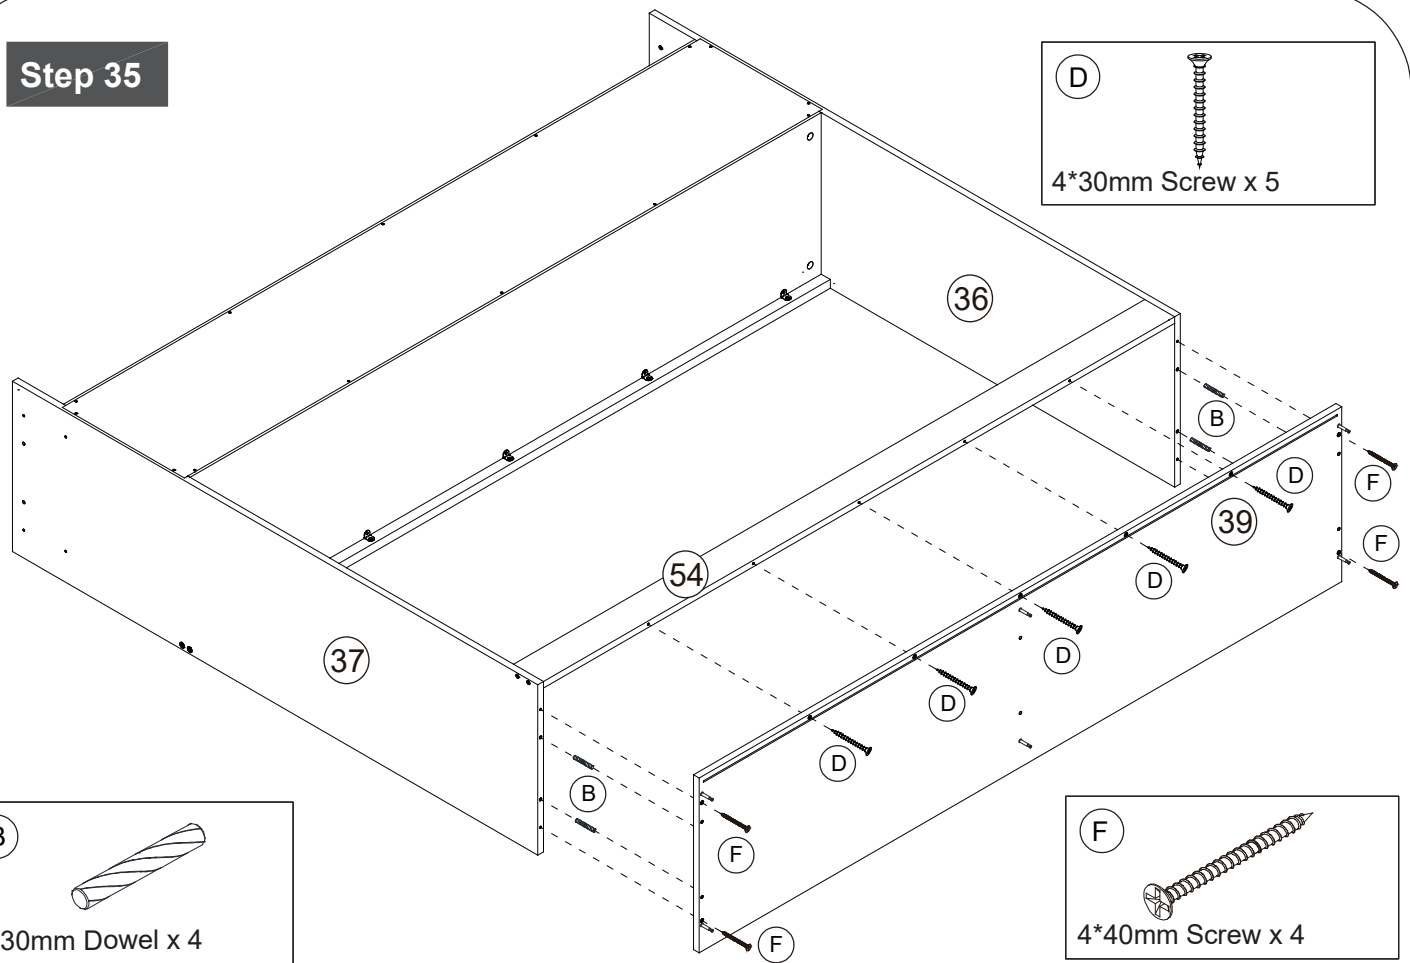




Step 36

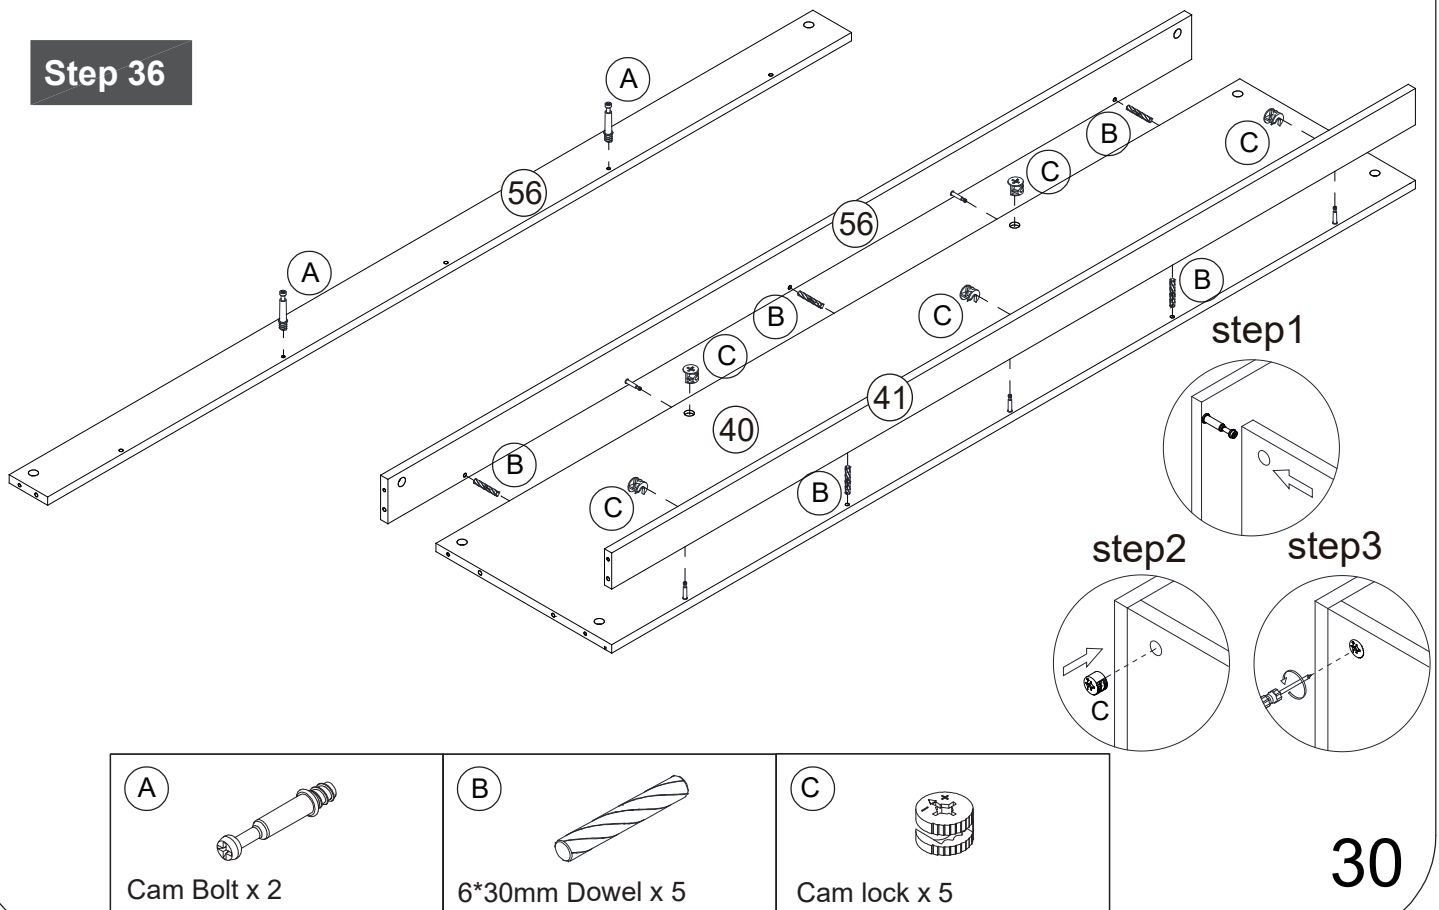


Assembly Instructions



Step 37

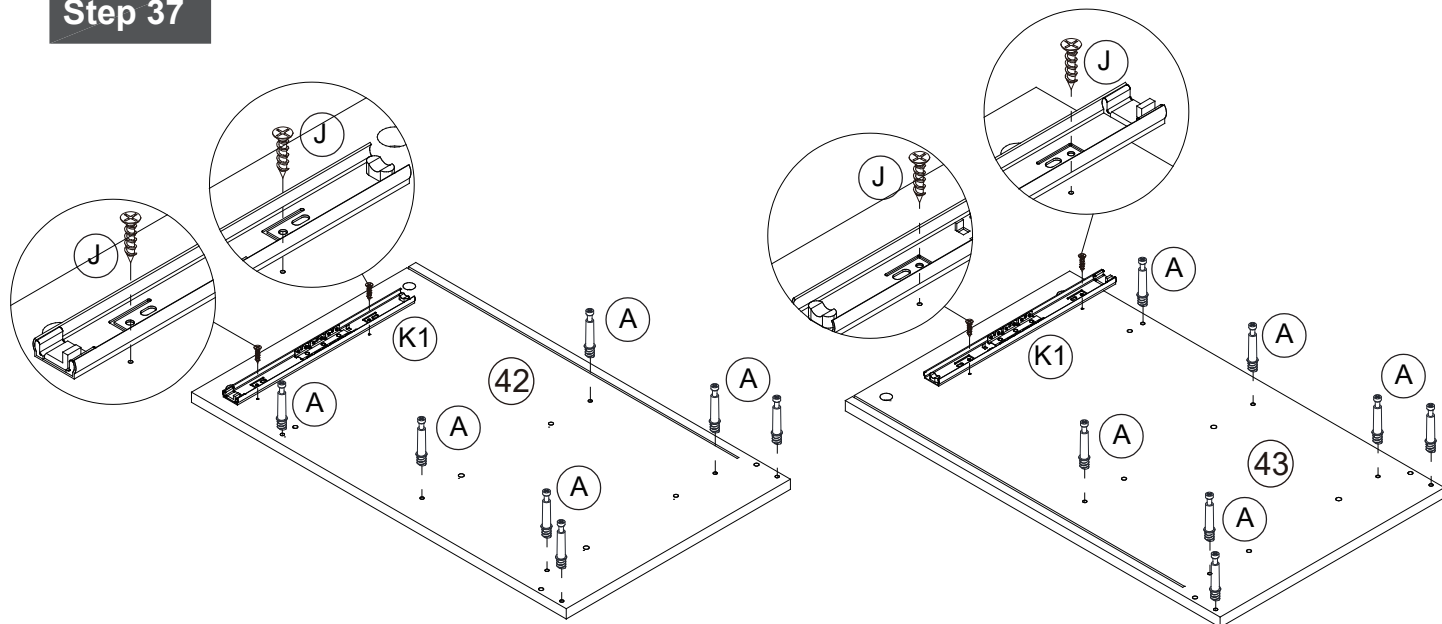

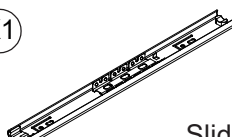
 (K1)	 (J)	 (A)
Slide x 2	3*12mm Screw x 4	Cam Bolt x 14

Step 38

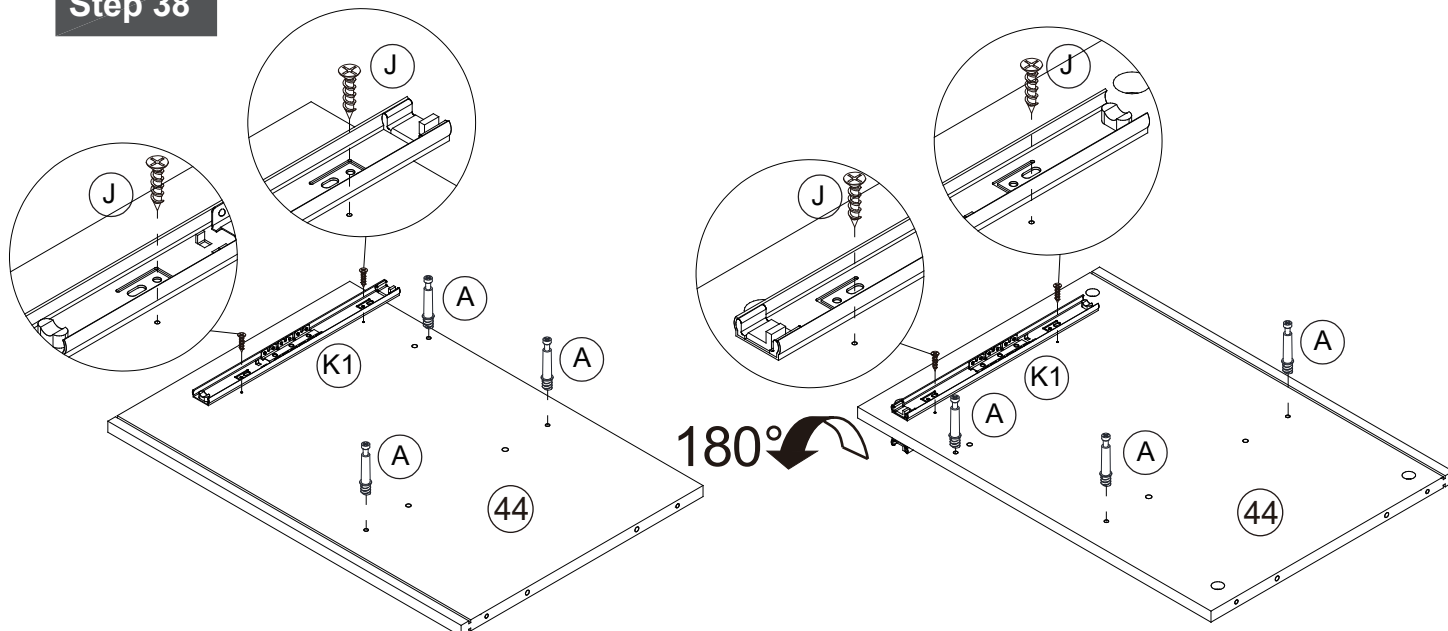


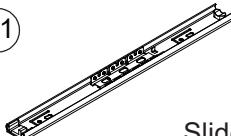 (K1)	 (J)	 (A)
Slide x 2	3*12mm Screw x 4	Cam Bolt x 6

Step 39

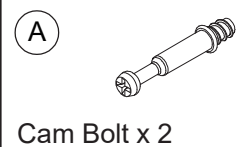


Step 40

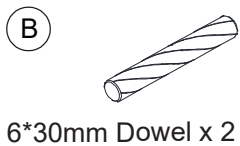


Assembly Instructions

Step 41

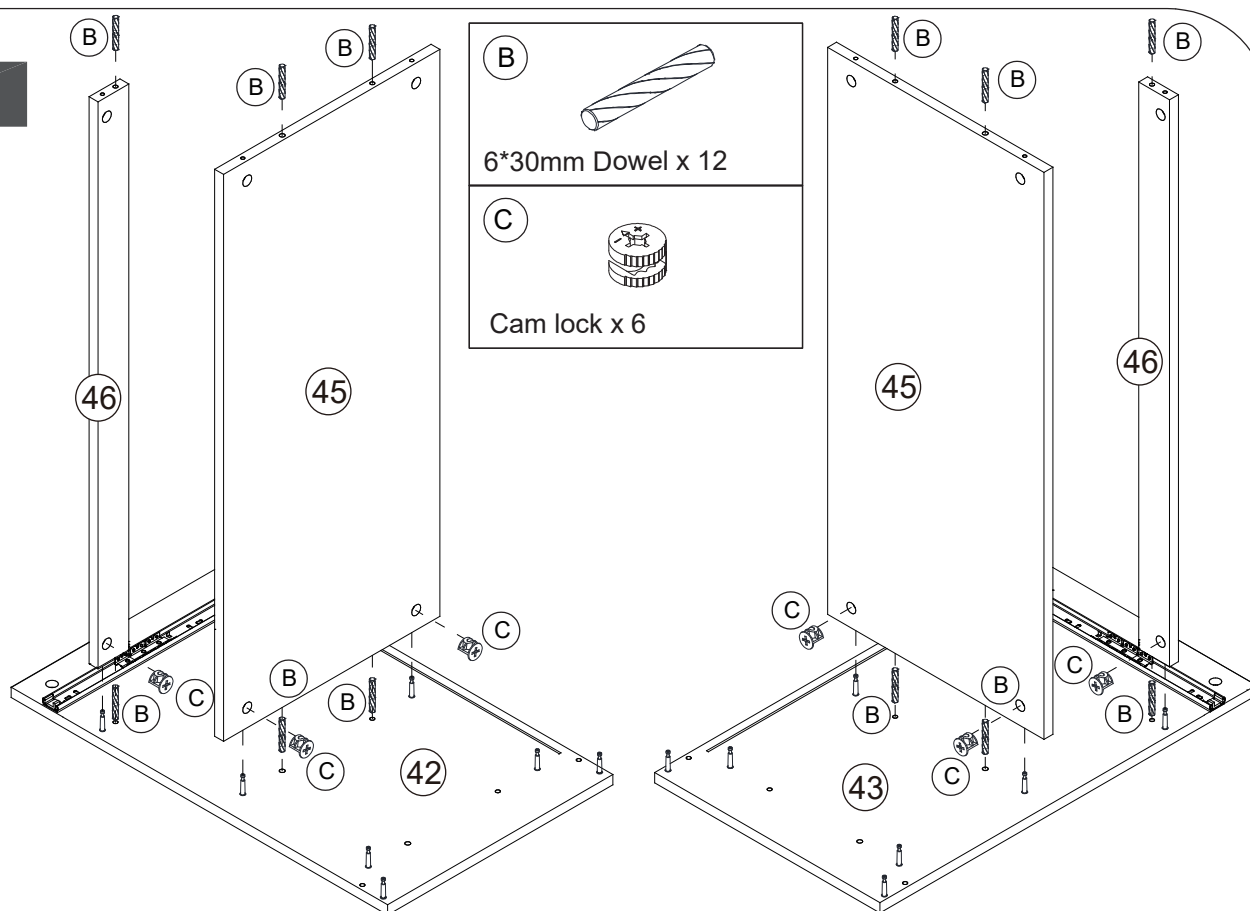

Step 42


It's better if two people work together in next steps.

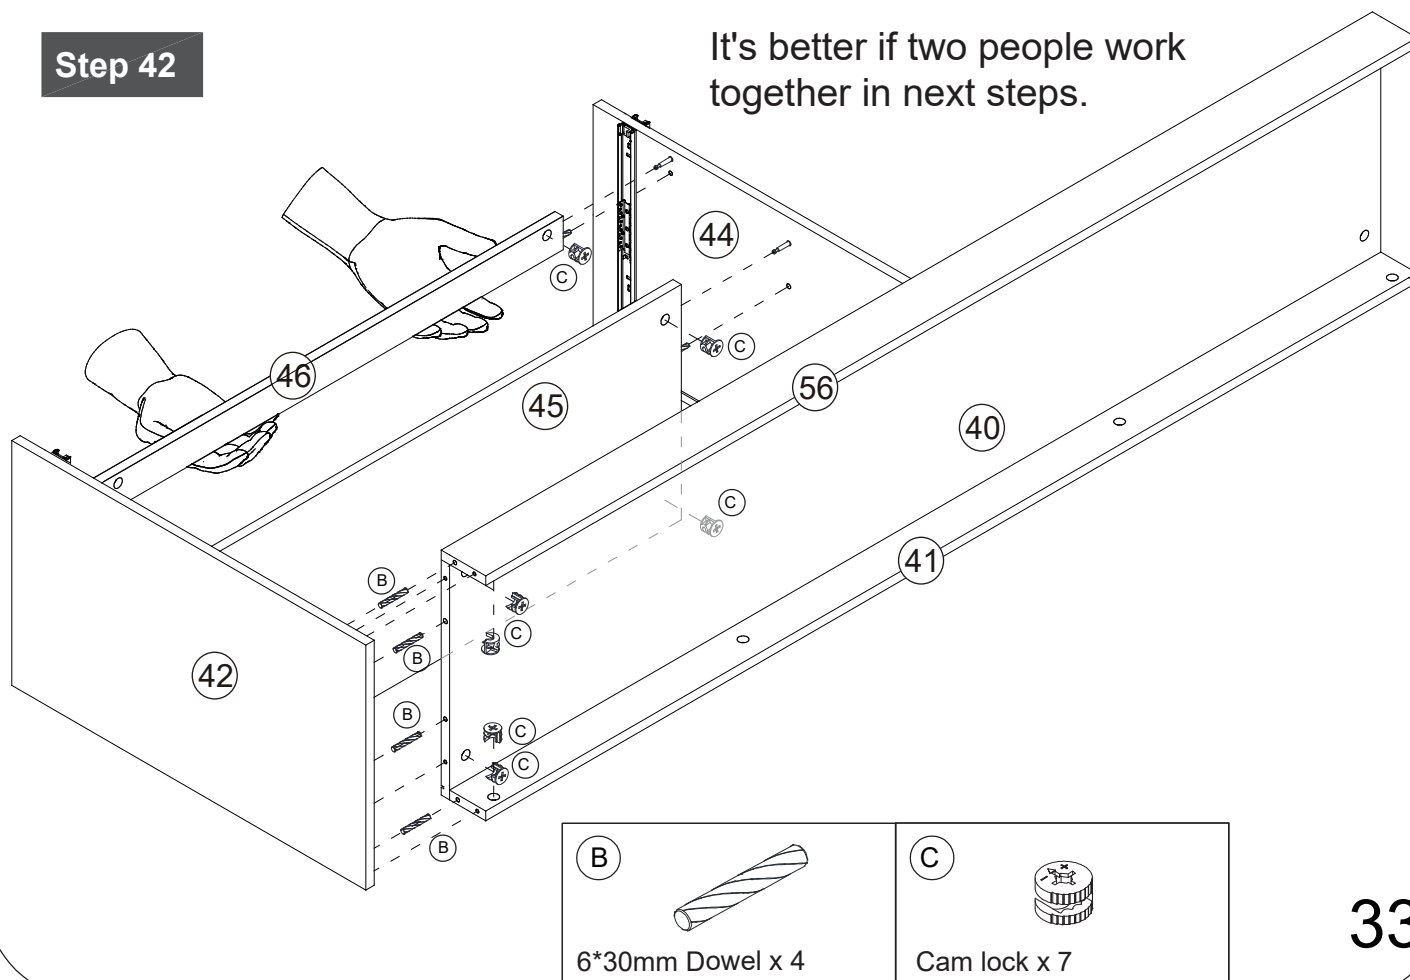


Assembly Instructions

Step 43



step1

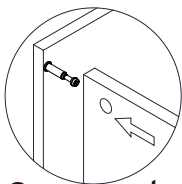


step2

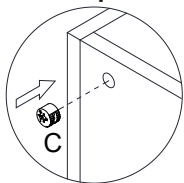

step3

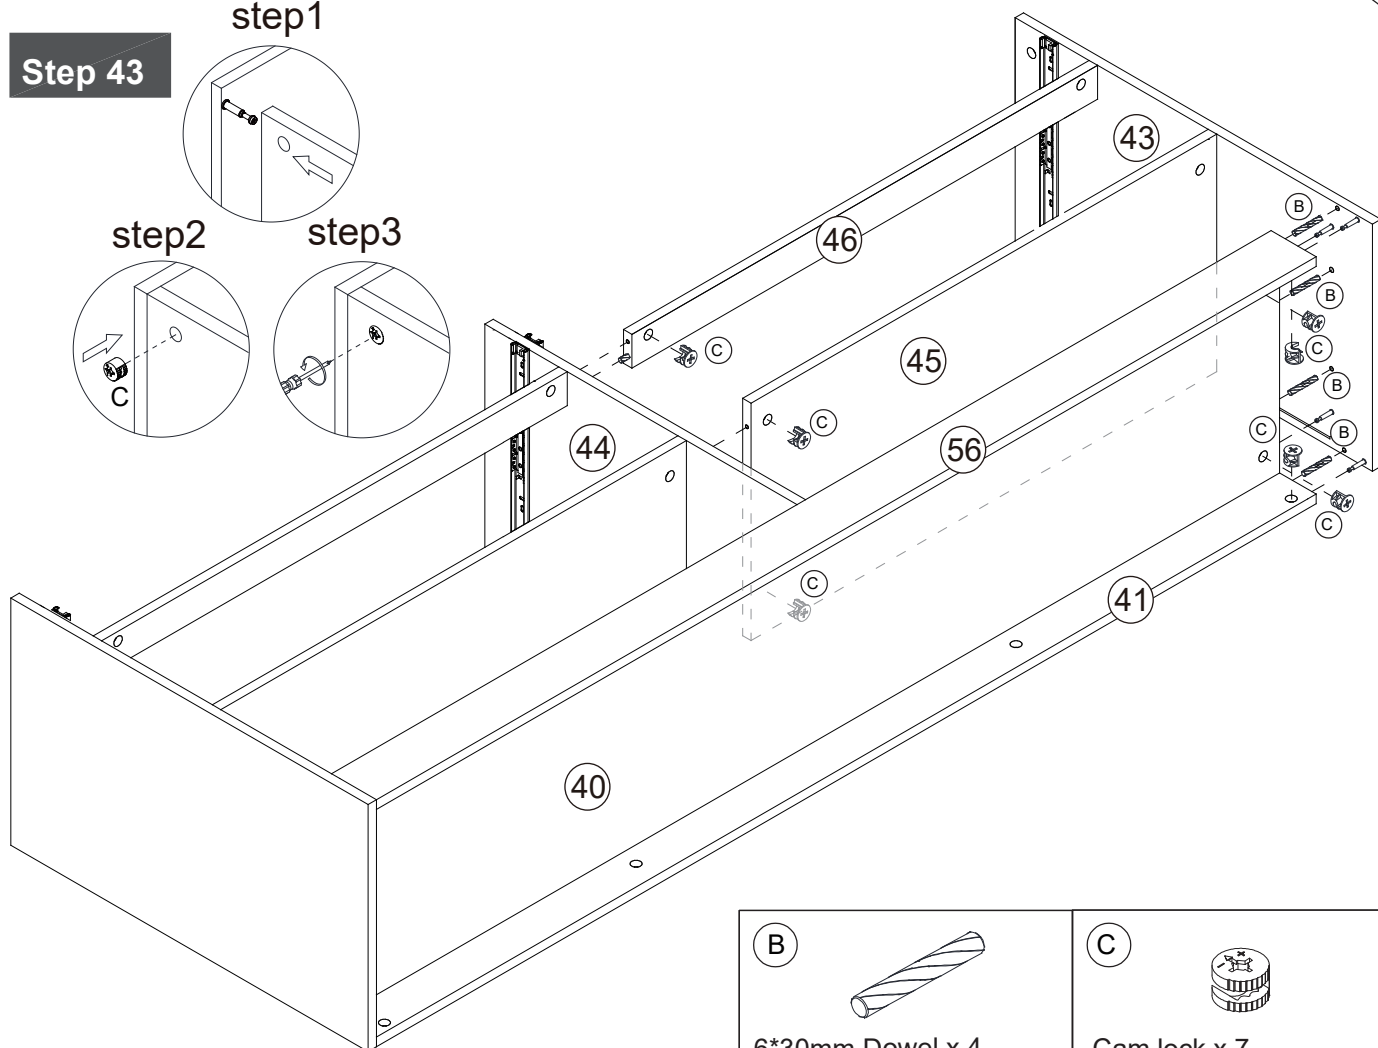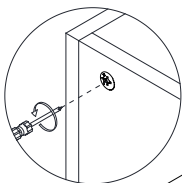

(B)





6*30mm Dowel x 4

(C)




Cam lock x 7

Step 44

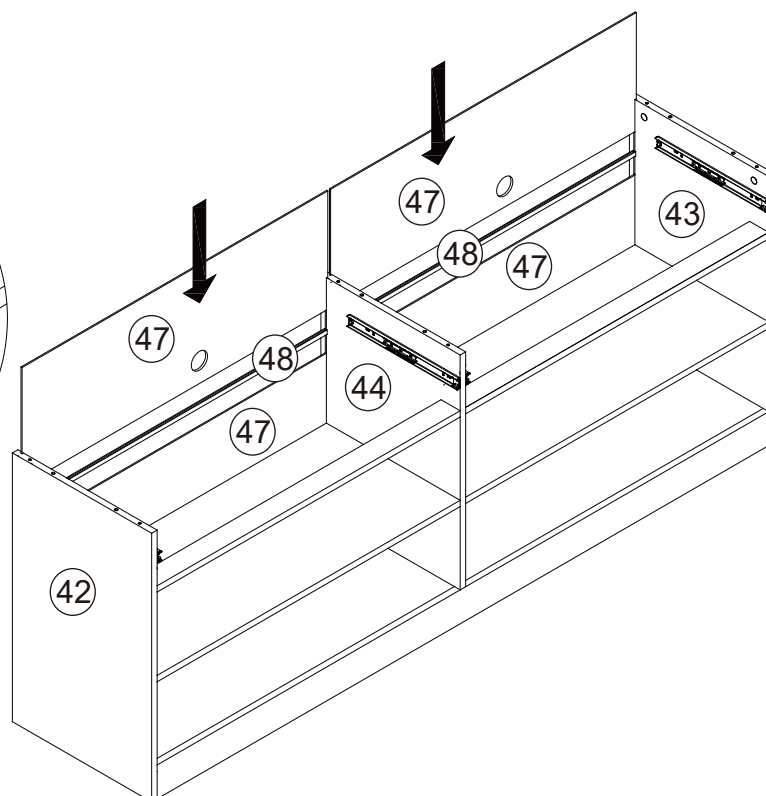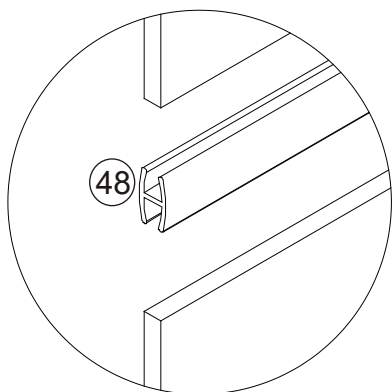


Assembly Instructions


Step 45

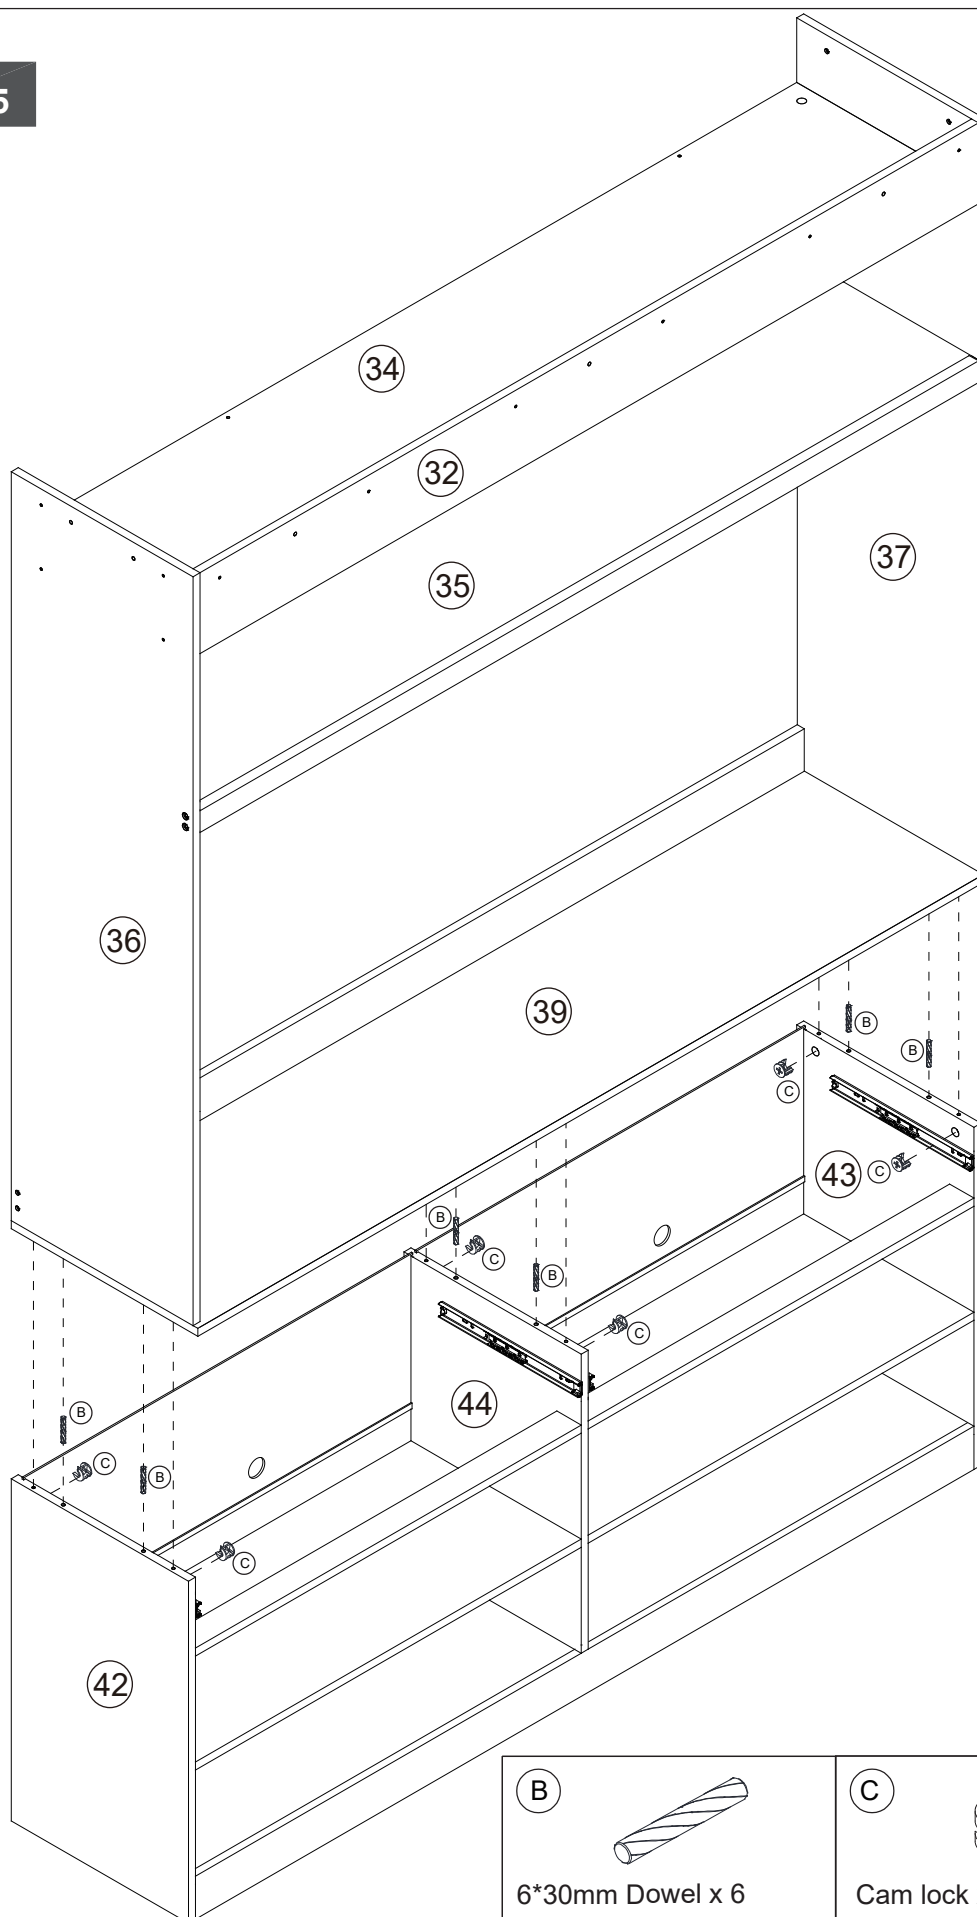


step1

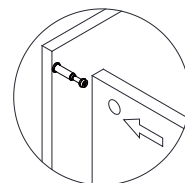


step2

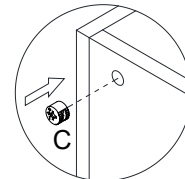

step3

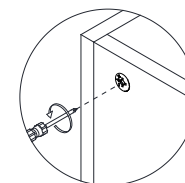

(B)



6*30mm Dowel x 6



(C)



Cam lock x 6




Assembly Instructions

Step 46

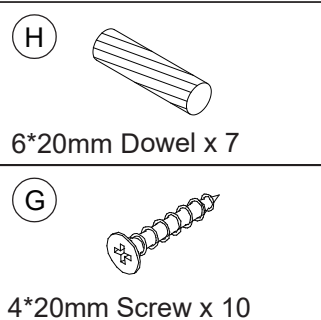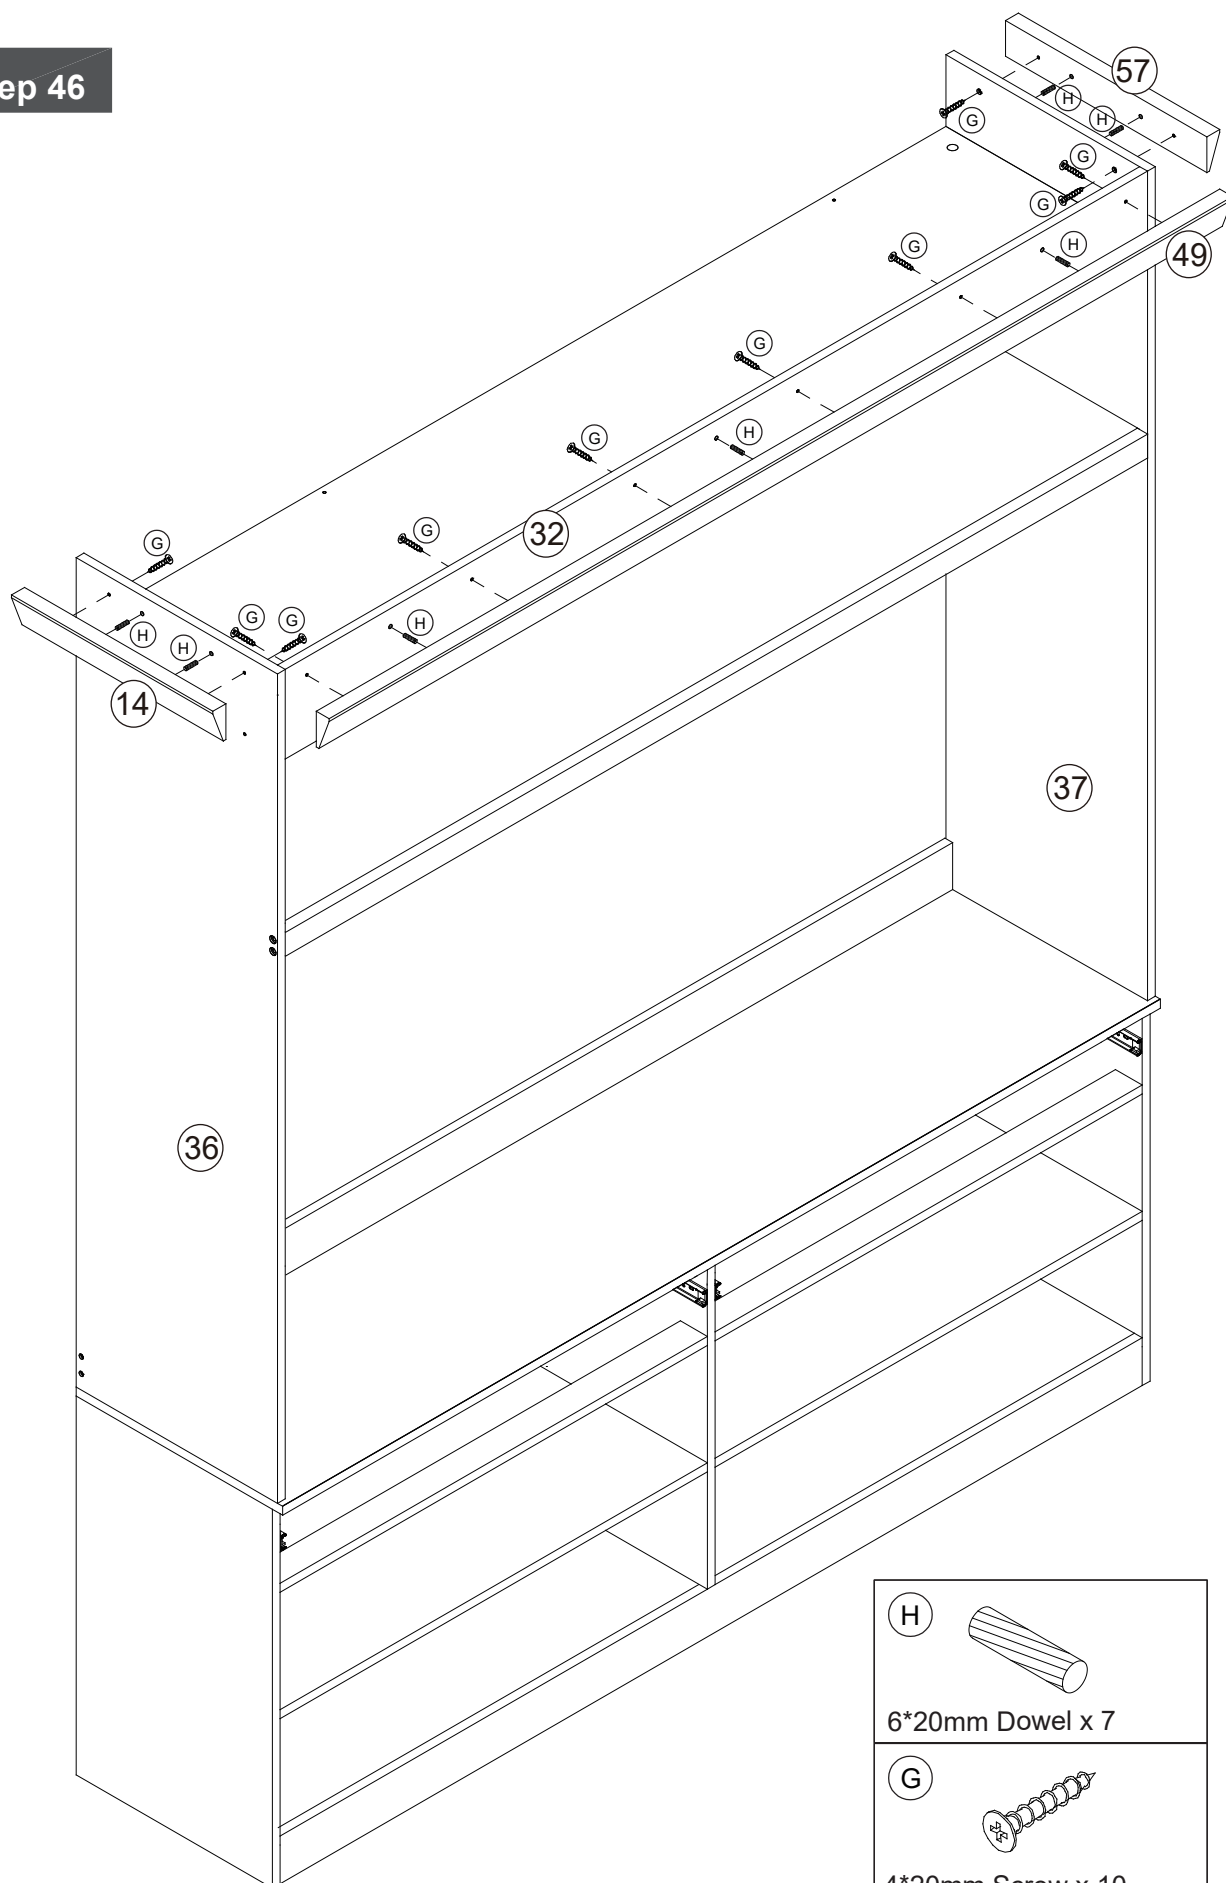

Assembly Instructions


Step 47

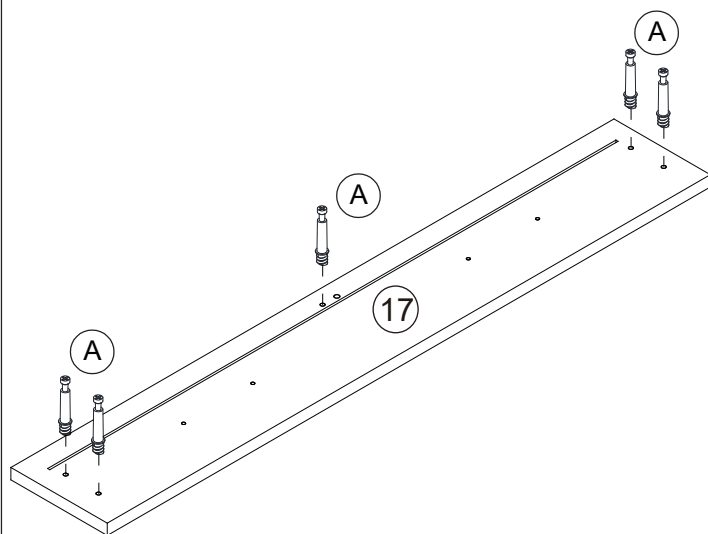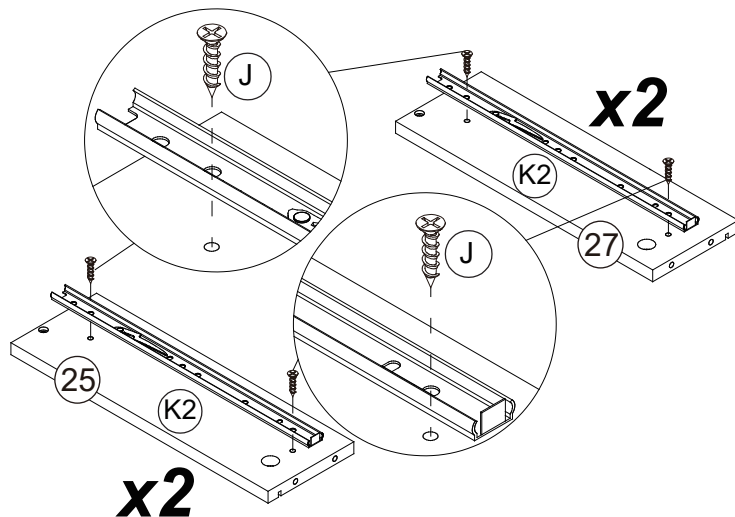

Cam Bolt x 5






3*12mm Screw x 8



Slide x 4

Step 48

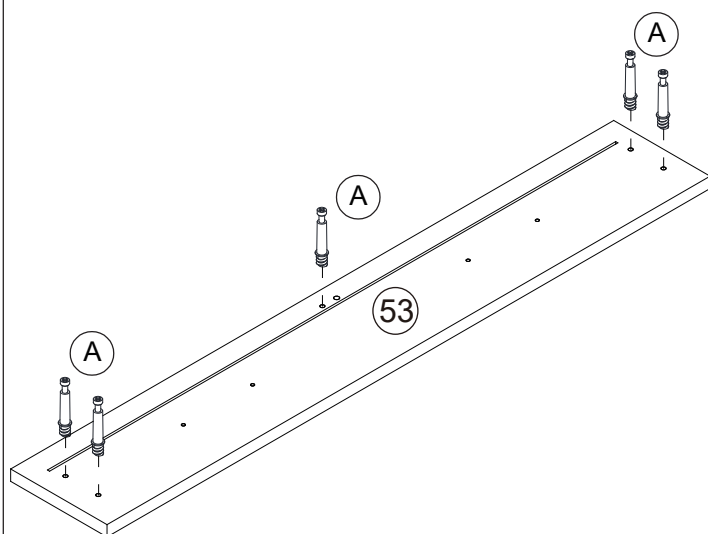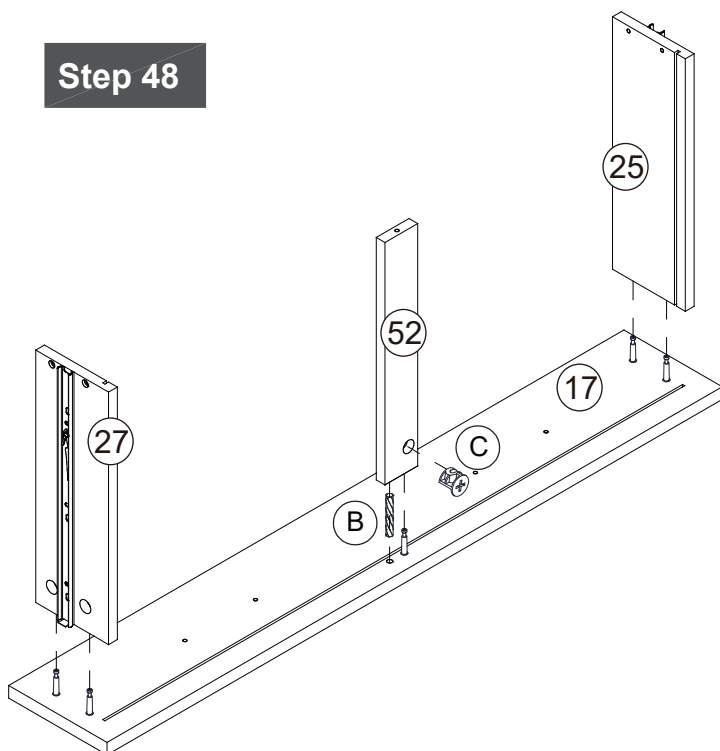

Cam Bolt x 5







6*30mm Dowel x 1







Cam lock x 1

Assembly Instructions

Step 49

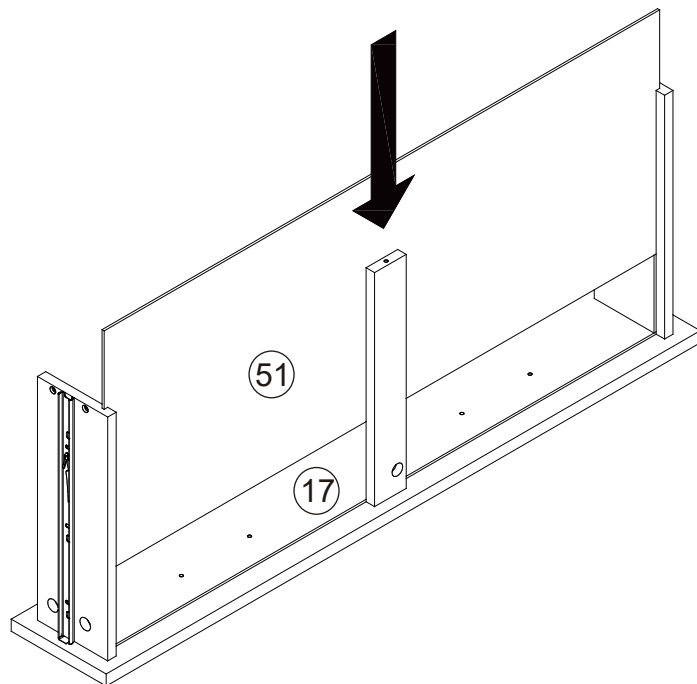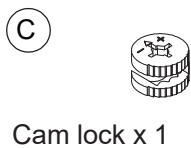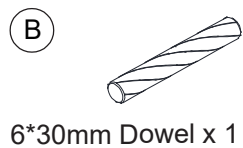
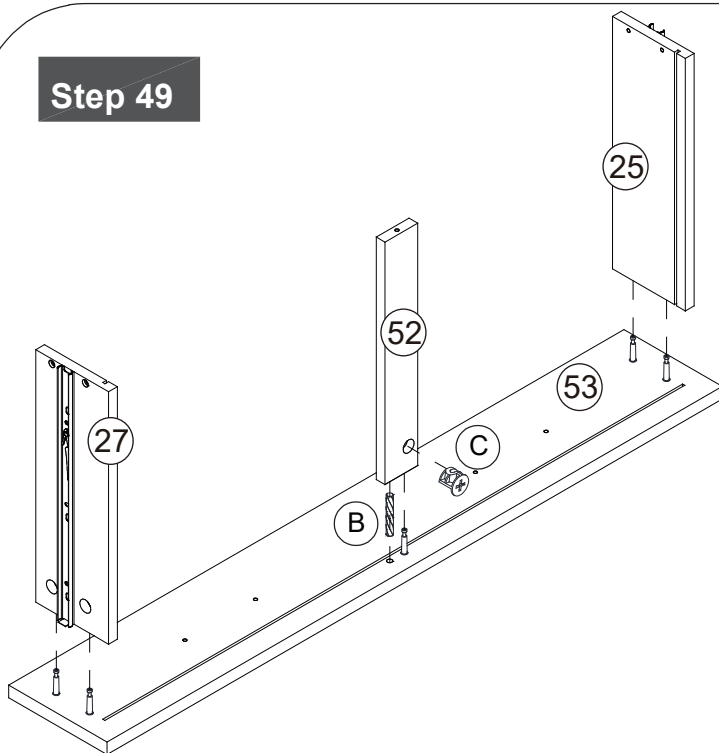


Step 50

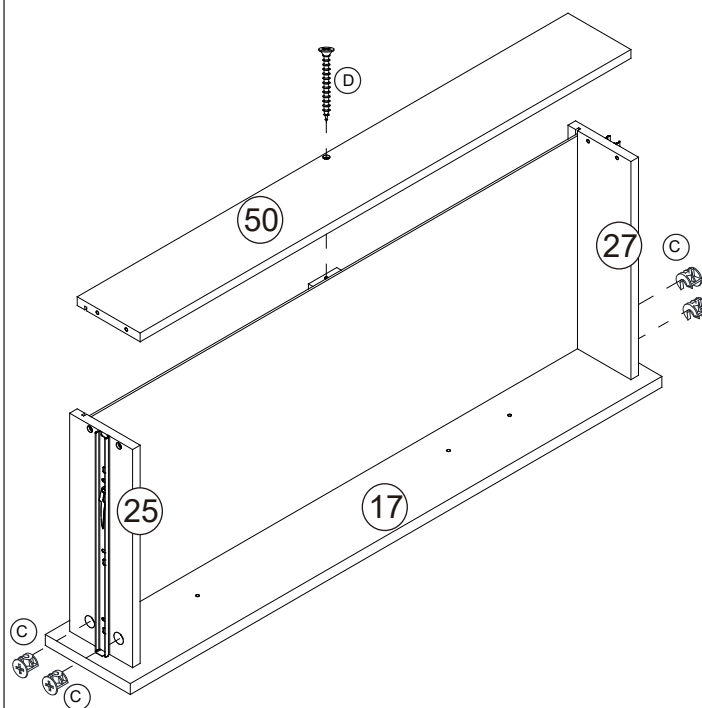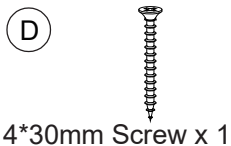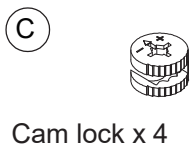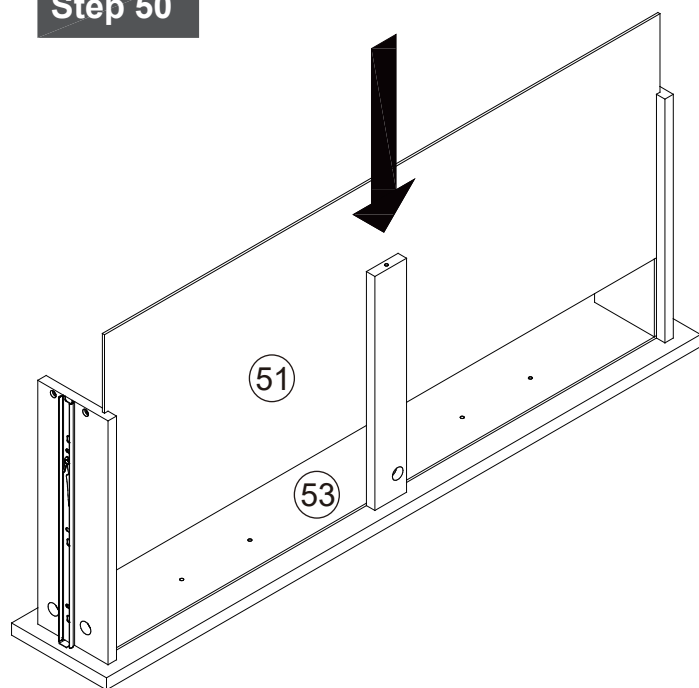

Assembly Instructions

Step 51

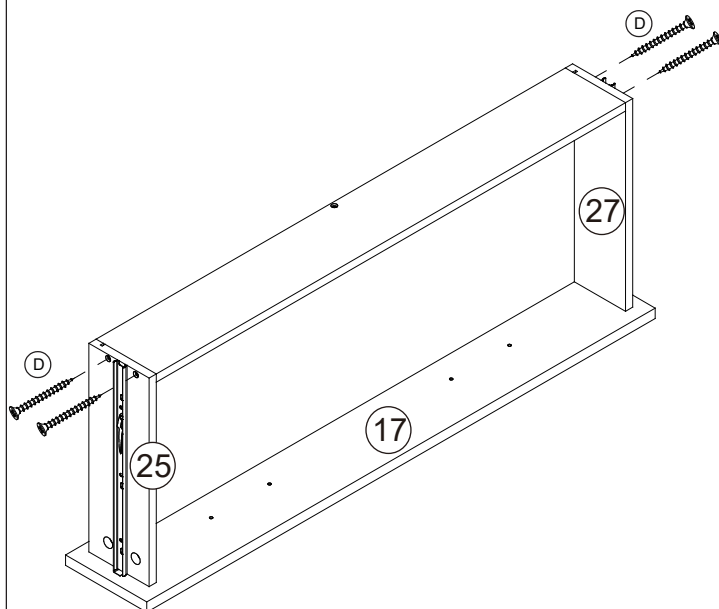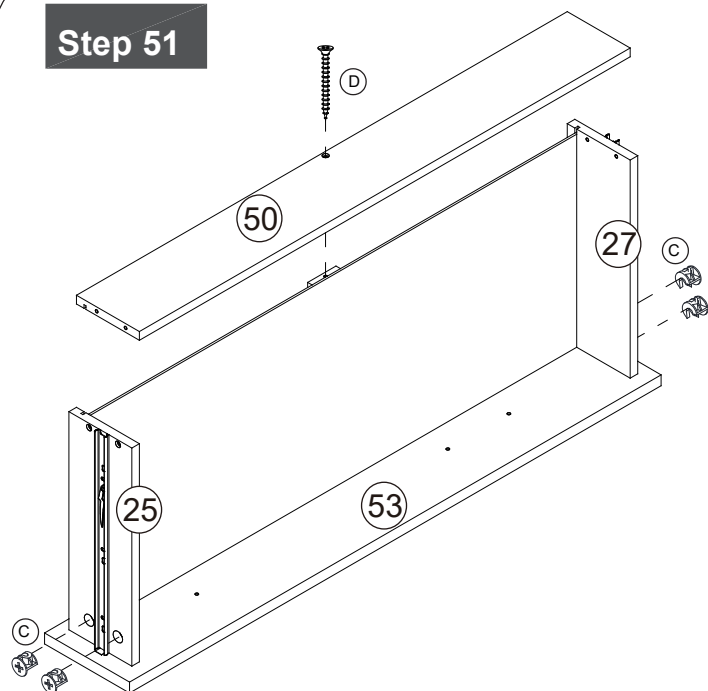

(C)




Cam lock x 4

(D)



4*30mm Screw x 5

Step 52

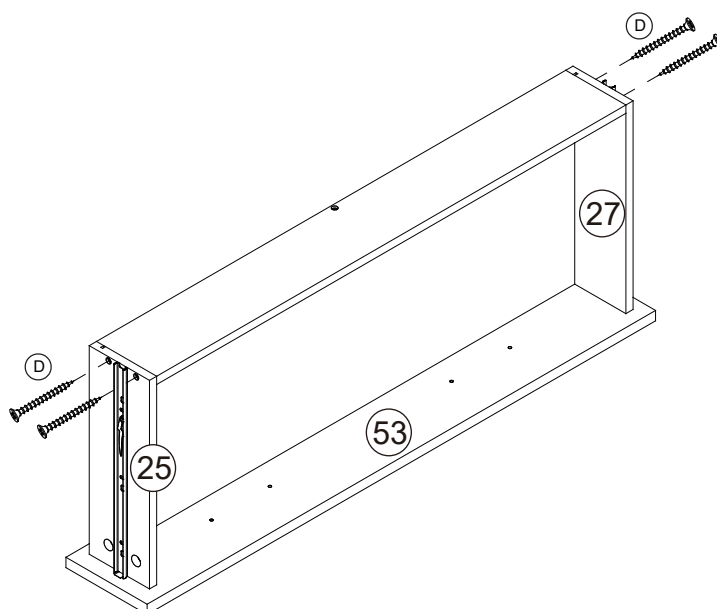


(D)




4*30mm Screw x 4

Assembly Instructions

Step 53

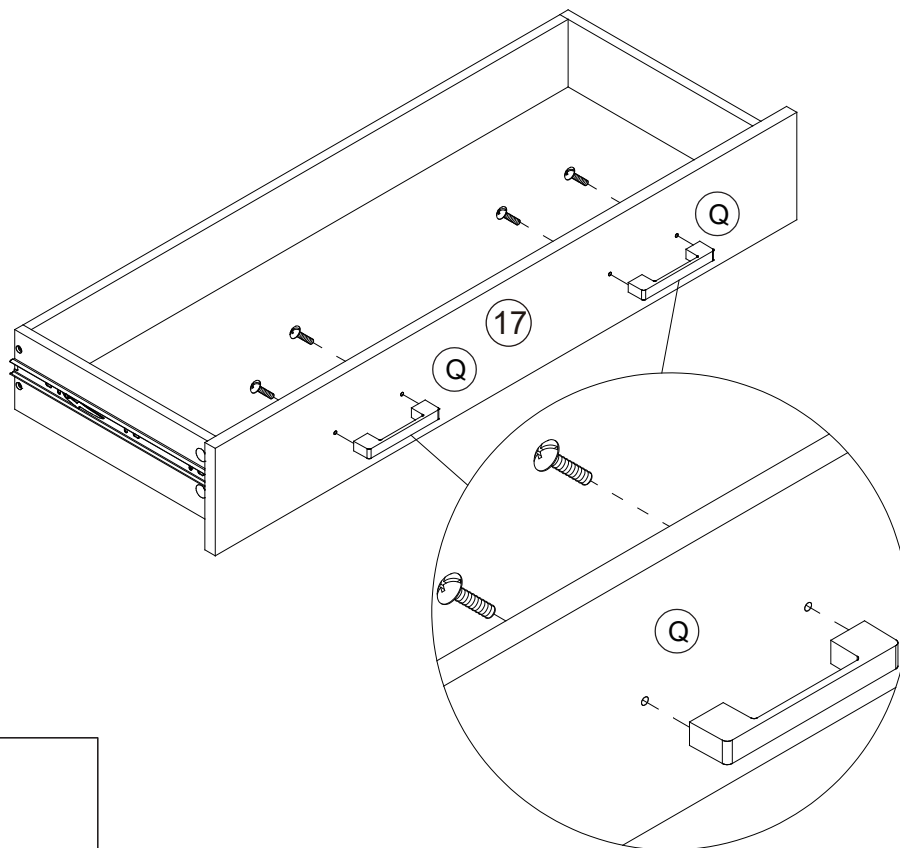


Q

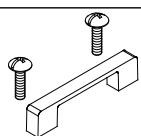


4*18mm Handle x 2set

Step 54

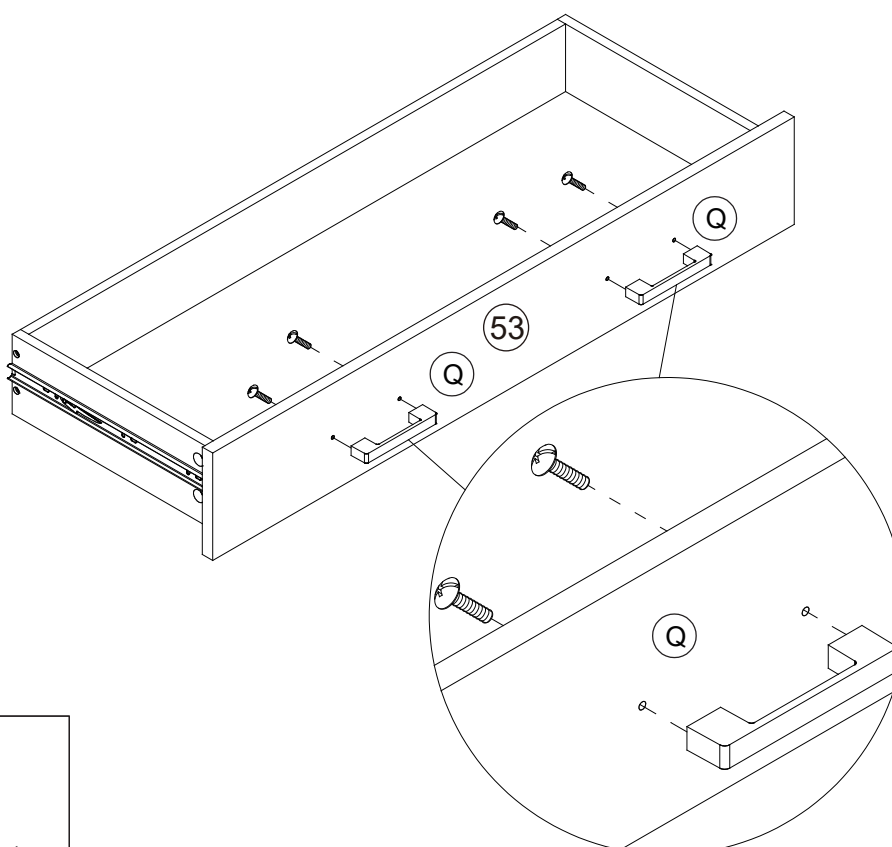


Q

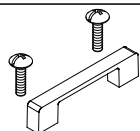

4*18mm Handle x 2set


Assembly Instructions

Step 55

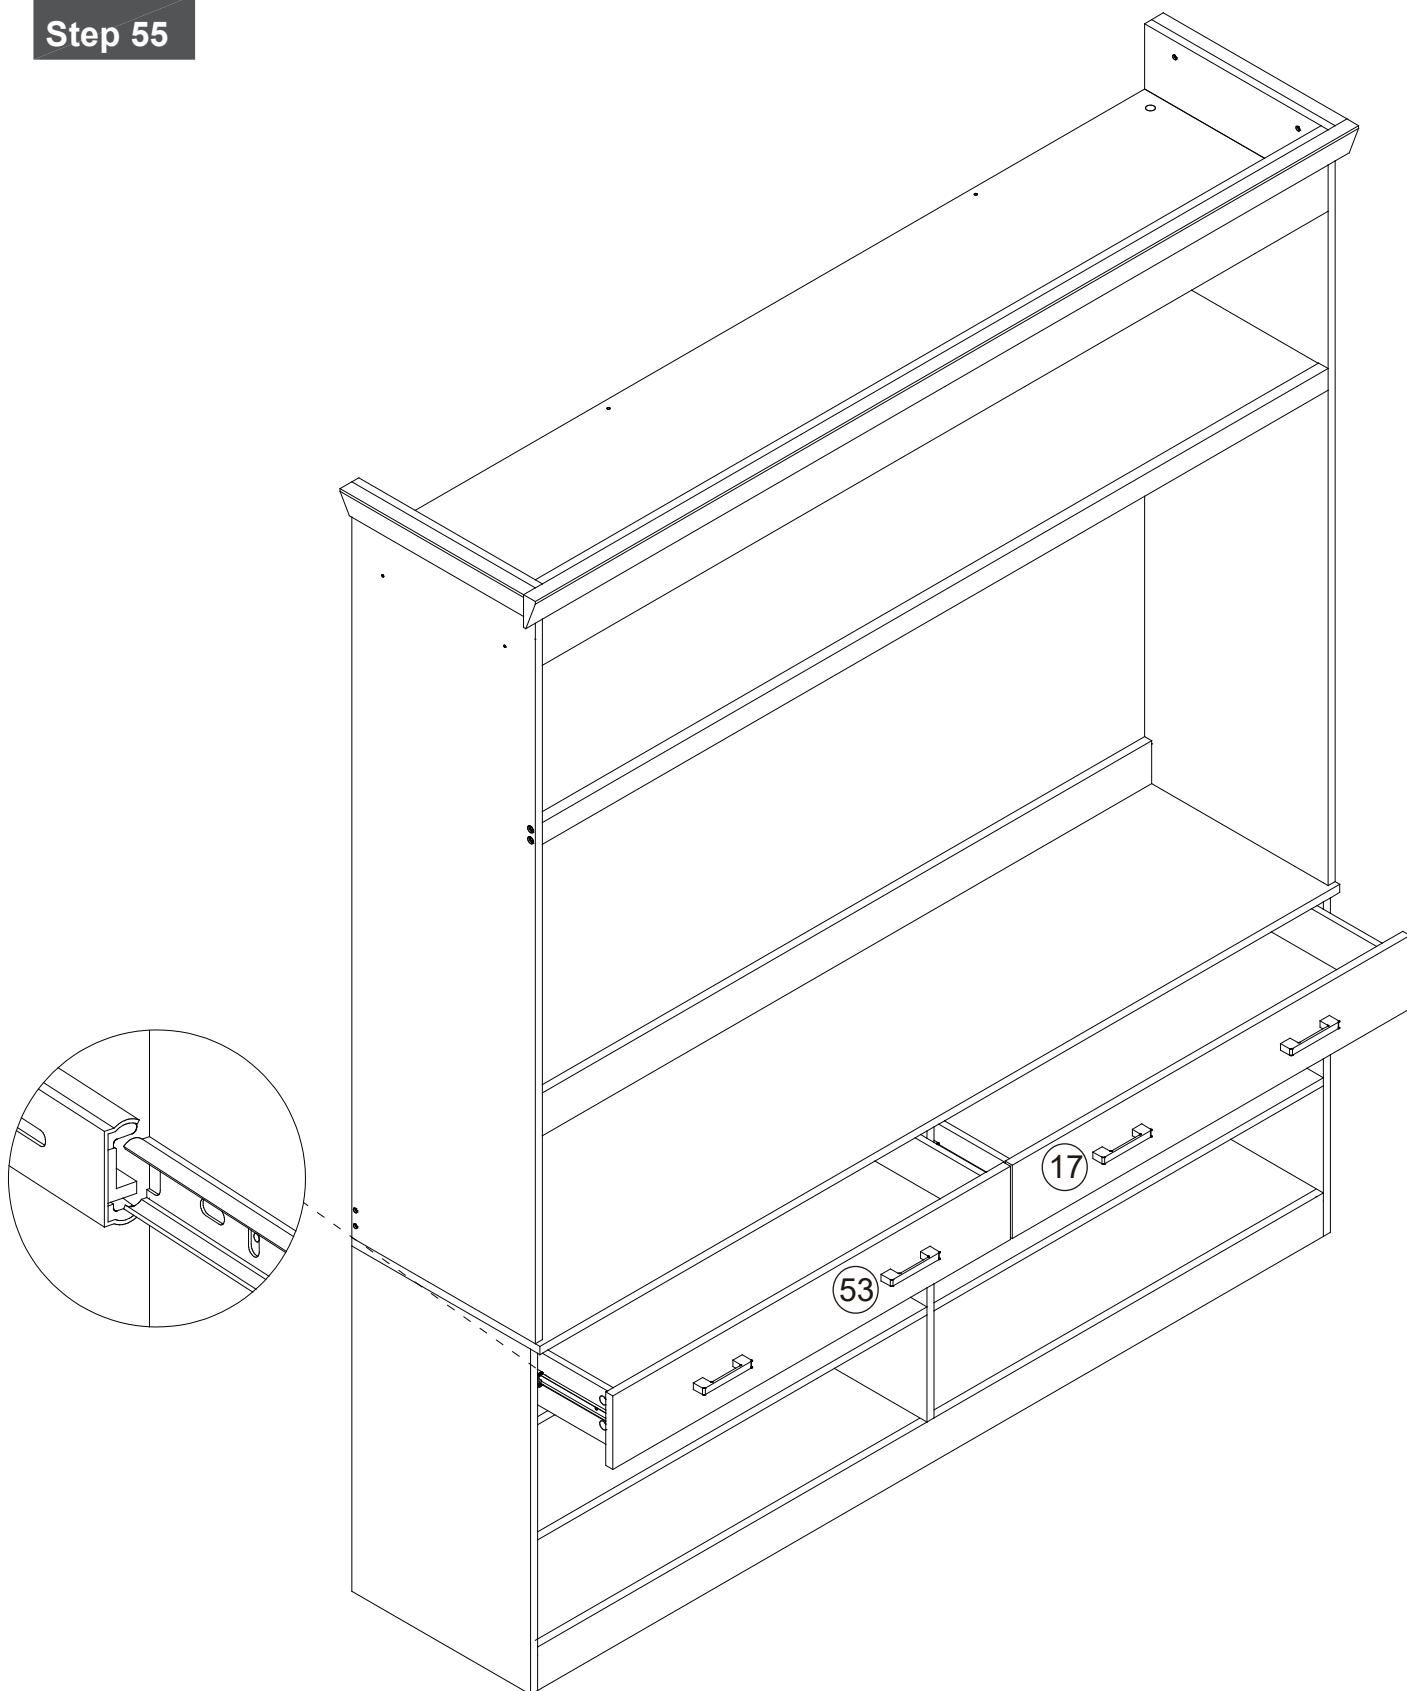


Assembly Instructions

Step 56

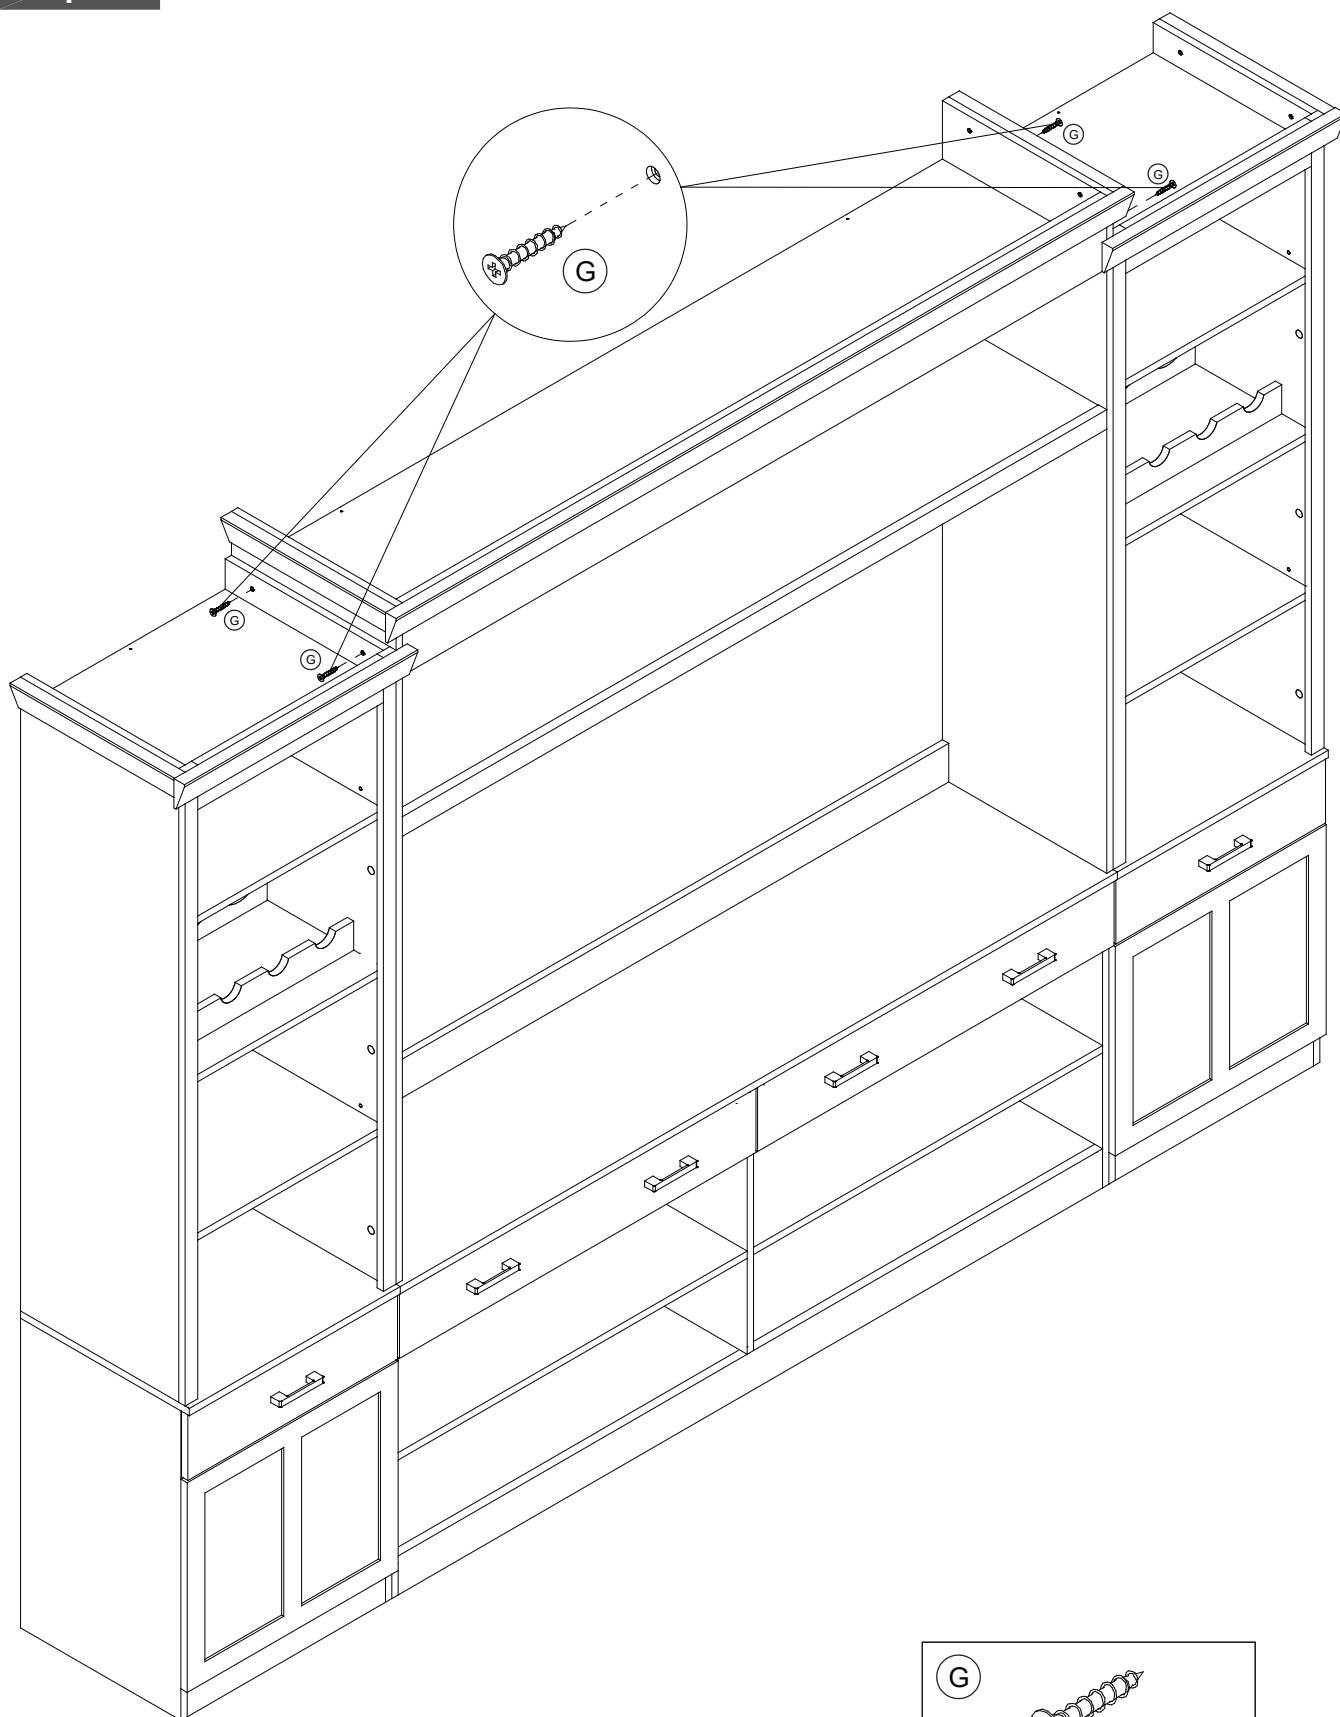







G




4*20mm Screw x 4

Assembly Instructions

Step 57

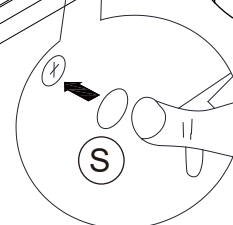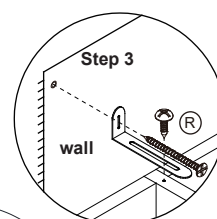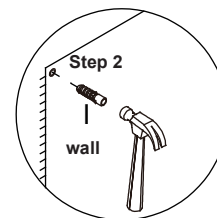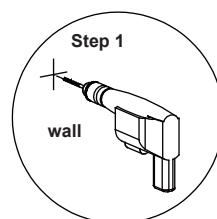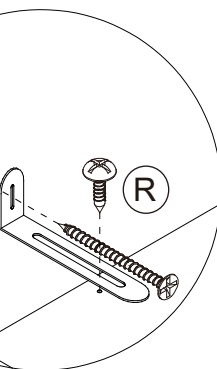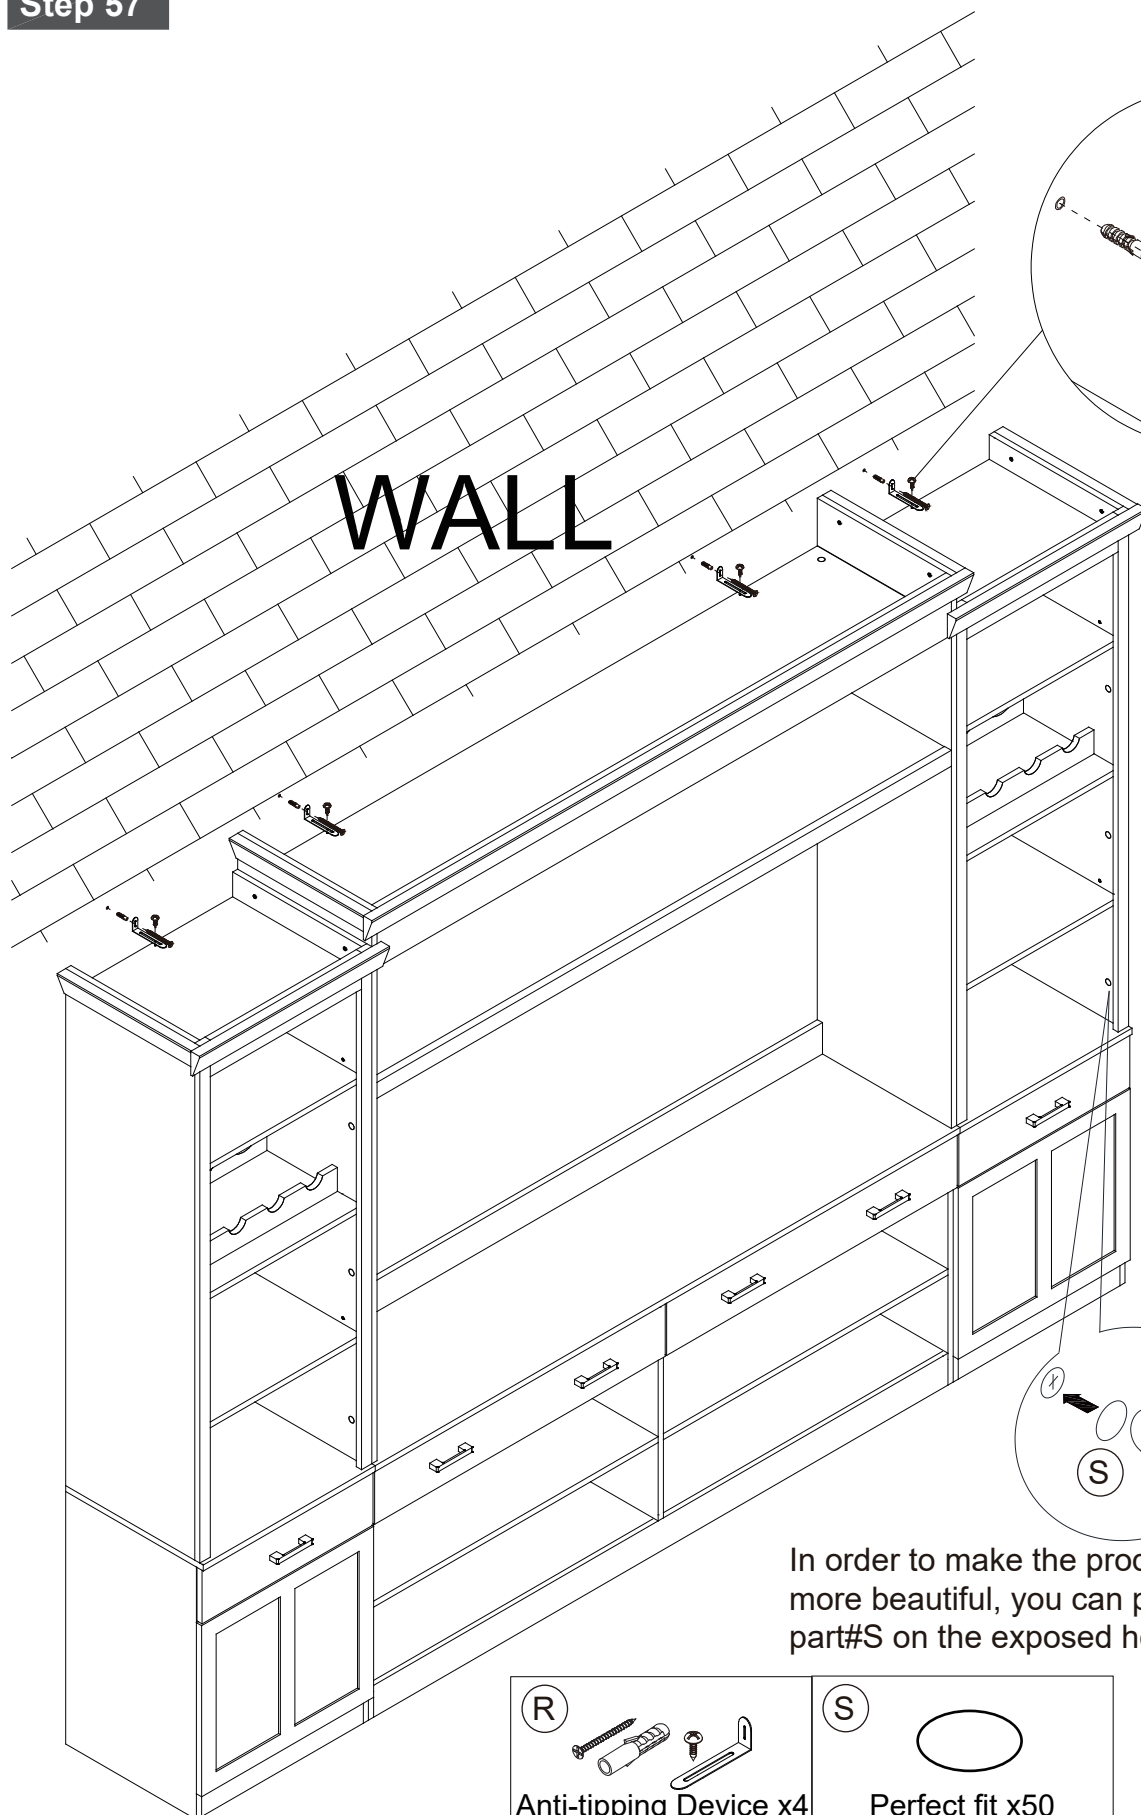

In order to make the product more beautiful, you can paste part#S on the exposed holes

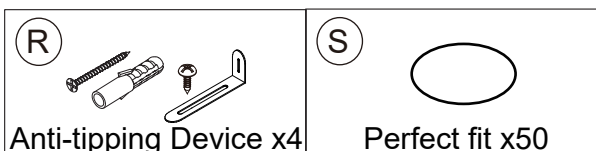

Assembly Instructions

Step 58

