

BY005 Bar Stool




Installation Instructions

SKU

BY005

Name


Bar Stool

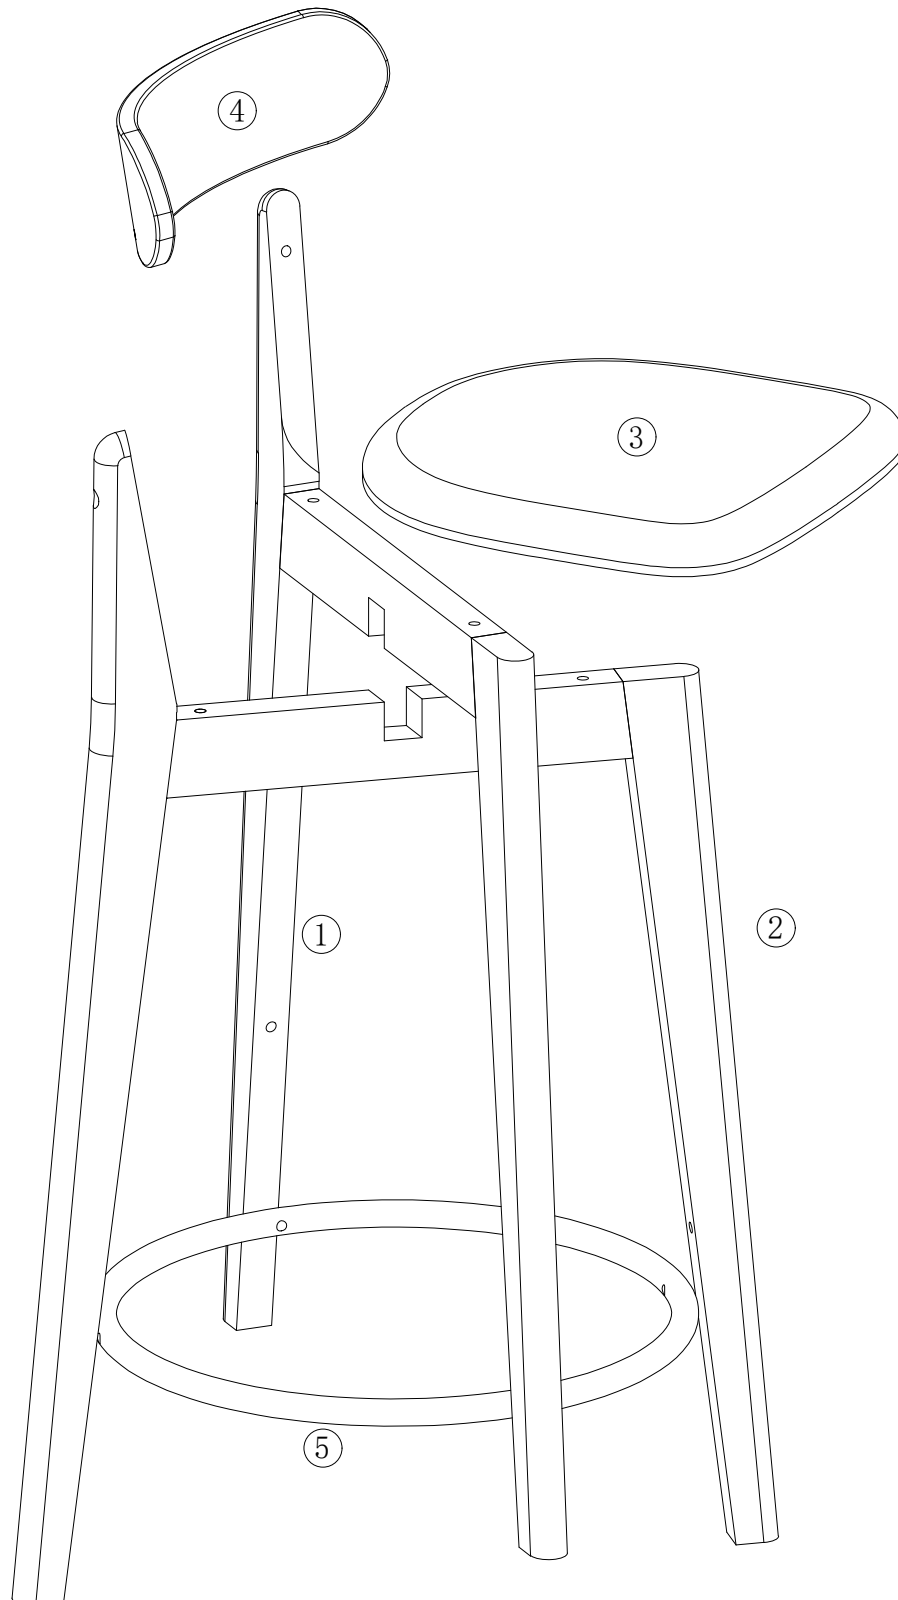

Name: Bar Stool


Parts List

① Left Leg Frame

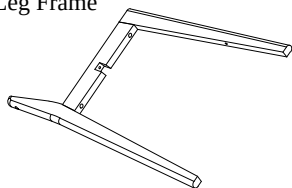

1PC

② Right Leg Frame

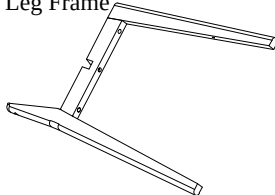


1PC

③ Seat Cushion




1PC

④ Backrest

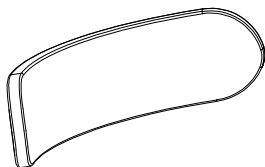

1PC


⑤ Footrest

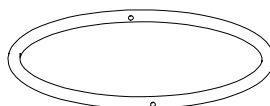

1PC

Hardware List


A Flat Head Hex Socket Screw

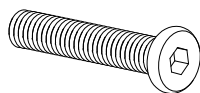

M6*55MM

4+1PCS


B Countersunk Screw

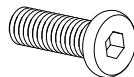

M6*35MM

1+1PCS


C Flat Head Hex Socket Screw

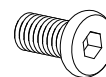

M6*25MM

2+1PCS


D Washer

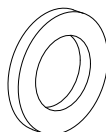

M6* 13MM

7+2PCS


E Flat Head Hex Socket Screw

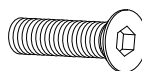

M6*35MM

1+1PCS


F Hex Key (Allen Wrench)

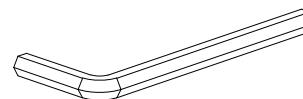

M4*100MM

1PC

G Wooden Cover Plug

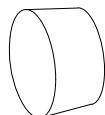


12*9MM


2+1PCS

Important Notice


Using the correct hardware helps prevent damage to wooden components.

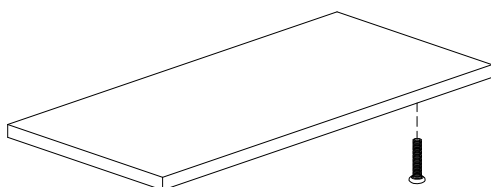

Example

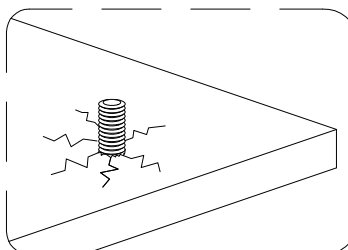


Incorrect: Using screws that are too long may cause the wood to crack.

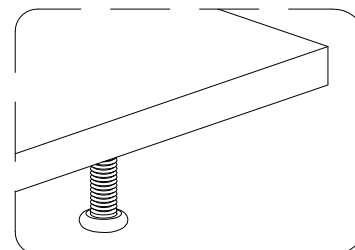

Correct: Always use screws of the proper size.

Name: Bar Stool

Step 1

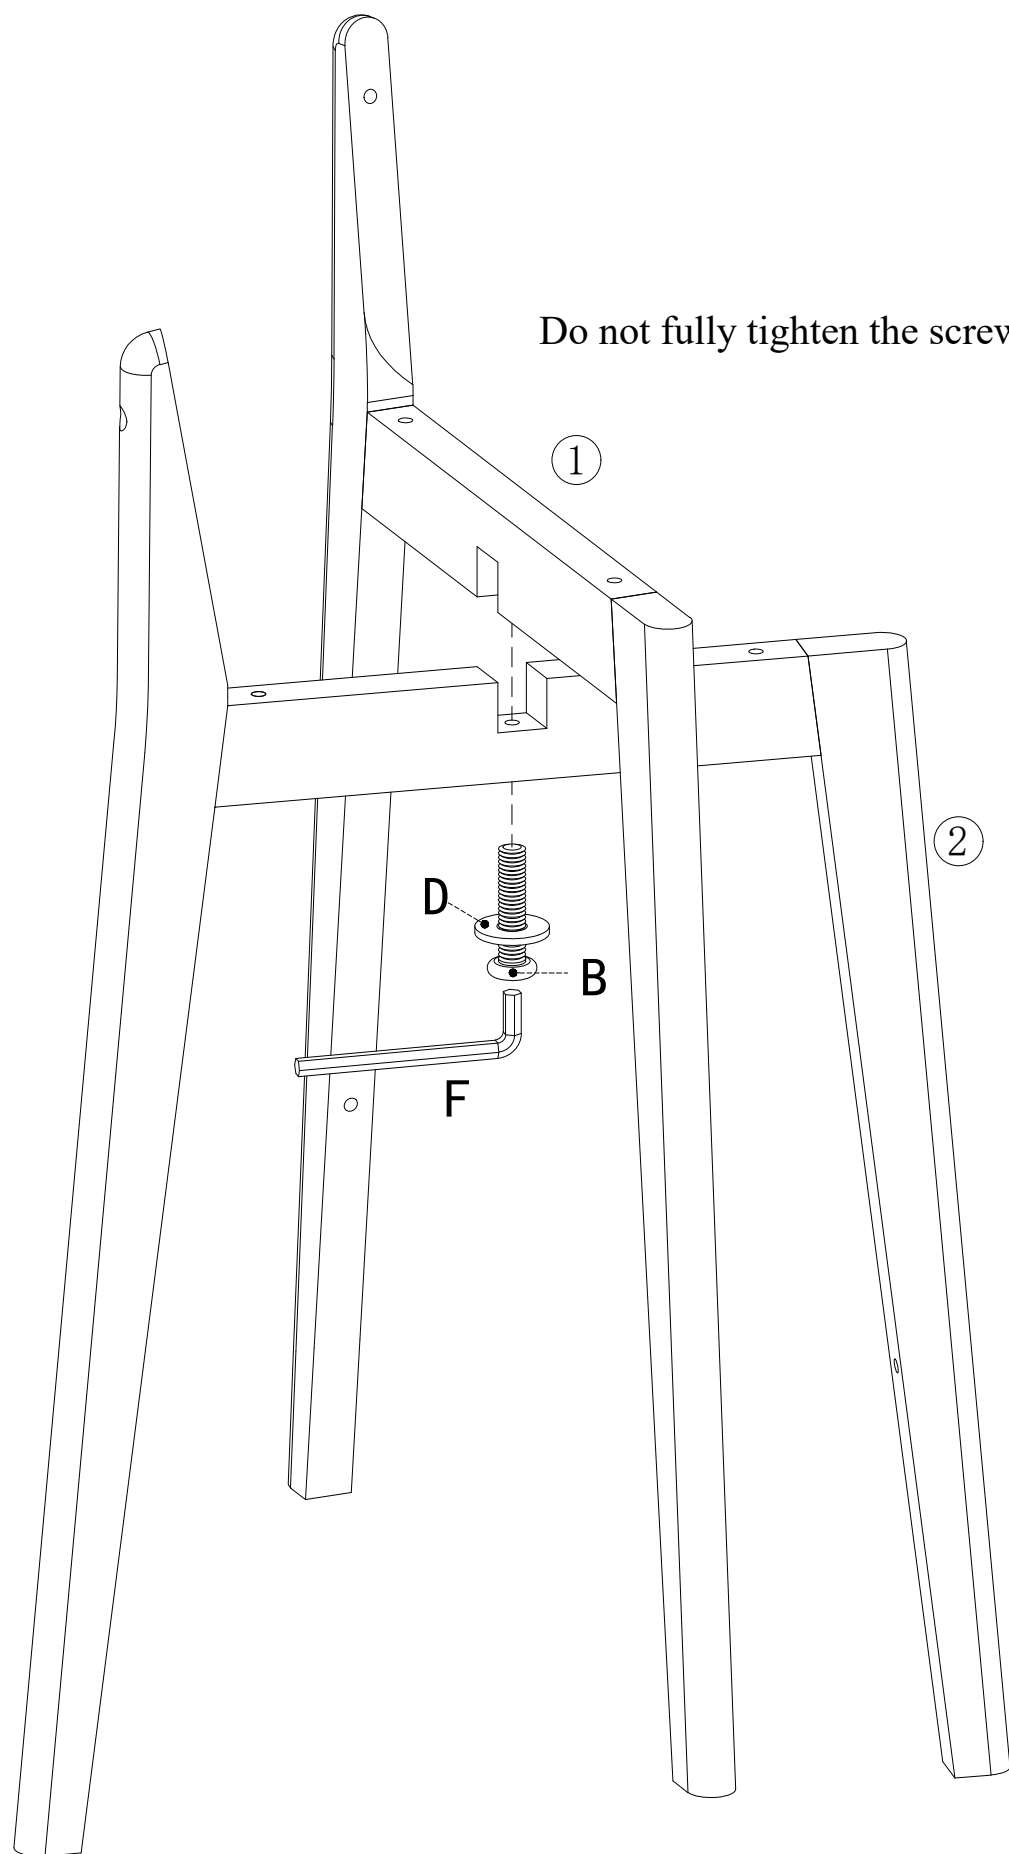


►As shown in the illustration, align Part 1 (Left Leg Frame) with the slot of Part 2 (Right Leg Frame).

Secure them using Hardware B/D/F.

B		x1
D		x1
F		x1

Name: Bar Stool

Step 2

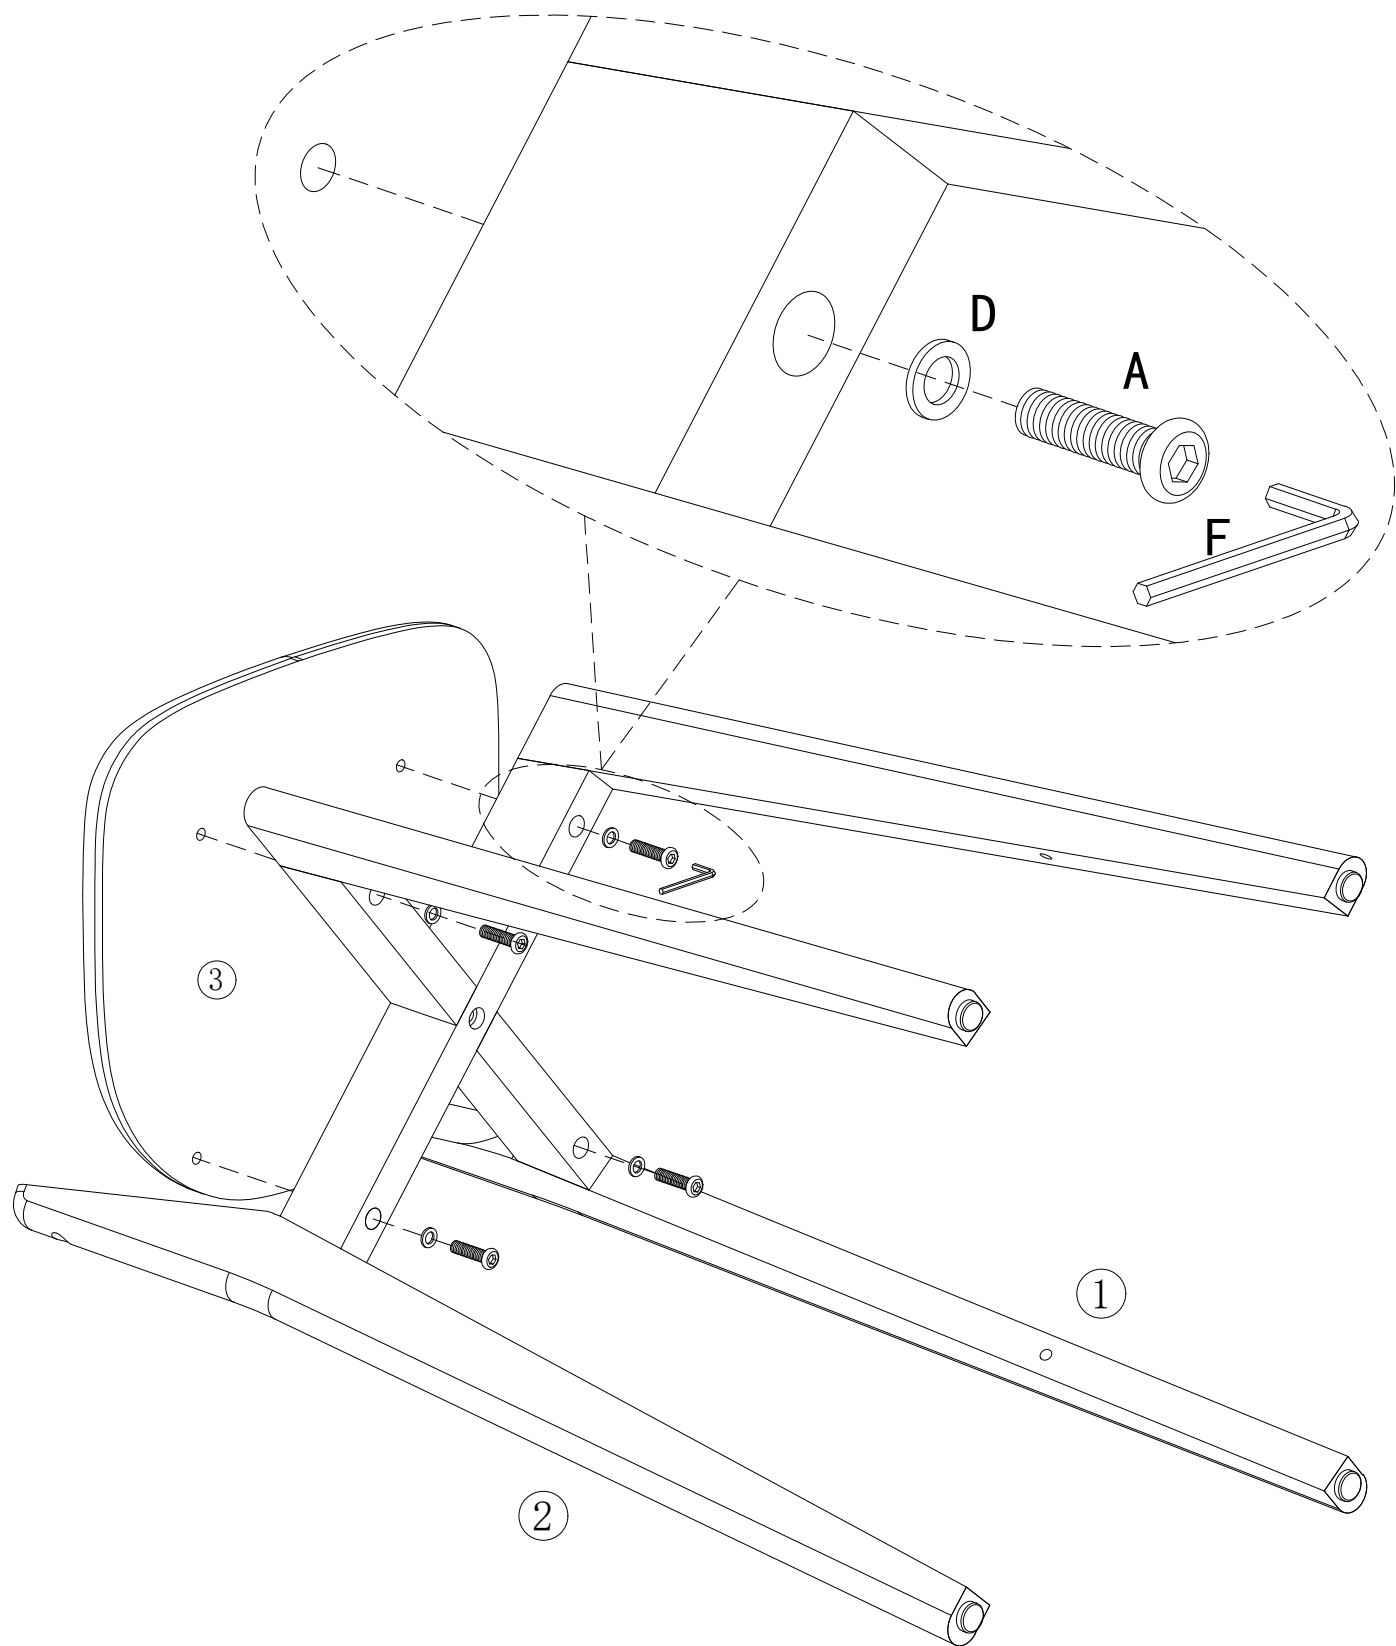


► Using **Hardware A/D/F**, attach **Part 3 (Seat Cushion)** to the assembled frame from Step 1, as shown.

A		x4
D		x4
F		x1

Name: Bar Stool

Step 3

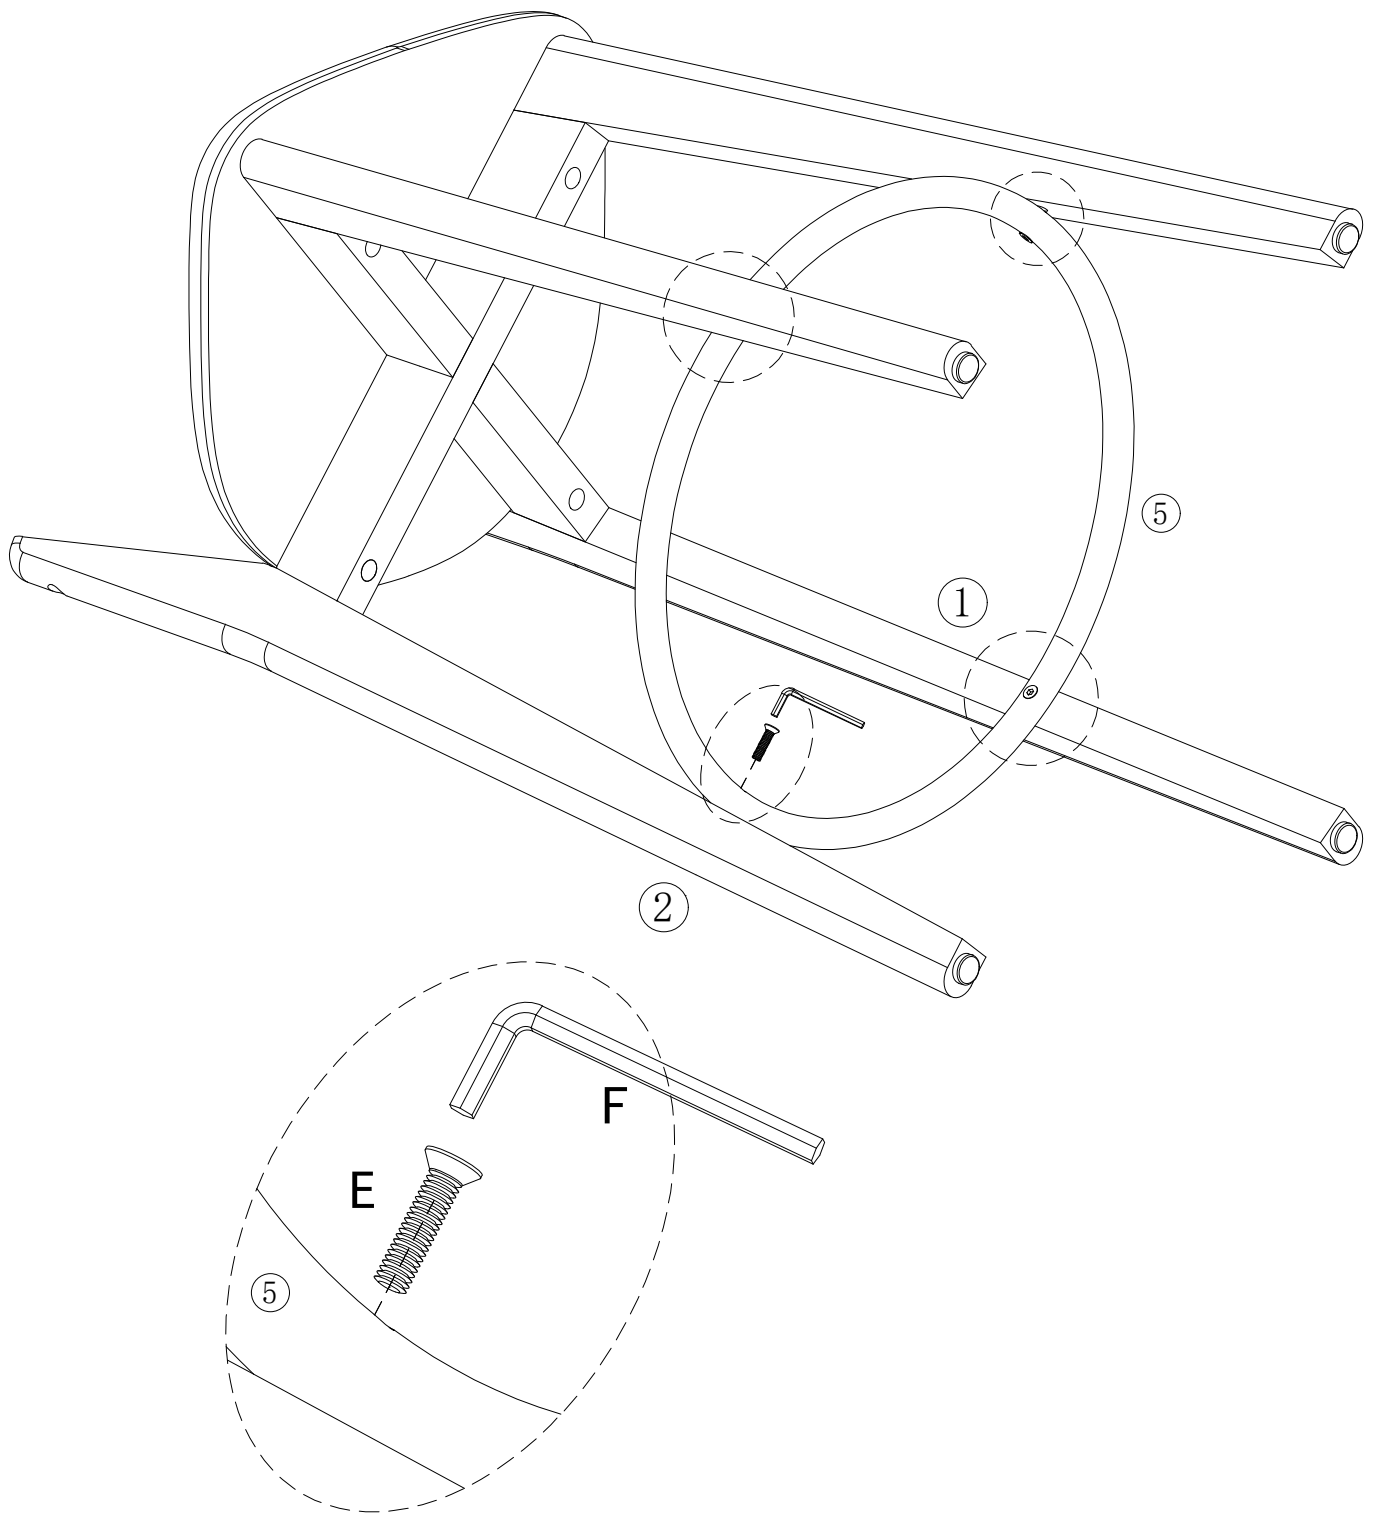


► Attach Part 5 (Footrest) to the assembled structure from Step 2 using **Hardware E/F**, following the illustration.

E		X4
F		X1

Name: Bar Stool

Step 4

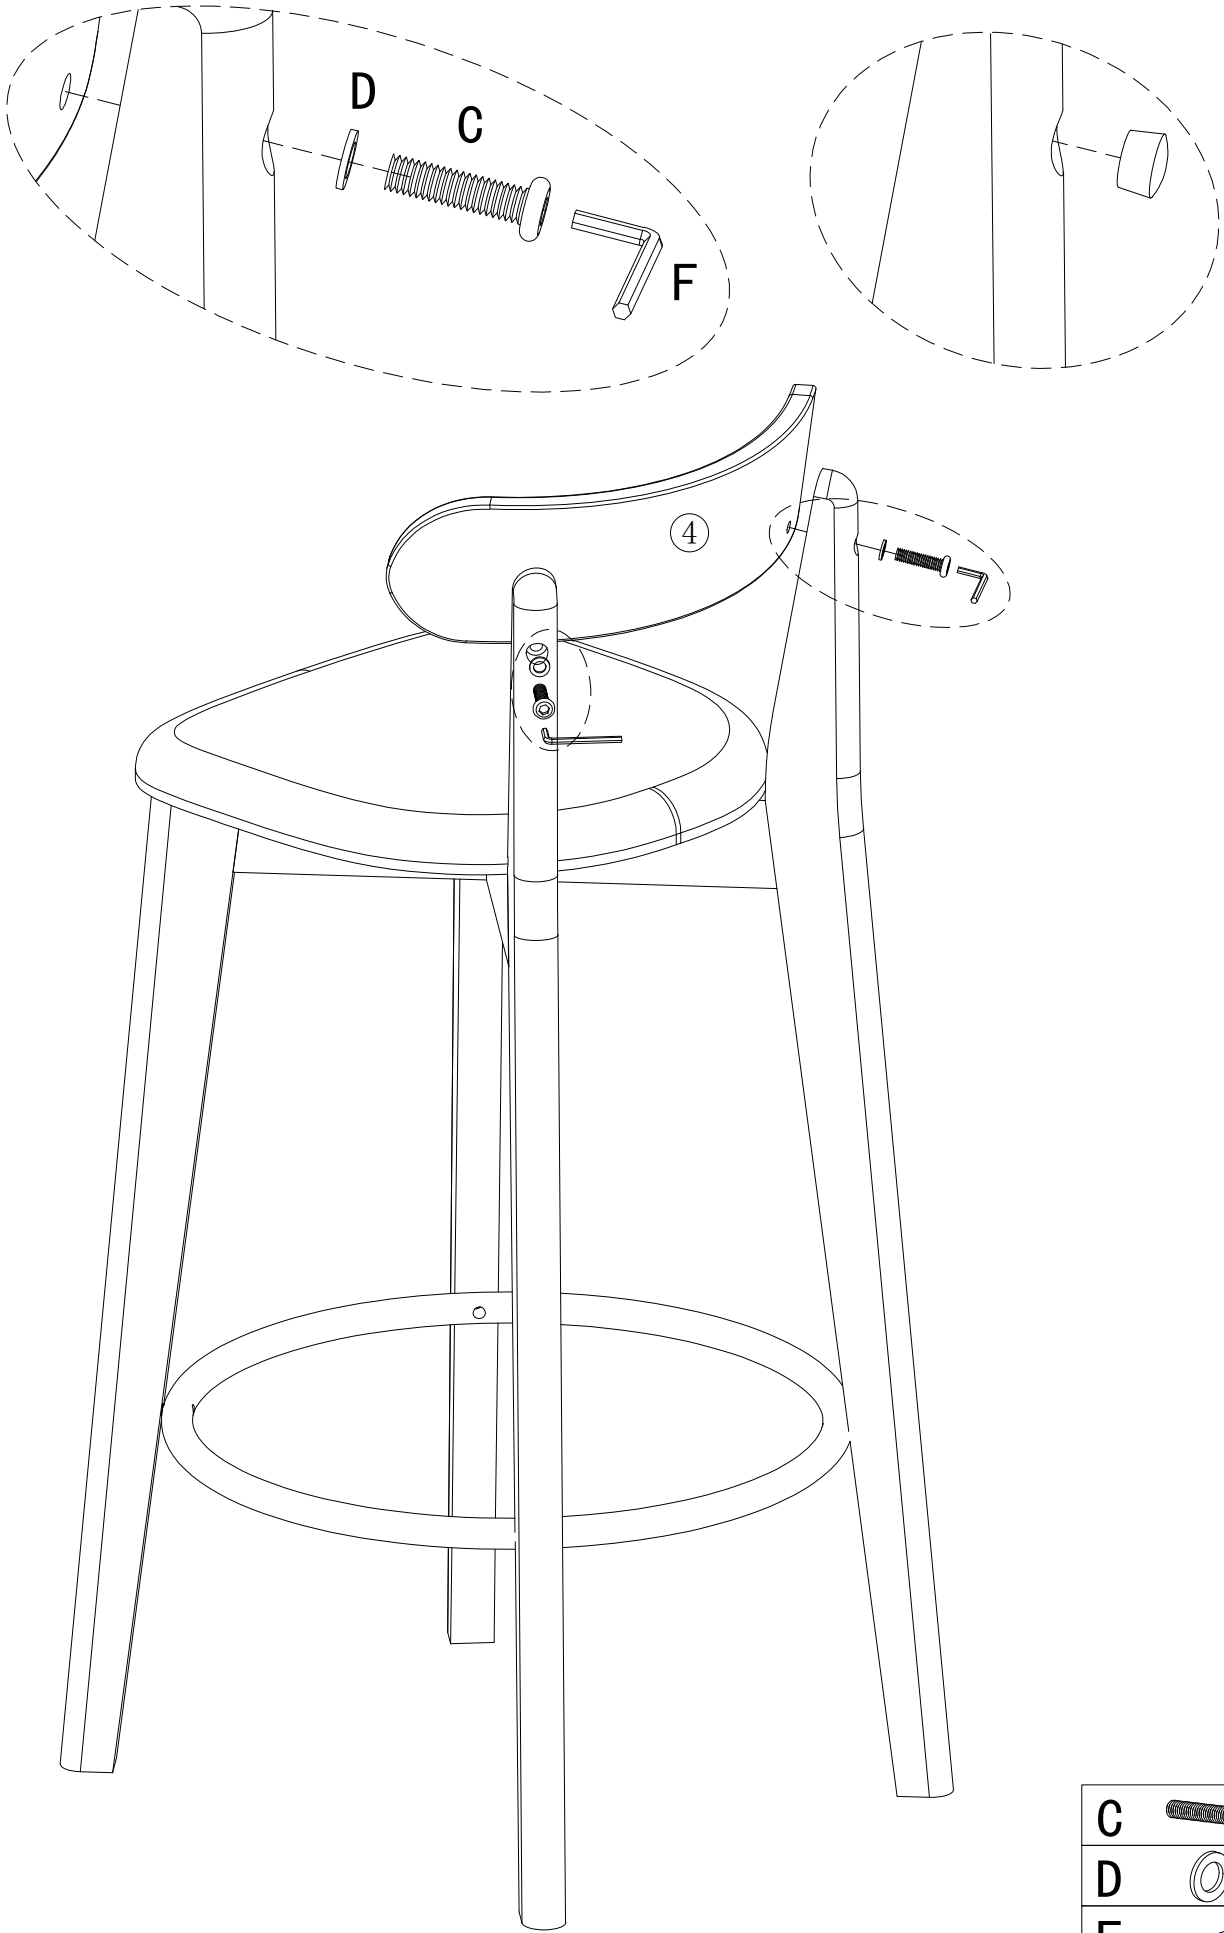


►Attach Part 4 (Backrest) to the assembled structure from Step 3 using **Hardware C/D/F**. After tightening, cover the screw holes with **Wooden Plugs G**.

C		X2
D		X1
F		X1
G		X2

Step 5

Final Adjustment

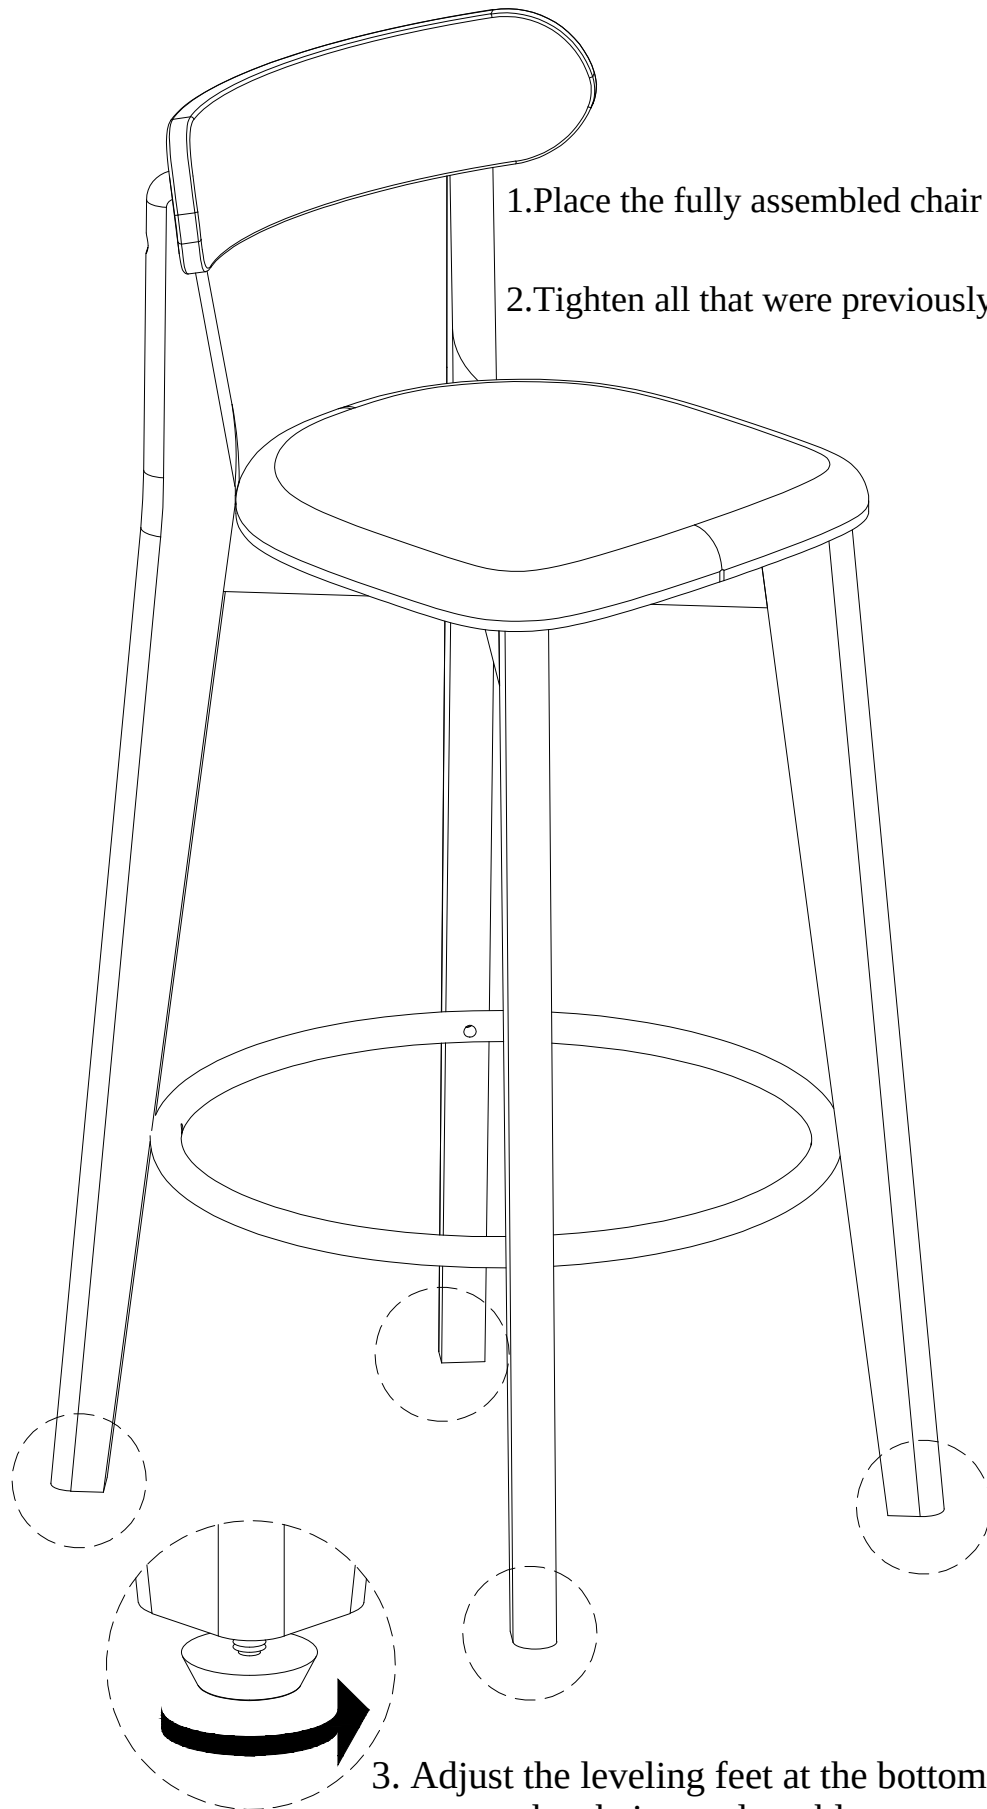

► Installation Complete