


INSTALLATION MANUAL


3 TIERS MIRROR SHOE(STORAGE) CABINET

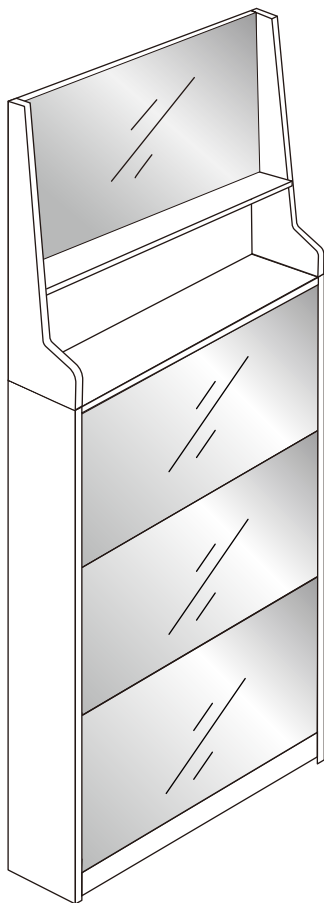

WARNING

**INSTALLATION REQUIRES TWO ADULTS,
KEEP AWAY FROM CHILDREN TO
PREVENT ANY INJURY.**

Tools Required



UPDATED ON 06/28/2024

SUMMARY

INTRODUCTION

PAGE 2

TIPS AND WARNINGS

PAGE 3

PARTS LIST

PAGE 5


INSTALLATION STEPS

PAGE 7

INTRODUCTION

- Make sure all screws in the part list included in the hardware package before assembly. Before using the product ,please read this manual carefully and then assemble it. To avoid any injury or damage to the product,please follow below safety rules.

- Product should to be installed in a dry,flat place indoor.
- Assembly & movement: minimum 2 adults - heavy and fragile product.
- In the event of a missing items,contact the seller within 48 hours of receiving the product.

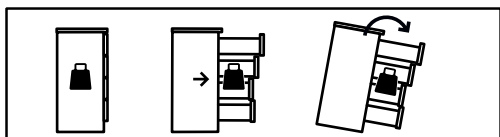

English

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.



ATTENTION



This product is for household use only! And not for commercial use.

Do not use this product for any other over expected purpose. To any commercial use, public or institutional, disclaims all liability and cancels all guarantees.

TIPS AND WARNINGS:

- Do not lean on the shoe cabinet.
- Do not store in a damp room or outdoor.
- Beware of the risks of pinching and puncturing during installation.
- Beware of the risk of mirror damage.



Maintenance :


Cleaning with a dry cloth.

Far away from water or wet shoes.

PART LIST

Illustration picture for reference only

NO.	DESCRIPTION	QTY	SIZE	ILLUSTRATION
①	Left Side panel	1	1125x234x15mm	
②	Right Side panel	1	1125x234x15mm	
③	Left Side panel	1	599x234x15mm	
④	Right Side panel	1	599x234x15mm	
⑤	Top panel	1	700x234x15mm	
⑥	Bottom panel	1	668x96x15mm	
⑦	Shelf panel	1	668x108x15mm	
⑧	Back slat	1	669x60x12mm	
⑨	Back slot slat	1	669x75x12mm	
⑩	Back slot slat	2	669x75x12mm	
⑪	Back slot slat	1	669x75x12mm	
⑫	Mirror drawer slat	3	653x97x12mm	
⑬	Mirror drawer slat	6	653x135x12mm	
⑭	Mirror drawer	3	665x350x12mm	

⑮	Mirror panel	1	669x349x12mm	
⑯	Back panel	3	680x288x5mm	
⑰	Back panel	1	680x245x5mm	

NO.	ILLUSTRATION	QTY	SIZE (mm)
⑱	 Left	3	
⑲	 Right	3	
⑳		24	ø3.5x10
㉑		12	ø3.5x16
㉒		12	ø3.5x25
㉓		6	ø4x16
㉔		6	
㉕		6	
㉖		6	


NO.	ILLUSTRATION	QTY	SIZE (mm)
㉗		8	ø3.5x14
㉘		42	
㉙		42	
㉚		10	
㉛		2	
㉜		4	
㉝		2	ø3.5x25
㉞		2	

INSTALLATION STEPS


Please read the instructions carefully before assembling the cabinet.

Two adults are required for assembly of this product on a clean, flat surface instead of a rough surface.

STEP 1 | Assemble mirror drawer

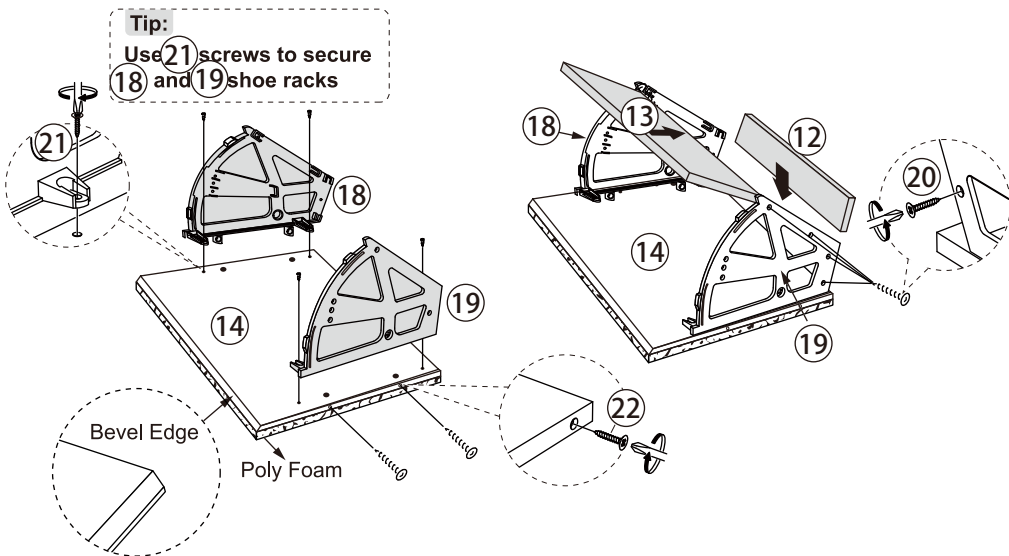



STEP 2 | Screw on the side panels

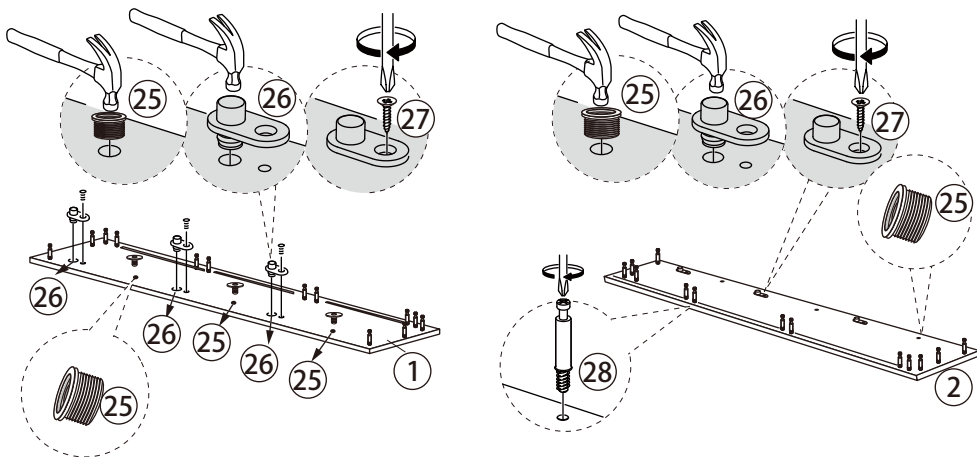

STEP 3 | Assemble the cabinet frame

Attention:

When installing (8), ensure that the holes on the board face inward and the bevel side faces upward



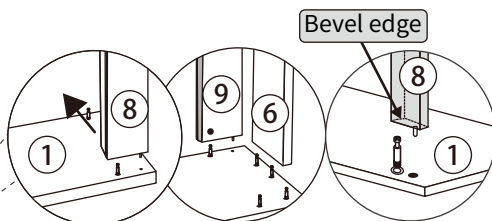
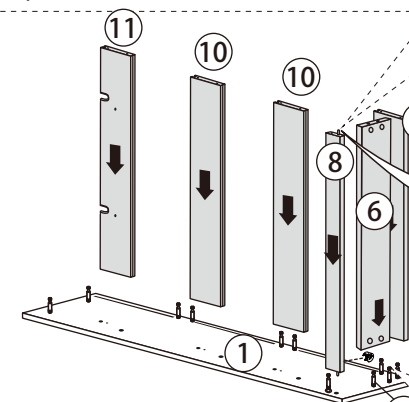


Tip:



Attention:

Put (29) into the hole and turn (29) clockwise to lock (28).

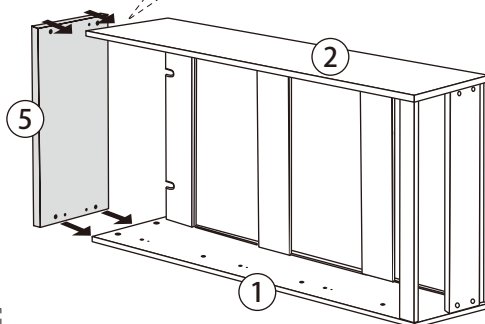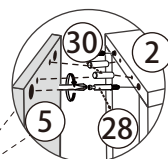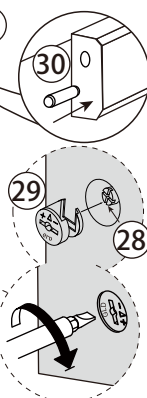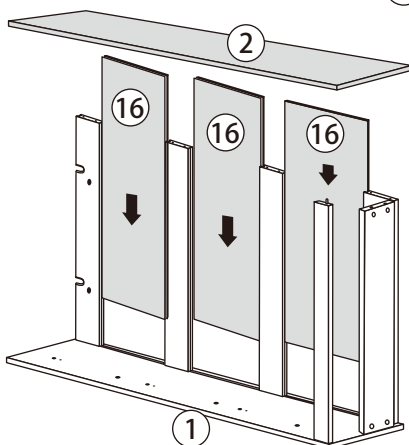


Attention:

Make sure side panel fall into slots, if the side panel is not fully fit, please tap the side panel tightly to adjust.

Attention:

Make sure all screws locked tightly.



STEP 4 | Assemble mirror drawer for 3-tier shoe cabinet

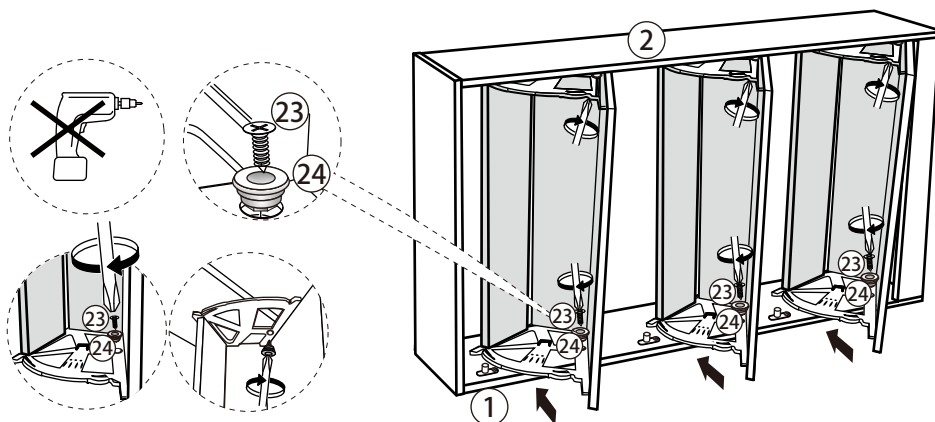

STEP 5 | Lift the shoe cabinet and straighten it


ATTENTION

Place the installed shoe cabinet flat on the ground then raise it up using two people. **Mirror** must on the top when you raise it up. Do not let the moveable door panel fall off.

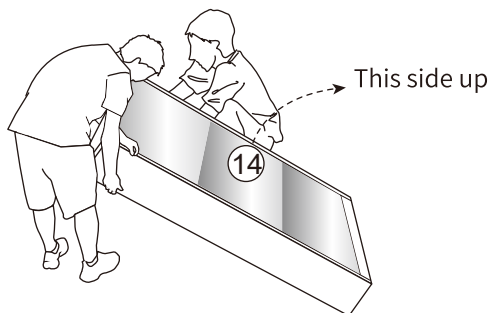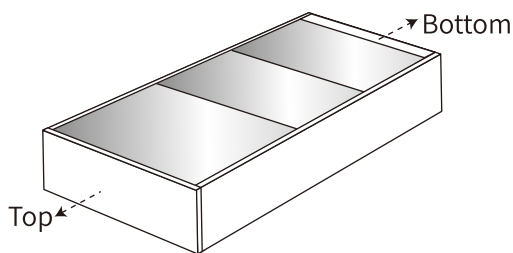


STEP 6 | Insert the mirror drawer slat


STEP 1

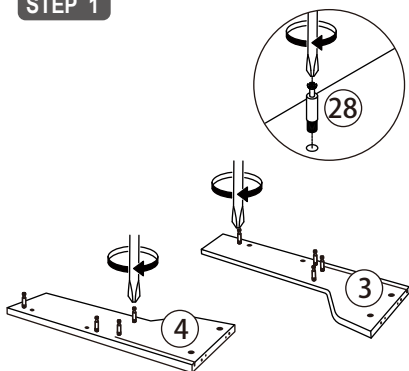


STEP 2

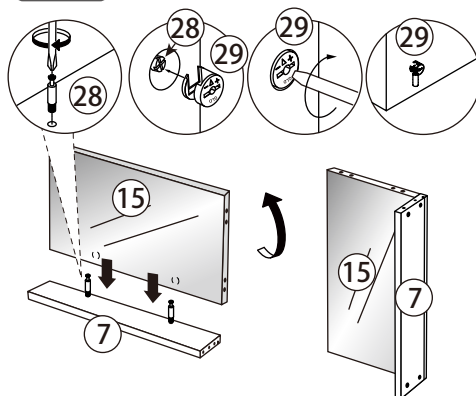


STEP 3

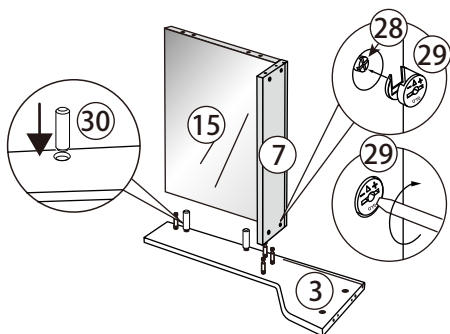


STEP 4

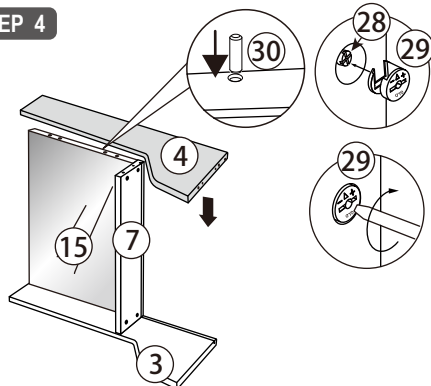


STEP 5

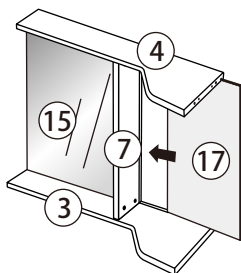


STEP 6

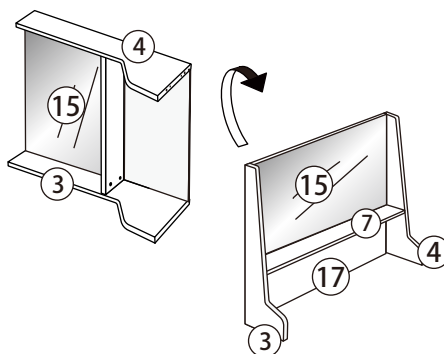


STEP 6 | Insert the mirror drawer slat

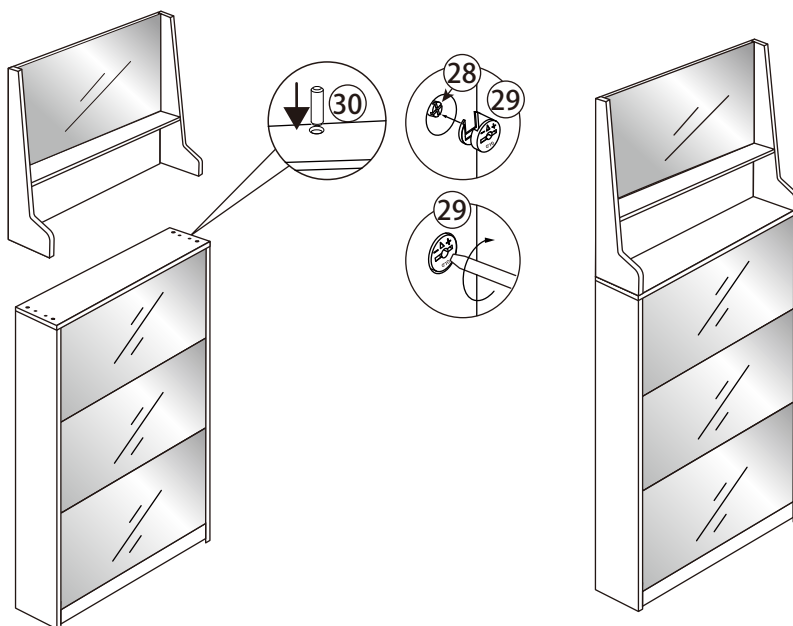



Tip:
Fix screw according to
the space you need.

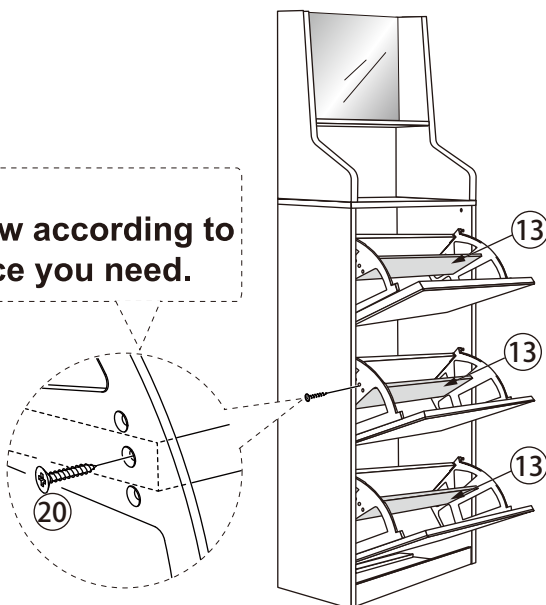

STEP 7 | Insert the anti-falling screws.

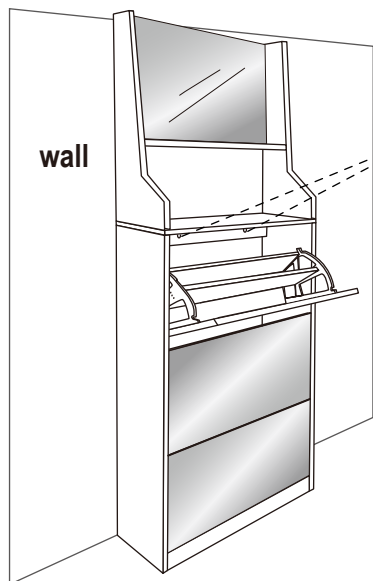

STEP 1

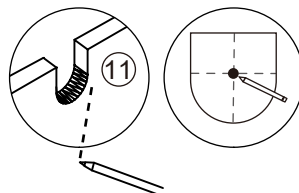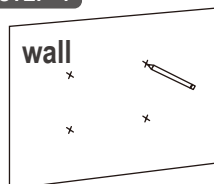



Put the cabinet in an appropriate position, and mark the center of the hole on the cabinet, a total of 2 places.

STEP 2



According to the 4 holes drawn, Put the rubber plug (31) into the wall.

STEP 3


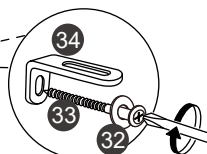
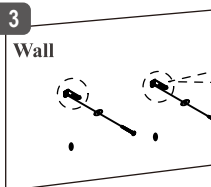


Screw (34) into the top two holes in the wall.

STEP 4

Move the cabinet back to the position of the drawing points, and align to holes.

wall

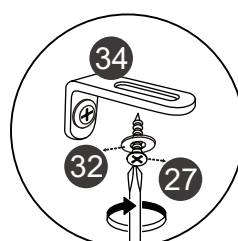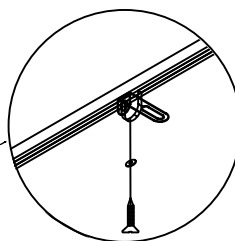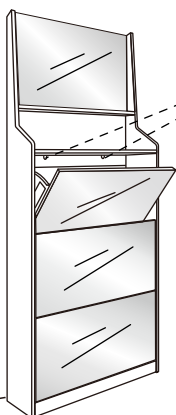

⚠ WARNING

To reduce the risk of furniture Tip over" ALWAYS install anti-tip device provided -NEVER allow children to stand, climb or hang on drawers.