


3 SEATER SOFA ASSEMBLY INSTRUCTIONS

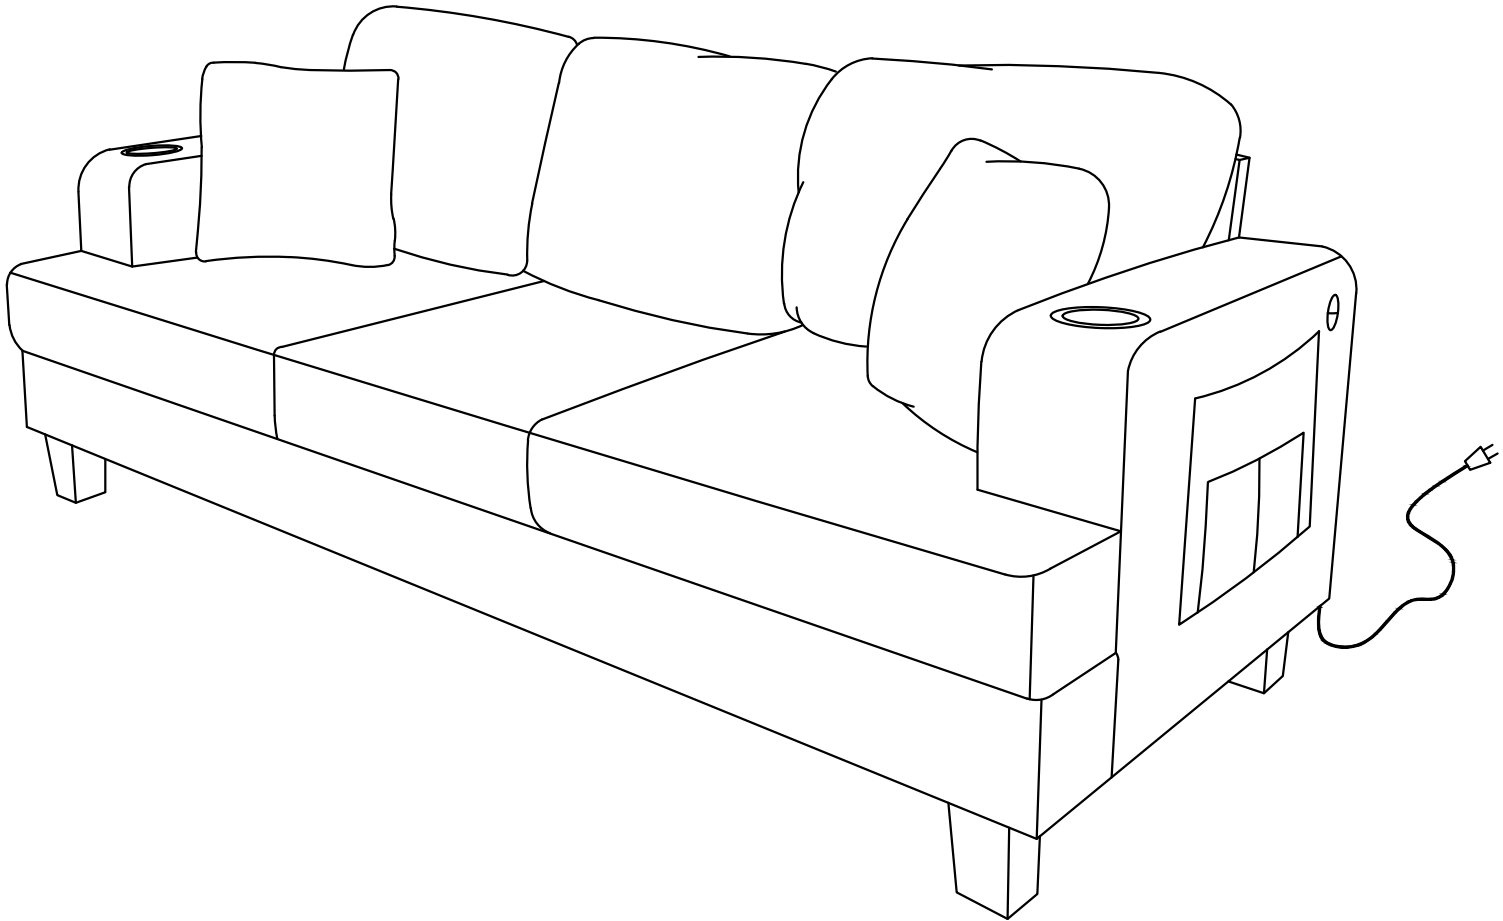





THANK YOU FOR PURCHASING 3S

WARNING!!!





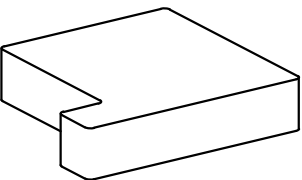
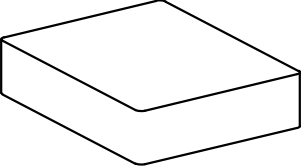
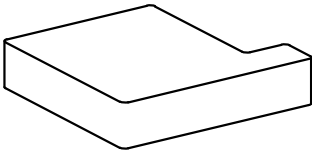

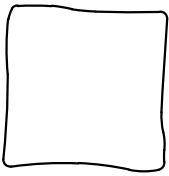

- No rough tools or corrosive detergent for cleaning.
- The package contains some heavy parts and sharp-edged parts, please be careful when assembling to avoid any physical injury around you.
- Please strictly observe the steps of the instructions.
- Do not use a broken item and contact our customer service for guidance.

PART LIST

BOX 1

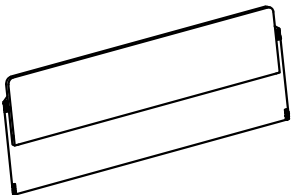



Support Rails  (B): 2PCS	Front/Back Panels  (C): 2PCS	Seats Frame  (D): 2PCS	Backrest Frame  (E): 1PC
---	---	--	---

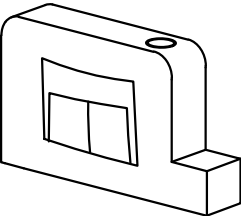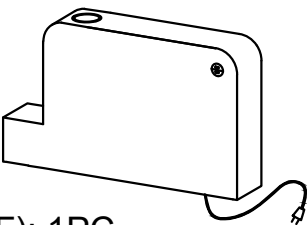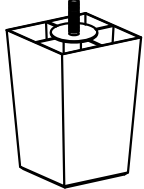BOX 2


Armrest Right  (A): 1PC	Armrest Left  (F): 1PC	Legs  (G): 4PCS	Middle Support Legs  (H): 2PCS
Right Seat Cushion  (I): 1 PC	Middle Seat Cushion  (J): 1PC	Left Seat Cushion  (K): 1 PC	Back Cushions  (L): 3PCS
Pillows  (M): 2 PCS	Front Panel Cover  (N): 1 PC		

HARDWARE LIST


BOX 2

5/16" x 20mm  (O): 4PCS + 1	5/16" x 50mm  (P): 10PCS + 1	1/4" x 25mm  (Q): 8PCS + 1	L5  (R): 1PC
--	---	--	---

Step 1: Take the Pillow (M), Back Cushion (L), Blister Hardware out from the Armrest Left (F).
Velcro the bottom of the Armrests

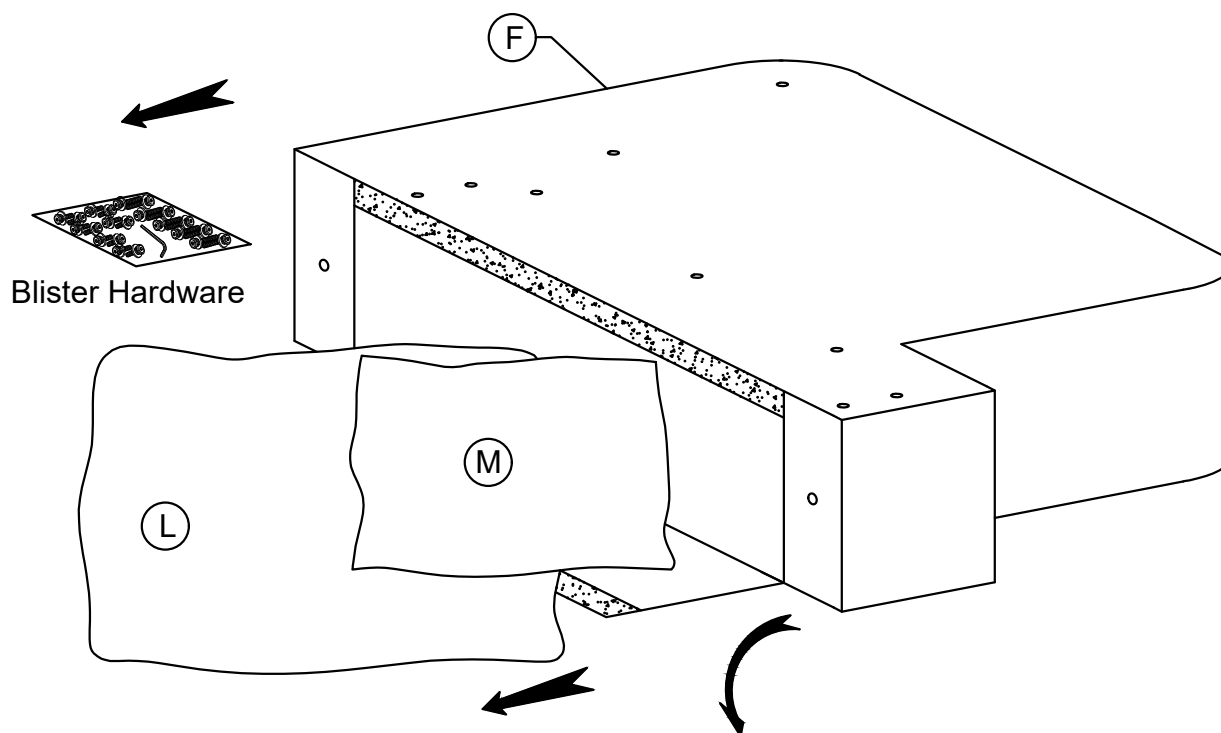


Step 2: Take the Pillow (M), Back Cushion (L), Middle Support Legs (H) out from the Armrest Right (A).
Velcro the bottom of the Armrests

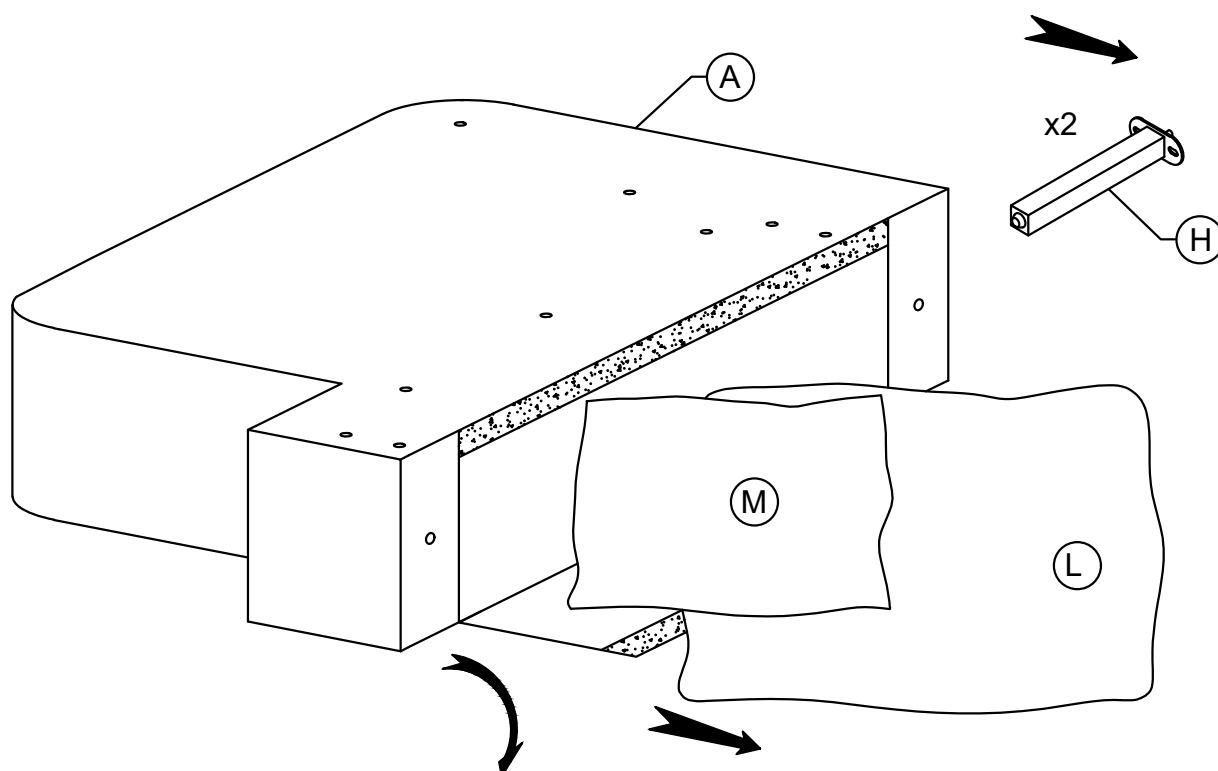


Step 3: Open the Seat Cushions (I, K, J), Back Cushions (L) and Pillows (M) by suitable tools.


Note: Cushions need 48 hours to bounce back.

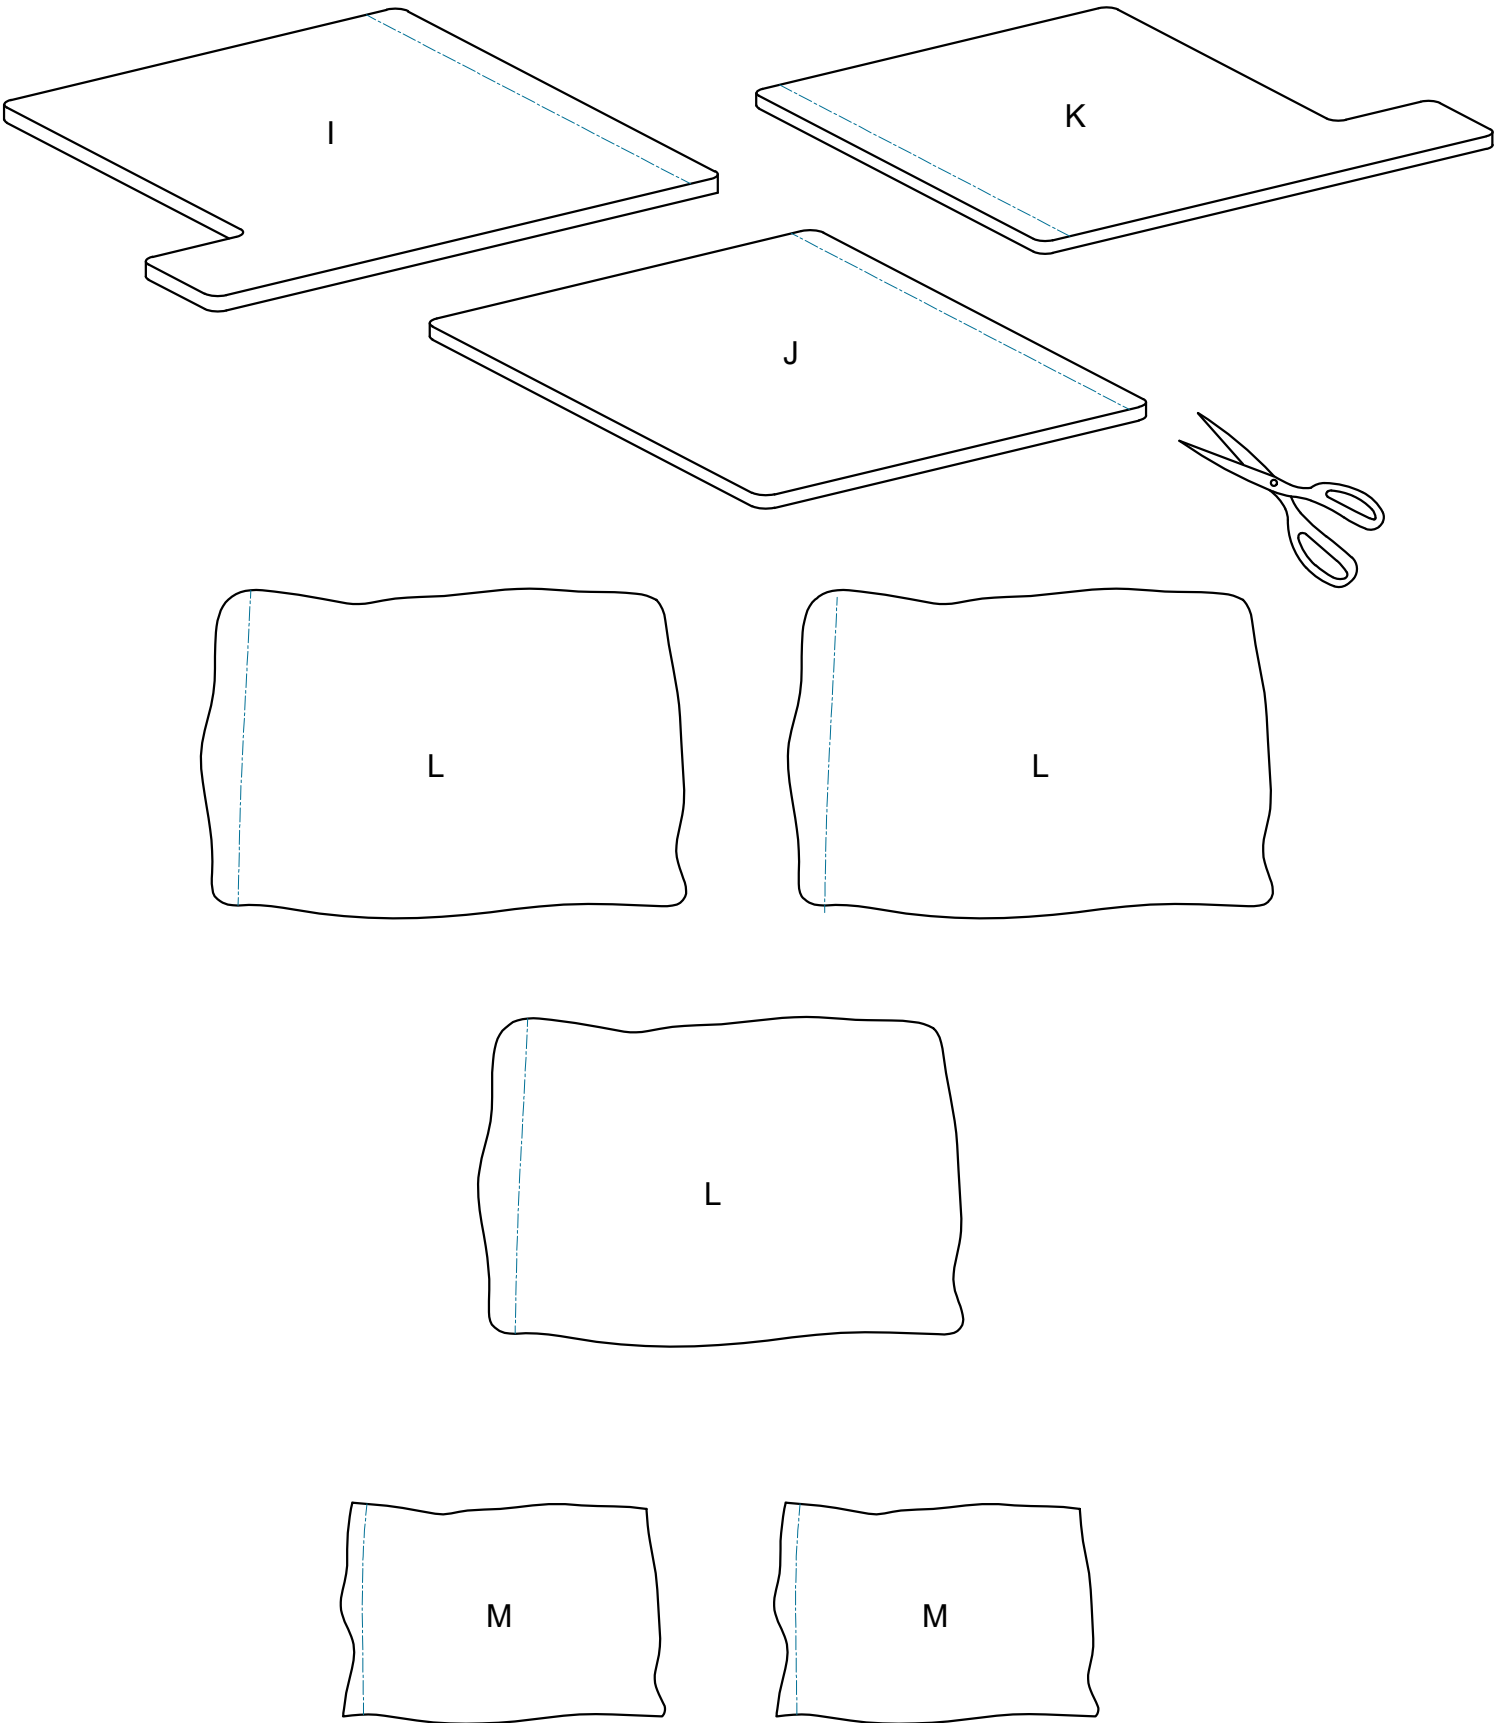


Step 4: Close the velcro
Attach the sofa Legs (G) to Armrests (A / F)

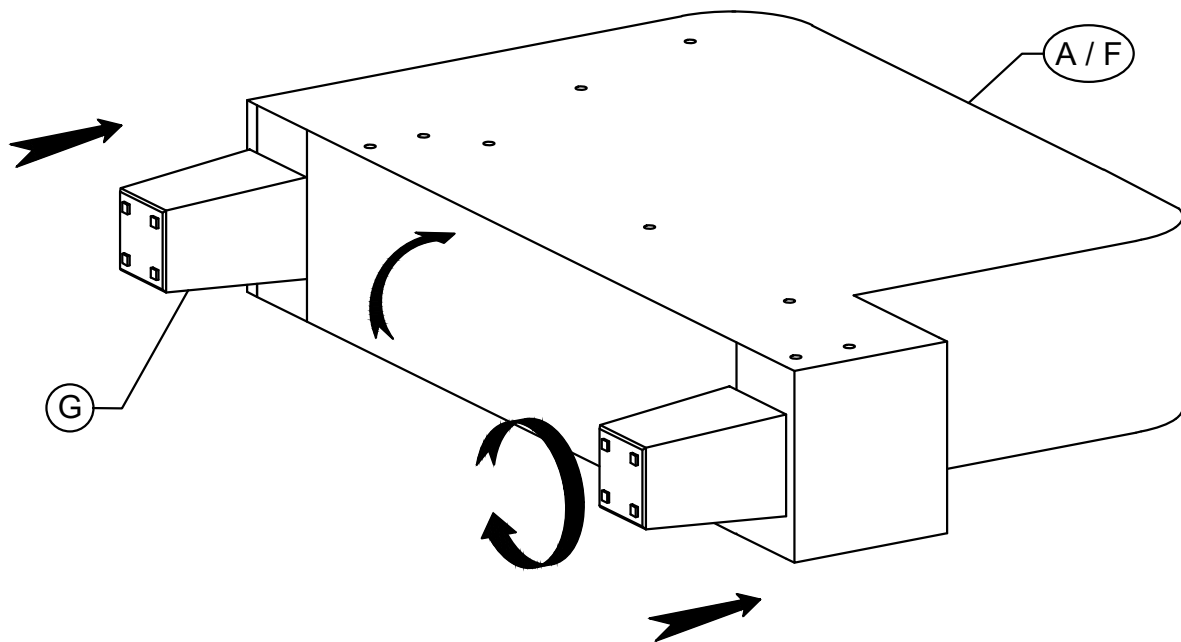


Step 5: Attach Support Rails (B) to Armrests (A / F) by the Bolt 5/16" x 50mm (P) and Allen Key (R)

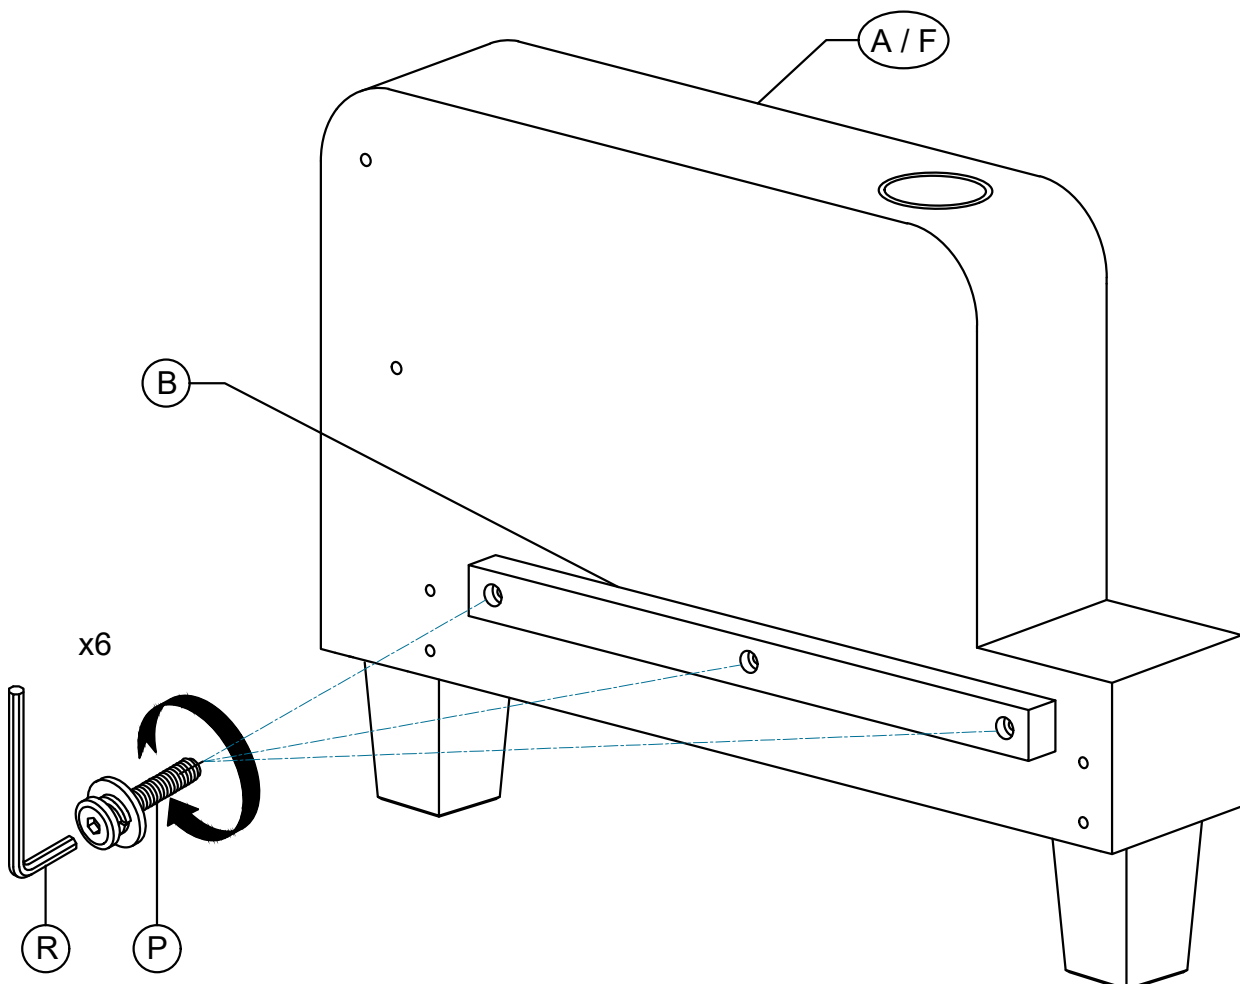


Step 6: Insert Bolts 1/4" x 25mm (Q) with Allen Key (R) on the Armrests by manually. NOTE: Do not fully tighten the bolts, leave at least 10mm visible so that you can hanger hook on the bolts.

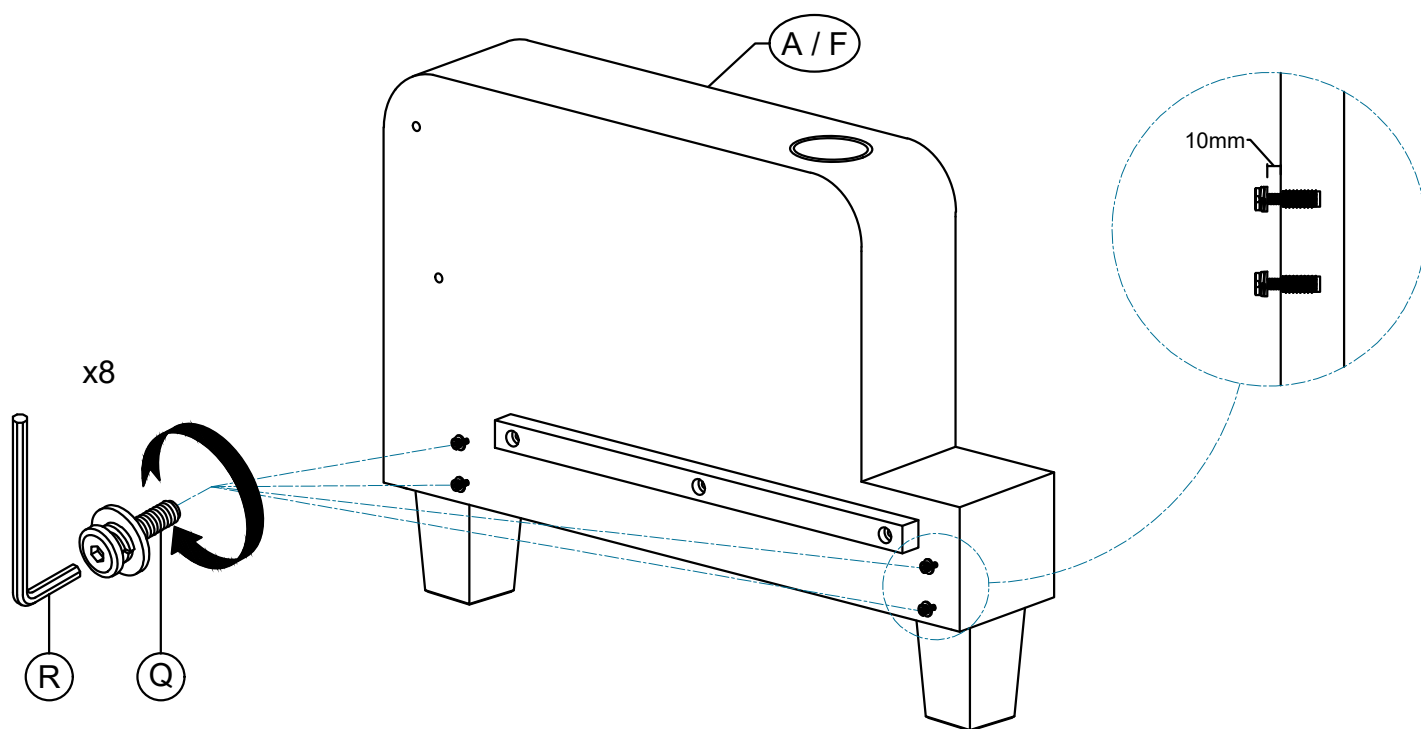


Step 7: Raise the Front/Back Panels (C) up , bring the Front/Back Panels (C) and align the hook on the side rail to the bolts. Once the Front/Back Panels (C) is set, tighten all bolts by using a Allen key (R). After assembly, re-tighten all bolts for a snug fit. DO NOT OVER TIGHTEN.

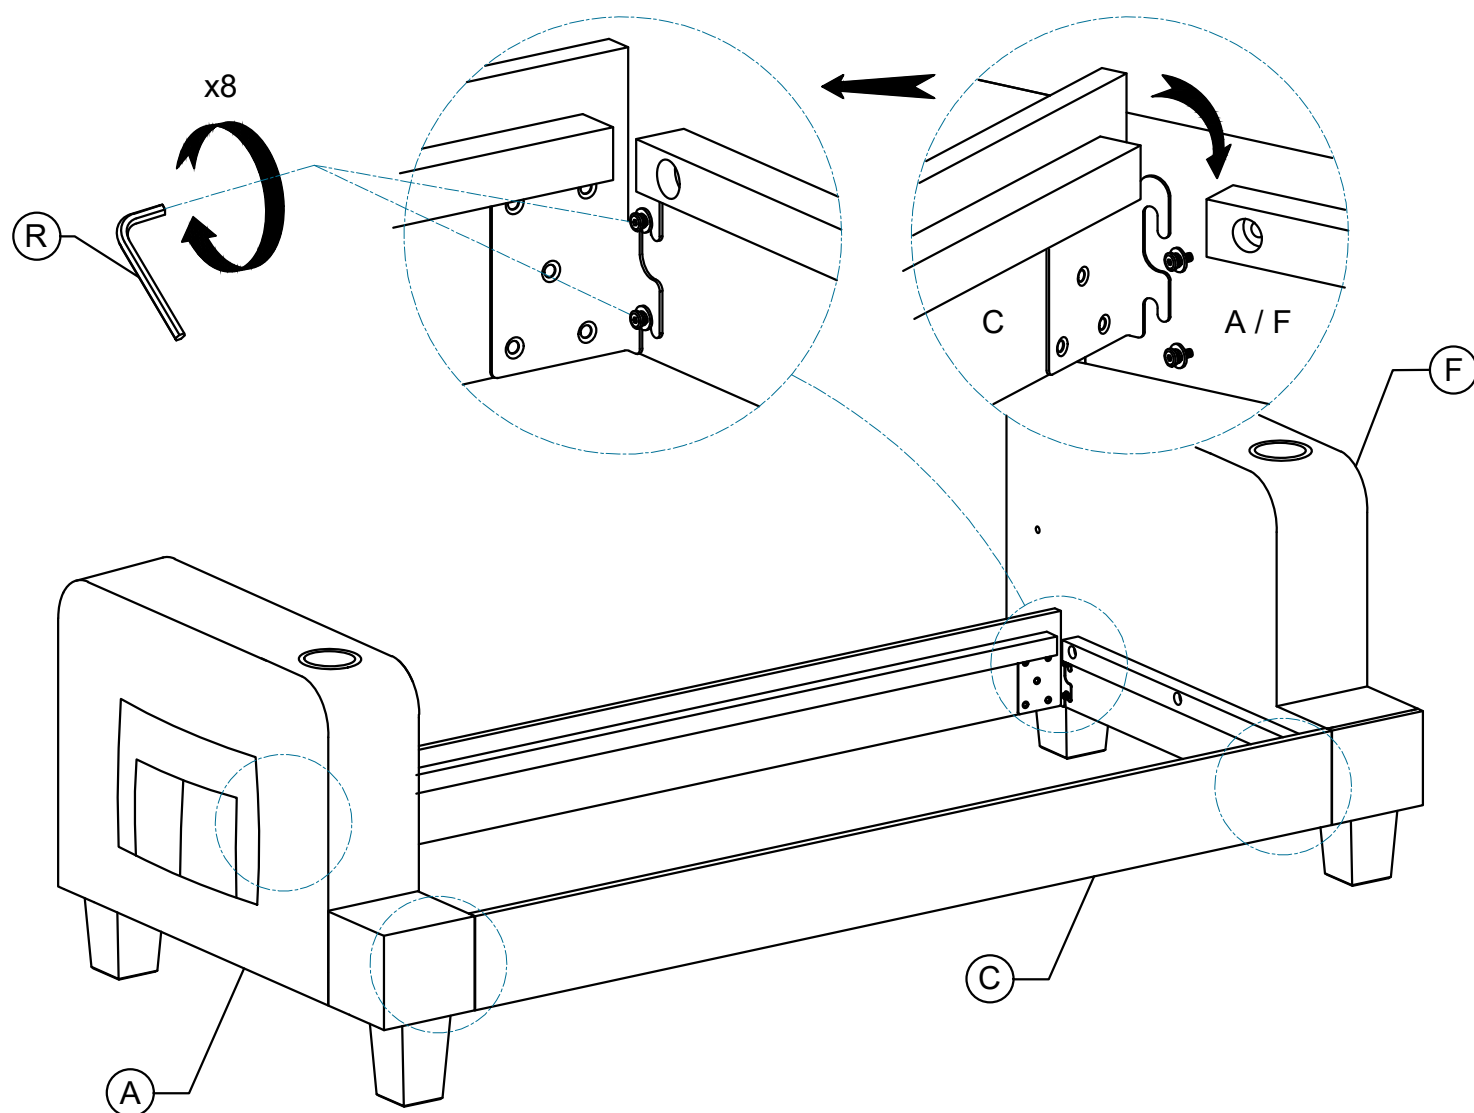


Step 8: Attach Front Panel Cover (N) by Velcro

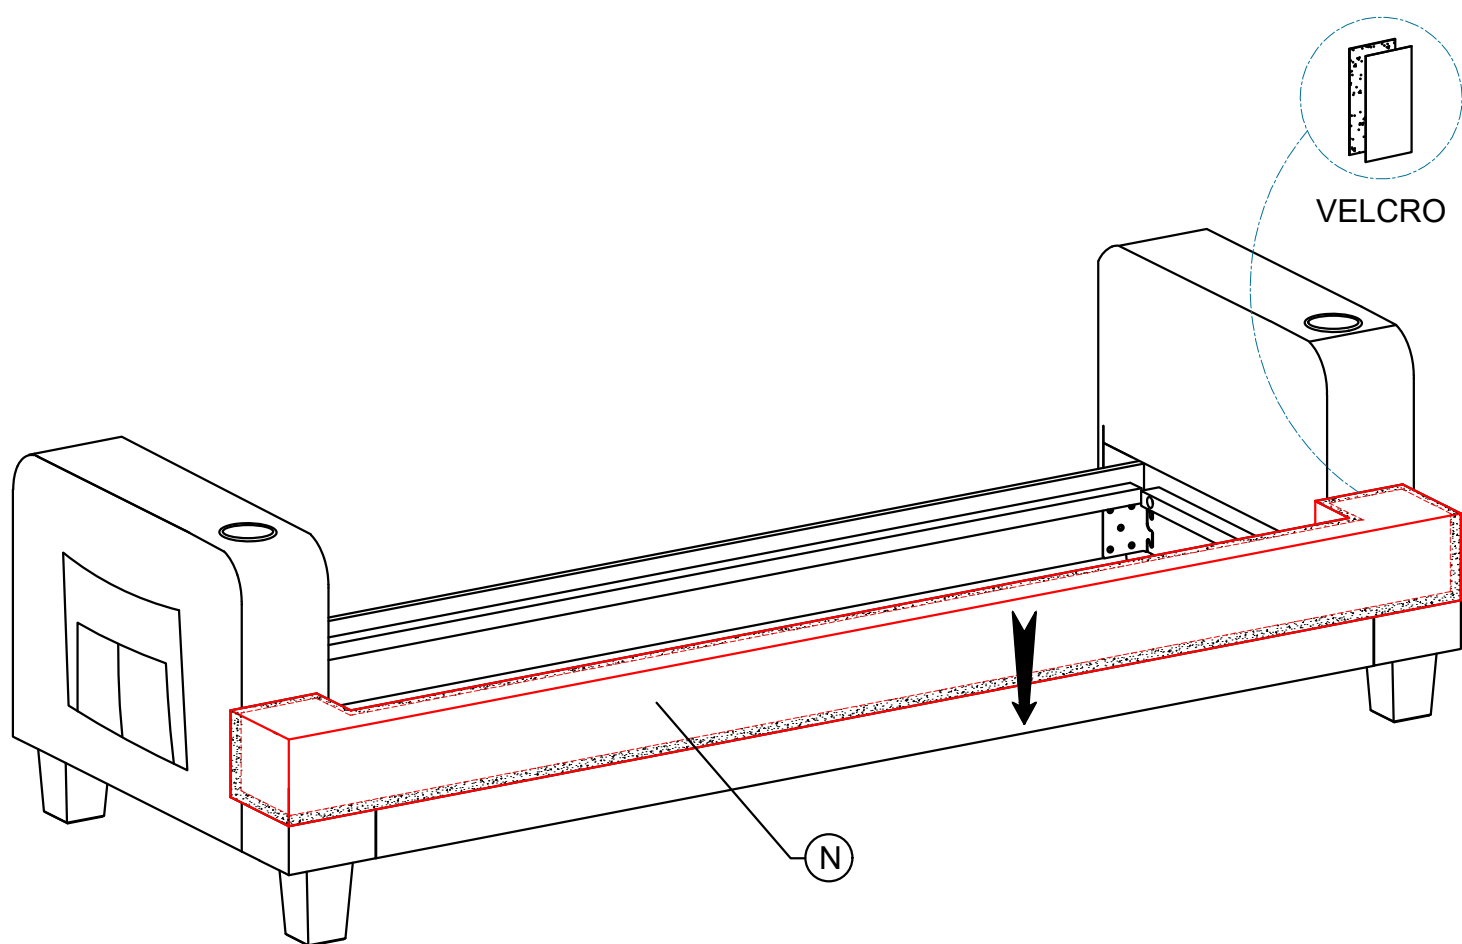


Step 9: Install Middle Support Legs (H) to Seat Frame (D) by Bolts 5/16" x 20mm (O) with Allen Key (R)
The distance between the slot is ~15-20mm.
NOTE: The legs can rotate if not positioned properly.

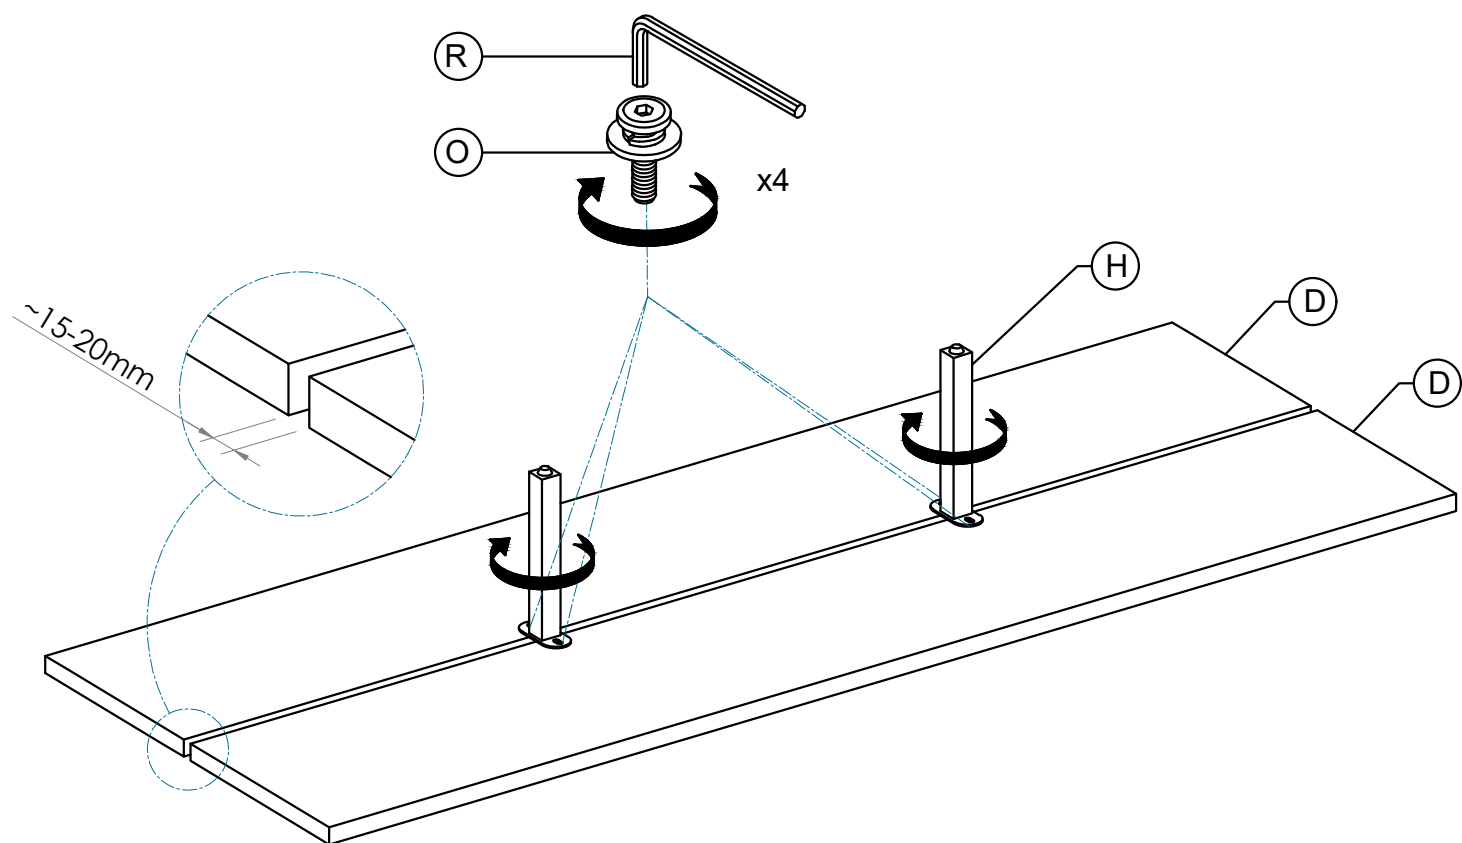

Step 10: Drop Seat Frames (D) to the Armrest (A / F)

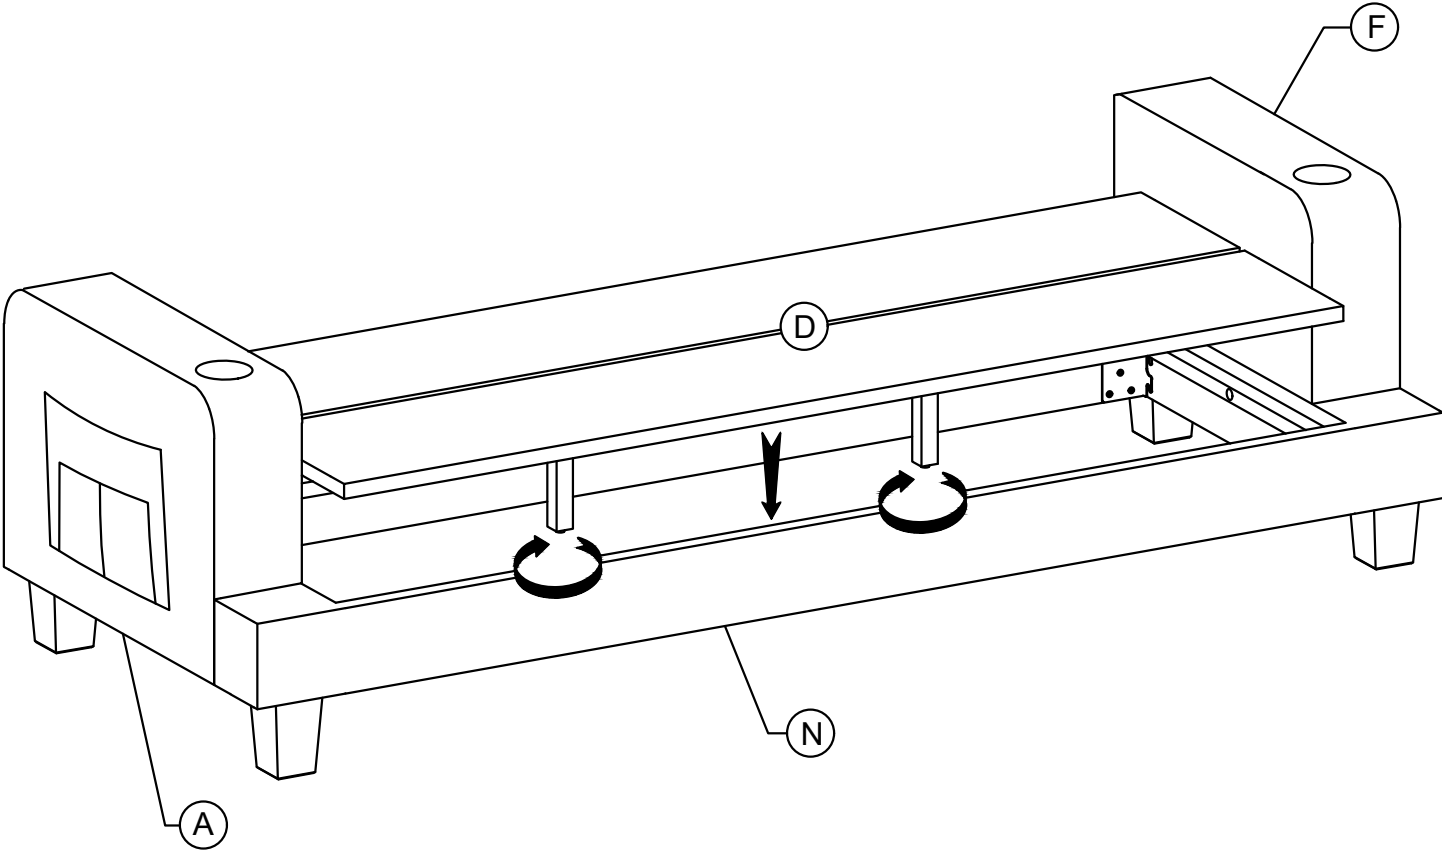


Step 11: Insert the Seat Cushions.

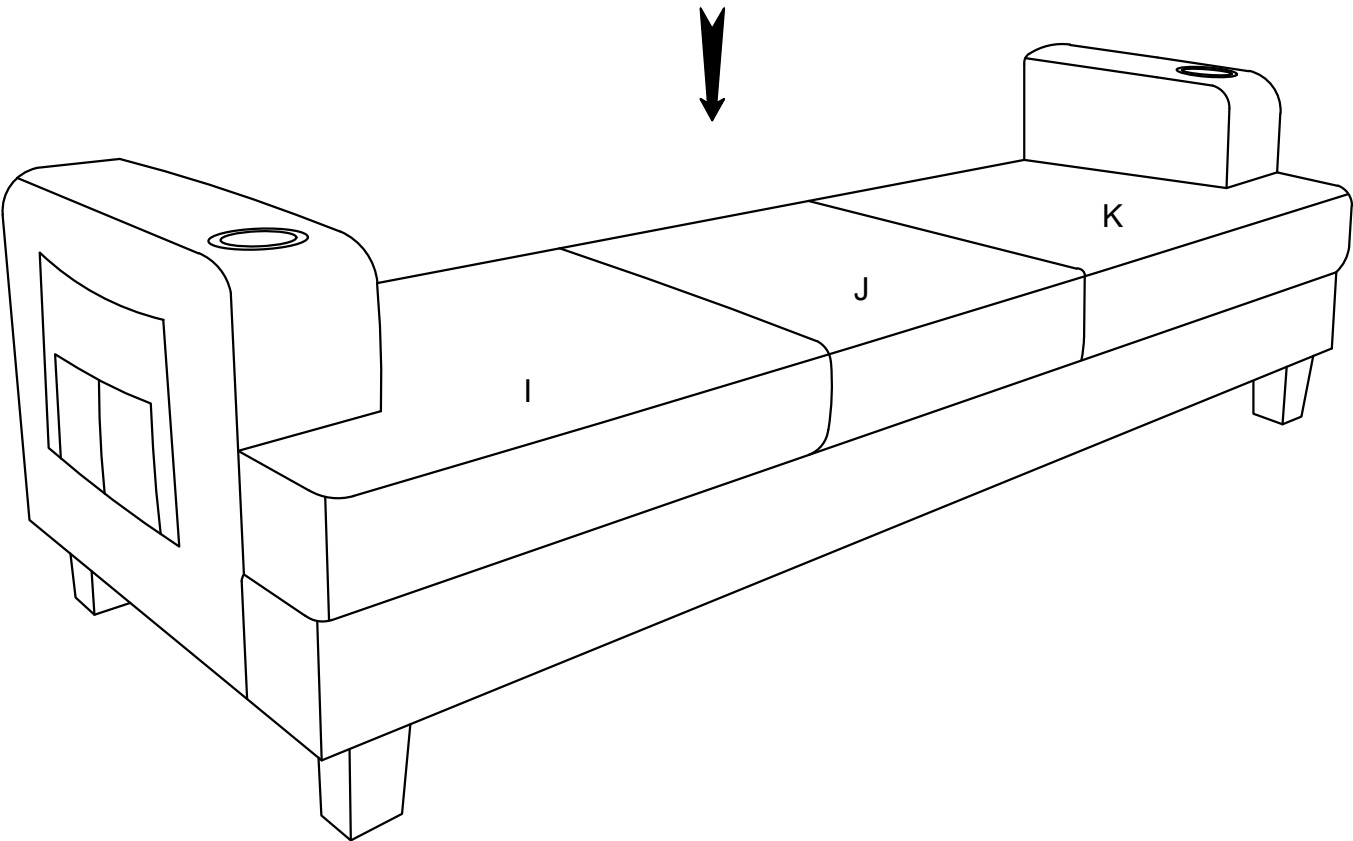

Step 12: Overturn back cover, open zipper


To lean Backrest Frame (E) on the Seat Cushions (I, J, K), install bolts at the bottom Backrest Frame (E) to Armrest (A / F) by Bolts 5/16" x 50mm (P) with Allen Key (R).

Do not fully tighten the bolts, equally distance divided on both sides.

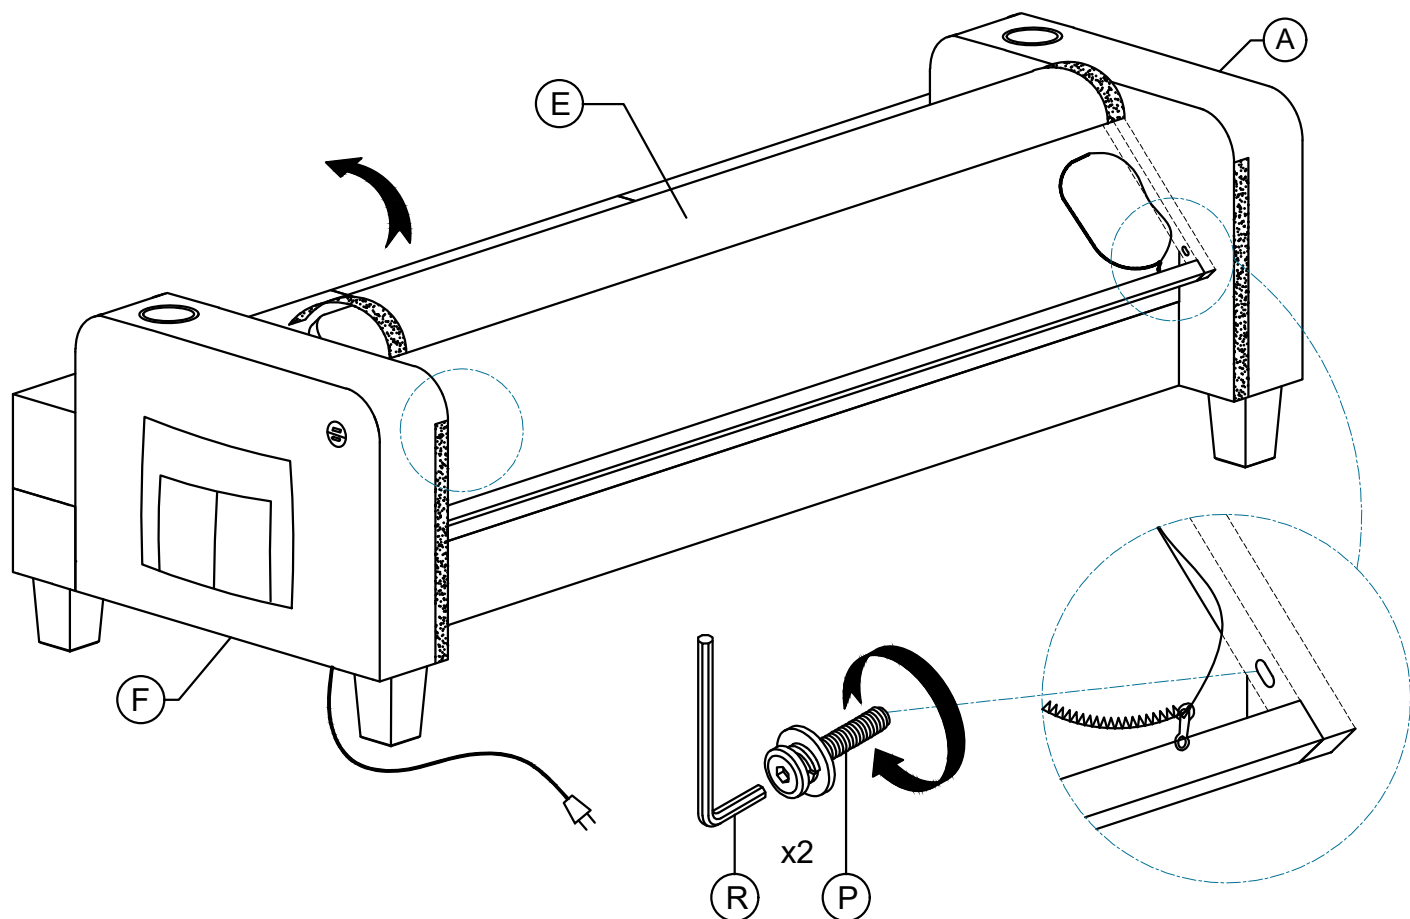


Step 13: After securing the 2 bolts at the bottom, rotate the Backrest Frame (E) and install to Armrest (A / F) by Bolts 5/16" x 50mm (P) with Allen Key (R).

Equally distance divided on both sides. After assembly, re-tighten all bolts for a snug fit

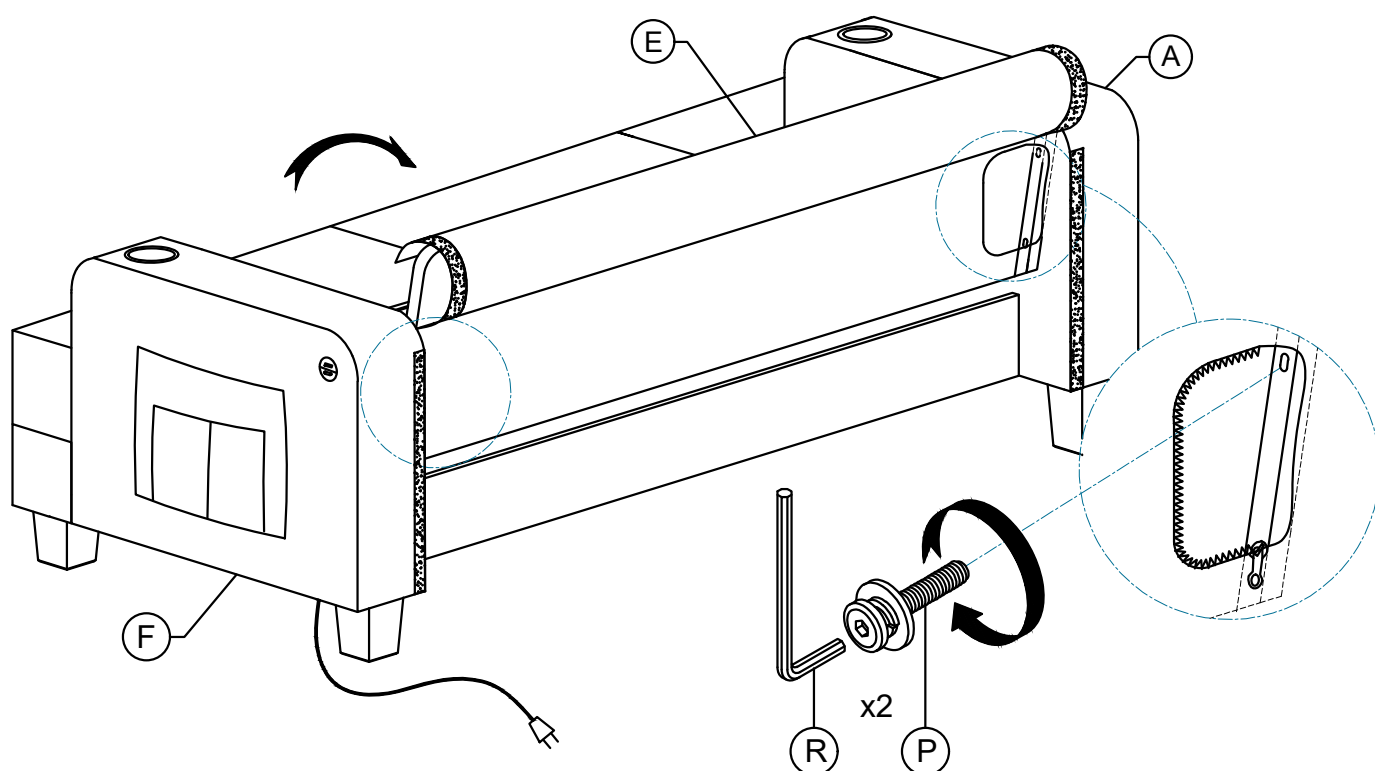

Step 14: Close the Zipper

Close Velcro the cover of Backrest Frame (E) and Armrest (A / F)

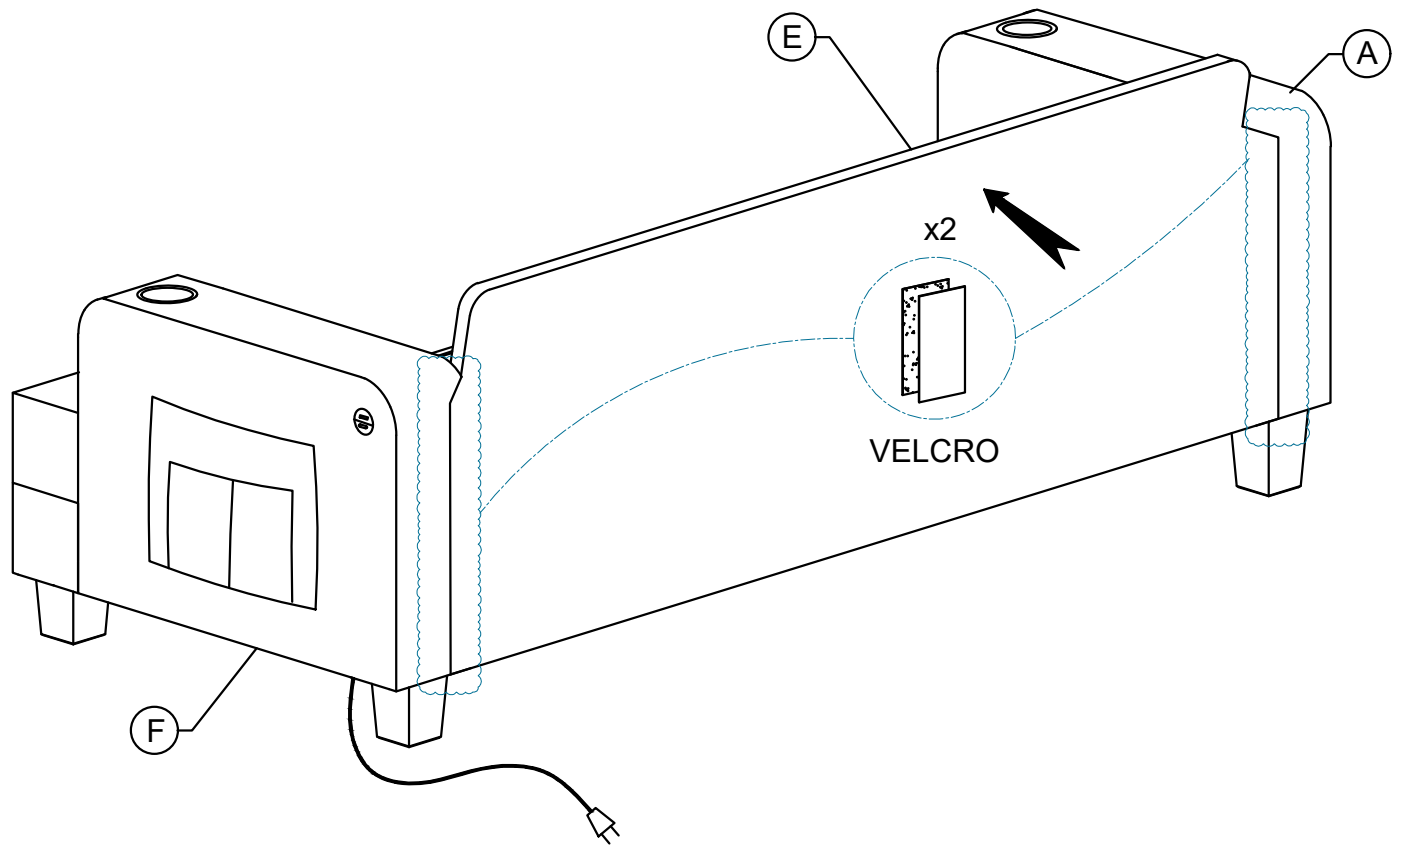

Step 15: Insert the Back Cushions and Pillows.

