


ASSEMBLY INSTRUCTIONS

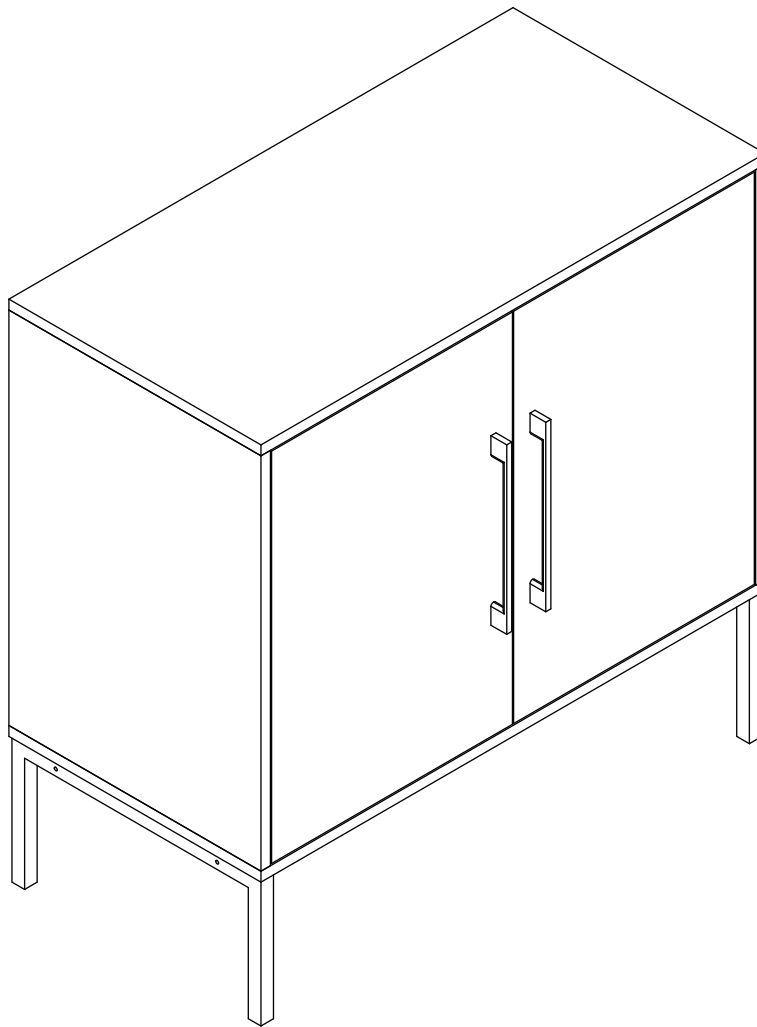

THIS INSTRUCTIONS CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ BEFORE ASSEMBLY AND KEEP FOR FUTURE REFERENCE.

Need Parts or Assistance? Email us at cs@nbrehome.com

IMPORTANT NOTICE

- This product contains small components, please ensure that they are kept away from small children.
- THIS INSTRUCTIONS CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ BEFORE ASSEMBLY AND KEEP FOR FUTURE REFERENCE.
- Read each step carefully. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included. Most parts are labelled or stamped on the raw edge.
- Work in spacious area, preferably on a carpet, near the place the unit will be used.
- Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.
- Move your new furniture carefully, with two people lift and carry the unit to it's new location.
- Never push, drag or pull your furniture (especially on carpet)






















PLEASE DO NOT RETURN PRODUCT TO US IMMEDIATELY

If a part is missing or damaged, email our customer service.
We will gladly ship your replacement parts FREE of charge.

Need Parts or Assistance? Email us at cs@nbrehome.com





For Prompt, reliable service, please have your assemble instruction ready.

 WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: <ul style="list-style-type: none">• ALWAYS install tipover restraint provided.• NEVER put a TV on this product.• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.• NEVER open more than one drawer at a time.• Place heaviest items in the lowest drawers.
	

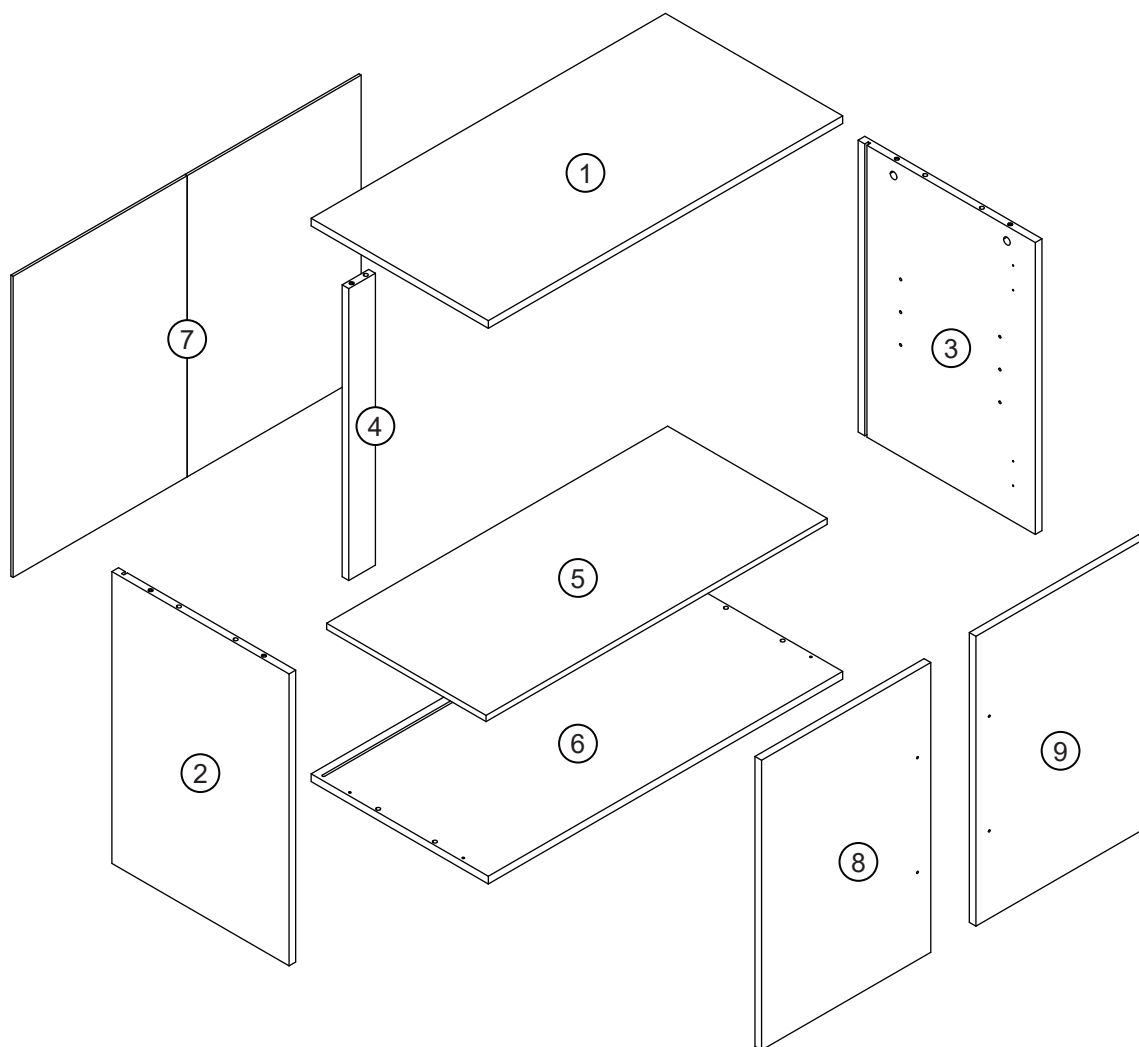



Step 1

First lock the screw A to the part 1, and then use the screw J to lock the magnetic touch K to the part 1. The installation position is as shown in the figure below.

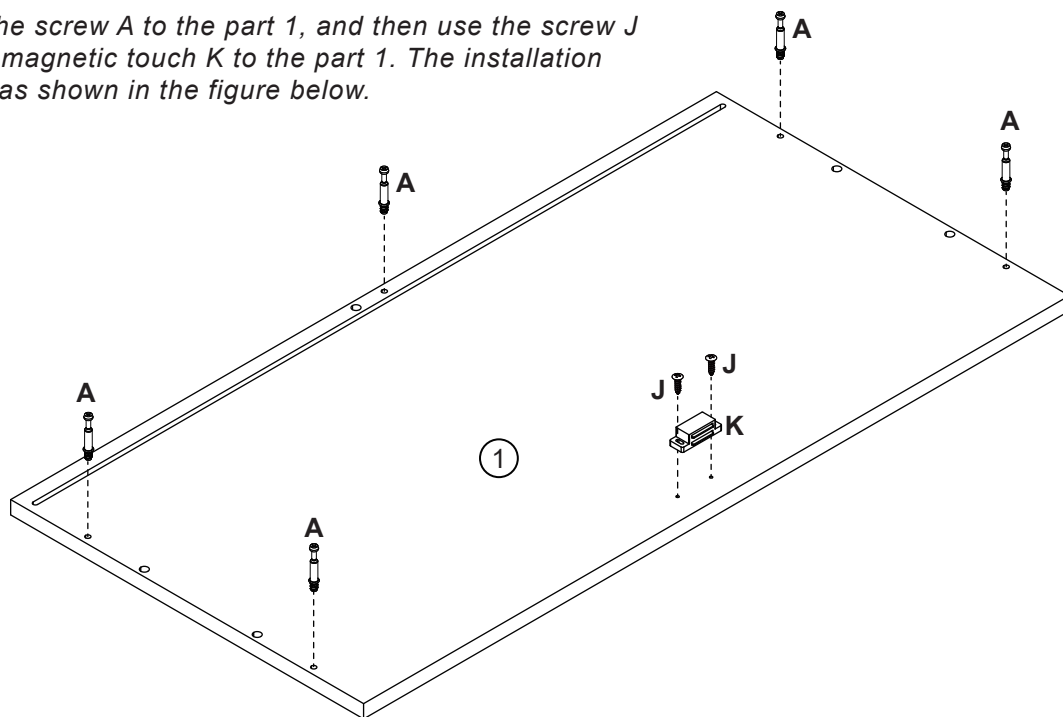


Step 2

Insert the dowel c into part 1 first, then assemble parts 2, 3, 4 and part 1, put the eccentric b into the corresponding hole and use a flat-blade screwdriver to turn it clockwise to tighten, the installation position is as shown below.

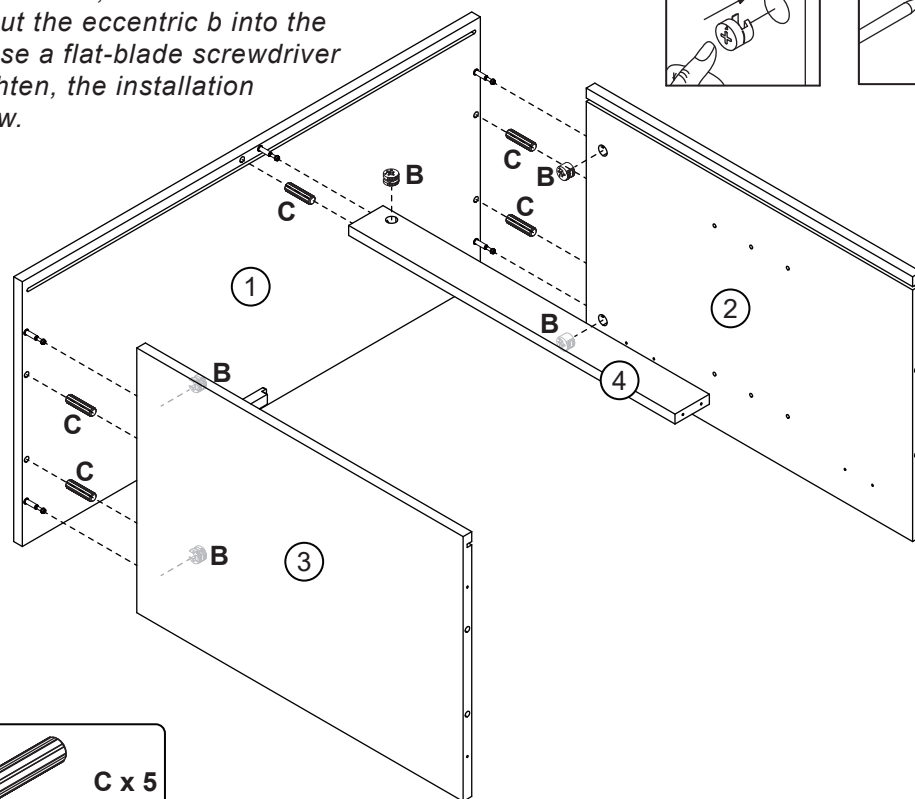




Step 3

Insert part 7 along the slot, the position is as shown below.

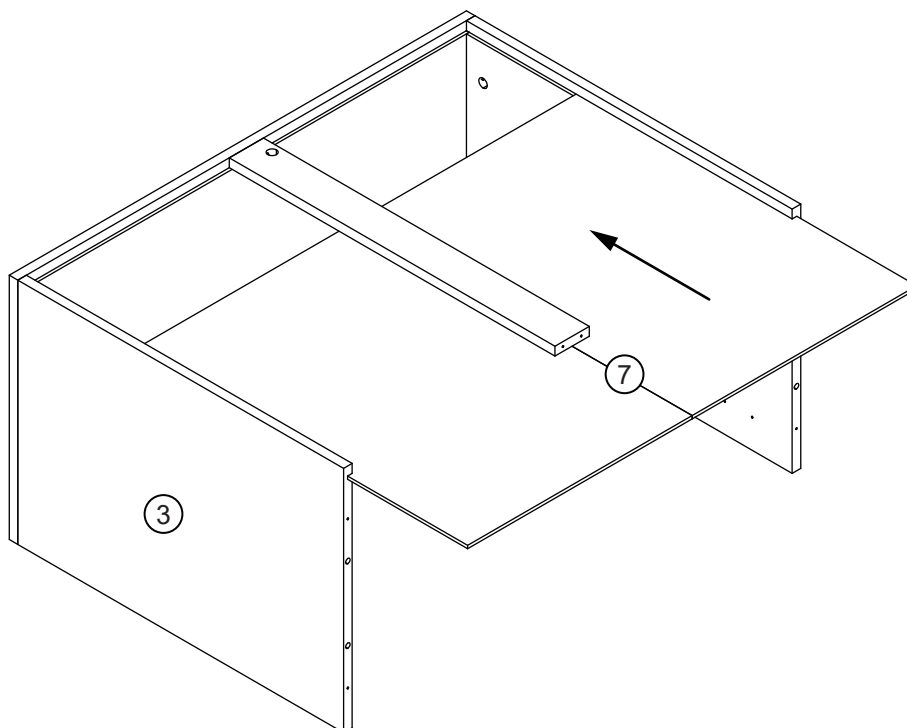



Step 4

Insert the dowel c into part 6 first, then assemble the part 6 and parts 2 and 3, and then use the screw D to lock it. The installation position is as shown in the figure below.

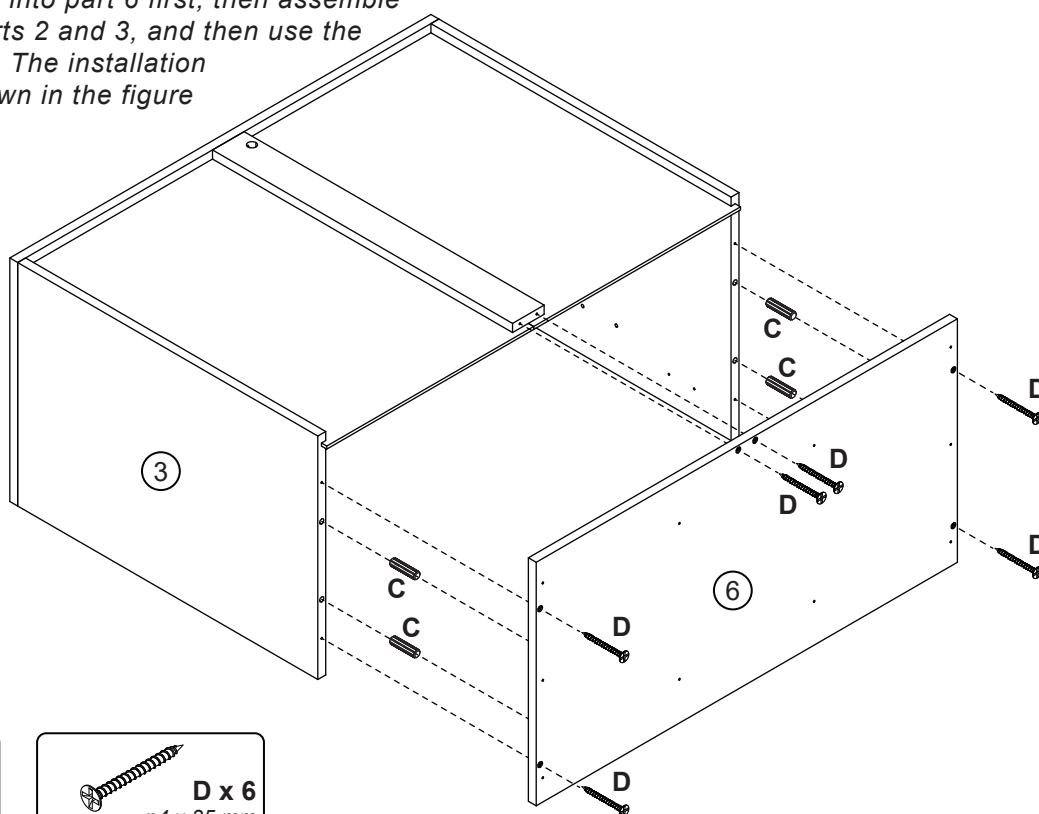


Step 5

Use the screw *T* to assemble the hardware *R* and the hardware *S*.
The screw *T* needs to be tightened with an Allen key *U*. The installation location is as shown in the figure below.

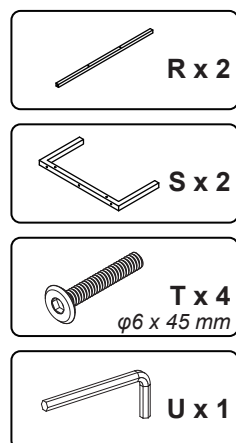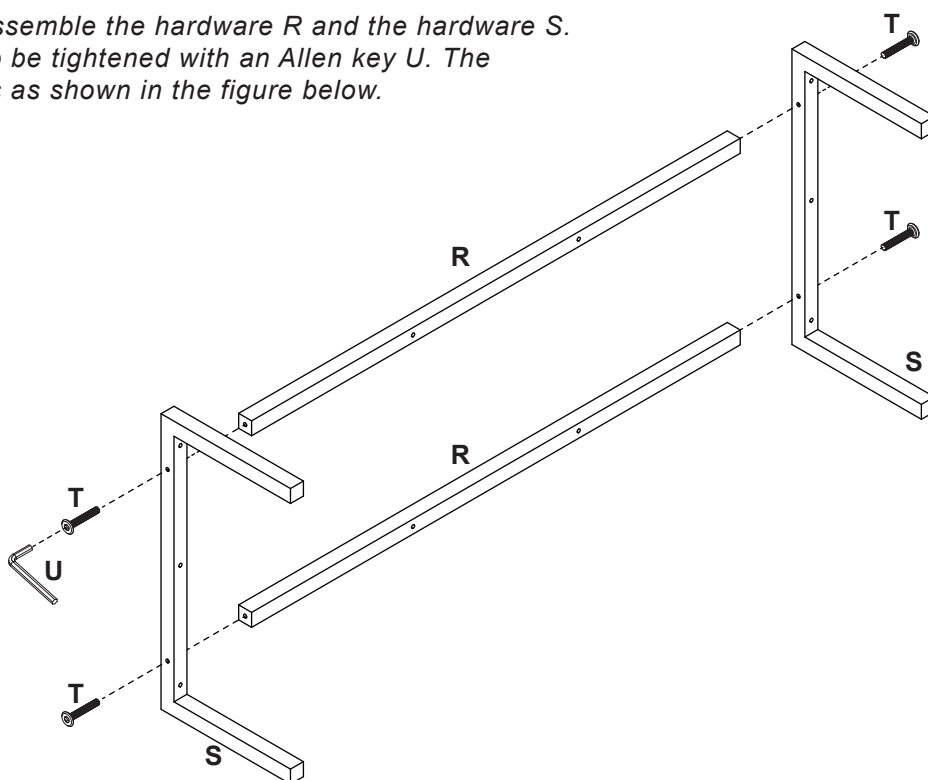



Step 6

Use screw *G* to lock the combination of hardware *R* and hardware *S* to part 6. The installation position is as shown in the figure below.

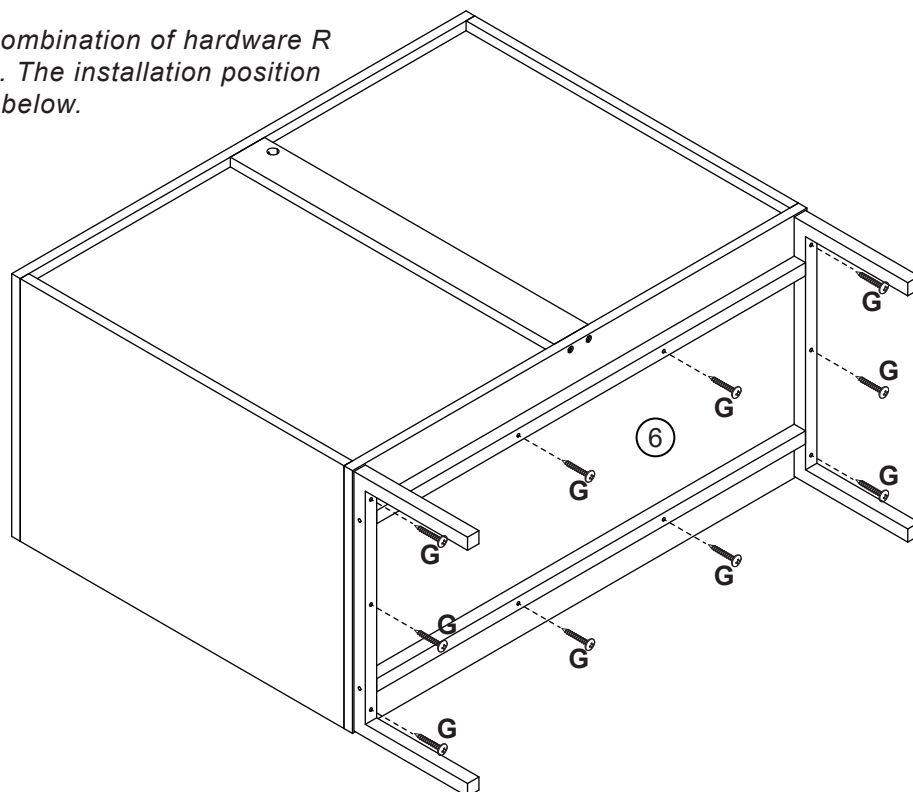


Step 7

First, use the screw *I* to lock the iron plate *H*, then use the screw *Q* to lock the hinge *P*, and finally use the screw *E* to lock the handle *F*. The installation position is as shown in the figure below.

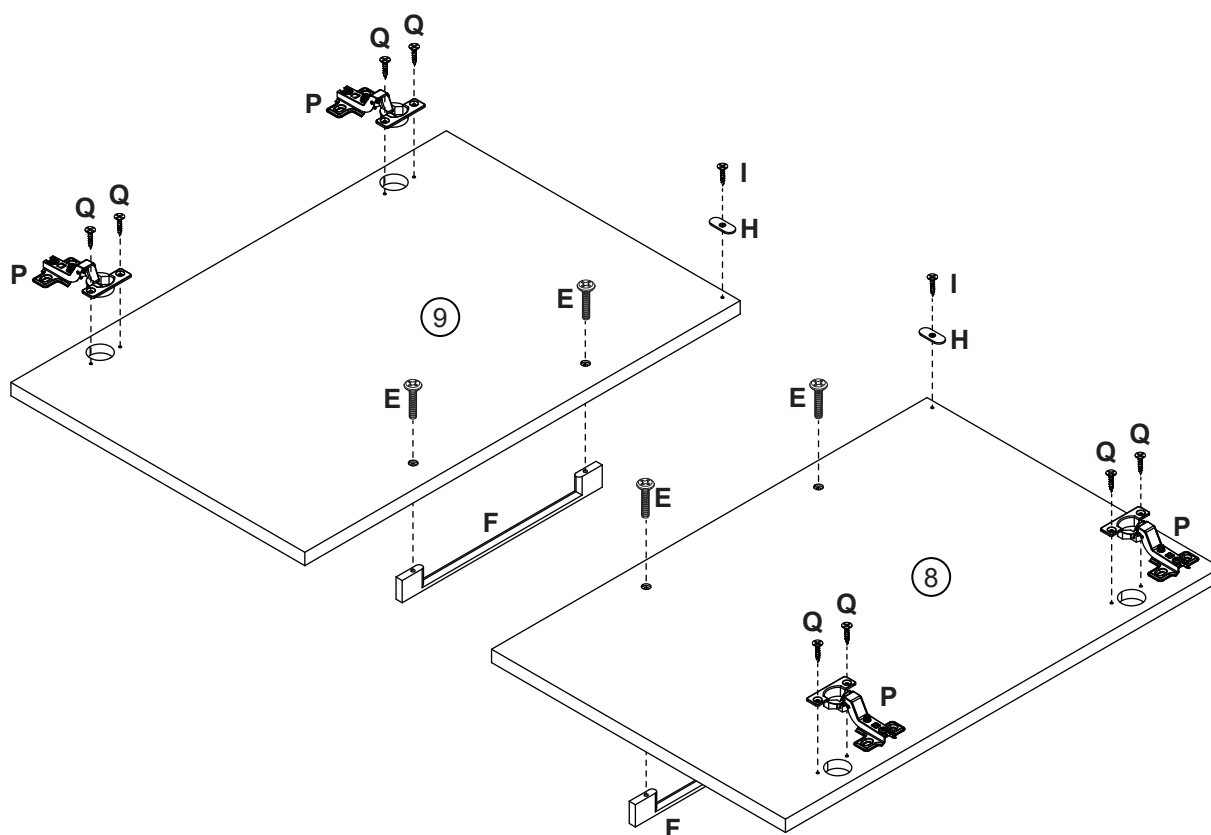

E x 4


M4 x 16 mm



F x 2




H x 2




P x 4

φ26 mm



I x 2

φ2.5 x 10 mm



Q x 8

φ4 x 12 mm

Step 8






It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

a: To adjust the door vertically loosen the screw as shown and move up and down as needed.

b: To adjust the gap from the door to the main frame turn the screw clockwise or anti-clockwise as needed.


c: To adjust the door laterally adjust the screw as shown by turning clockwise or anti-clockwise.

Please fix other screws.

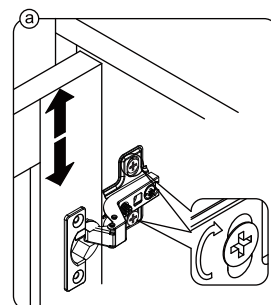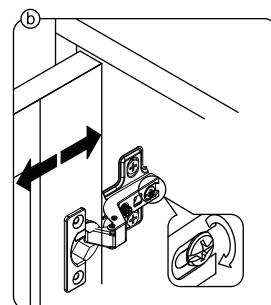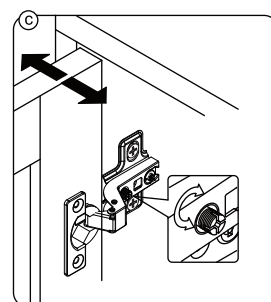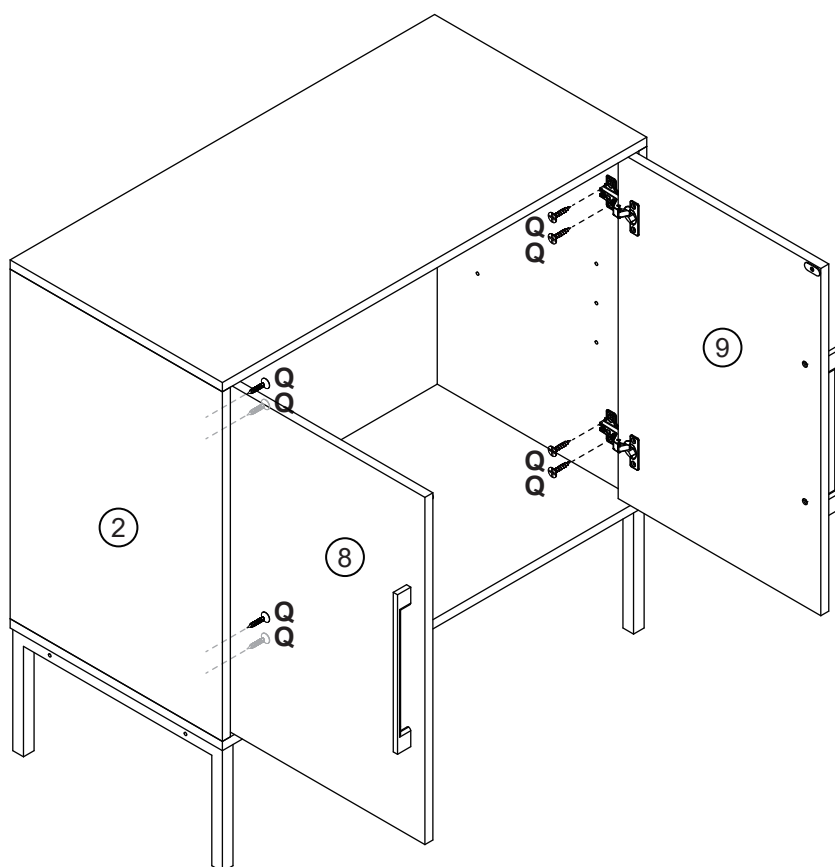

Step 9



First install the layer support L, and then place the component 5 in an inclined position. The installation position is as shown in the figure below.

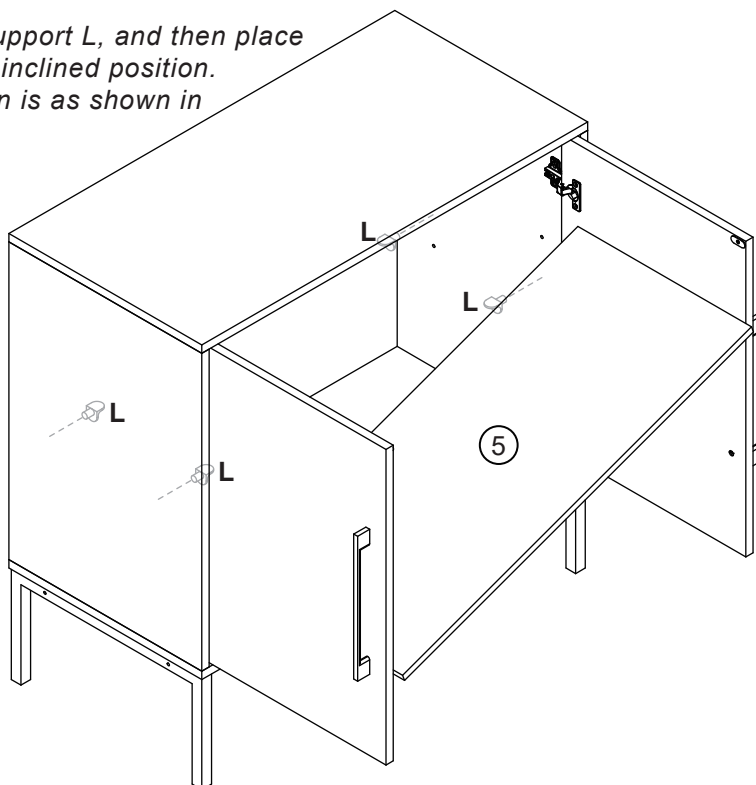

L x 4

Step 10

Use the screws in component M to fasten the back plate buckle. The installation position is as shown in the figure below.

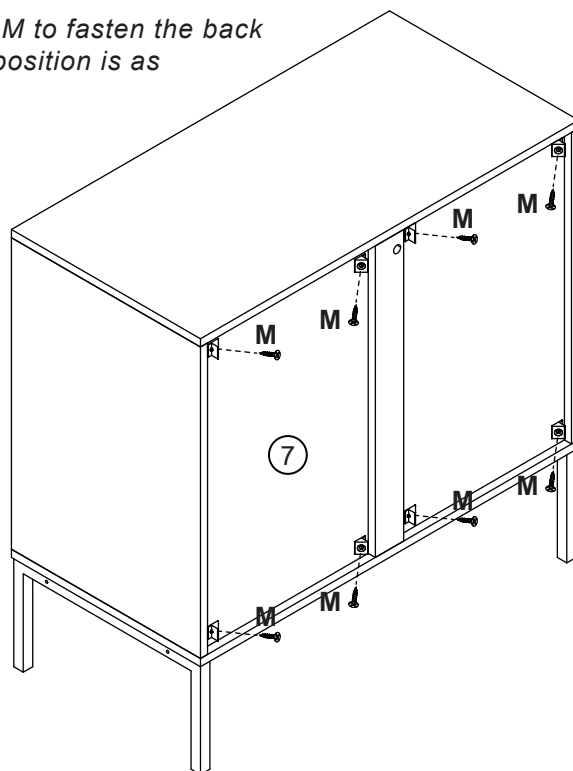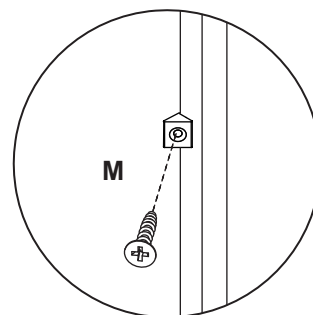

M x 8

Step 11

First fasten the T-shaped iron piece with the short screw in component N, then put the back of the cabinet against the wall, drill holes on the wall where it is placed, and finally use the long screw and expansion screw O in component N to fix the cabinet. The installation location is as shown in the figure below.

