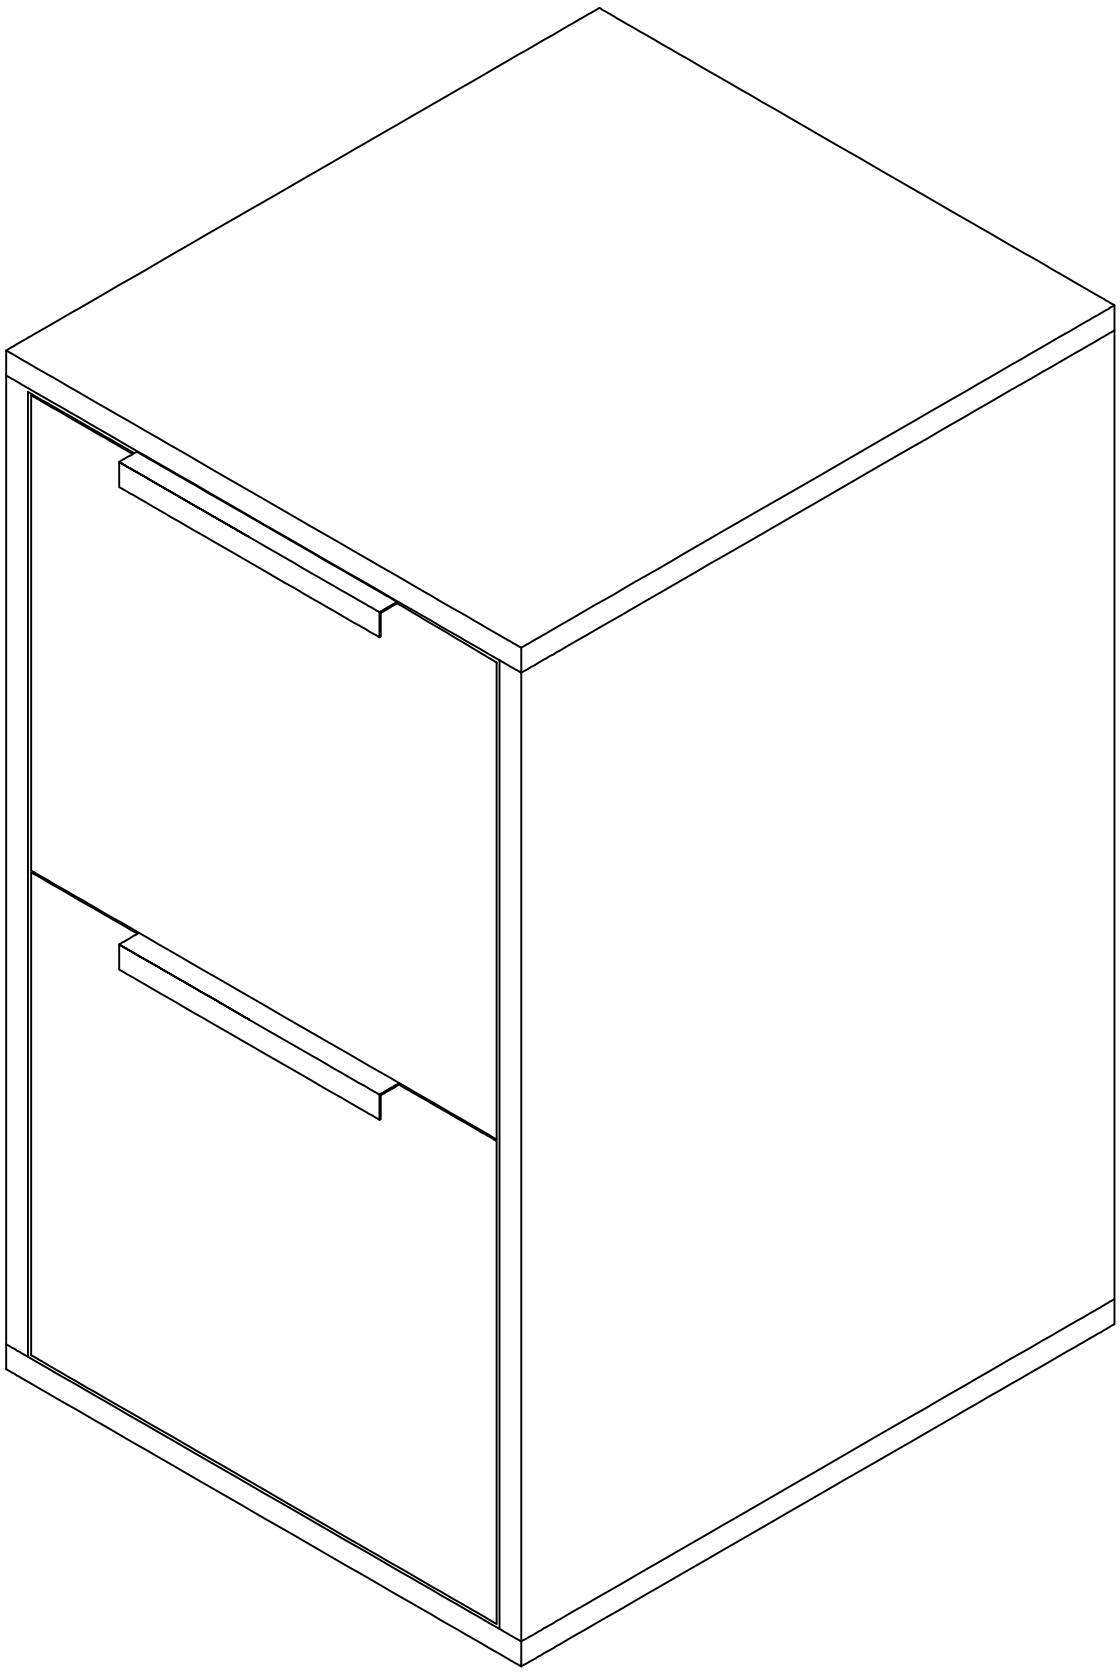
FILE CABINET



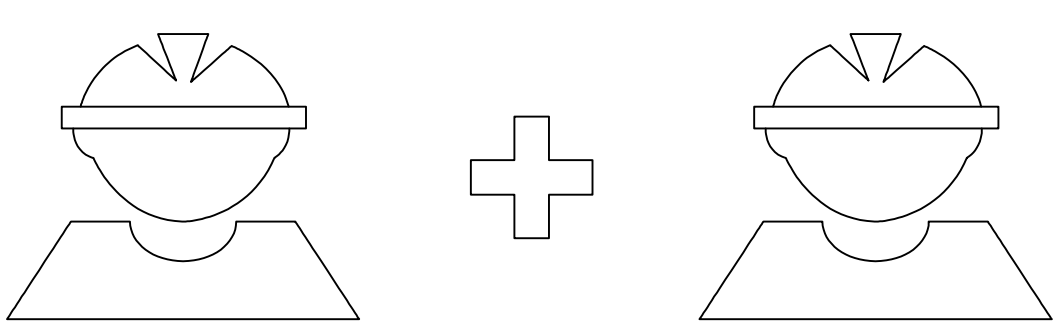
Please scan the QR code to
check the assemble video

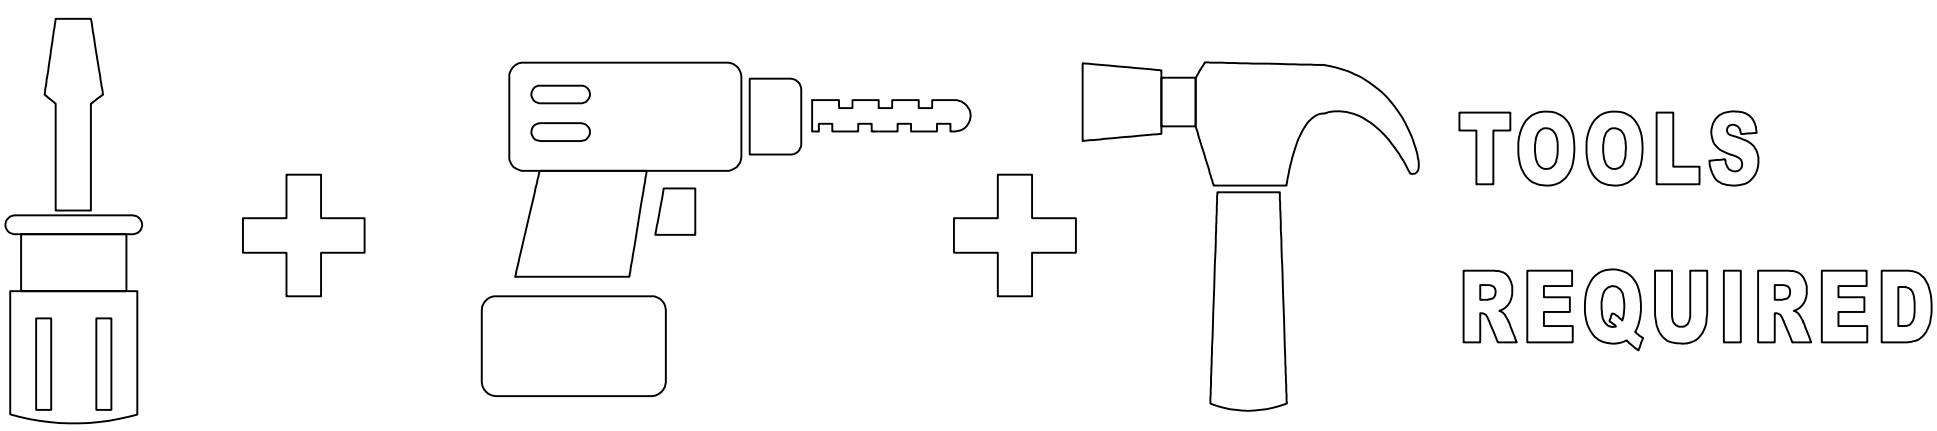
Before you start, here are a few quick pointers:

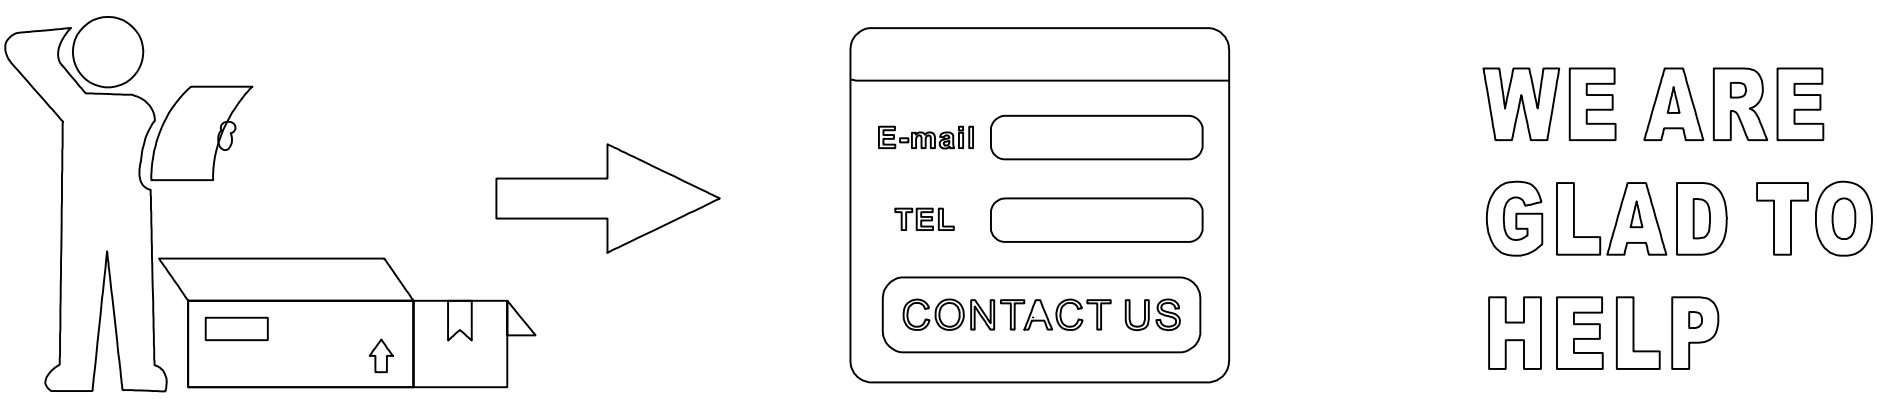
The installation requires two people. so call a friend to join the fun!

For more stability, it's best to anchor the cabinet to the wall.

In this case, along with the items provided you will also need a Level, Percussion Drill and a Hammer







THANK YOU FOR CHOOSING US!

Your new Wall cabinets has arrived and it will make your life so much easier.That's why we put so much effort into designing it to perfectly fit your needs.

But first things first,we need to install it!

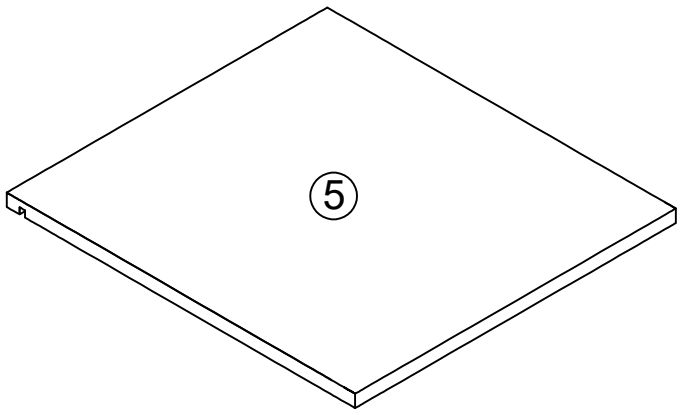
When we say we,we mean we're going to guide you,step by step.We created this instructions manual so that you won't feel overwhelmed and get your new cabinet up and ready to use in no time!We also know that if sometimes things just don't seem to fit,so don't hesitate to drop us a line at support@greatmeetcabinet.com if you have questions or need help!

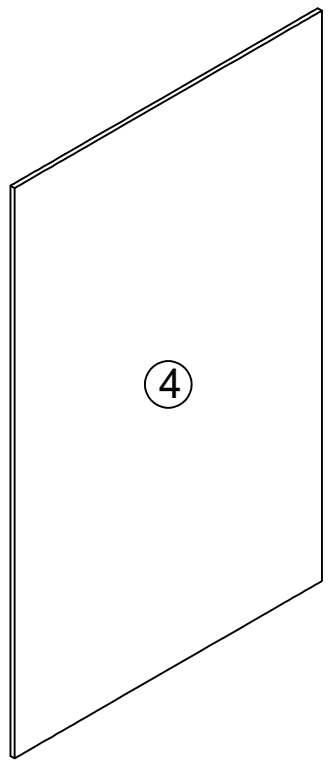
Anyway,this wall cabinet can't wait to be put into use,so let's assemble it!

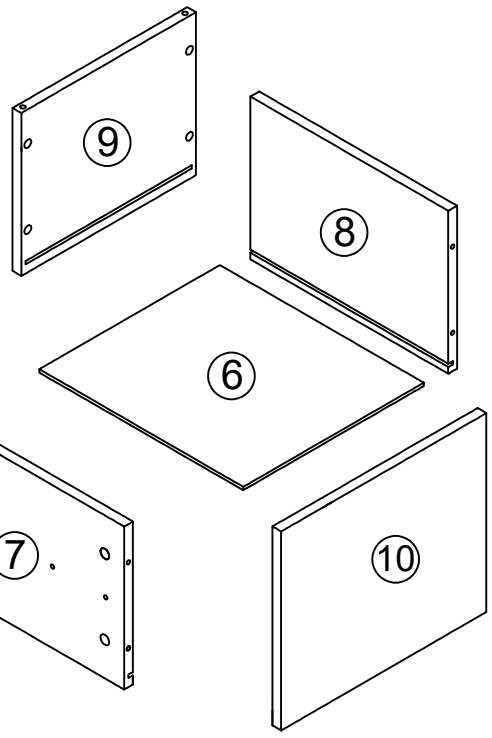
MISSING A PART?

DON'T WORRY,WE GOT YOUR BACK!

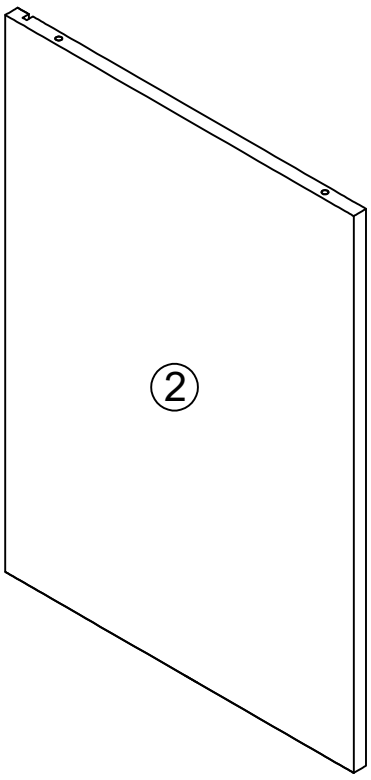
Compare the sketch on the next page with your package.Are all the pieces there?
However,sometimes errors happen,so if anything is missing just send us an email and we will make sure to fix it!

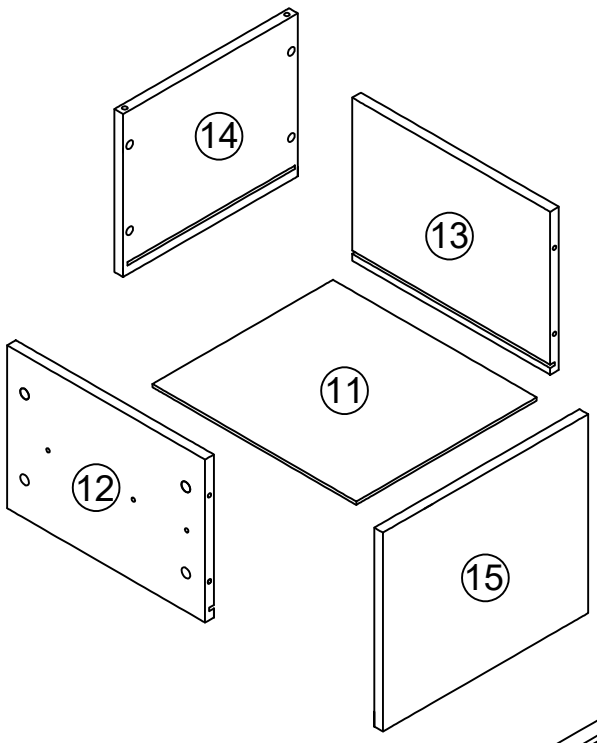

5

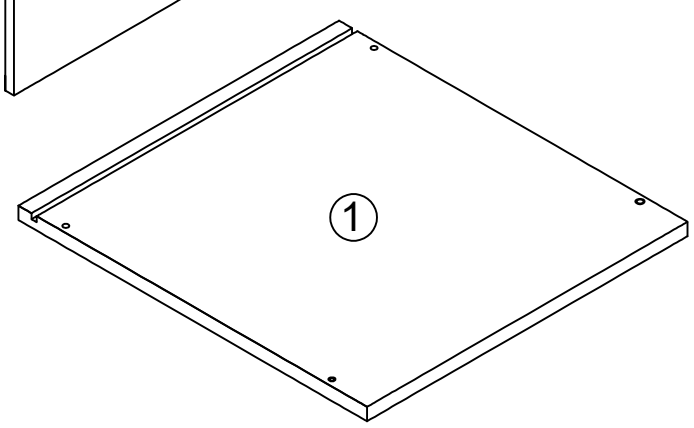

4

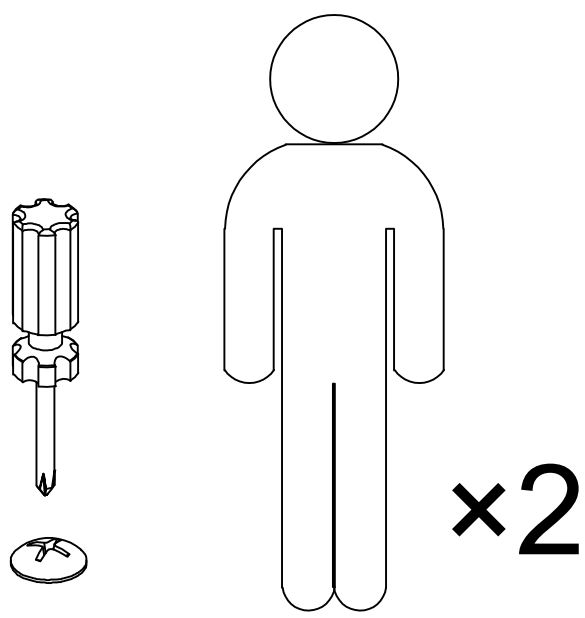

9
8
6
7
10

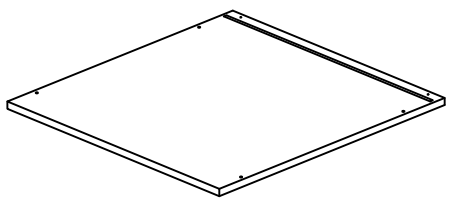
3

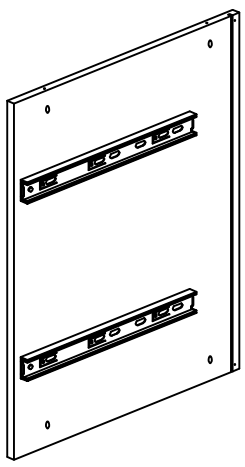

2

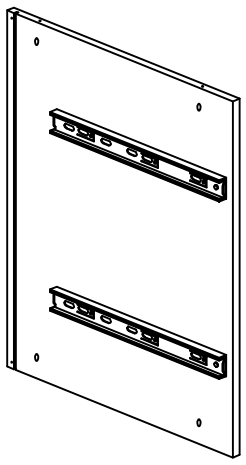

14
13
11
12
15

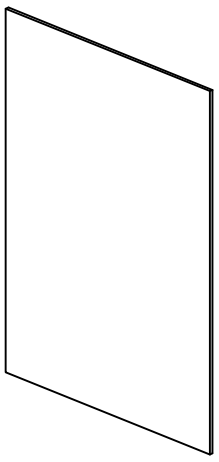

1

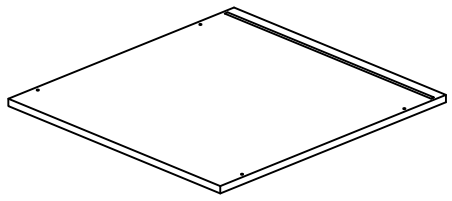

×2

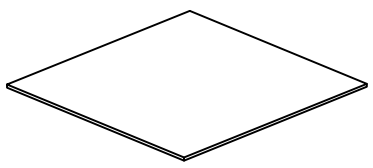
① 
×1

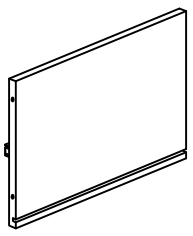
② 
×1

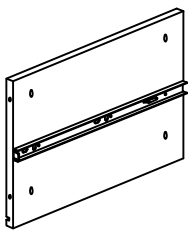
③ 
×1

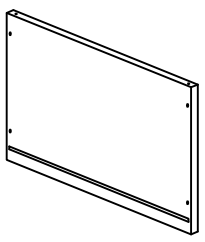
④ 
×1

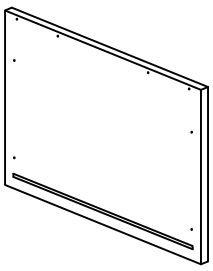
⑤ 
×1

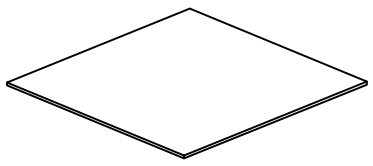
⑥ 
×1

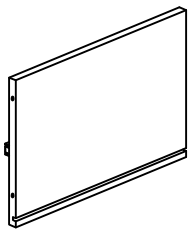
⑦ 
×1

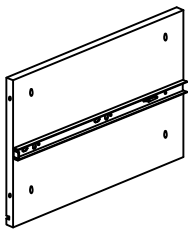
⑧ 
×1

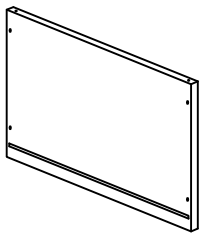
⑨ 
×1

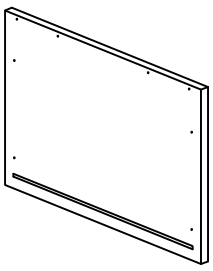
⑩ 
×1


⑪ 
×1

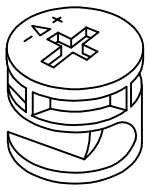
⑫ 
×1

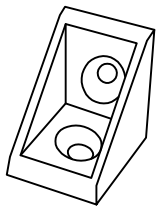
⑬ 
×1


⑭ 
×1


⑮ 
×1

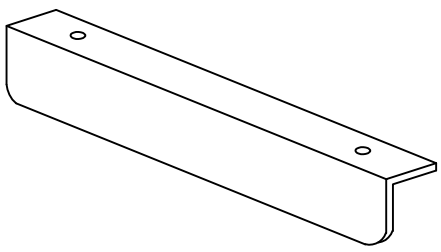
A 
×24

B 
×24

C 
×4


D1 
Silver screw
×8

D2 
Black screw
×4

E 
×2

F 
×4

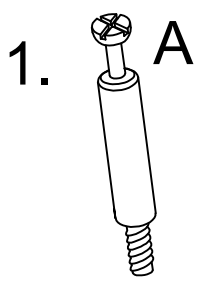
G 
×4

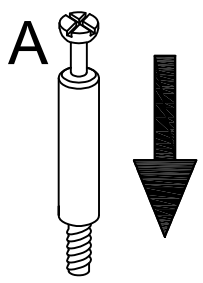
H 
×1

WARNING!

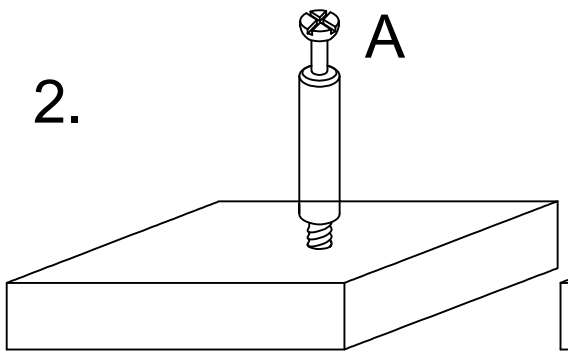
Important information, please read carefully and retain this information for future reference.
Only adults are allowed to assemble, keep children away.

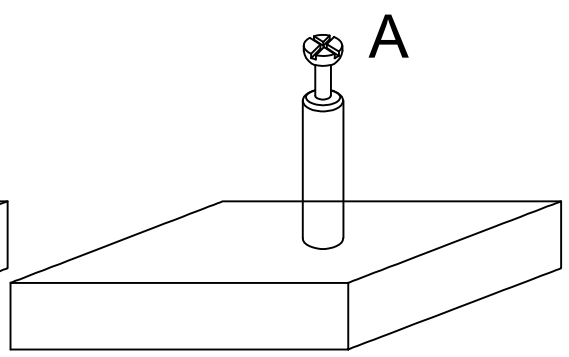
1.

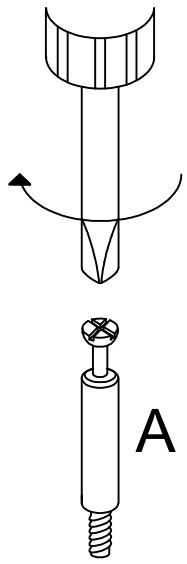




2.

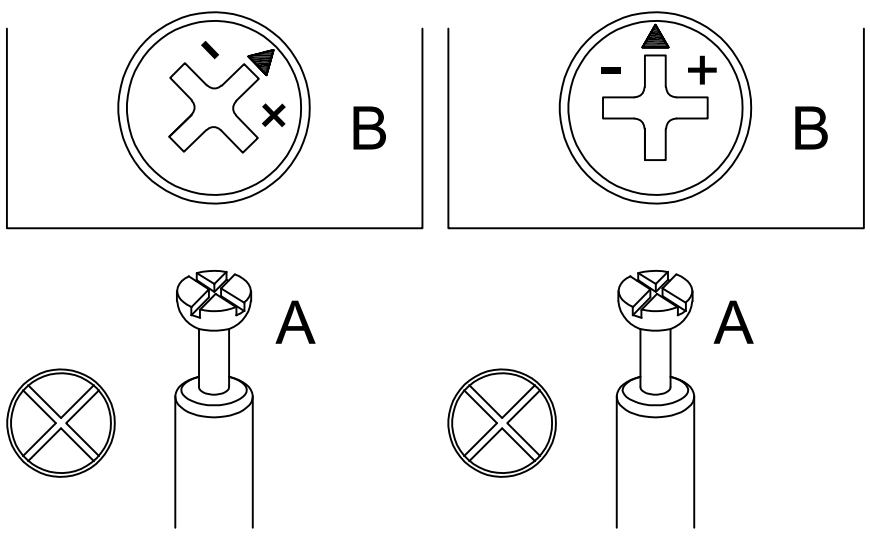


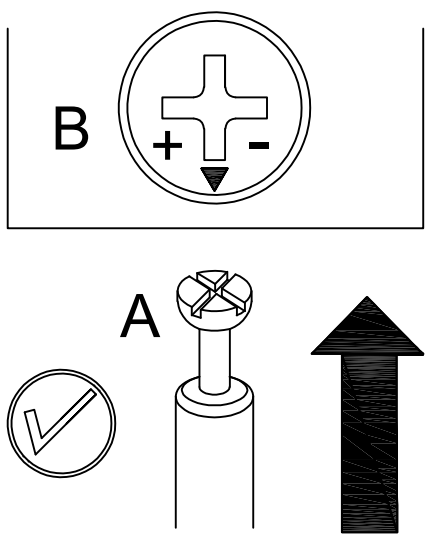


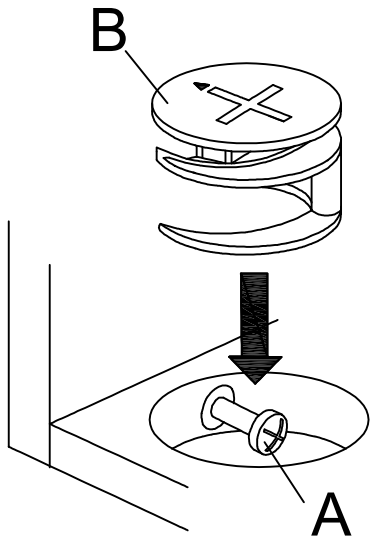


1. A needs to be installed vertically and cannot be tilted.
2. Install A, Do not overtighten or undertighten.
* Tighten when rotating clockwise

3.

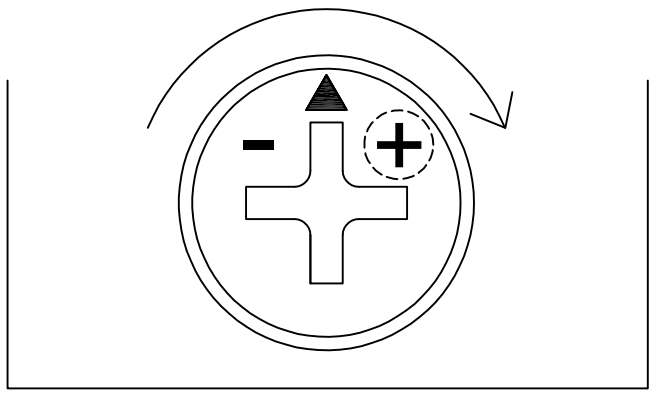




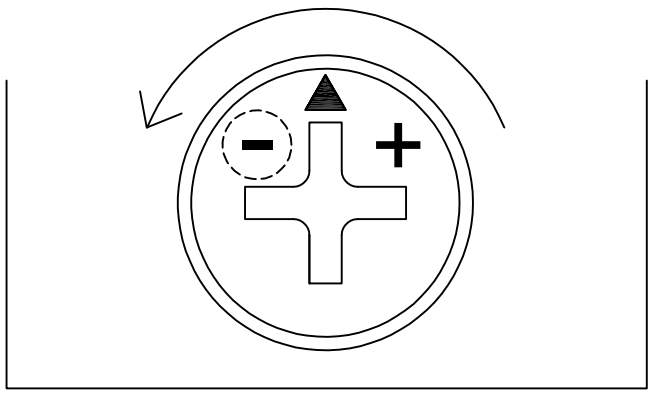


3. When installing B, make sure the arrow on B is aligned with A before installation.

4.



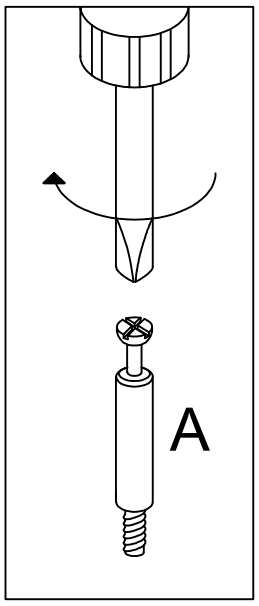
Tighten

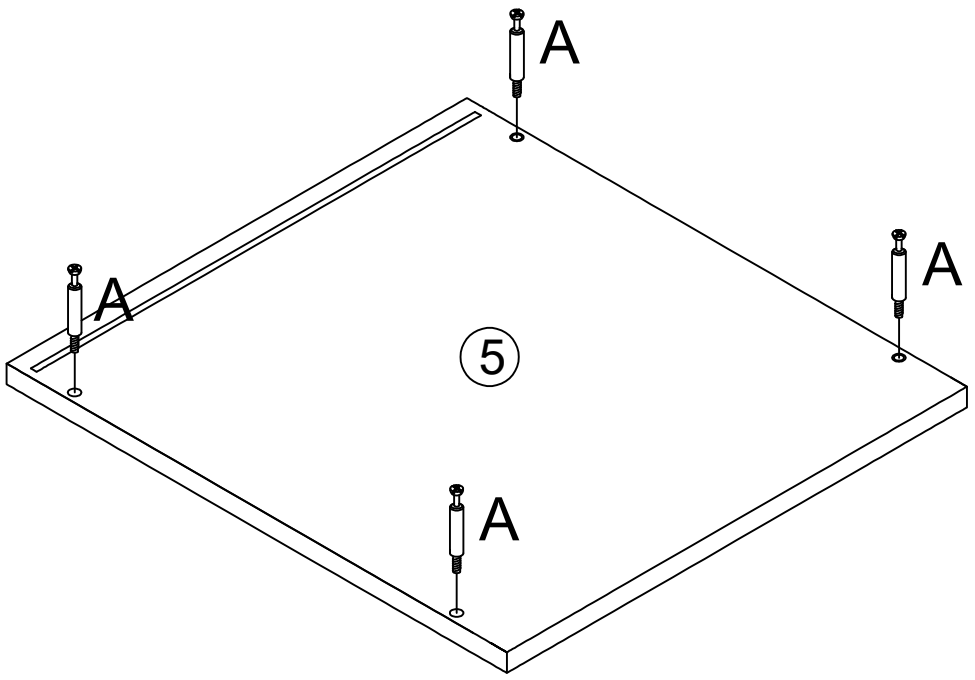


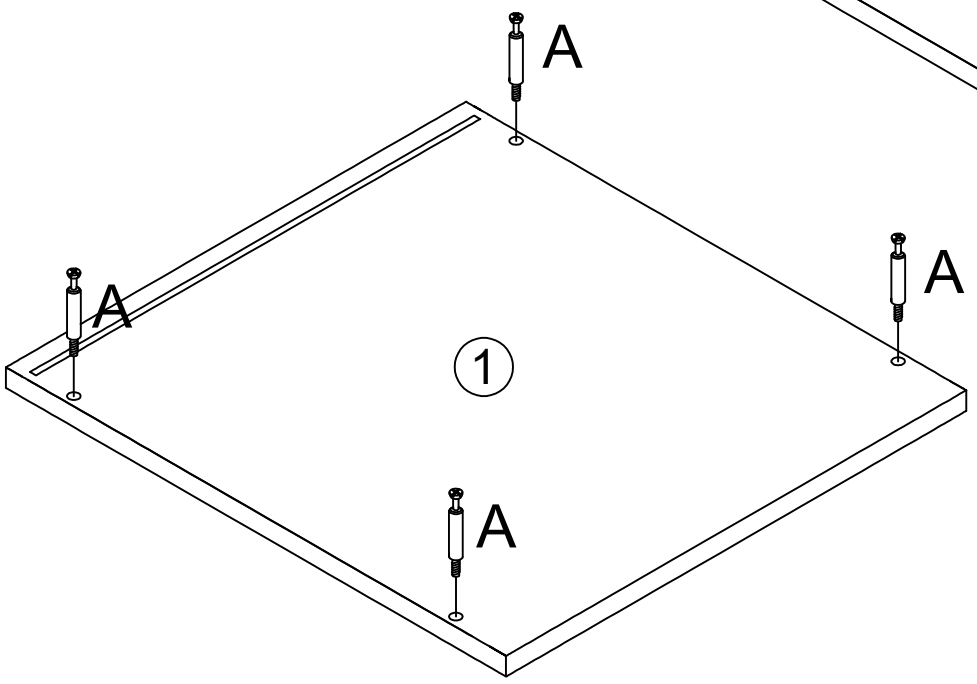
Release

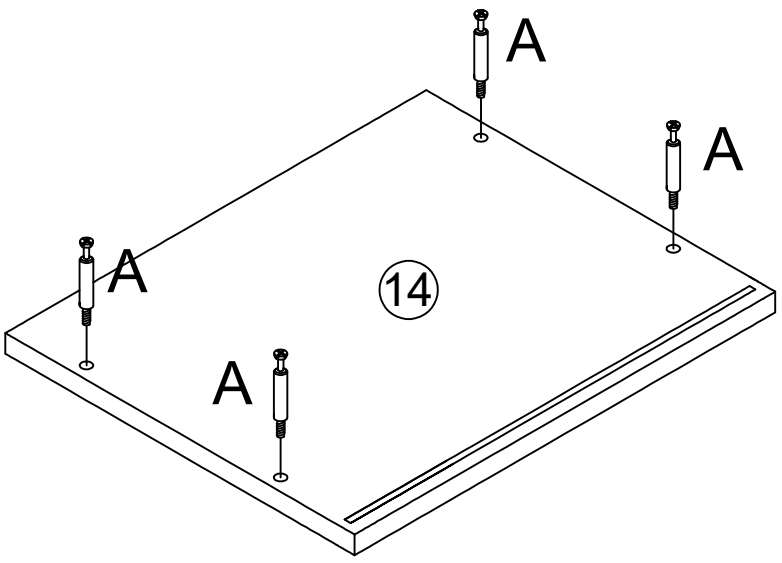
4. Tighten when rotating in the "+" direction. Release when rotating in the "-" direction.

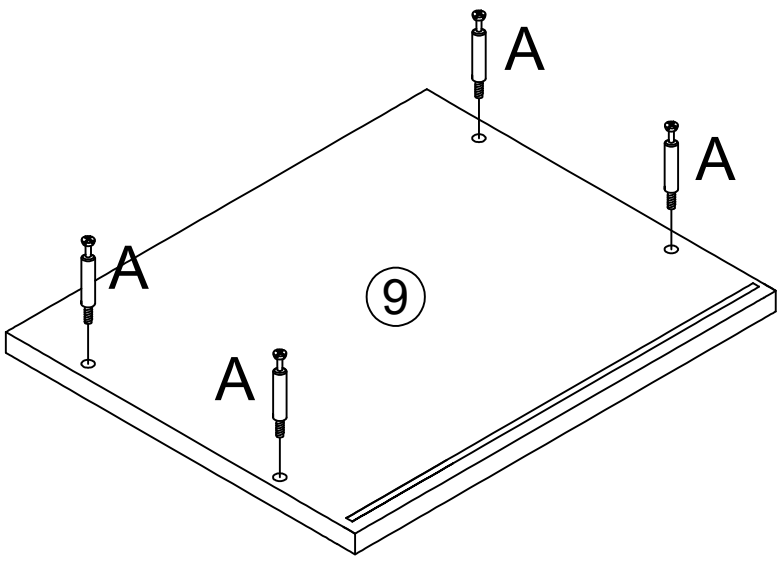
1.

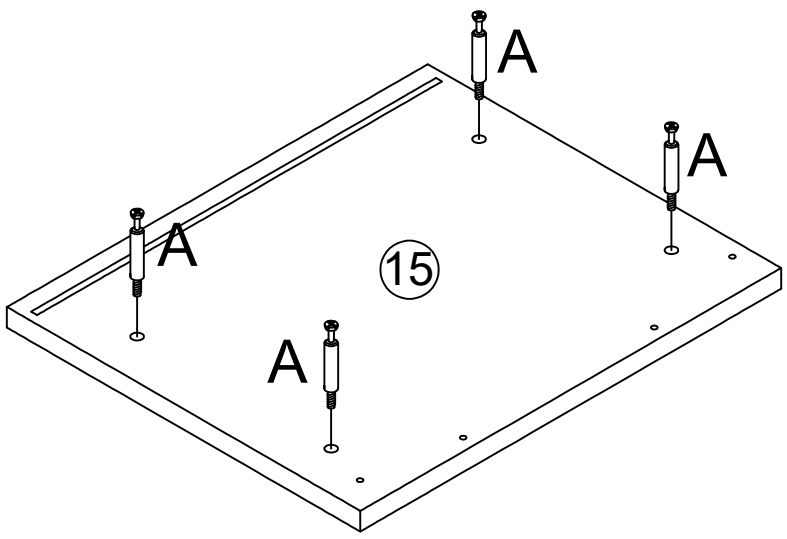


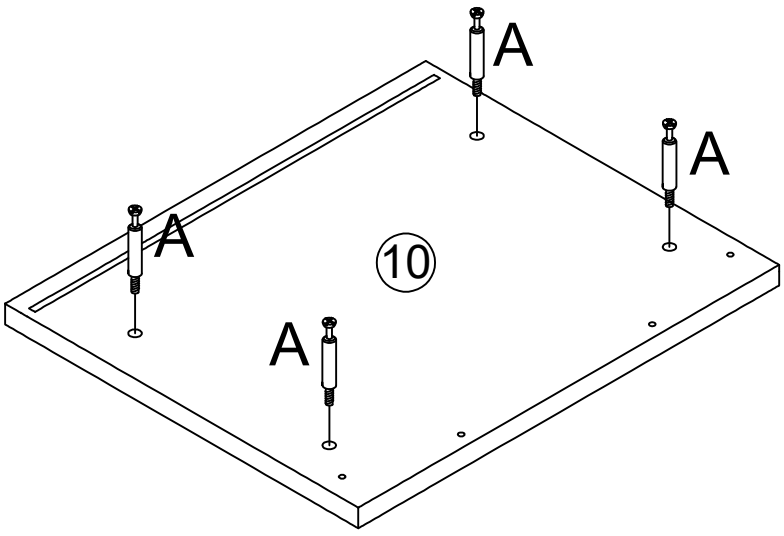









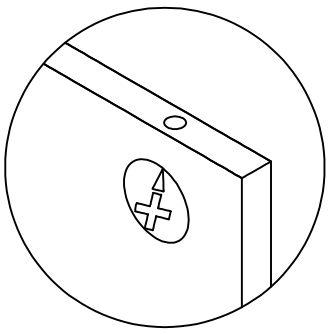




A	x24
	
Screw connecting rod	

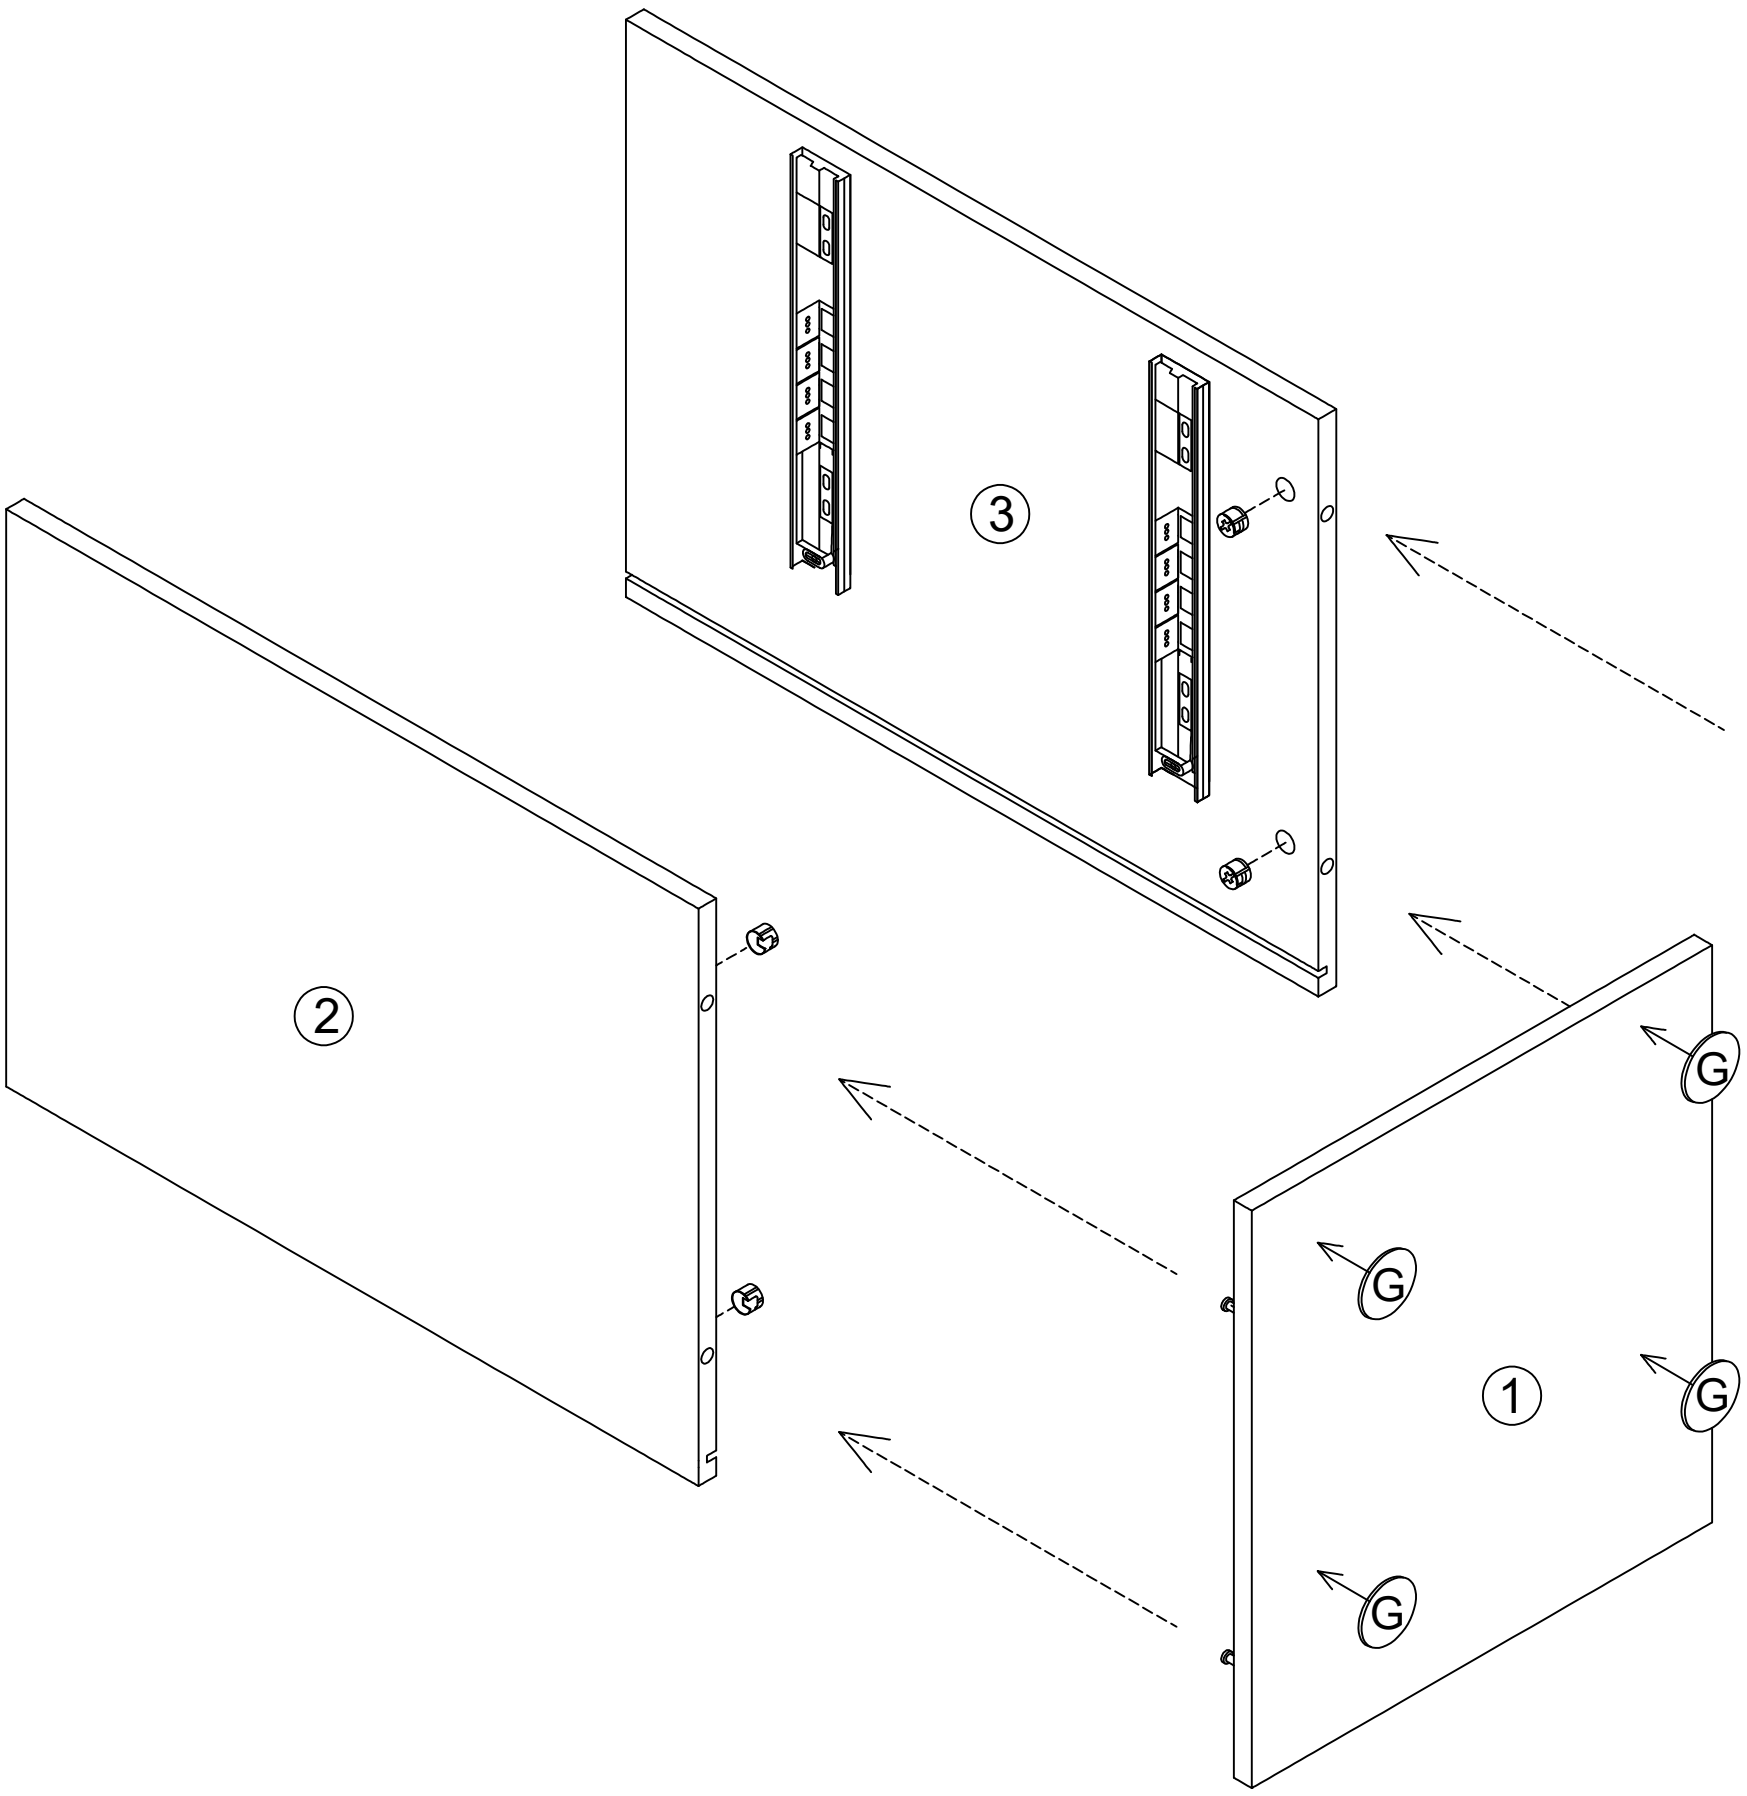
2.

Step 1: fit B to both the top and bottom holes on panel ②③
please make sure the arrow on B faces the hole on panel side



Step 2: push panel ① to panel ② and ③,
please note top and bottom of panel ② and ③.

DON NOT fasten B at this step.
or it will cause the slots on②③not align to slot on ①

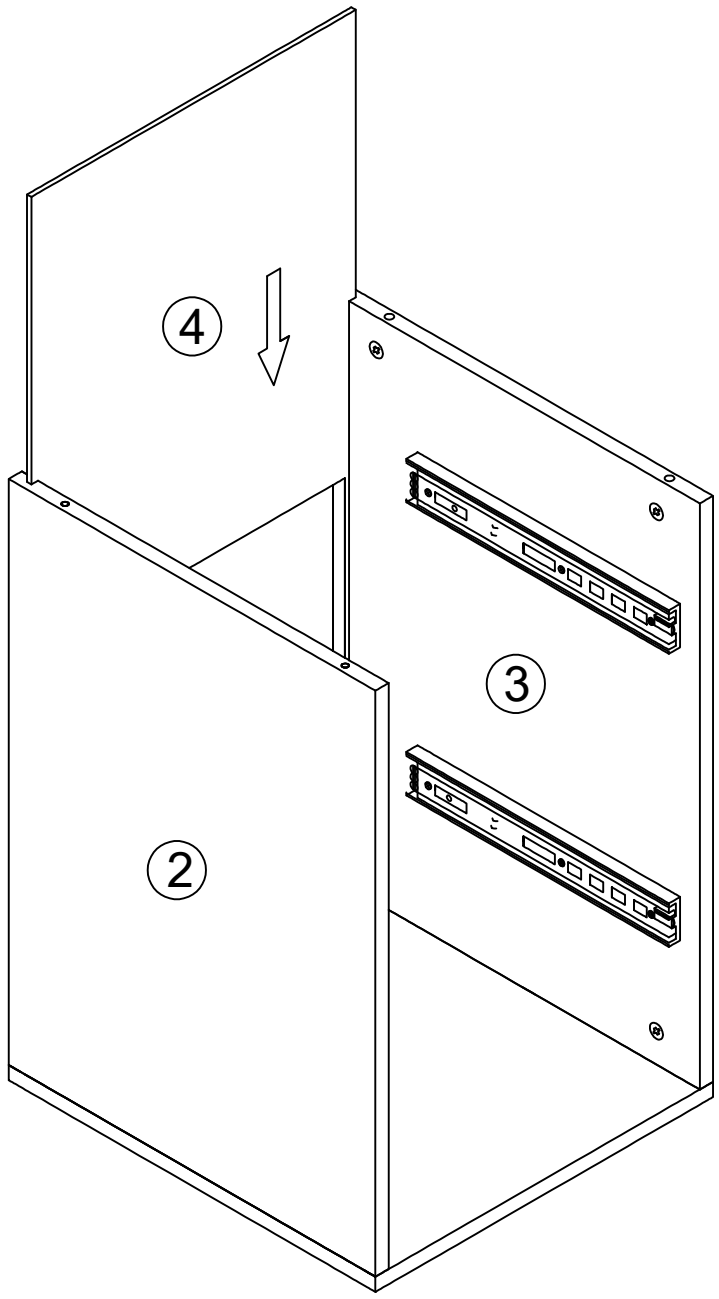


B	x4	G	x4
			
Eccentric wheel		Protection pad	

Step 3: stick pad G to panel ①

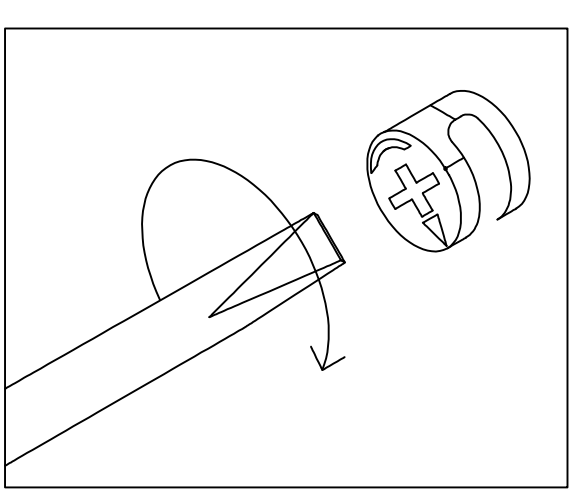
3.

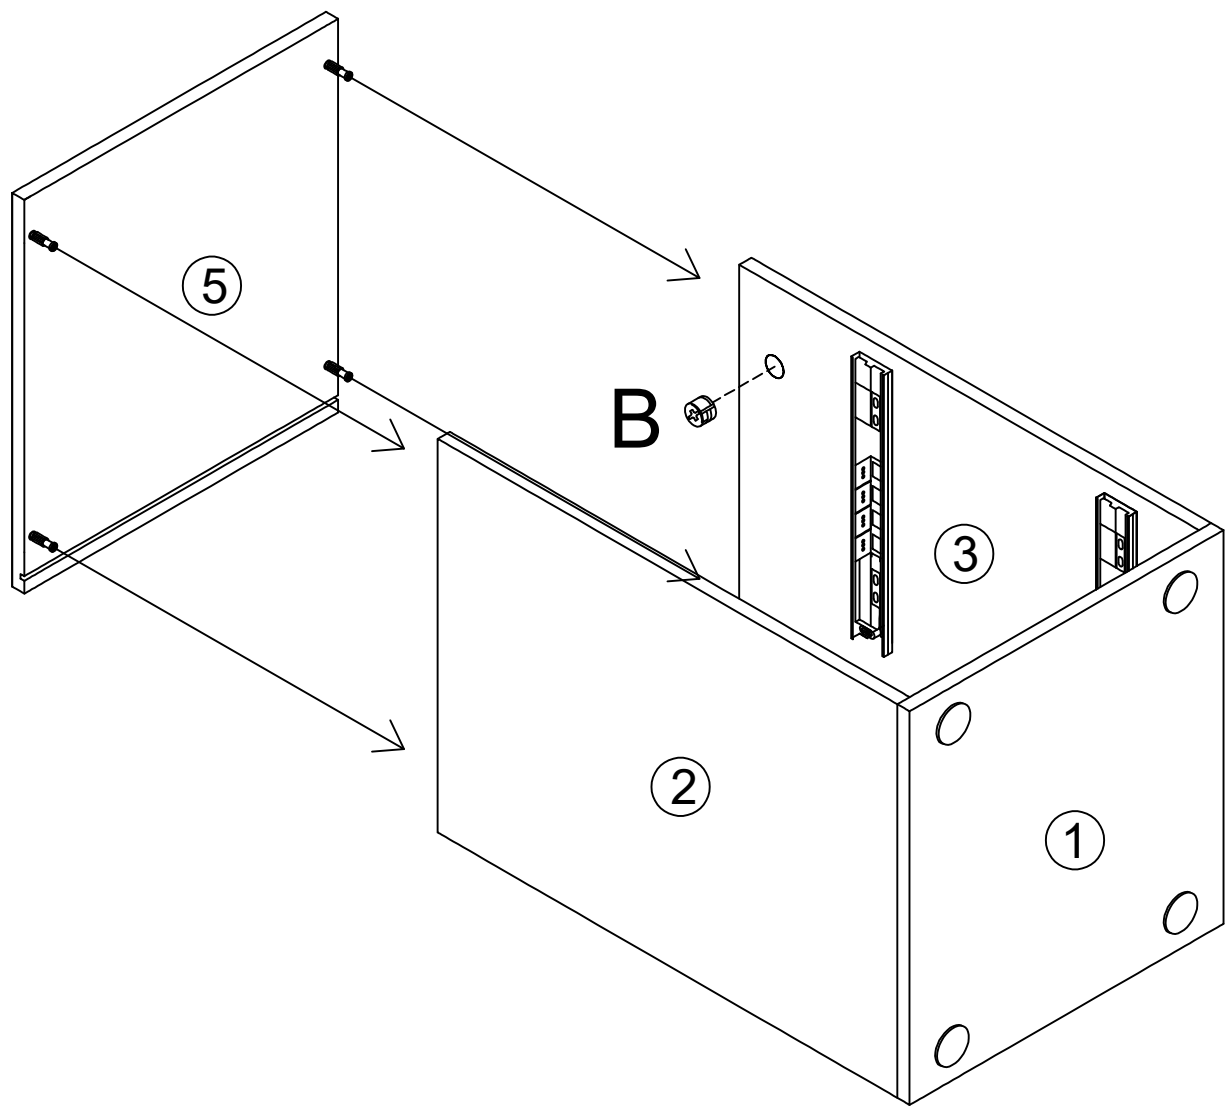
Step 1: slide panel ④ into slots on panel①②③



if the slots not align to allow panel④, please loose B from above step until slots get align.

Step 2: fix the other panel ⑤ to top of panel②③ and panel ④ goes into slot on panel ⑤, too.

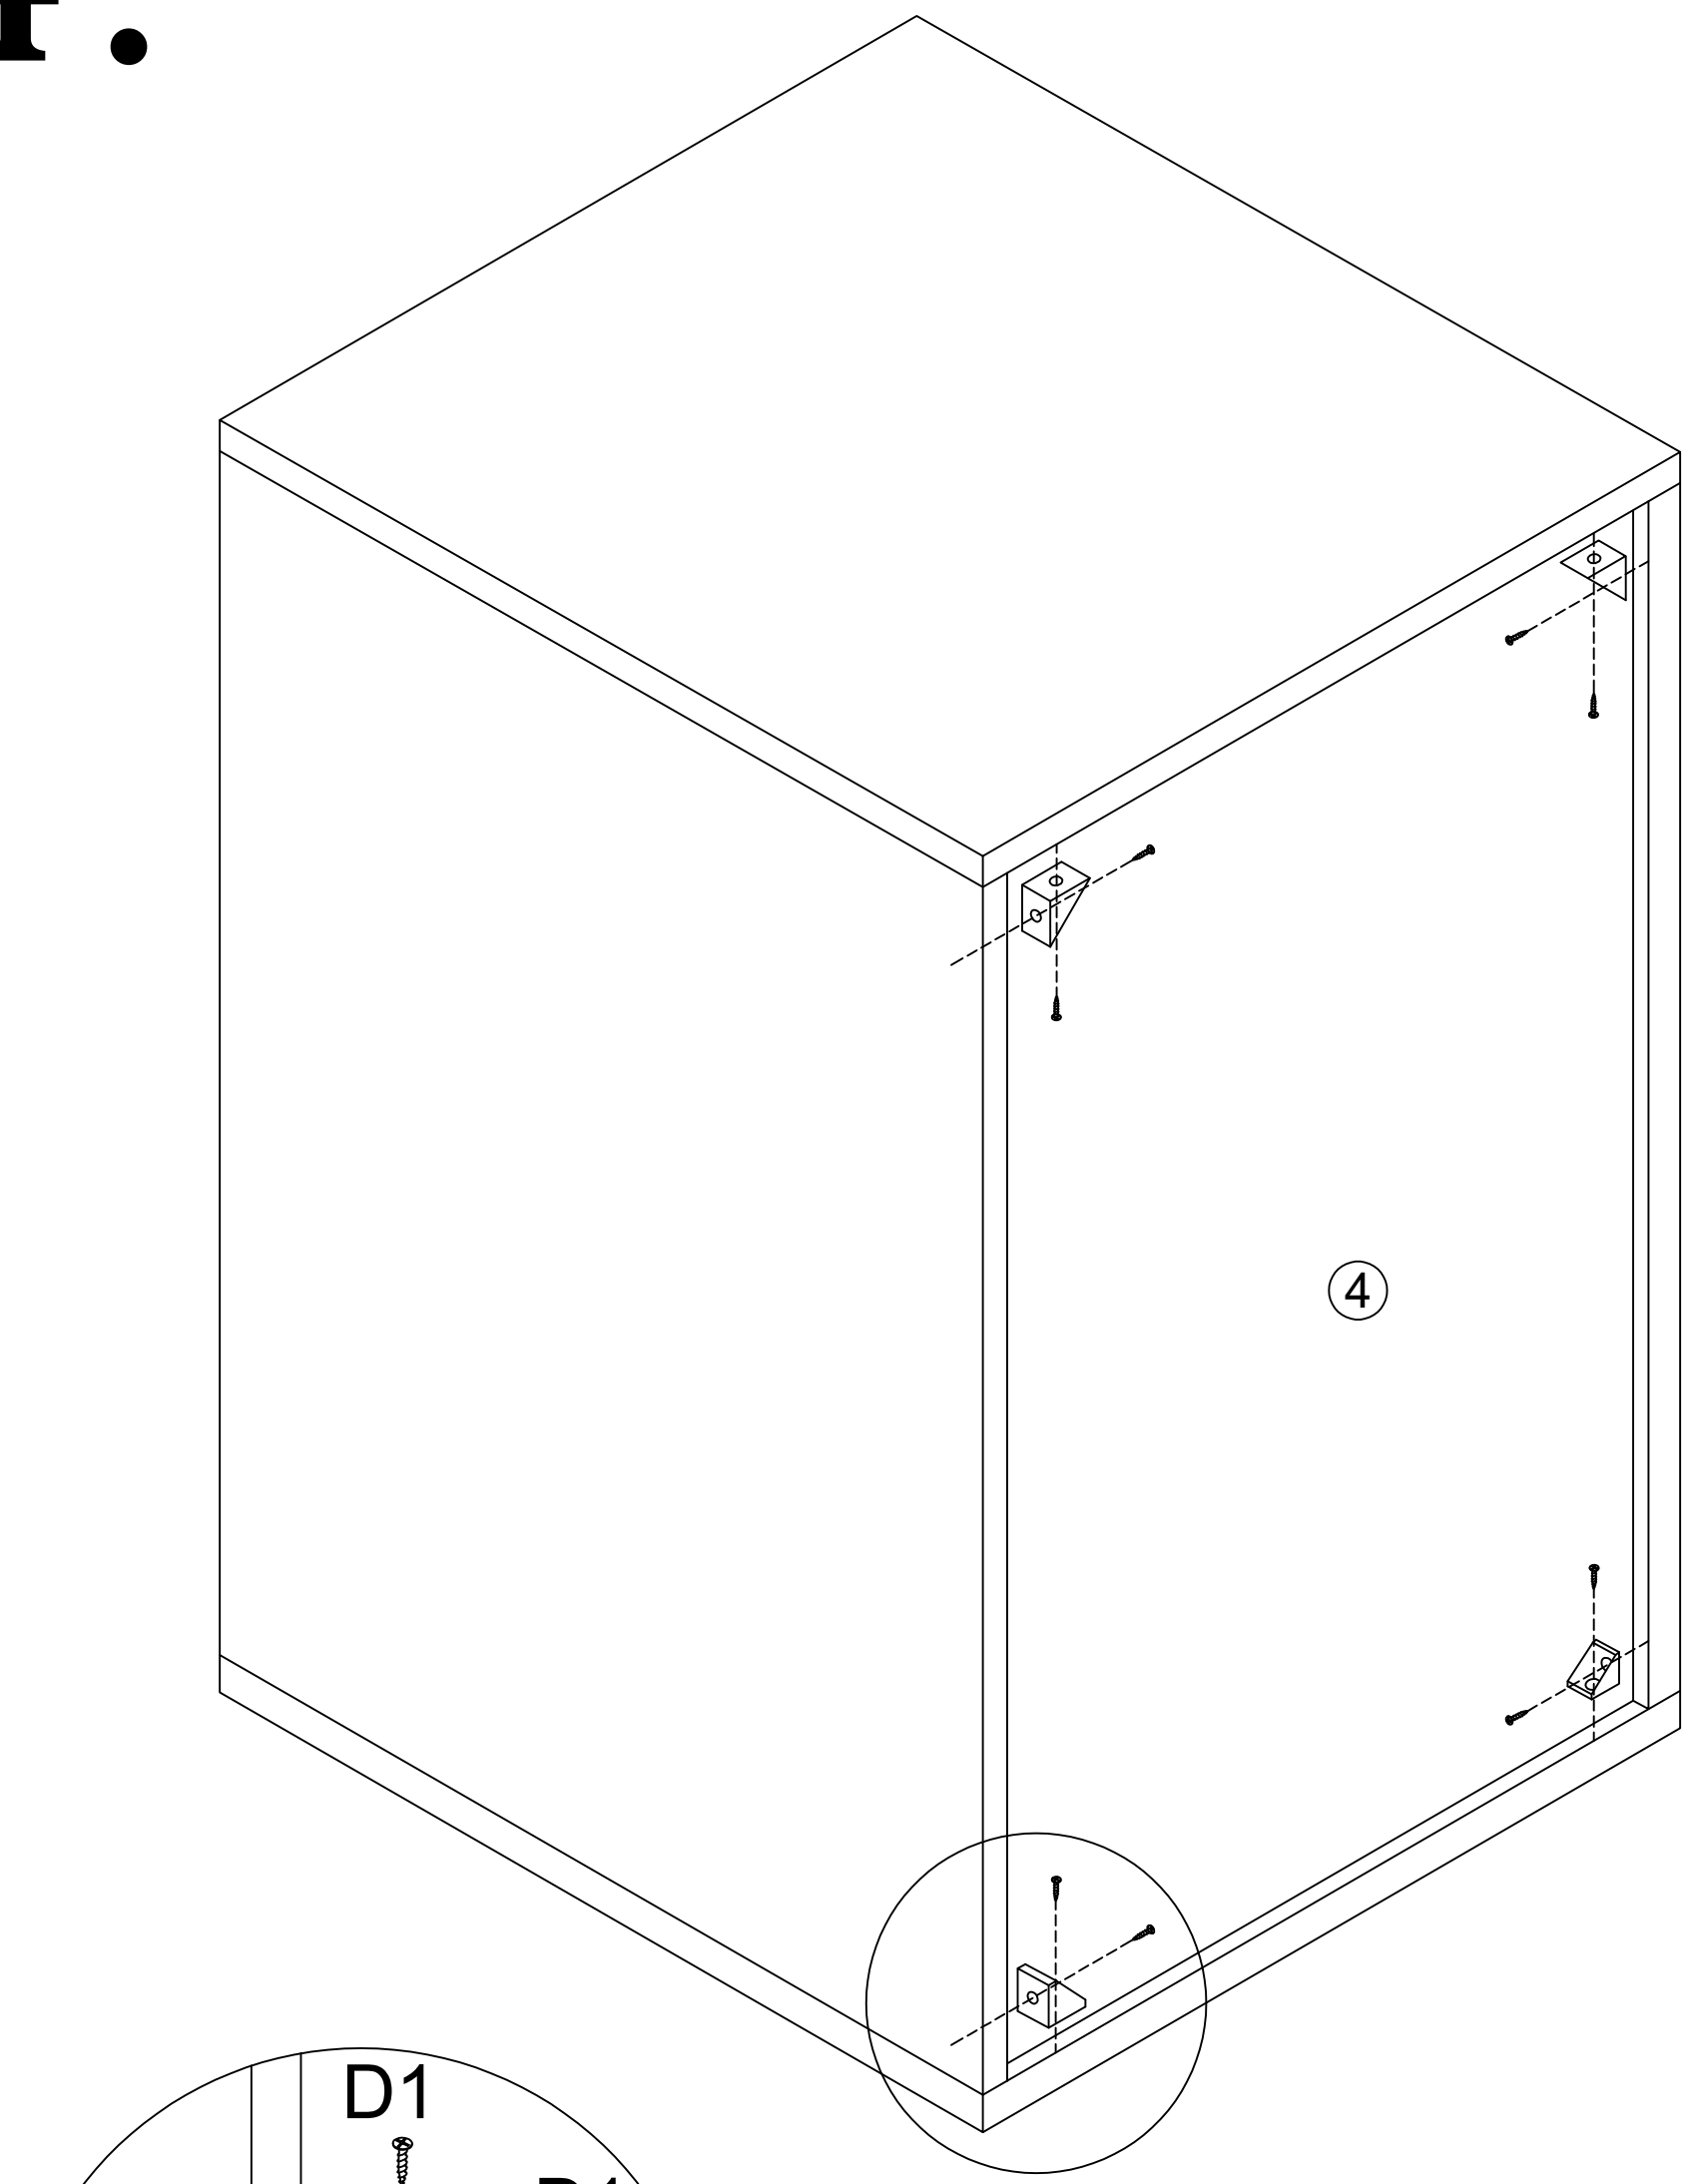


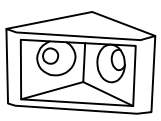



Step 3: fasten all the B to lock panels.

B	x4
	
Eccentric wheel	

4.



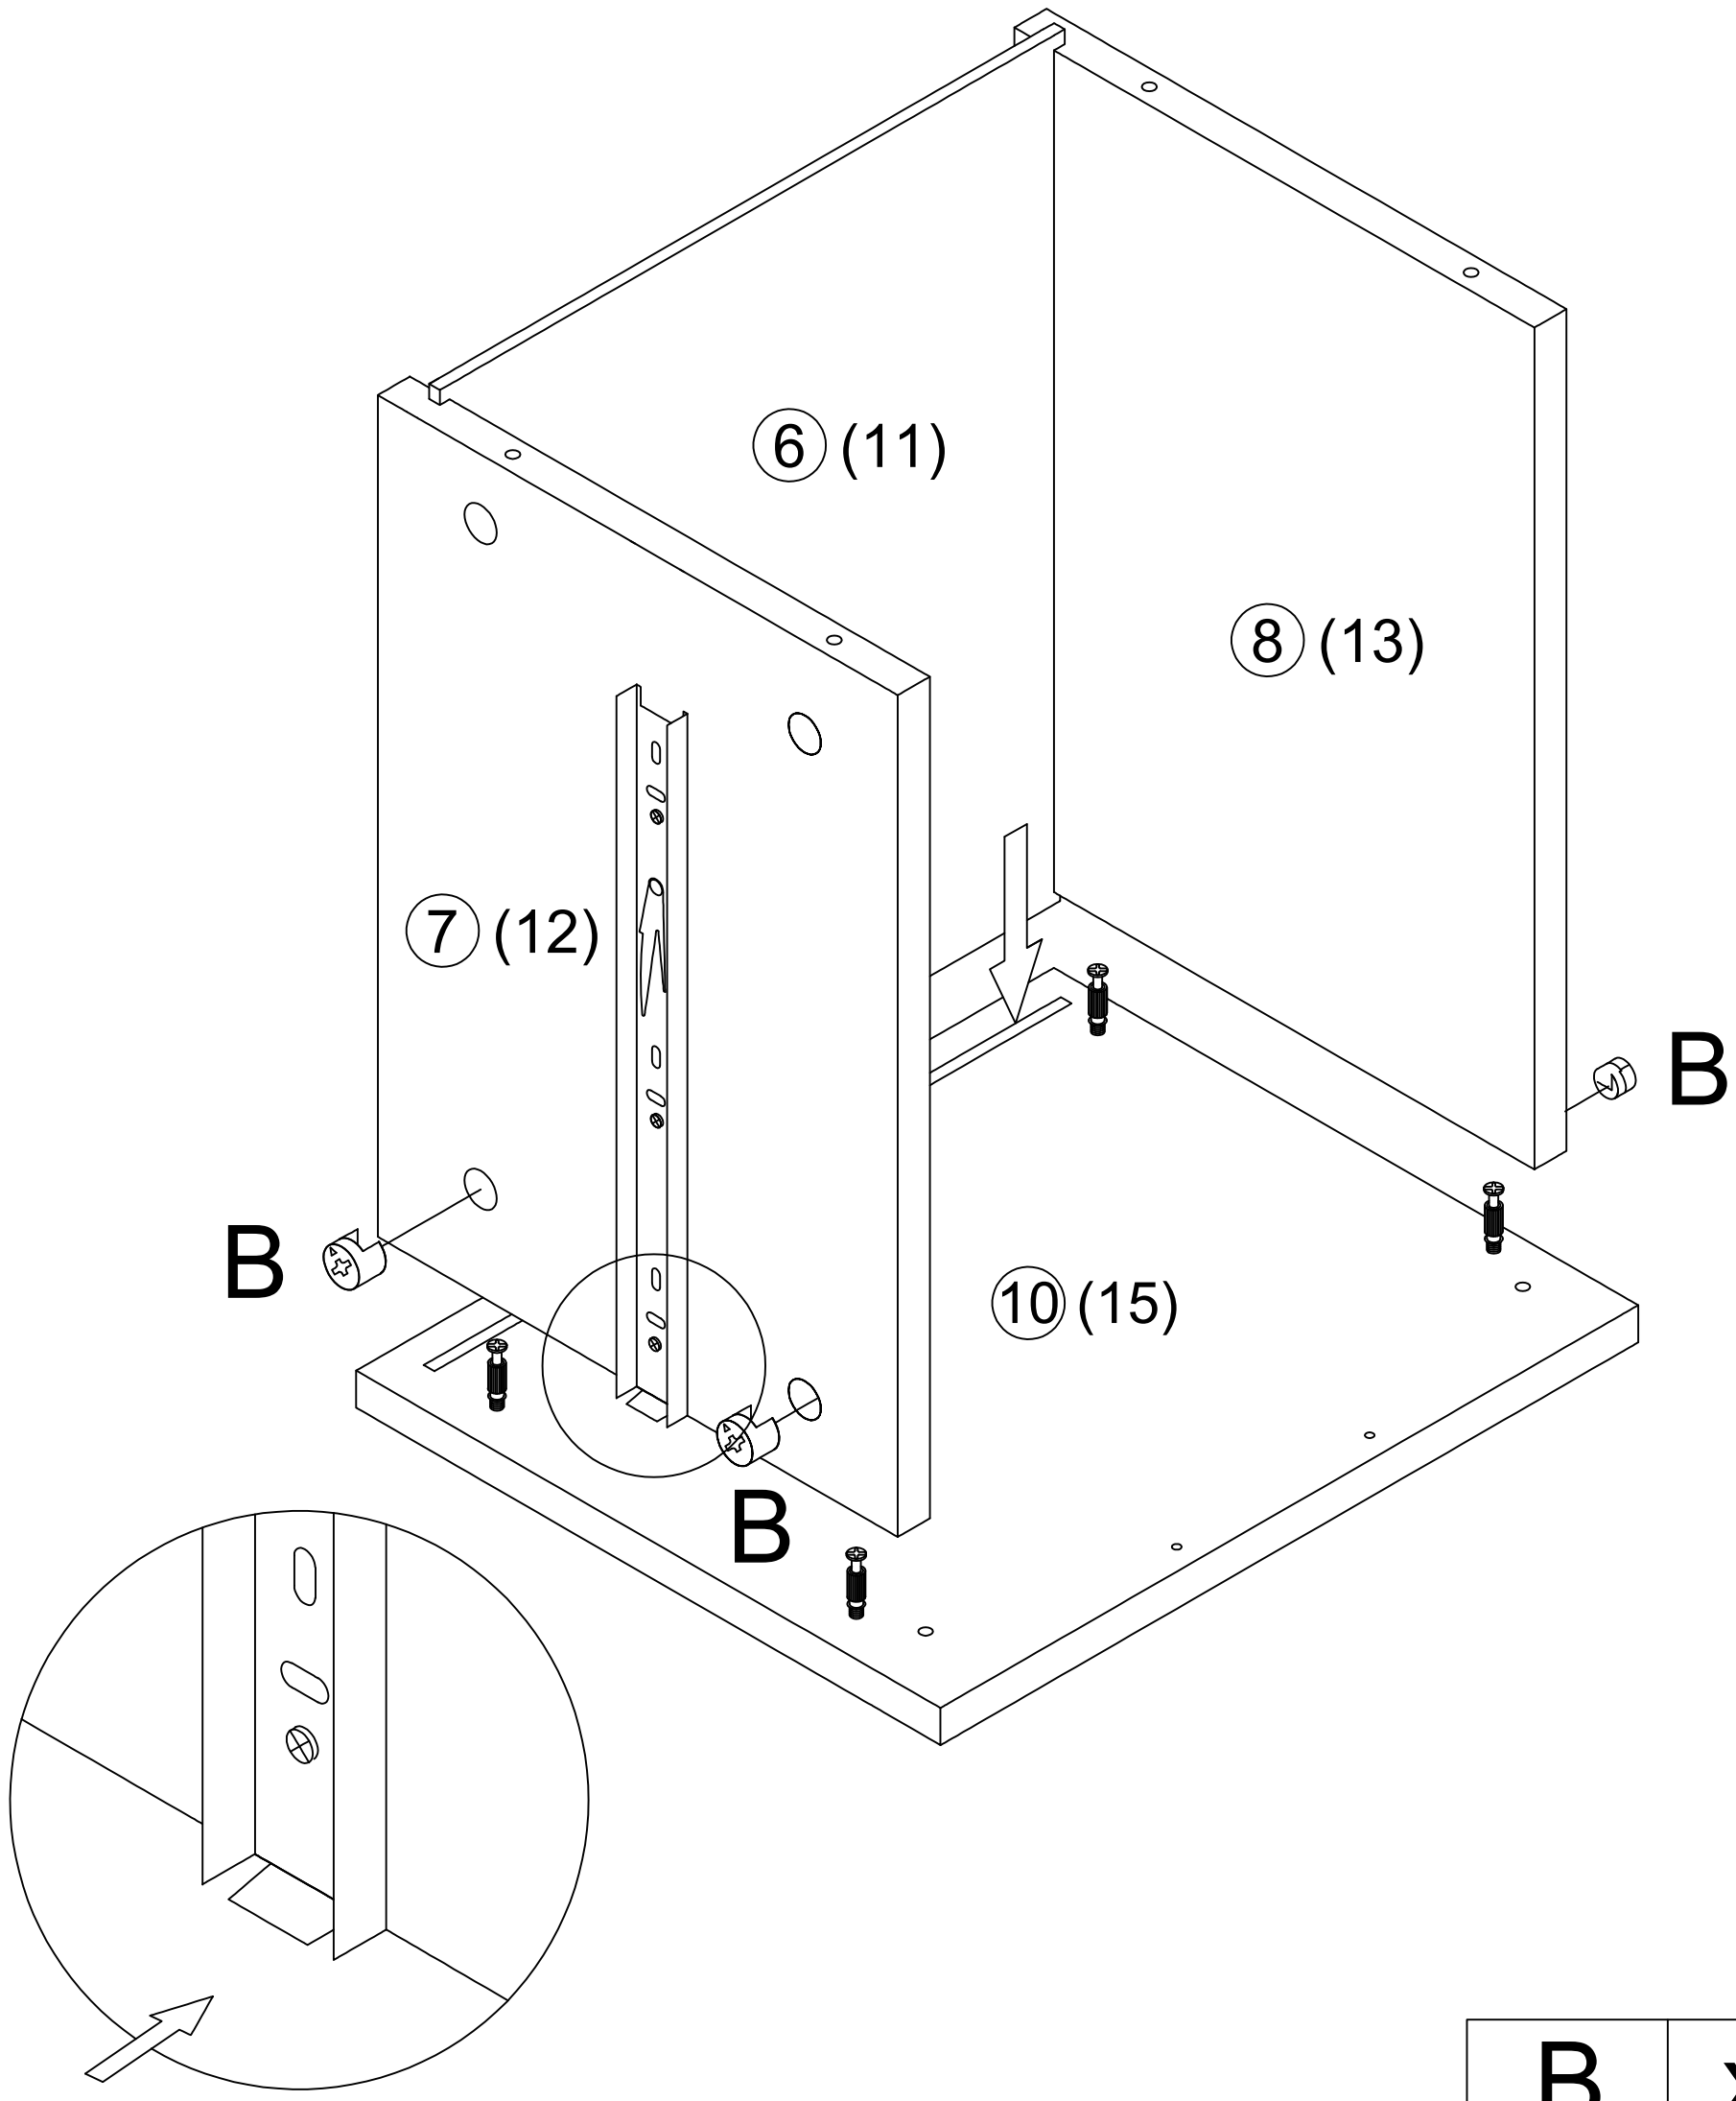
C	x4	D1	x8
			
Angle corner connector		Sliver screw	

fix plastic angle corner connector to back corners.

5.

Step 1:put 4 pcs B to the bottom holes on panel ⑦⑧ put panel ⑦⑧ onto panel ⑩.

Step 2: Slide the panel ⑥ into slots on ⑦⑧⑩.

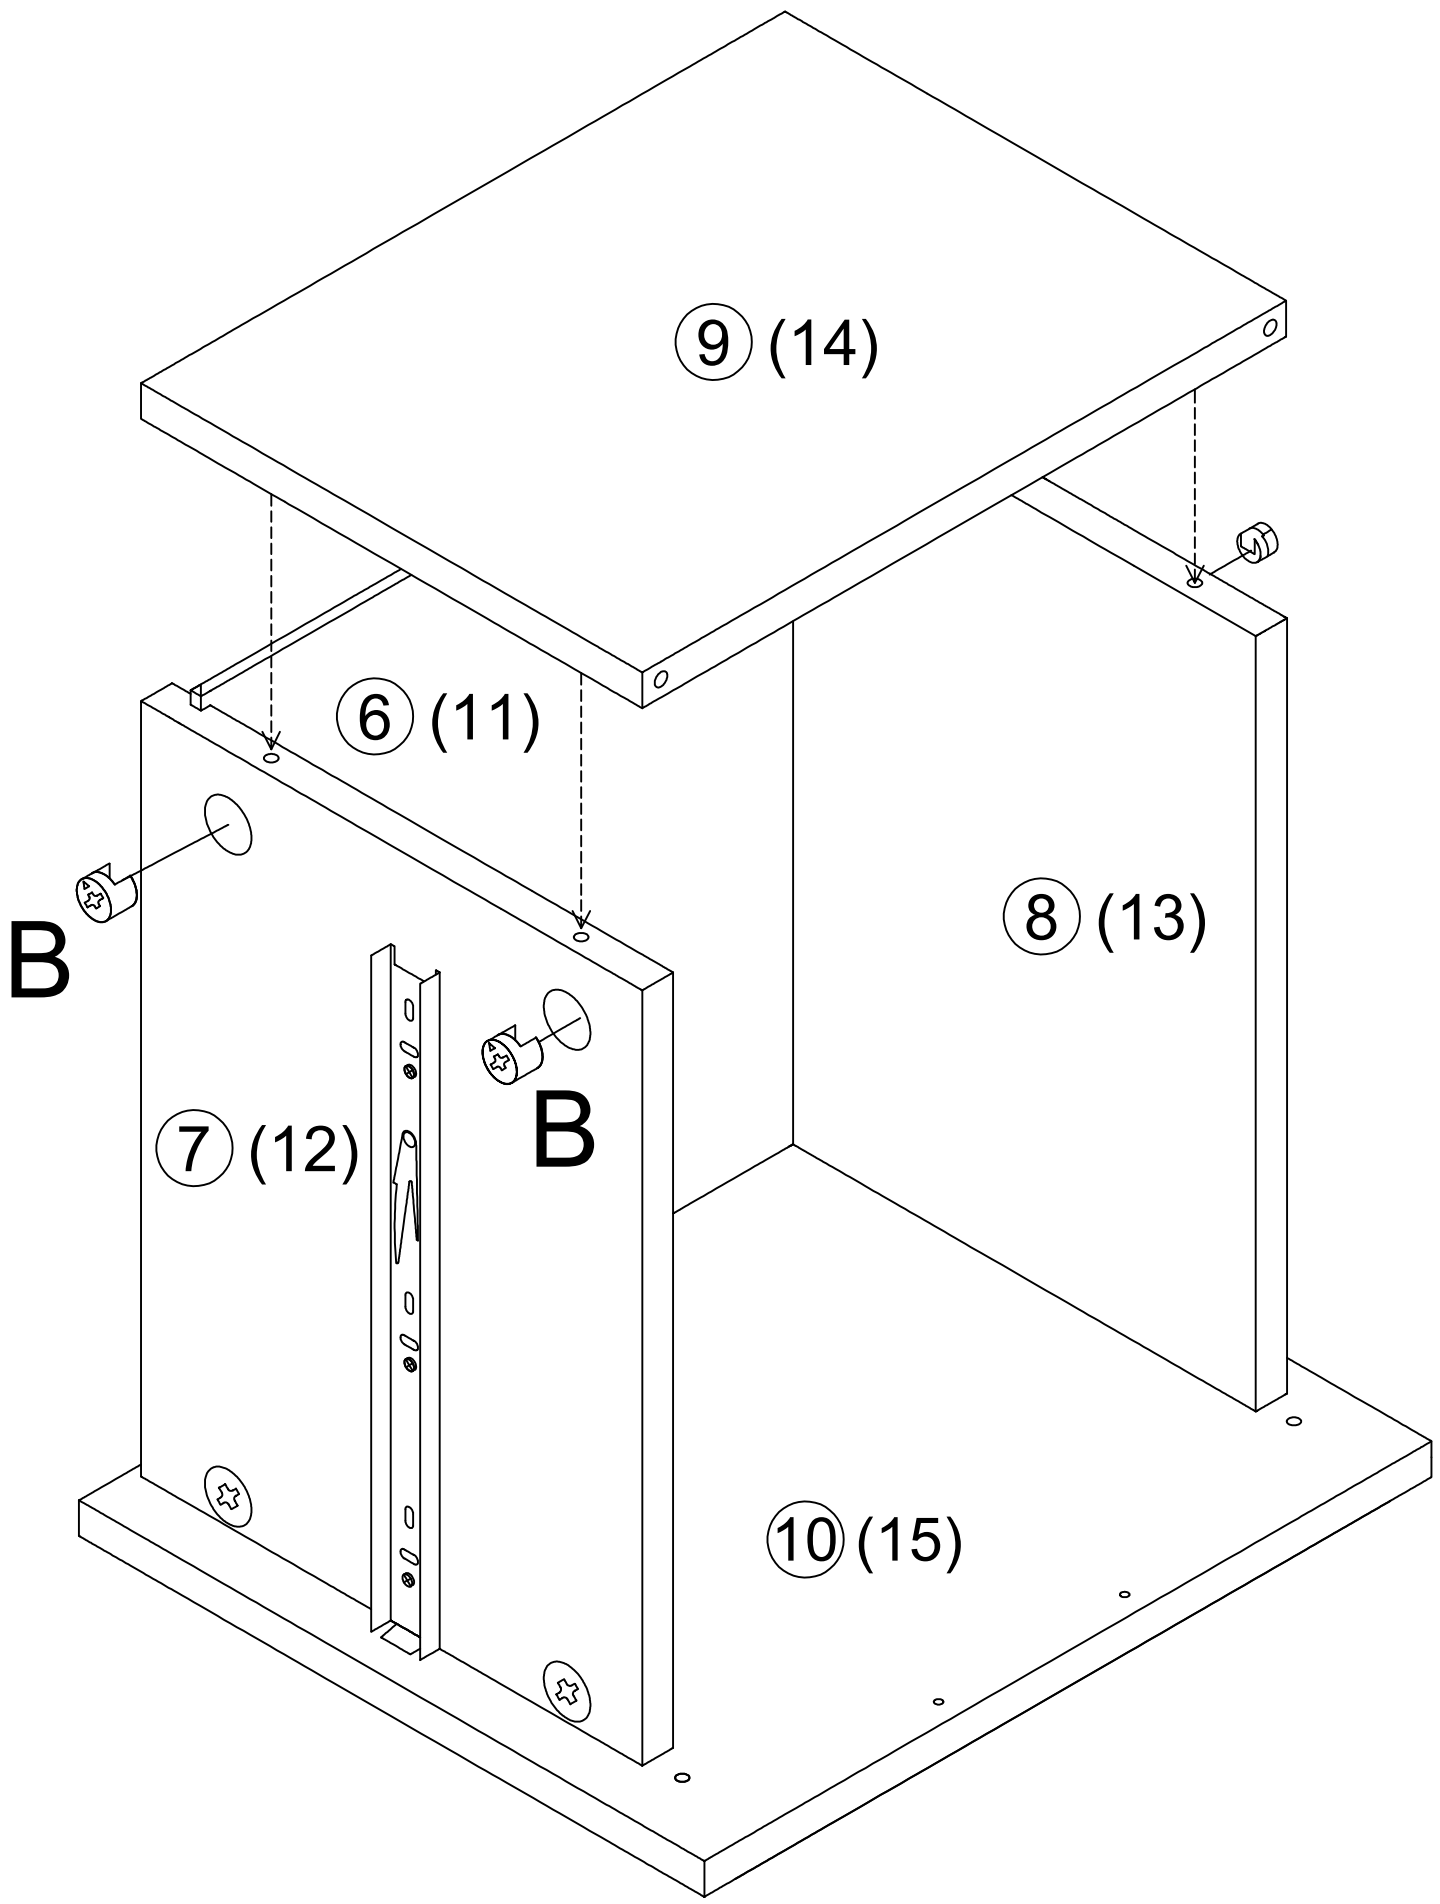


The end of slide with this little tip is at bottom.please mind this on both panel ⑦ and ⑧

B	x4
	
Eccentric wheel	

6.

Step 1: put panel ⑨ onto panel ⑦⑧make sure panel ⑥ into slot on ⑨ too. fit B to top holes on panel ⑦⑧
fasten all 4 pcs B to lock panels.

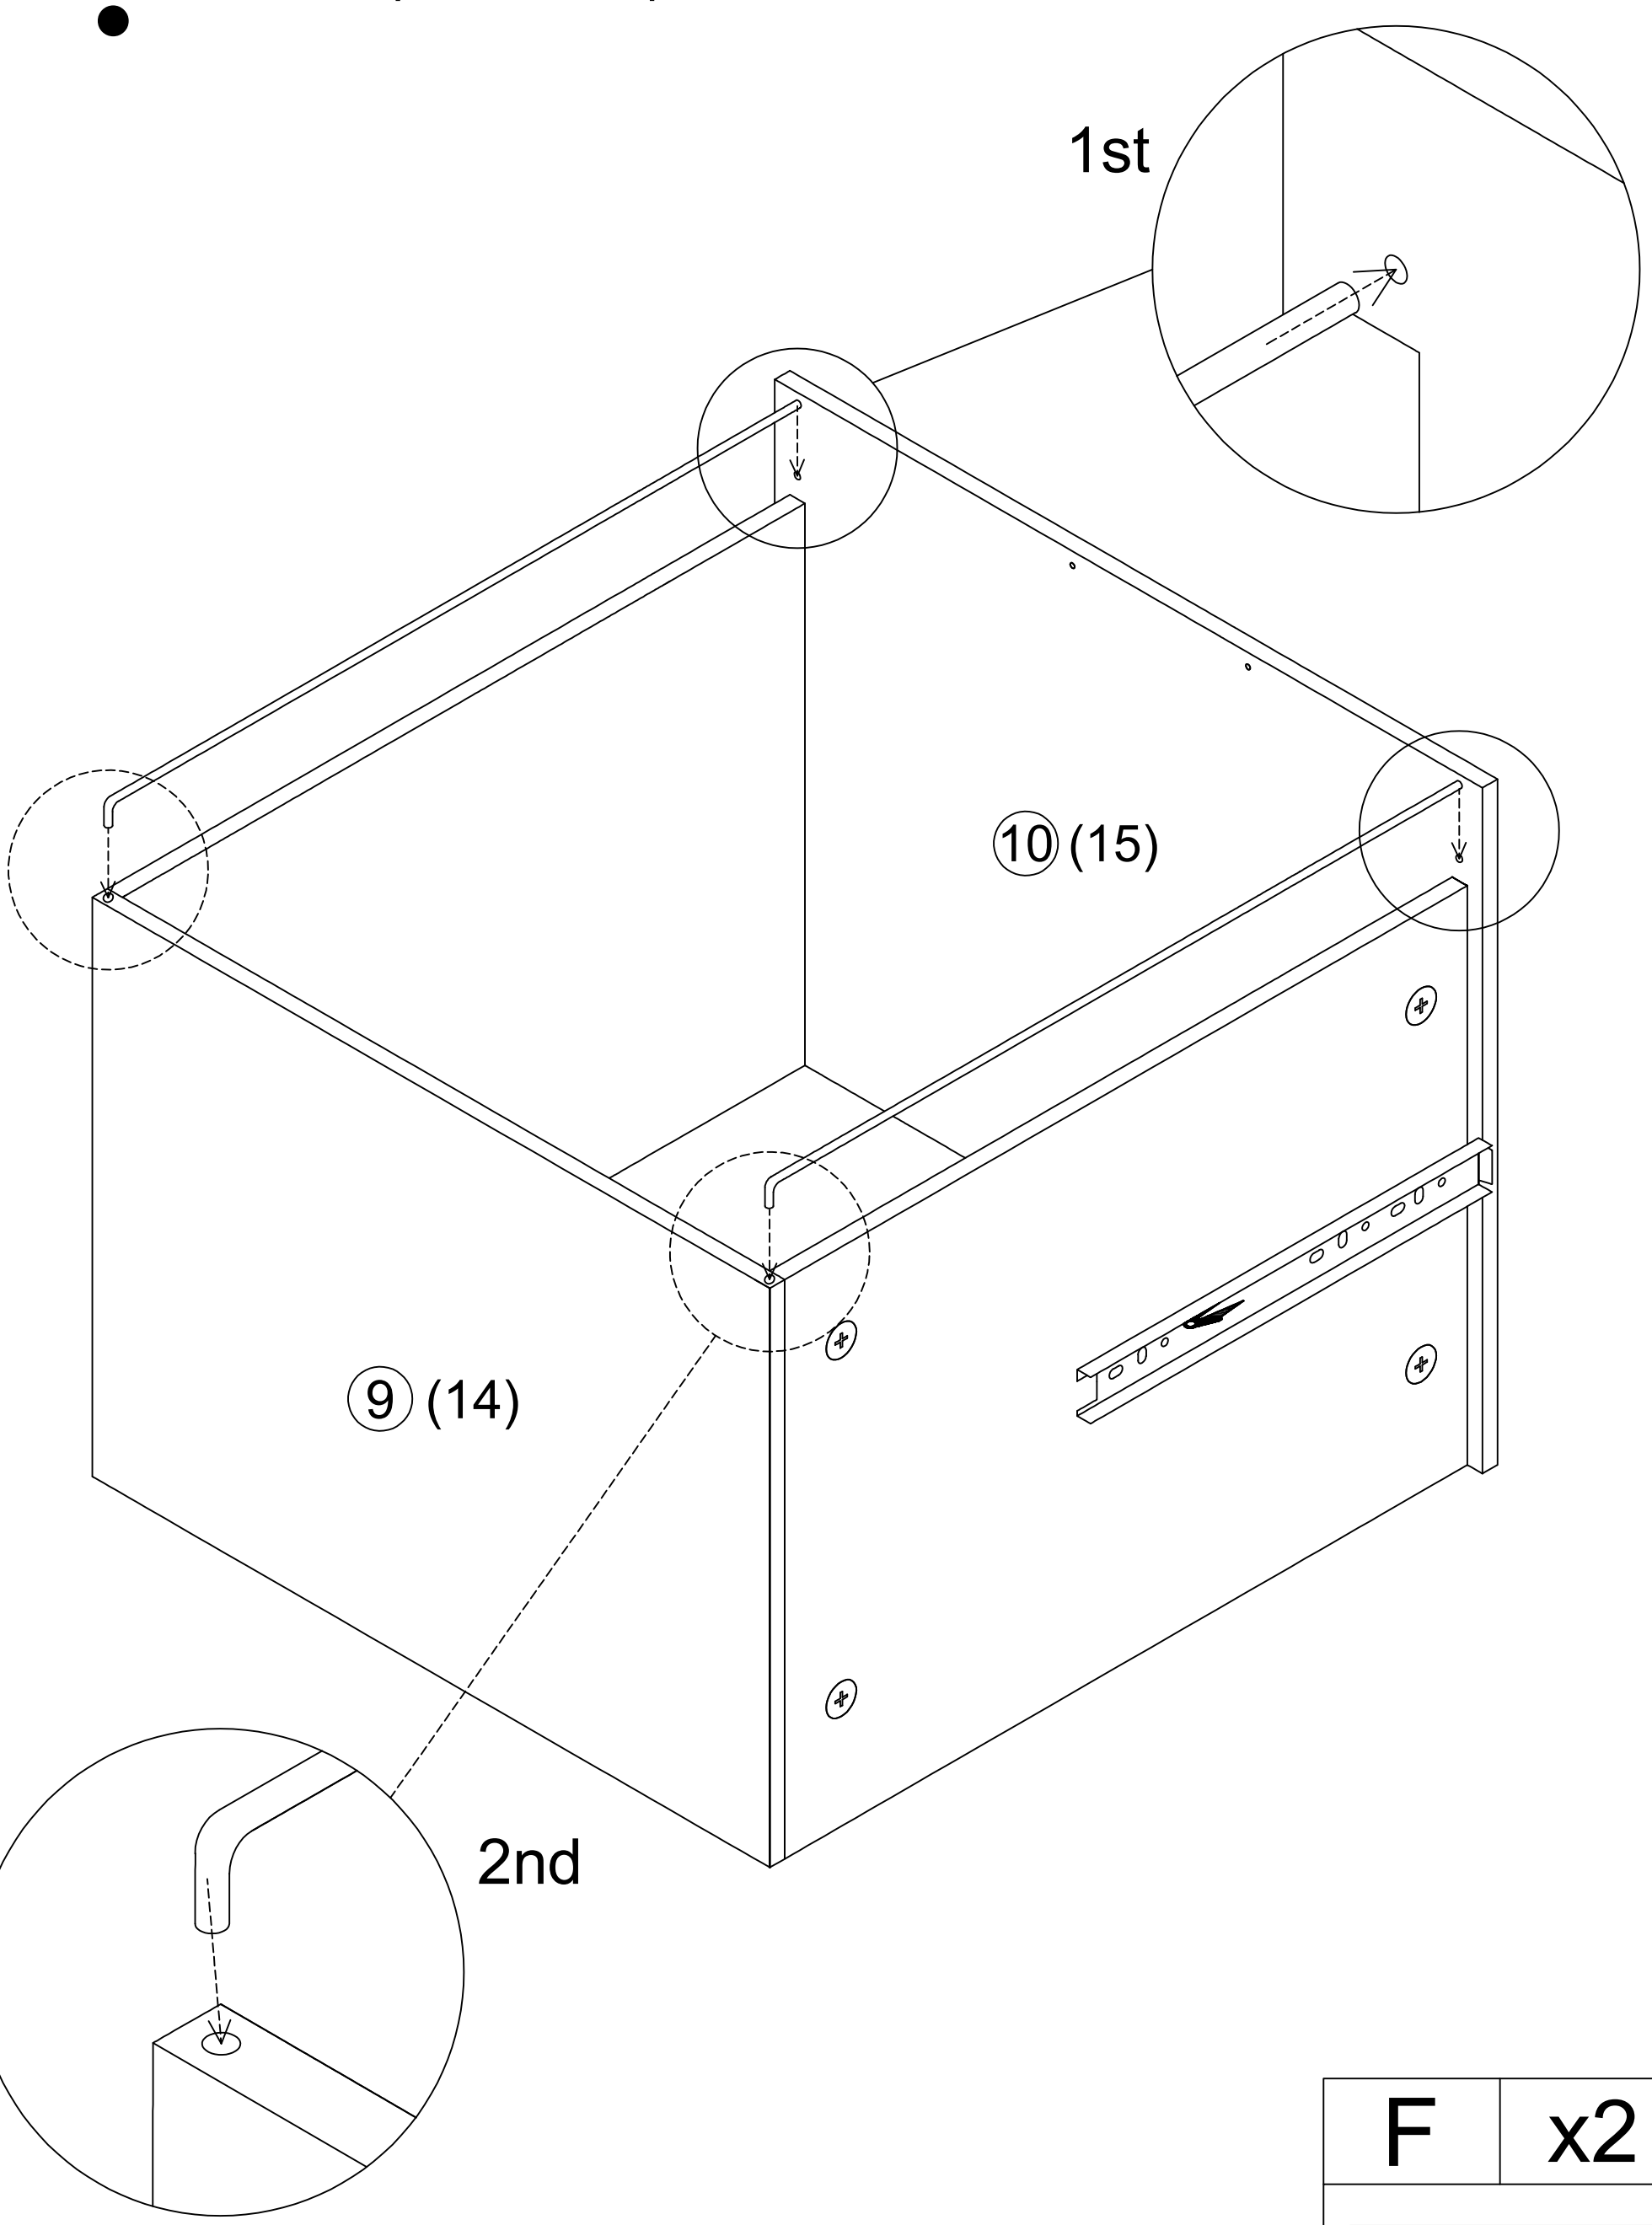



Use the same method to assemble 11,12,13,14,15.

B	x4
	
Eccentric wheel	

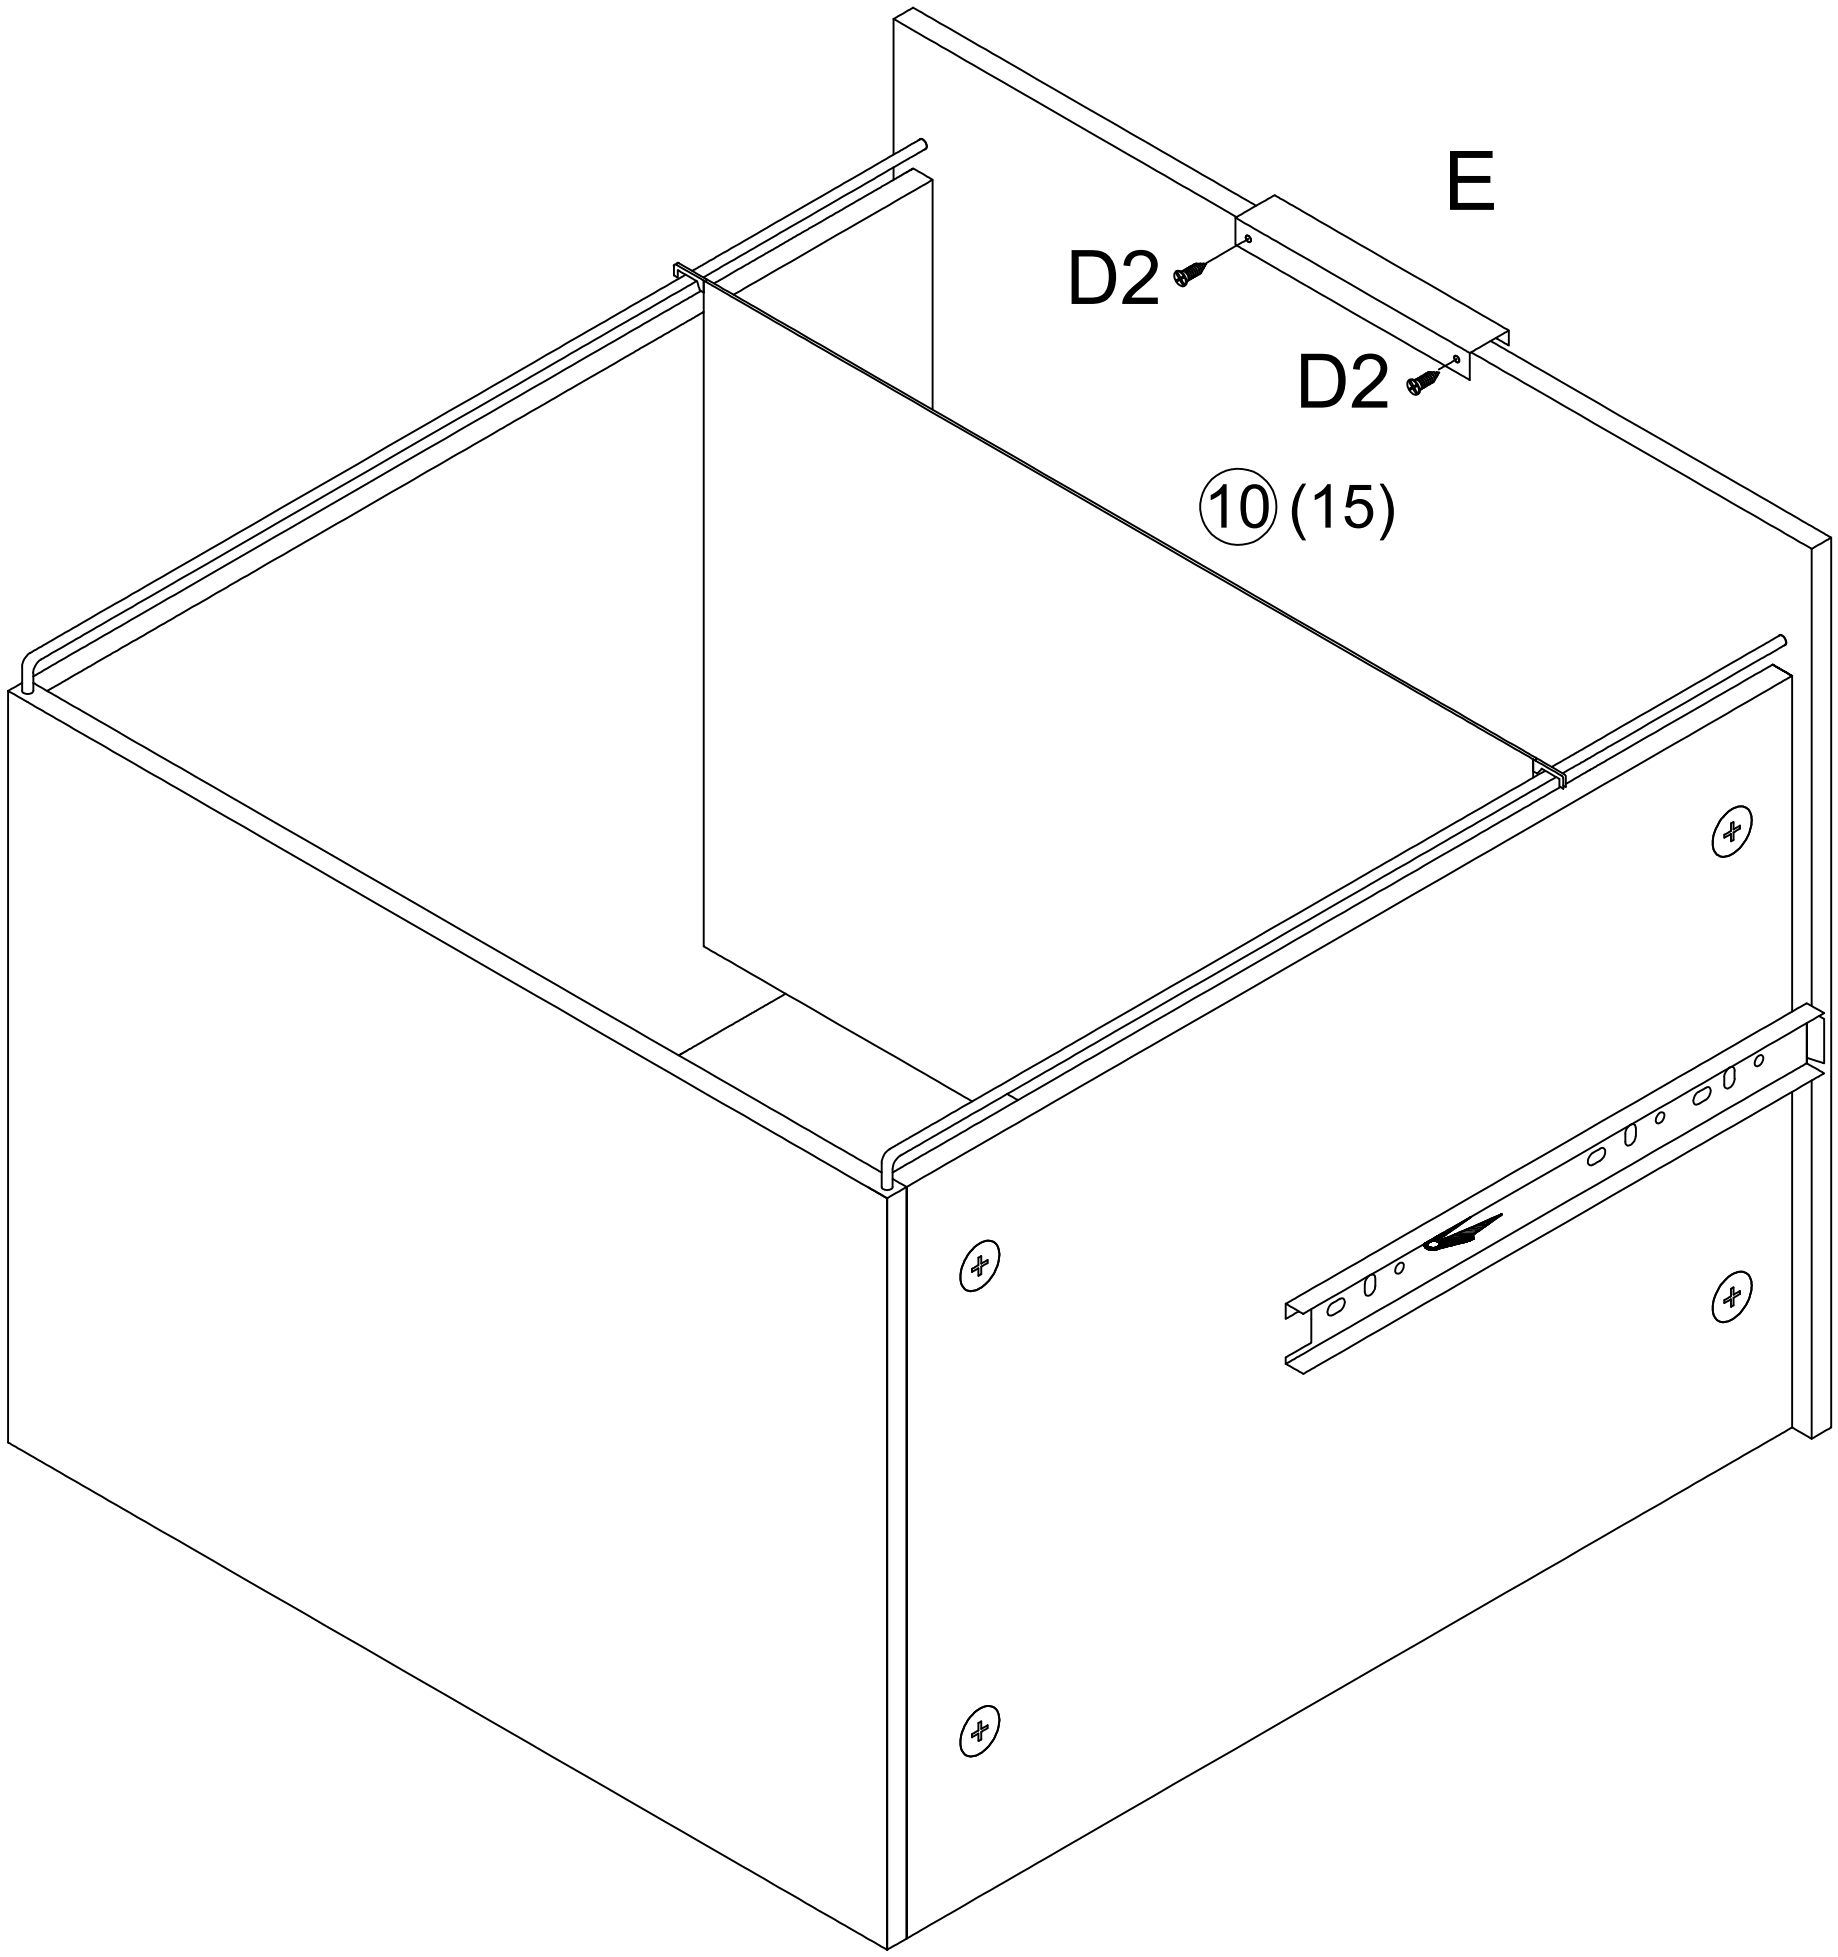
7.

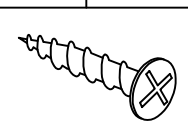
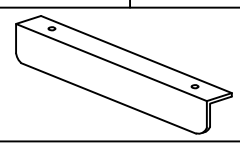
Step 1: fit F to panel ⑨⑩.



F	x2
	
6*340 mm	

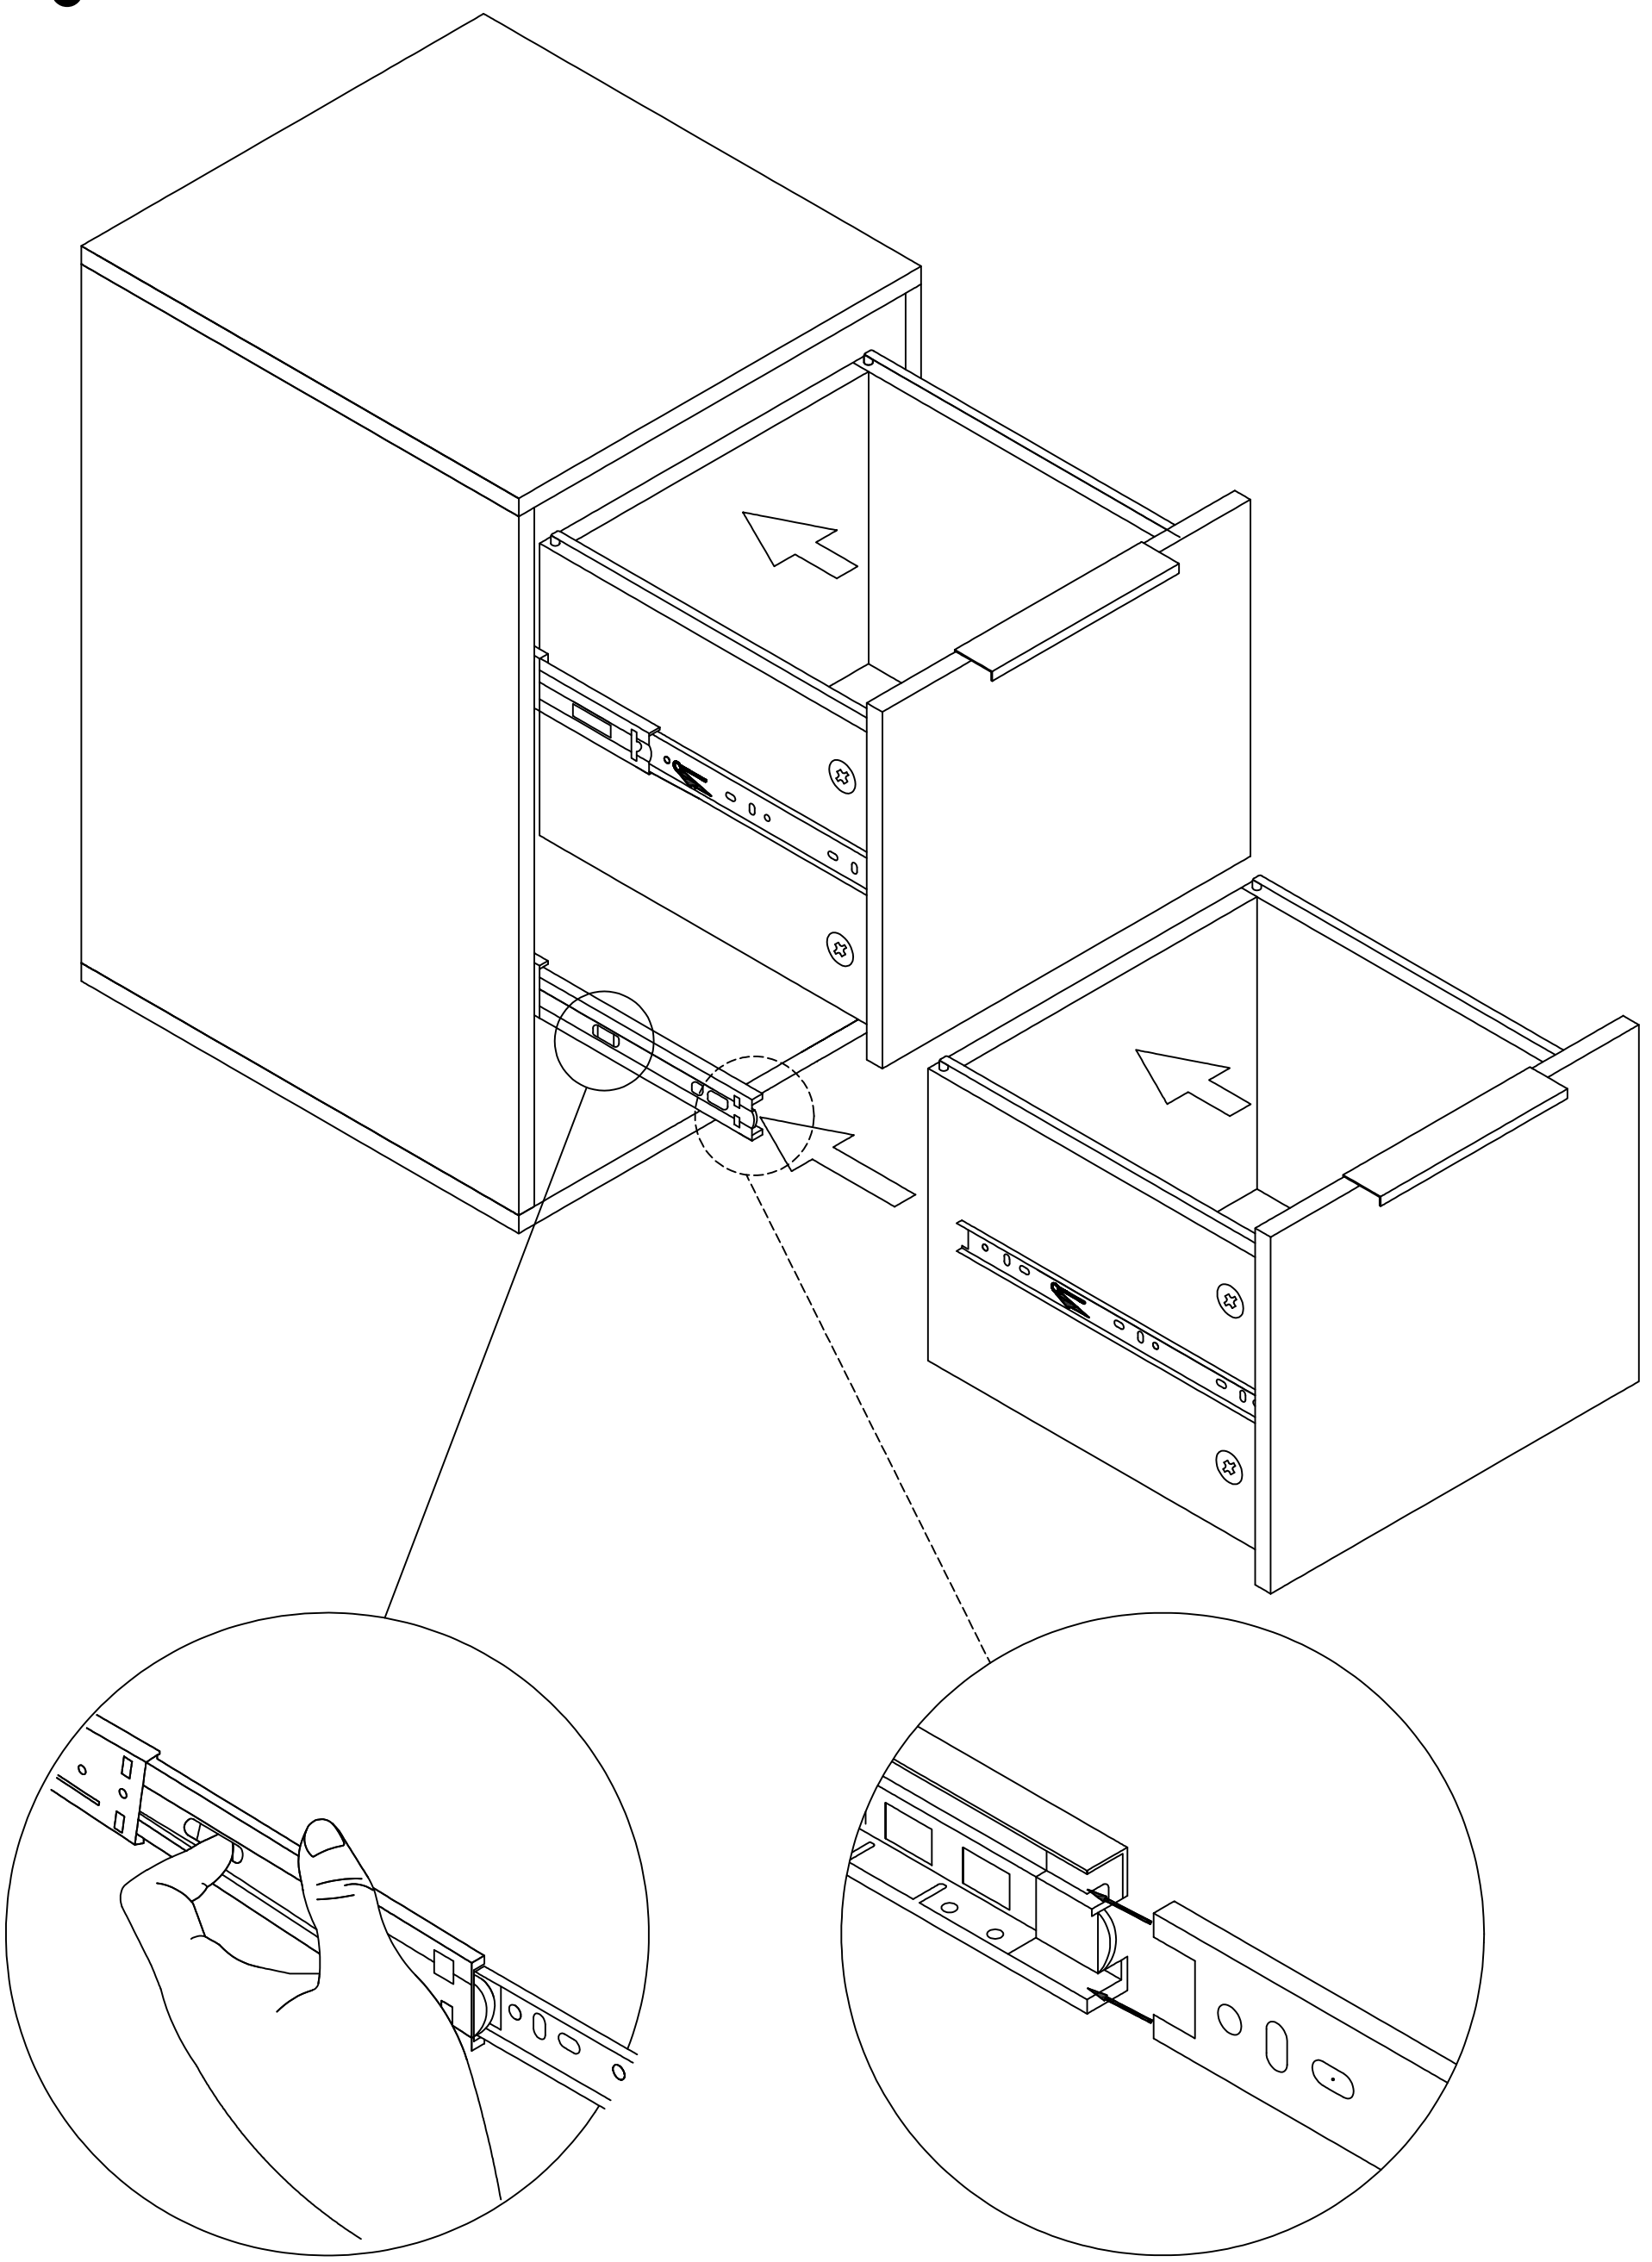
8.



D2	x4	E	x2
			
Black screw		Handle	

9.

The drawer is not divided into upper and lower parts, and can be installed directly



pull out the inner core of slide on outer box,pull its white part, stop it sliding.

push in slide of drawer into slide tracks of outer box.