


# Large Sideboard

## Assembly Guide

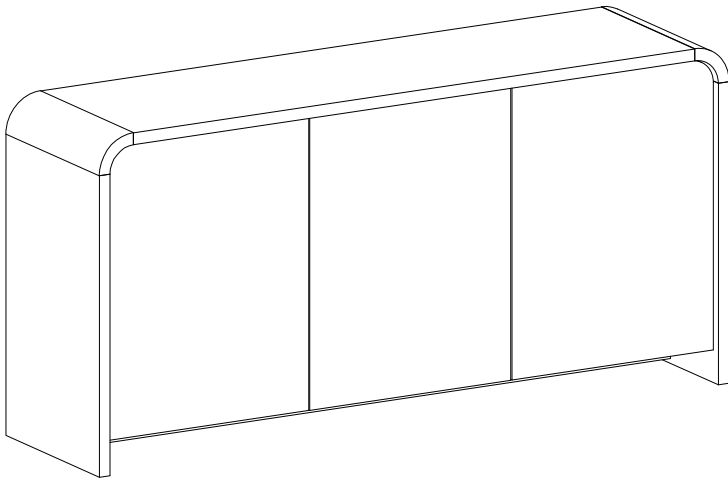

**IMPORTANT:** please read these instructions fully before starting assembly



**SAFETY AND  
CARE ADVICE**



**NO POWER TOOLS**

- Check you have all the components and tools listed
- Remove all fittings from their bags and separate into groups
- We do not recommend use of power tools - this could damage the unit. Only use hand screwdrivers and Allen keys
- Keep children and animals away from the work area, small parts could cause choking if swallowed
- Make sure you have enough space to lay out the parts before starting
- Assemble the item as close to its final position (same room) as possible
- Do not over tighten the nuts to avoid damage to the threads
- Only clean using a damp cloth and mild detergent. Do not use bleach or abrasive cleaners
- Do not allow children to climb or play on this product. From time to time, check there are no loose screws in this unit
- This product should not be discarded with household waste. Take to your local authority waste disposal centre
- Unless otherwise stated, this product is designed for domestic use and is not certified for commercial or contract settings

## IMPORTANT INFORMATION



60 Minute  
Build



Two Person  
Build




Max Weight  
Capacity  
40kg

**Note:** Assembly estimates are approximate and can differ based on the specific environment and user experience.

# WHAT'S IN THE BOX

**Note:** the quantities are the correct amount to complete the assembly. In some cases more fixings may be supplied than are required.
















Getting to know your product:

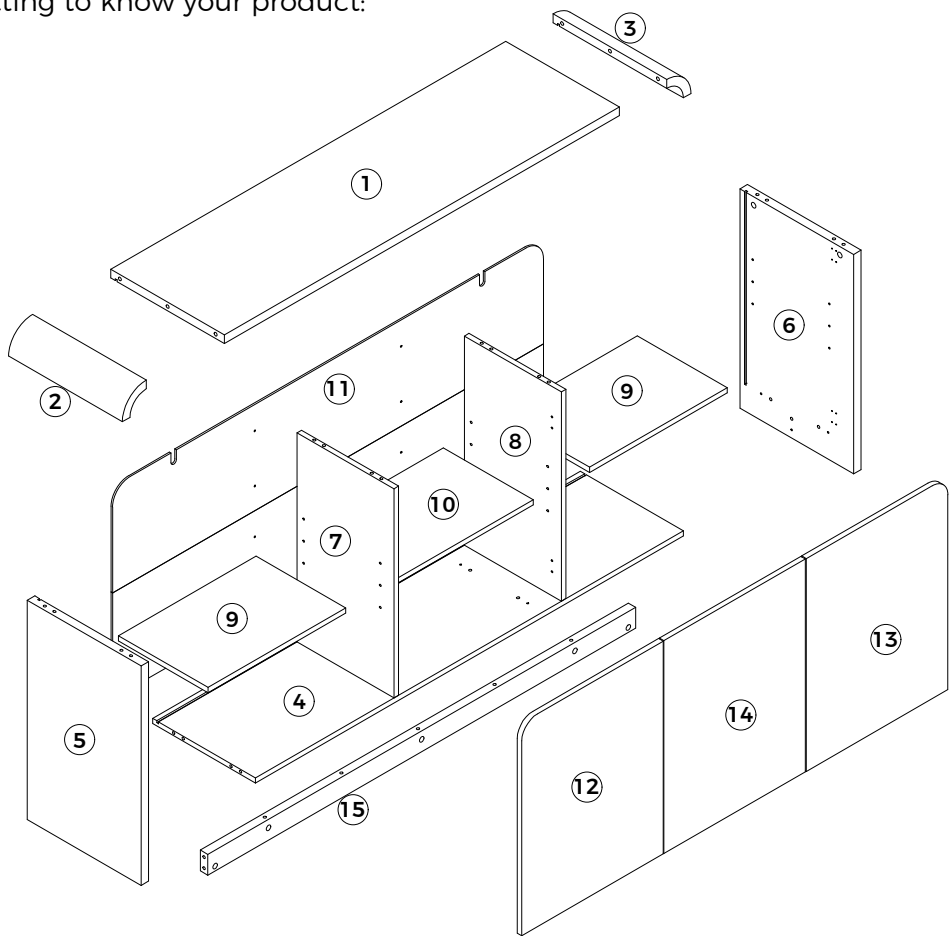

# WHAT'S IN THE BOX

**Note:** the quantities are the correct amount to complete the assembly. In some cases more fixings may be supplied than are required.

## Parts Key:

| Label | Part Name           | Image / Drawing                                                                     | Quantity | Label | Part Name       | Image / Drawing                                                                     | Quantity |
|-------|---------------------|-------------------------------------------------------------------------------------|----------|-------|-----------------|-------------------------------------------------------------------------------------|----------|
| 1     | Top Panel           |    | 1        | 9     | Shelf           |    | 2        |
| 2     | Left Corner Rail    |    | 1        | 10    | Middle Shelf    |    | 1        |
| 3     | Right Corner Rail   |    | 1        | 11    | Back Panel      |    | 1        |
| 4     | Bottom Panel        |    | 1        | 12    | Left Side Door  |    | 1        |
| 5     | Left Side Panel     |   | 1        | 13    | Right Side Door |   | 1        |
| 6     | Right Side Panel    |  | 1        | 14    | Middle Door     |  | 1        |
| 7     | Left Divider Panel  |  | 1        | 15    | Bottom Rail     |  | 1        |
| 8     | Right Divider Panel |  | 1        |       |                 |                                                                                     |          |

# WHAT'S IN THE BOX

**Note:** the quantities are the correct amount to complete the assembly. In some cases more fixings may be supplied than are required.



## Hardware Key:

| Label | Hardware Description | Image / Drawing                                                                     | Size(mm)   | Quantity |
|-------|----------------------|-------------------------------------------------------------------------------------|------------|----------|
| A     | Cam Bolt             |    | ø7x34      | 25       |
| B     | Cam Nut              |    | ø15x12     | 25       |
| C     | Small Dowel          |    | ø8x30      | 20       |
| D     | Large Dowel          |    | ø10x40     | 6        |
| K     | Metal Plate          |    | 35x18x2mm  | 4        |
| L     | Screw                |   | ø3.5x15mm  | 8        |
| M     | Felt Pad             |  | ø20x5mm    | 4        |
| N     | L-Bracket            |  | 80x30x15mm | 2        |
| P     | Screw                |  | ø4x14mm    | 4        |
| Q     | Wedge                |  | 14x13x10mm | 6        |

# WHAT'S IN THE BOX


**Note:** the quantities are the correct amount to complete the assembly. In some cases more fixings may be supplied than are required.


## Hardware Key:

| Label | Hardware Description | Image / Drawing                                                                     | Size(mm)  | Quantity |
|-------|----------------------|-------------------------------------------------------------------------------------|-----------|----------|
| R     | Screw                |    | ø3x19     | 14       |
| S     | Hinge                |    | ø35       | 2        |
| T     | Large Hinge          |    | ø35       | 4        |
| U     | Screw                |    | ø4x15     | 28       |
| V     | Push-Open            |   |           | 3        |
| W     | Screw                |  | ø3,5x12mm | 6        |
| Y     | Shelf Pin            |  | ø6.5x16   | 12       |
| Z     | Cap                  |  | ø25x1     | 8        |

# STEP 1



Insert 8 x small dowels [C] to Bottom panel [4] and Bottom rail [15] as shown. If needed use a mallet to gently tap the dowels into place. Screw 7 x cam bolts [A] into Bottom panel [4] as shown, tighten with a phillips head screwdriver.

|                                                                                   |  |                                                                                   |  |                                                                                    |      |
|-----------------------------------------------------------------------------------|--|-----------------------------------------------------------------------------------|--|------------------------------------------------------------------------------------|------|
|  |  |  |  |   |      |
|                                                                                   |  |                                                                                   |  | A                                                                                  | 7PCS |
|                                                                                   |  |                                                                                   |  |  |      |
|                                                                                   |  |                                                                                   |  | C                                                                                  | 8PCS |

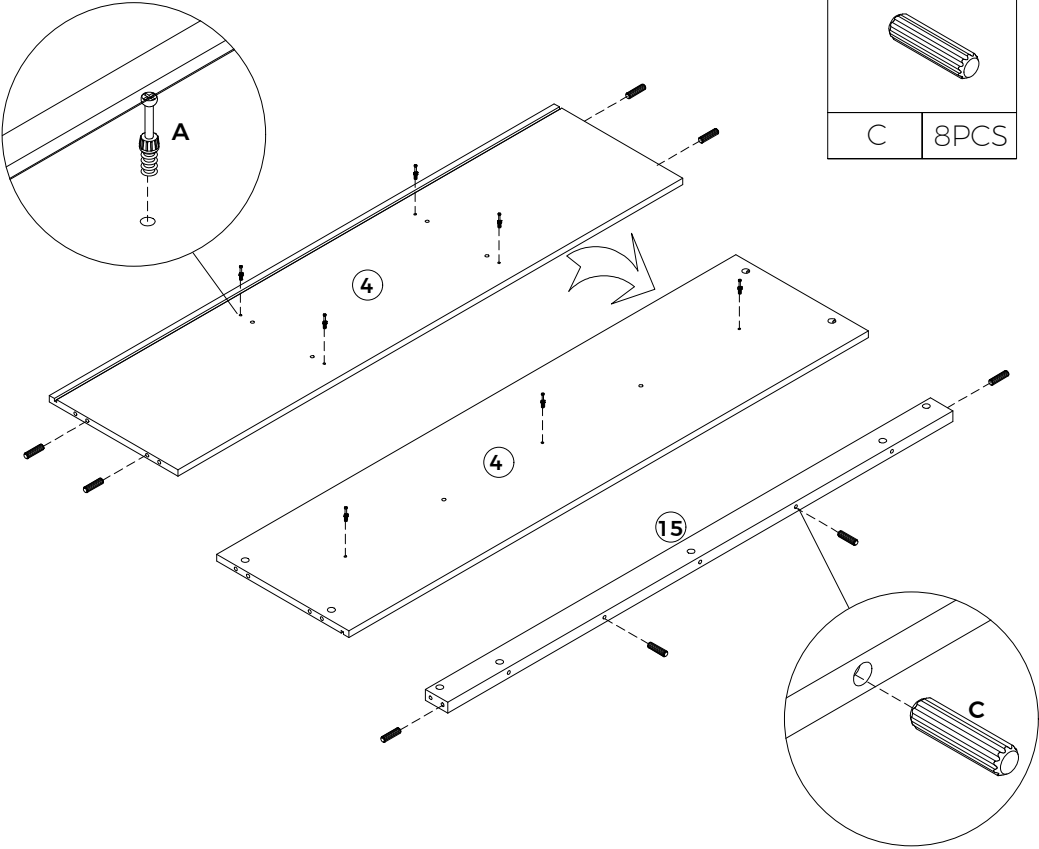


# STEP 2


Attach Bottom rail [15] to bottom panel [4] as shown.  
Insert 3 x cam nuts [B] into bottom rail [15]. Turn cam nuts clockwise to lock using a flat head screwdriver.

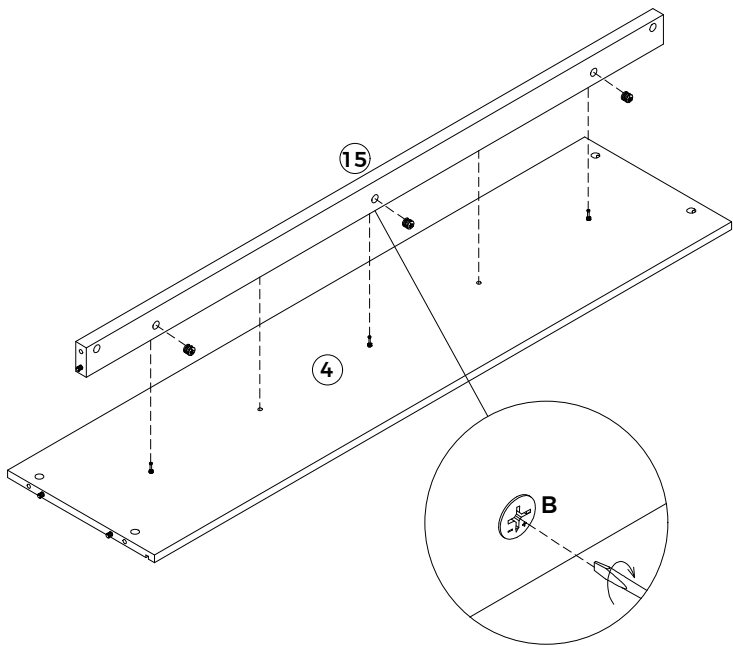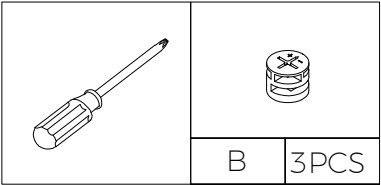

# STEP 3



Insert 4 x small dowels [C] to Side panels [5] & [6] as shown.  
Screw 6 x cam bolts [A] into Side panels [5] & [6] as shown.  
Attach 4 x felt pads [M] to Sided panels [5] & [6] as shown.

|                                                                                   |                                                                                   |                                                                                   |      |                                                                                   |      |                                                                                    |      |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------|-----------------------------------------------------------------------------------|------|------------------------------------------------------------------------------------|------|
|  |  |  |      |  |      |  |      |
|                                                                                   |                                                                                   | A                                                                                 | 6PCS | C                                                                                 | 4PCS | M                                                                                  | 4PCS |

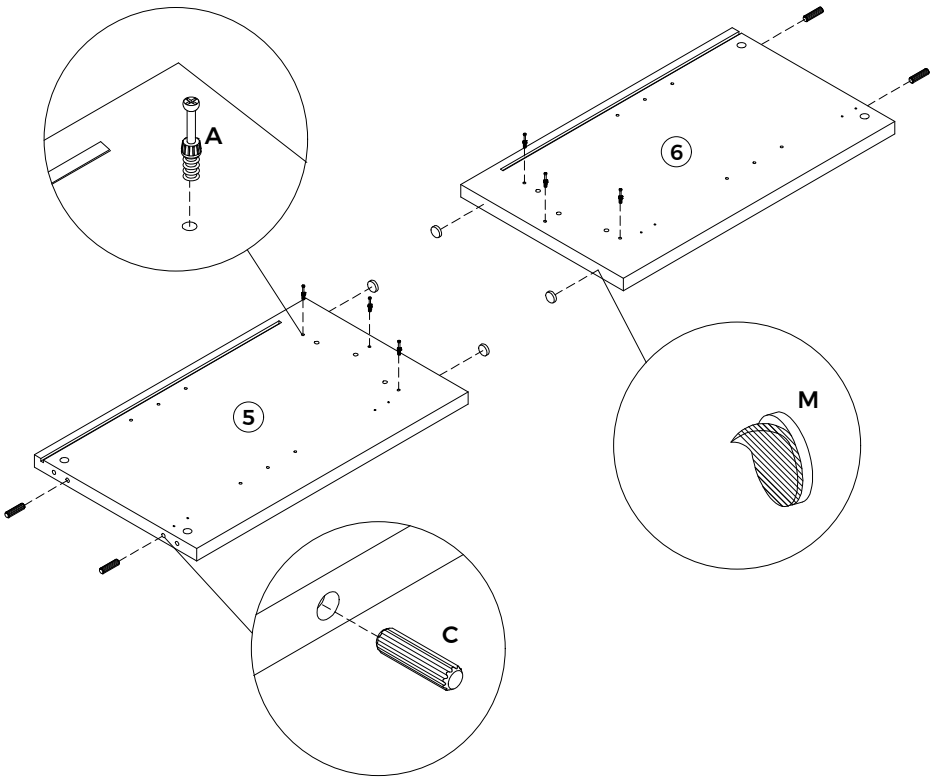



# STEP 4

Attach Side panels [5] & [6] onto Bottom panel [4] and Bottom rail [15] as shown.  
Insert 6 x cam nuts [B] into Bottom rail [15] and Bottom panel [4] as shown, turn cam nuts clockwise to lock using a flat head screwdriver.

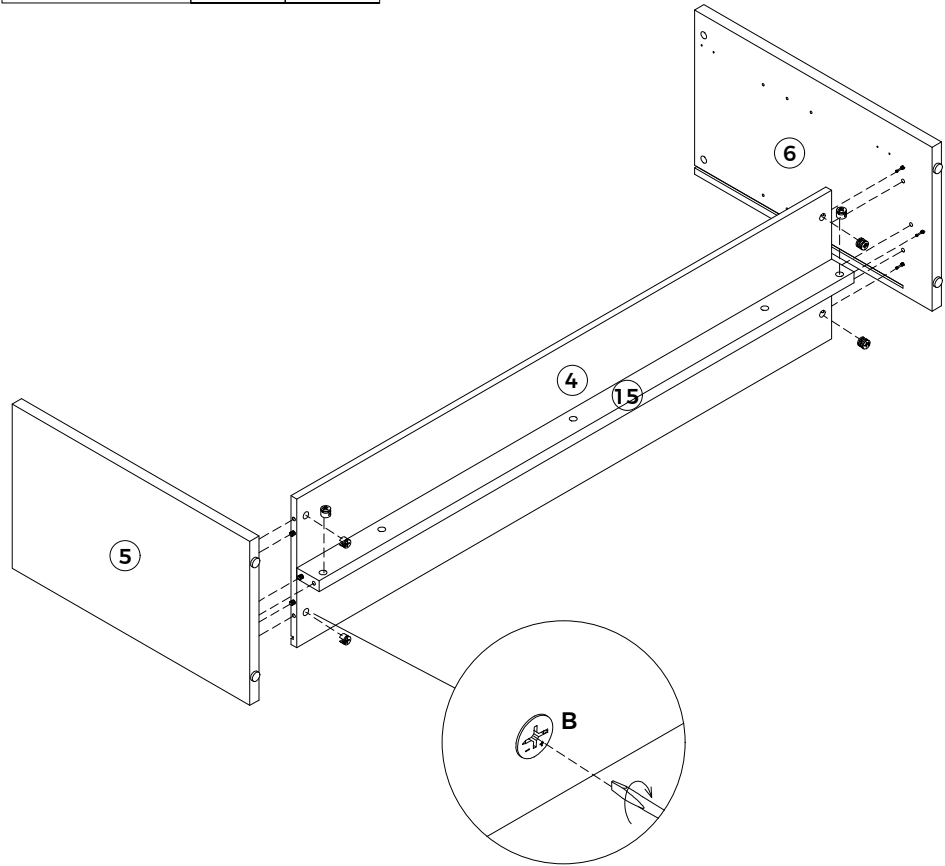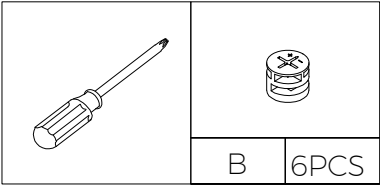



# STEP 5

Insert 8 x small dowels [C] to Divider panels [7] & [8] as shown.

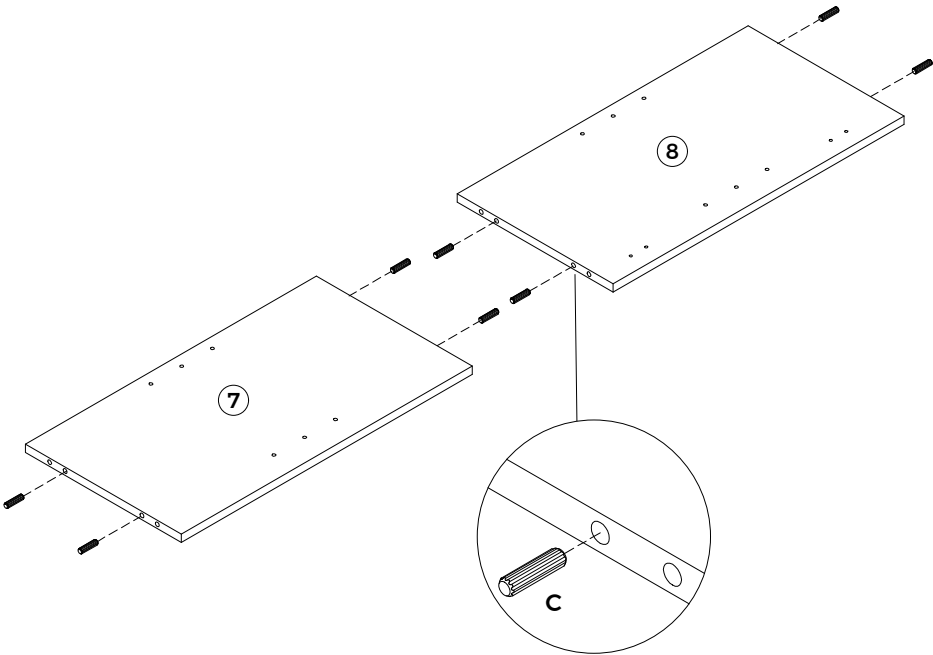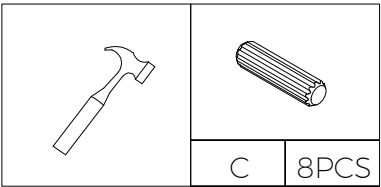


# STEP 6

Attach Divider panels [7] & [8] onto Bottom panel [4] as shown.  
Insert 4 x cam nuts [B] into Divider panels [7] & [8] as shown,  
tight with a flat head screwdriver.

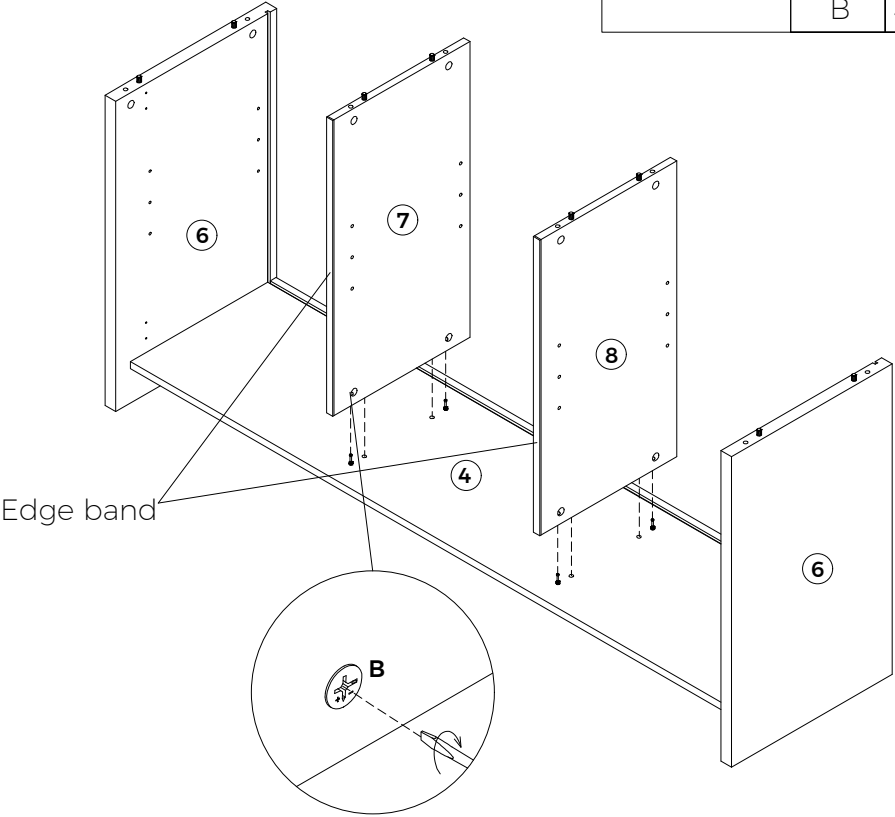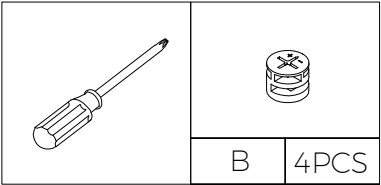



# STEP 7


Slot in Back panel [11] into the grooves on side panels and bottom panel as shown. Ensure Back panel [11] is fully slotted into the grooves.

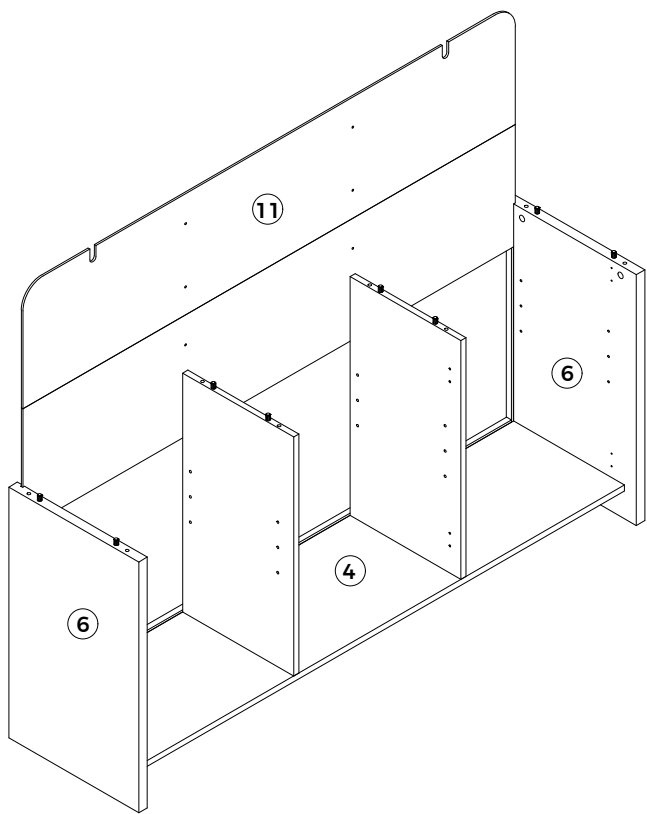

# STEP 8

Insert 6 x large dowels [D] to Top panel [1] as shown.  
Screw 4 x cam bolts [A] into Top panel [1] as shown.  
Attach 2 x L-brackets [N] to Top panel [1] with 4 x screws [P] using a Phillips head screwdriver.

|                                                                                   |  |                                                                                   |  |                                                                                   |  |                                                                                    |  |
|-----------------------------------------------------------------------------------|--|-----------------------------------------------------------------------------------|--|-----------------------------------------------------------------------------------|--|------------------------------------------------------------------------------------|--|
|  |  |  |  |  |  |  |  |
| A                                                                                 |  | 4PCS                                                                              |  | D                                                                                 |  | 6PCS                                                                               |  |
|                                                                                   |  |                                                                                   |  |  |  |   |  |
|                                                                                   |  |                                                                                   |  | N                                                                                 |  | 2PCS                                                                               |  |



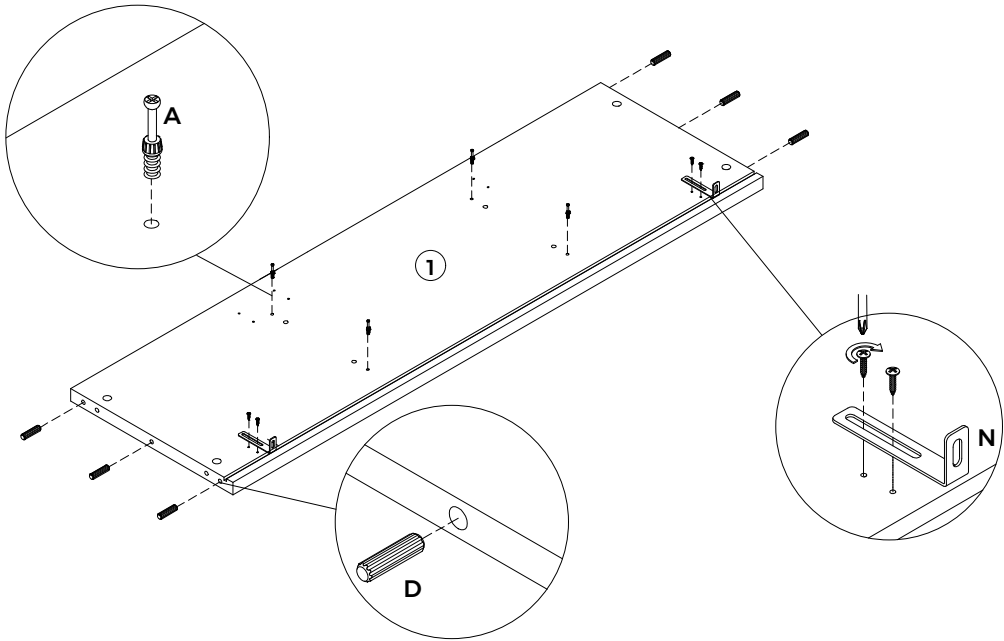


# STEP 9

Attach 3 x Push-open [V] to Top panel [1] using 6 x screws [W] with a Phillips Head Screwdriver.



|         |       |       |
|---------|-------|-------|
|         |       |       |
| ø3.5x12 | ø4x15 | ø3x19 |

|  |        |        |
|--|--------|--------|
|  |        |        |
|  | V 3PCS | W 6PCS |

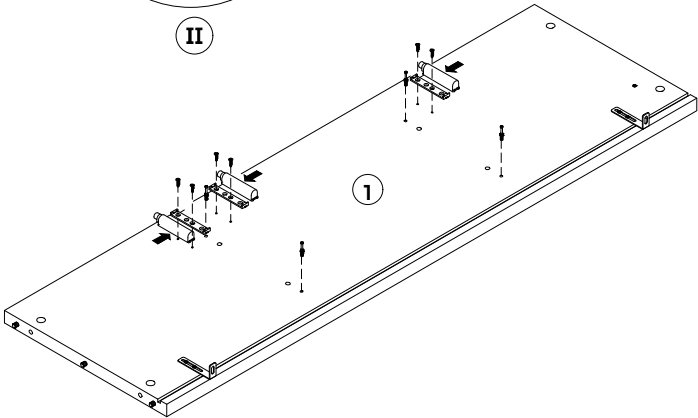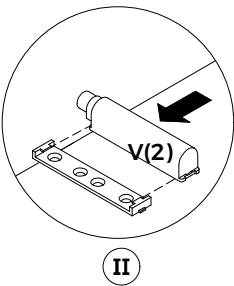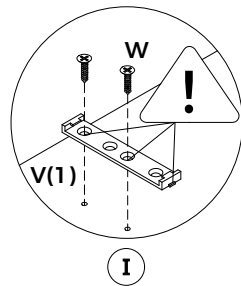

# STEP 10


Screw 8 x cam bolts [A] into Corner rails [2] & [3] as shown.

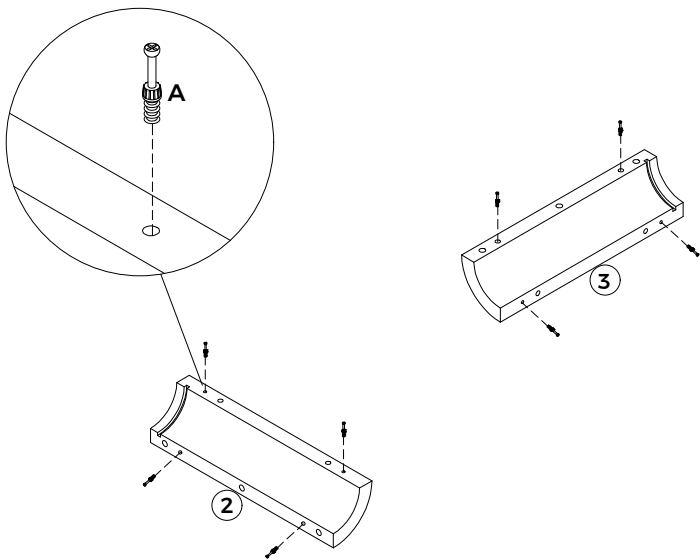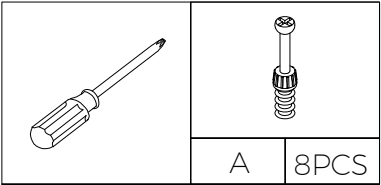

## STEP 11


Attach Corner rails [2] & [3] to Top panel [1] as shown.


Insert 4 x cam nuts [B] into Top panel [1] as shown, tight with a Phillips head screwdriver.

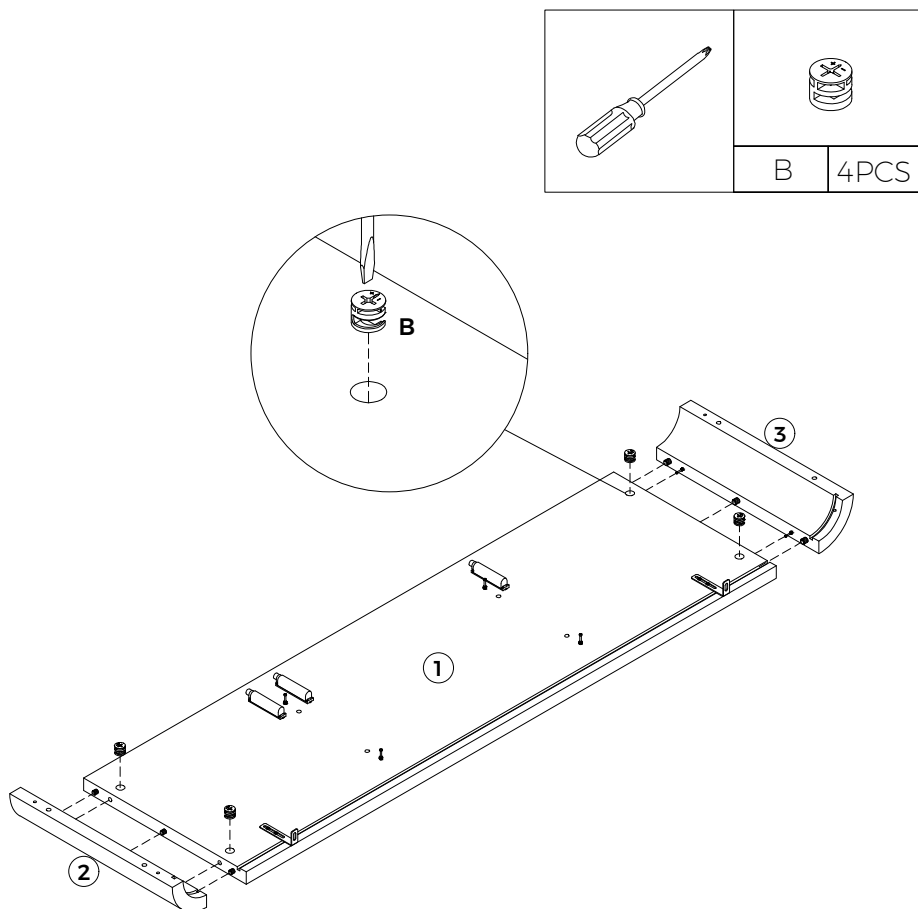

# STEP 12



Attach 4 x metal plates [K] to top panel and corner rails with 8 x screws [L] as shown.

|                                                                                   |                                                                                   |      |                                                                                    |      |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------|------------------------------------------------------------------------------------|------|
|  |  |      |  |      |
|                                                                                   | K                                                                                 | 4PCS | L                                                                                  | 8PCS |

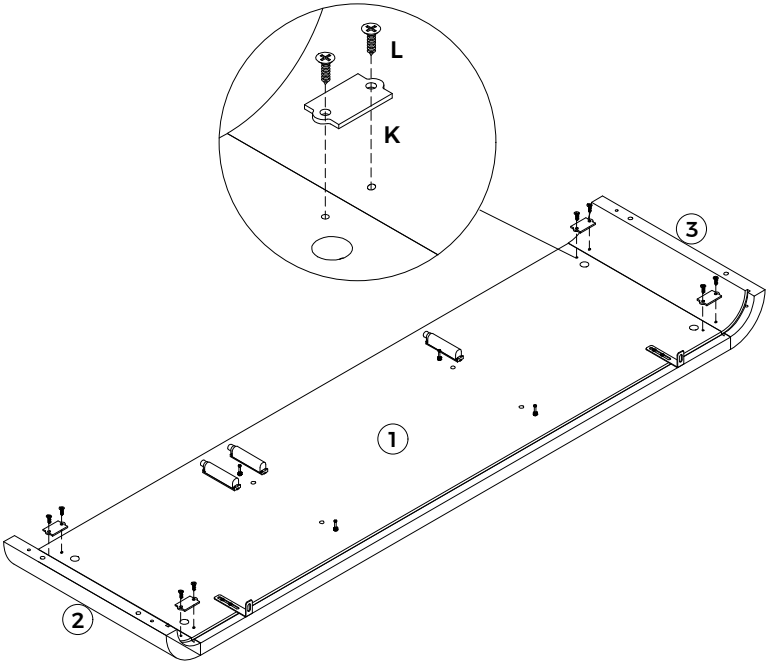

## STEP 13



Attach Top panel [1] onto assembled frame as shown.  
Insert 8 x cam nuts [B] into Divider panels [7] & [8]  
and Side panels [5] & [6] as shown, tight with a flat head screwdriver.

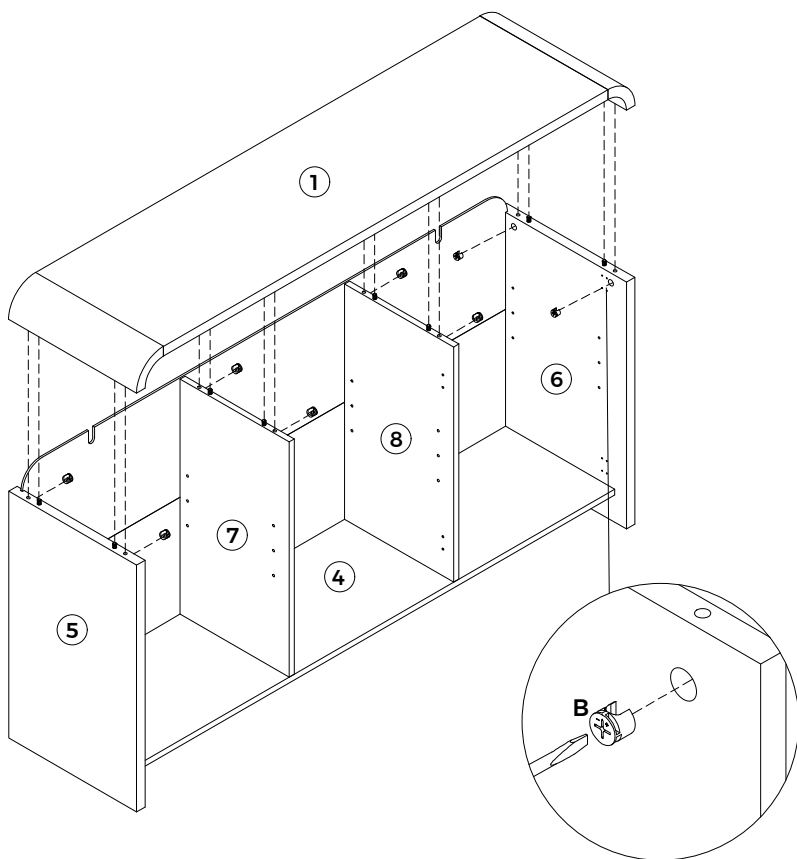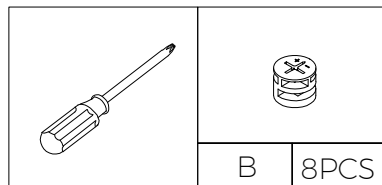


# STEP 14

If necessary, gently adjust the Top panel [1] sideways in either direction until XX and YY are equal. Holding it in place, fix 6 x wedges [Q] to assembled unit with 6 x screws [R] as shown.

Screw 8 x screws [R] into Back panel [11] as shown, using a Phillips head screwdriver.

|                                                                                   |                                                                                   |                                                                                   |      |                                                                                    |       |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------|------------------------------------------------------------------------------------|-------|
|  |  |  |      |  |       |
|                                                                                   |                                                                                   | Q                                                                                 | 6PCS | R                                                                                  | 14PCS |

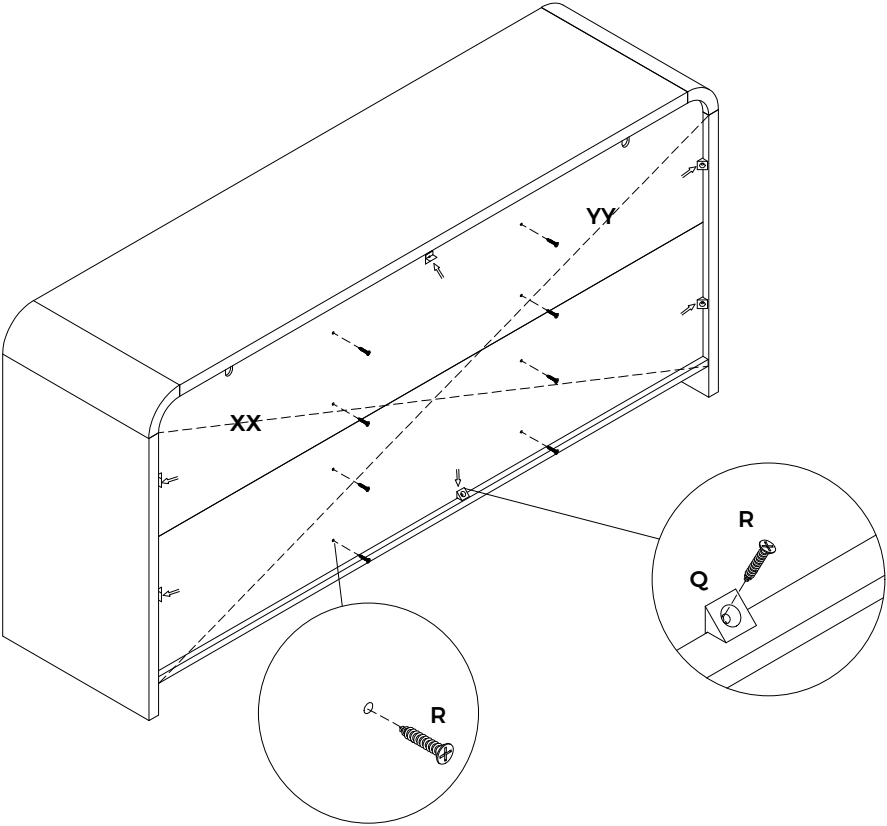

## STEP 15 - Anti-tip Restraint

### WARNING

To reduce the risk of serious injury or death from tip-over, this unit must be securely anchored to a suitable wall before use.


- Never allow children to climb, stand or hang on this furniture.
- Always secure the unit to a suitable wall using appropriate fixings for your wall type.
- Before drilling, check for hidden electrical cables, water pipes and other concealed services.
- If you are unsure how to install the anti-tip restraint or select suitable fixings, seek advice from a qualified installer or your local hardware store.

### Installation

1. With assistance, move the cabinet into its final position.
2. Using the attached L-brackets [N] as a guide, mark the fixing positions on the wall.
3. Move the cabinet away from the wall and prepare the wall for fixing as required.
4. Reposition the cabinet and securely fasten the L-brackets [N] to the wall using fixings suitable for your wall type.
5. Check that the cabinet is level, stable and securely anchored before use.



### Important Handling Note

Always lift the cabinet from the base. Do not lift or carry the cabinet by the top panel, as this may cause damage or separation.

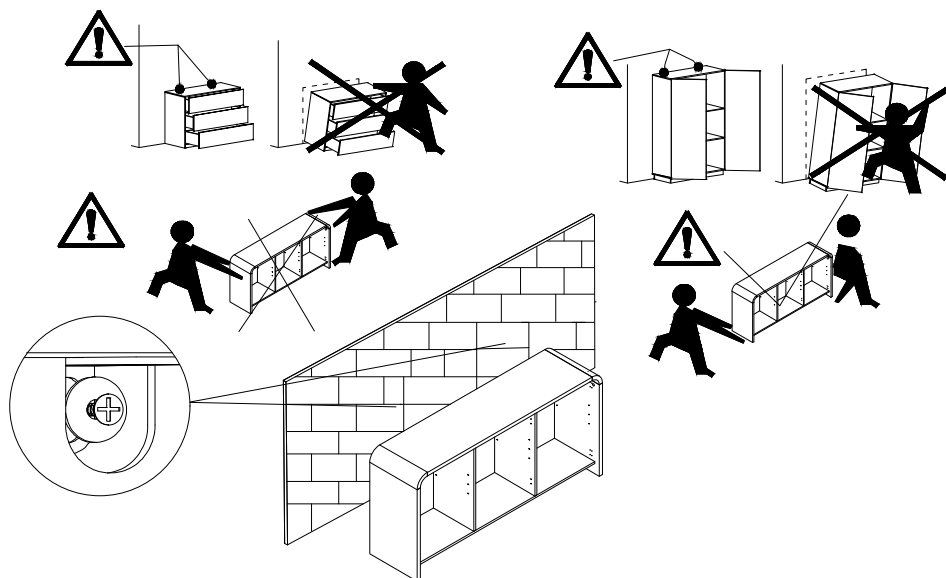


# STEP 16

Insert 12 x shelf pins [Y] into desired holes in the panels.

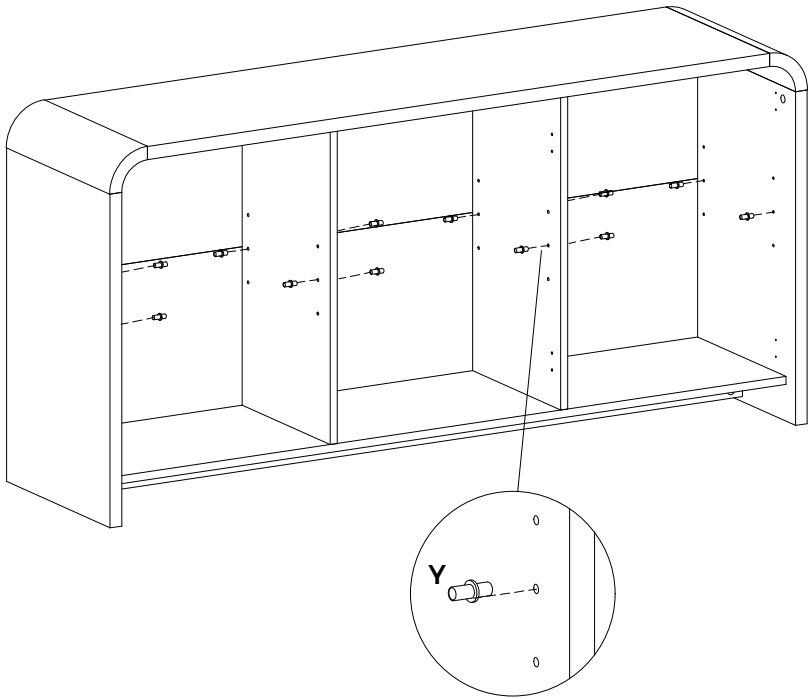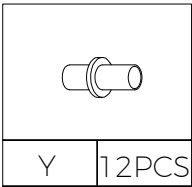



## STEP 17


Place 2 x Side shelves [9] and Middle shelf [10] into cabinet as shown by resting on the shelf pins.

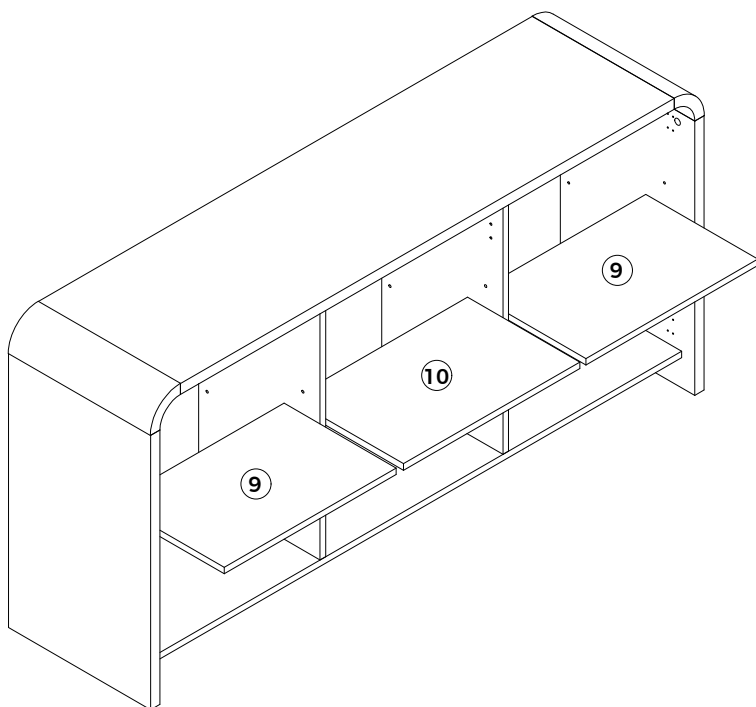

# STEP 18



Attach 4 x large hinges [T] to Doors [12] & [13] with 8 x screws [U] as shown, tighten with a Phillips head screwdriver.


|                                                                                   |                                                                                   |      |                                                                                    |      |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------|------------------------------------------------------------------------------------|------|
|  |  |      |  |      |
|                                                                                   | T                                                                                 | 4PCS | U                                                                                  | 8PCS |

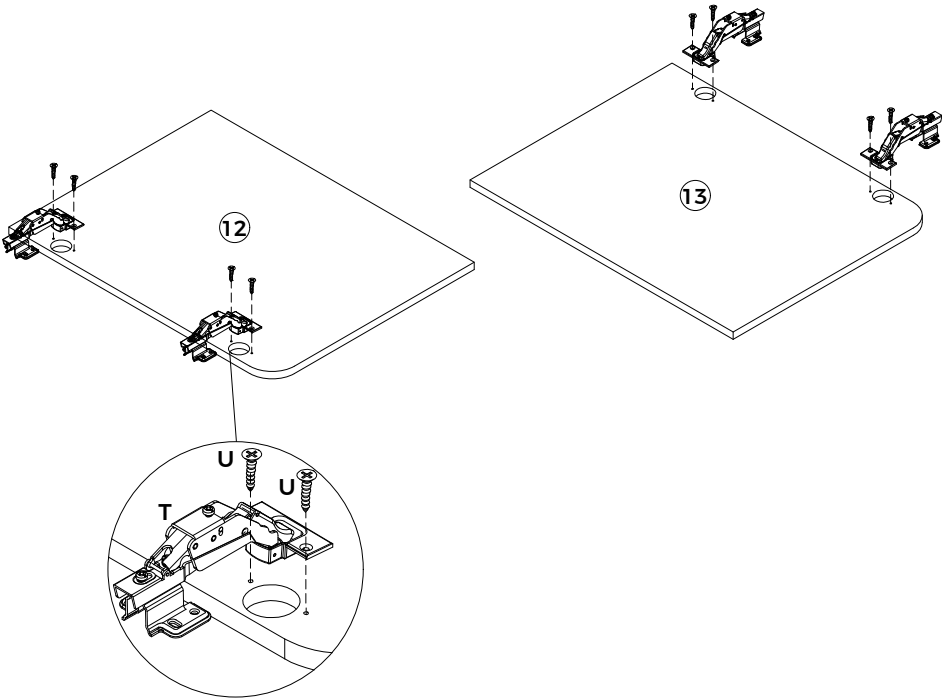

# STEP 19



Attach 2 x Hinges [S] to Middle door [14] with 4 x screws [U] as shown, tighten with a Phillips head screwdriver.

|                                                                                   |                                                                                   |      |                                                                                    |      |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------|------------------------------------------------------------------------------------|------|
|  |  |      |  |      |
|                                                                                   | S                                                                                 | 2PCS | U                                                                                  | 4PCS |

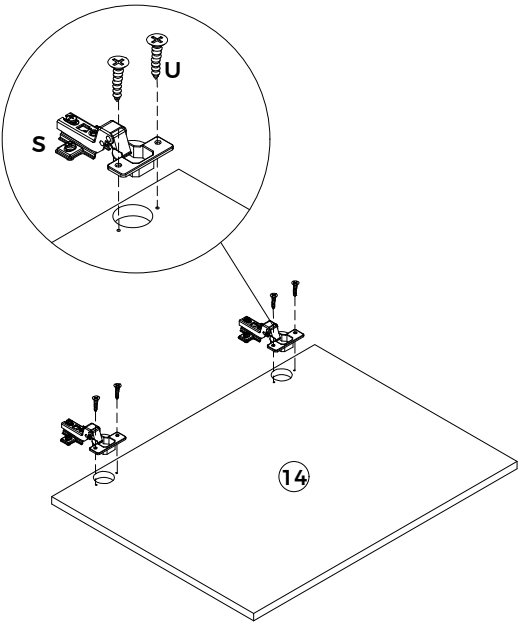



# STEP 20

Attach Side doors [12] & [13] to assembled unit as shown, secure the large hinges using 8 x screws [U] with a Phillips head screwdriver.

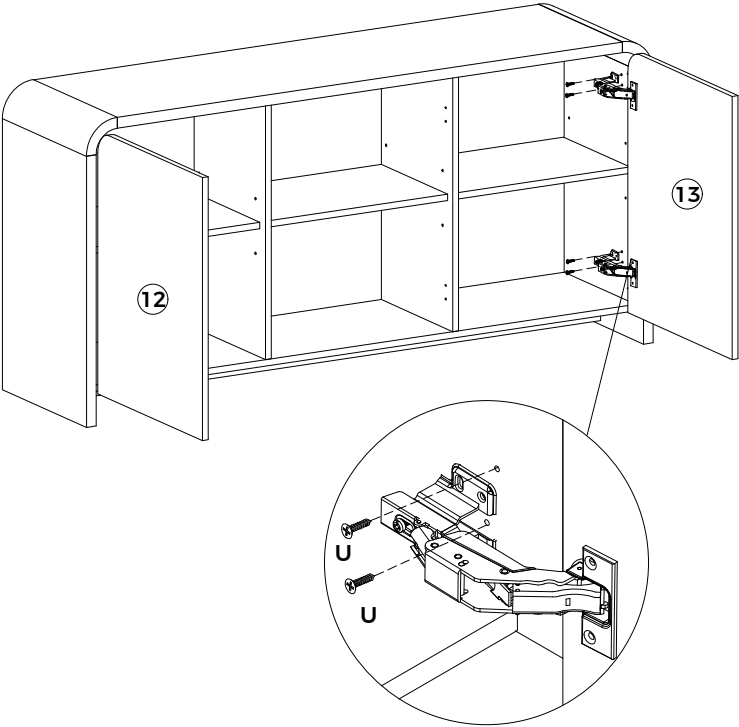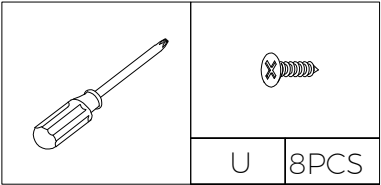




## STEP 21

Attach Middle door [14] to assembled unit as shown, tighten with a Phillips head screwdriver.

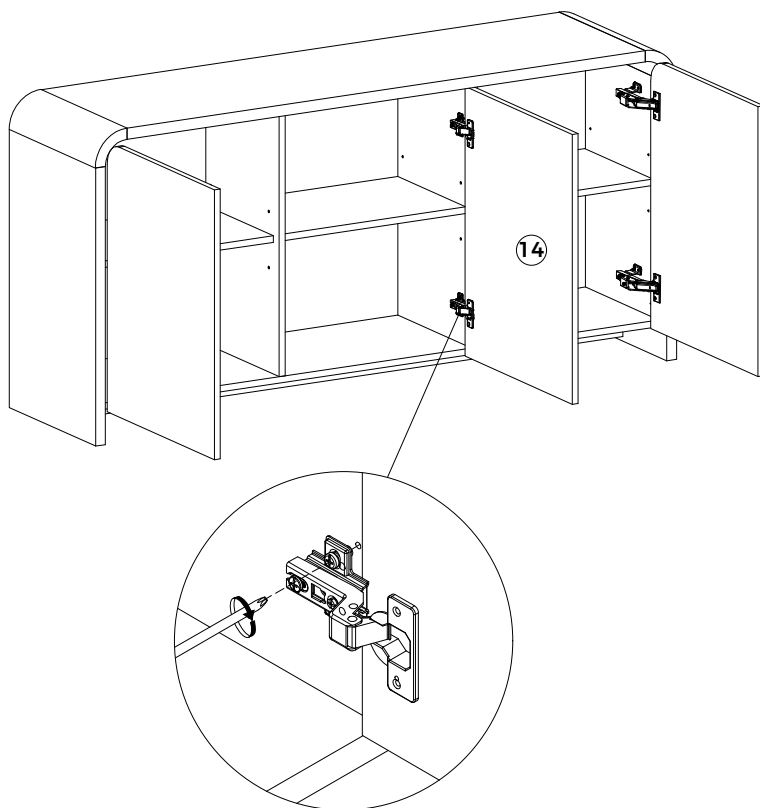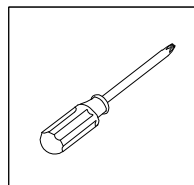



# STEP 22

Door adjustment :

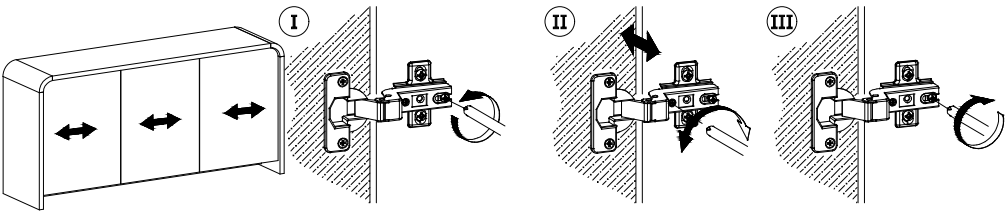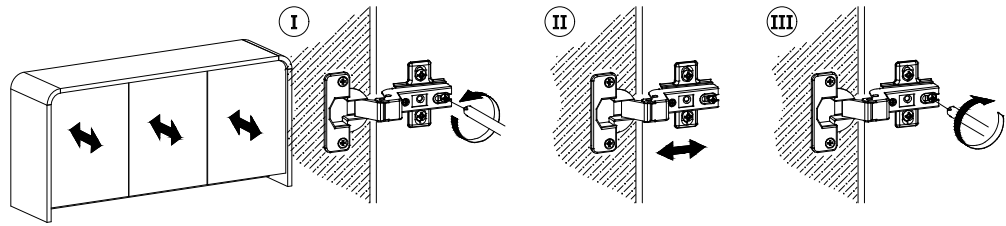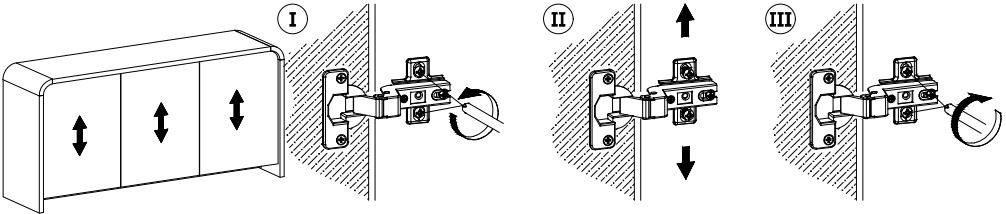


# STEP 23

After door adjustment, using 8 x screws [U] to strengthen fixing of large hinge as shown.

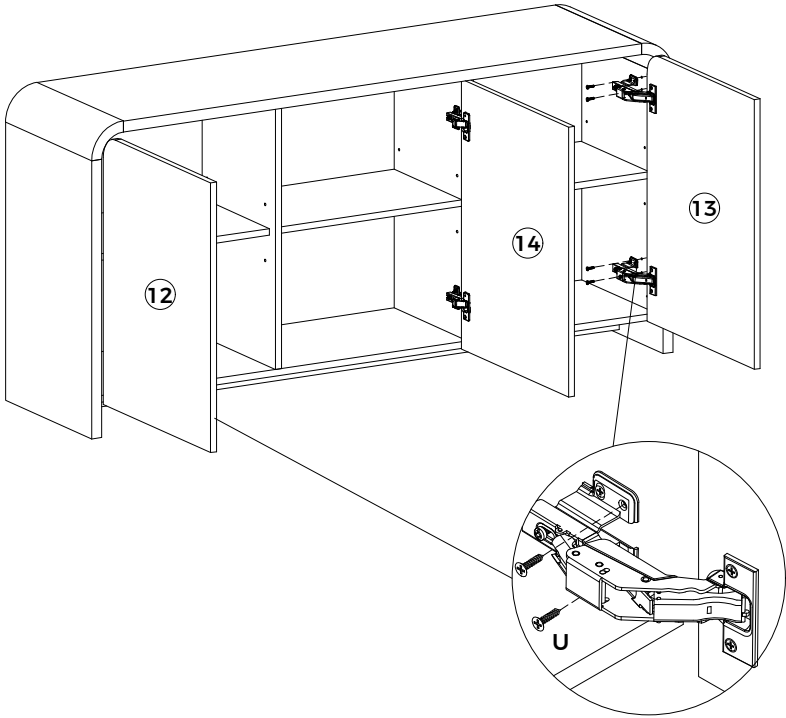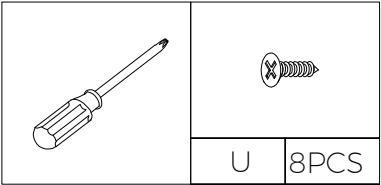

STEP 24



|                                                                                   |       |
|-----------------------------------------------------------------------------------|-------|
|  |       |
| Z                                                                                 | 12PCS |

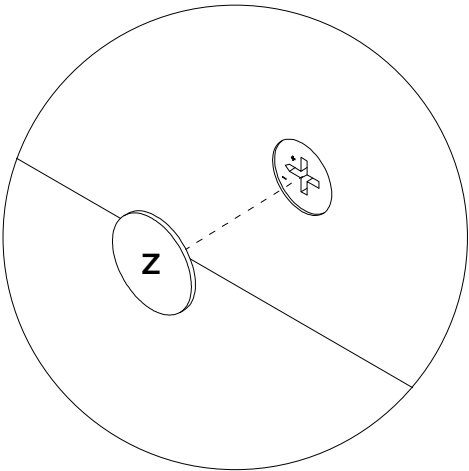

Add the screws caps for those visible cams


# STEP 25

After transportation the push-to-open latches may require adjustment if they are not working. See diagrams below. To adjust the latches, please push and release the piston once to allow it to extend outwards. Once extended, gently turn the piston clockwise or anti-clockwise to correct its position. Close and open the door to confirm latch is functioning correctly.

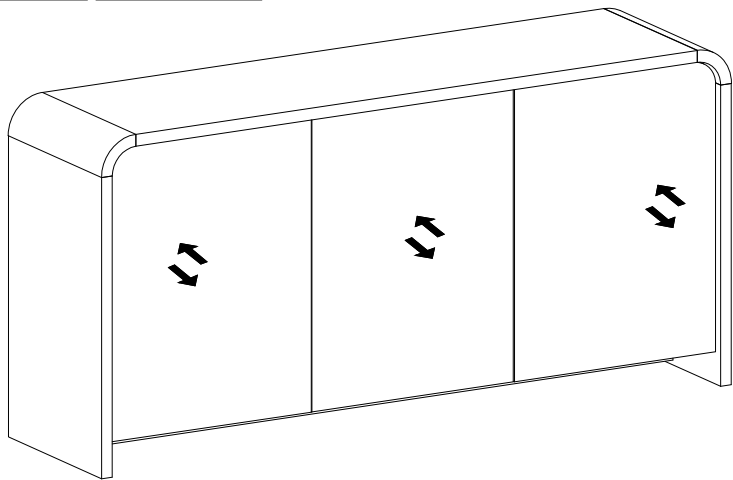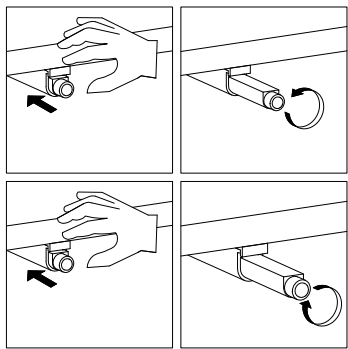

# STEP 26

Note: To open the door, push the corner of the door front inward as shown.

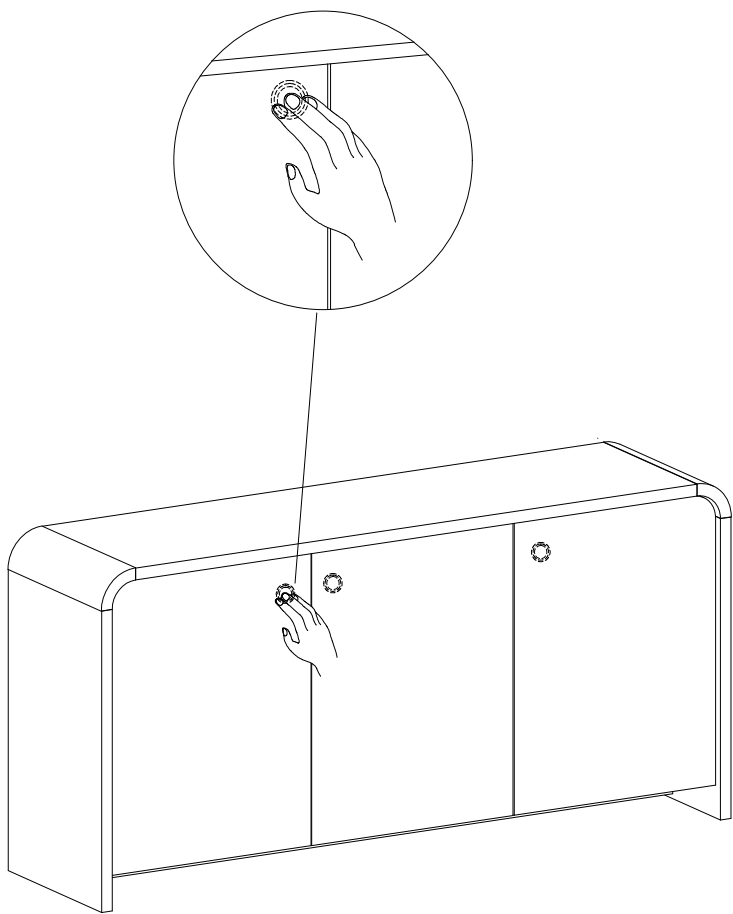



# our 2 year GUARANTEE

Our products come with a 2 year guarantee, giving you extra peace of mind when shopping with us!

## *What the guarantee covers*



### **PRE-INSERTED FIXINGS**

e.g. loose metal threads



### **FAULTY JOINTS**

e.g. legs bending



### **EXTERNAL FIXING FAULTS**

e.g. metal discs removing  
from table top



### **STRUCTURAL INTEGRITY**

e.g. the frame of the  
product