
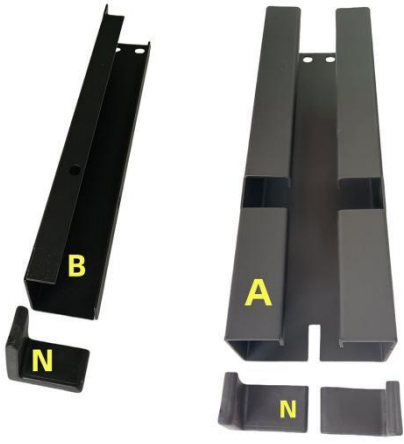
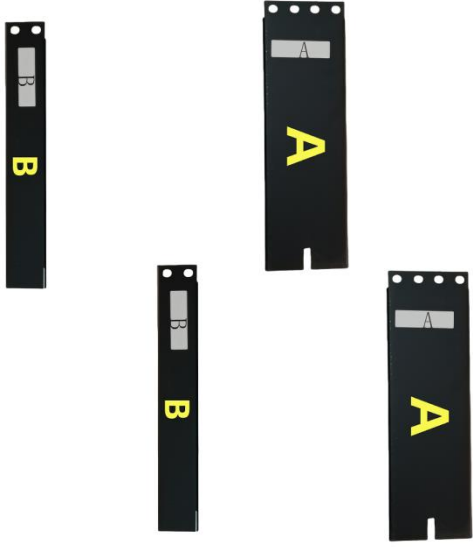
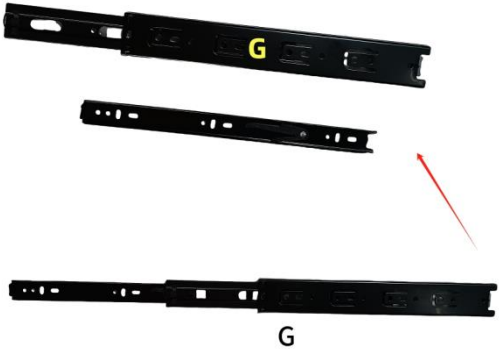


Installation Instructions

	AX2		HX2		
	BX4		IX2		
	CX4		JX2		
	DX2		KX2		
	EX2		LX1		
	FX4		MX2		
	GX2		NX8		
	X8				
	M6 X60		M6-12 X60		M4-18 X12
	M4-10 X16		M6 X1		M6 X1
	M4 X24		X1		M4 X24
Step1:Check if all accessories are complete					

	
Step2: Insert N onto A and B	Step3:Place brackets A and B on the ground, with bracket B in the middle
	
Step4: As shown in the picture, Place C.D.E on the AB bracket, Align the screw and nut with the hole and lock it in place	
	
Step5:Open the G packaging bag, Stretch it out, Find the plastic buckle, Press and hold, Divide G into two sections, Lock the big one on the F	

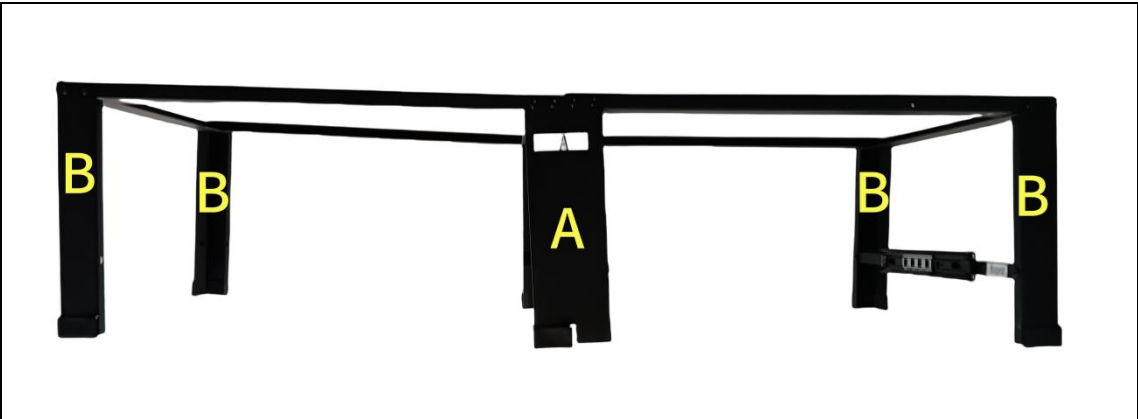


Step6:Lock F onto bracket A, Lock F onto bracket B




Step6:Lock F onto bracket A, Lock F onto bracket B



Step6:Lock F onto bracket A, Lock F onto bracket B

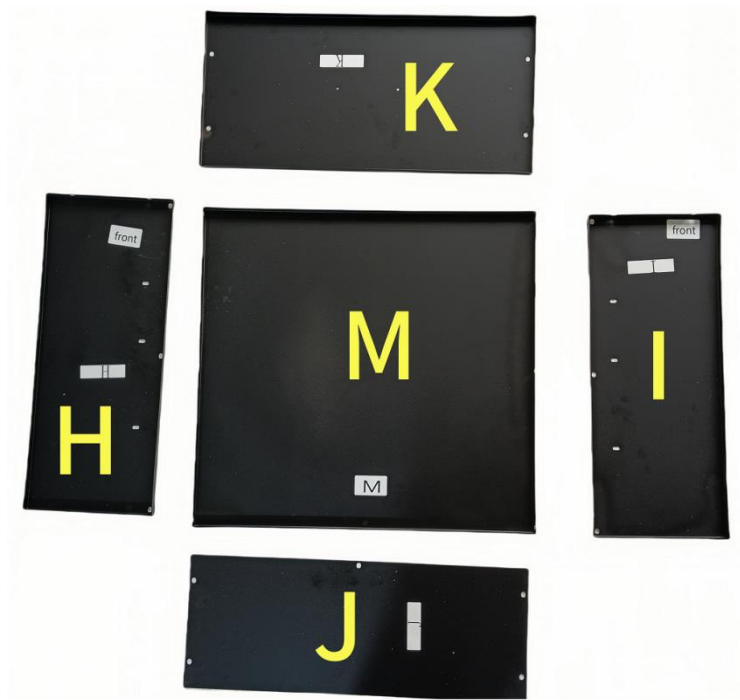



Step7:As shown in the figure, Arrange it properly H.I.J.K.M,

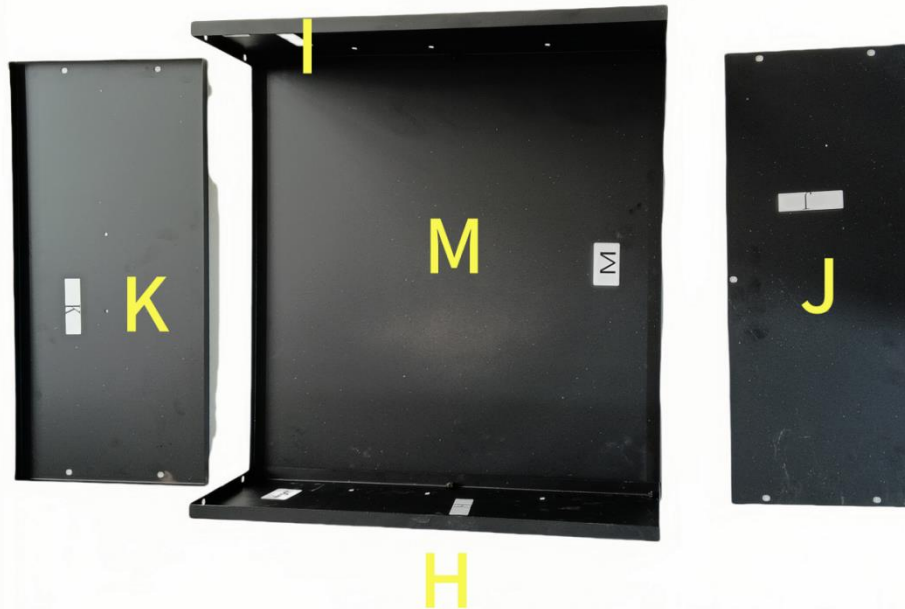


Step8:Lock H and I separately onto M



Step9:Lock J onto H and I

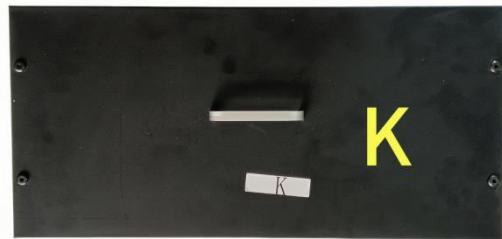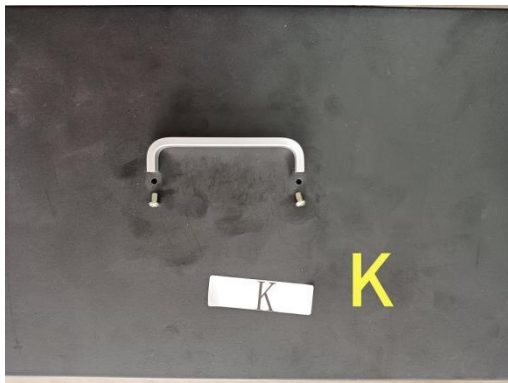

Step9:Lock L onto K, Lock K onto H and I again

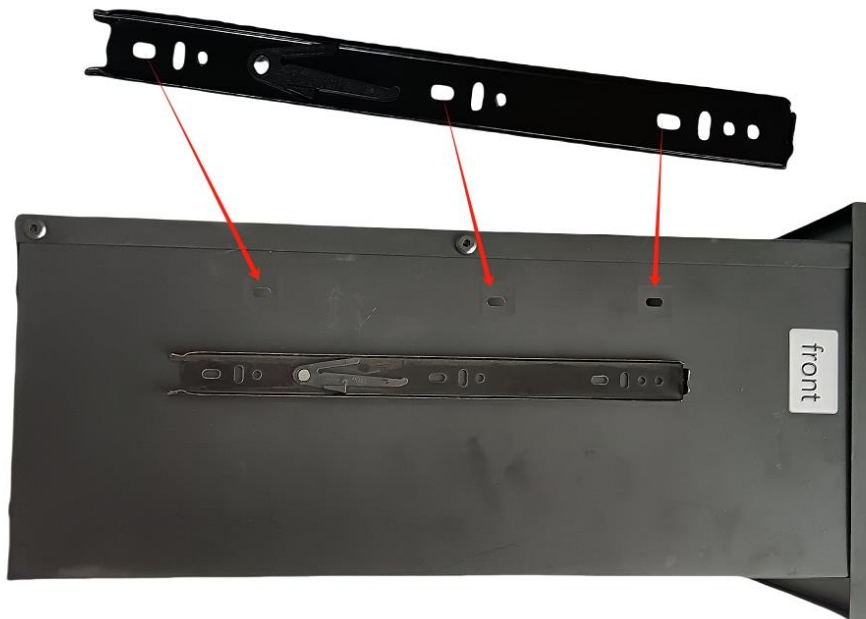

Step10:Lock a small part of G onto H and I, Once assembled, it becomes a drawer, Using the same method, assemble the other drawer



Step10:Align the small part of drawer G with G on F, Very careful installation is required here, Install another drawer using the same method



Step11:Installation is complete

