


25500

ASSEMBLY INSTRUCTION


BLACK: 19500Q-HF/ 19501Q-R
CHERRY: 19520Q-HF/ 19521Q-R
REAL WHITE: 24500Q-HF/ 24501Q-R
ANTIQUE GRAY: 25500Q-HF/ 25501Q-R

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Step 1

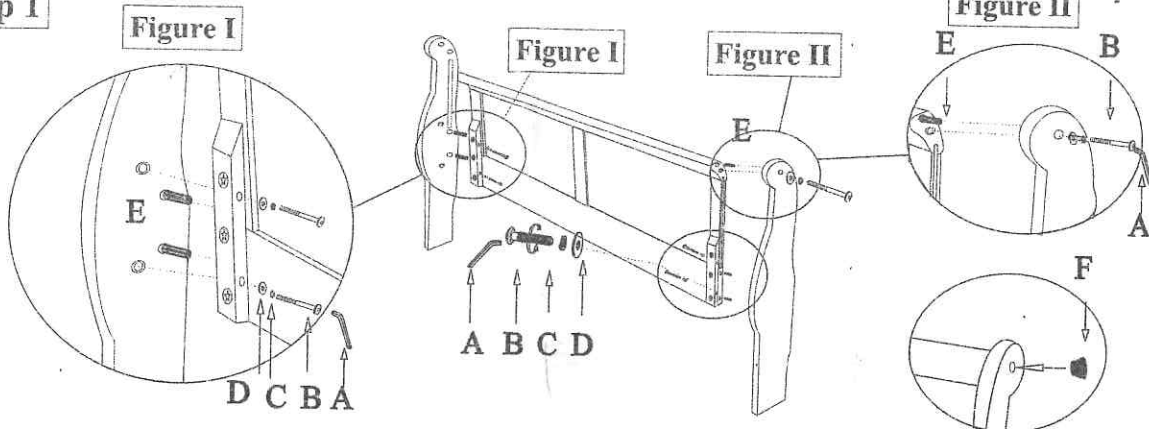

Step 2

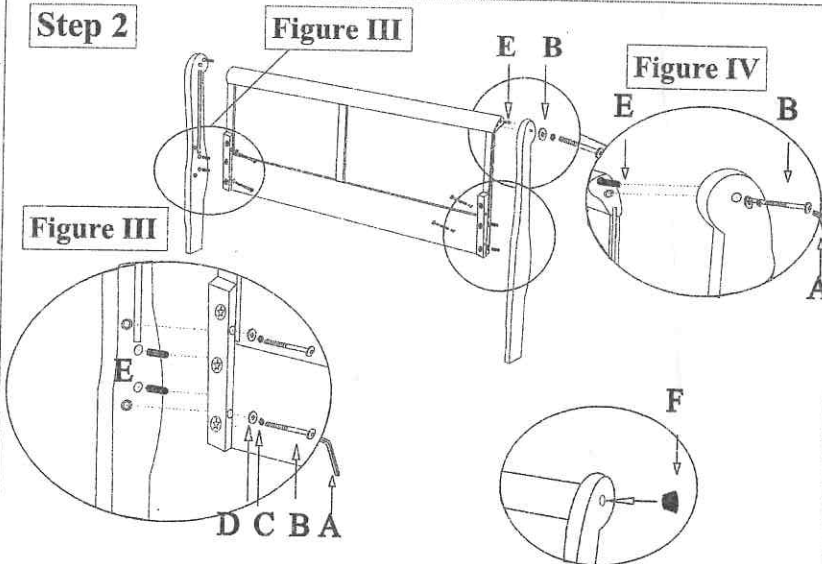


Step 3

When adjusting levelers, allot space for weight of mattress.




Step 4

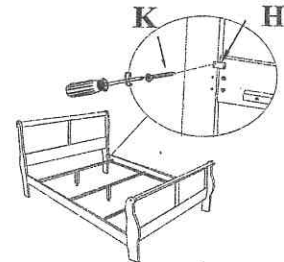

Step	No.	Hardware	Qty
1 & 2	A	Allen wrench 4mm	1
	B	Bolt 1/4 x32mm	12
	C	Spring Washer 1/4"	12
	D	Washer 1/4"x14x2	12
	E	Wood Dowel 10.7x30	12
	F	Wood Plug 16.3x6	4
3	G	Wood Screw 4x30	6
4	H	Iron 60x40	4
	K	Wood Screw 3.5x15	16

Part List

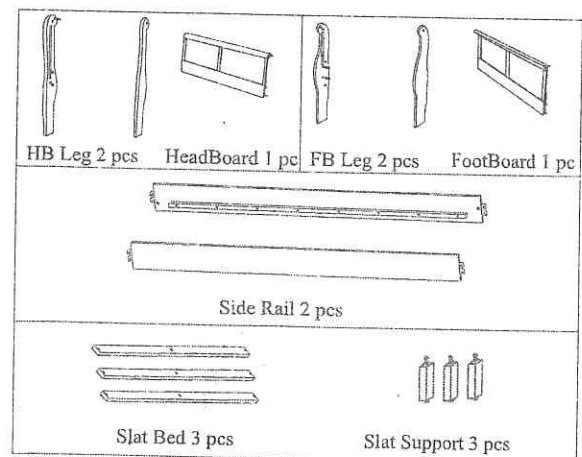

MADE IN VIETNAM