



Product Manual

Parts List


The same number represents the same size board.

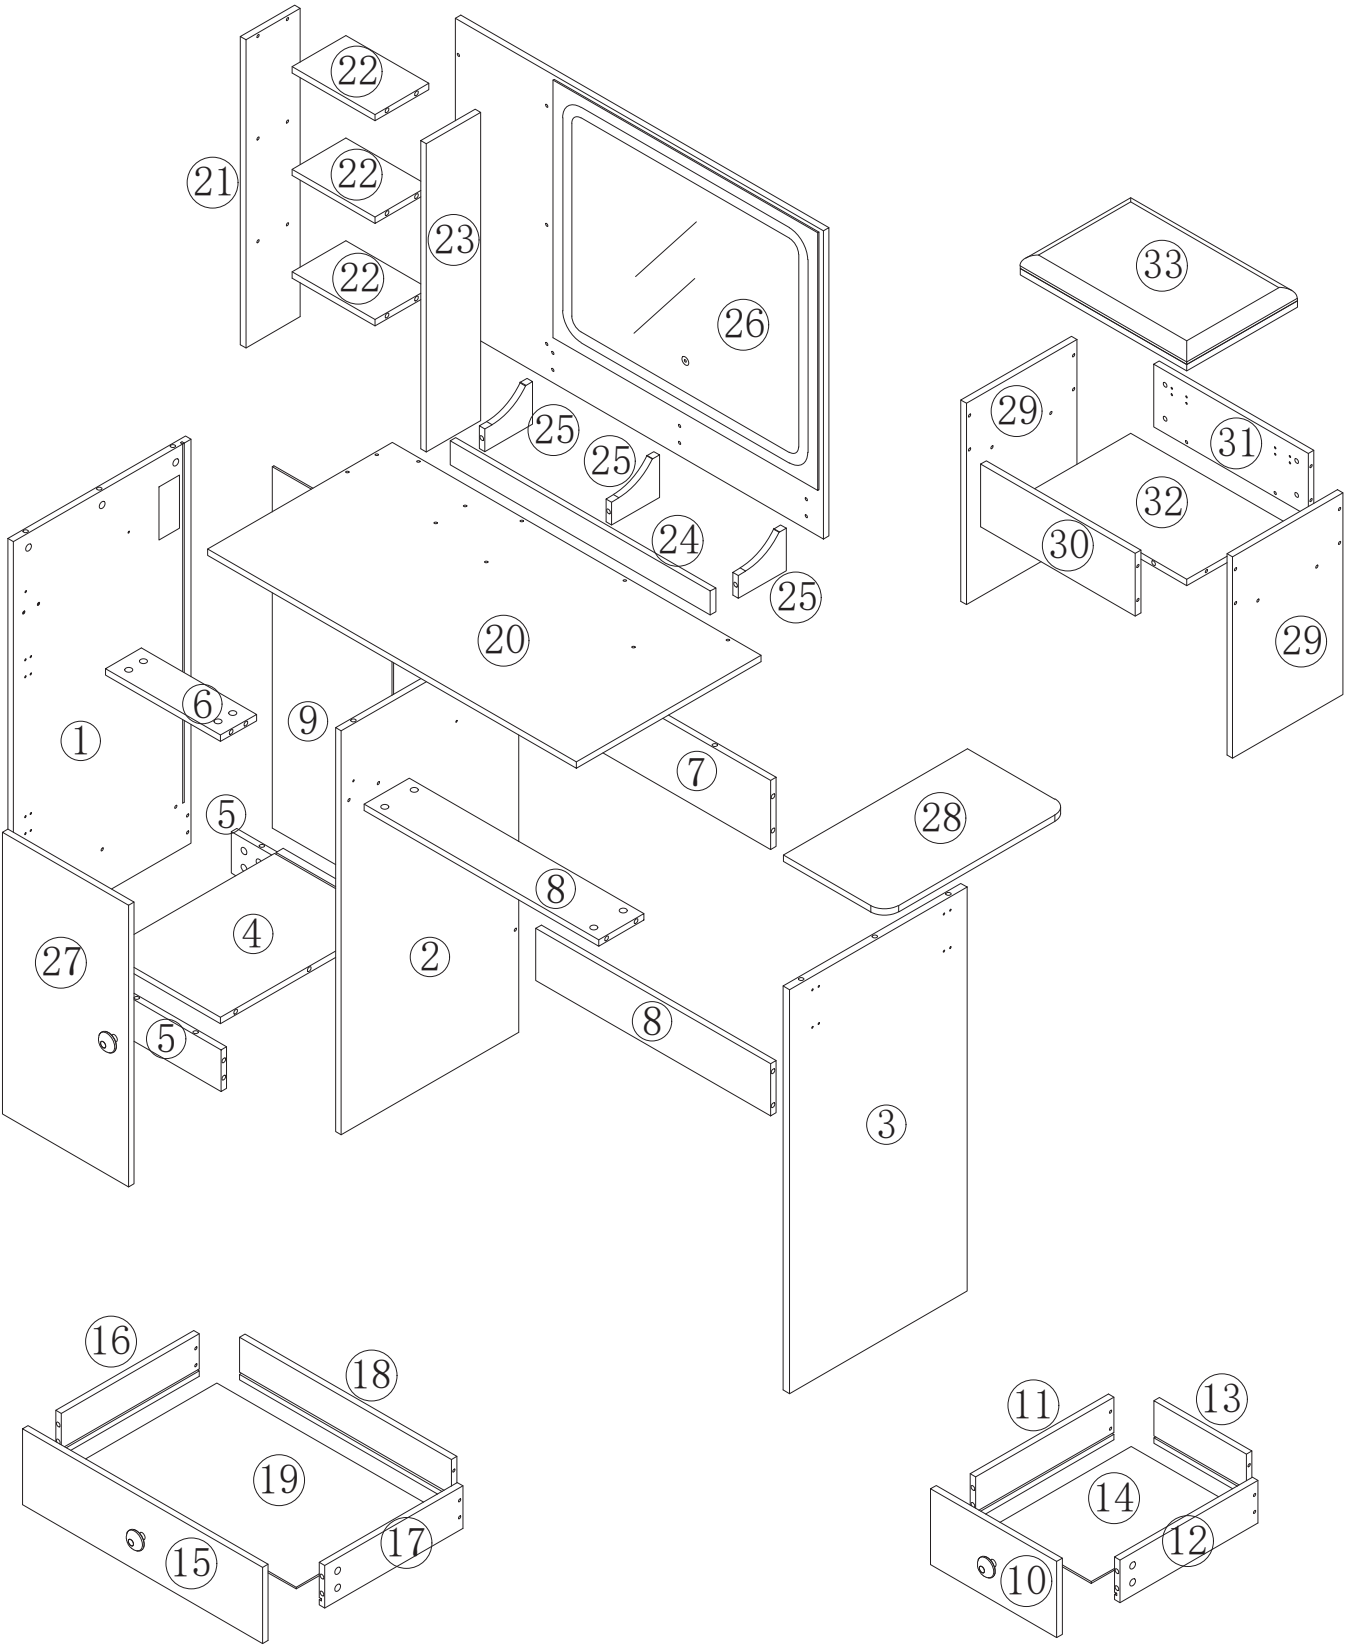

Parts List

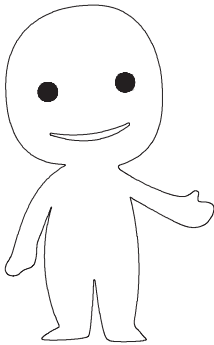

Please prepare the following tools

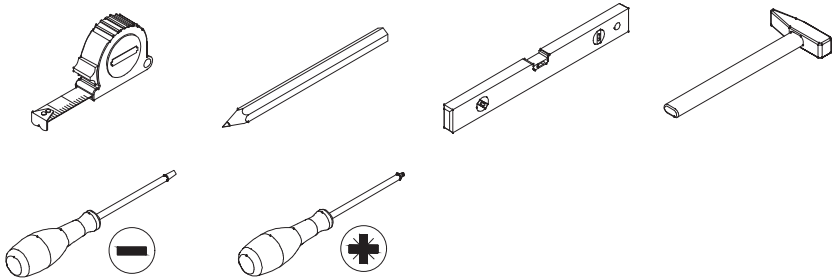

A x 83



$\varnothing 6 \times 35 \text{ mm}$

B x 83



$\varnothing 12 \times 10 \text{ mm}$

C x 32



$\varnothing 4 \times 40 \text{ mm}$

D x 32



$\varnothing 10 \times 9 \text{ mm}$

E x 3



Drawer handle

F x 3




$\varnothing 4 \times 16 \text{ mm}$

G x 52




$\varnothing 3.5 \times 12.5 \text{ mm}$

H x 1

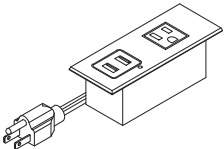


Charging Station

I x 2




Drawer Slide 12 inches

J x 4




Cabinet Hinge

K x 1




Screwdriver

L x 1

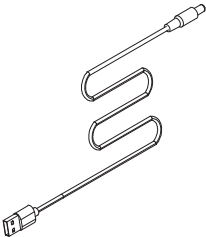


USB Line

M x 2


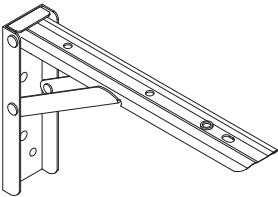


Warm Reminder

Before installing the drawer rail, you need to separate the I1 and I2 first.

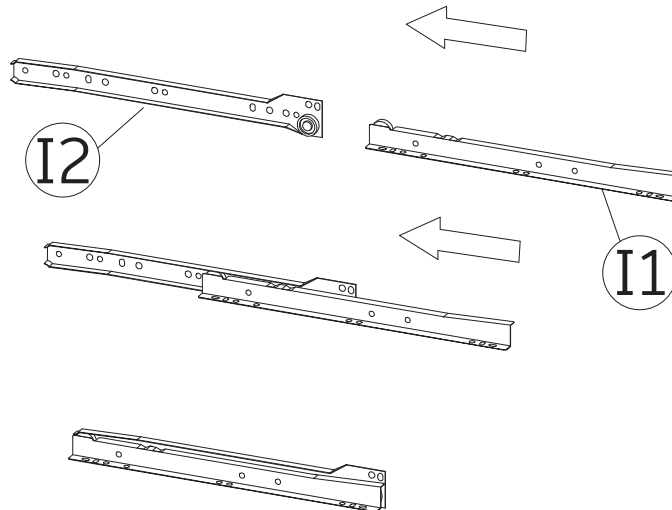


This Cam Lock Fastening System will be used throughout the assembly process



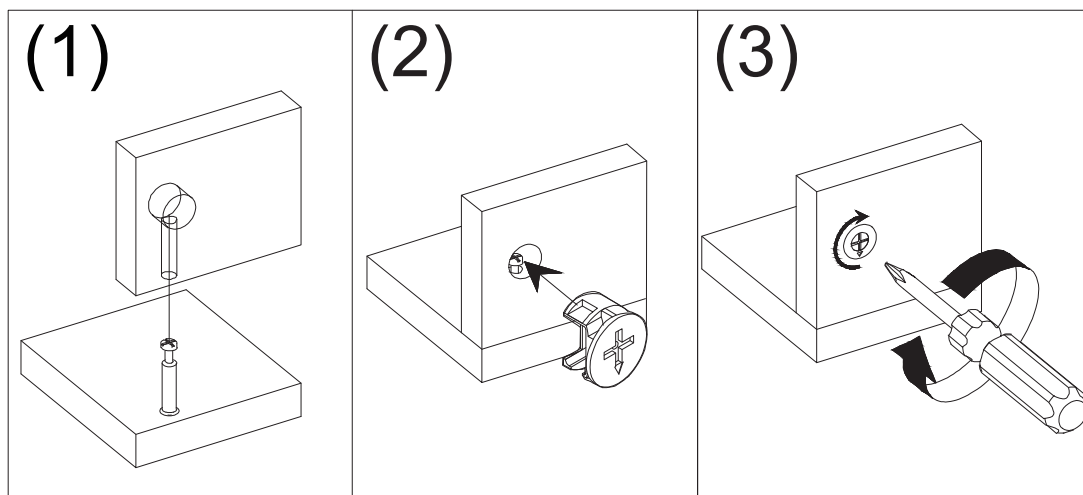
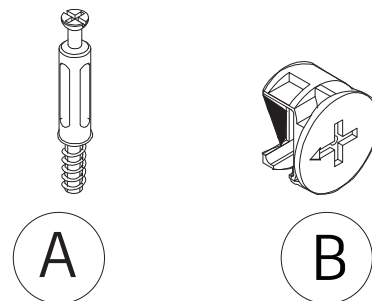


Install


1

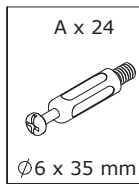


① x 1 ② x 1

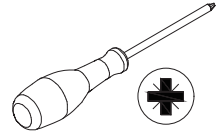

Screw the cam bolt (A) into the panel (1).

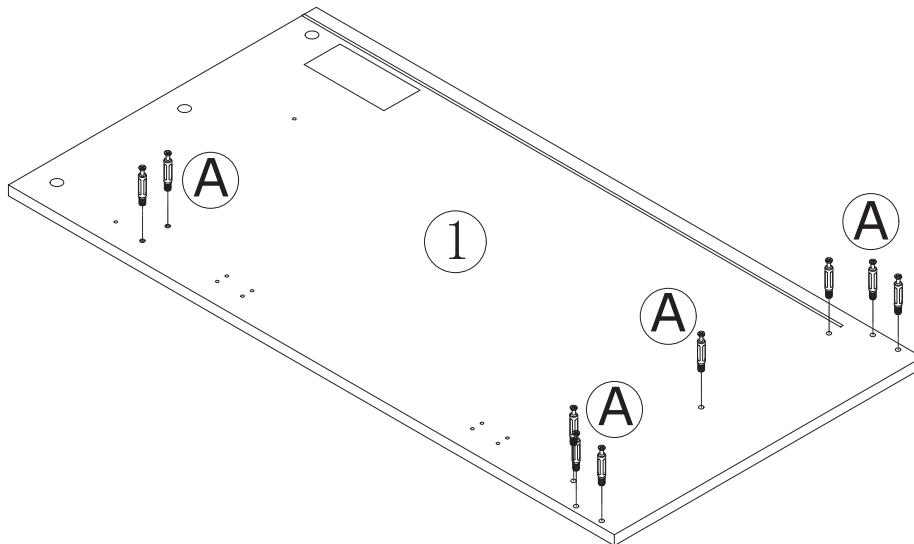


Screw the cam bolt (A) into the panel (2).
Then, flip the panel 180° and screw the cam bolt (A) into the other side of panel (2).


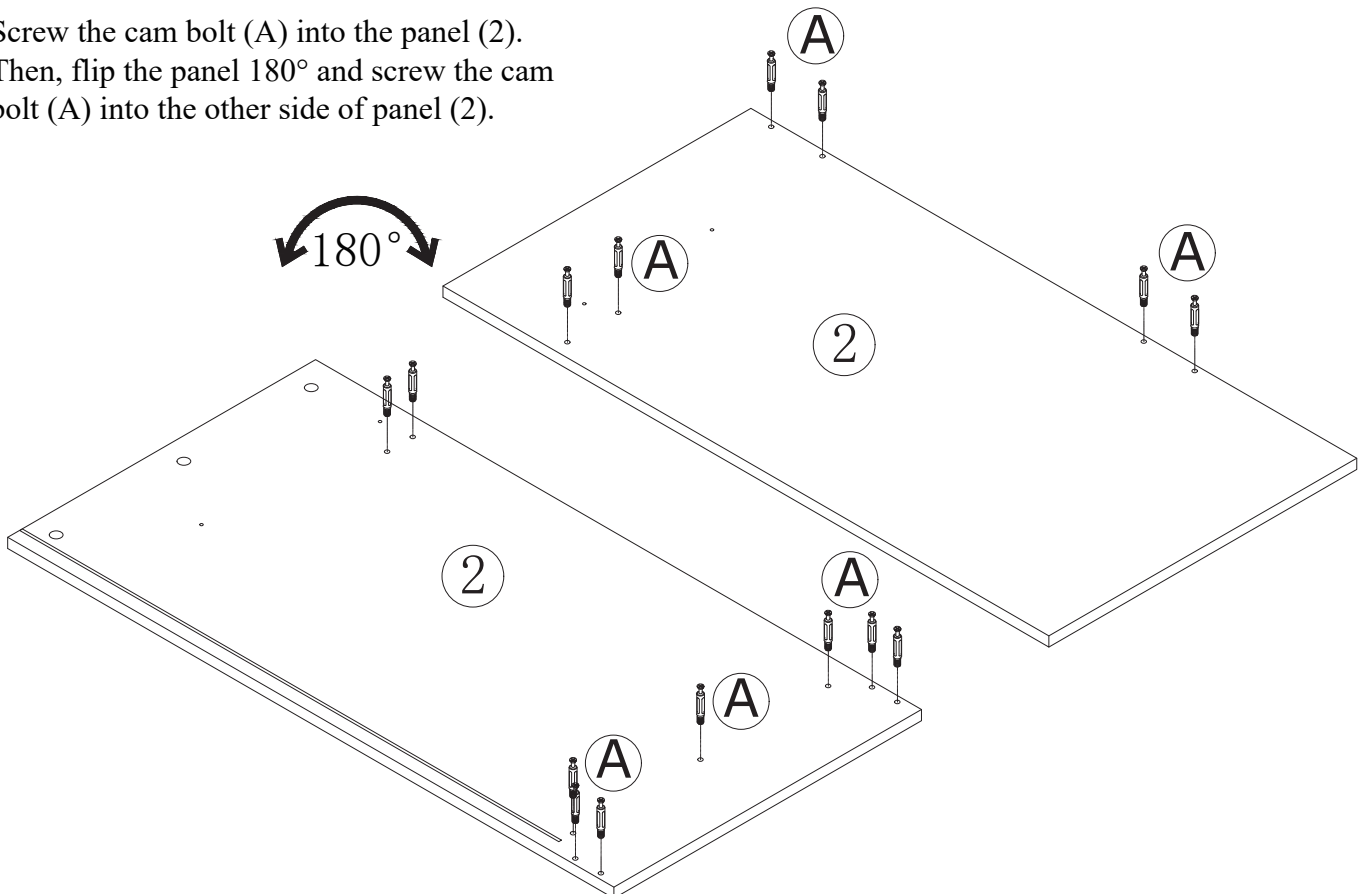


Install




2

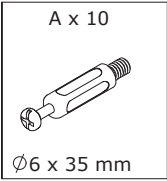

3 x 1 4 x 1

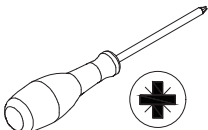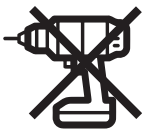


Screw the cam bolt (A) into the panel (3) and (4).

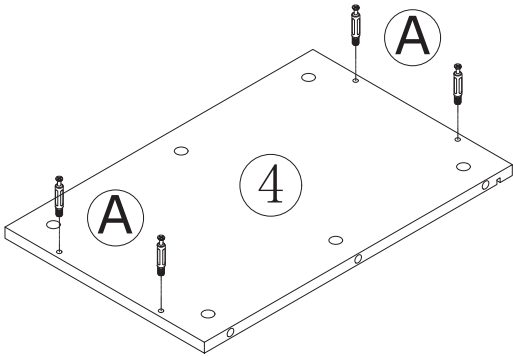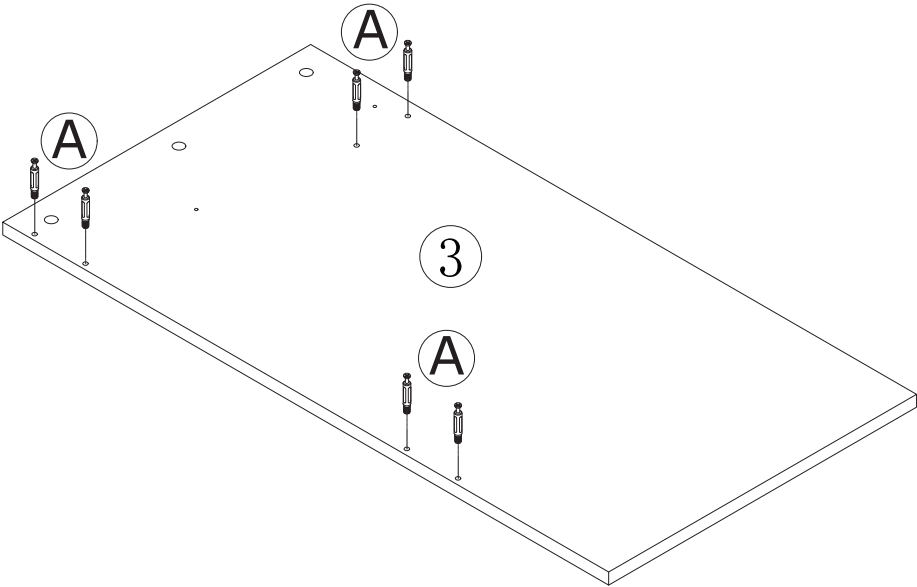





Install

3


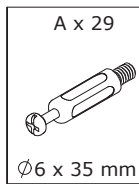


10 x 1 15 x 1


20 x 1

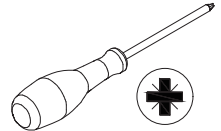

Screw the cam bolt (A) into the panel (10) and (15).

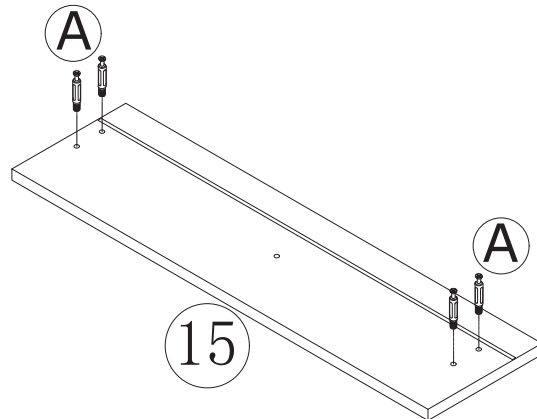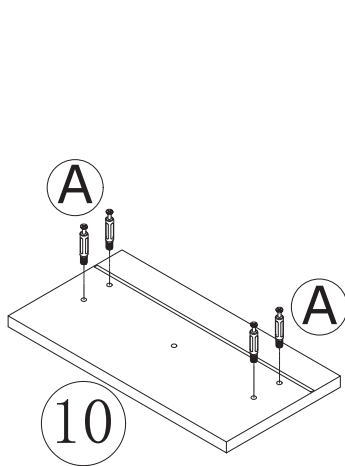


Screw the cam bolt (A) into the panel (20).
Then, flip the panel 180° and screw the cam bolt (A)
into the other side of panel (20).

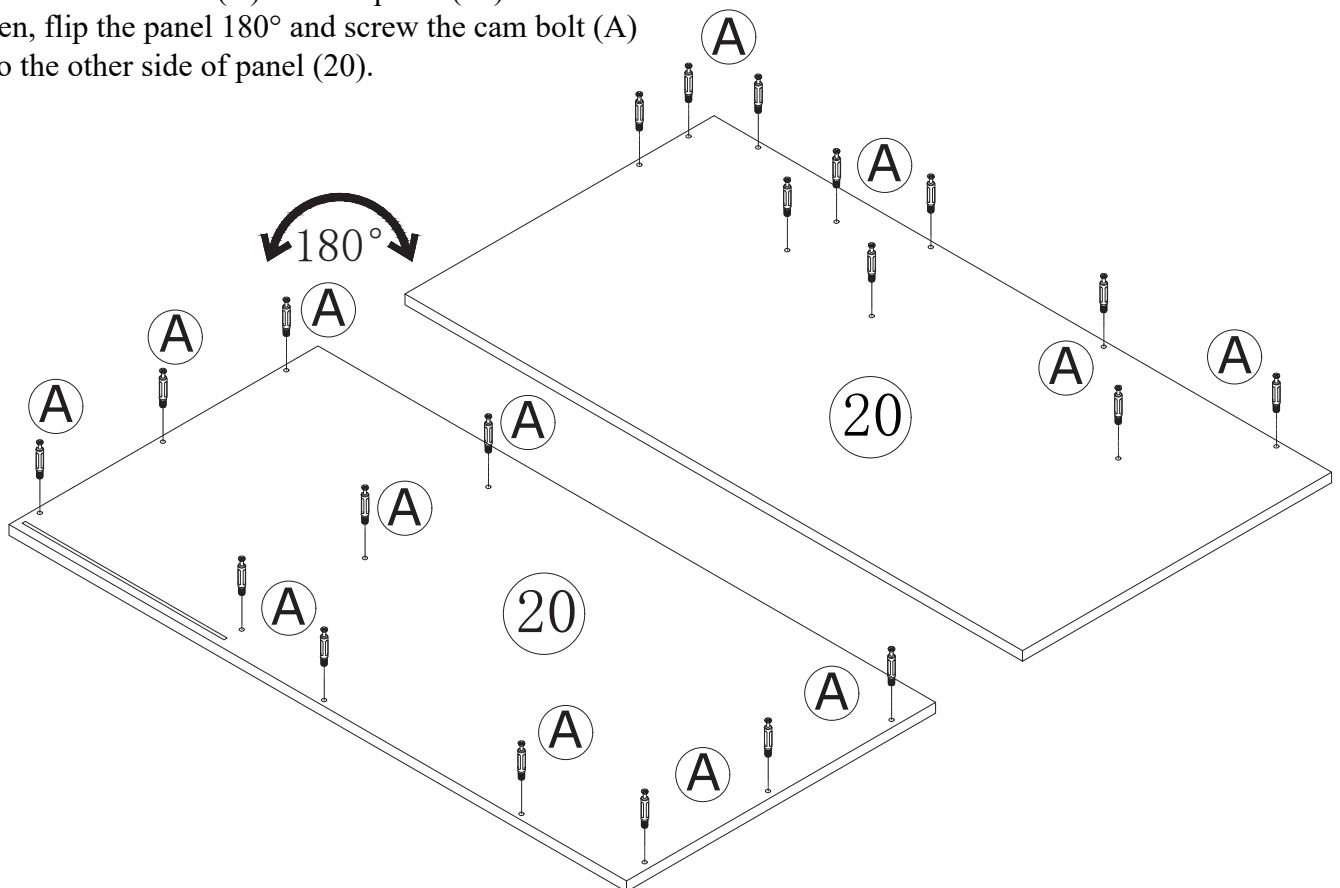


Install

4


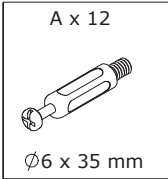


(21) x 1

(23) x 1

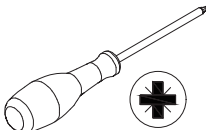


Screw the cam bolt (A) into the panel (21) and (23).

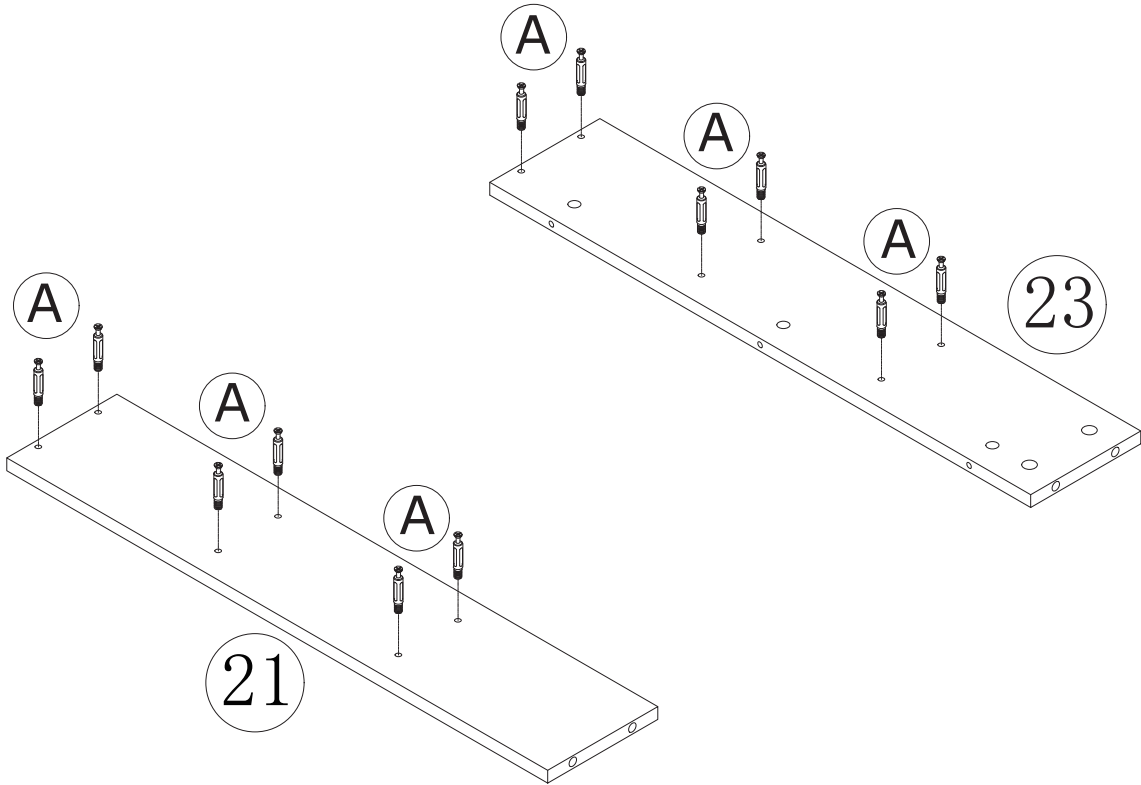

Install


5

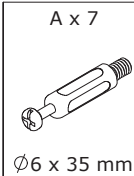





24 x 1

30 x 1

31 x 1

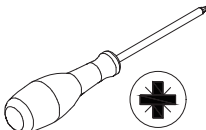


Screw the cam bolt (A) into the panel (24) (30) and (31).

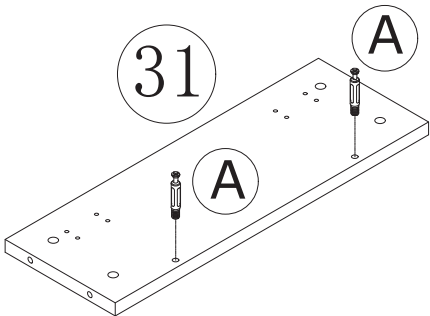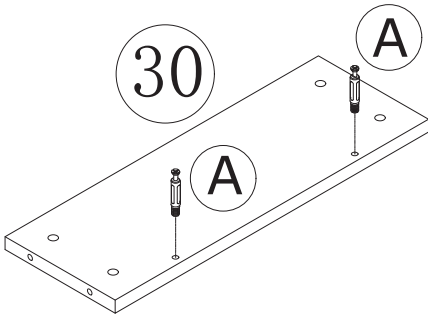
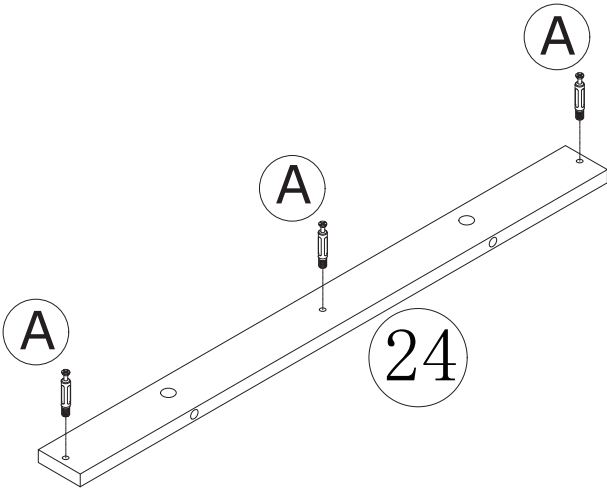



Install

6



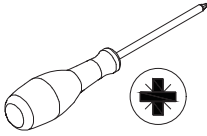
C x 4  Ø4 x 40 mm	D x 4  Ø10 x 9 mm	⑪ x 1 ⑫ x 1 ⑬ x 1 ⑭ x 1		
--	--	---------------------------------------	---	---

Screw part (D) into panel (13).
 Attach panels (11) and (12) to panel (13) using screws (C).
 Slide bottom panel (14) into the assembled drawer unit.

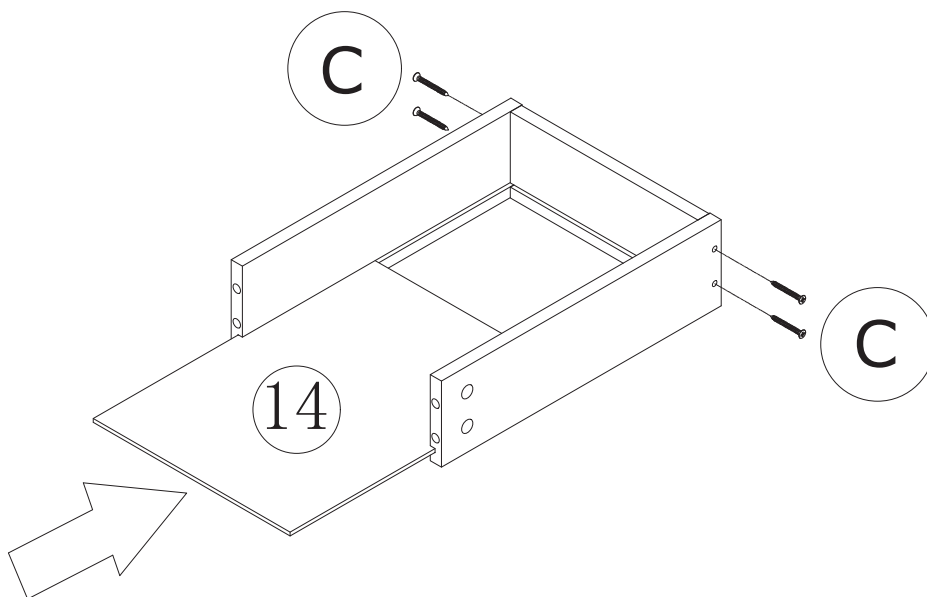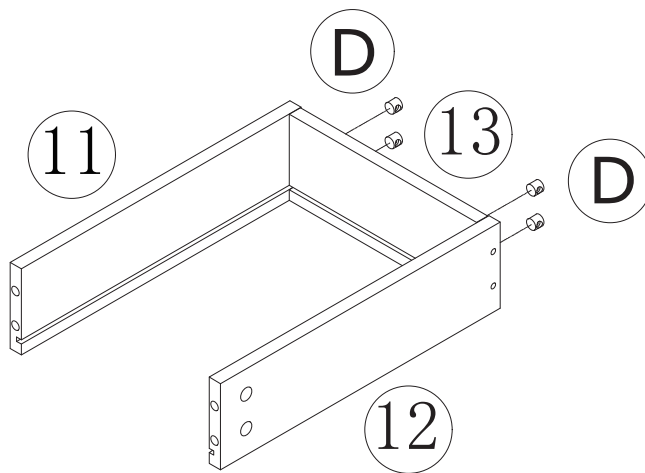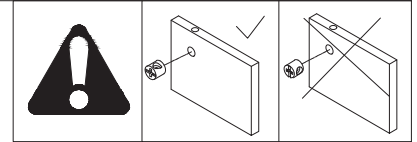


Install

7

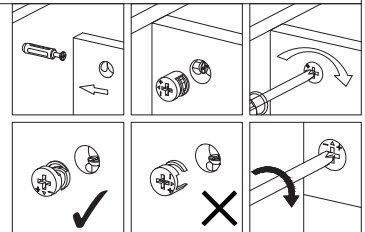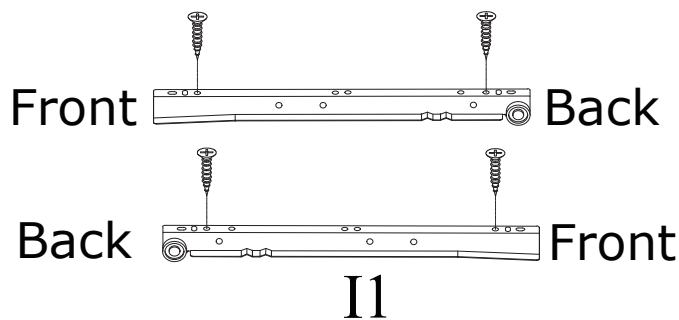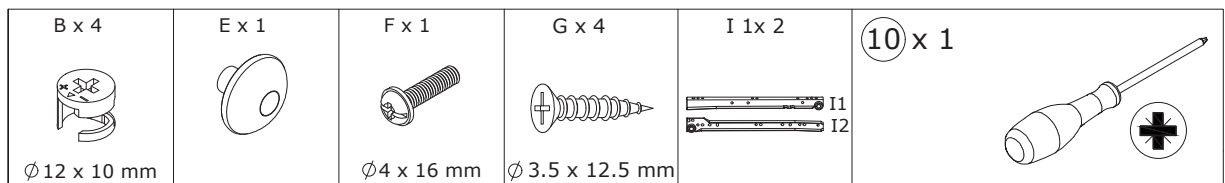


Pass screw (F) through the center of panel (10) to attach with the drawer handle (E).
Align the screws (A) on panel (10) with the holes in panels (11) and (12),
then secure them using cam locks (B).
Install track (I1) onto the bottom of the drawer and secure it with screw (G).

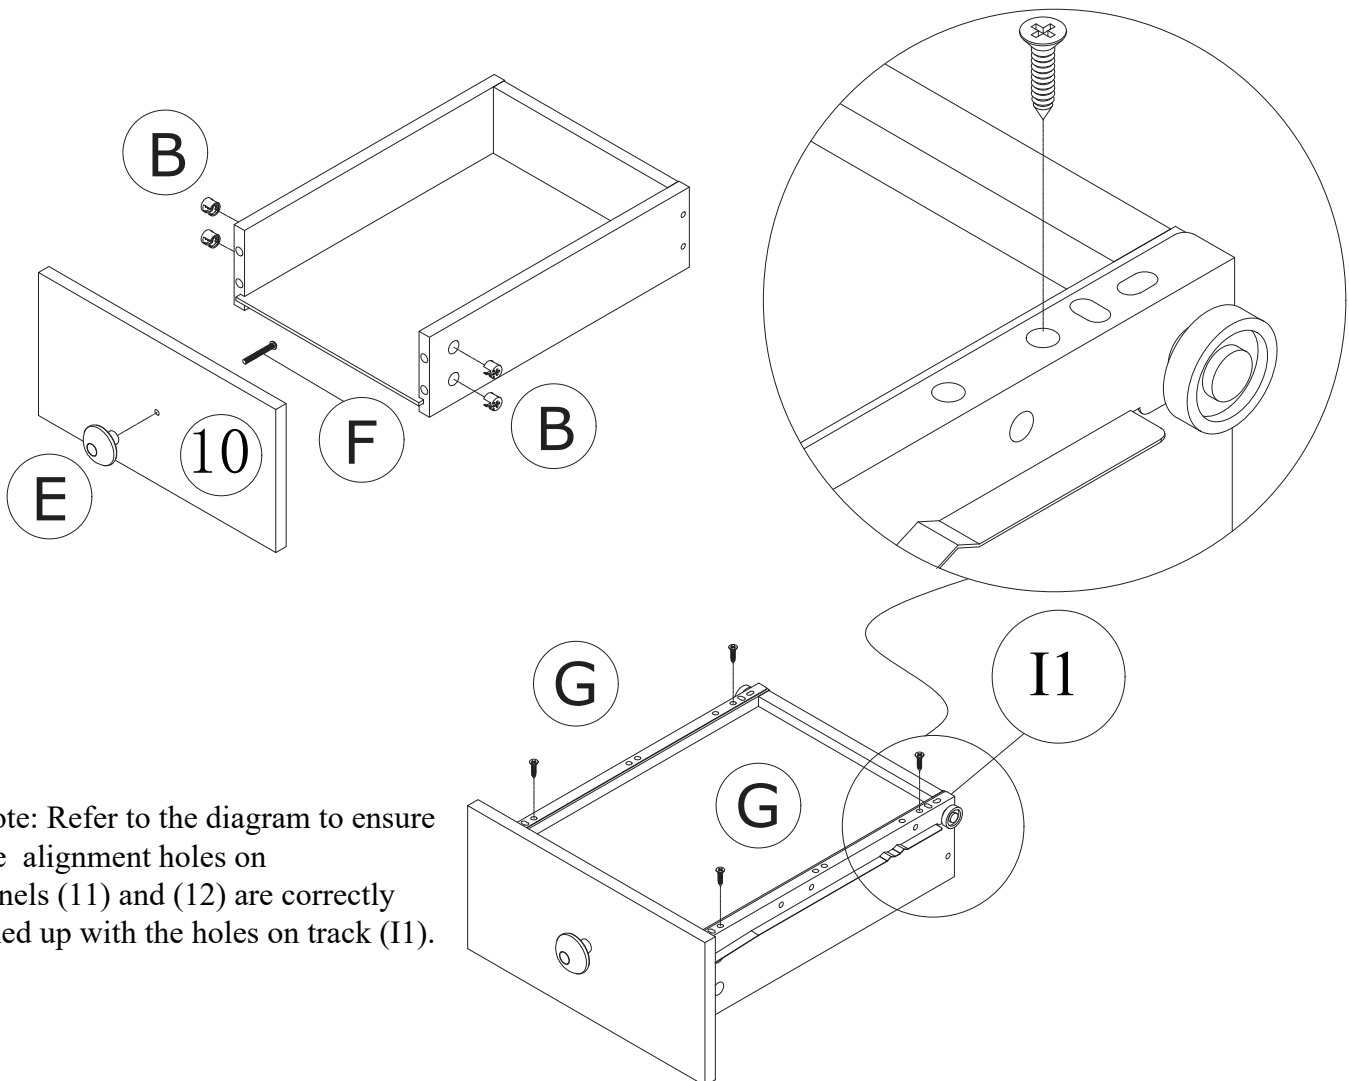

Note: Refer to the diagram to ensure the alignment holes on panels (11) and (12) are correctly lined up with the holes on track (I1).

Install



8

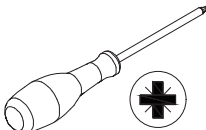C x 4  Ø4 x 40 mm	D x 4  Ø10 x 9 mm	①6 x 1 ①7 x 1 ①8 x 1 ①9 x 1	 
--	--	---	---

Screw part (D) into panel (18).


Attach panels (16) and (17) to panel (18) using screws (C).



Slide bottom panel (19) into the assembled drawer unit.

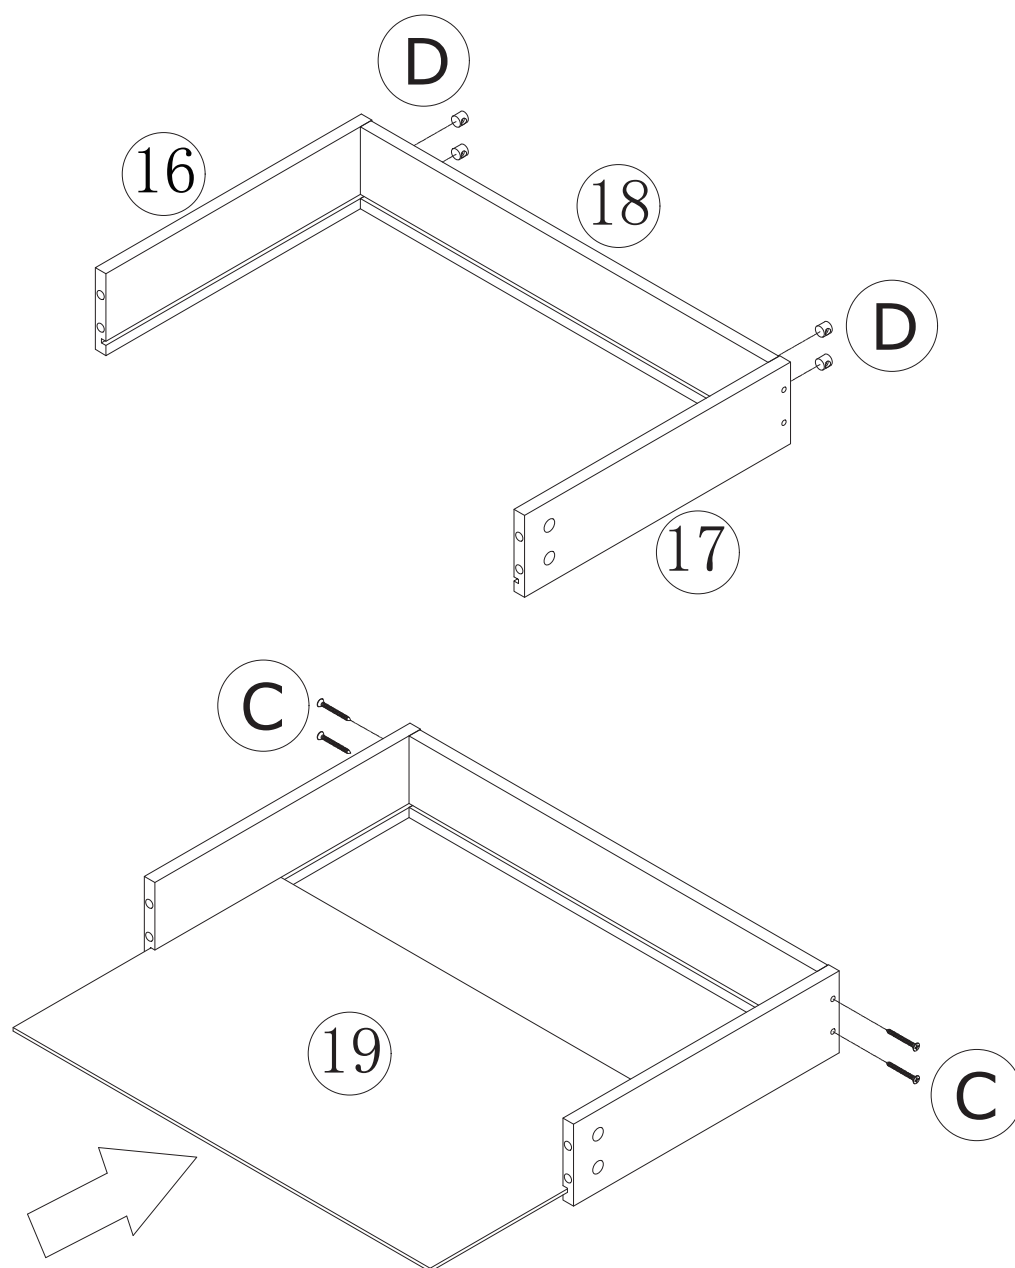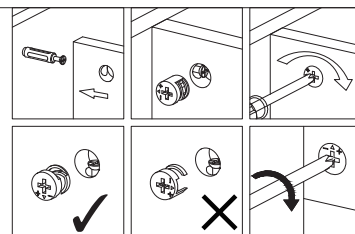


Install

9

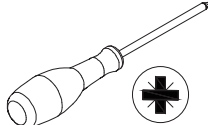B x 4  Ø 12 x 10 mm	E x 1 	F x 1  Ø 4 x 16 mm	G x 4  Ø 3.5 x 12.5 mm	I 1 x 2 	15 x 1 
--	--	---	---	---	---

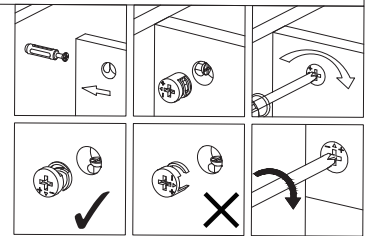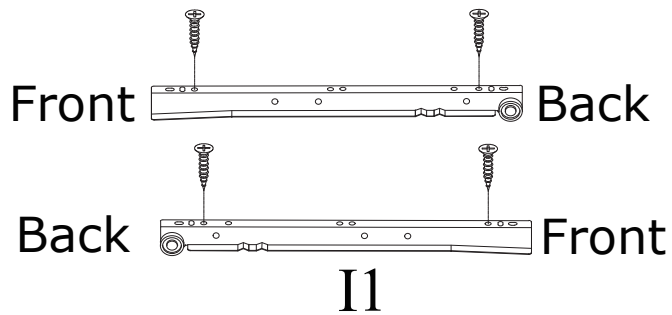




Pass screw (F) through the center of panel (15) to attach with the drawer handle (E).
Align the screws (A) on panel (15) with the holes in panels (16) and (17),
then secure them using cam locks (B).
Install track (I1) onto the bottom of the drawer and secure it with screw (G).

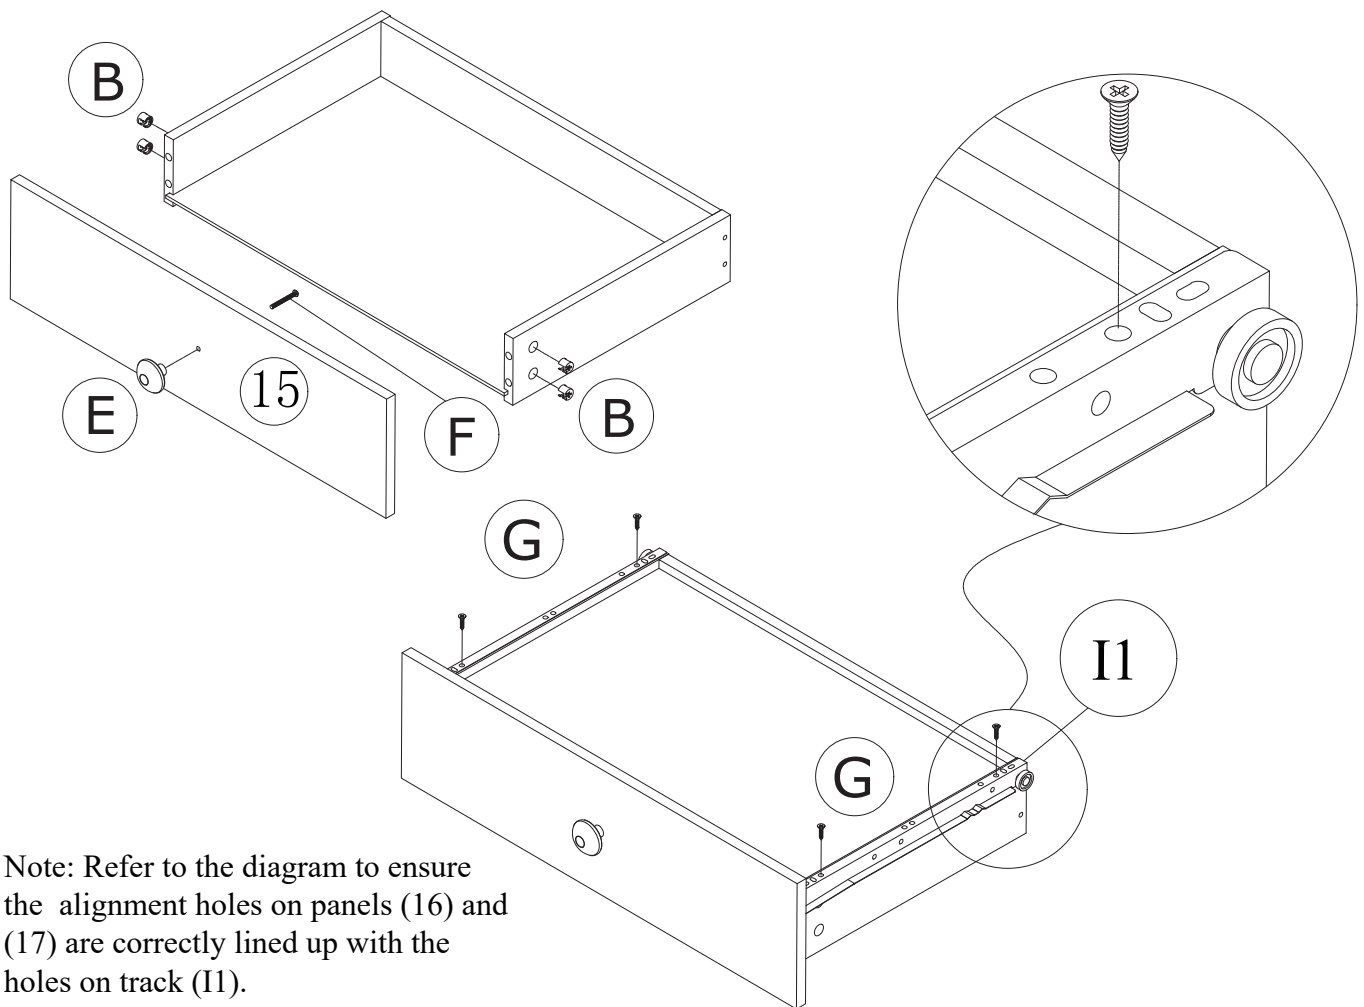

Note: Refer to the diagram to ensure the alignment holes on panels (16) and (17) are correctly lined up with the holes on track (I1).


Install

10

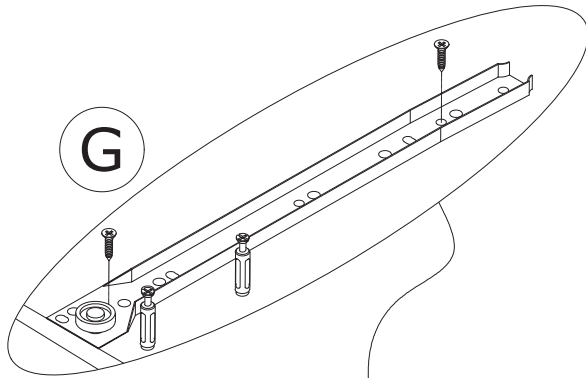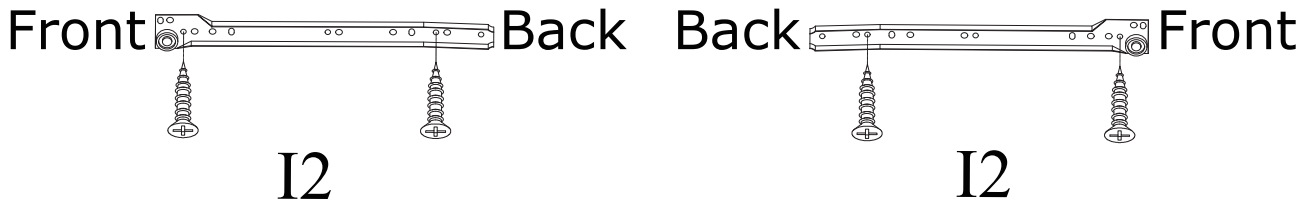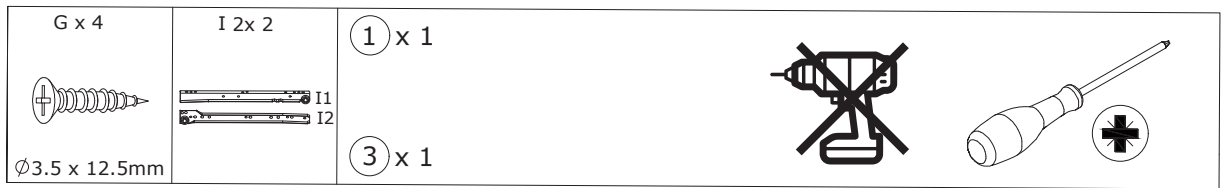



Install drawer track (I2) onto panels (1) and (3), and secure it with screw (G).

Note: Refer to the diagram to ensure the alignment holes on panels (1) and (3) are properly aligned with the holes on track (I2).

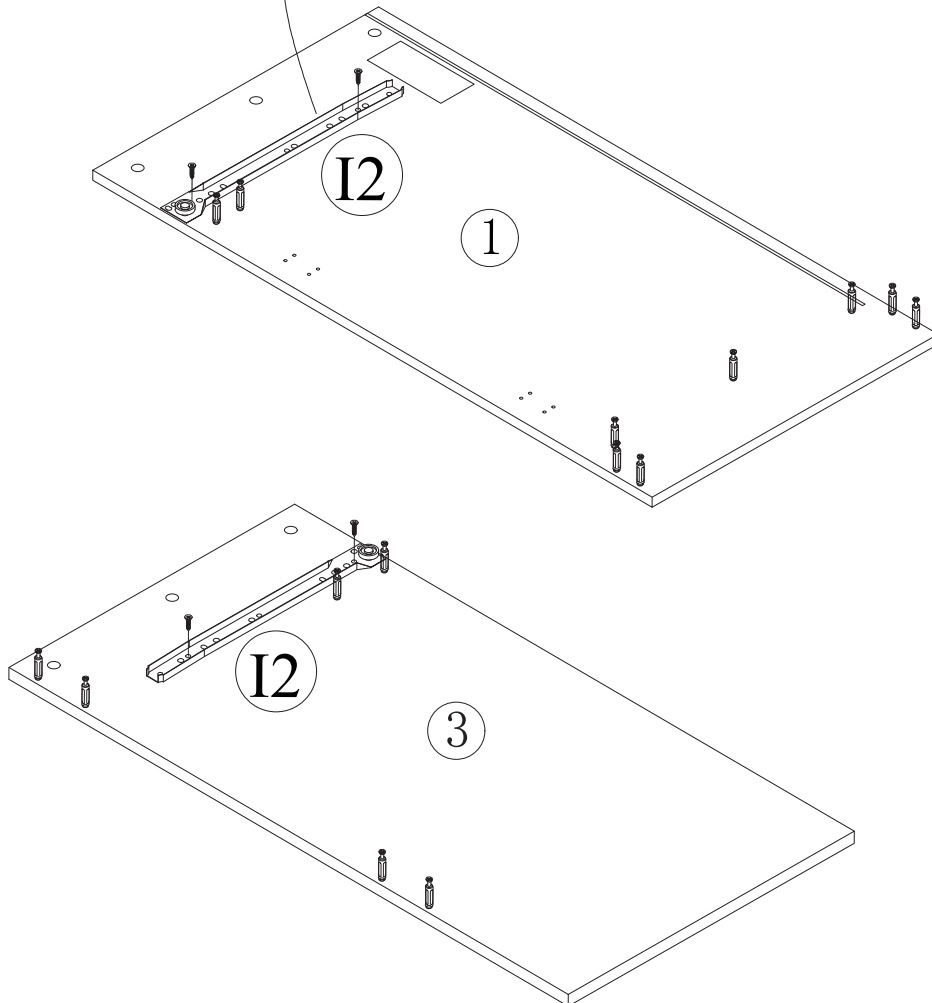


Install

11

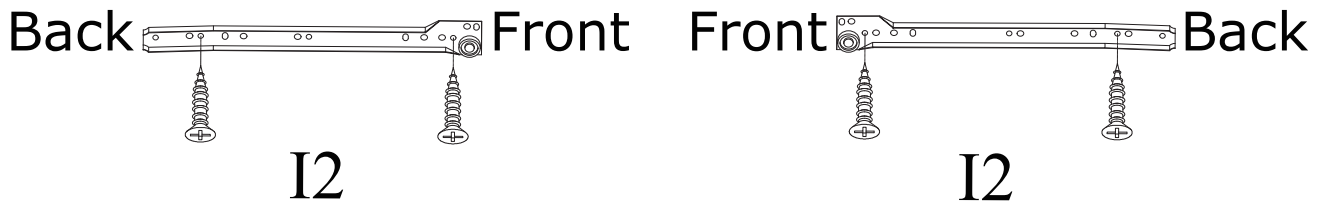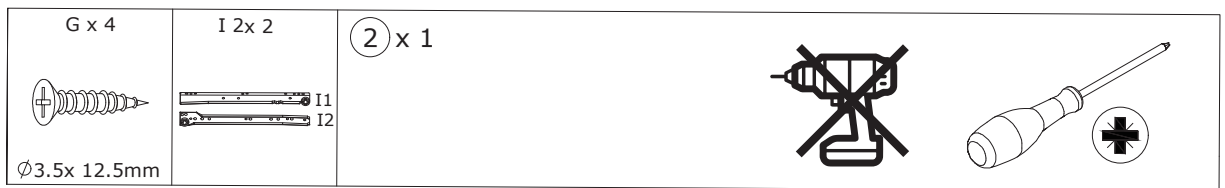


Install drawer track (I2) onto panels (2), and secure it with screw (G). Then, flip the panel 180° and install drawer track (I2) onto the other side of panel (2), secure it with screw (G).

Note: Refer to the diagram to ensure the alignment holes on panels (2) is properly aligned with the holes on track (I2).


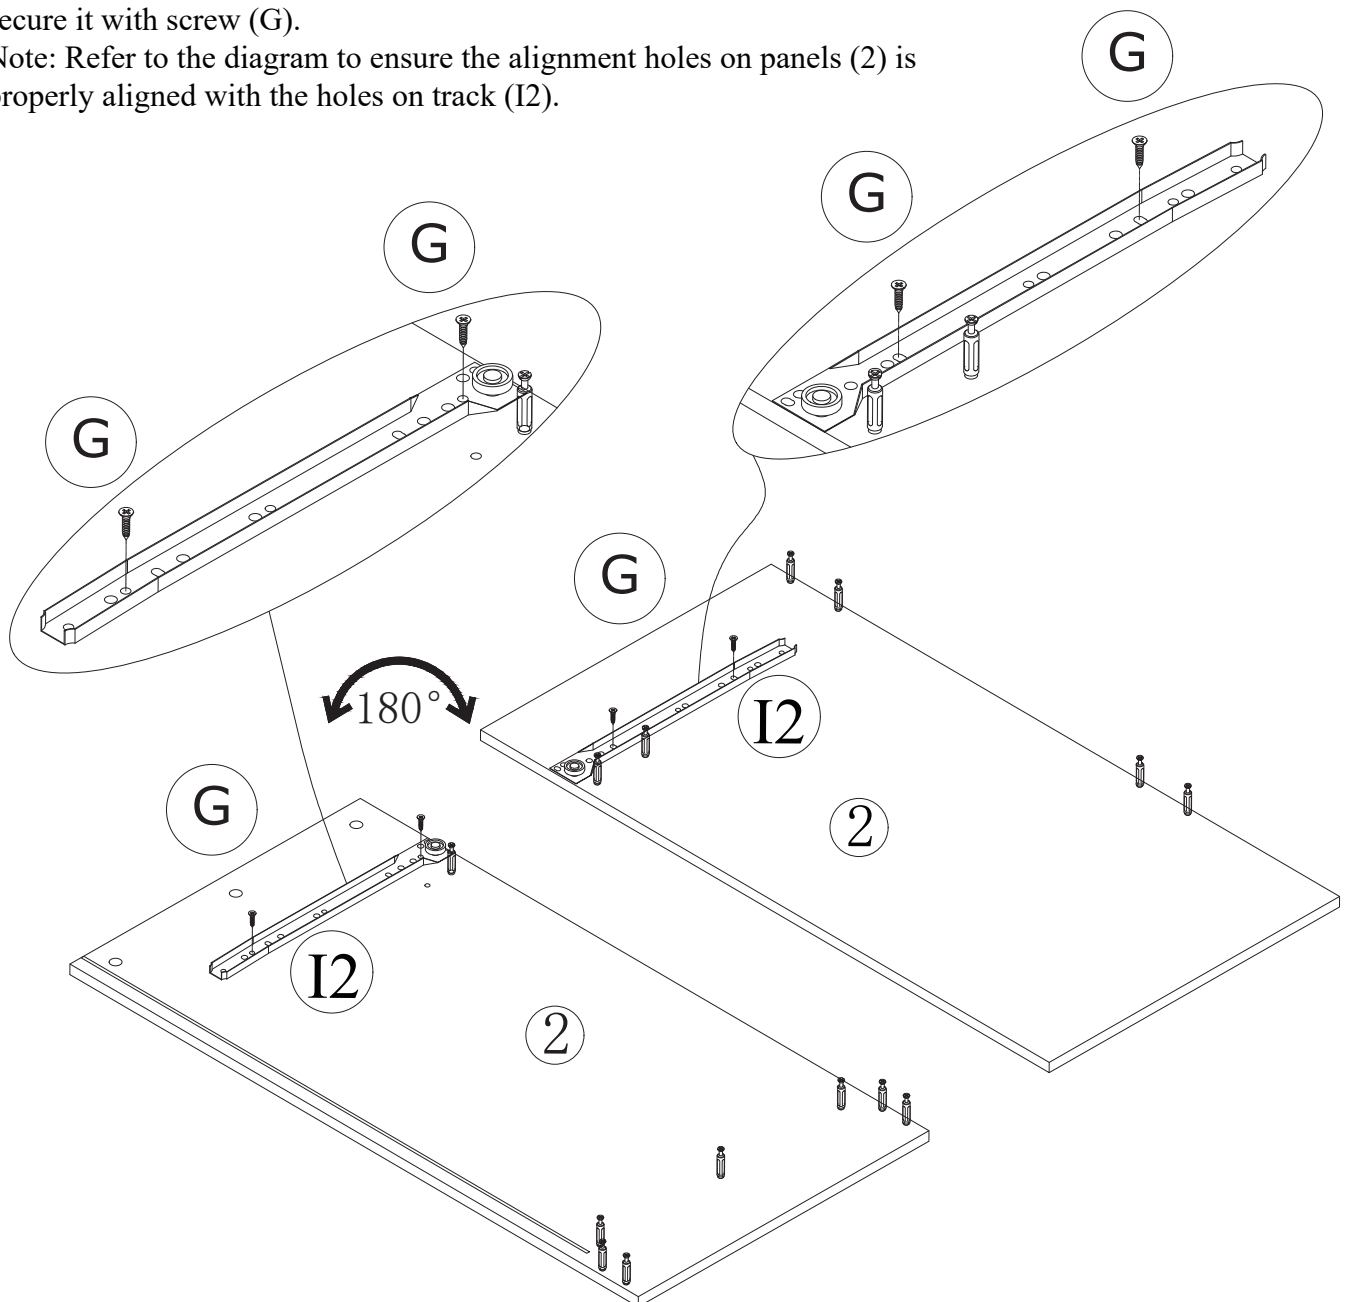


Install

12

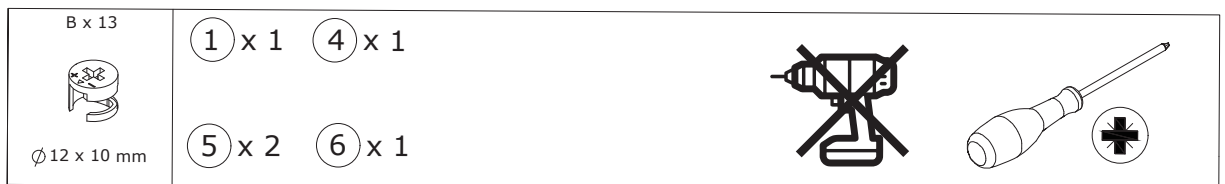

Align screw (A) on panel (4) with the holes in panel (5) and secure it in place using cam lock (B).

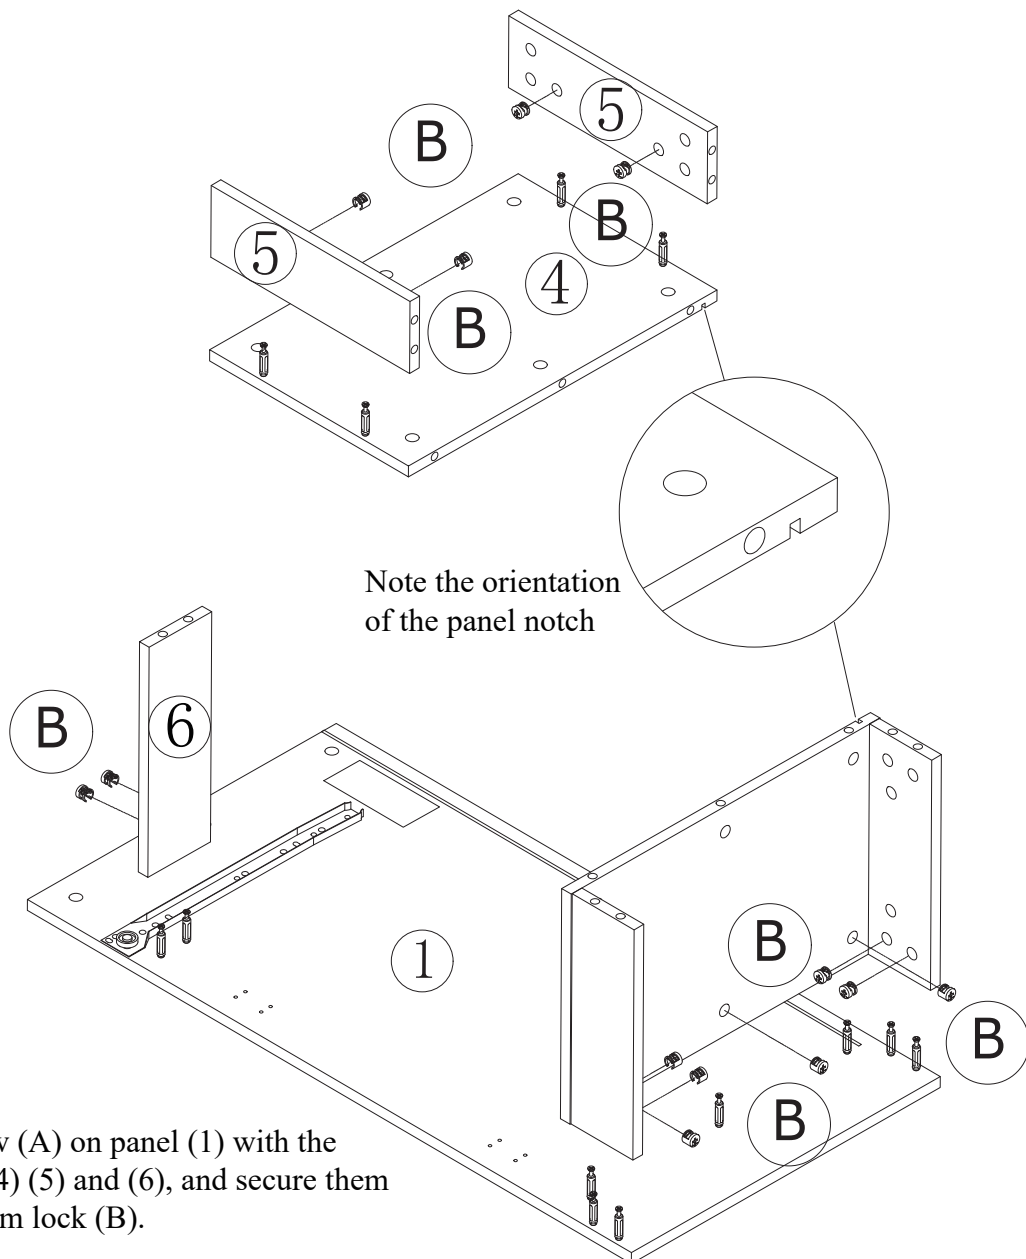
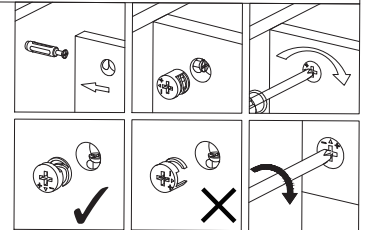


Next, align screw (A) on panel (1) with the holes in panels (4) (5) and (6), and secure them in place using cam lock (B).

13




Align screw (A) on panel (2) with the holes shown in the illustration.
Cover the panel and secure the screws in place using cam lock (B).

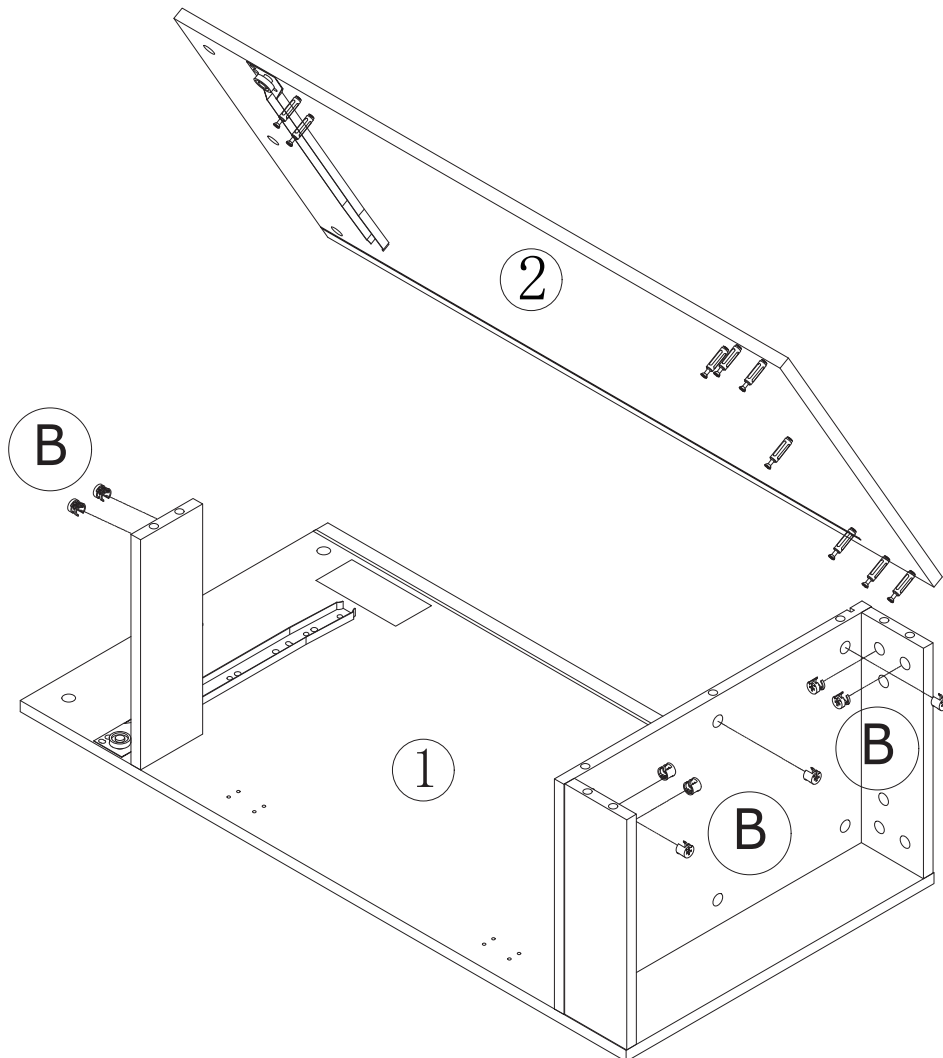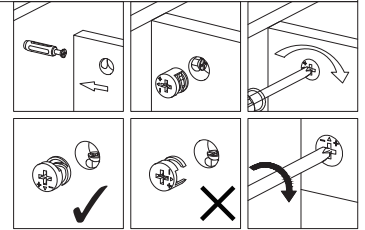



Install

14

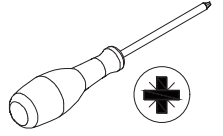B x 12  Ø 12 x 10 mm		③ x 1 ⑦ x 1 ⑧ x 2	 
---	--	------------------------------------	---


Align screw (A) on panel (2) with the holes in panel (7) and (8), secure them in place using cam lock (B).

Then, align screw (A) on panel (3) with the holes in panel (7) and (8), secure them in place using cam lock (B).

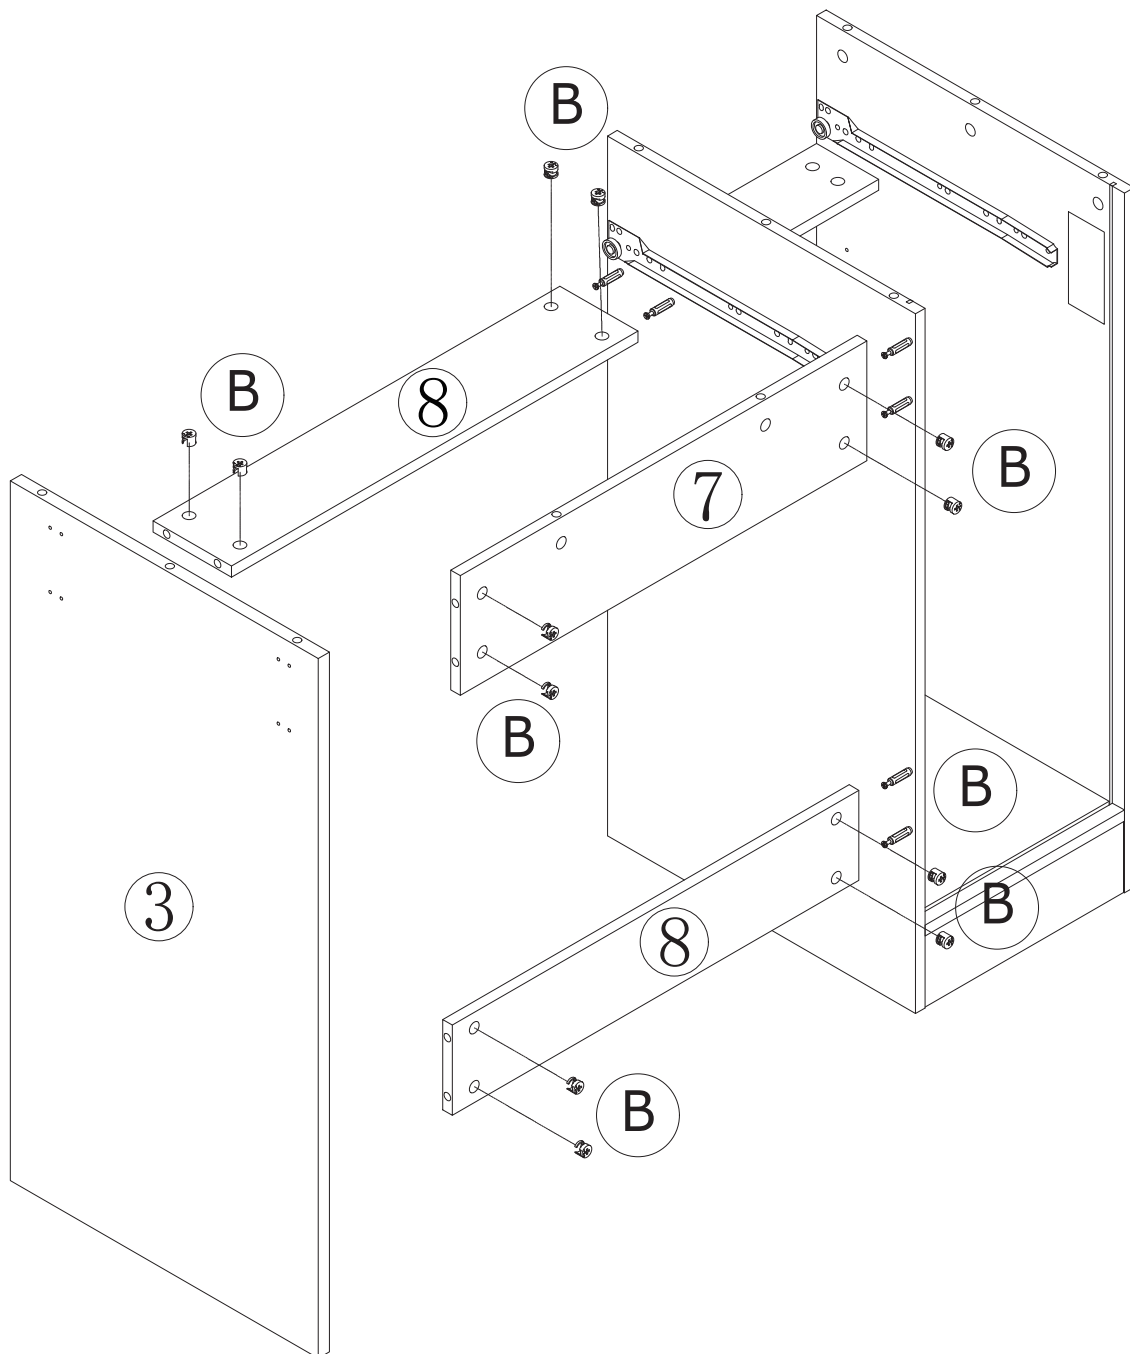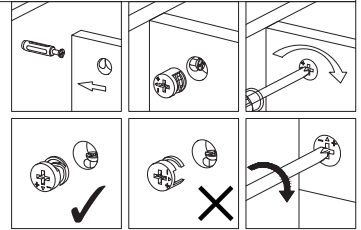


15

9 x 1

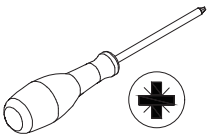



Refer to the diagram and slide panel (9) into the the parts assembled in Step 14.

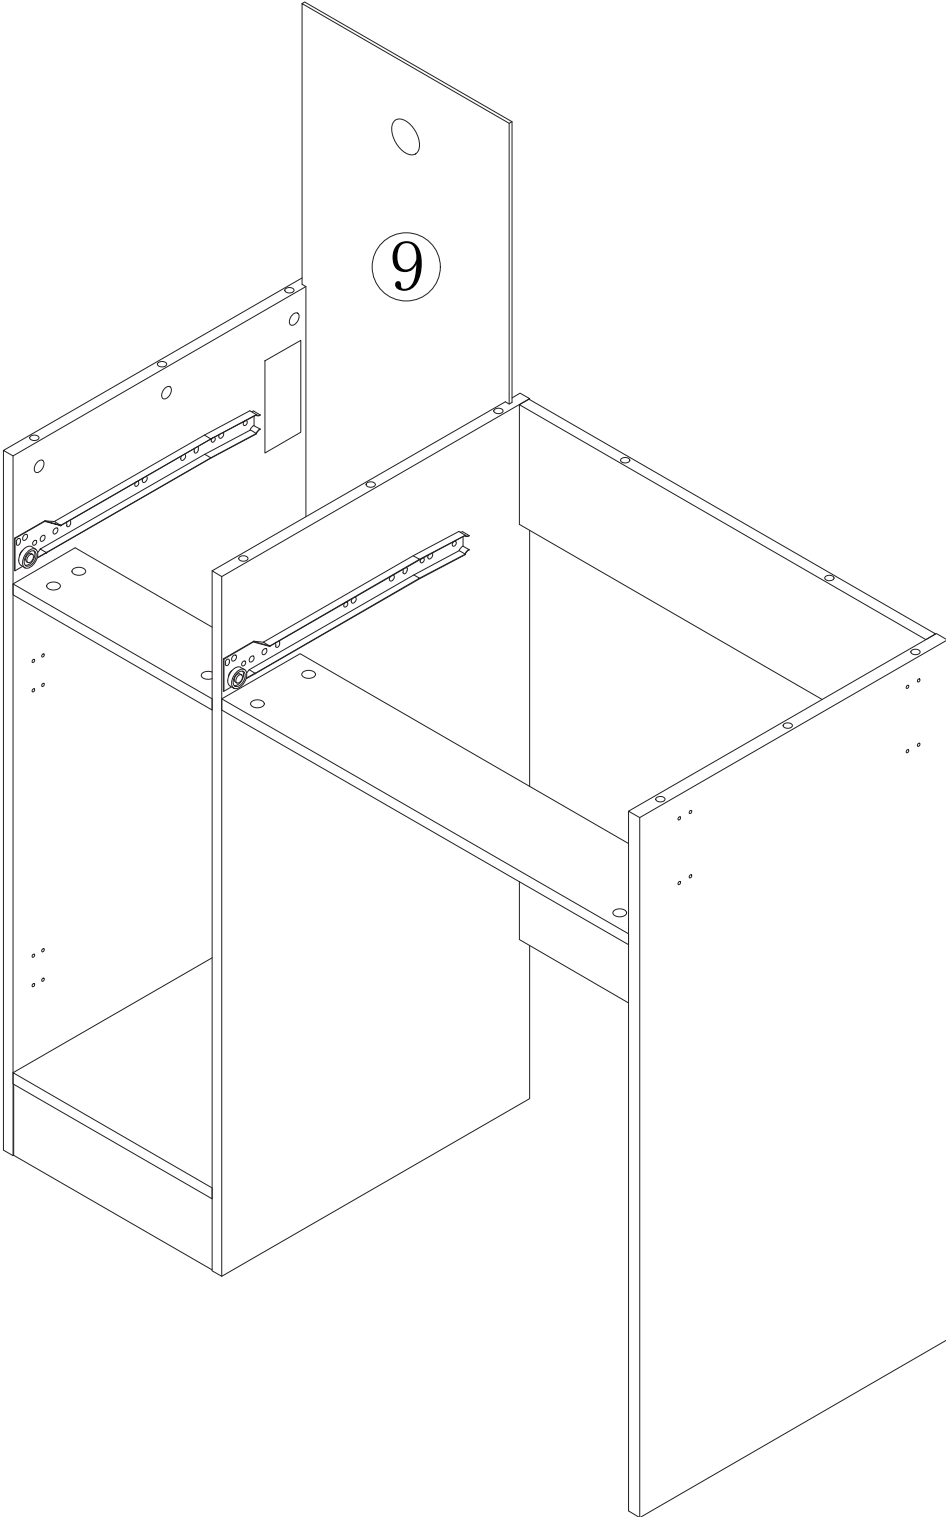


16





Align screw (A) on panel (20) with the holes shown in the illustration.
Cover the panel and secure the screws in place using cam lock (B).

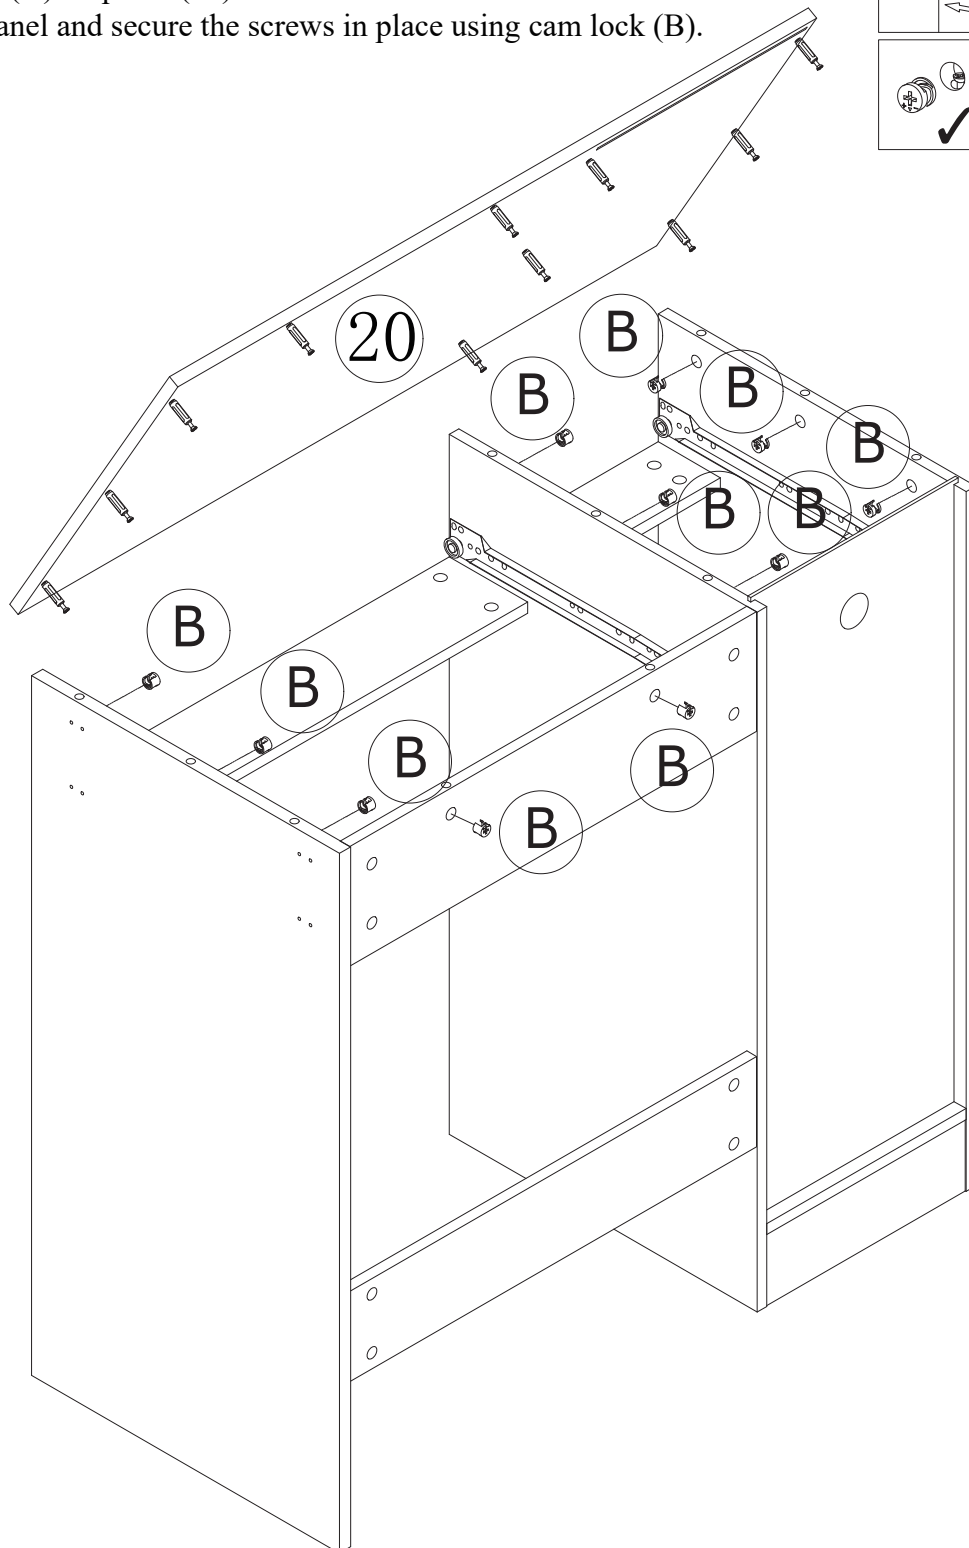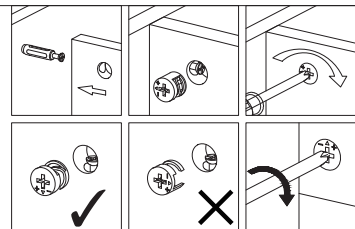


17

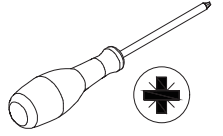B x 12  Ø 12 x 10 mm	(21) x 1 (22) x 3 (23) x 1	 
---	--	---

Align screw (A) on panel (21) with the holes in panel (22) and secure them in place using cam lock (B).

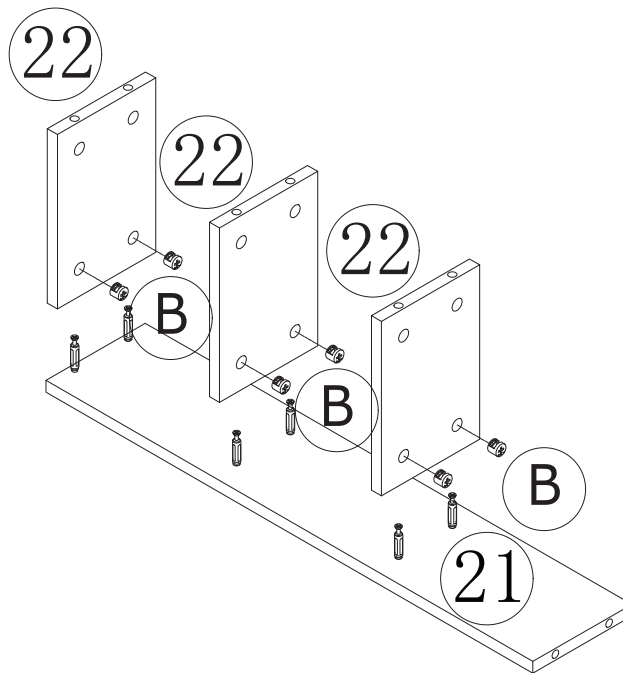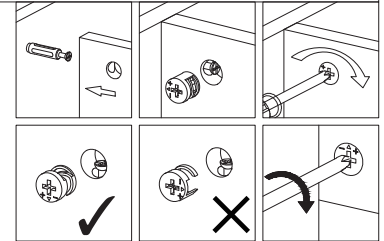


Next, align screw (A) on panel (23) with the holes in panels (22), and secure it in place using cam lock (B).

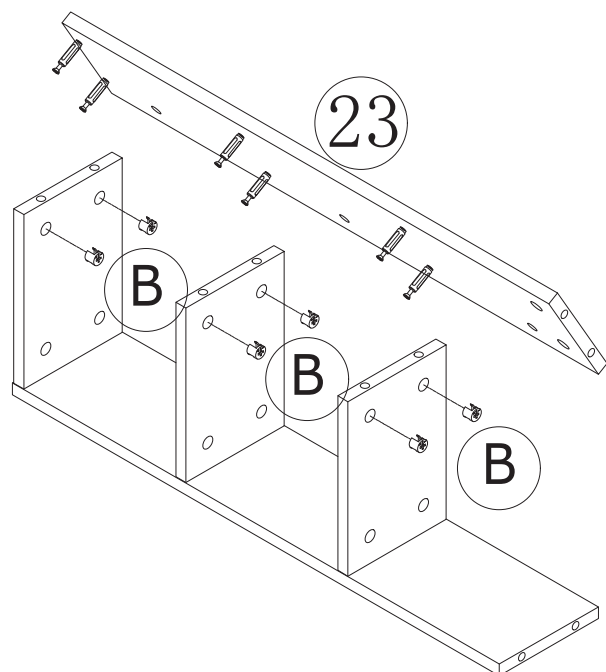


Install

18

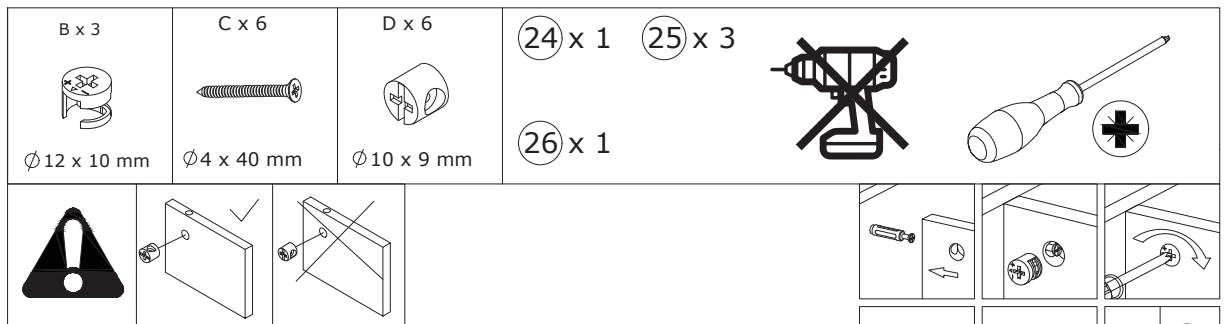

Align screw (A) on panel (24) with the holes in panel (25) and secure them in place using cam lock (B).
 Then, screw part (D) into panel (25). Align the holes on panel (25) and panel (26), and secure them from the back using screw (C).


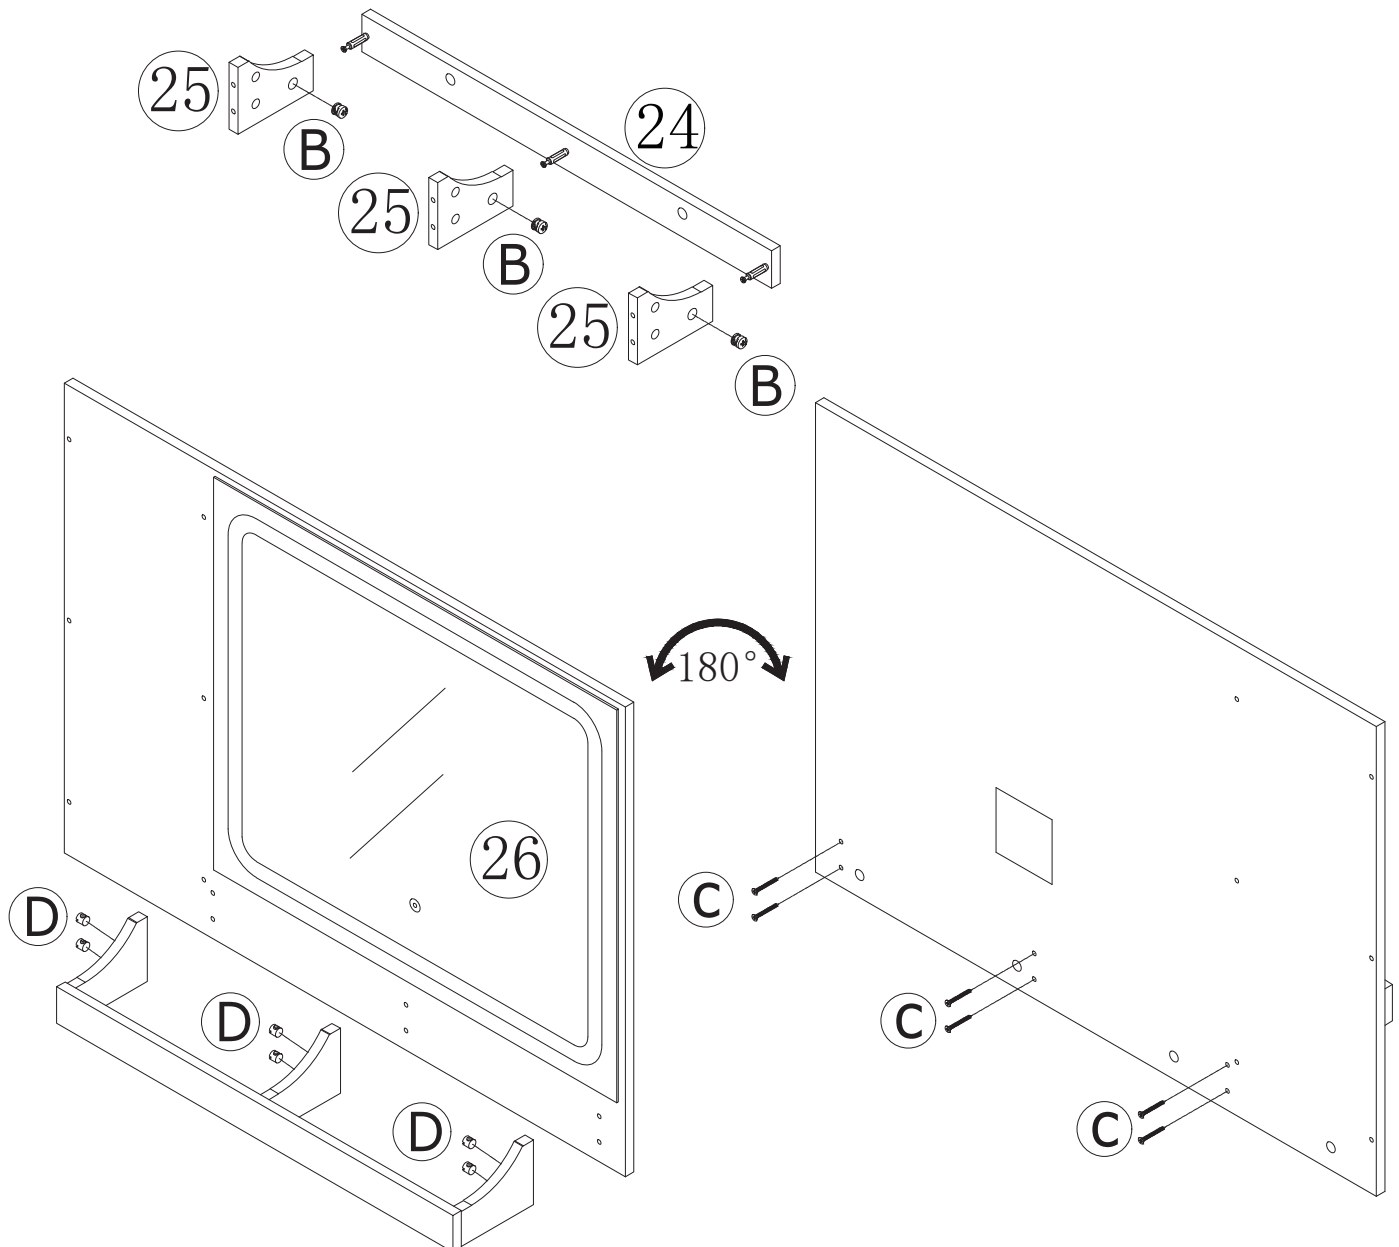


Install

19



Screw part (D) into panel (21) and (23). Then, align the holes on panels (21) and (23) with the holes on panel (26), and secure them from the back using screw (C).

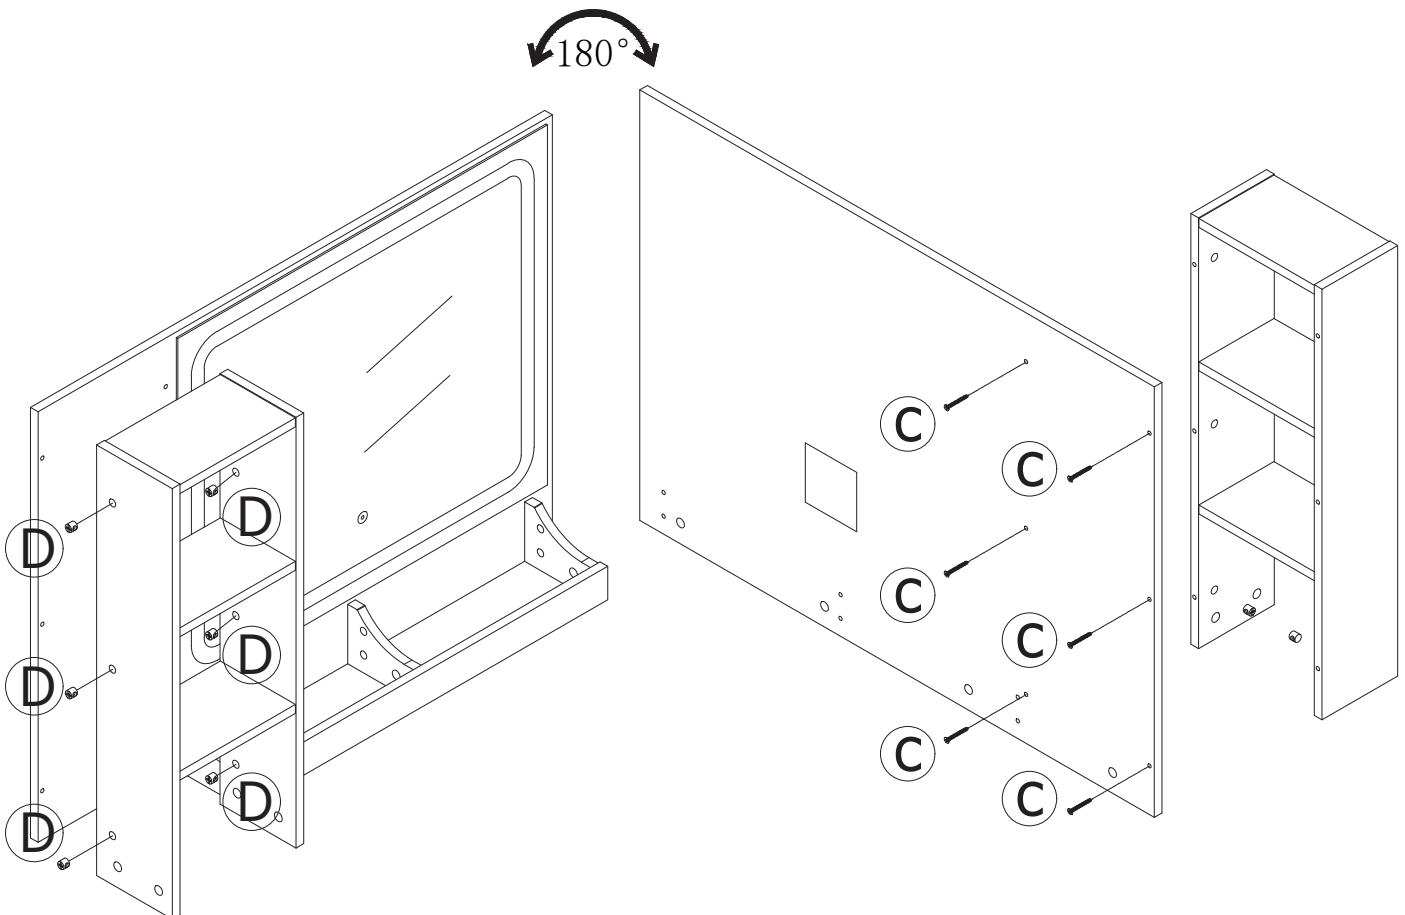
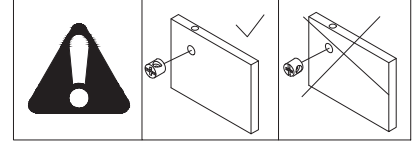


Install


20




Align the hole on the assembled components from Step 19 with screw (A) on panel (20). Insert them and secure with cam lock (B) in the corresponding position.

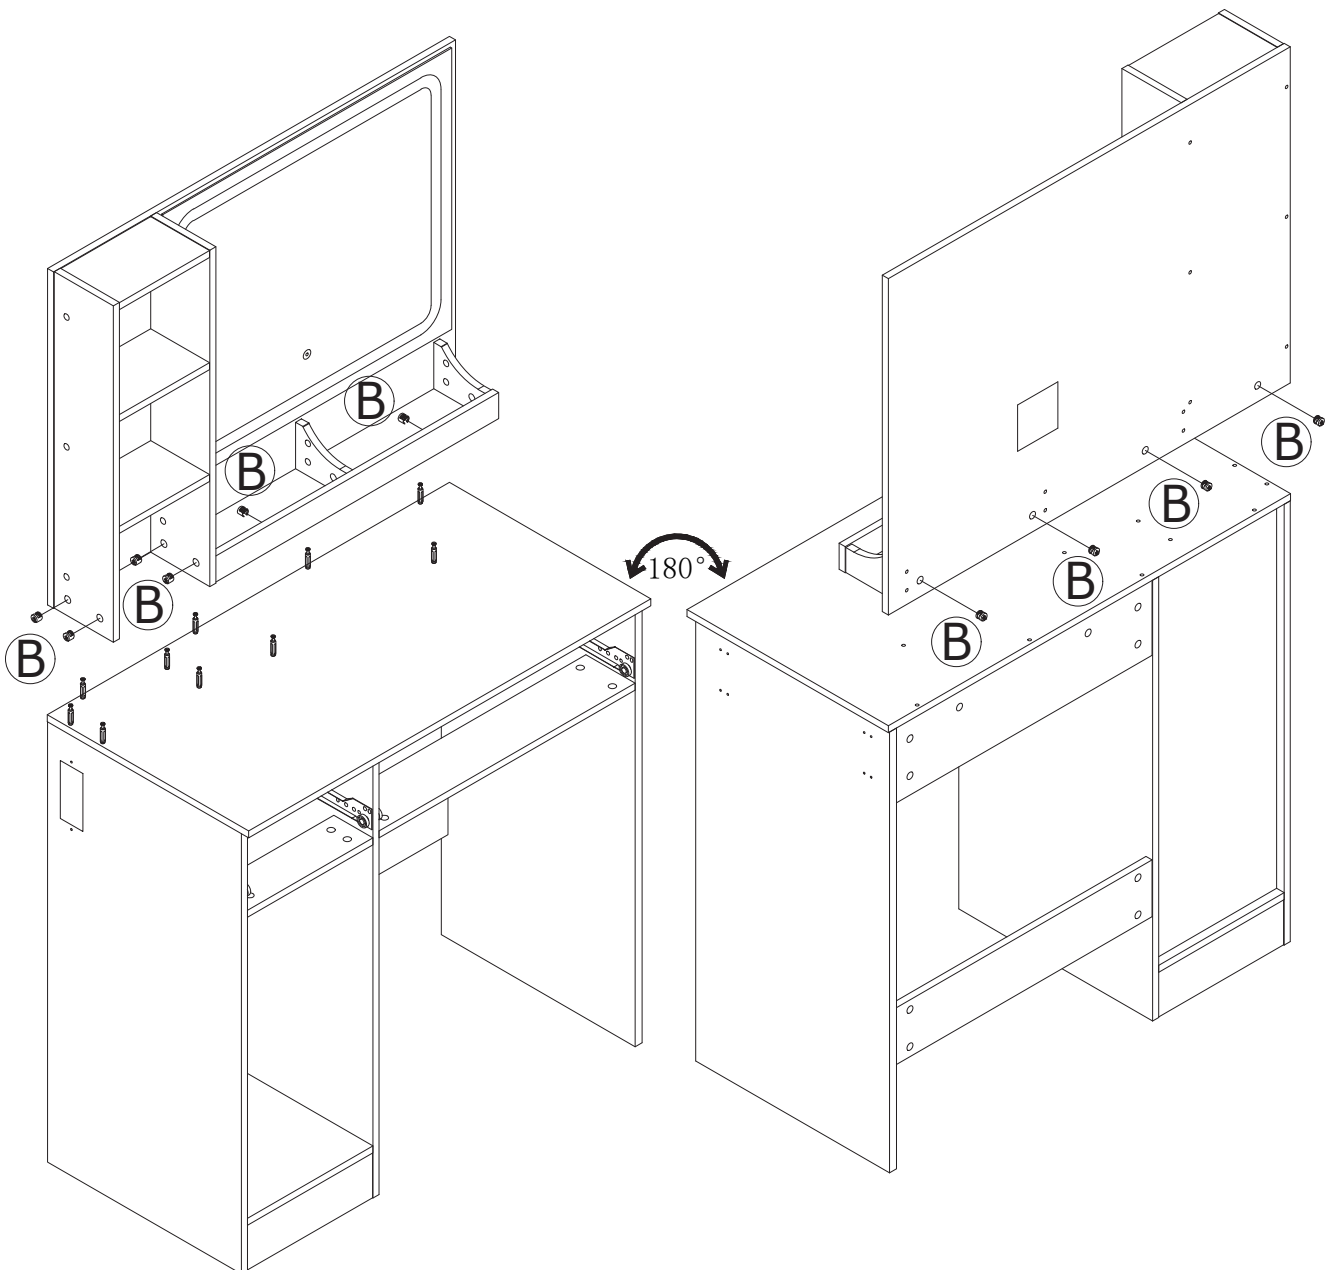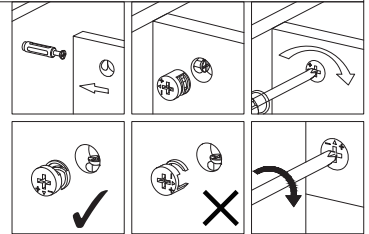




21

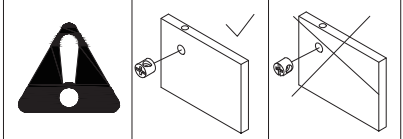



Insert the 2 drawers assembled in Step 7 and Step 9.

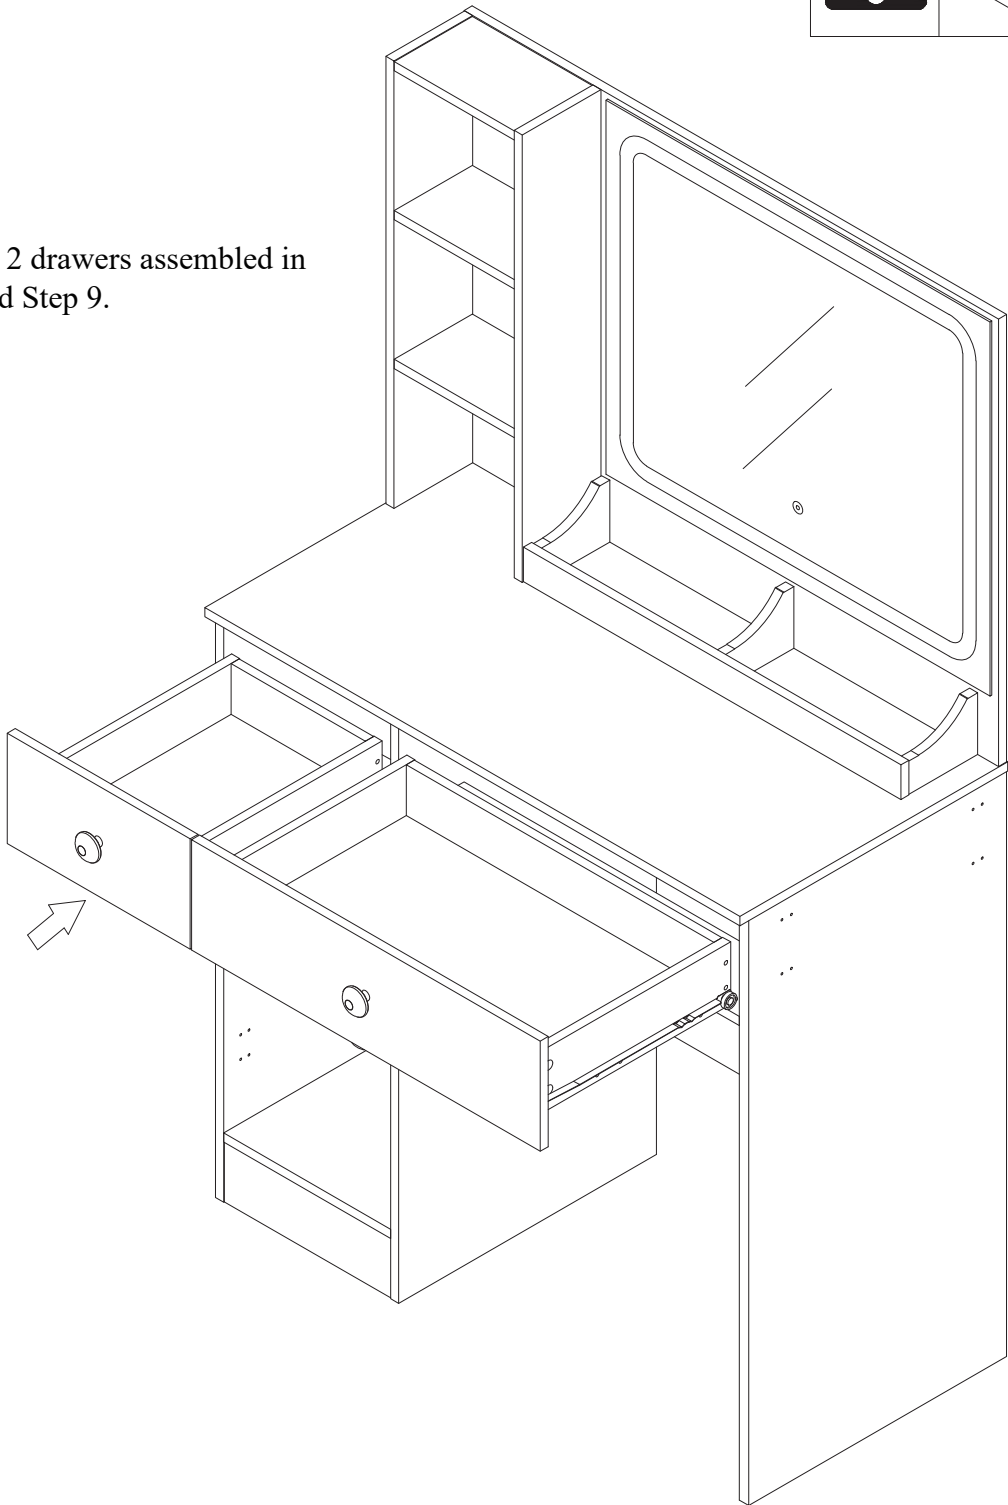

22

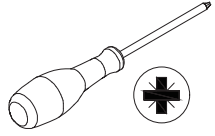G x 12  Ø3.5x 12.5mm	J x 2 	E x 1 	F x 1  Ø4 x 16 mm	(27) x 1 	
---	--	--	--	---	---




The position of the door frame can be adjusted forward, backward, left, and right using these two screws.

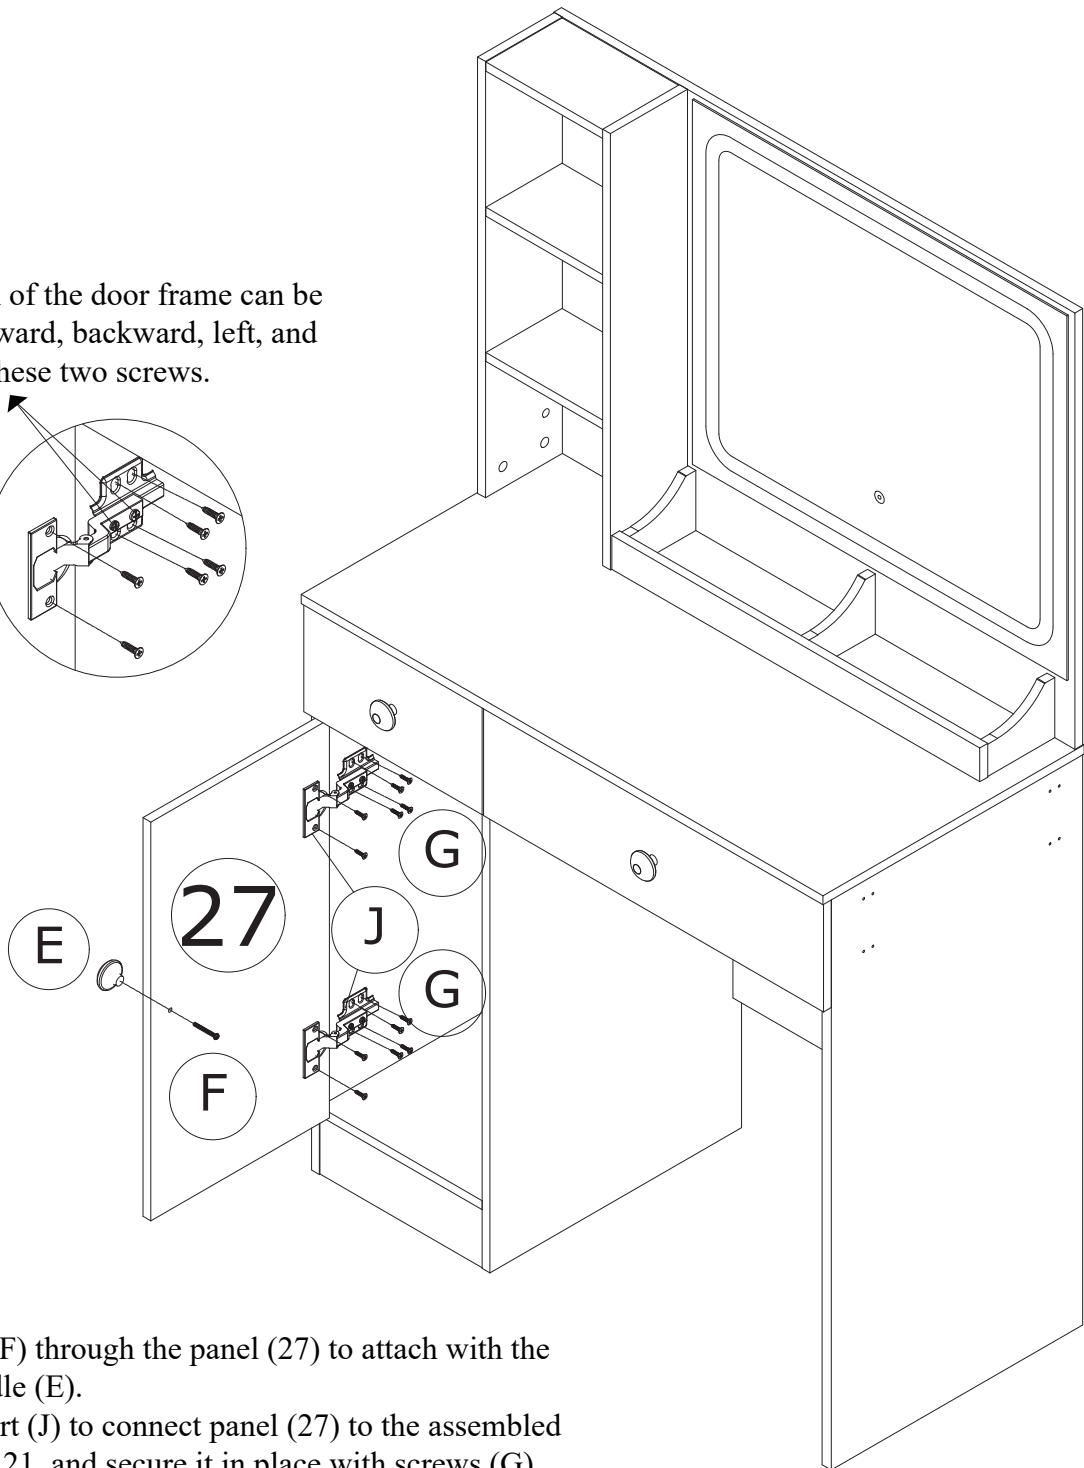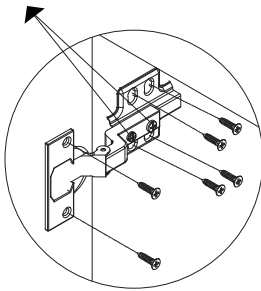

Pass screw (F) through the panel (27) to attach with the cabinet handle (E).

Next, use part (J) to connect panel (27) to the assembled parts in step 21, and secure it in place with screws (G).


23

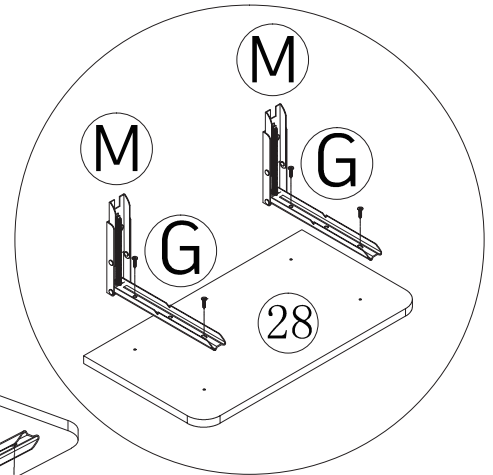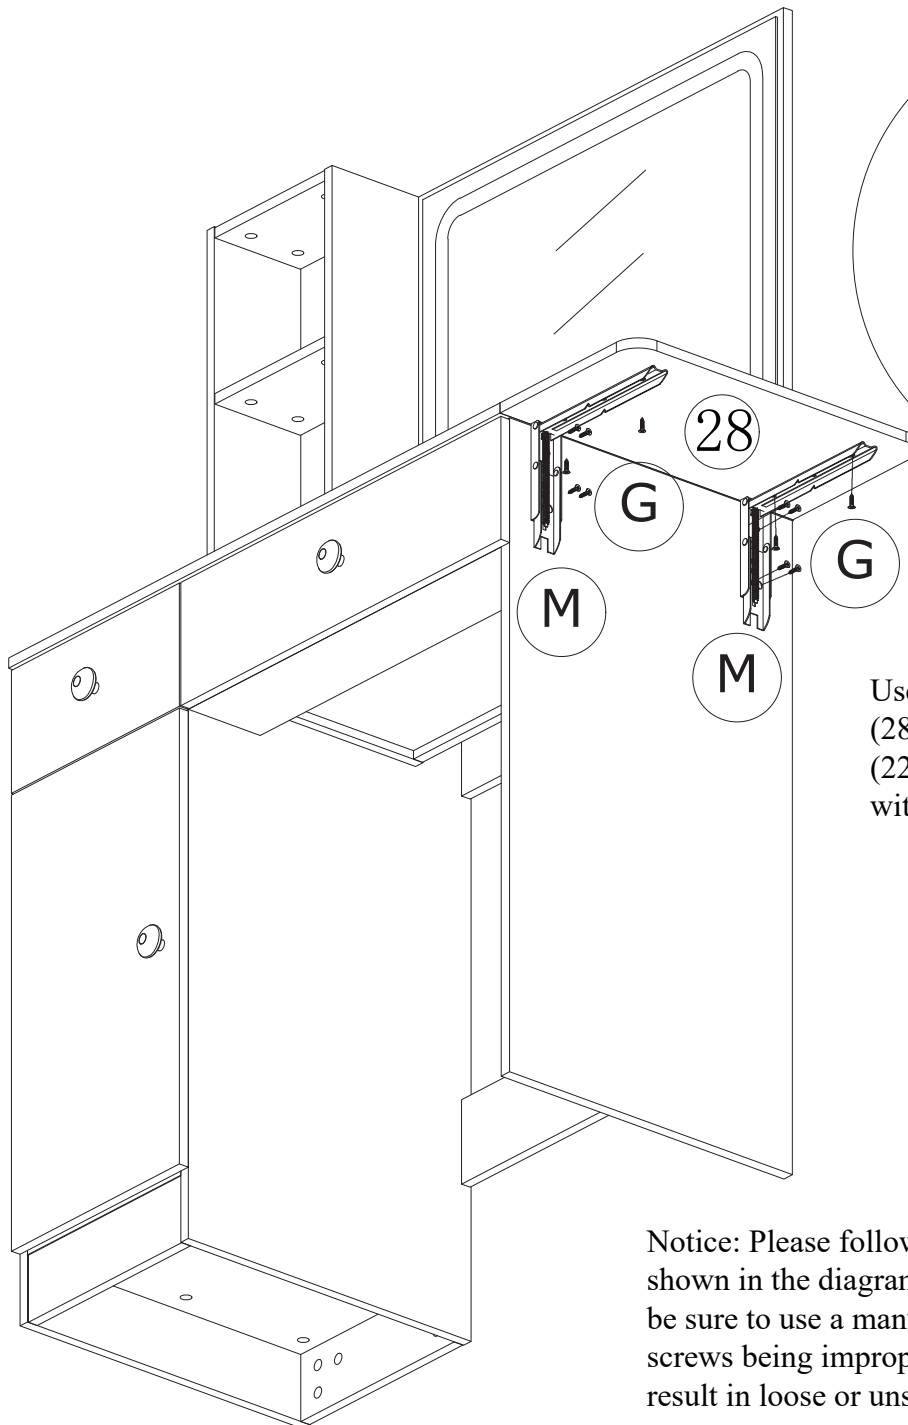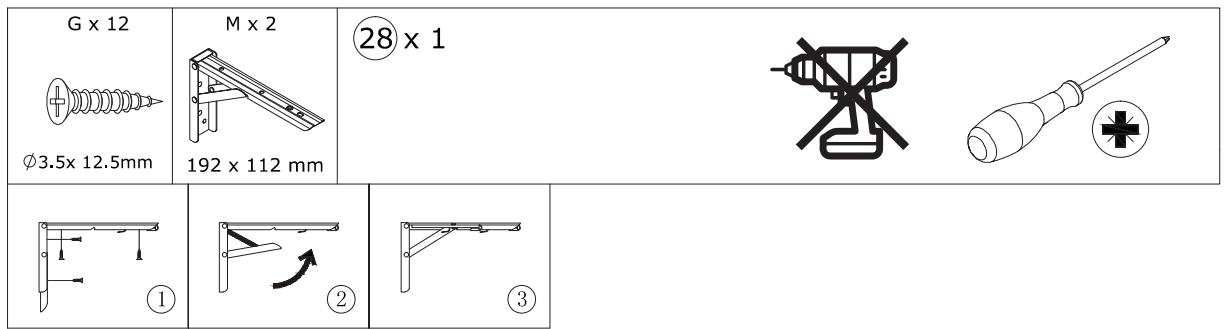

Use part (M) to connect panel (28) to the assembly from Step (22), and secure it in place with screws (G).



Notice: Please follow the installation instructions shown in the diagram above. When assembling, be sure to use a manual screwdriver to avoid screws being improperly tightened, which could result in loose or unsecured parts.

24

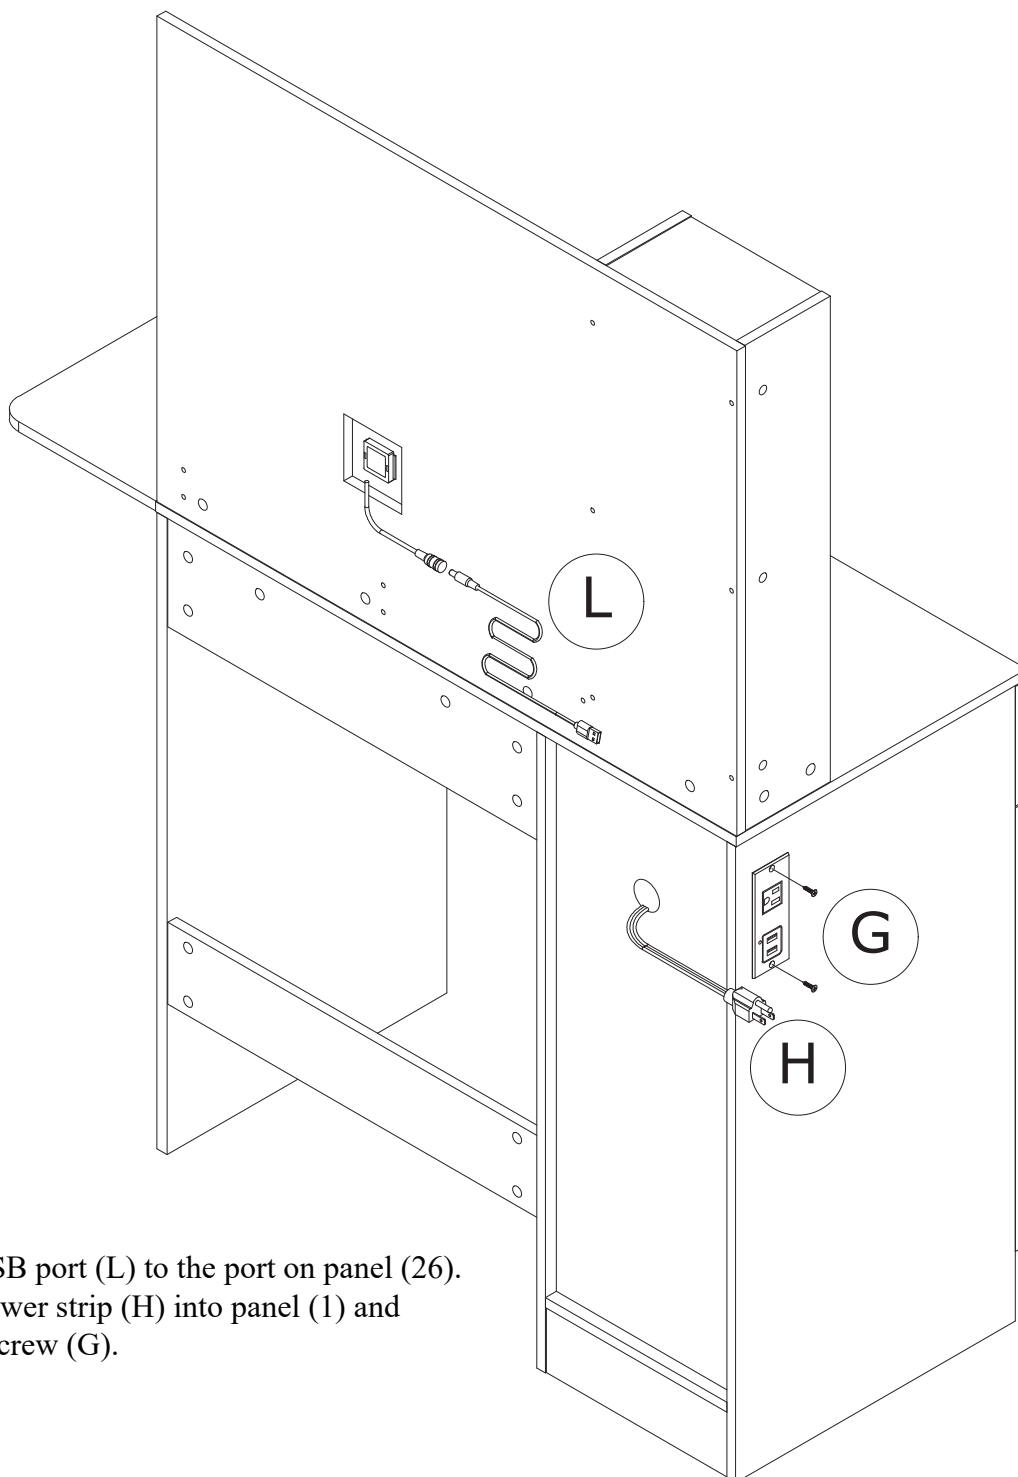

Connect the USB port (L) to the port on panel (26).
Next, install power strip (H) into panel (1) and
secure it with screw (G).

25

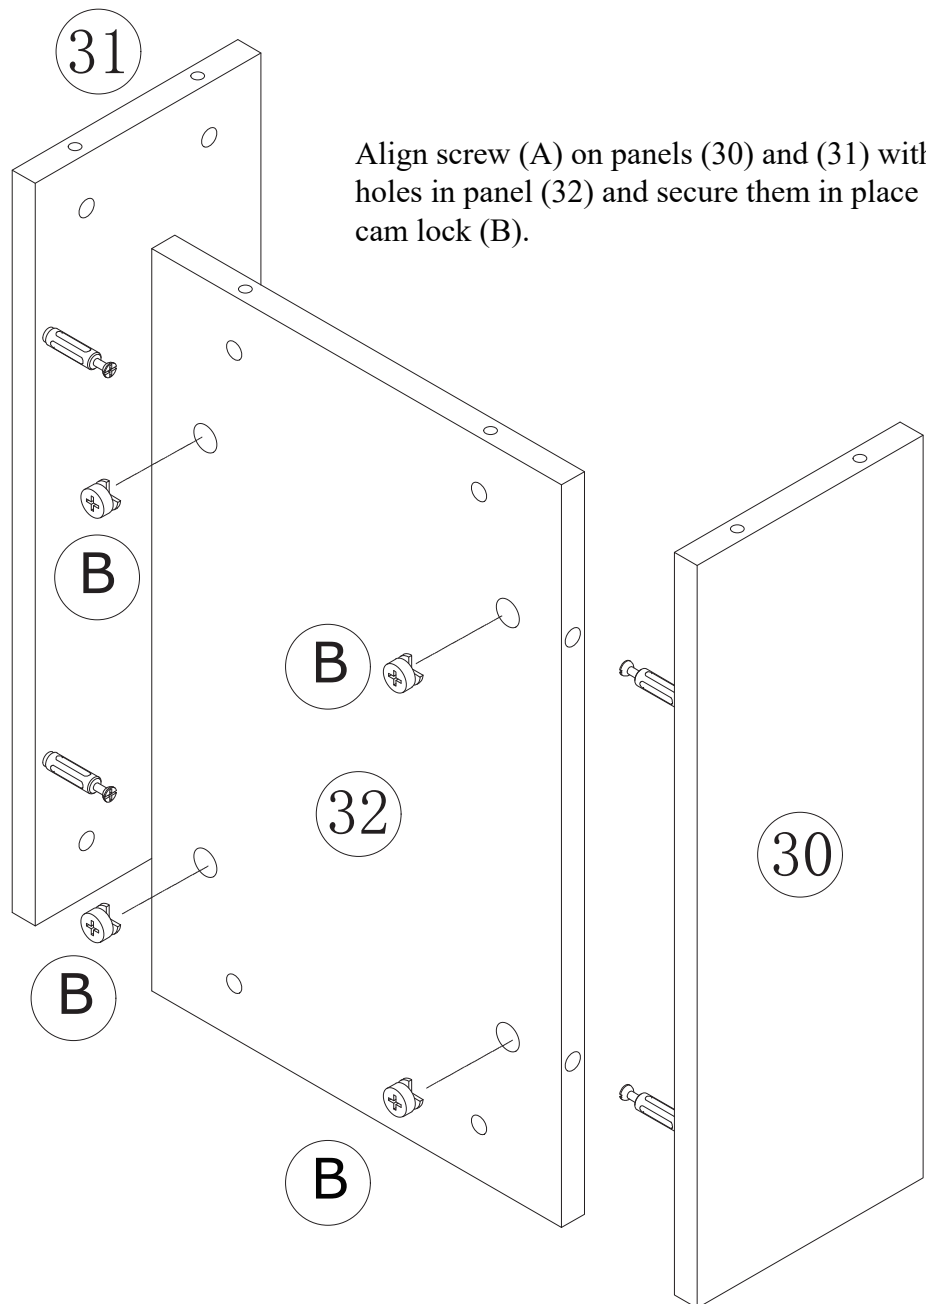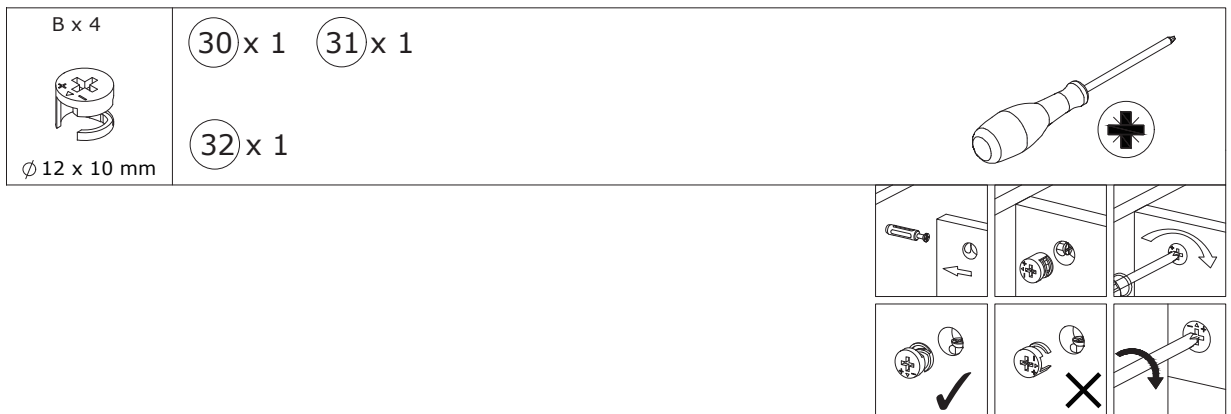

Install

26

C x 12



Ø4 x 40 mm

D x 12




Ø10 x 9 mm

G x 12







Ø3.5x 12.5mm

J x 2




29 x 2

33 x 1

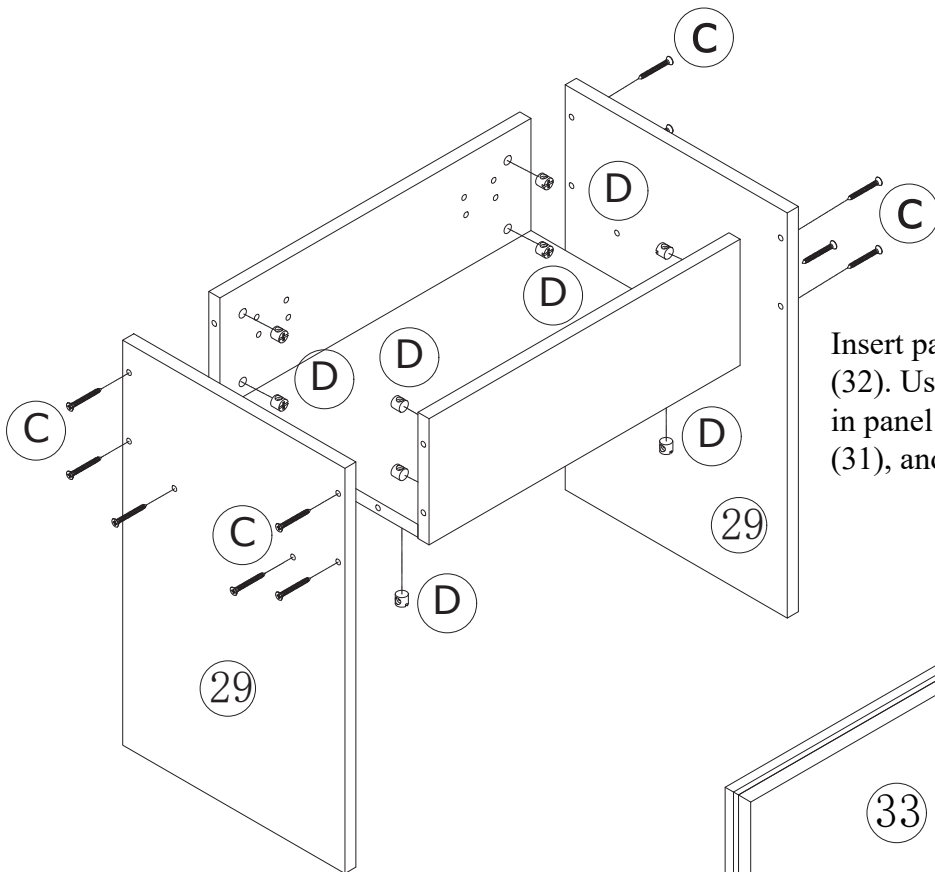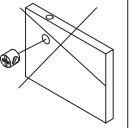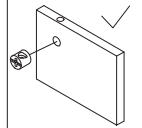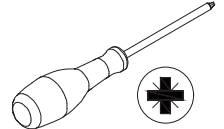

Insert part (D) into panels (30), (31), and (32). Use screw (C) to pass through the hole in panel (29) and insert it into panels (30), (31), and (32), securing it with part (D).

Use part (J) to connect cushion (33) to the assembly from Step 26, and secure it in place with screws (G).

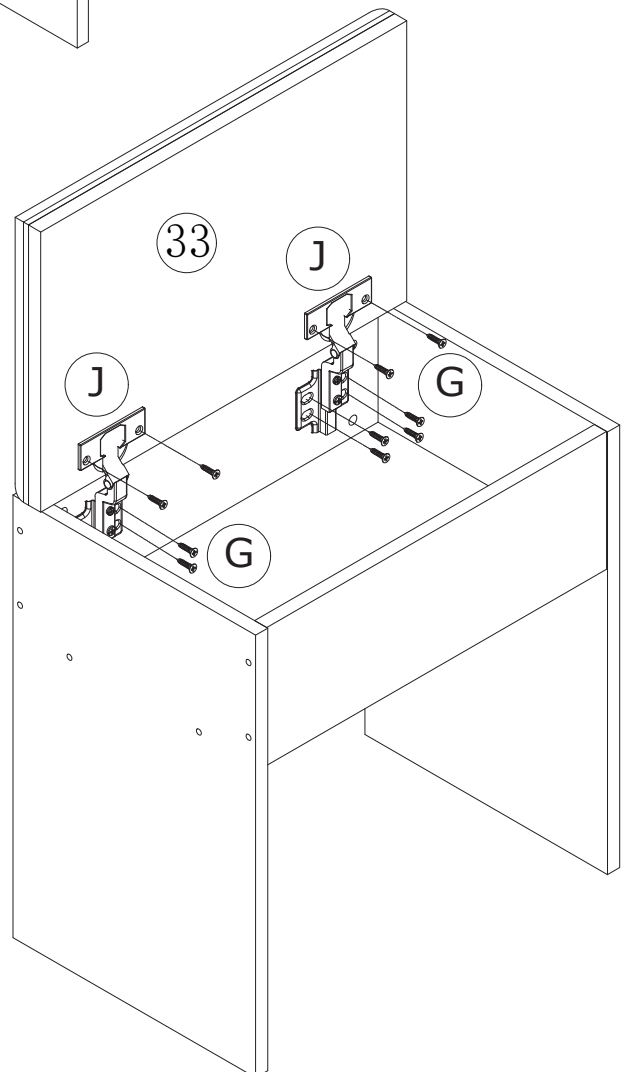


- **Usage of touch sensitive light strip**
- **Three-color switching + stepless dimming**
- **Turn it on for white light, click again for warm light, and click for the third time for neutral light;**

you can long press stepless dimming under different colors of lights.

- Turn on for white light and long press for dimming
- Click again for warm light and long press for dimming
- Third click for neutral light and long press for dimming
- Last click to turn off the light



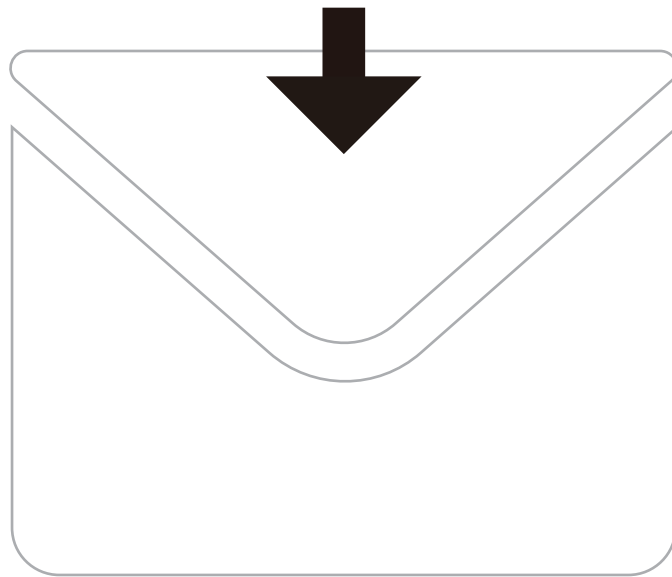

We' d Love to hear from you!

Thank you for your purchase of our product!
If you encounter any problems, please give us an opportunity to improve your experience right away, our team members are more than happy to help.

We also welcome you to post a product review so that others could benefit from your experience. Thanks again for your support, feedback and time.