



ASSEMBLY INSTRUCTION

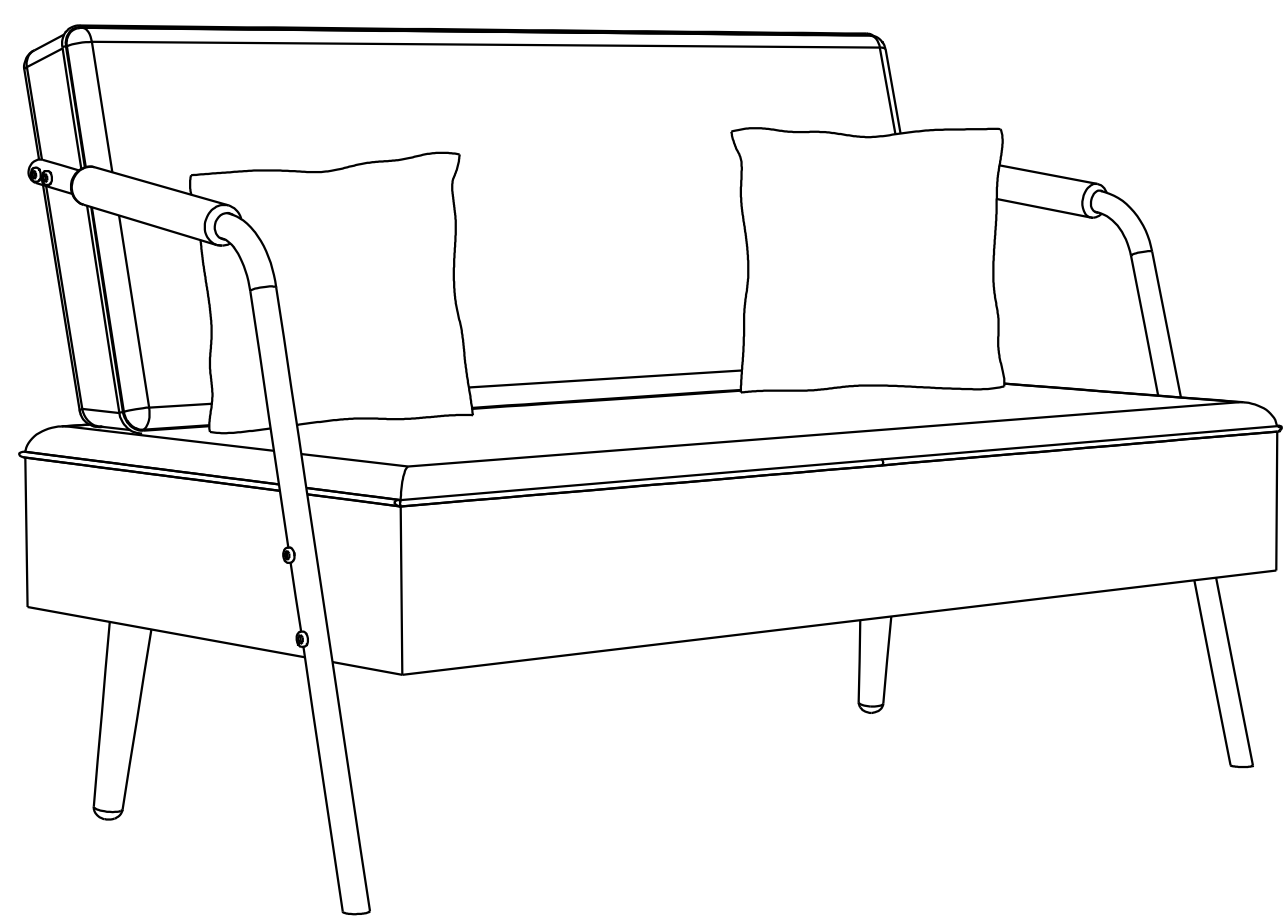


PARTS LIST

A

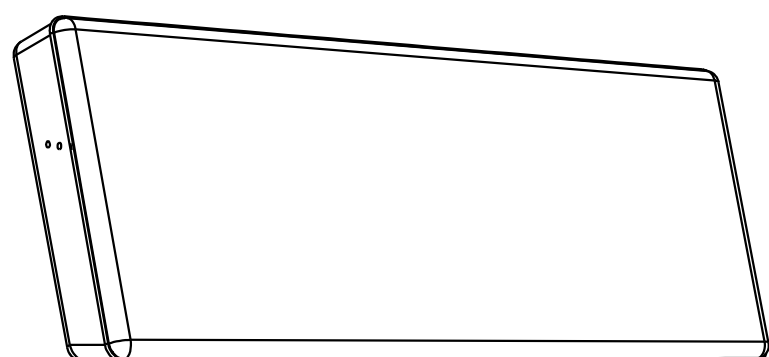


BACKREST (1 PC)

B

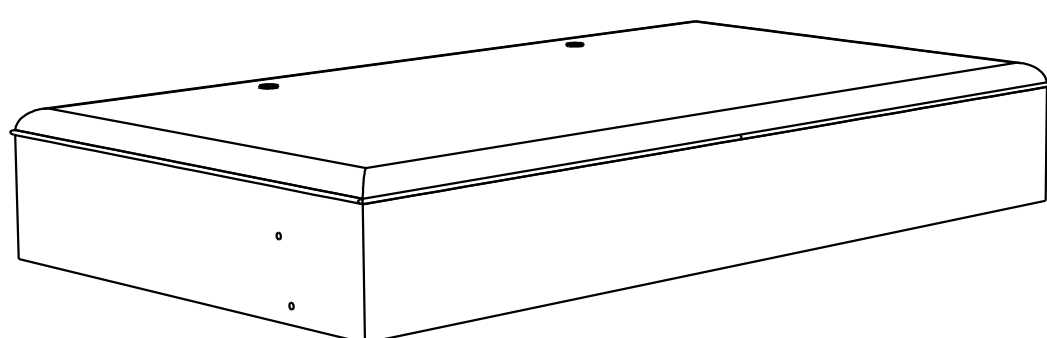


SEAT BODY(1 PC)

C

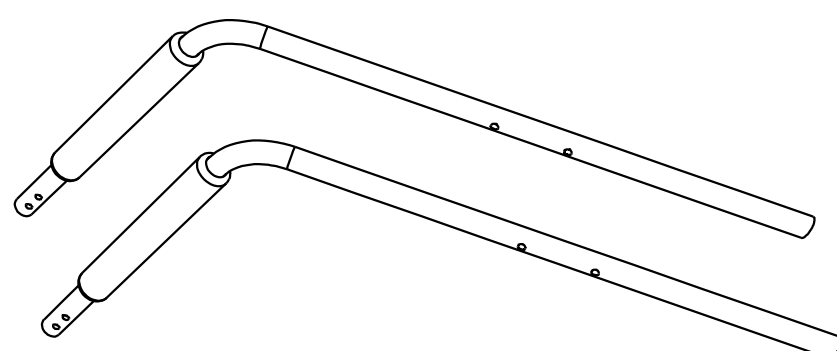


ARMREST & FRONT LEGS (2 PCS)

D

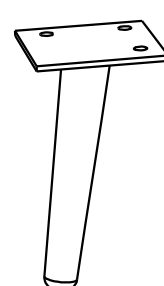

BACK LEGS (2 PCS)


E

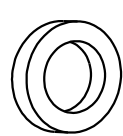

M6


WASHER (6 PCS)

F

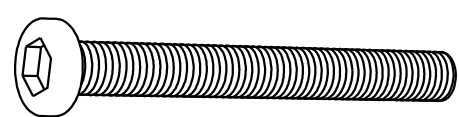

M8*70MM
SCREW (8 PCS)

G

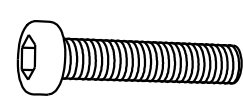

M6*30MM
SCREW (6 PCS)

H



M6

ALLEN KEY (1 PC)


I



M8


ALLEN KEY (1 PC)

J

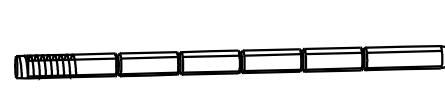

CONNECTING BAR (2 PCS)

L


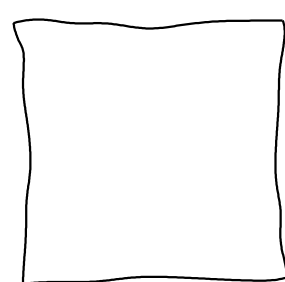


PILLOWS (2 PCS)

ASSEMBLY

STEP 1

** UNCOVER ALONG
THE VELCRON SIDES AS SHOWN **

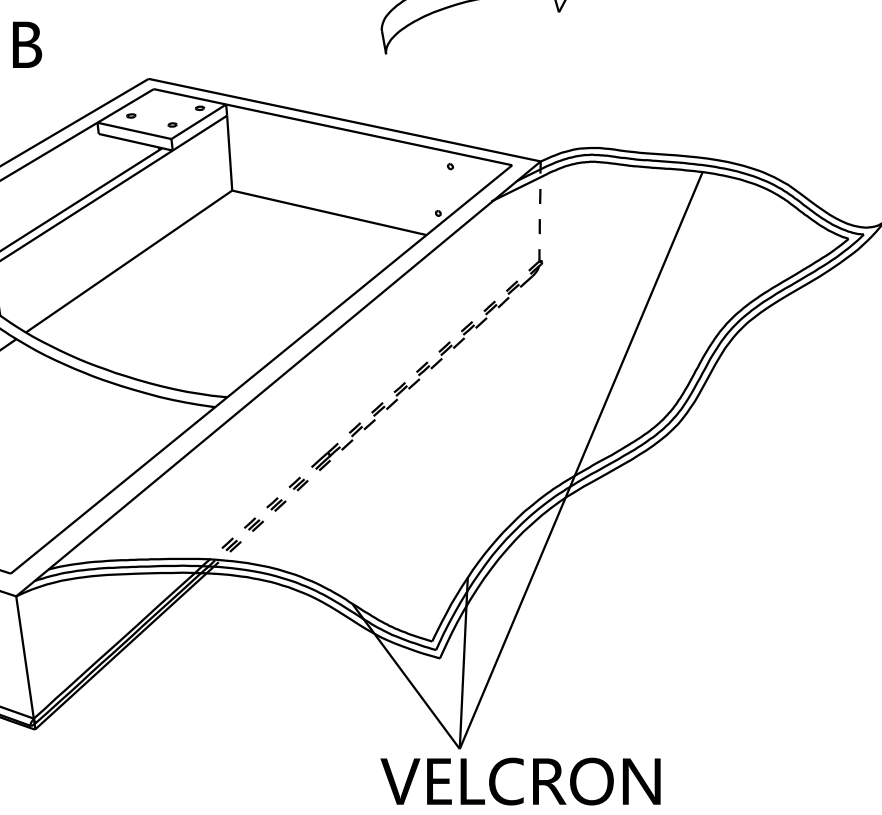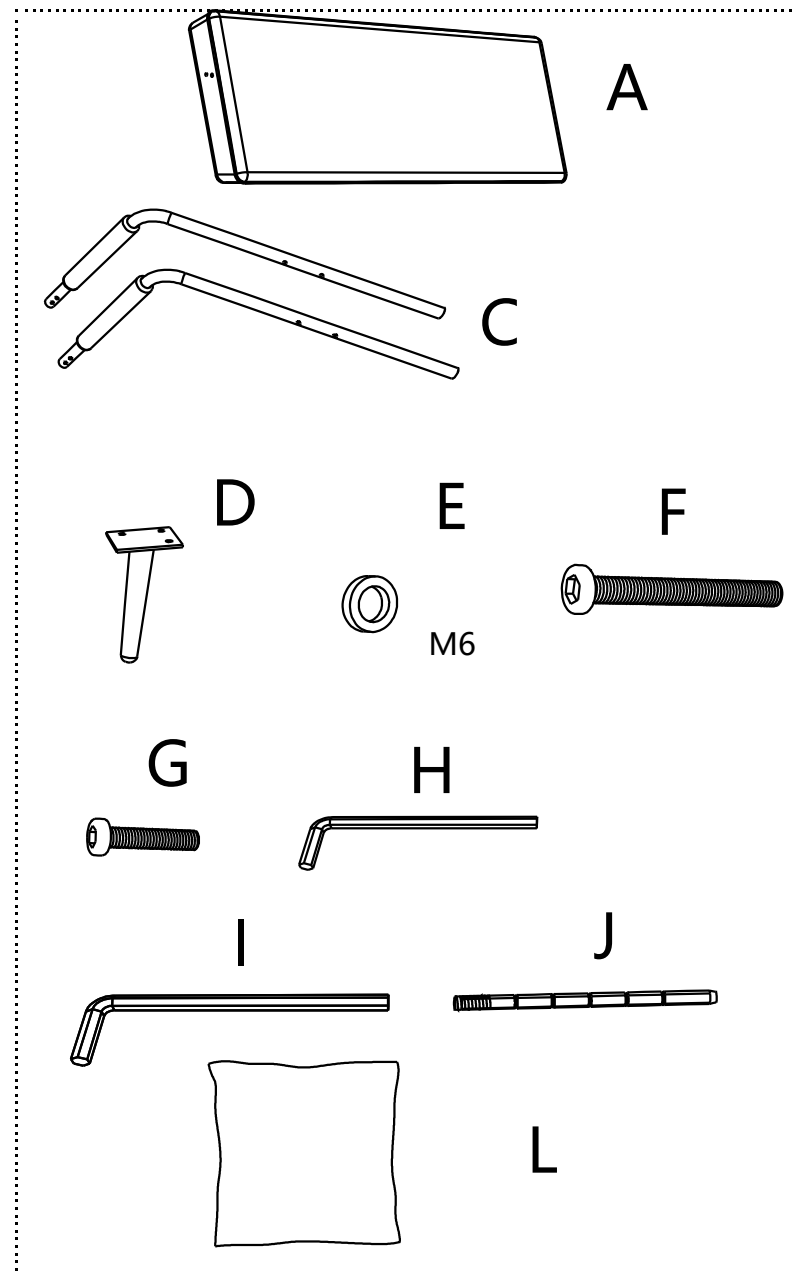


VELCRON


** ALL PARTS CAN BE FOUND
INSIDE SEAT BODY (B) **

STEP 2

TURN OVER
THIS BAR

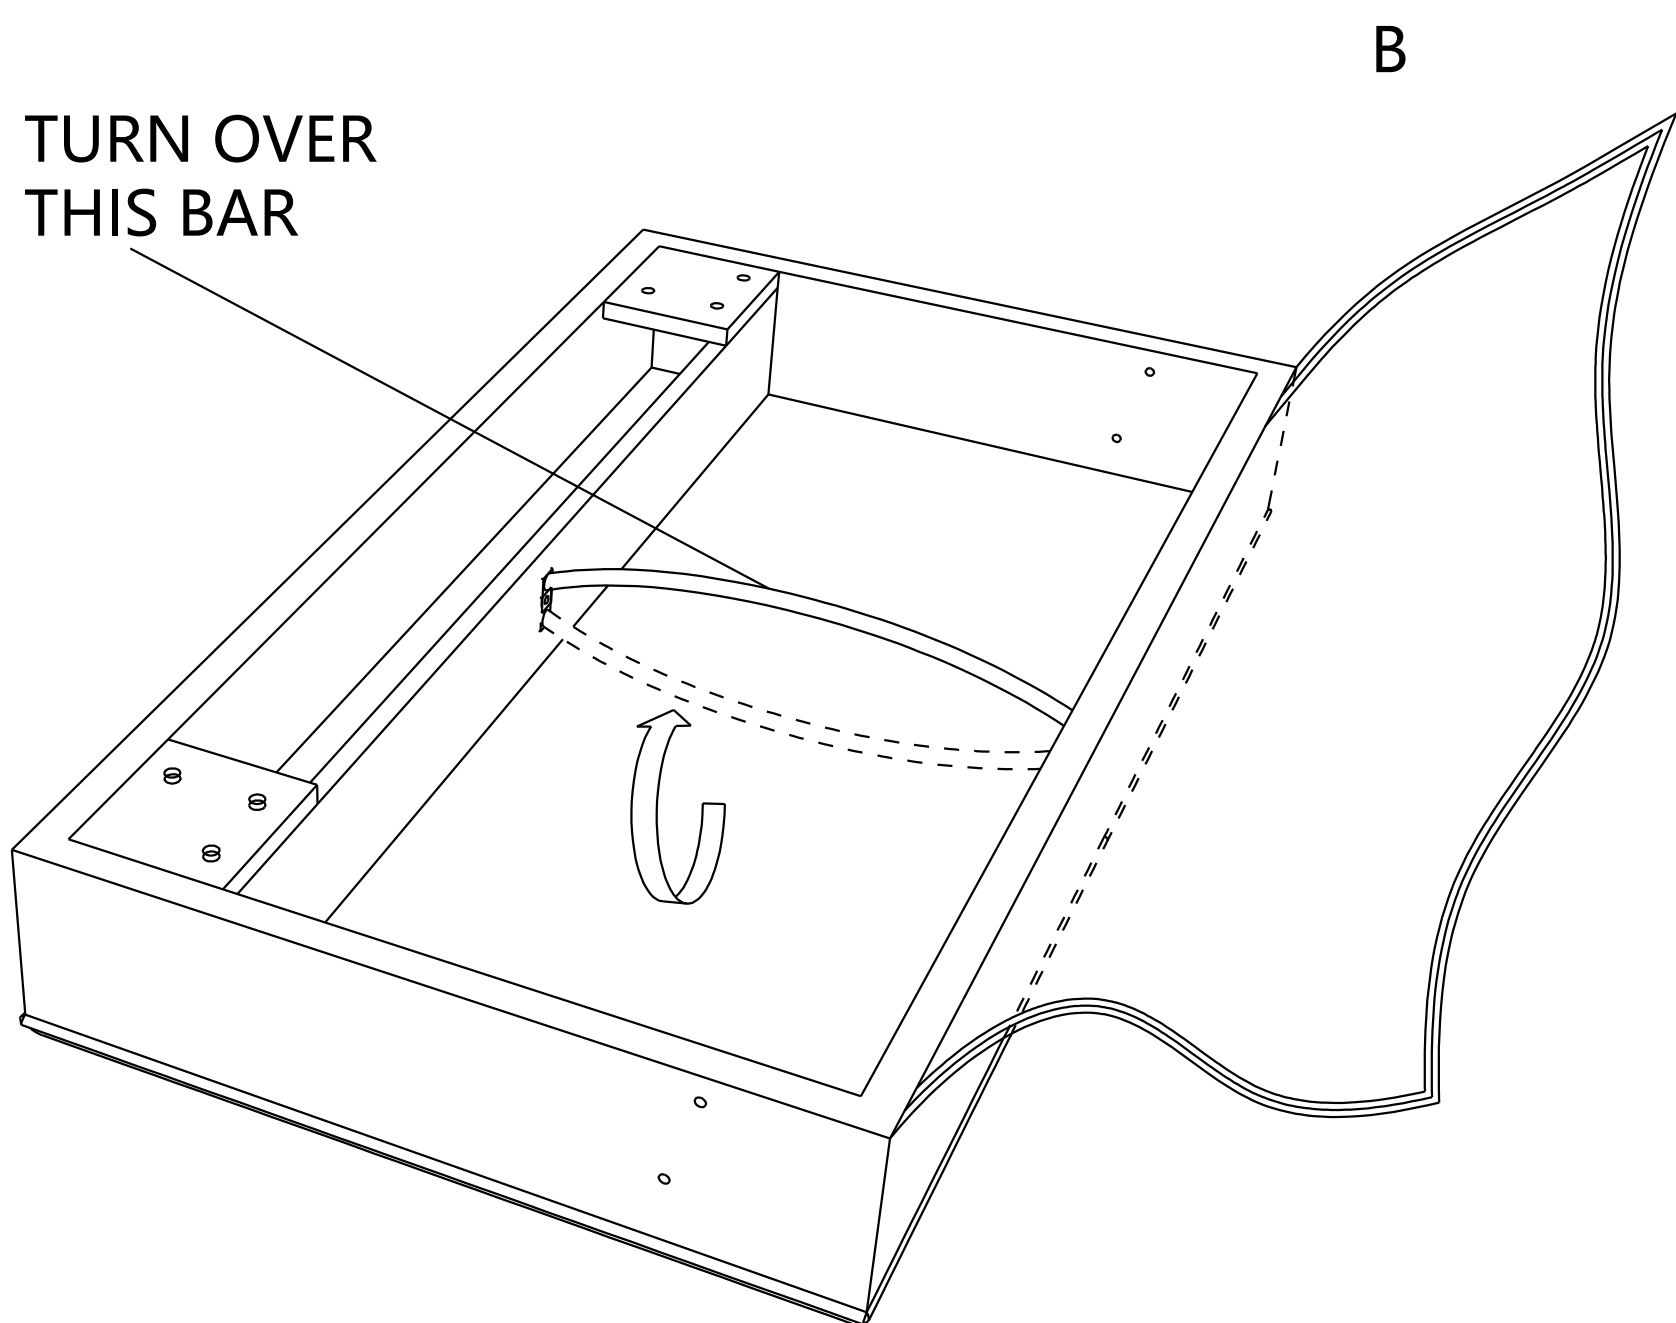


STEP 3

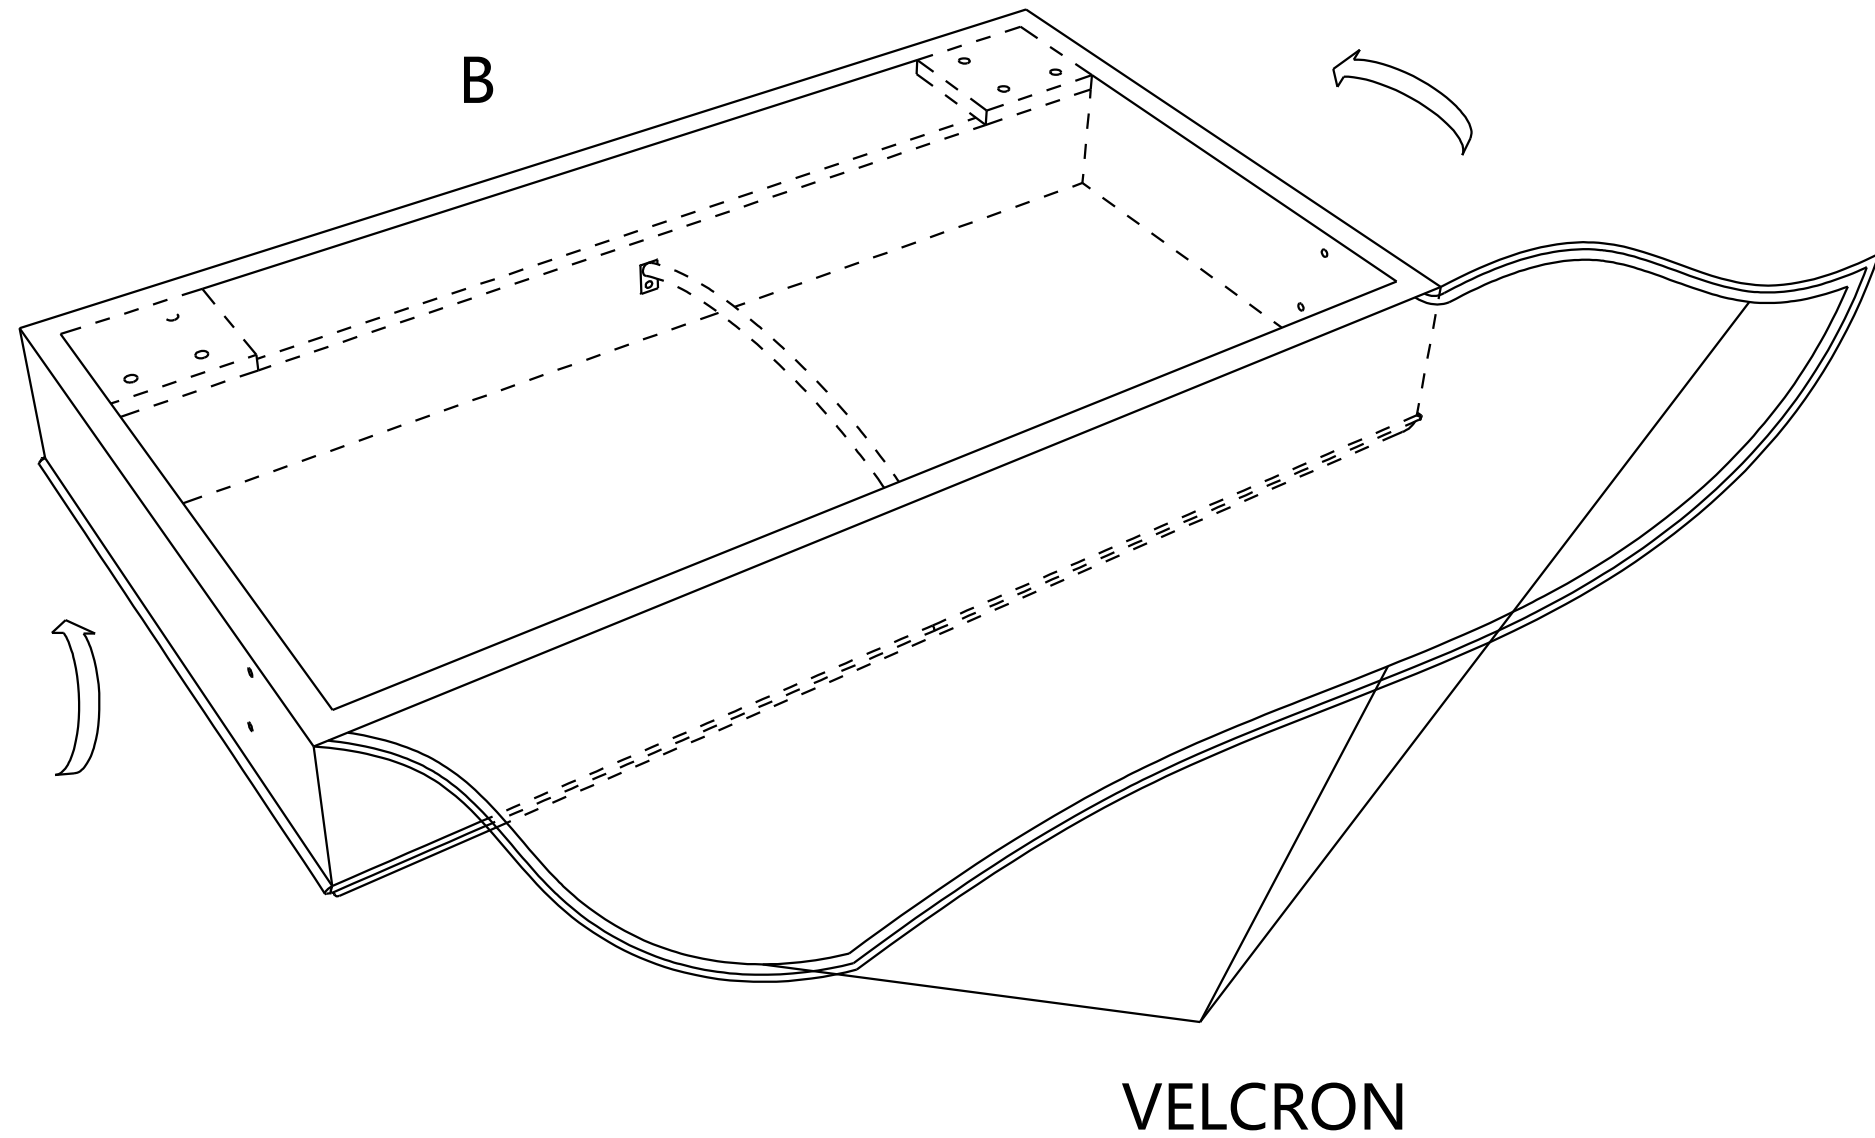

VELCRON

** BOTTOM COVER FASTENED WITH VELCRON TAPE **

STEP 4

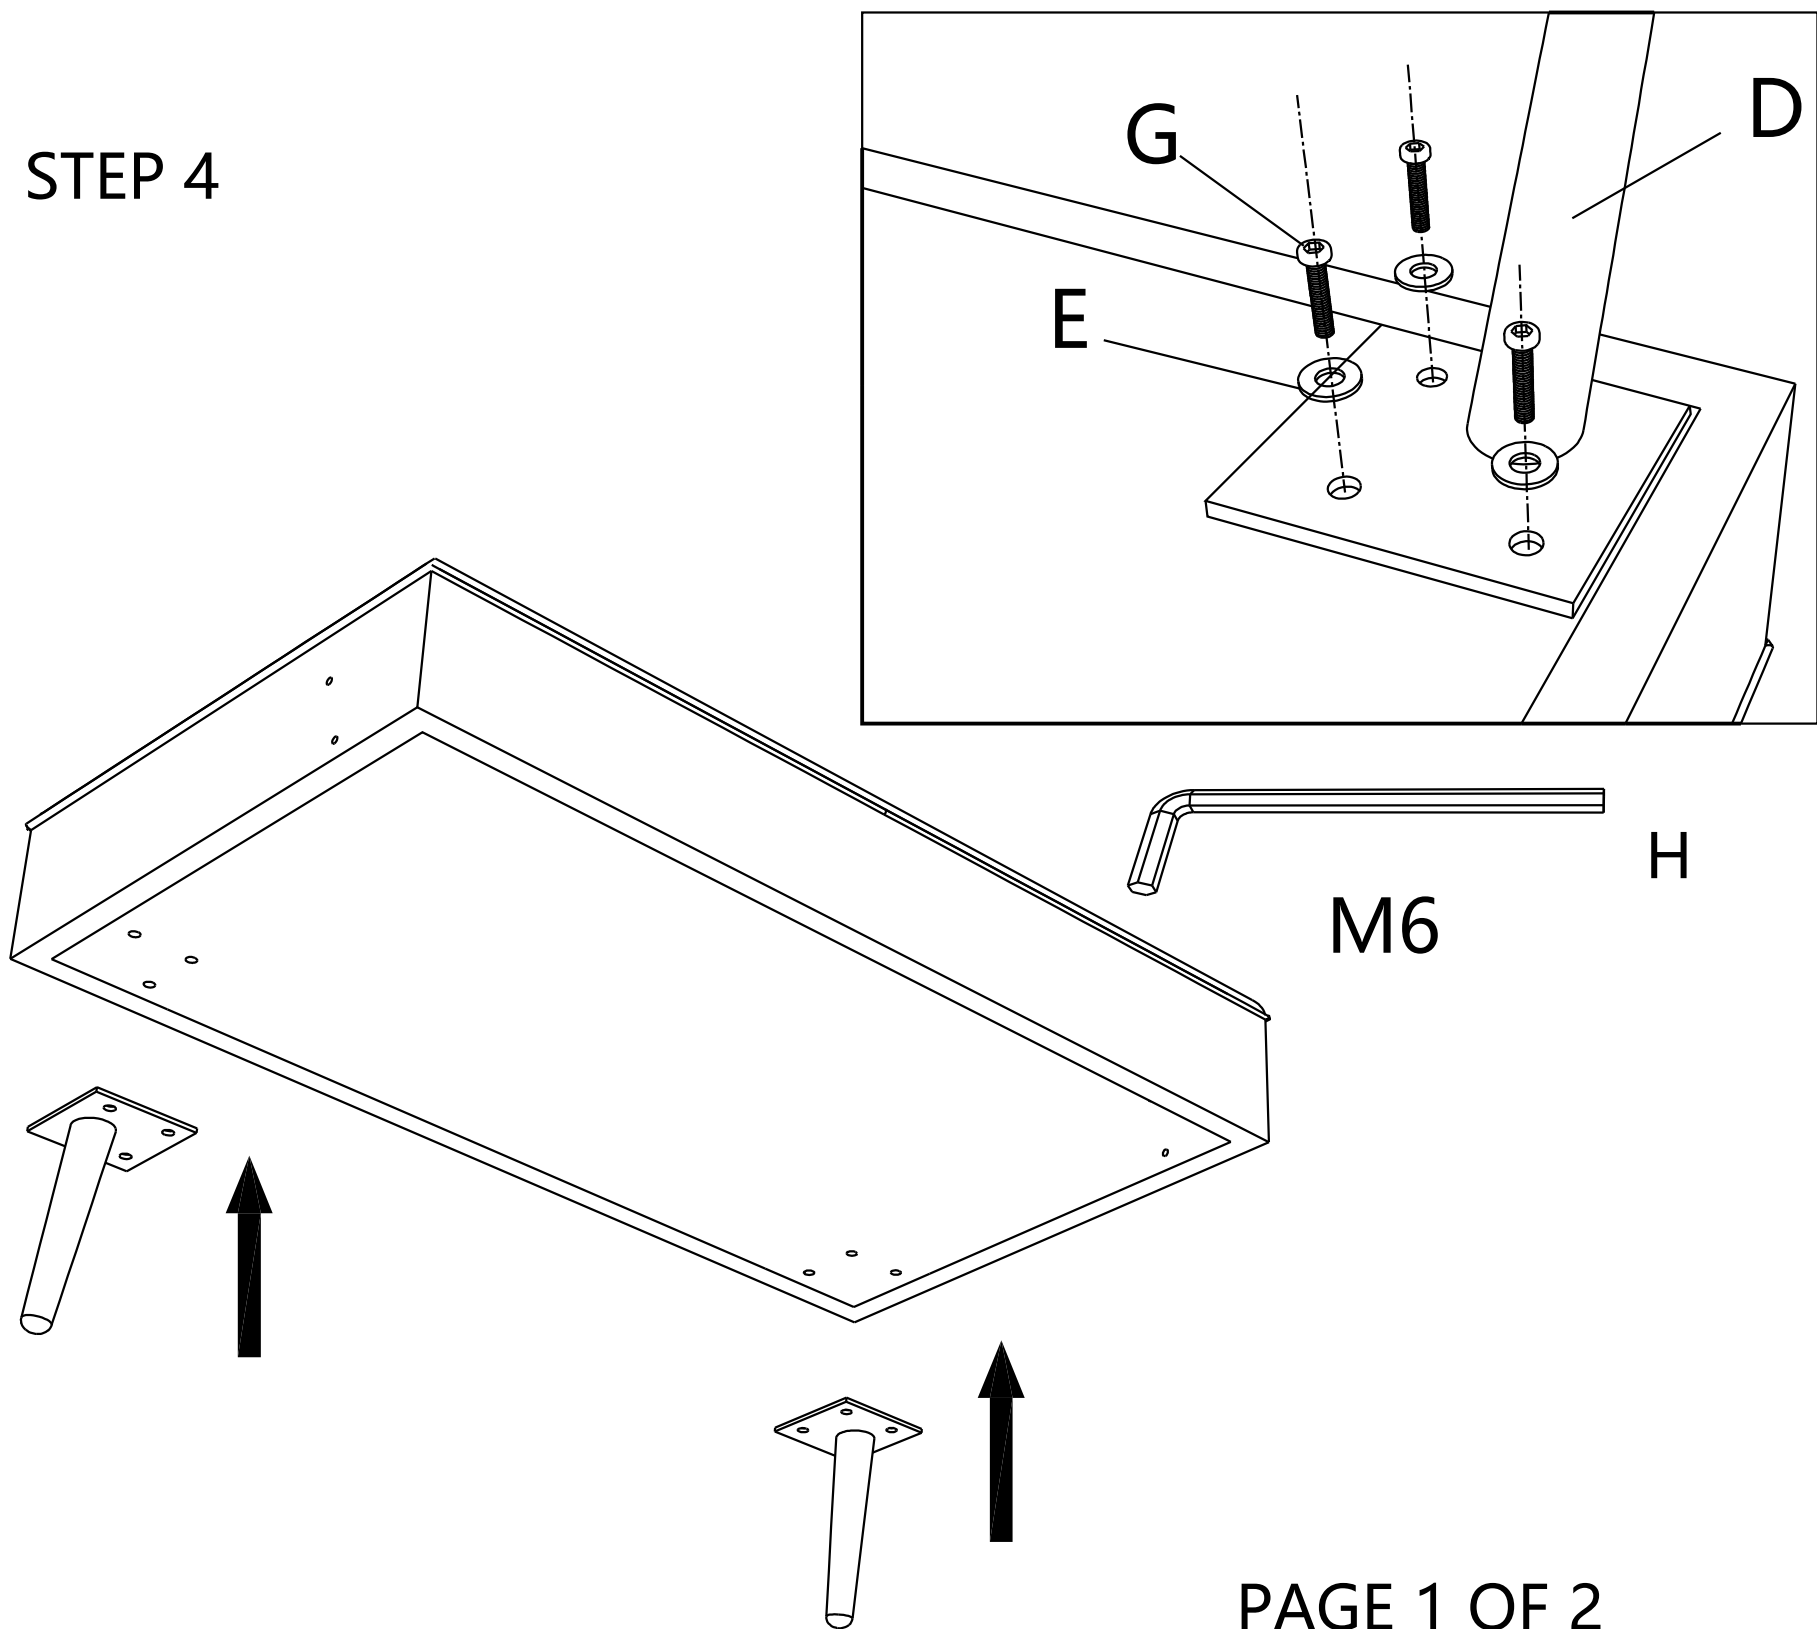


STEP 5

BE WARE OF THE DIRECTION OF (C)

M8

I


The side with countersunk around the screw holes should be placed outwards.

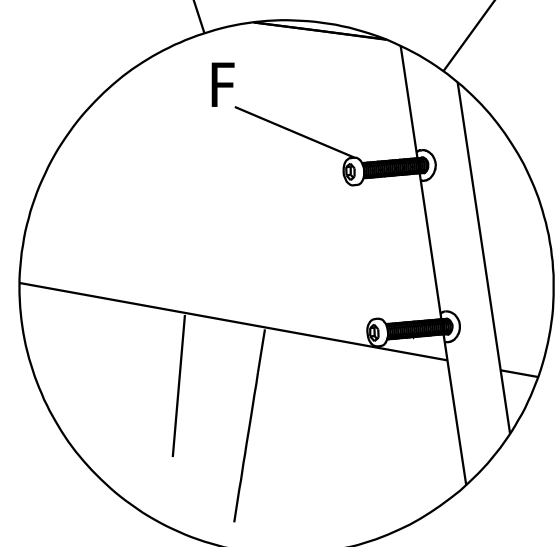


Instruction for fasten the screws:

Insert M8 screws (F) to locate the holes on legs (C) and seat body (B), without fasten.

STEP 6

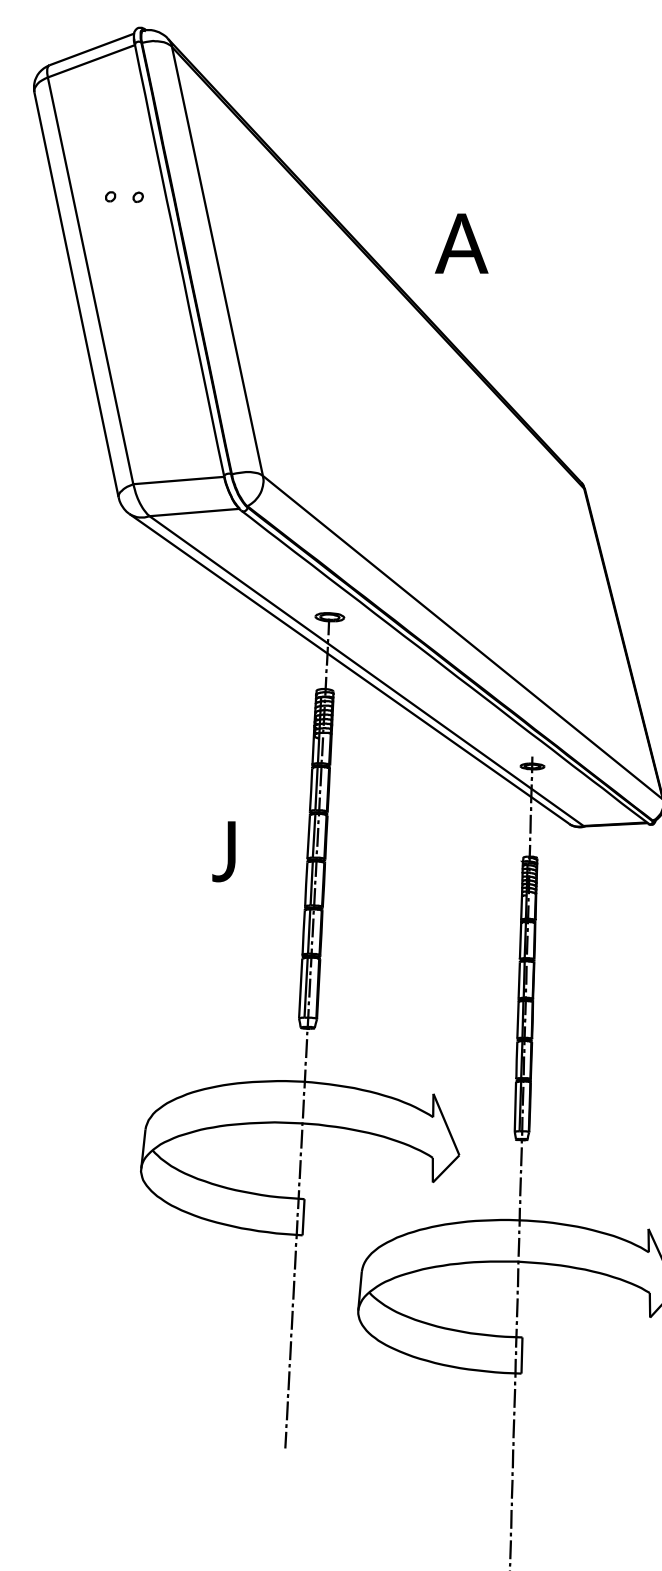


STEP 7

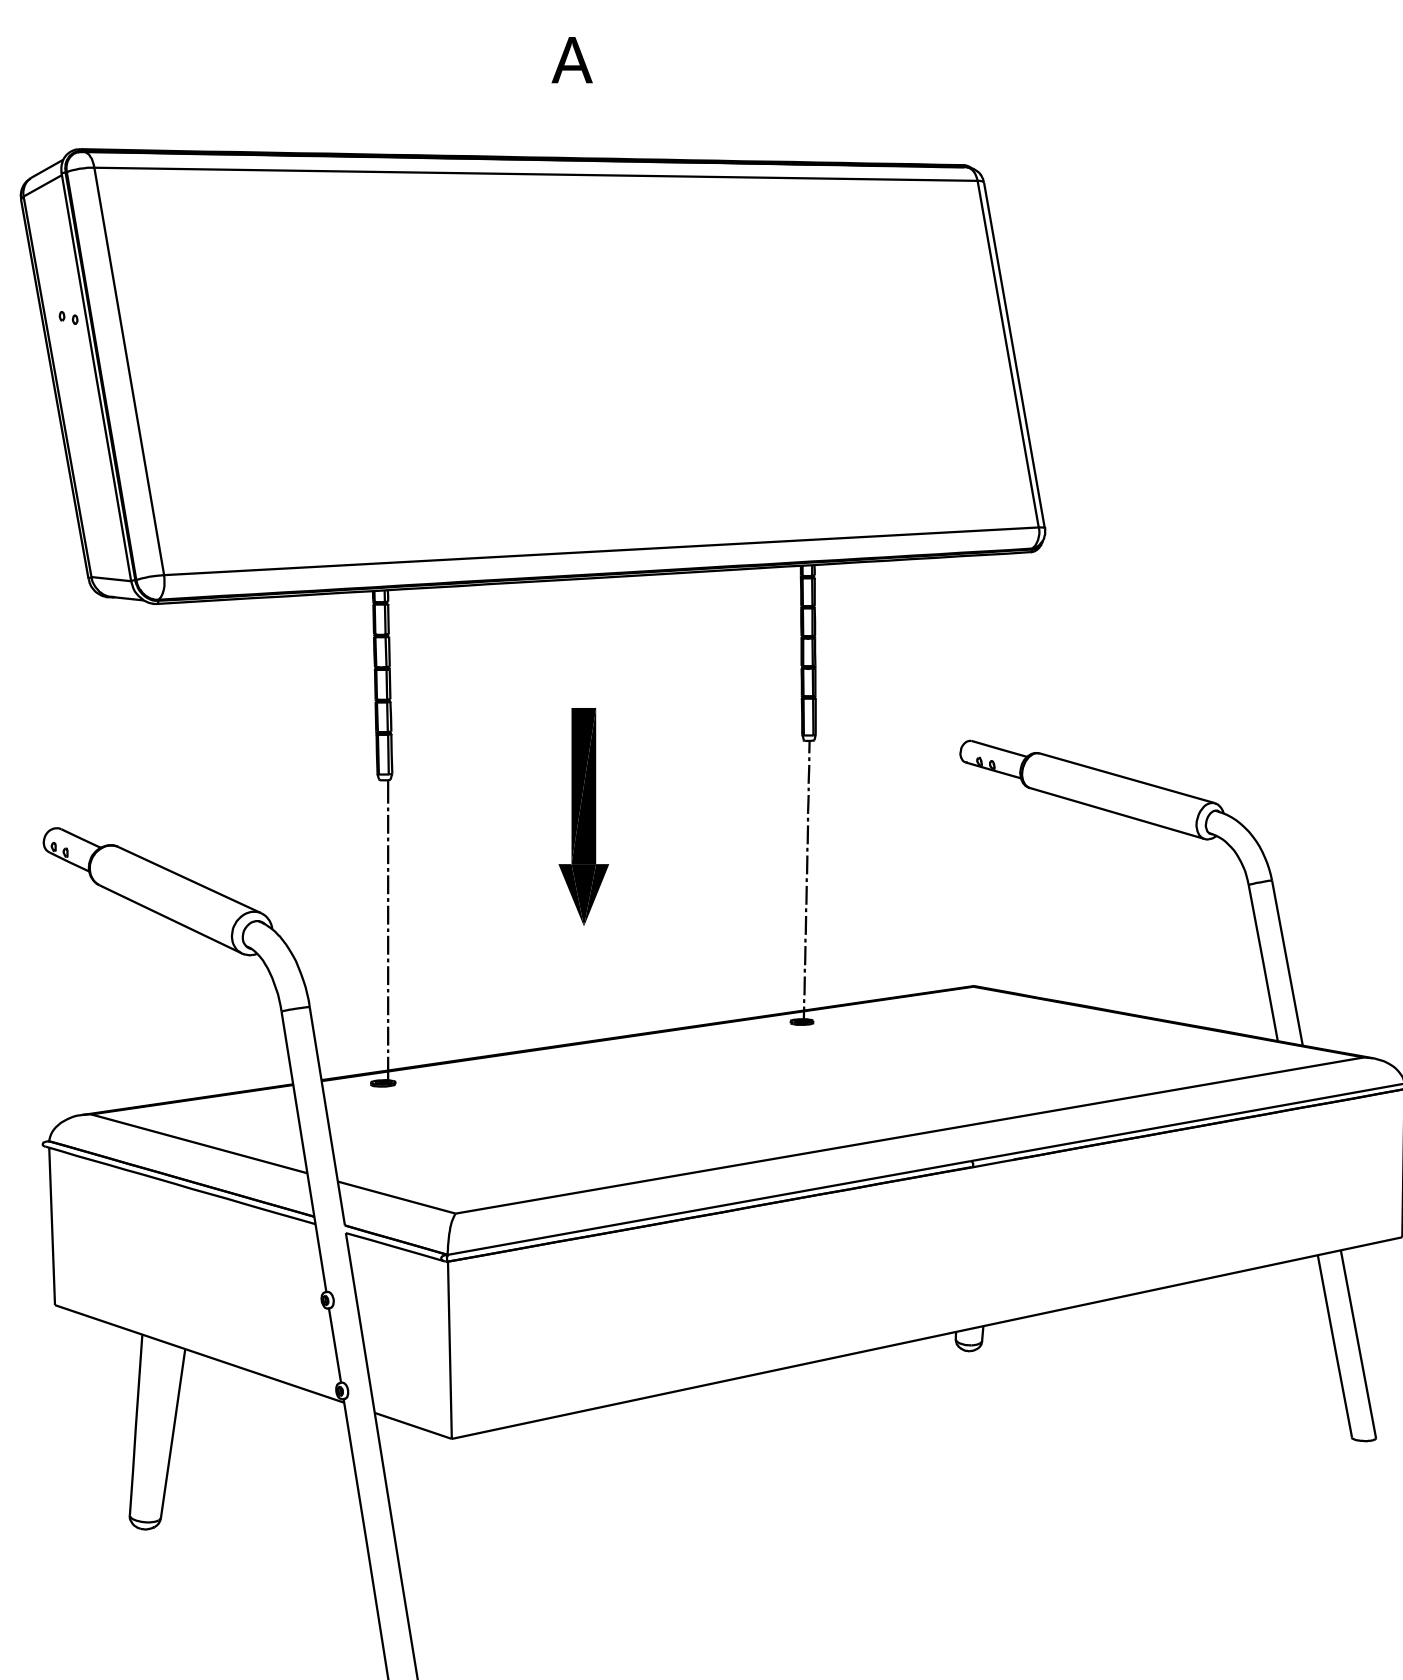

STEP 8


I M8

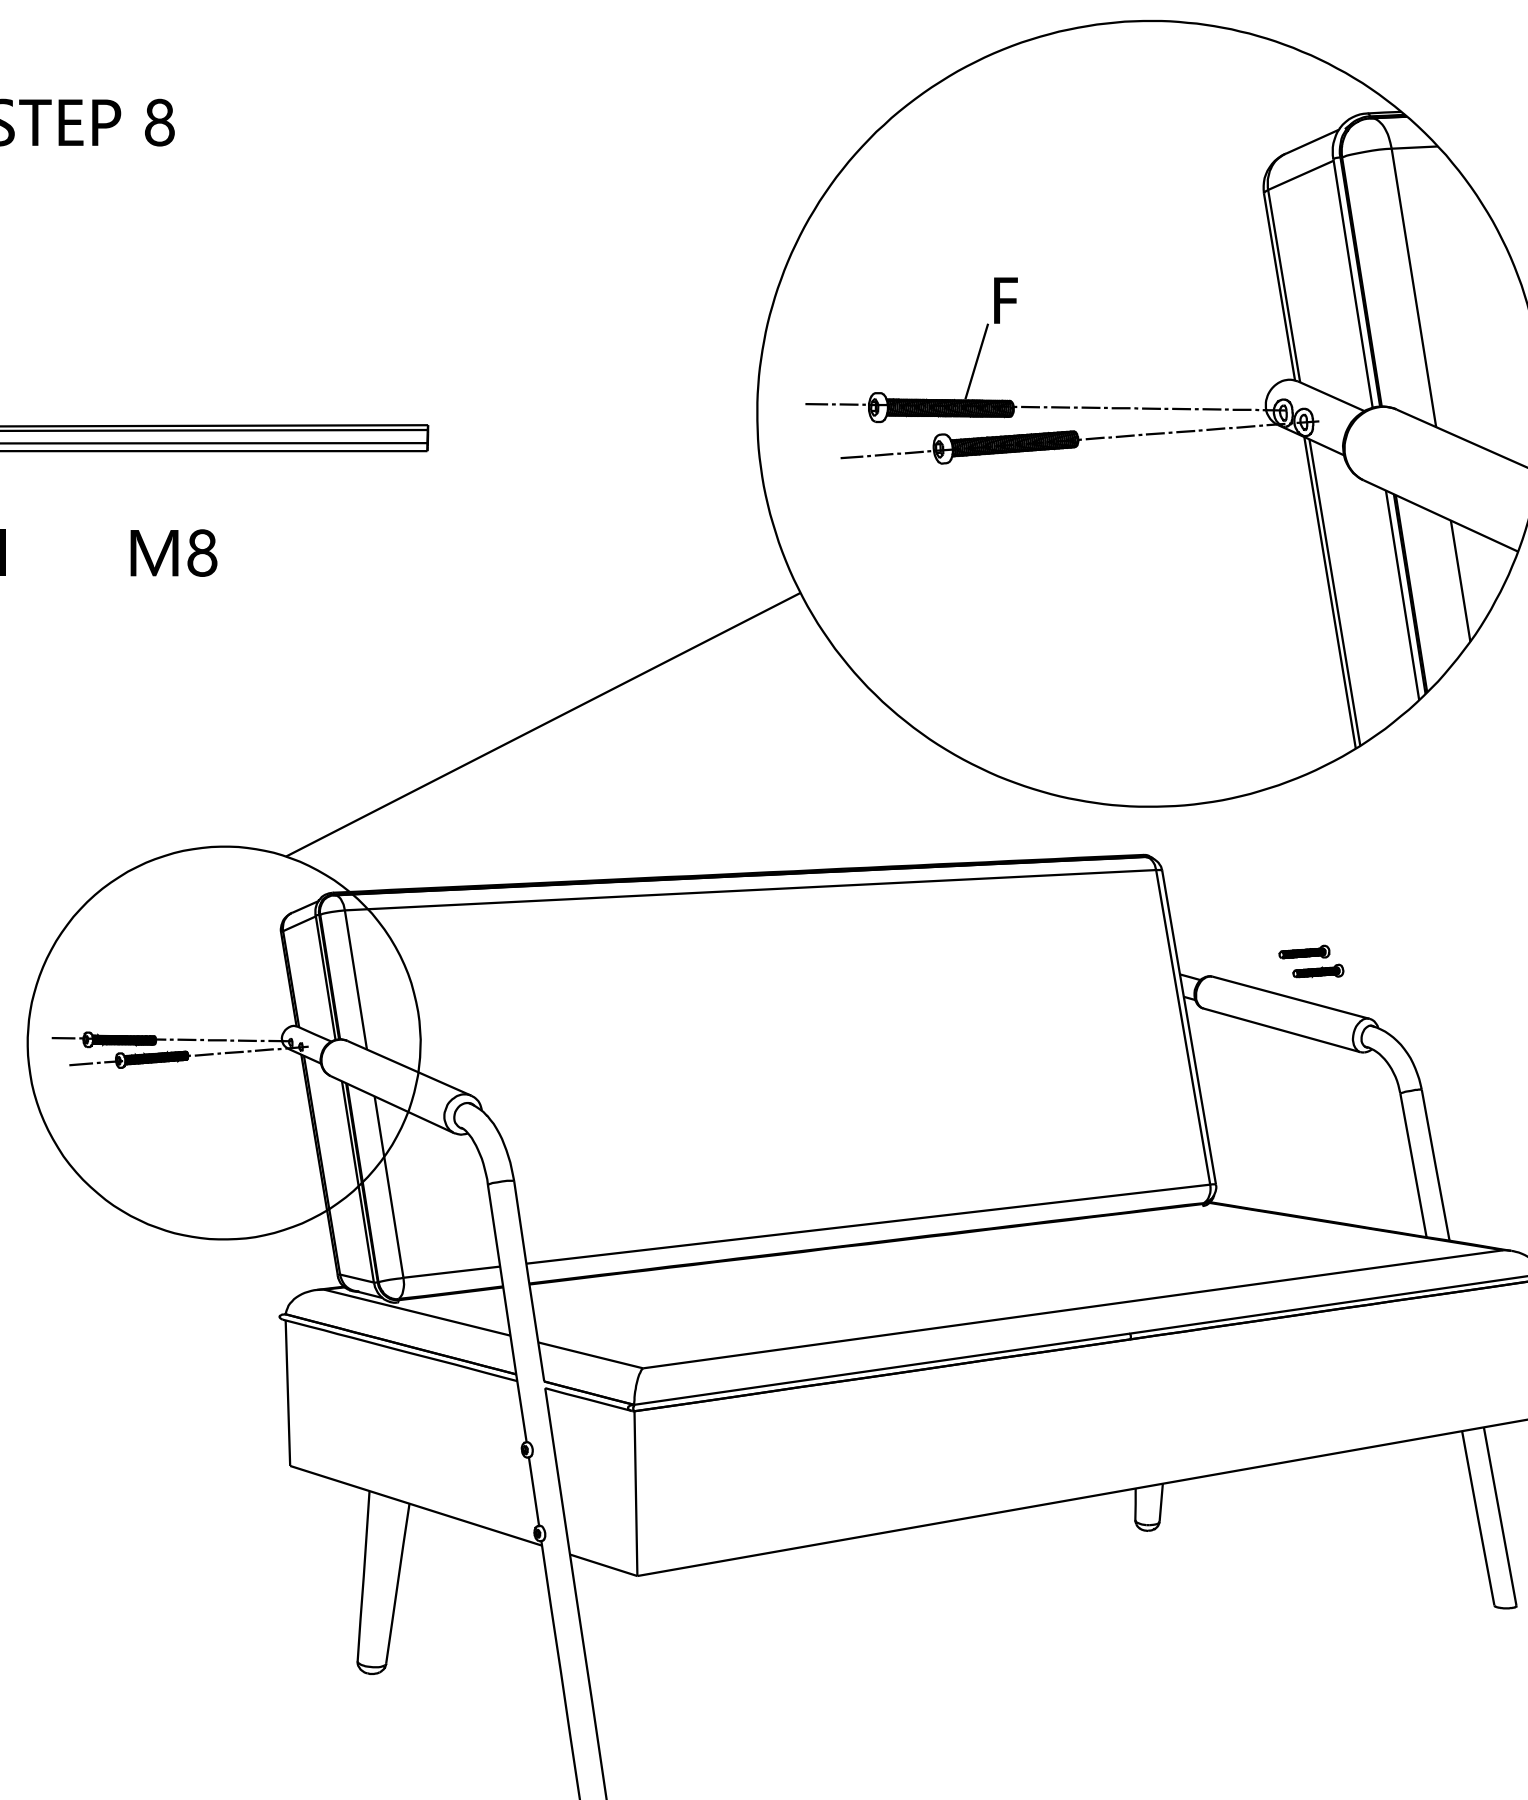

Instruction for fasten the screws:

1. Insert M8 screws (F) to locate the holes on legs (C) and back rest (A).
2. Fasten the all M8 screws (F) with allen key M8 (I), including screws in STEP 5.

STEP 7

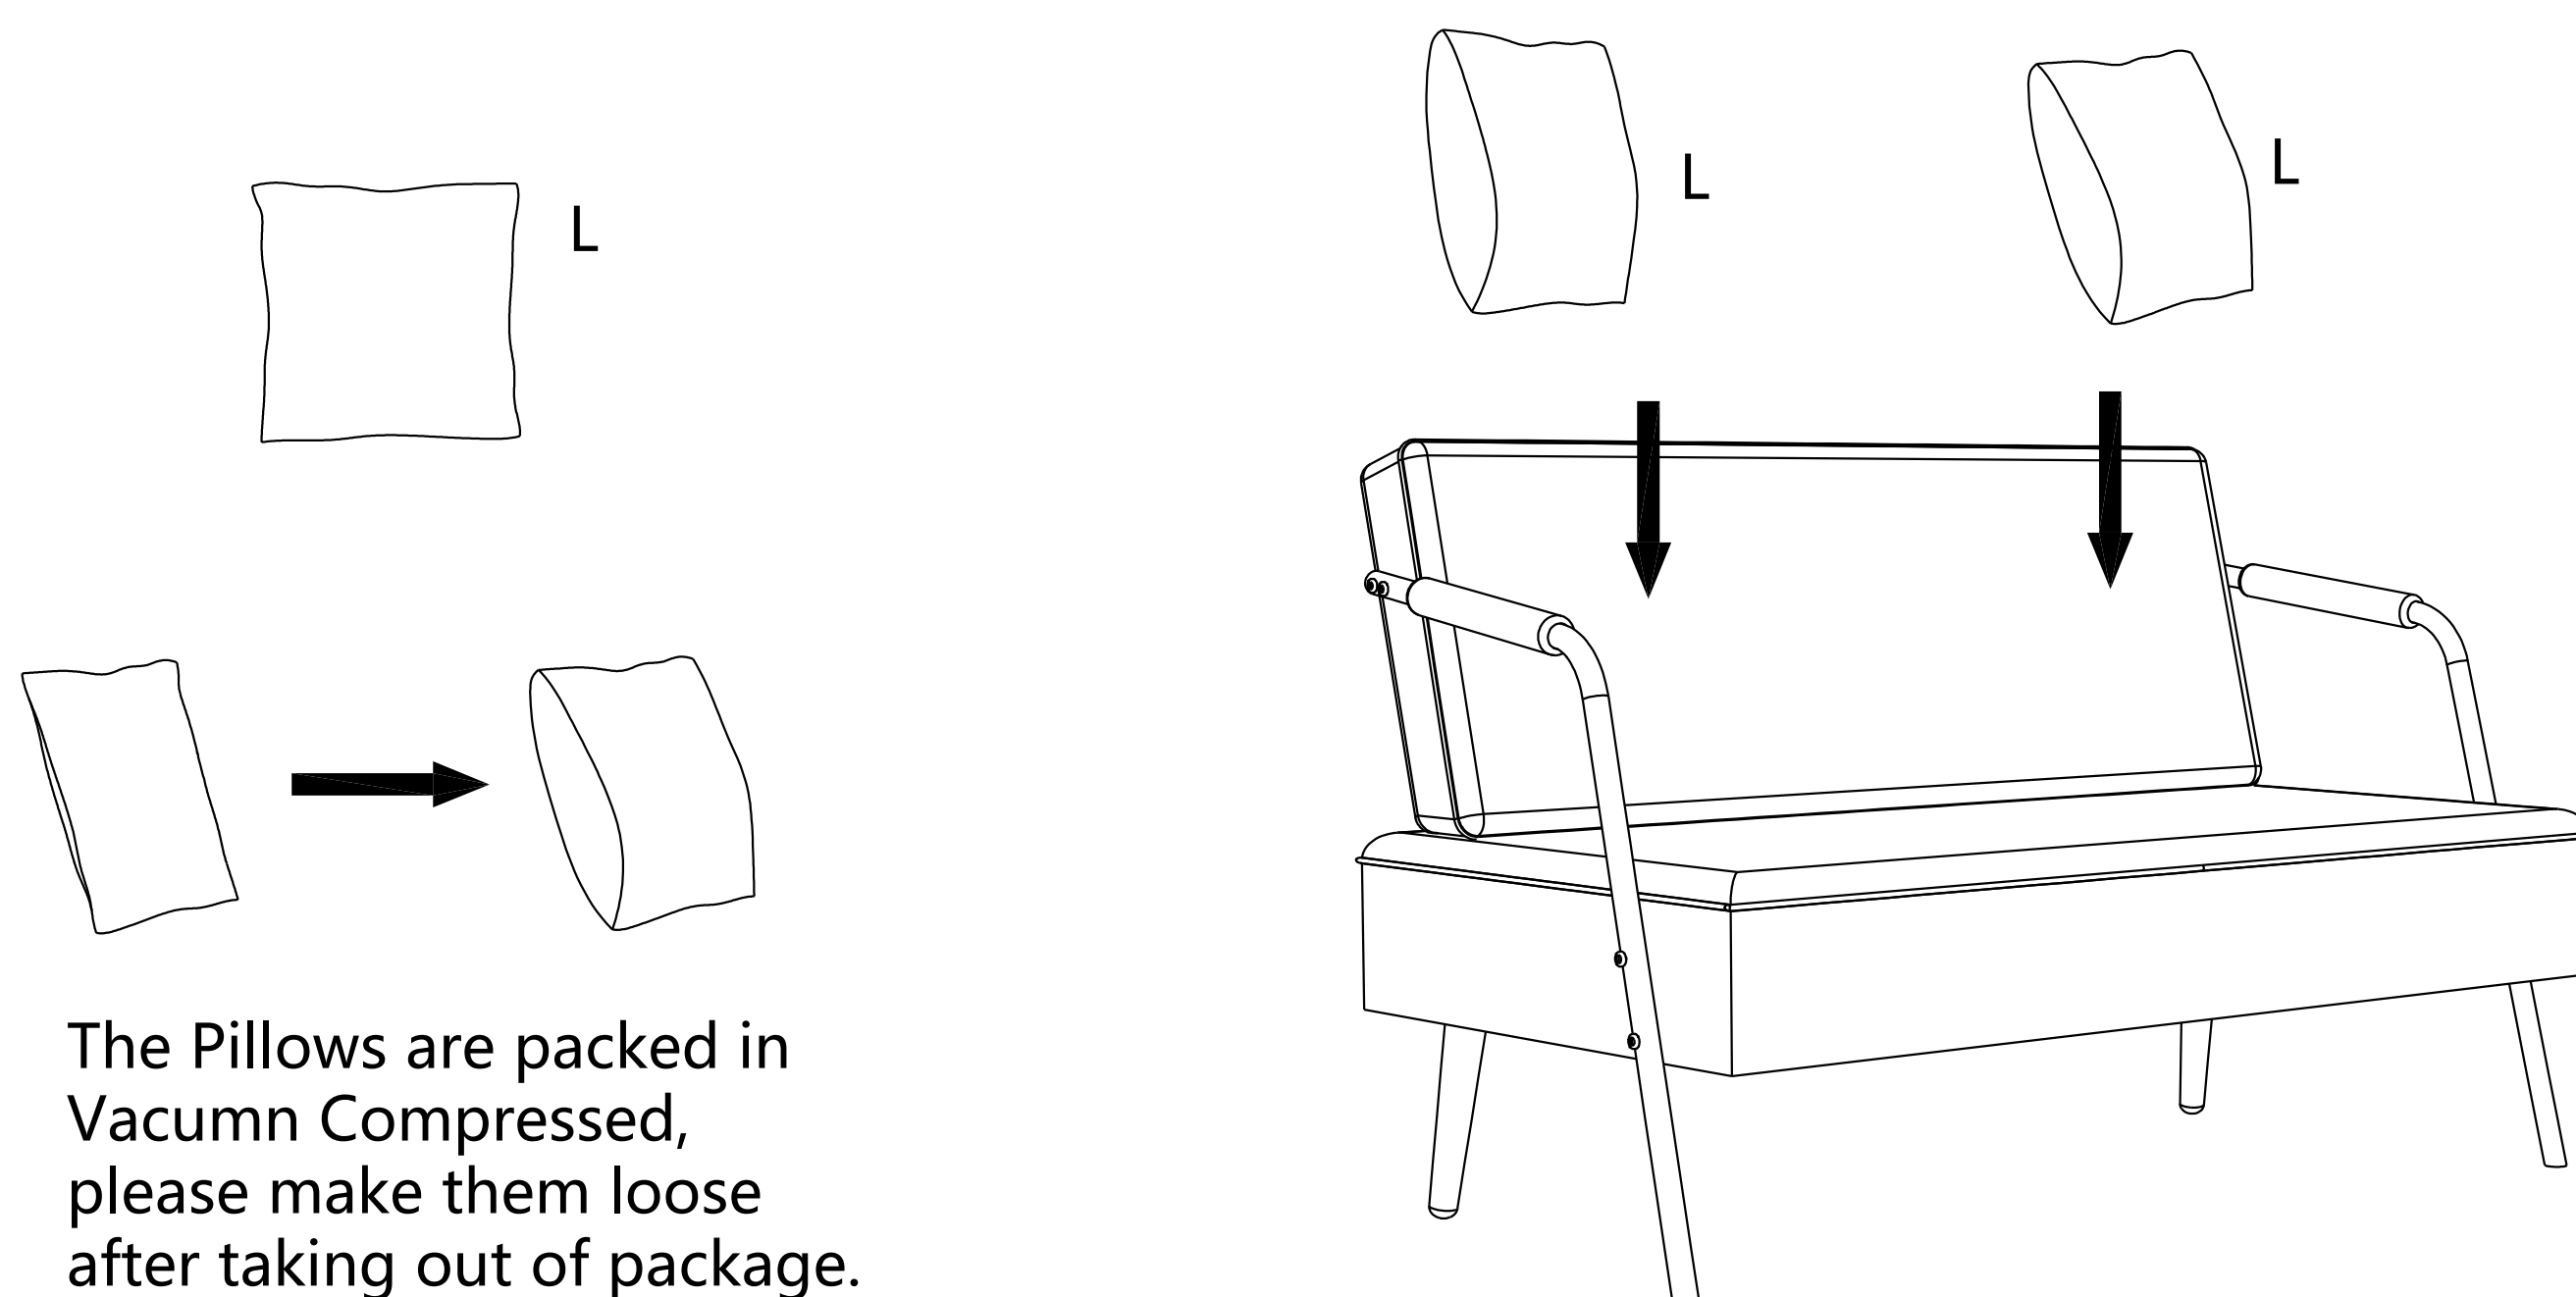

The Pillows are packed in Vacuum Compressed, please make them loose after taking out of package.