


SOFA

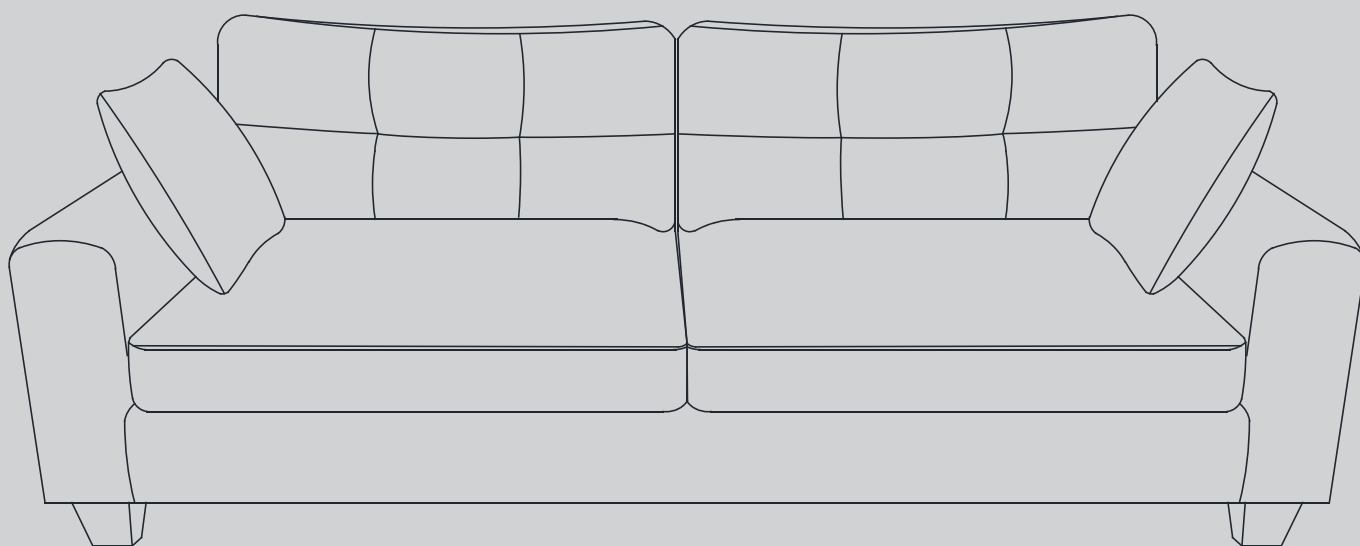

Helpful Hints

1.Regarding the recovery time of the compressed sofa:

It will recover to 95% of its original state about **72 hours**.

Please wait patiently for its amazing full recovery.



2. Different lighting conditions and different display devices may cause color differences. We hope you understand.

Customer Service

Returning and shipping large furniture items can be difficult, so we kindly request that you contact us if you have any questions. We will provide professional customer service solutions.

PART LIST & HARDWARE



1

<p>A Left armrest</p>  <p>1PC</p>	<p>B Right armrest</p>  <p>1PC</p>	<p>C Left back frame</p>  <p>1PC</p>	<p>D Right back frame</p>  <p>1PC</p>	<p>E Front Board E</p>  <p>1PC</p>
<p>F Front board F</p>  <p>1PC</p>	<p>G Seat board</p>  <p>2PCS</p>	<p>H Back fabric</p>  <p>1PC</p>	<p>I Wooden strip</p>  <p>4PCS</p>	<p>J Seat cushion</p>  <p>2PCS</p>
<p>K Back cushion</p>  <p>2PCS</p>	<p>L Pillow</p>  <p>2PCS</p>	<p>M Left iron strip</p>  <p>1PC</p>	<p>N Right iron strip</p>  <p>1PC</p>	<p>Y Seat front cover</p>  <p>1PC</p>
<p>P Middle foot</p>  <p>1PC</p>	<p>Q Supporting feet</p>  <p>4PCS</p>	<p>R Gasket</p>  <p>4PCS</p>	<p>S M6*16mm Bolt</p>  <p>8PCS</p>	<p>X Plug</p>  <p>1PC</p>
<p>U M6*45mm Bolt</p>  <p>10PCS</p>	<p>V Washer</p>  <p>8PCS</p>	<p>W Alley key</p>  <p>1PC</p>	<p>A1 Back board A1</p>  <p>1PC</p>	<p>A2 Back board A2</p>  <p>1PC</p>
<p>Z Connect iron</p>  <p>2PCS</p>				





Assembly Instructions

1


Sept 1: Assemble the sofa seat frame according to the above steps. Please make sure that the screws are 80% tightened in this step, and when all the screws of this sofa are installed in the holes, then lock one by one to 100%.

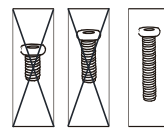

(1): Assemble the Wooden strip (I) to the Front board (E,F) and Back board (A1,A2).

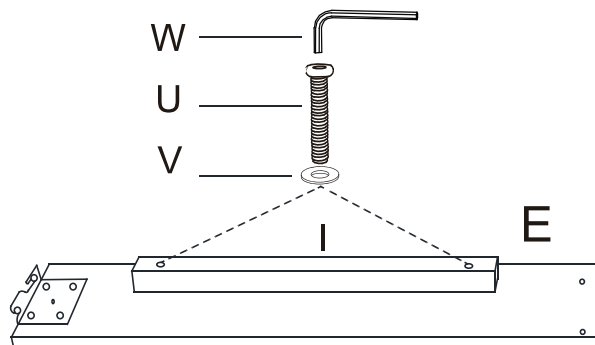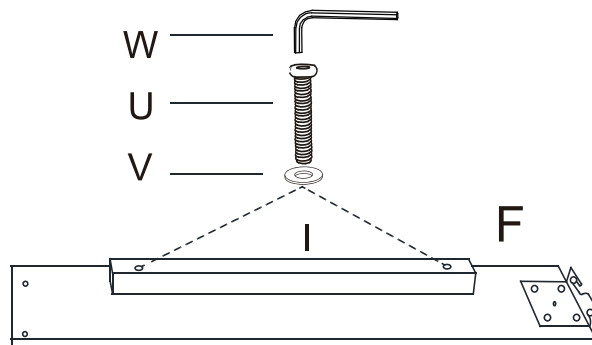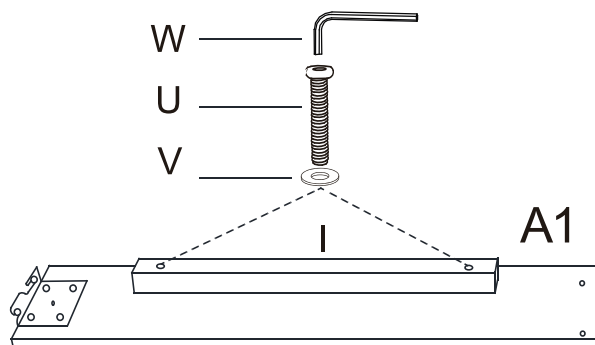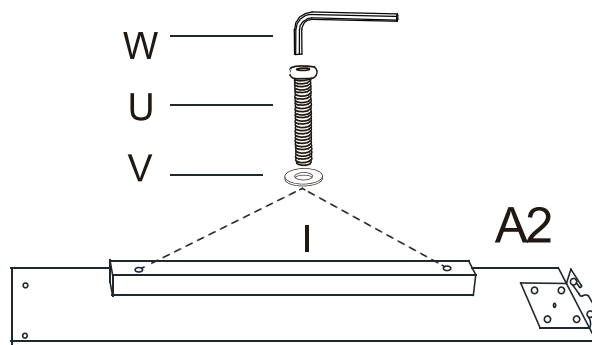



(2): Connect the Left iron strip (M) and the Right iron strip (N) with the Middle foot (P).

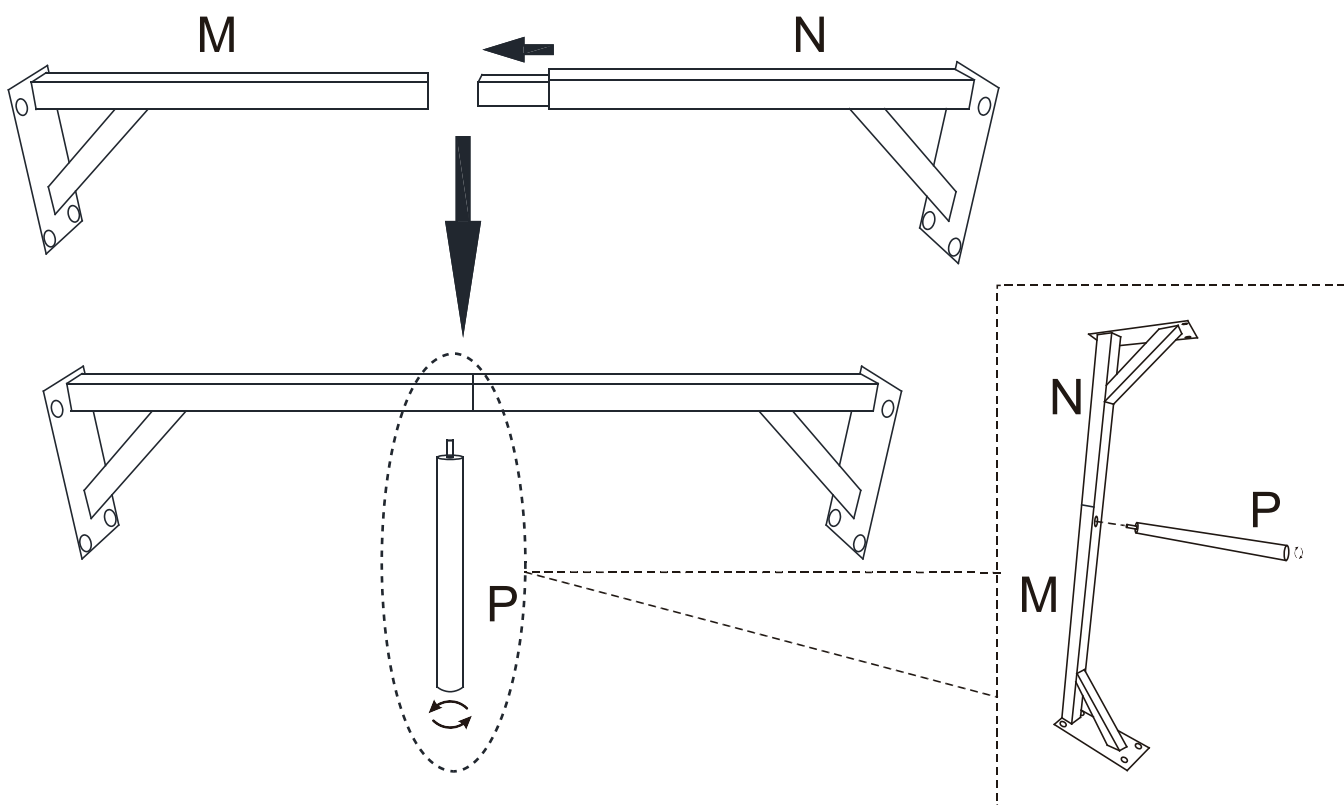


Assembly Instructions

1

(3)::Assemble the completed strip to the Front board (E,F) and Back board (A1,A2).

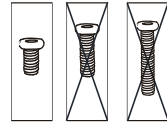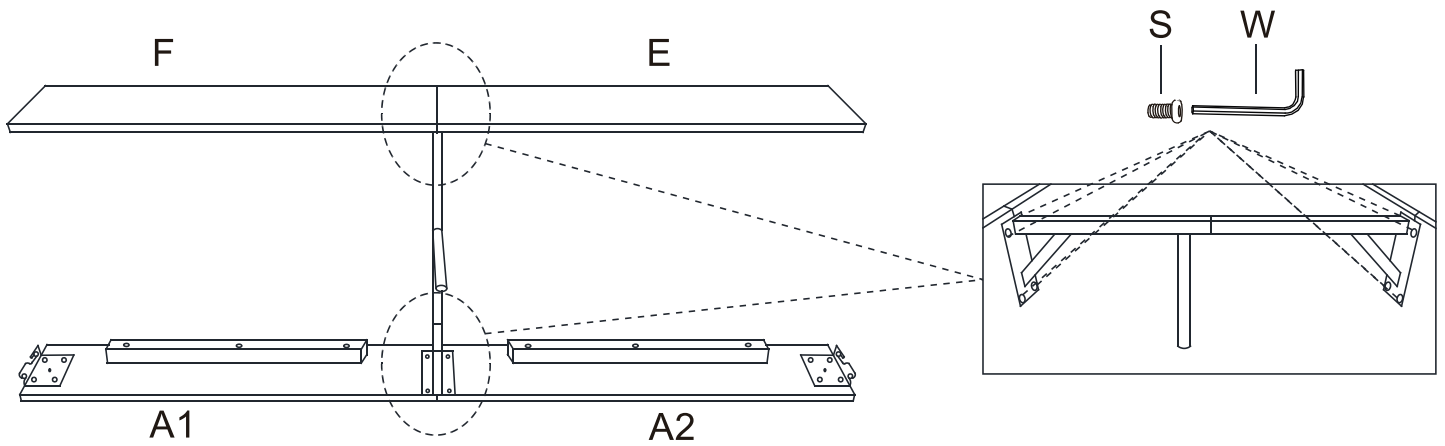


Step 2:Connect the Left armrest (A) and the Right armrest (B).

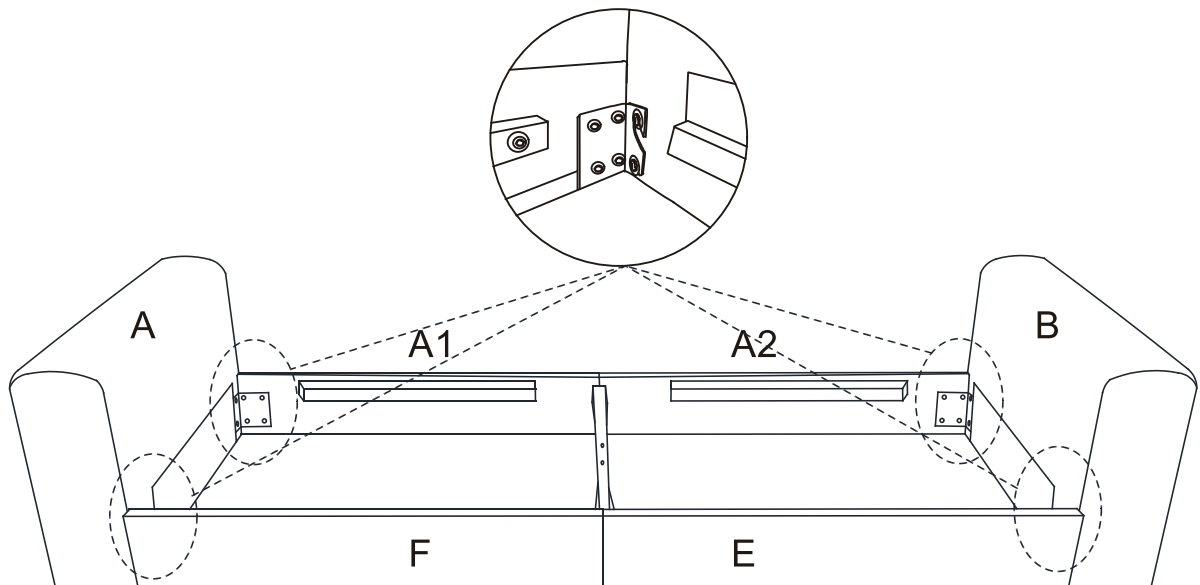


Assembly Instructions

1


Step 3:Screw the Supporting feet (Q) and Gaskets (R) like below picture.

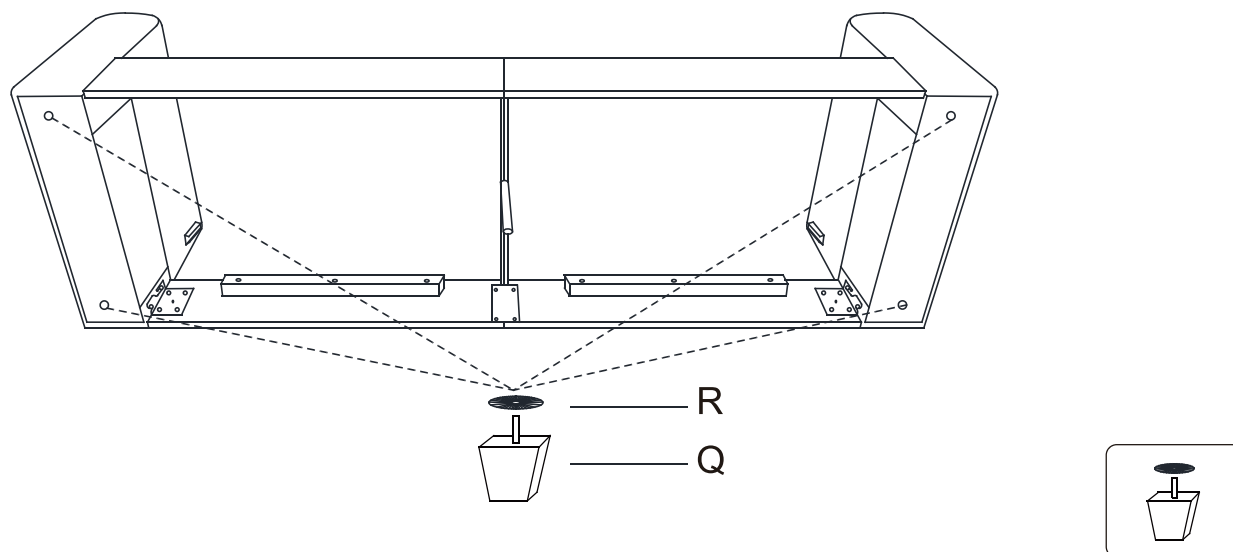

Step 4:Put the Seat board (G) to the seat frame.

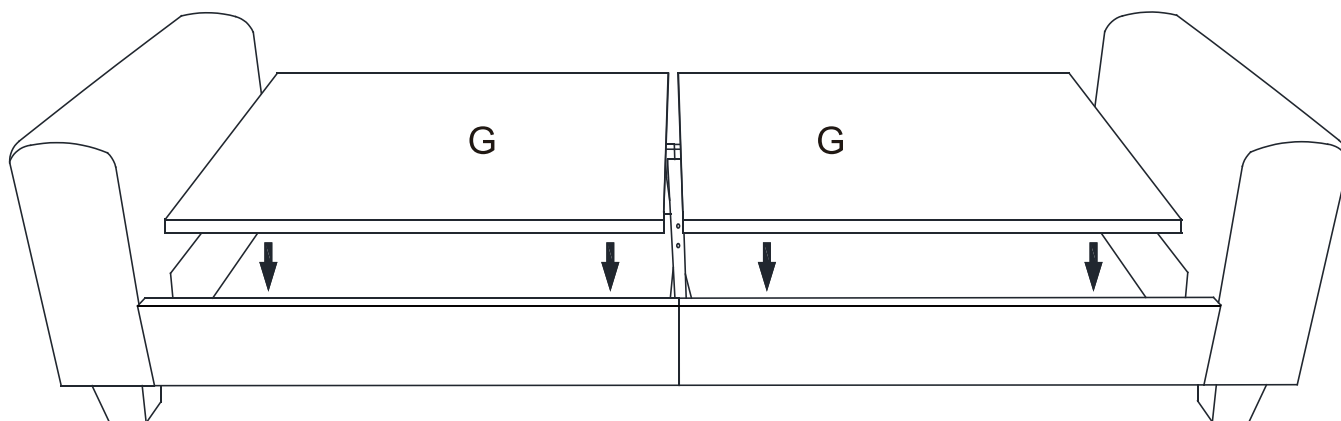


Step 5: Connect the Left back frame (C) and the Right back frame (D) by Z.

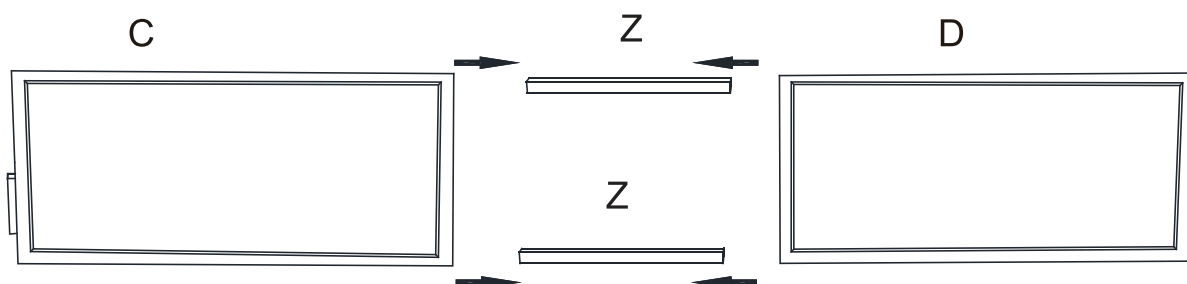


Assembly Instructions

1


Step 6: Insert the back frame to the Left armrest (A) and the Right armrest (B) and then screw it like below picture.

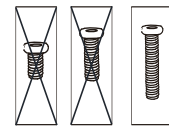

U x 2

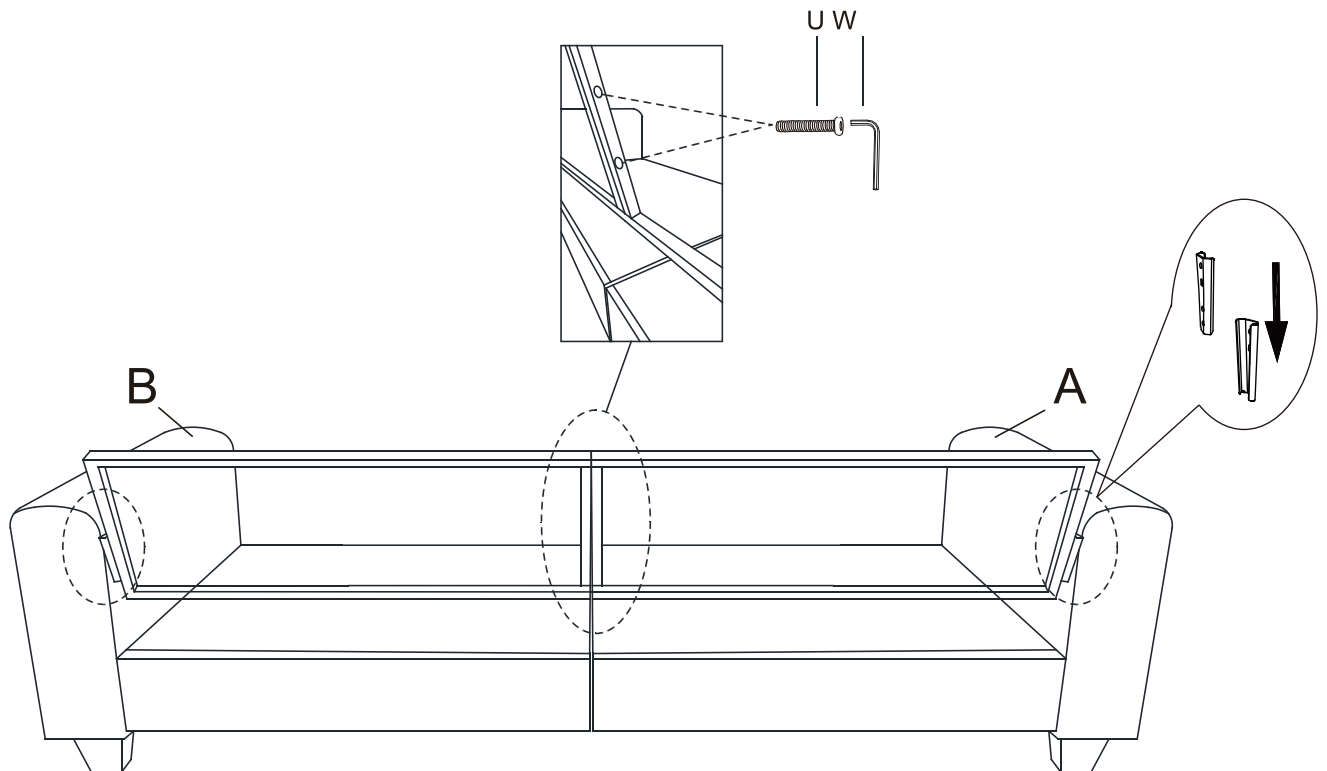


Step 7: Put the Back fabric (H) to the back frame.

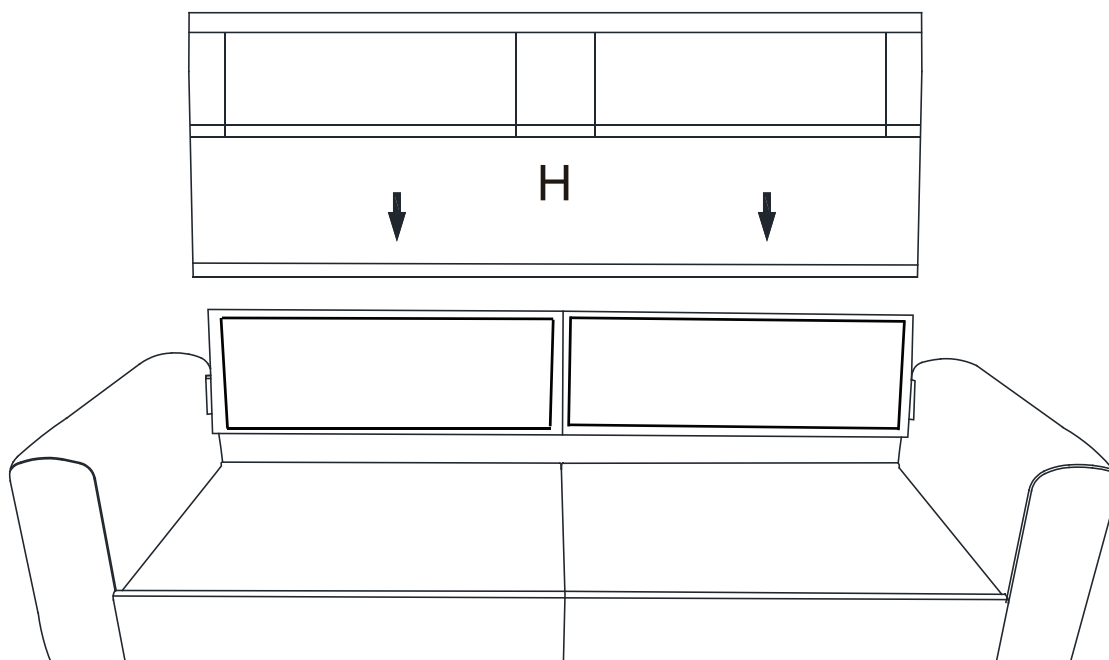

Assembly Instructions









- 1
- Step 8: Stick the Seat front cover (Y) like below picture.

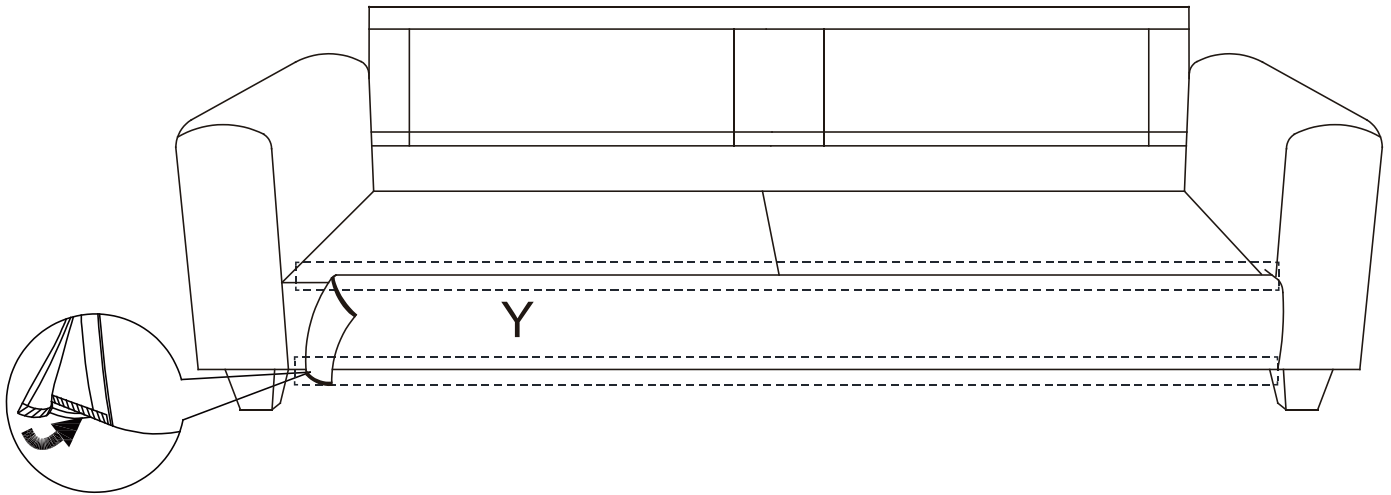

Step 9: The cushions are packaged by vacuum compression. After cutting the package, it rebounds quickly within 4 hours. If the fabric has wrinkles, it will basically disappear after standing for 72 hours.




Give them 24-72h to recover

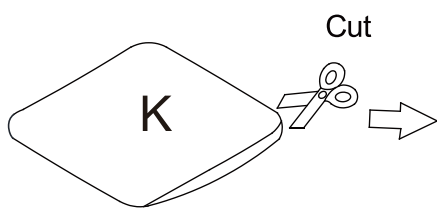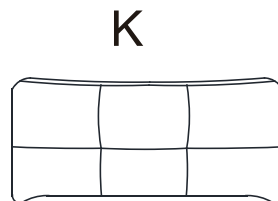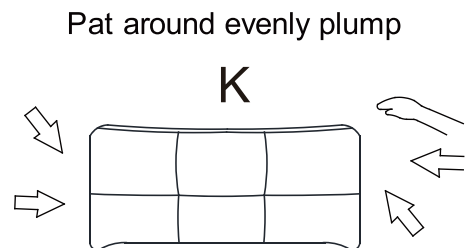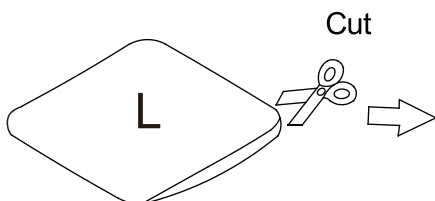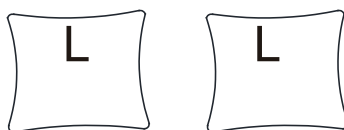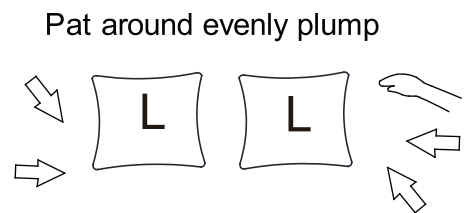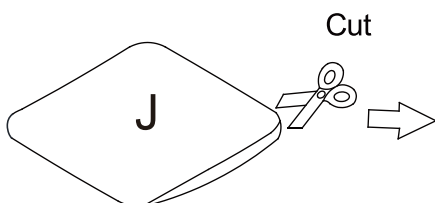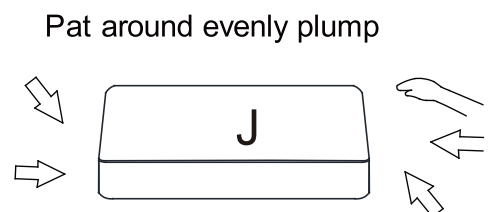

Assembly Instructions

1

Sept 10: Put all the cushions to the sofa.

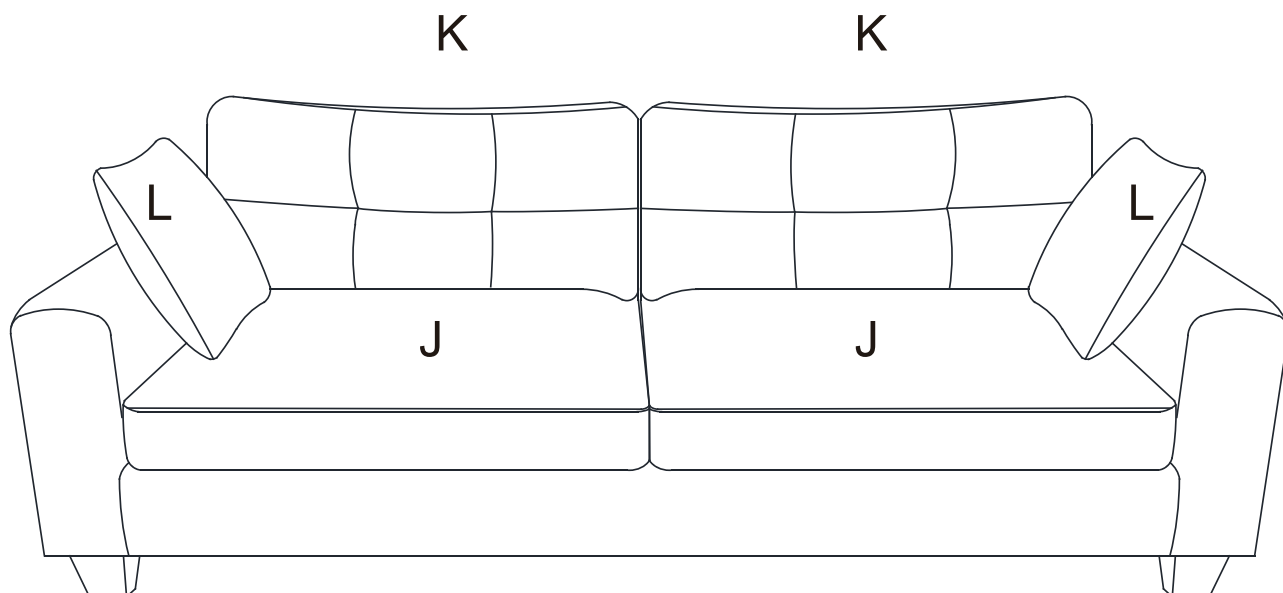

Sept 11: Connect the USB Plug (X).

