


Thank you for purchasing ! Before you start,here is some helpful advice:

- 1.We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
- 2.Owing to the size and weight of the bed, we recommed that it is assembled by two adults,on a carpeted or padded area, in the room that it is intended for.Approx assembly time:30 minutes.
- 3.Please do not use any tools other than those provided or recommended in these instructions.
- 4.Please do not throw away any of the packaging or the instruction until you have checked all the components and hardware and the furniture is fully assembled.Please ensure that the packaging is disposed of in a safe environmentally friendly way.
- 5.Assemble all components loosely until advised to tighten.Depending on use, it may be necessary to tighten the components from time to time,so please save the tools that has been provided.
- 6.Please keep all fitting out of reach of children.

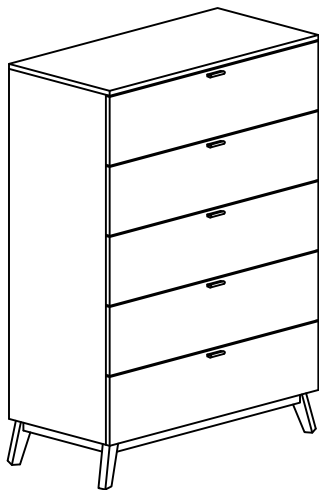


Hardware for DRAWER

|   |                                                                                     |                                |     |
|---|-------------------------------------------------------------------------------------|--------------------------------|-----|
| A |    | JCBC SCREW M6 X 70MM           | x8  |
| B |    | SPRING WASHER 1/4"             | x8  |
| C |    | FLAT WASHER 1/4"               | x8  |
| D |  | M4 ALLEN KEY (BALL SHAPE) LONG | x1  |
| E |  | HANDLE                         | x5  |
| F |  | HANDLE SCREW M4 x 22mm         | x10 |
| G |  | PROTECTION PAD                 | x4  |
| H |  | WALL SCREW M4 x 18MM           | x1  |
| I |  | WALL SCREW M4 x 50MM           | x1  |
| J |  | L- BRACKET                     | x2  |
| K |  | BELT                           | x1  |


Component :

- 1- DRAWER
- 2- LEGS

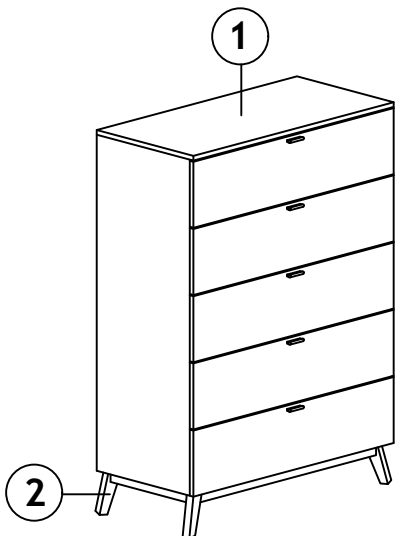

### STEP 1 :

Place **DRAWER (1)** and **Legs (2)** on a carpeted or padded area as shown. Attach **Legs (2)** into **CHEST OF FIVE DRAWER (1)** by inserting **JCBC SCREW M6 x 70mm(A)**, **Spring Washer  $\frac{1}{4}$ "(B)** and **Flat washer  $\frac{1}{4}$ " (C)**. Tighten with **M4 Allen Key (Ball Shape)Long(D)**. Then, place the **PROTECTION PAD(G)** on bottom of **Legs(2)**.

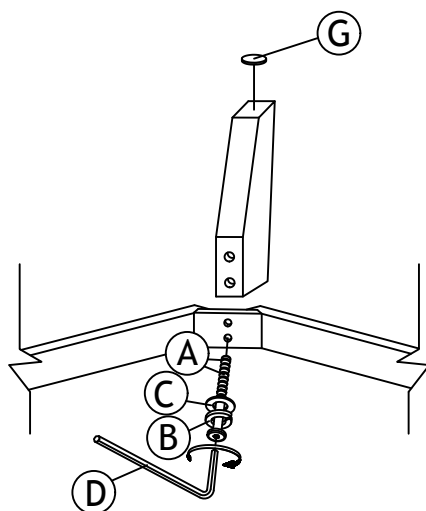


|                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                   |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
|  |  |  |  |  |
| A x 8                                                                             | B x 8                                                                             | C x 8                                                                             | D x 1                                                                             | G x 4                                                                             |

### Hardware & Tool required

### STEP 2 :

Attach **HANDLE (E)** with **DRAWER (1)** together. Then, insert **HANDLE SCREW M4 x 22mm (F)** through the **HANDLE (E)**. Tighten with **Screw Driver**.

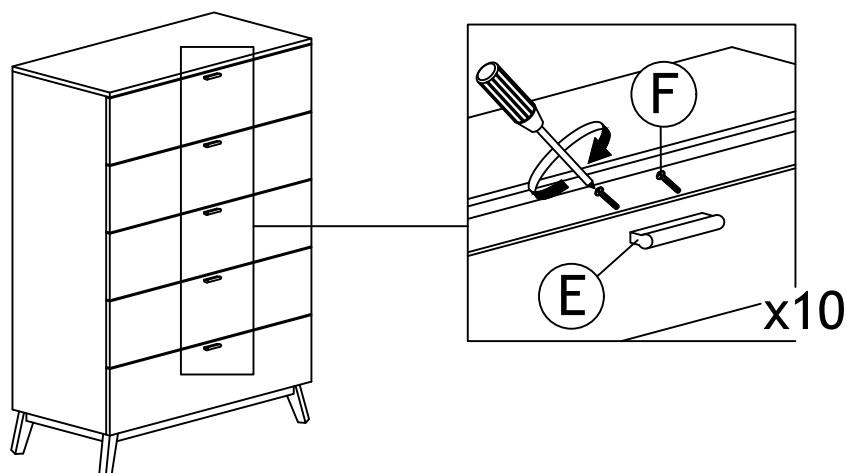


|                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |
| E x 5                                                                               | F x 10                                                                              |

### Hardware & Tool required

**STEP 3 :**


Attach one of the L-Bracket(J) to wall by inserting WALL SCREW M4 x 50MM(I). Then attach another L-Bracket(J) to back side center of DRAWER by inserting WALL SCREW M4 x 18MM(H).

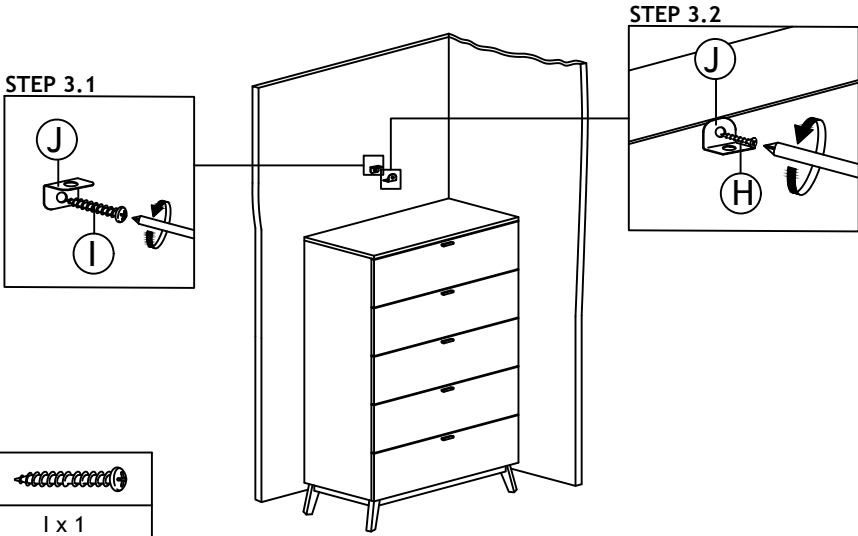


**Hardware & Tool required**

**STEP 4 :**

Attach the two L-BRACKET(J) with the BELT(K).

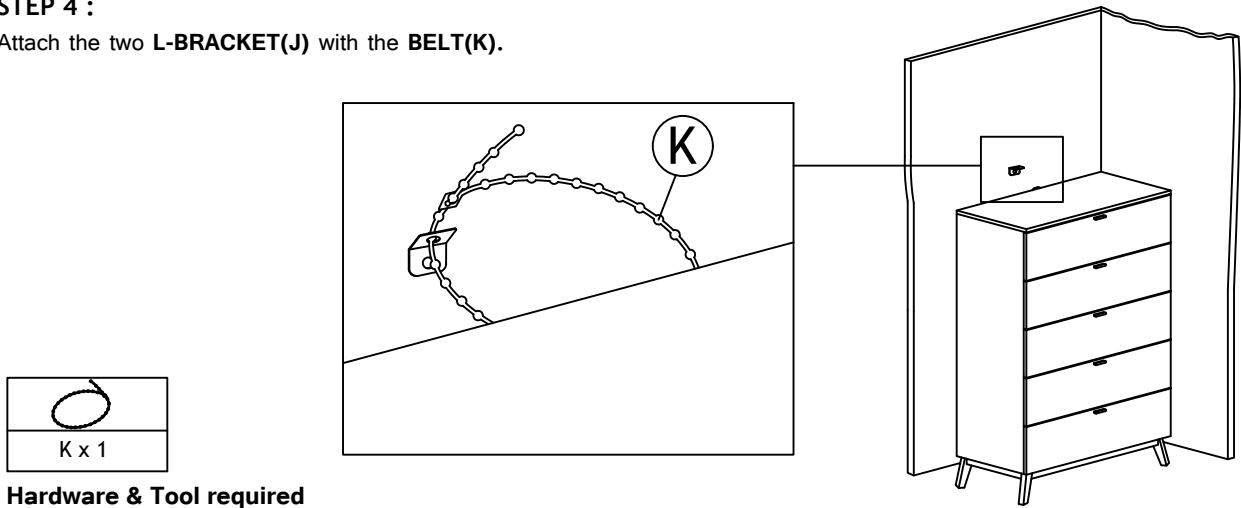

**Hardware & Tool required**

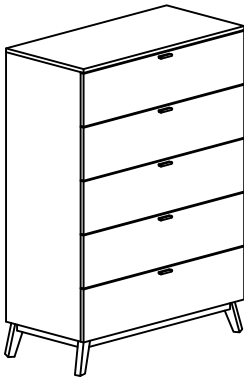

Assembly is complete,the DRAWER is ready to be enjoyed now!