

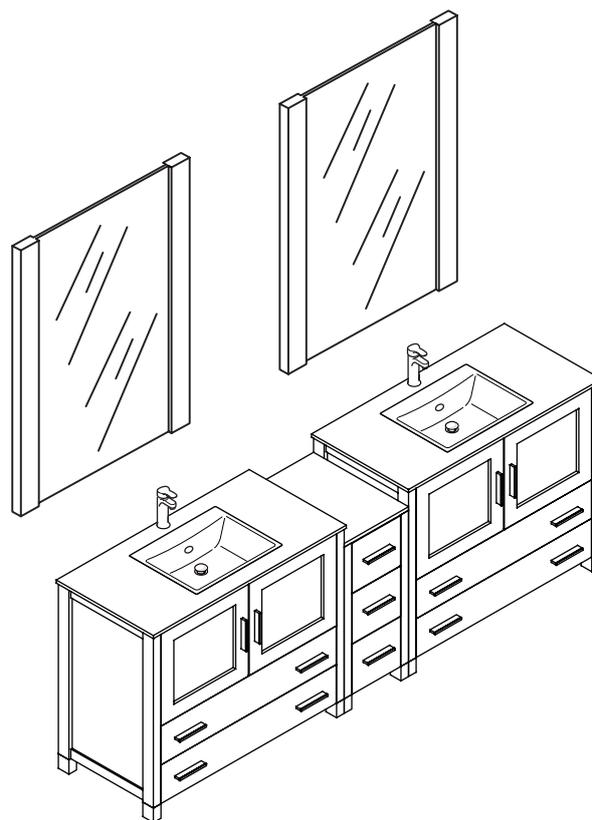



Mirror 2PCS

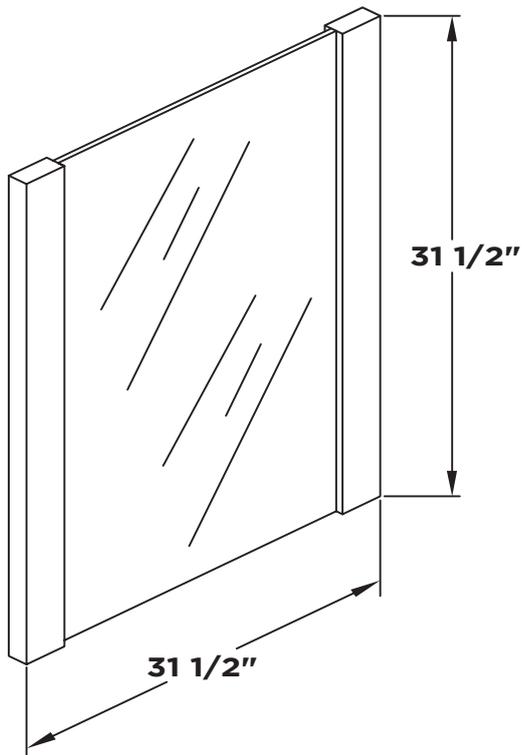

Vanity Front 2PCS

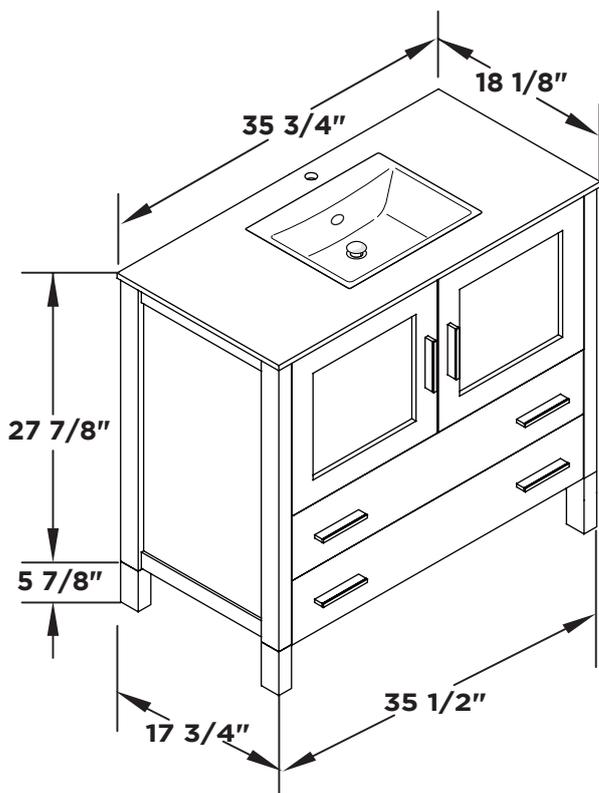


Vanity Back 2PCS

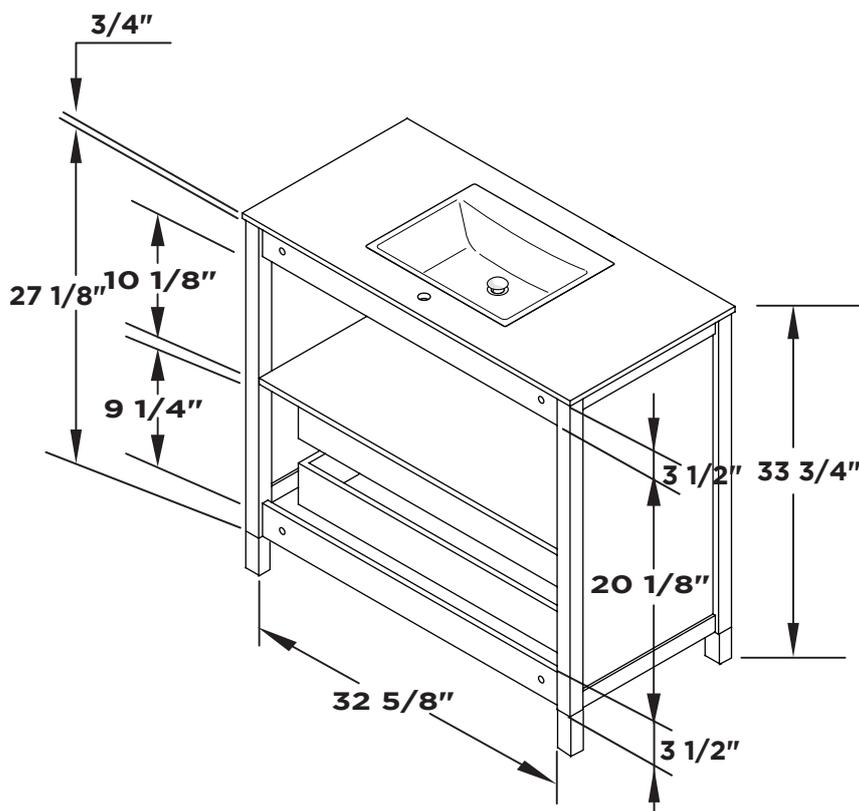


TOOLS FOR ASSEMBLY




Side Cabinet Front

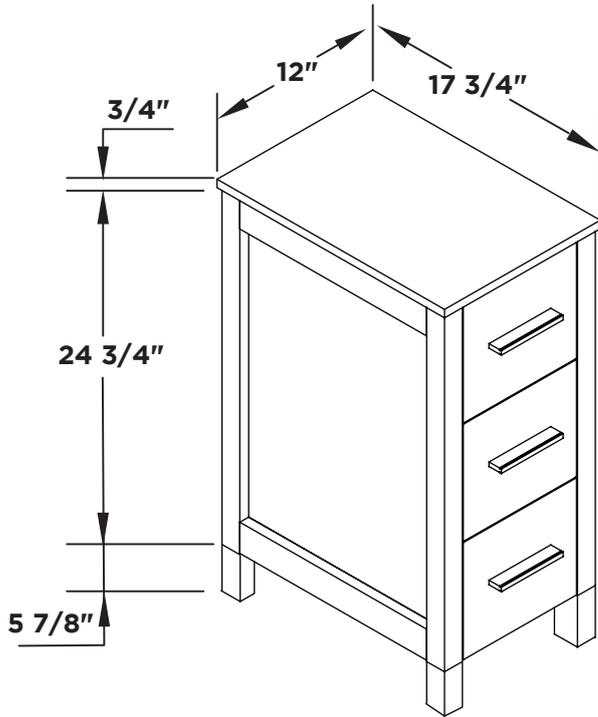

Side Cabinet Back

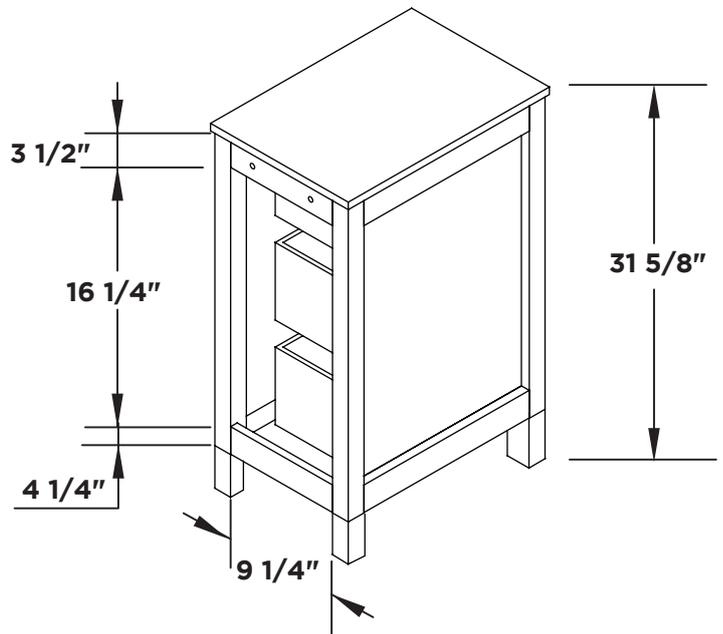


MIRROR INSTALLATION

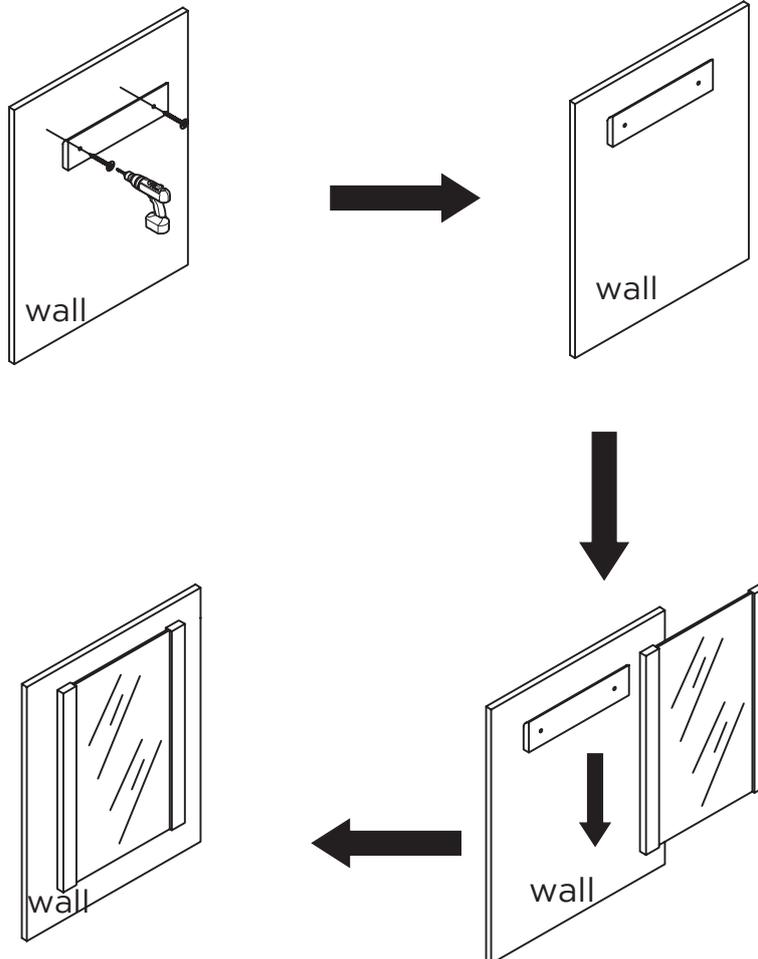


DRAWER REMOVAL & INSTALLATION



REMOVAL

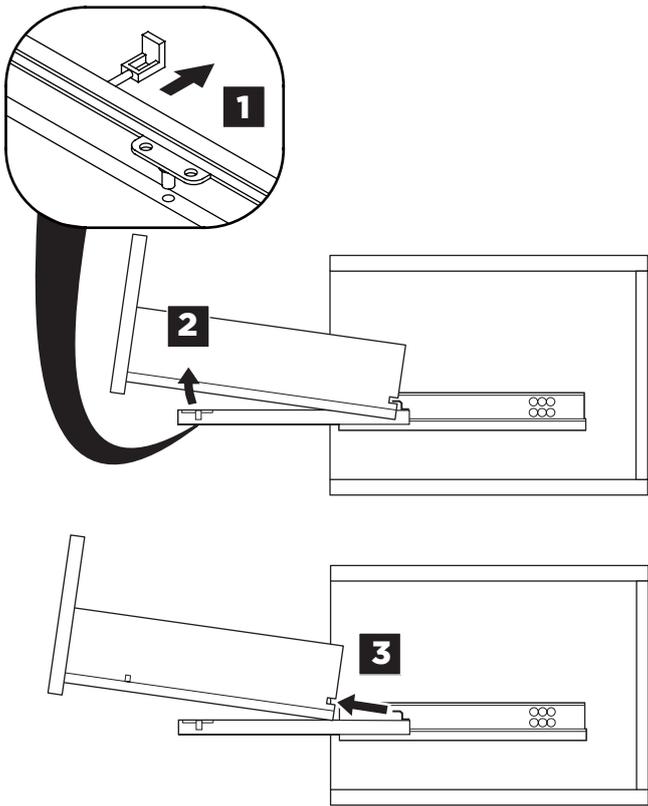

INSTALLATION

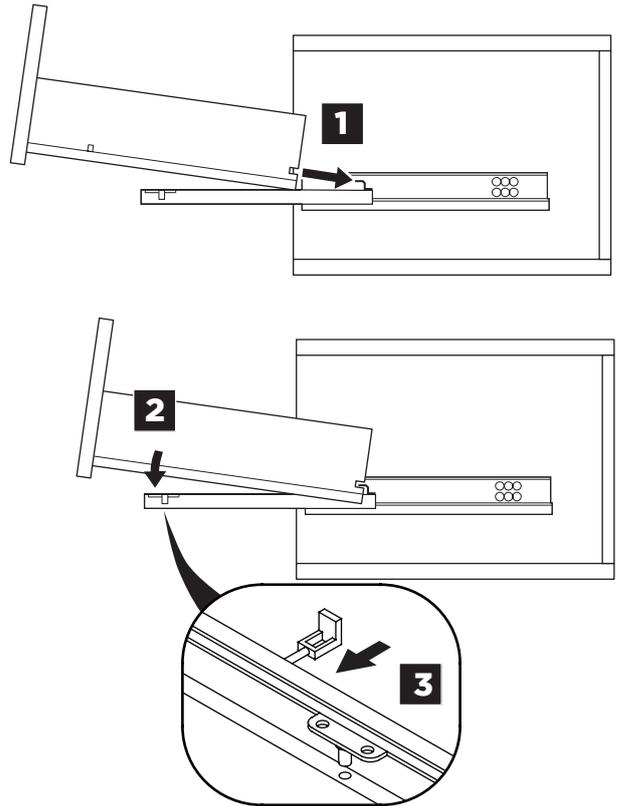

1 Install leg

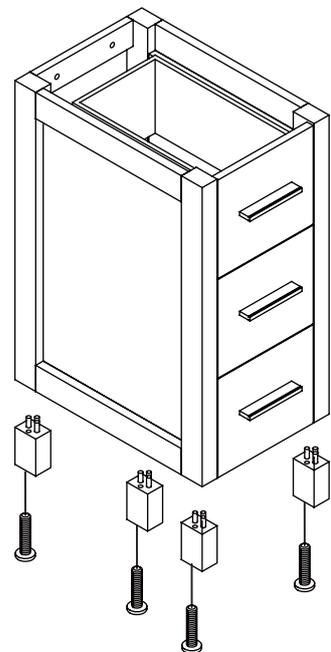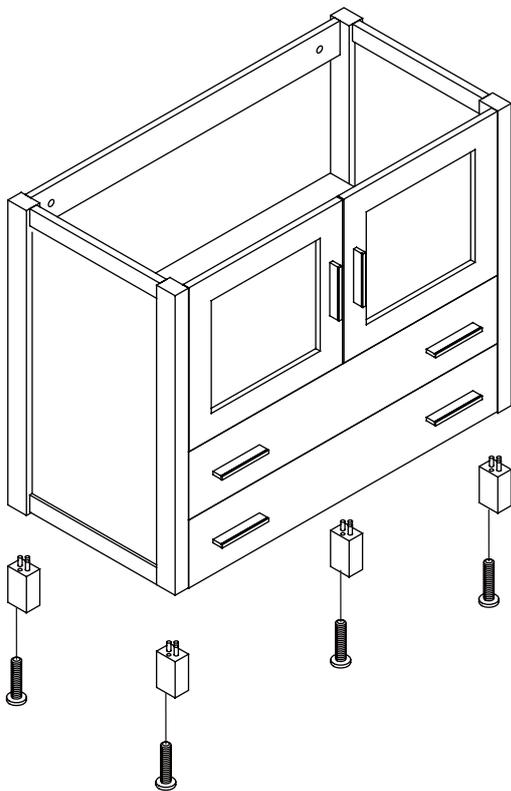


2

Remove side cabinet drawer

3


Install side cabinet

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

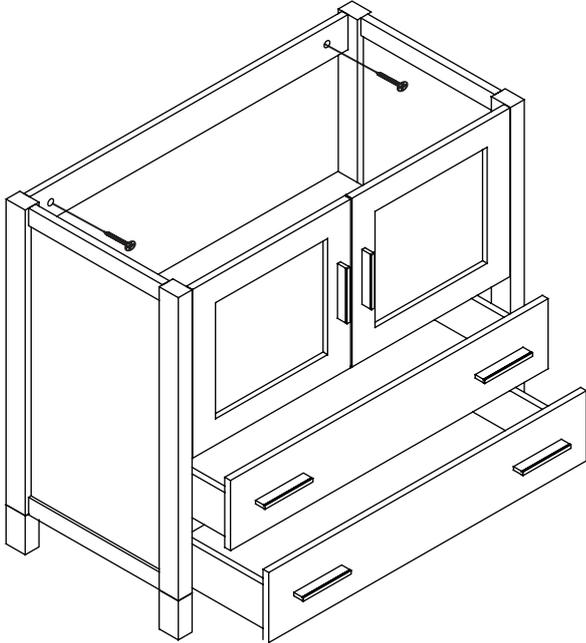

4

Install top panel

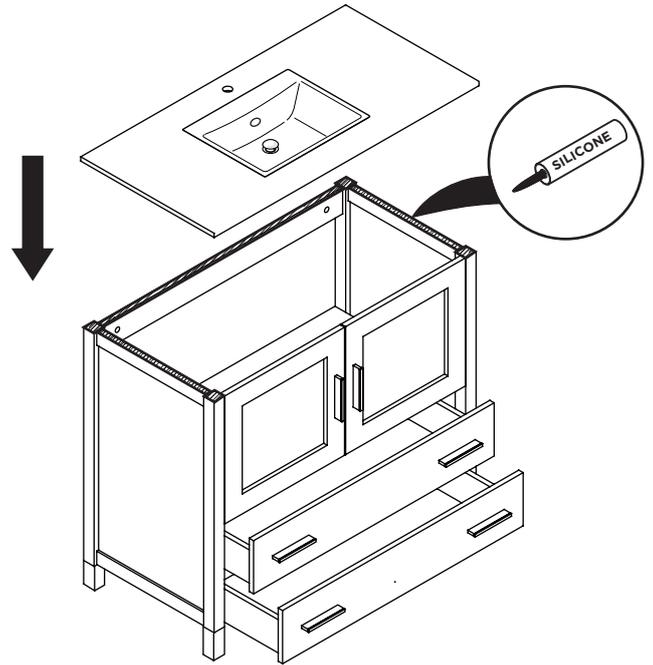


5

Remove side cabinet drawer


6


Install side cabinet

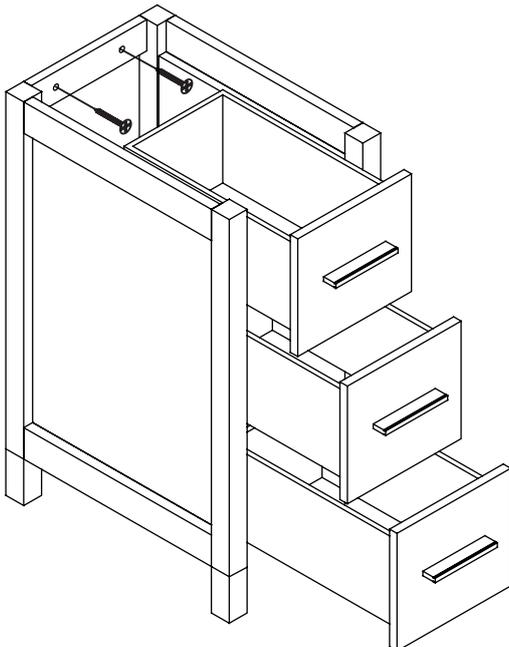


7

Install side cabinet top panel

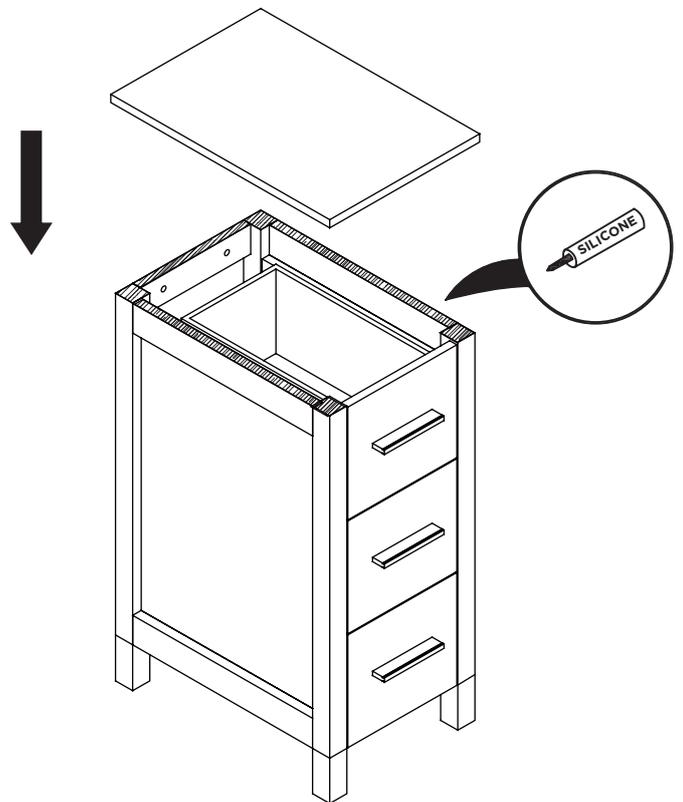

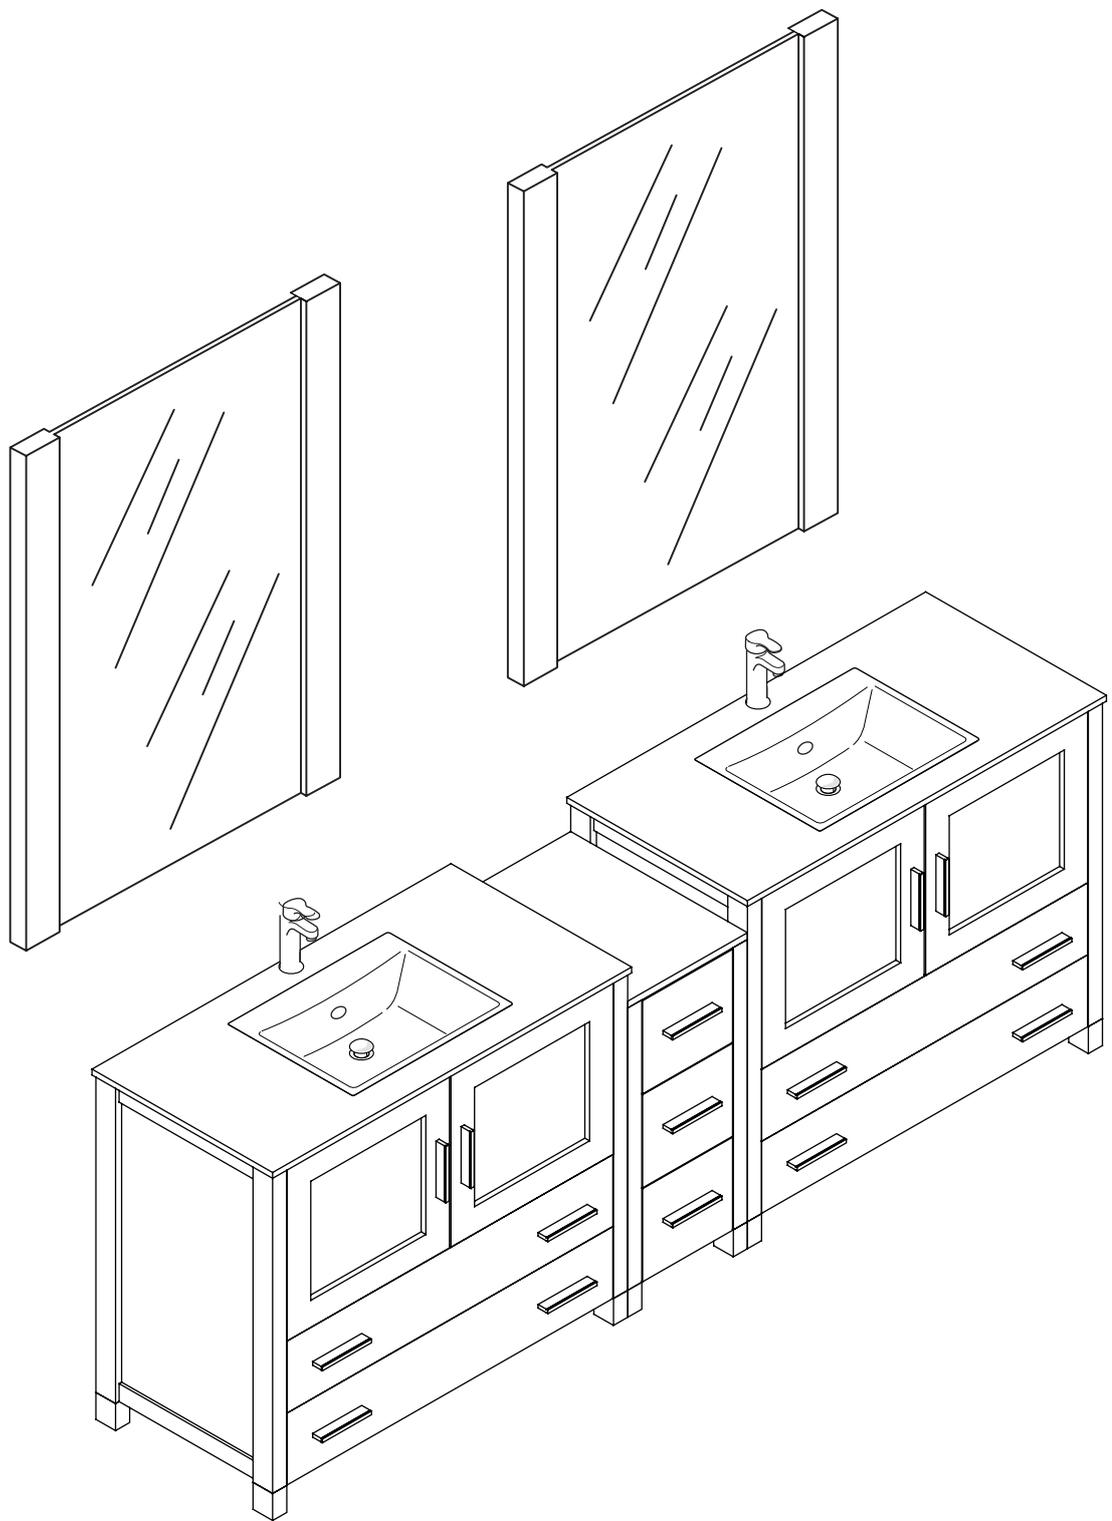


P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS

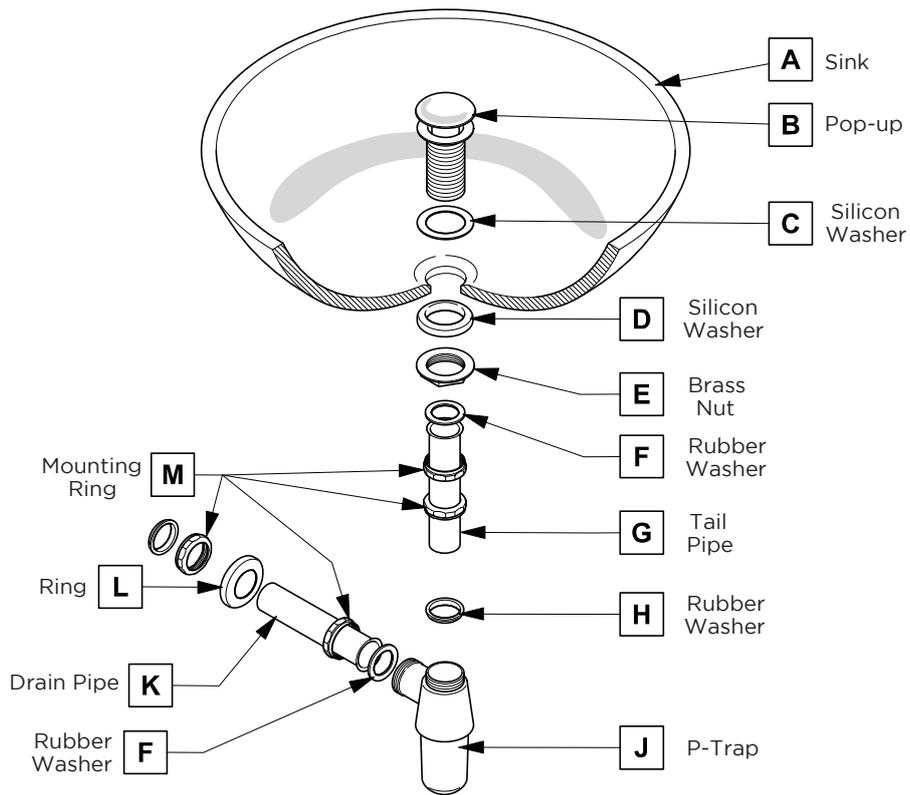

POP-UP INSTALLATION

FOR SINKS WITHOUT OVERFLOW

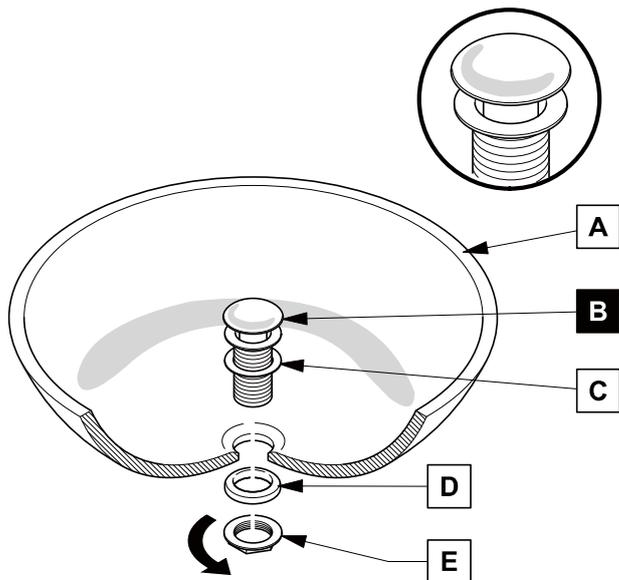

OR

FOR SINKS WITH OVERFLOW

