


PLEASE DO NOT RETURN TO STORE

User Manual
ASSEMBLY INSTRUCTION
TV 40173-2



Please do not return this product to the retailer!
We are able to assist you in ANY way!










If you find that you have any trouble with assembly or
missing or damaged parts please contact the seller.








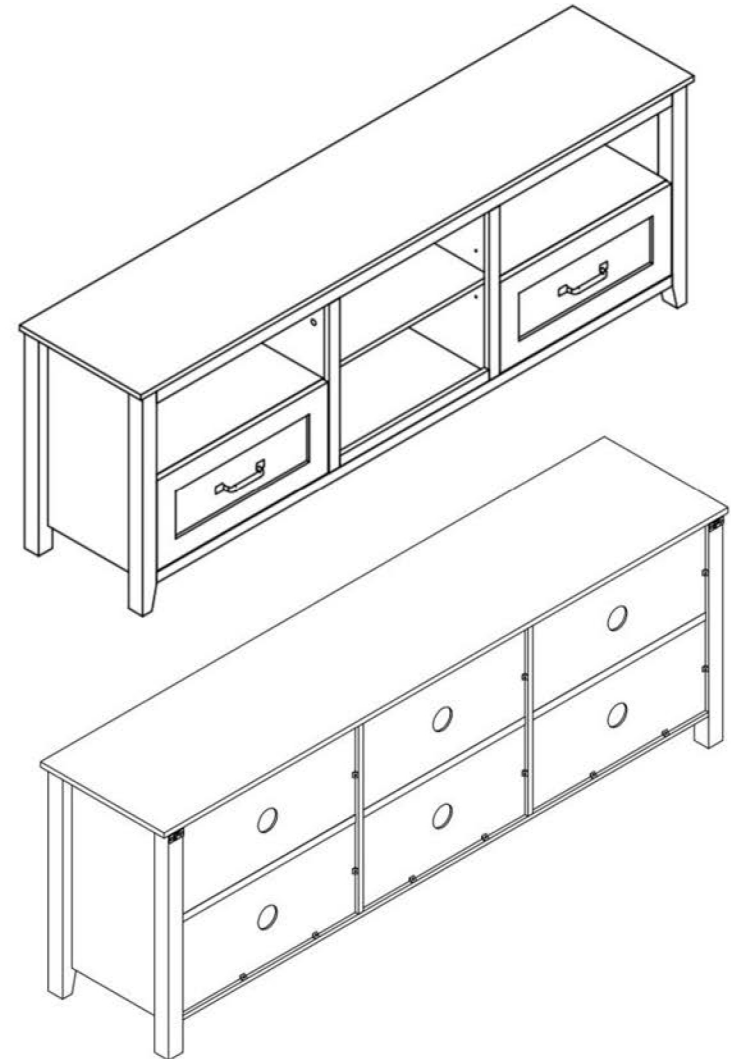


QR code for product installation video







Parts List


NO.	Drawing	Dimension	QTY
1		515*365*15mm	1
2		515*365*15mm	1
3		446*46*15mm	1
4		446*46*15mm	1
6		1660*380*30mm	1
7		545*290*15mm	1
8		545*290*15mm	1
9		615*45*45mm	1
10		615*45*45mm	1
11		615*45*45mm	1
12		615*45*45mm	1

NO.	Drawing	Dimension	QTY
13		555*346*15mm	2
14		1660*69*15mm	1
15		565*262*4mm	4
16		530*262*4mm	2
17		1780*390*15mm	1
18		300*140*15mm	2
19		300*140*15mm	2
20		551*253*18mm	2
21		500*140*15mm	2
22		510*294*4mm	2
23		518*344*15mm	1


Hardware Fitting

NO.	Drawing	QTY
A		56
B		56
C		4
D	 3.5*14mm	24
E	 8*40mm	12
F	 7*38mm	2
G	 38*80mm	2
H	 L=555mm	2
I	 L=520mm	1
J		24
K	 3.0*14mm	24


NO.	Drawing	QTY
L	 3.5*35mm 3.5*14mm	2
M	 3.5*35mm	12
N		2
O	 4*12mm	4
P	 5*14mm	4
	 4mm	1
		48

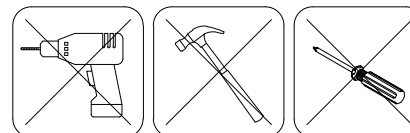

Split Graph

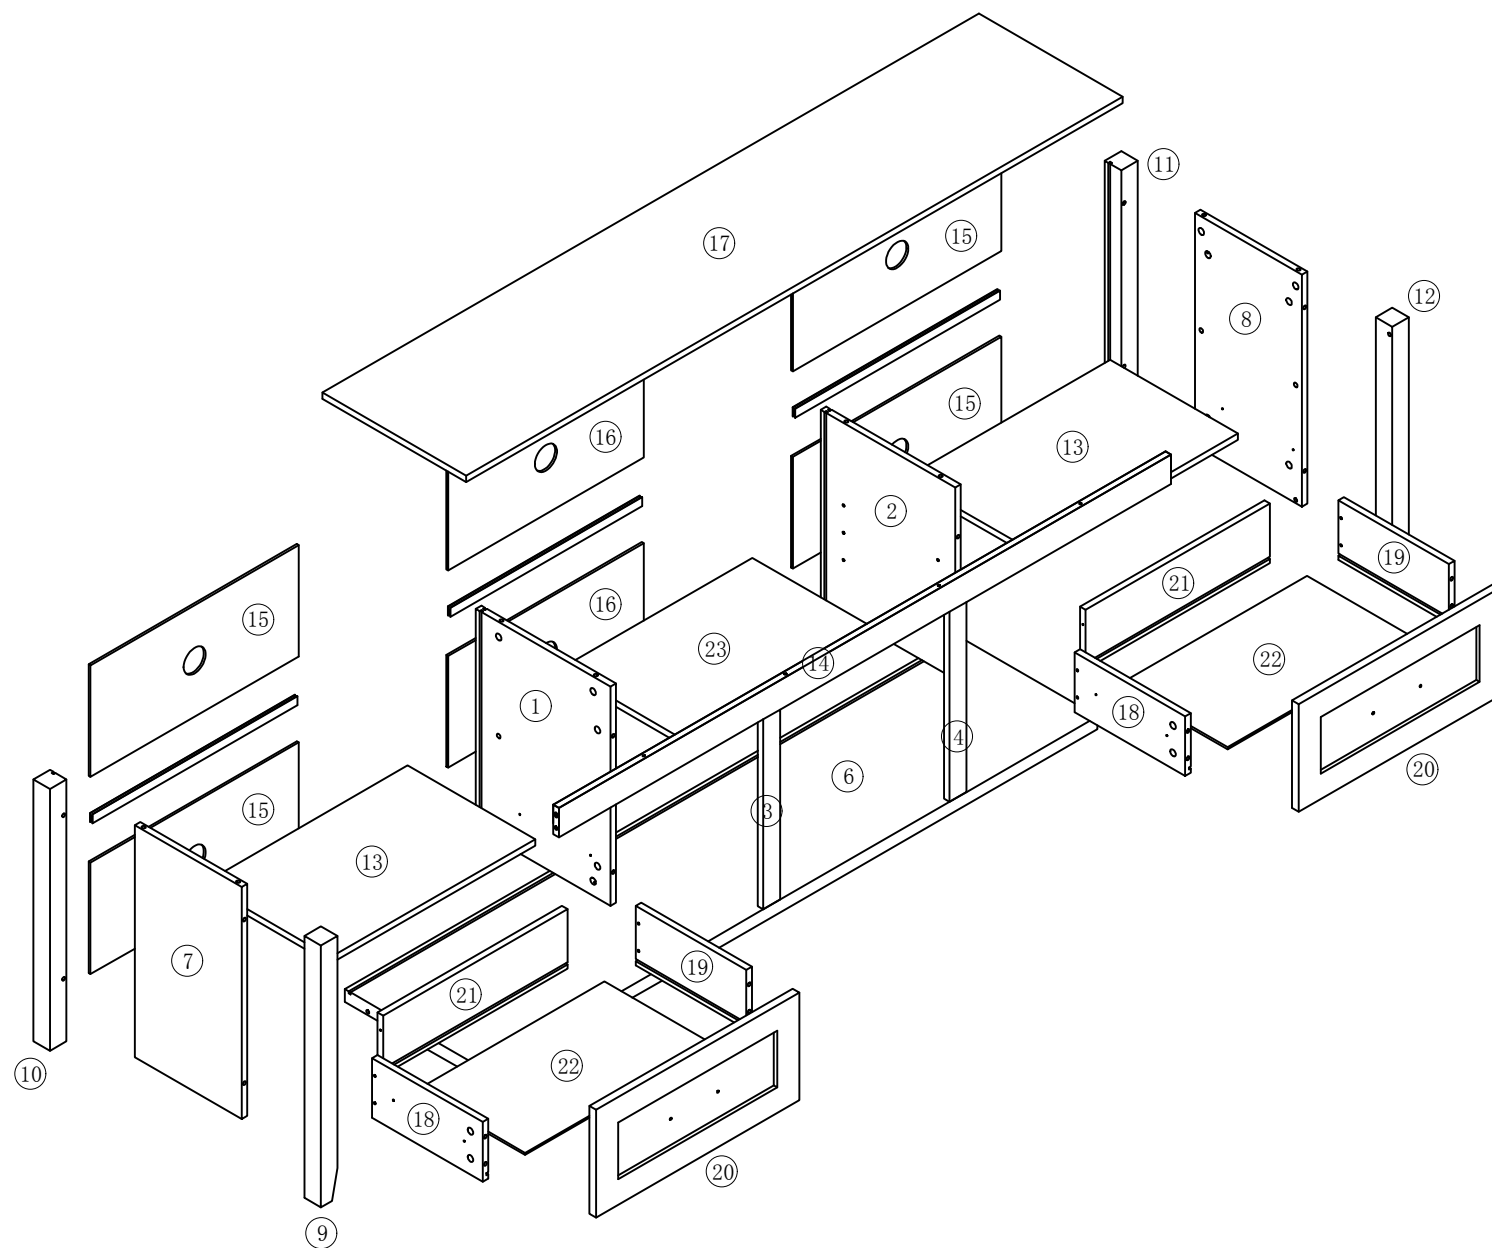


Cam Coupling Using Methods

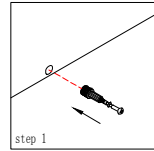


Step1.

Connect the cam coupling A as directed in the assembly instructions using hand.

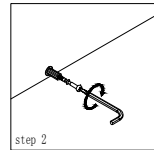


Step2.

Screw the cam coupling A as directed in the assembly instructions.

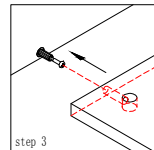


Step3.

Push the cam coupling A into the entry hole.

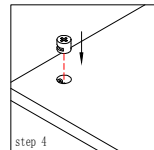


Step4.

Insert the cam coupling B as shown in the instructions.

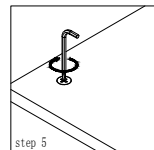


Step5.

Turn the cam coupling B clockwise with a screwdriver

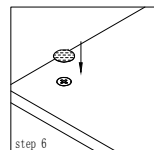

Step6.


Put on Beautycam.

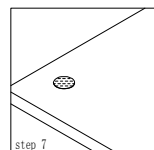

Step7.


Finished.

You should feel a click when the camlock is locked in place.
The joint is now secure.

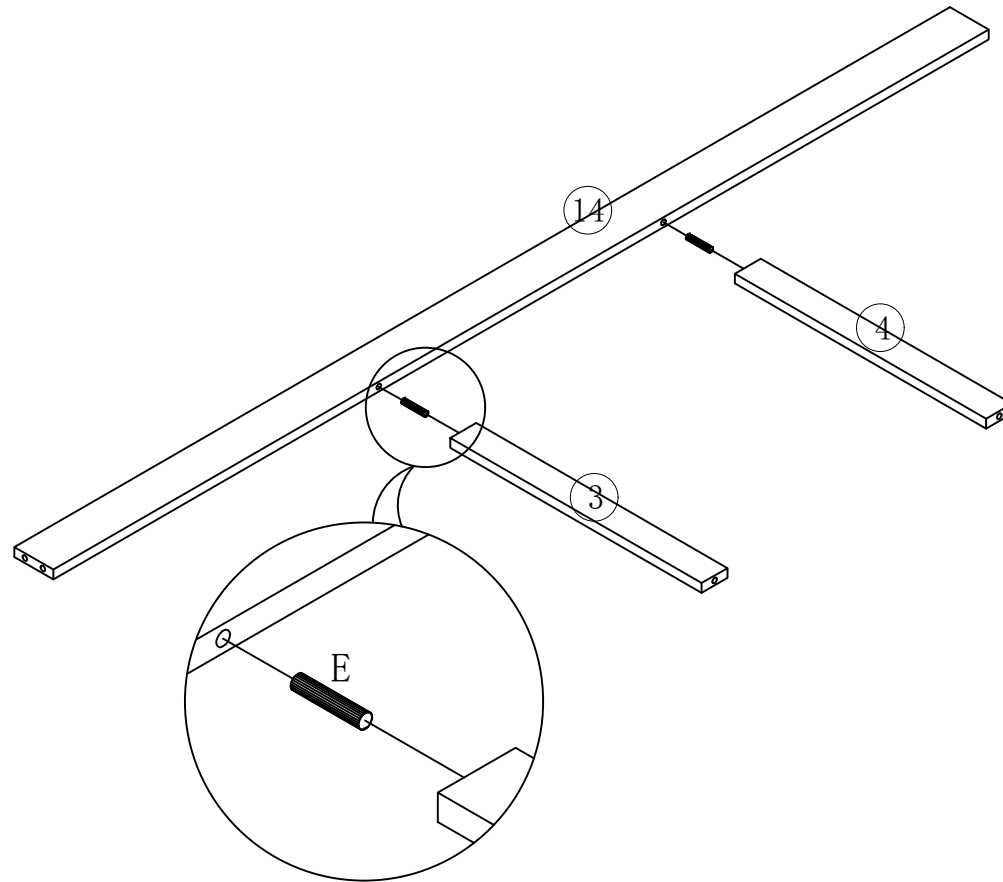


3		1
4		1
14		1

E		*2
---	--	----

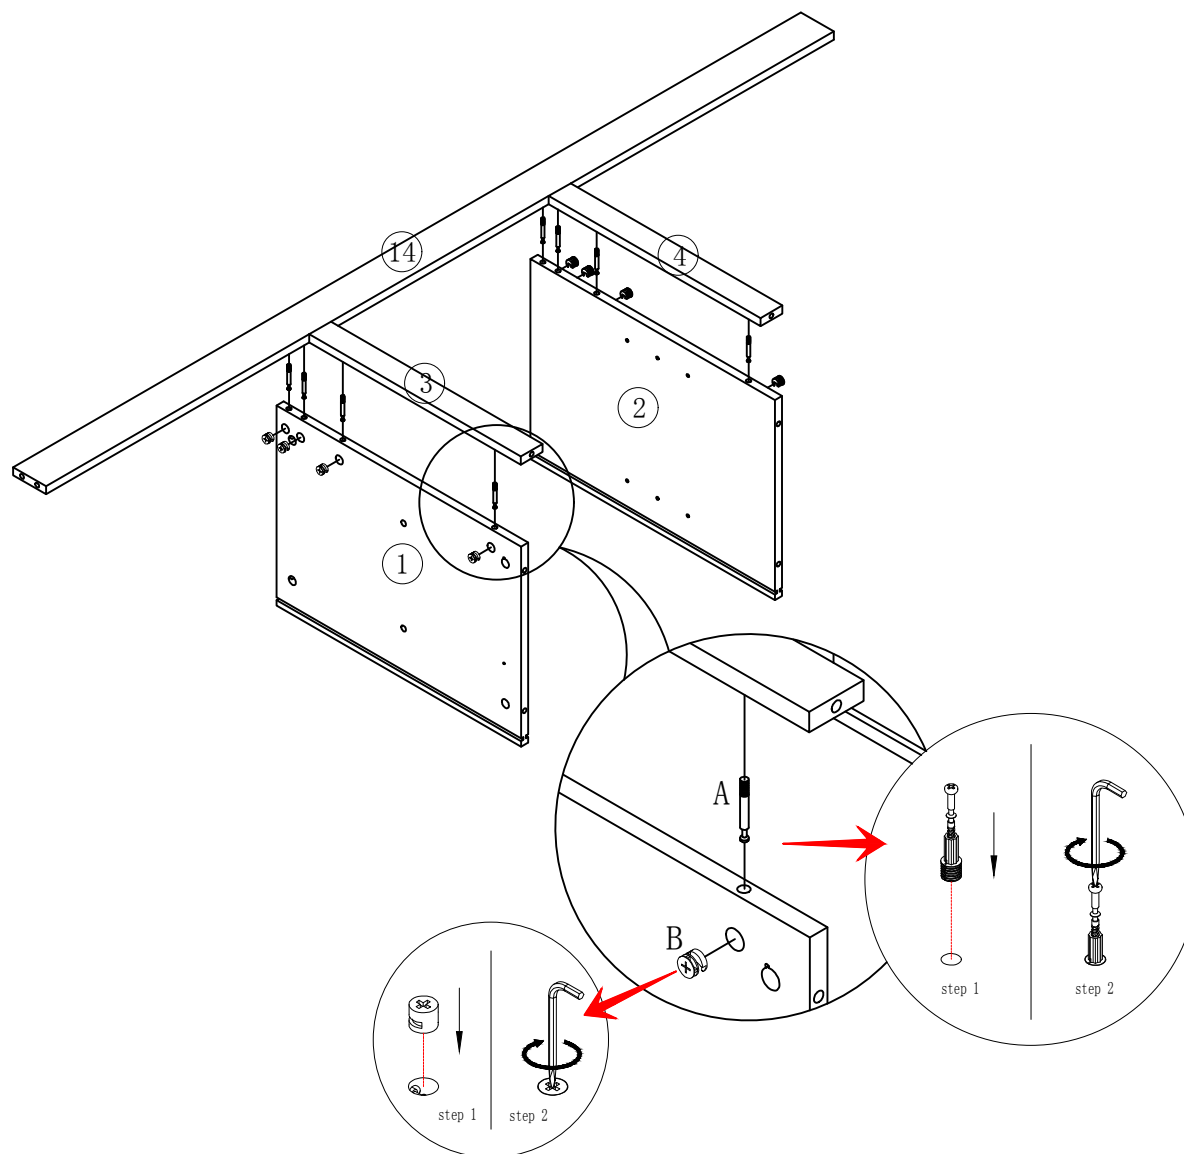


1		1
2		1

A		*8
B		*8


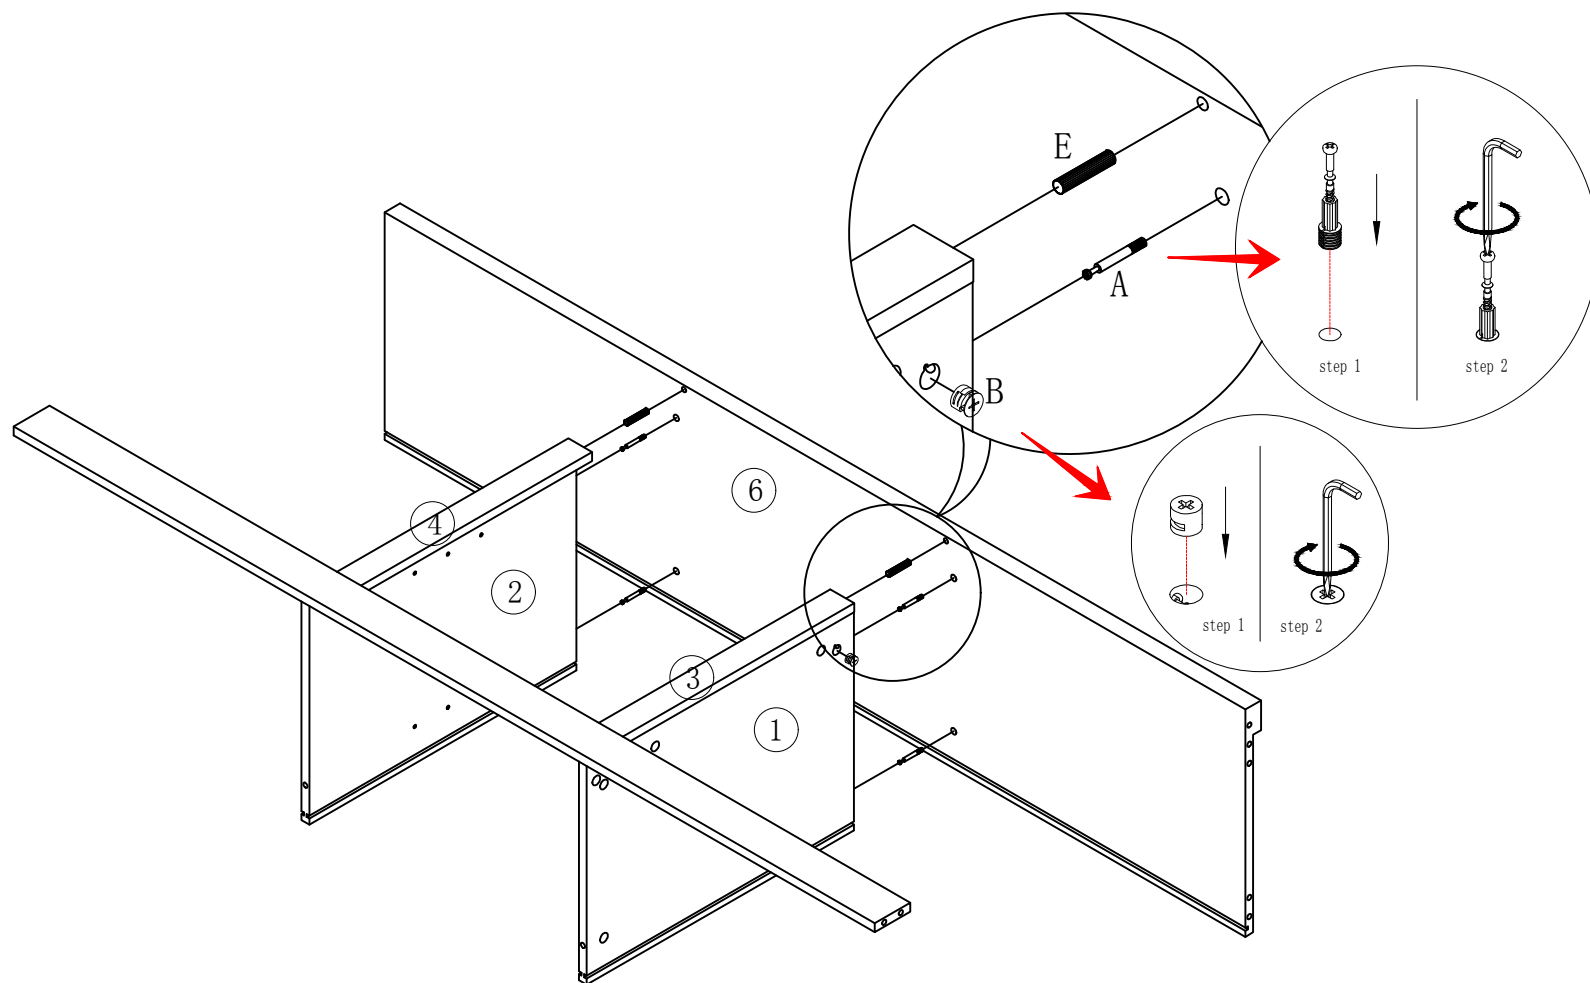


6		*1
---	--	----



A		*4
B		*4
E	 8*40	*2

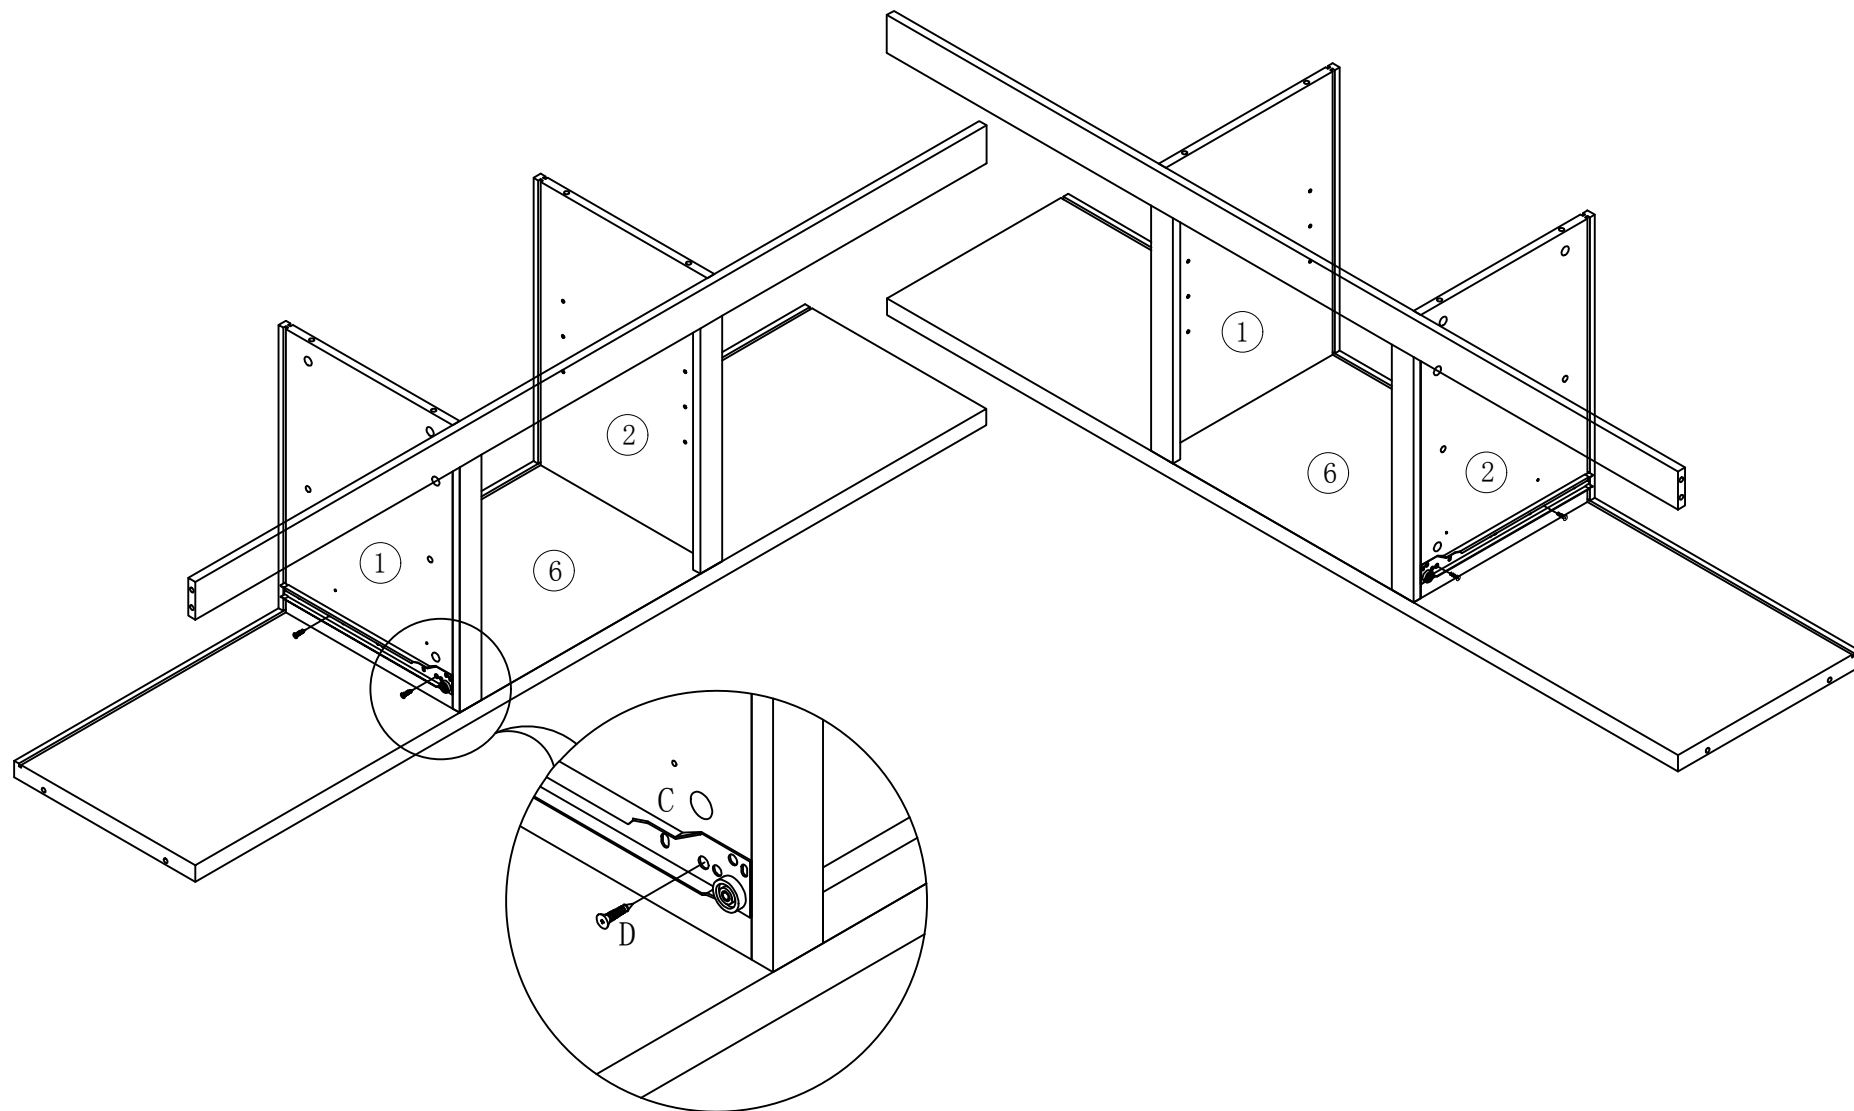





C		*2
D	 3.5*14	*4

7		*1
8		*1
9		*1
10		*1
11		*1
12		*1

A		*8
B		*8

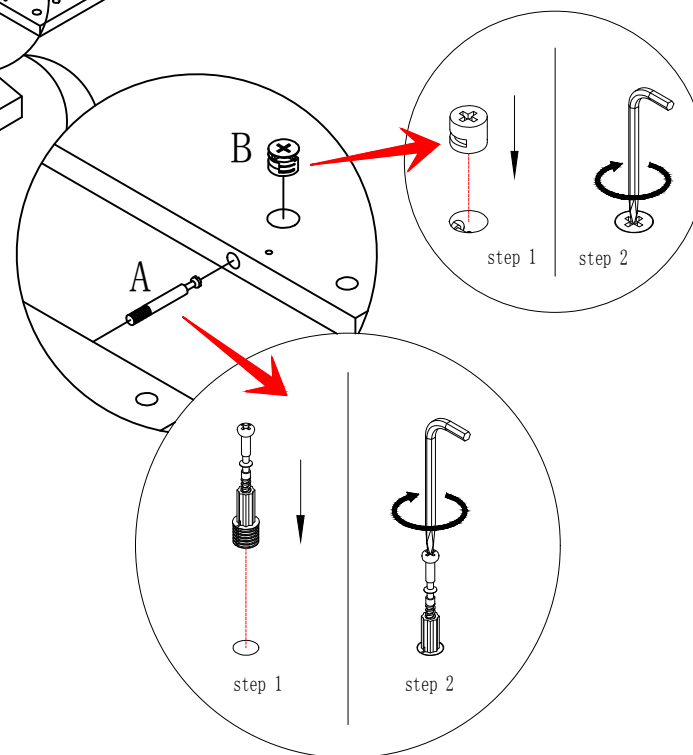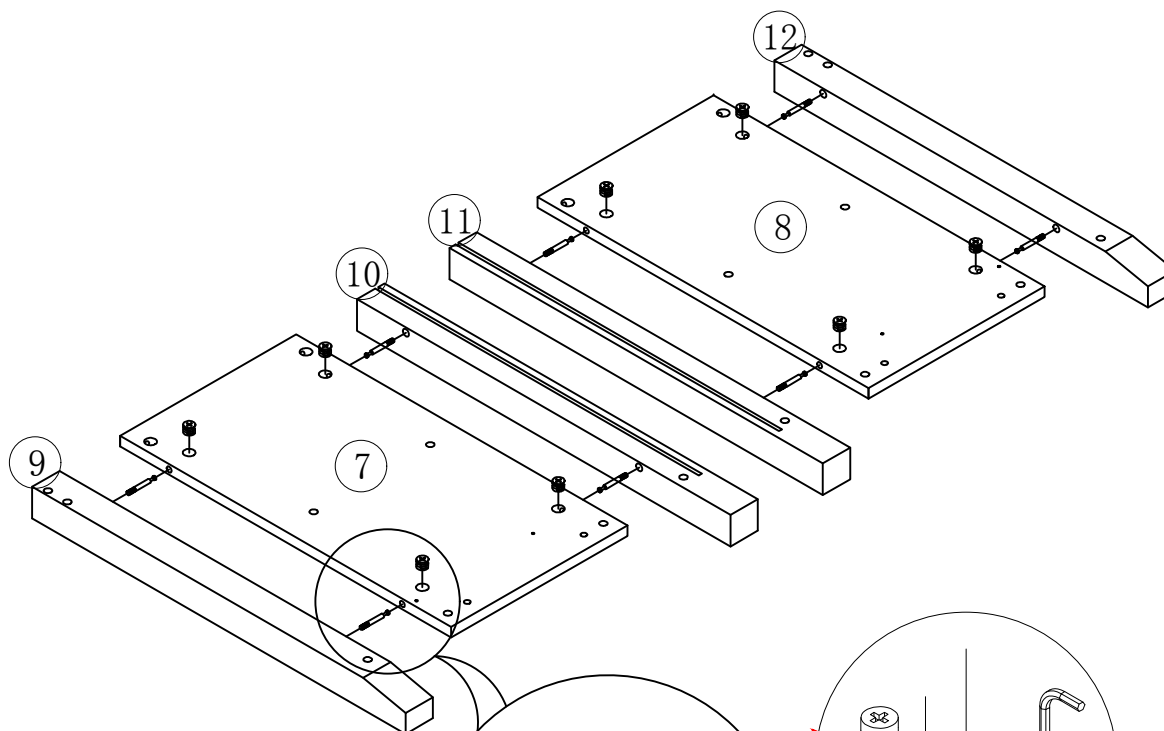


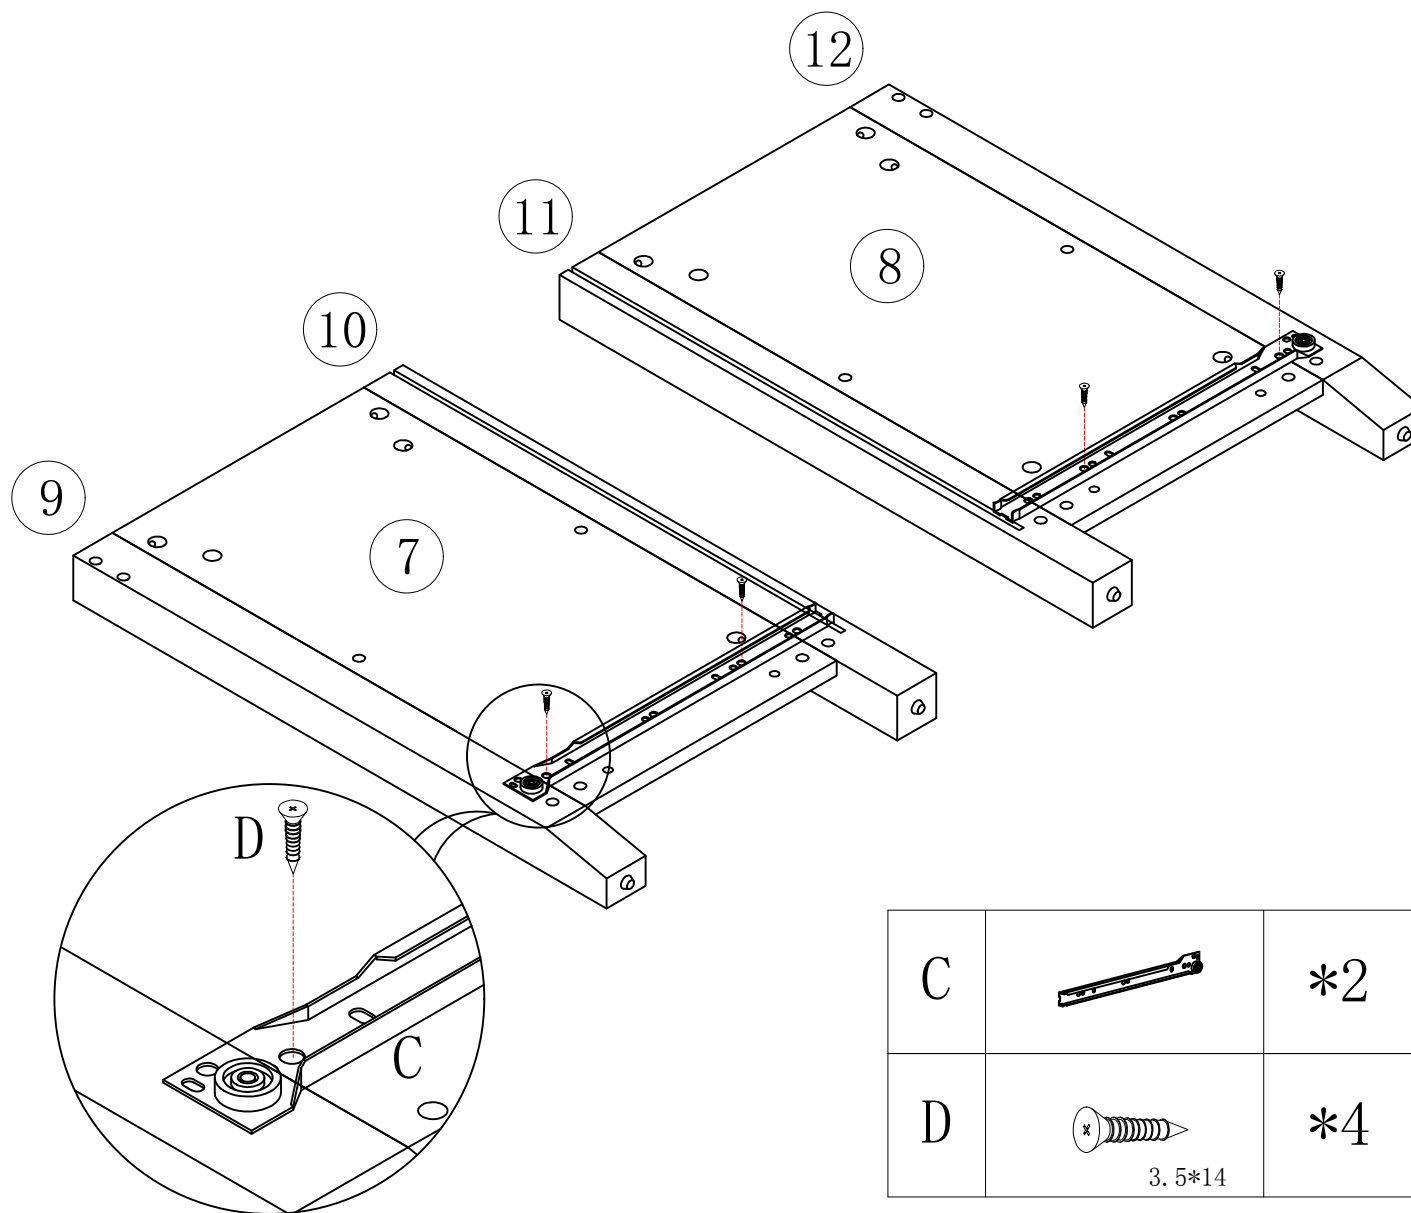

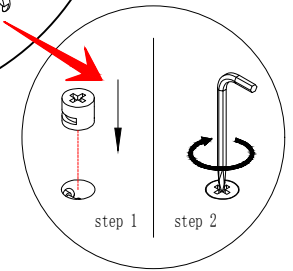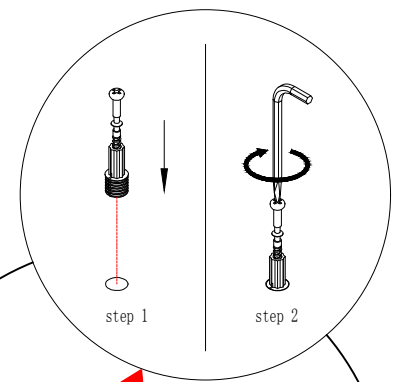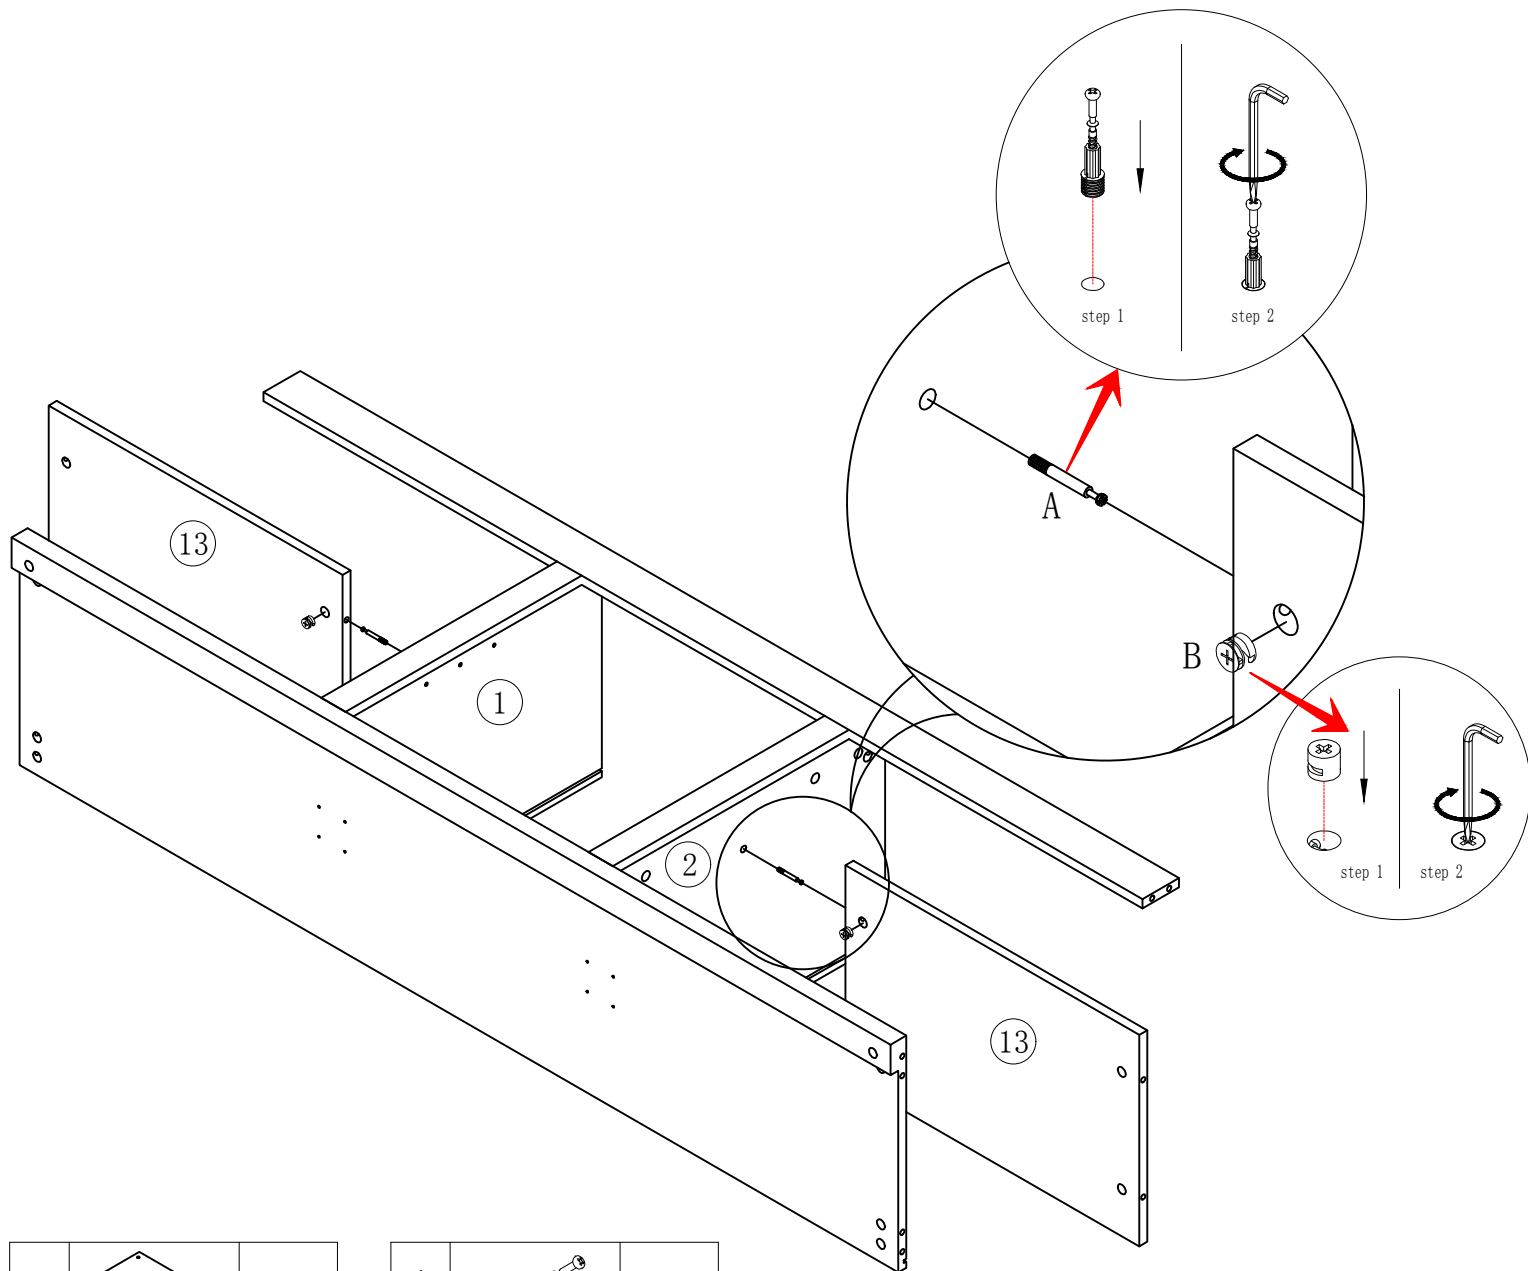


13		*2
----	--	----


A		*4
B		*4

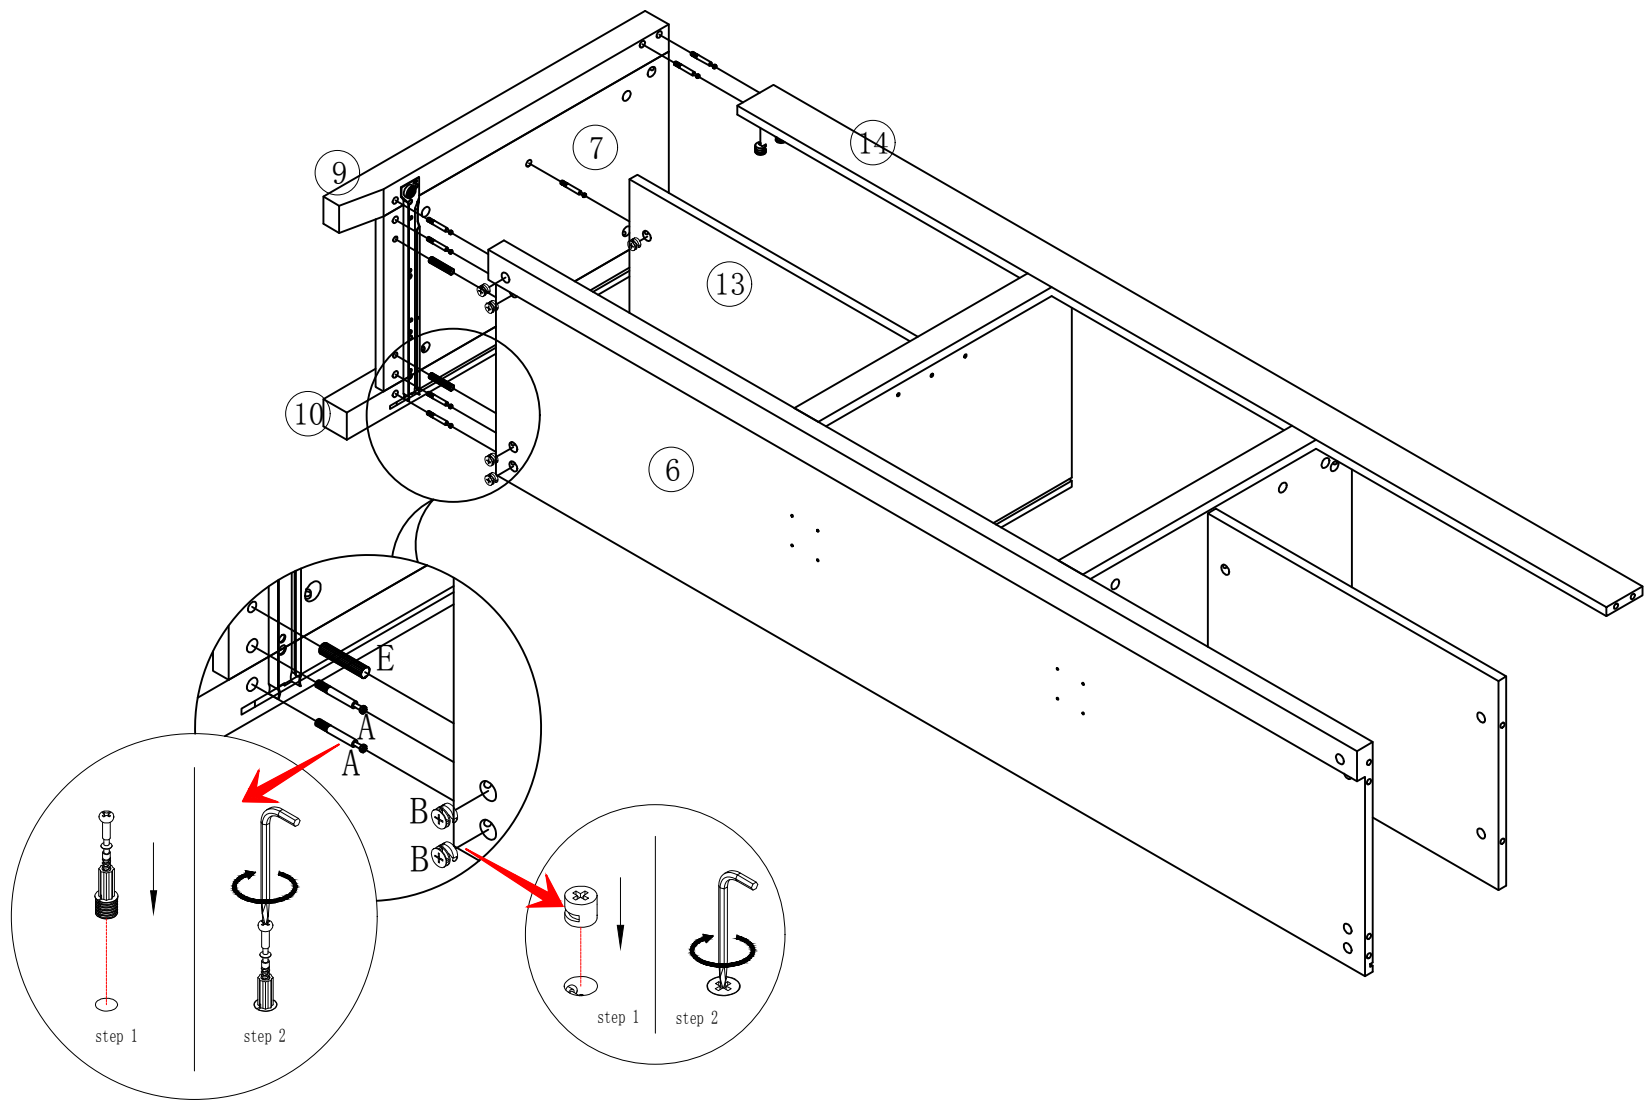


A		*8
B		*8
E		*2

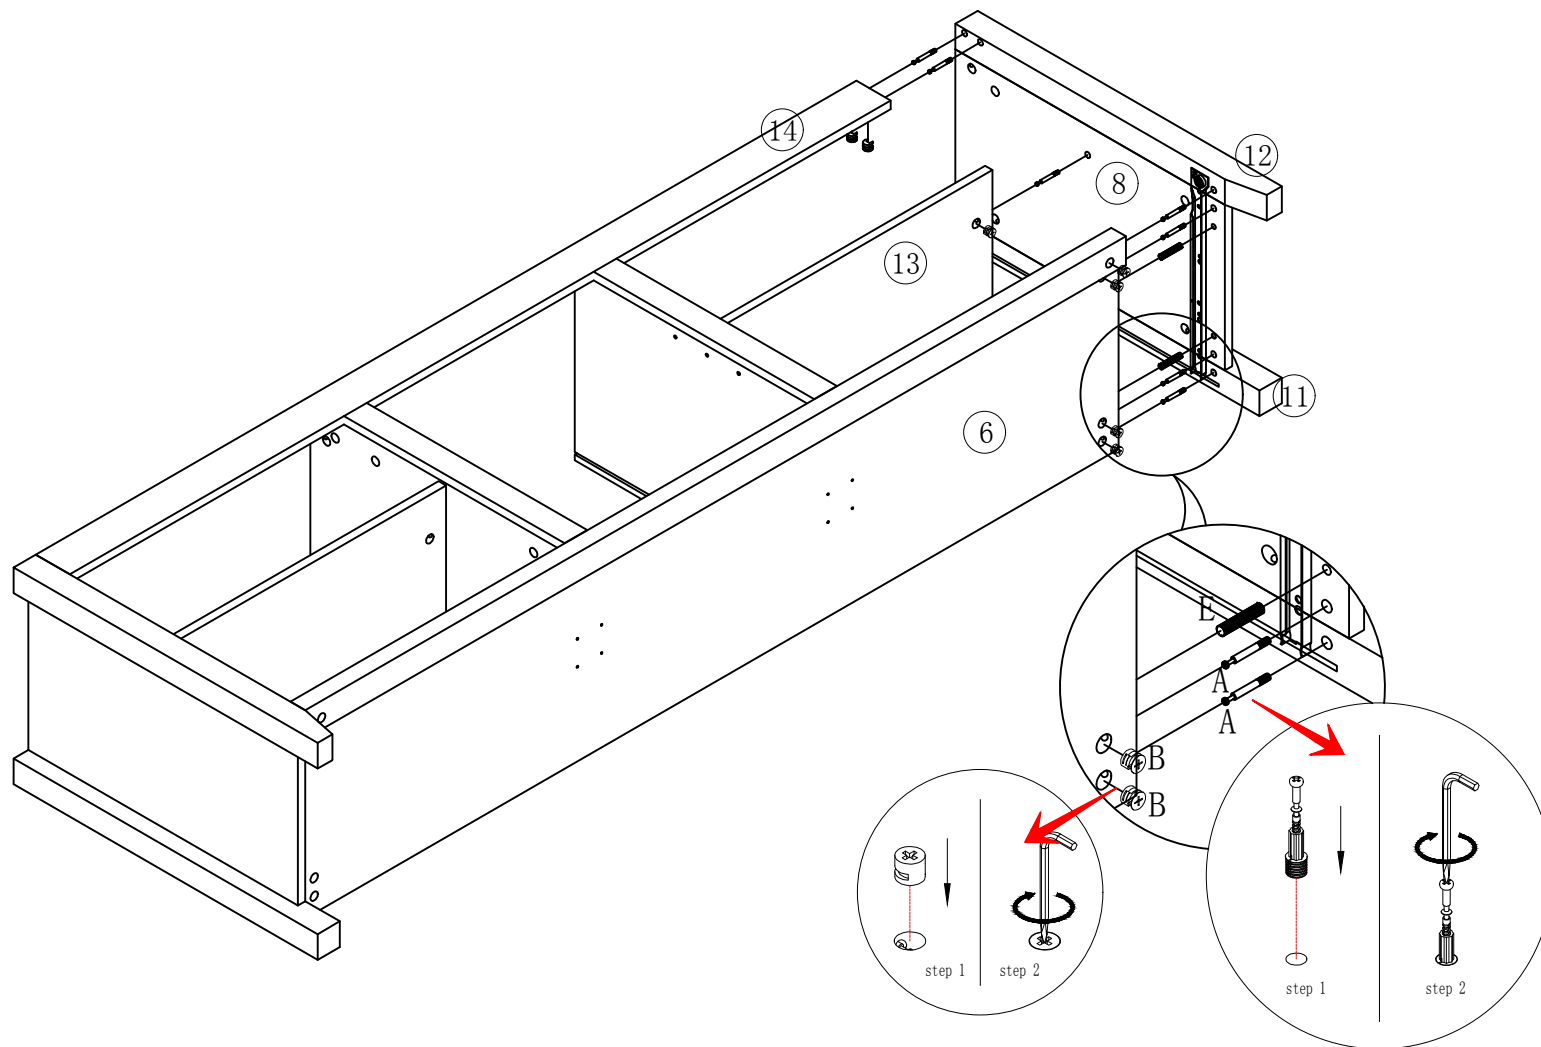


A		*8
B		*8
E	 8*40	*2

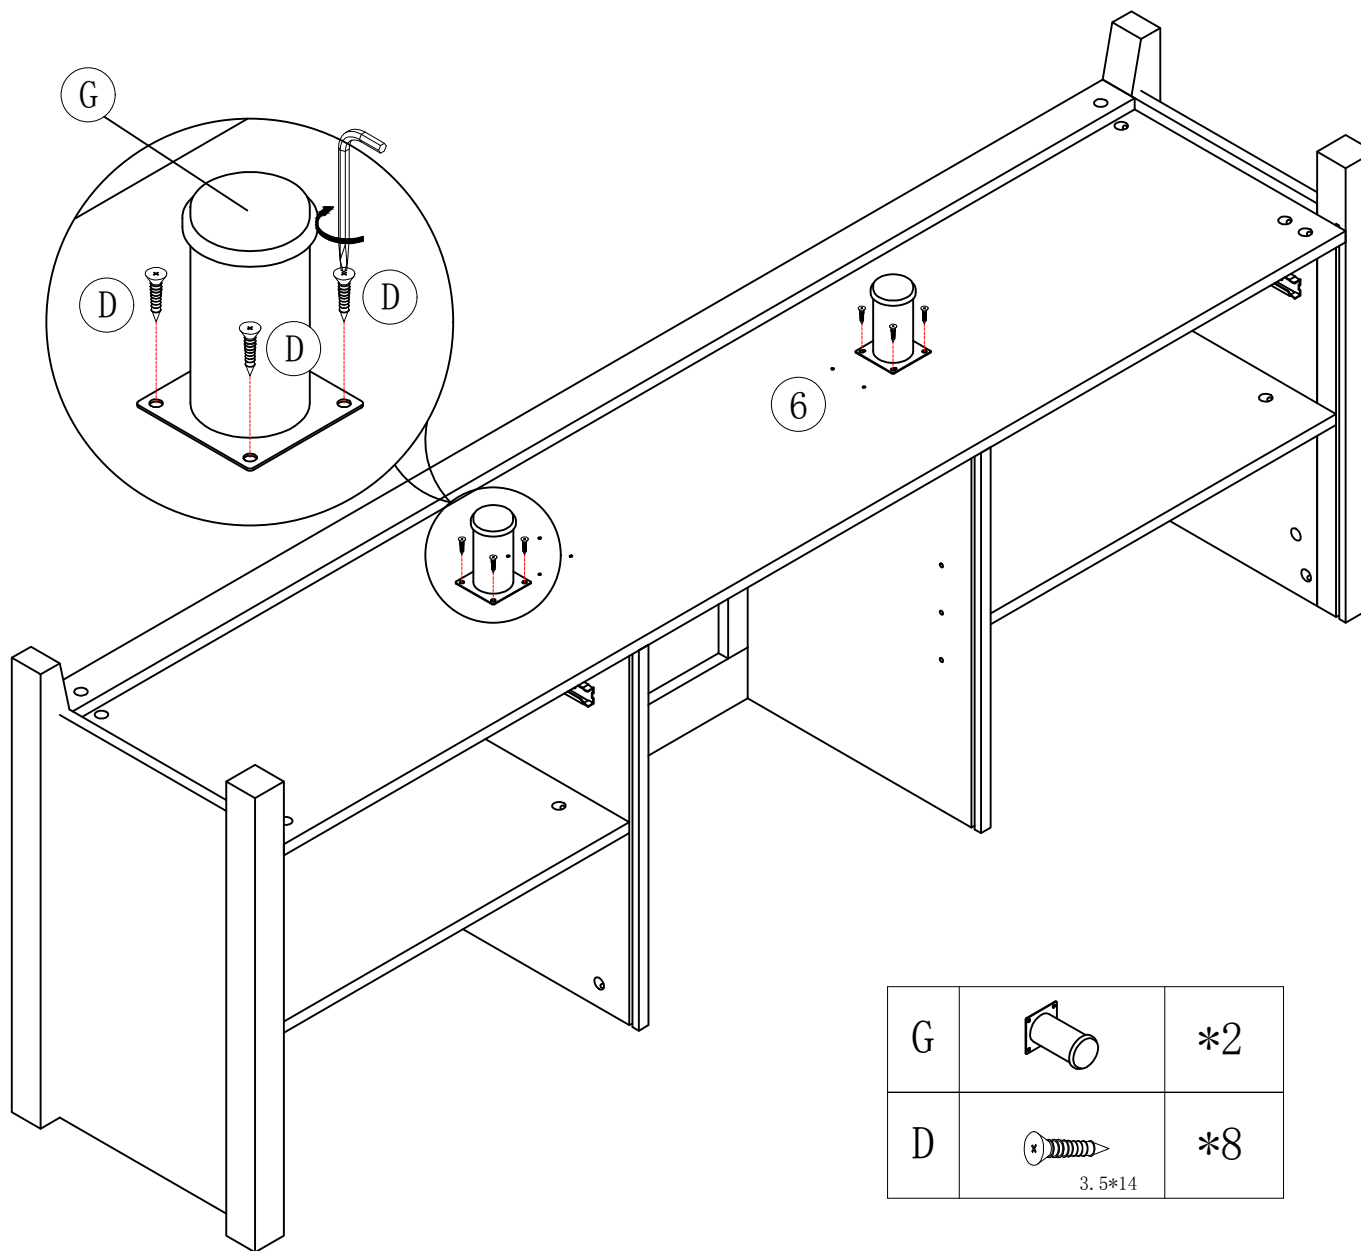

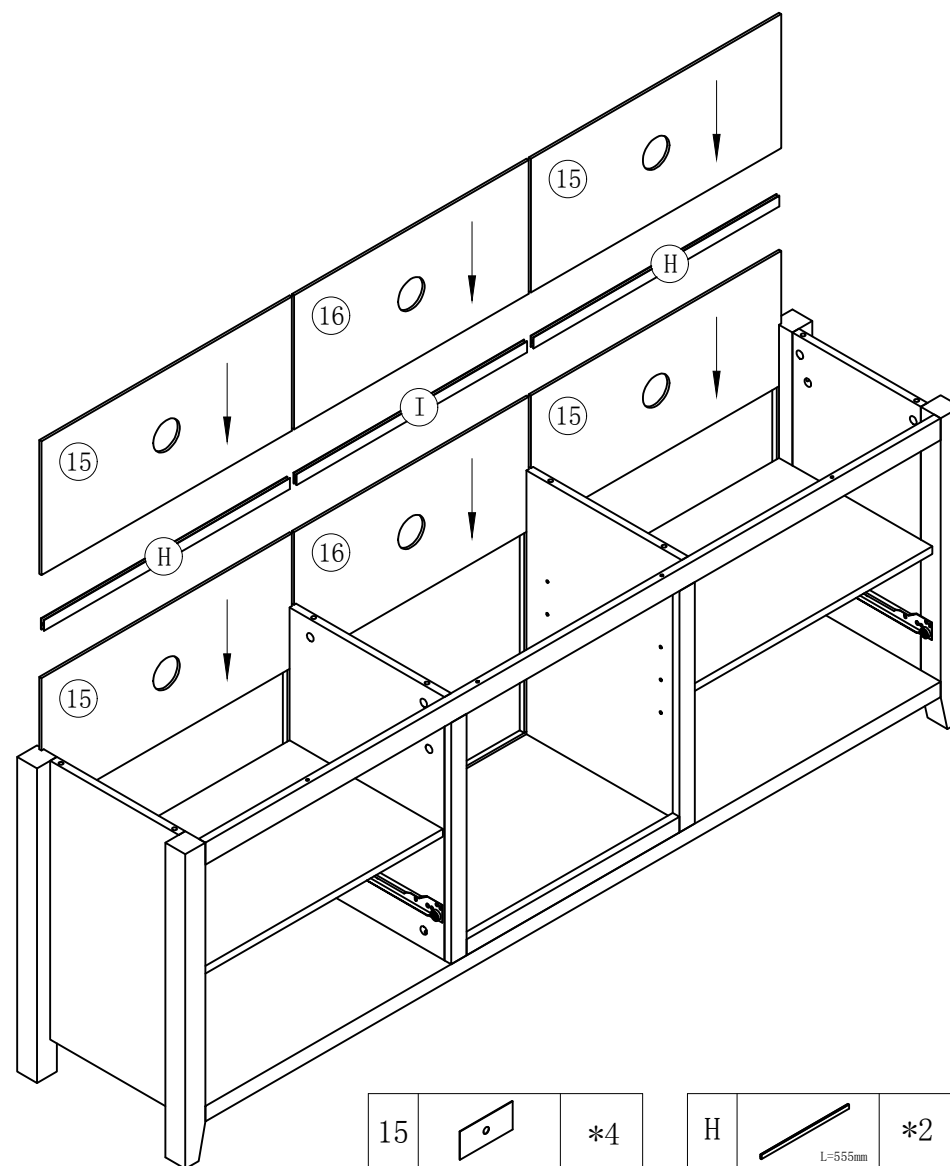



15		*4
16		*2

H		*2
I		*1

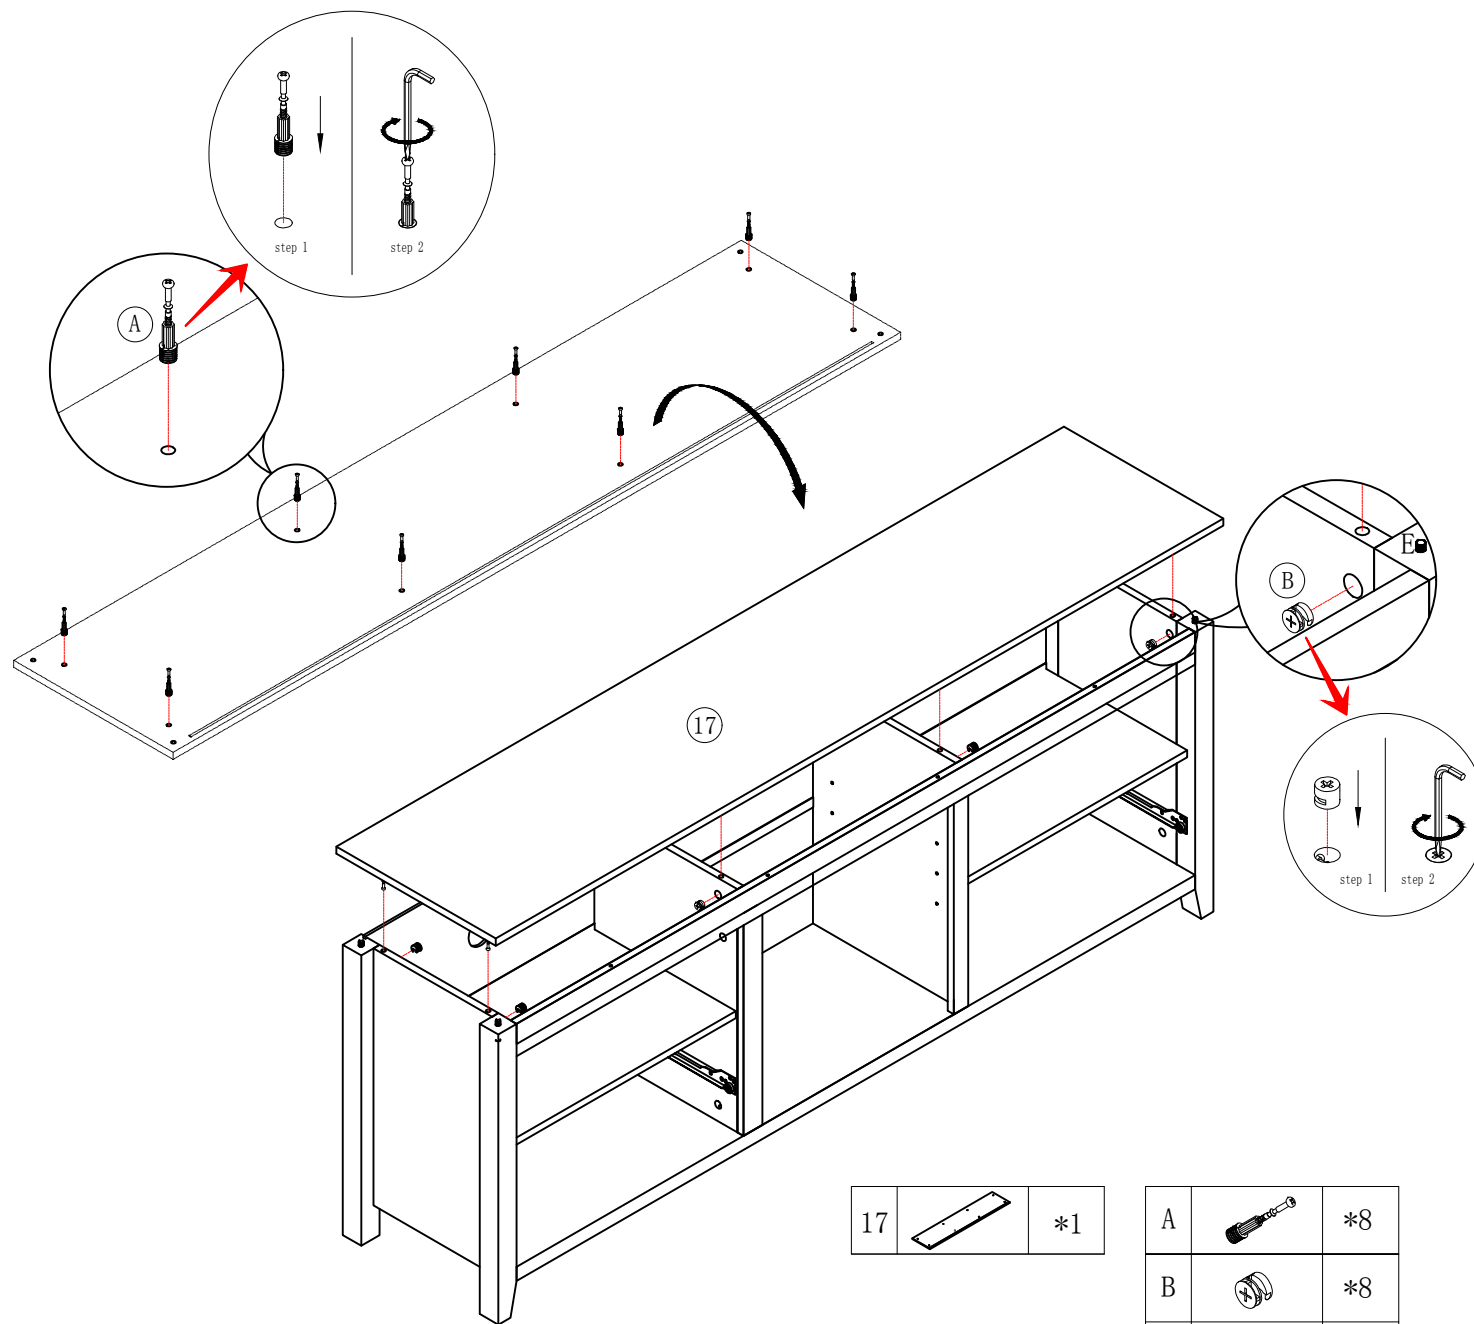


17		*1
----	---	----


A		*8
B		*8
E	 8*40	*4

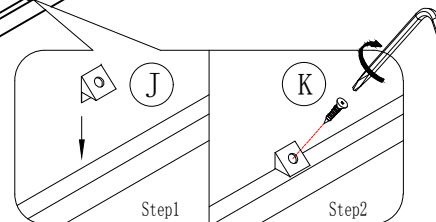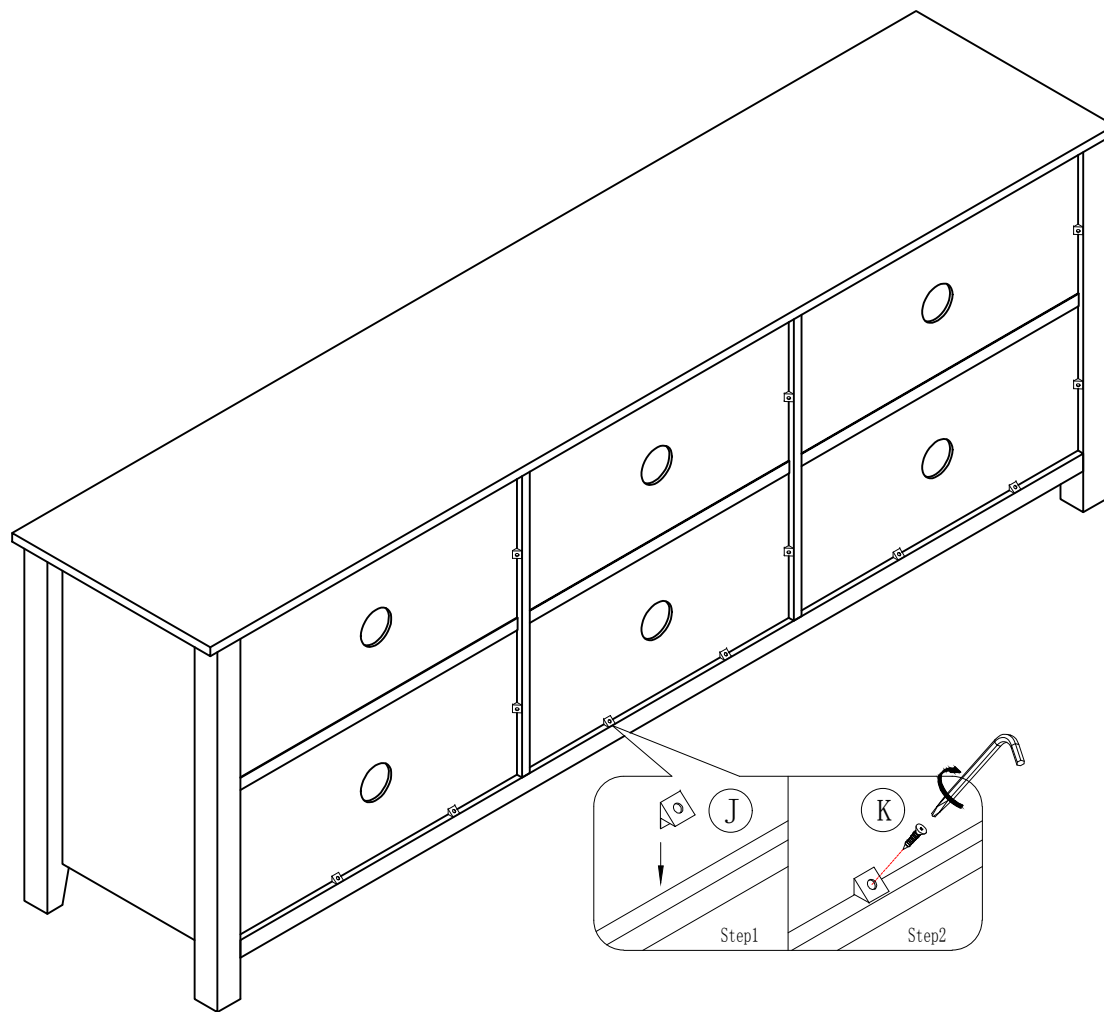

J		*24
K	 3.0*14mm	*24

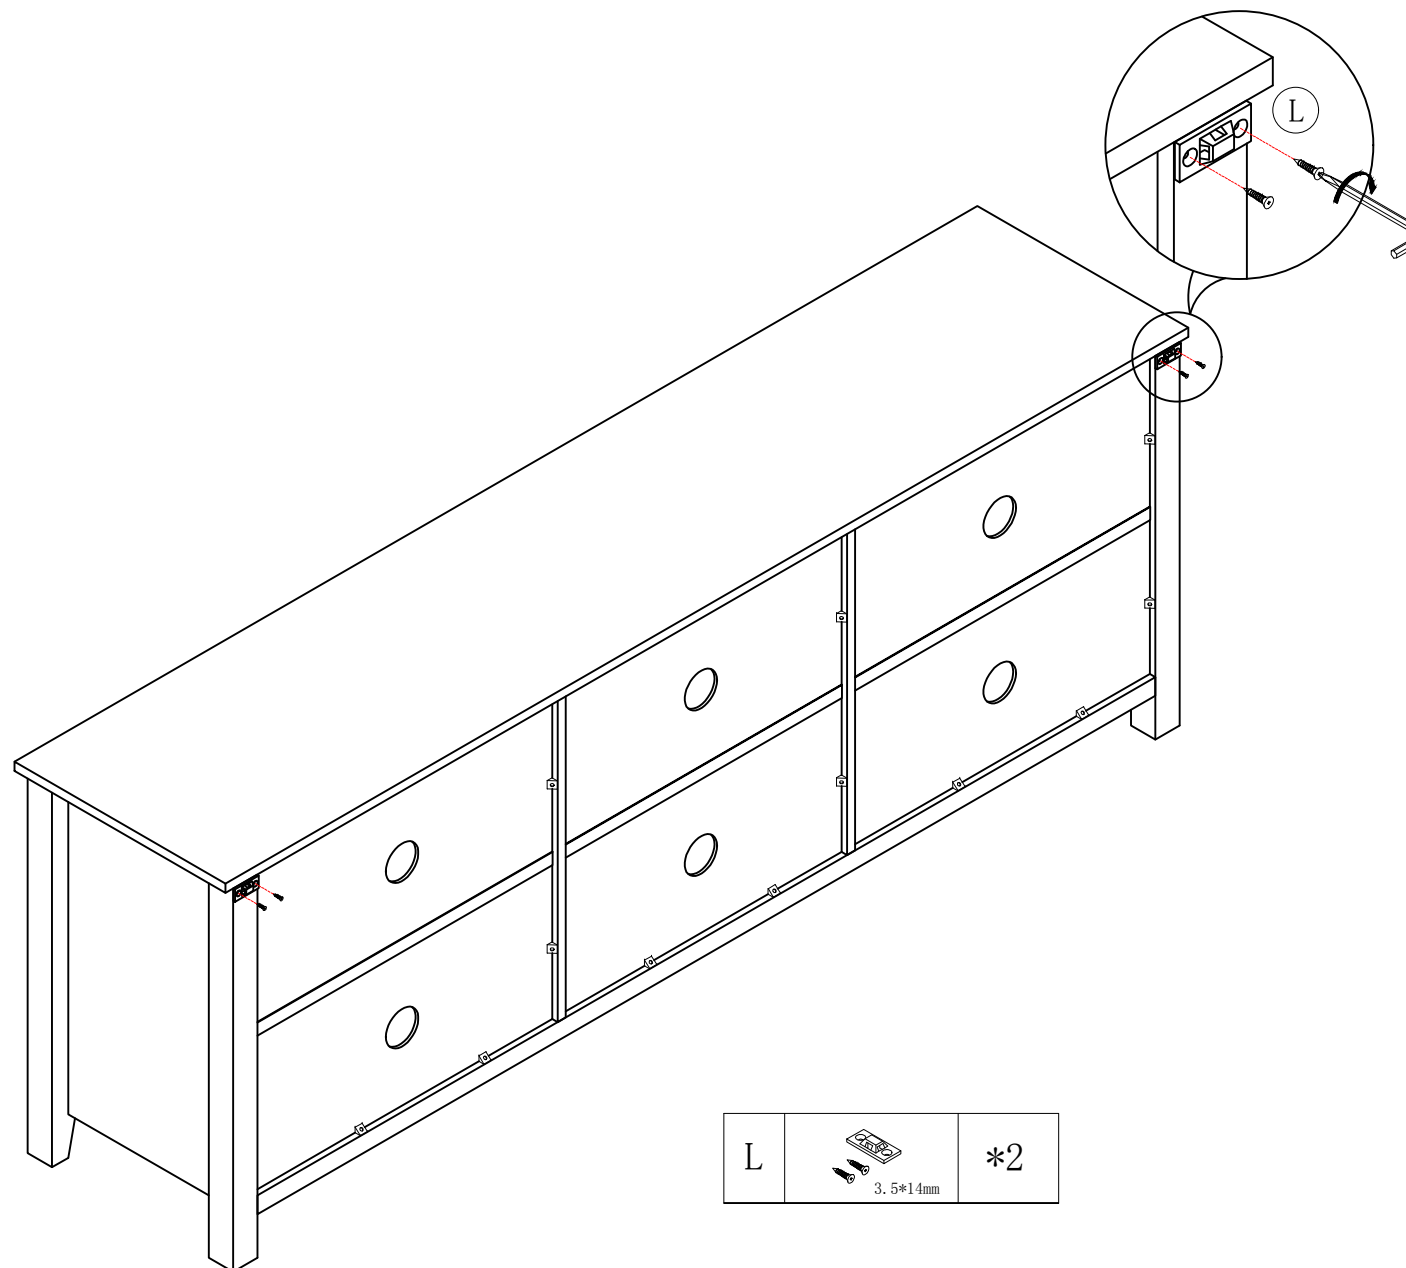



L	 3.5*14mm	*2
---	---	----


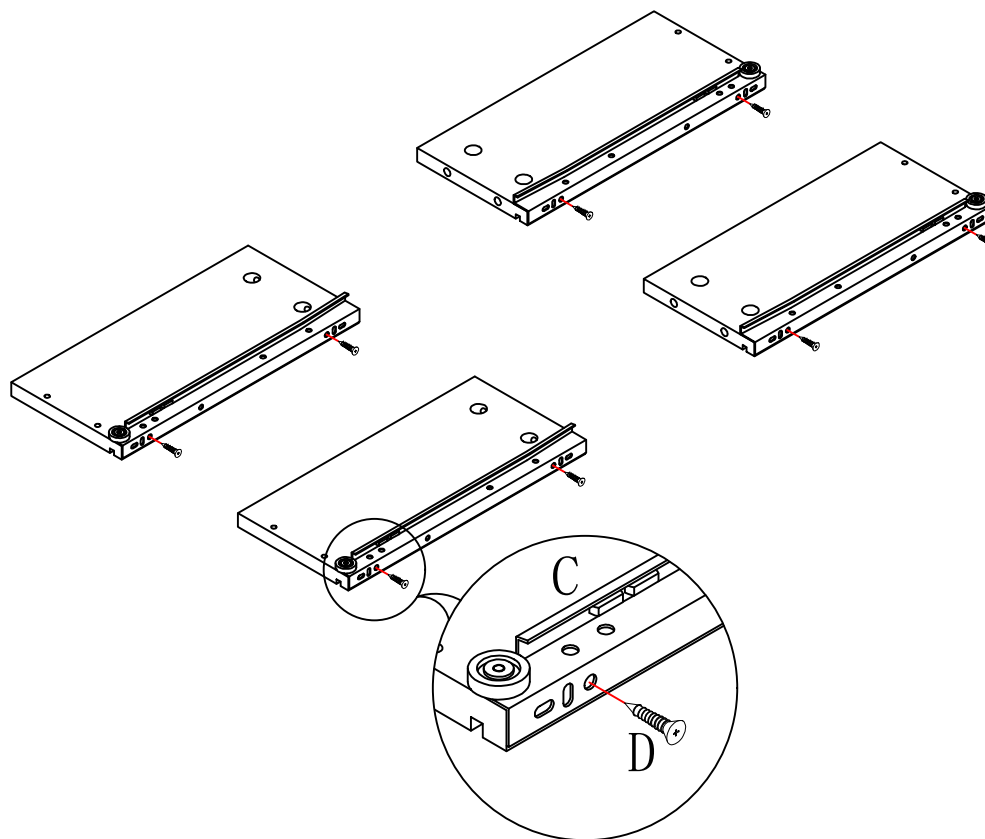



18		*2
19		*2


C		*4
D	 3.5*14mm	*8

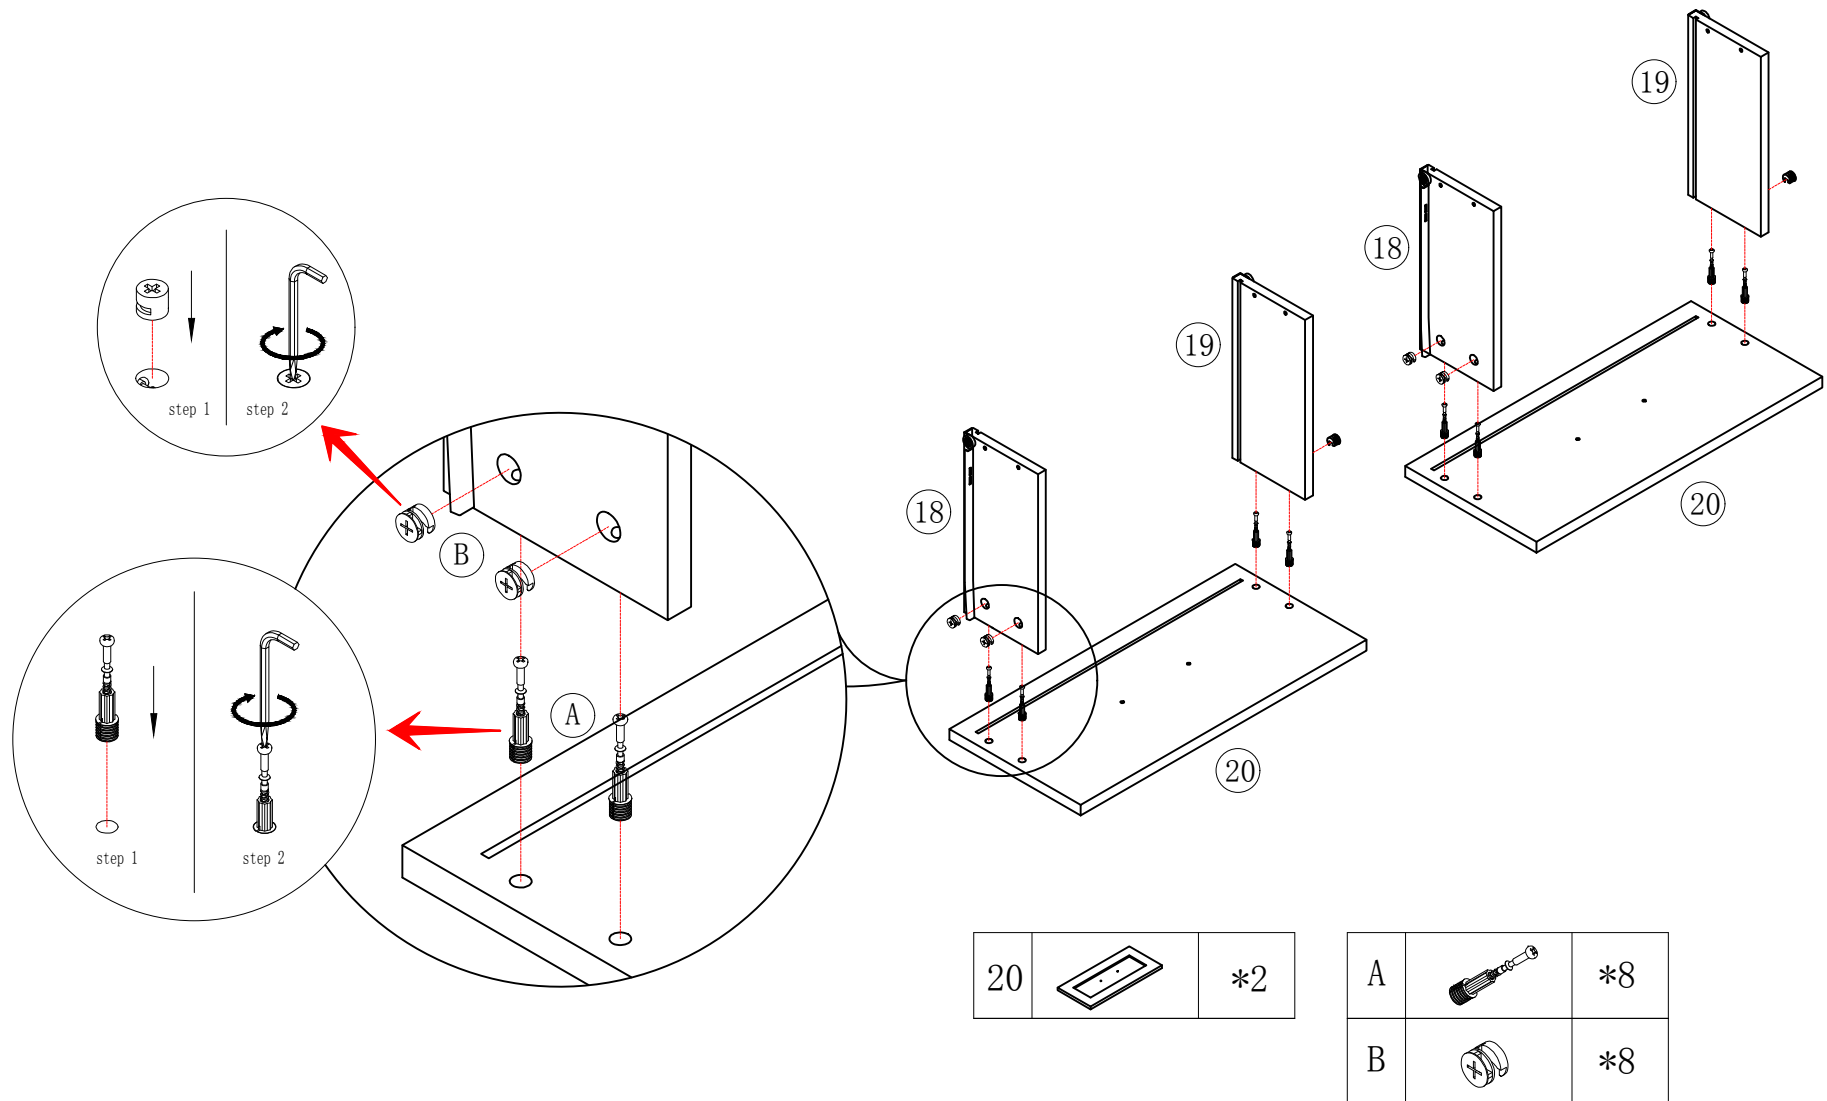


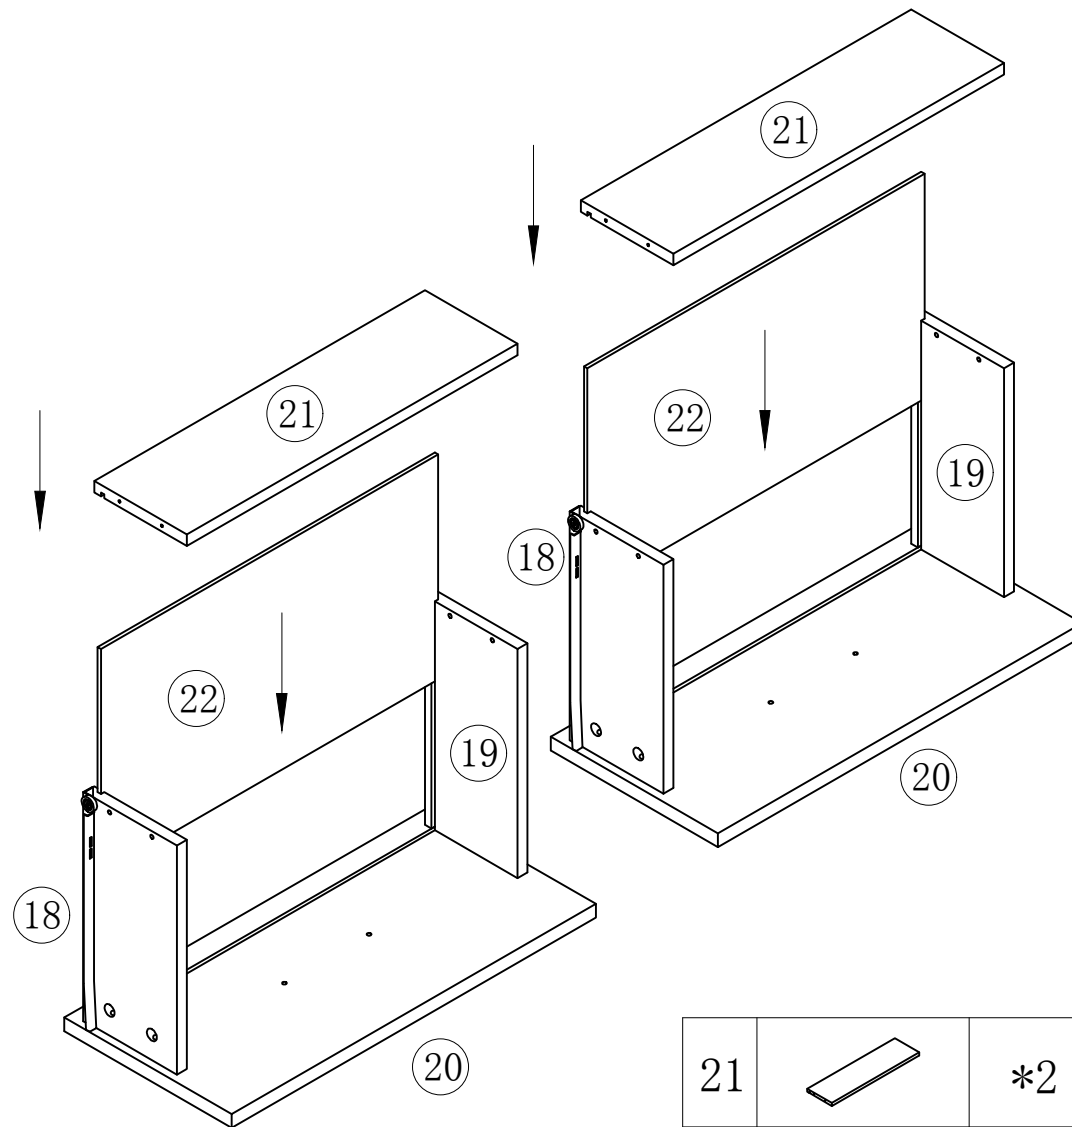


21		*2
22		*2

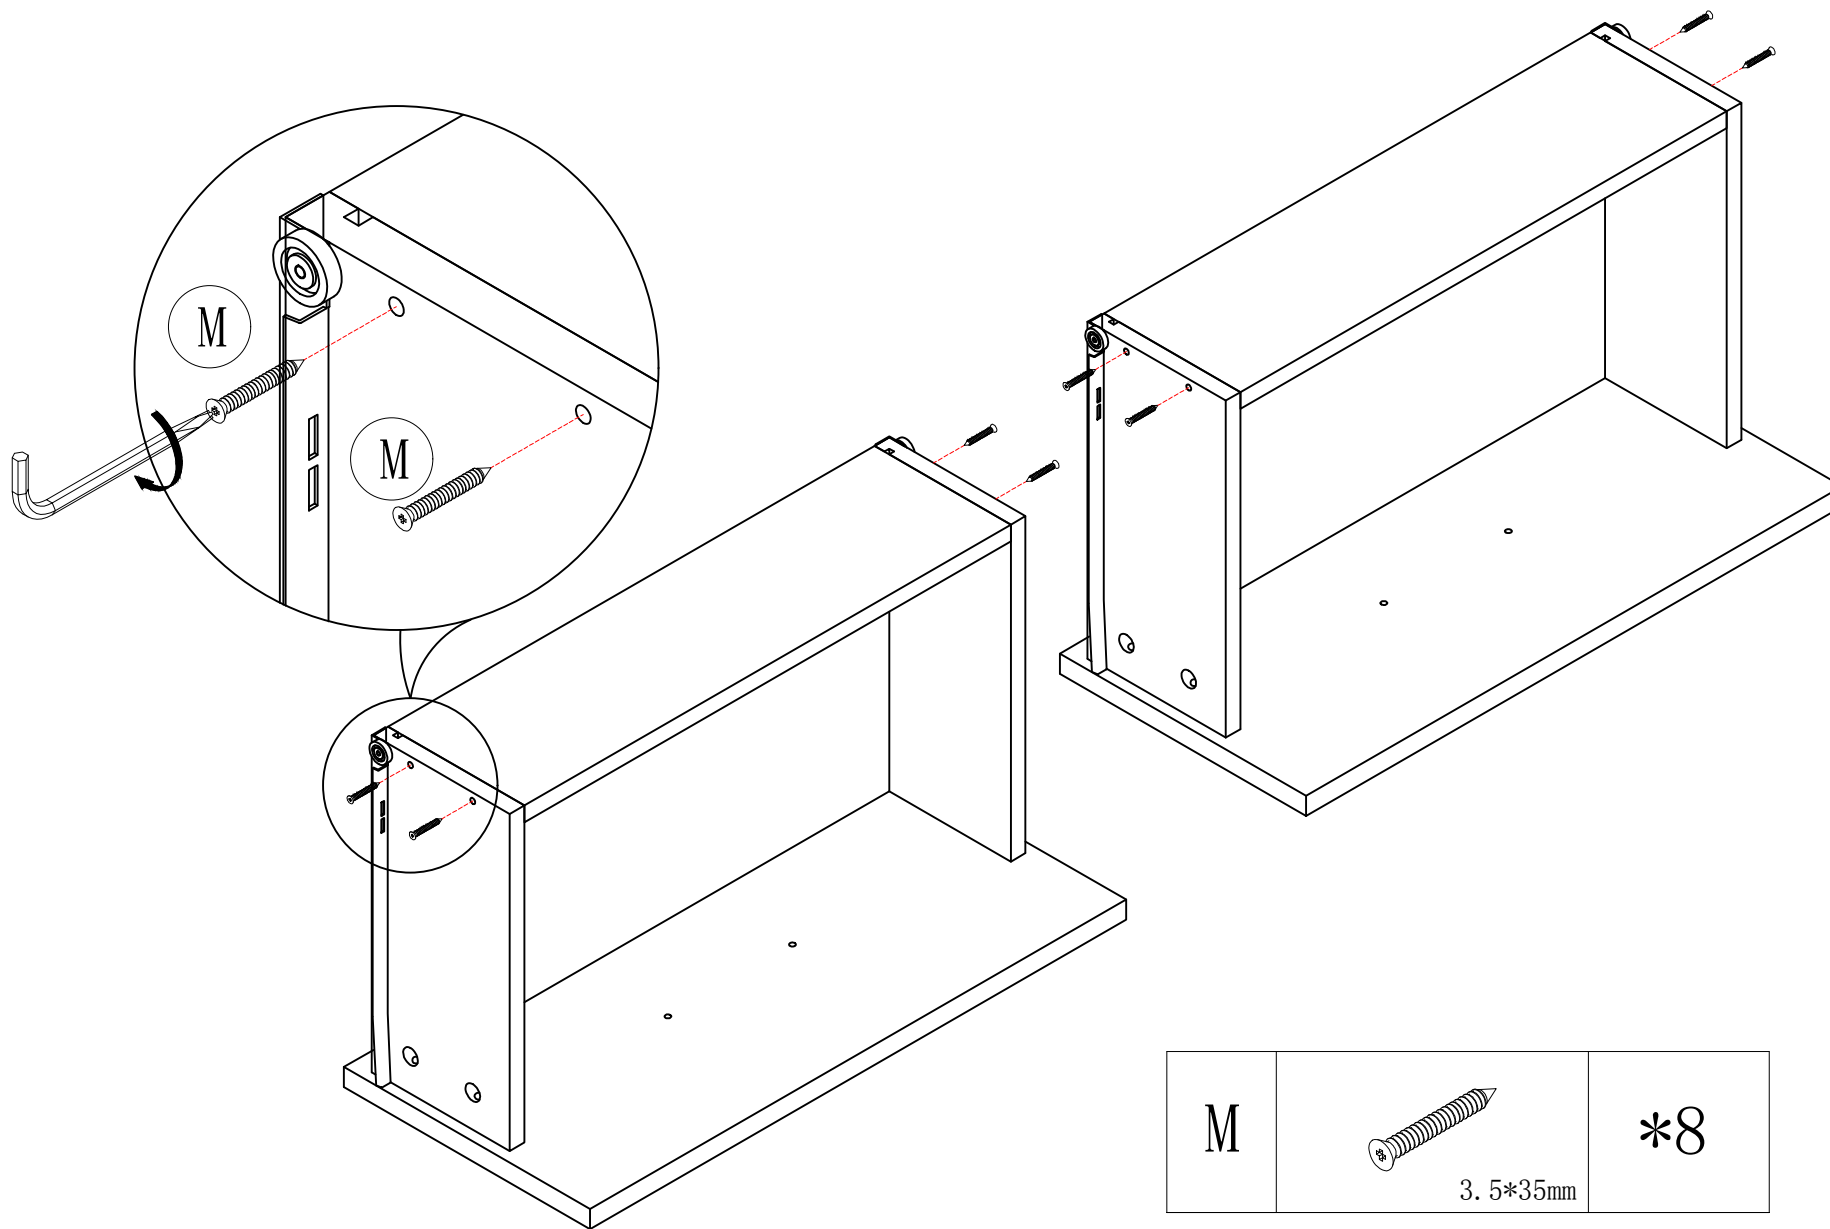


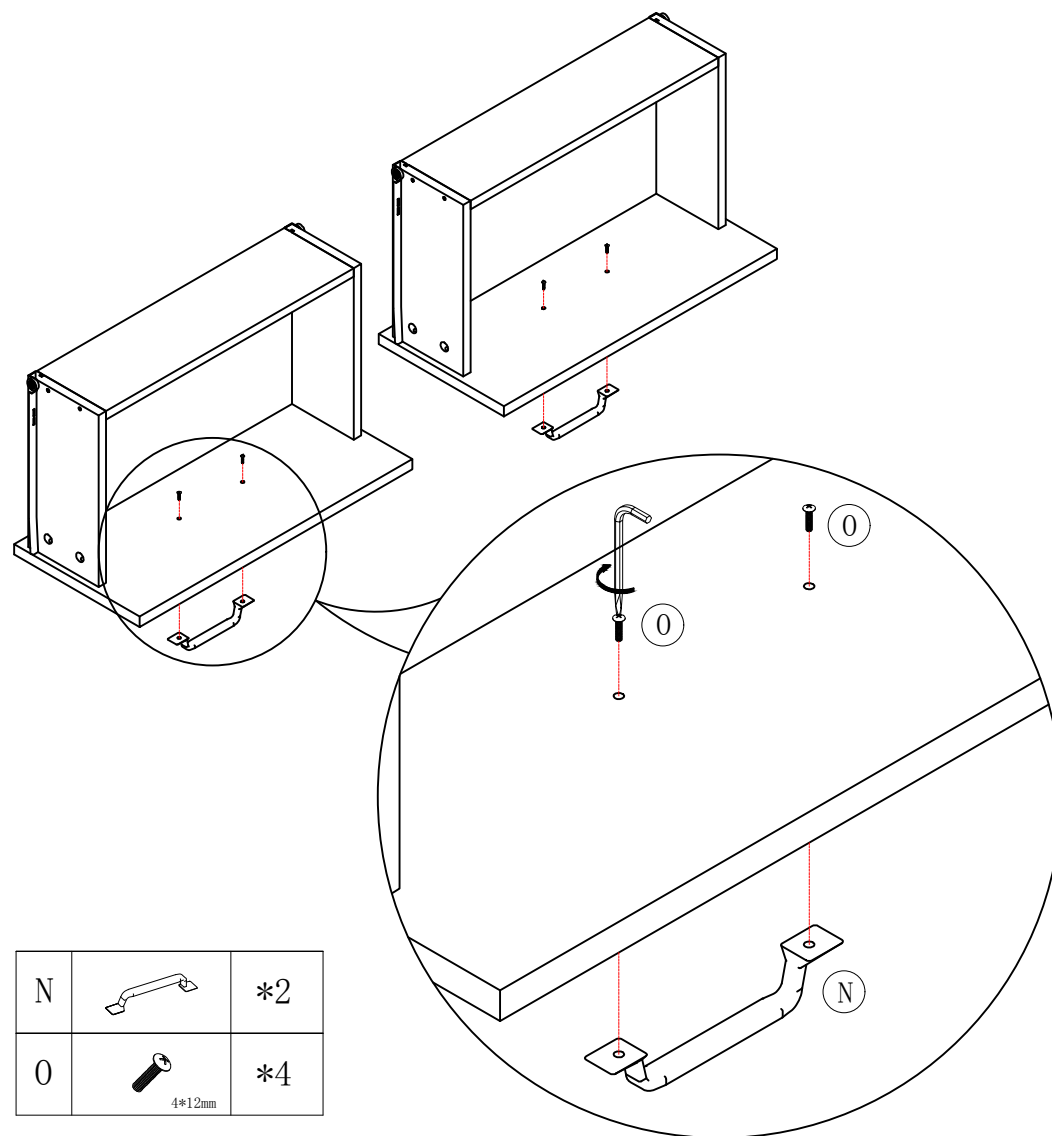

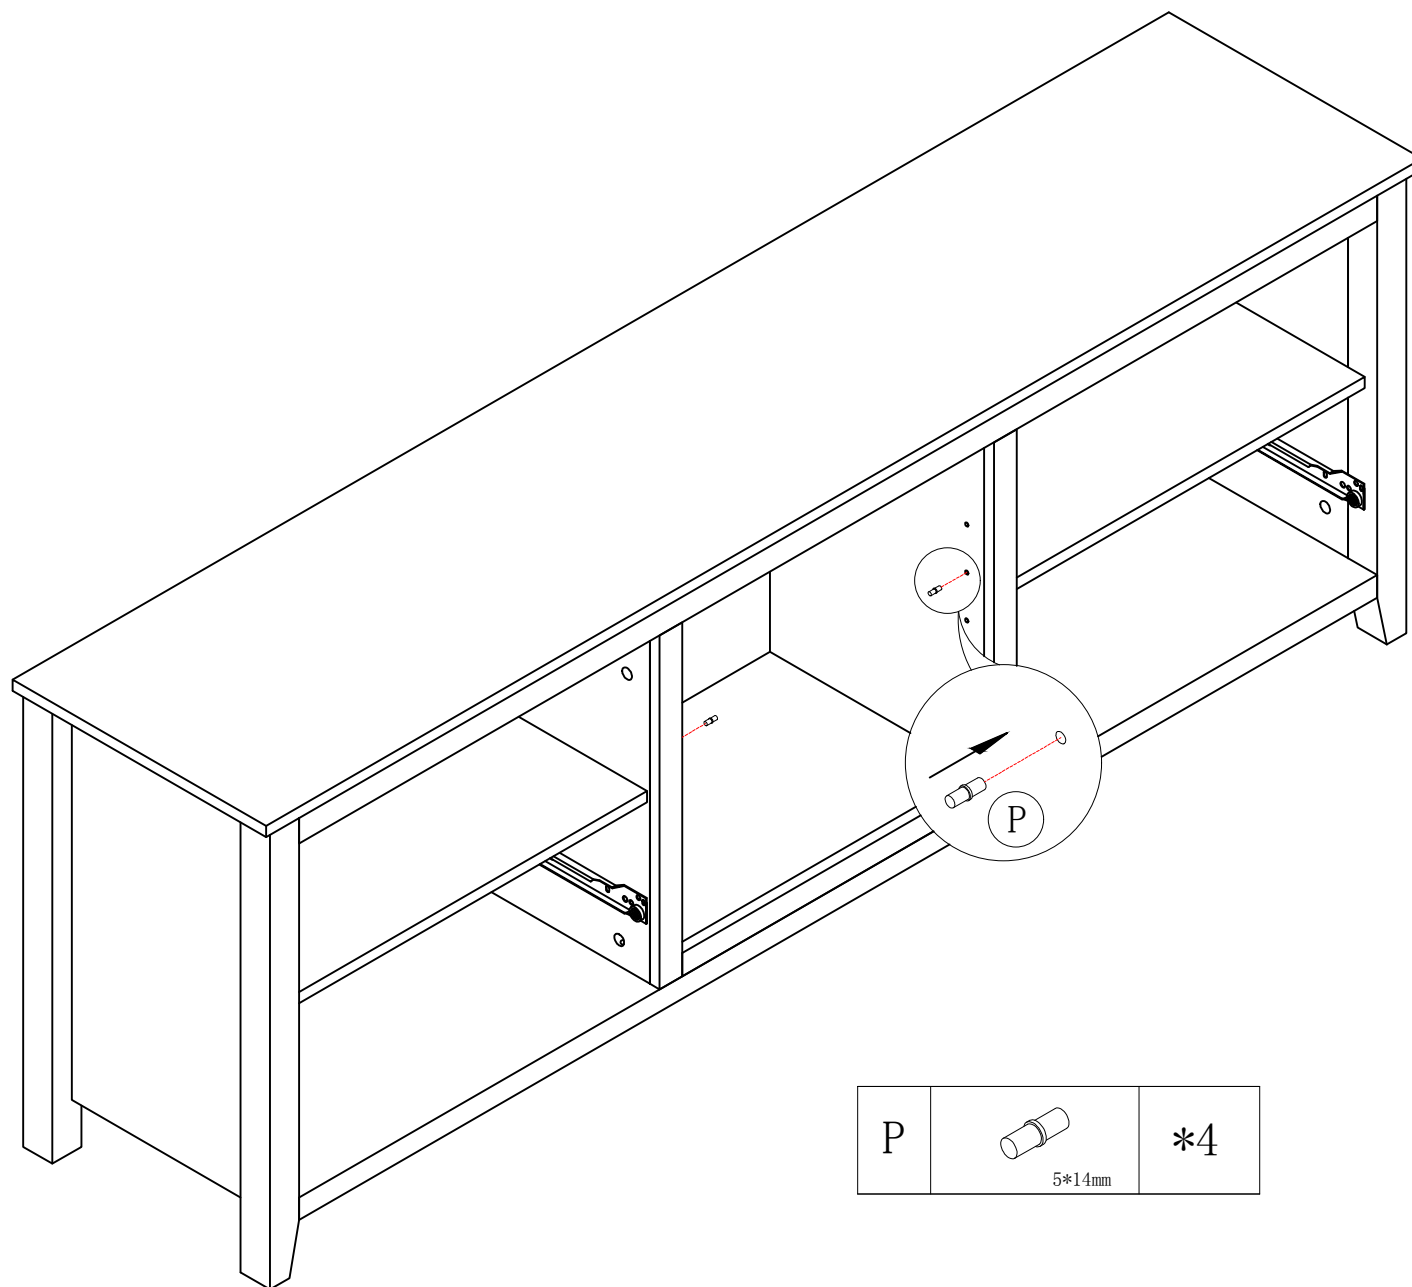

P	 5*14mm	*4
---	---	----

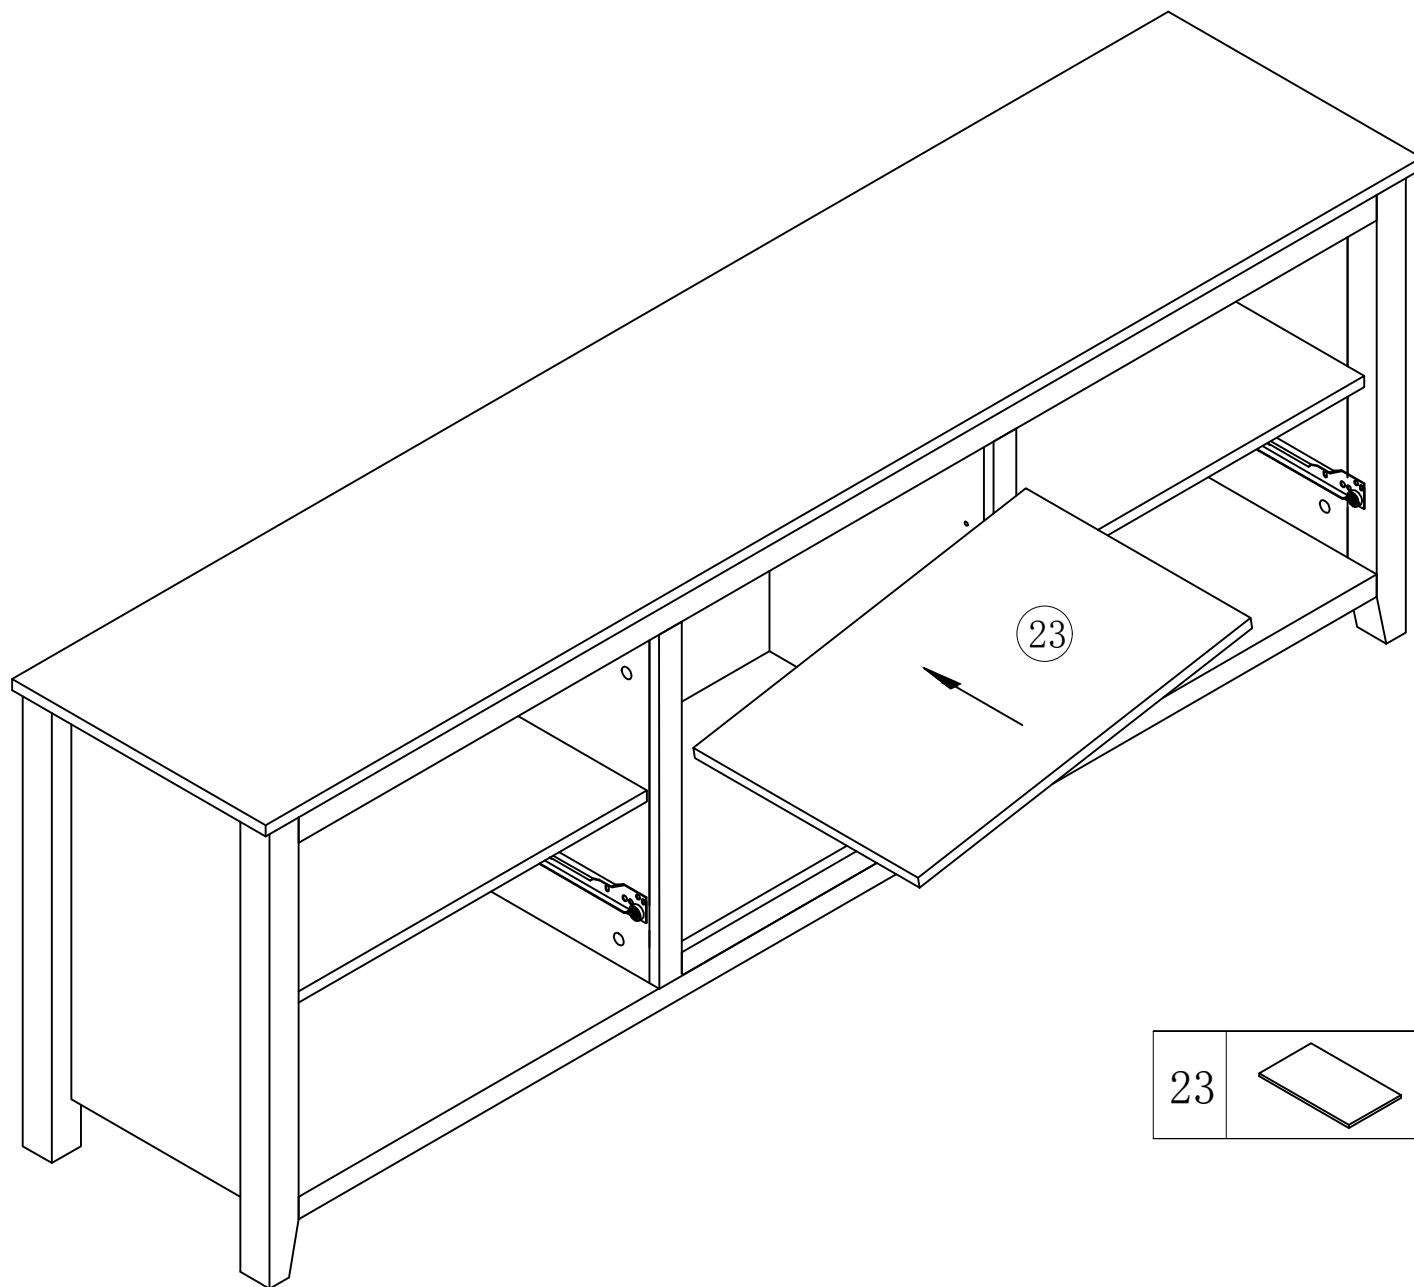

23		*1
----	---	----

