
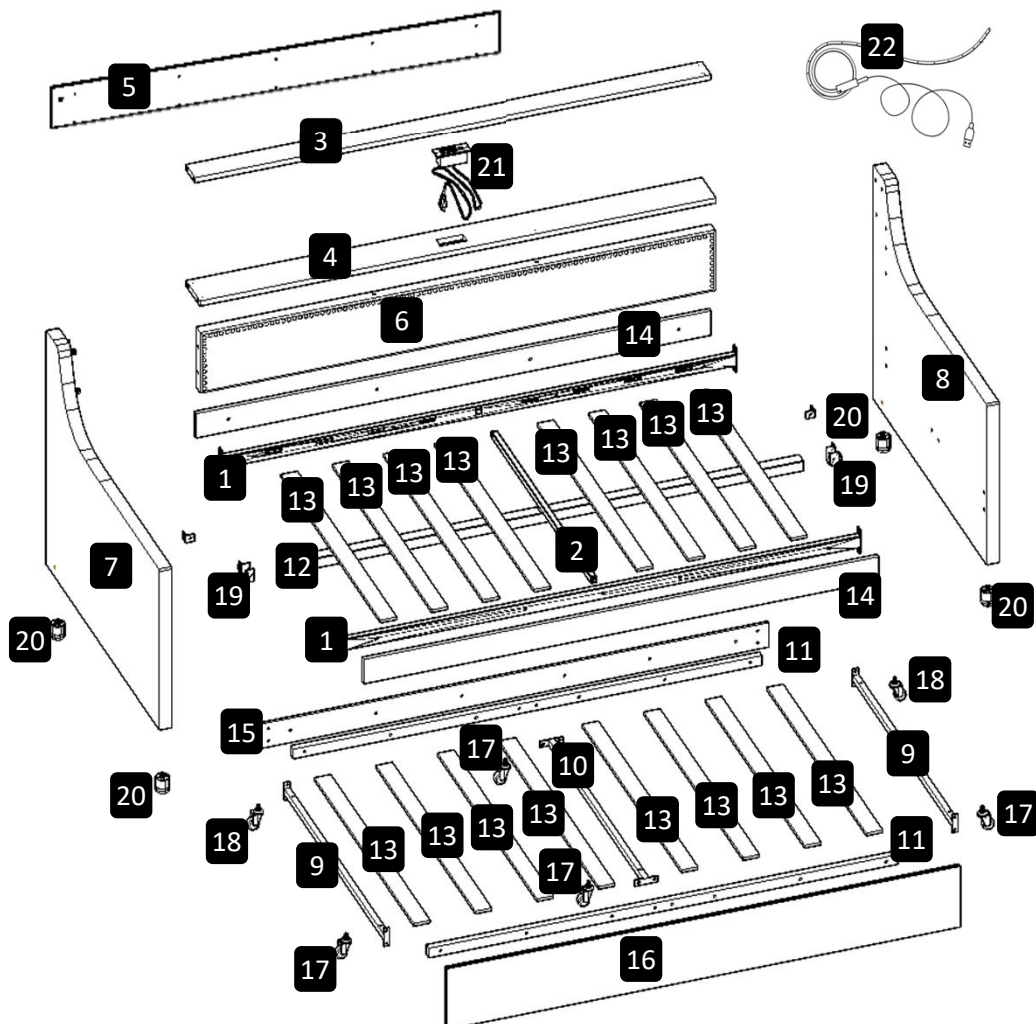
















ASSEMBLY INSTRUCTION

TIPS




1. This bed fit standard twin mattress 75" L x 39" W.
2. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
4. Do not use substitute part. Contact the manufacture or dealer for replacement part.

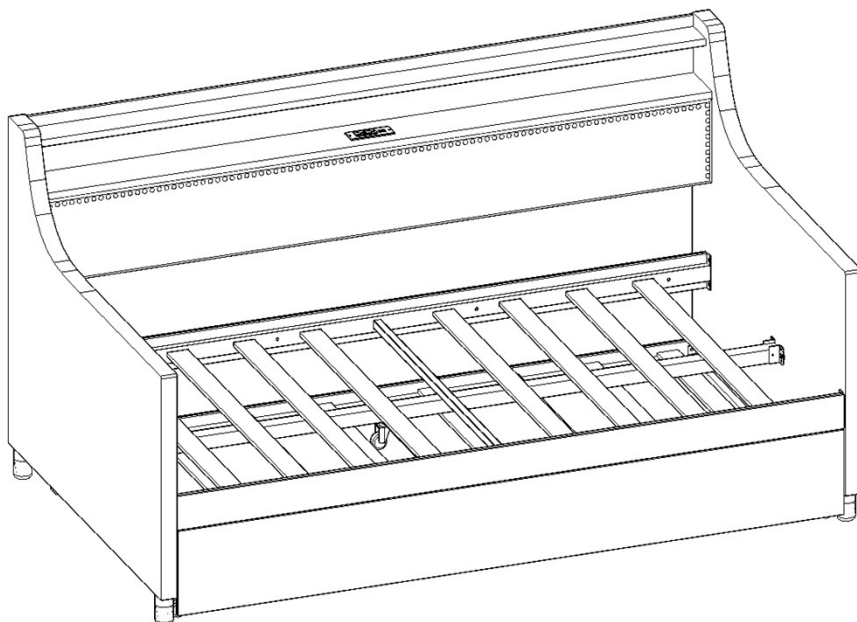





Part List

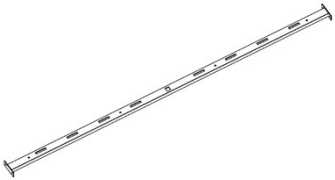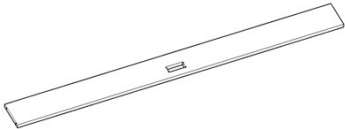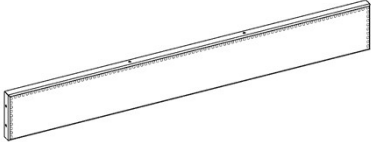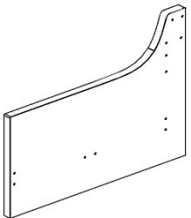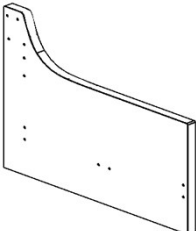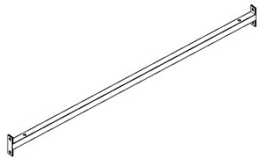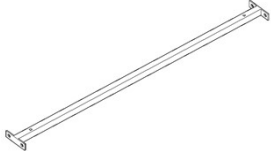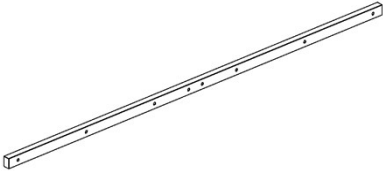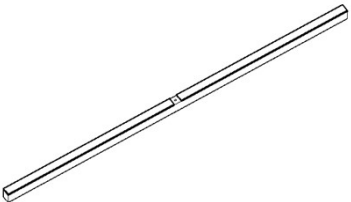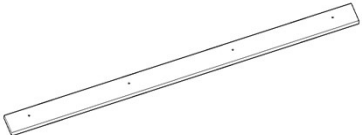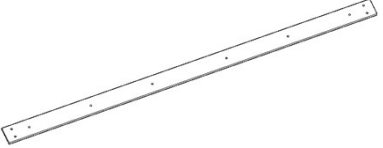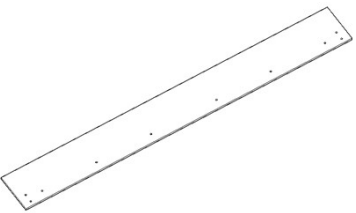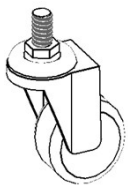1  Metal Slat Frame x2	2  Rail x1	3  Panel x1
4  Panel x1	5  Backboard x1	6  Headboard x1
7  Left Handrail x1	8  Right Handrail x1	9  Connecting Iron Pipe x2
10  Connecting Iron Pipe x1	11  Support Slat x2	12  Lower Support Slat x1
13  Slats x16	14  Panel x2	15  Back Trundle Panel x1
16  Front Trundle Panel x1	17  Caster x4	

Part List

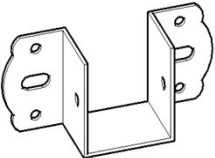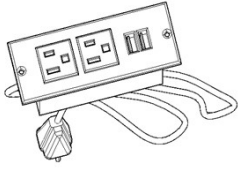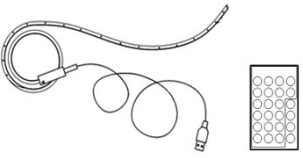19  U-Shaped Bracket x2	20  Plastic Feet x4	21  Socket X1
22  Lamp Strip Kit x1		



Hardware List

A  Bolts(M6X10mm) X8	B  Bolts(M6X16mm) X18	C  Bolts(M6X30mm) X8
D  Bolts(M6X35mm) X14	E  Bolts(M6X50mm) X5	F  Spanner(M6) X1
G  Allen Key X1	H  Flat Gasket X18	I  Screws (M3X12mm) X5
J  Screws (M4X25mm) X10	K  P-Shaped Iron Sheet x3	L  Angle iron x2
M  Eccenter X8	N  Connecting screw rod X8	

Step1


Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

Tear the tape from the back of the LED light

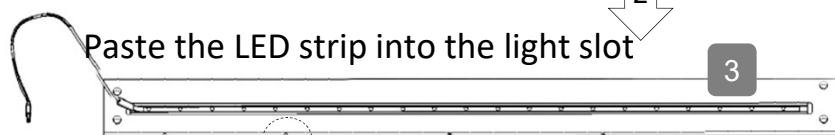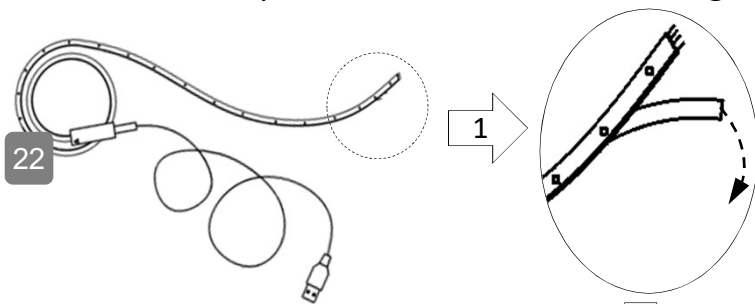

Paste the LED strip into the light slot

Watch the direction. There are screw holes on the edge of the board

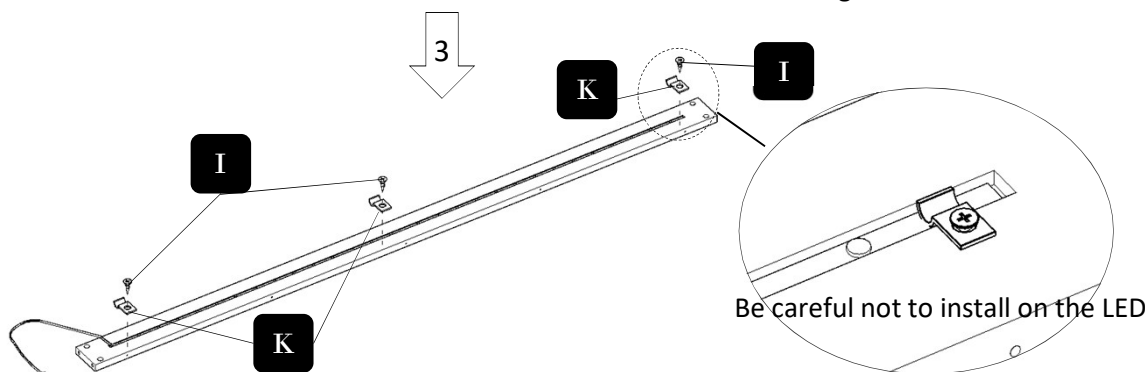

I




Screws (M3X12mm) X3

K



P-Shaped Iron Sheet x3



Assembly Tools Required(Not Included)


Step2

M





Eccenter X4




RIGHT

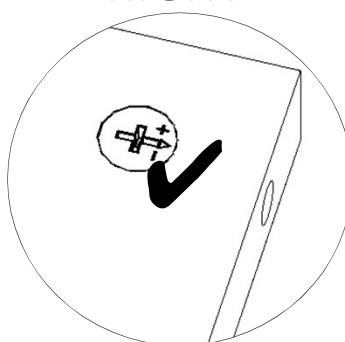


WRONG

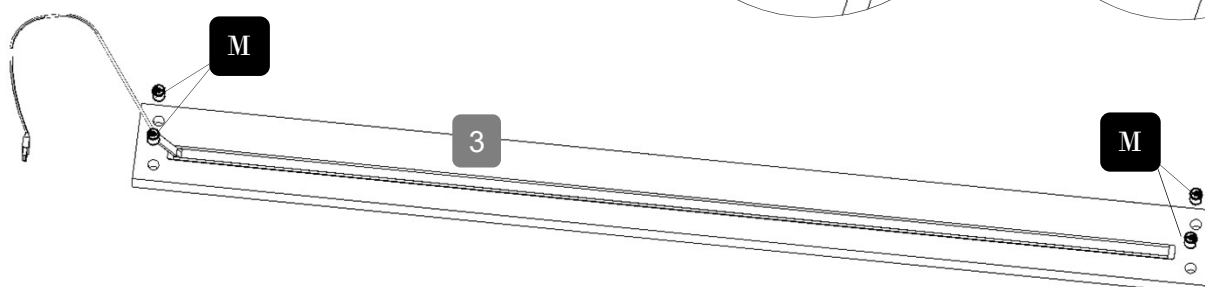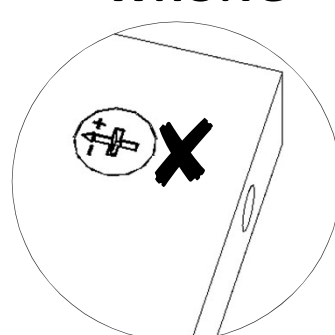


Step3

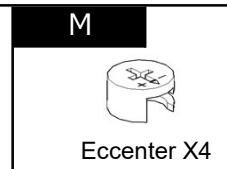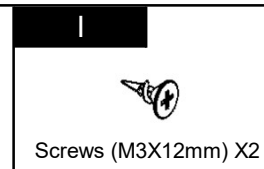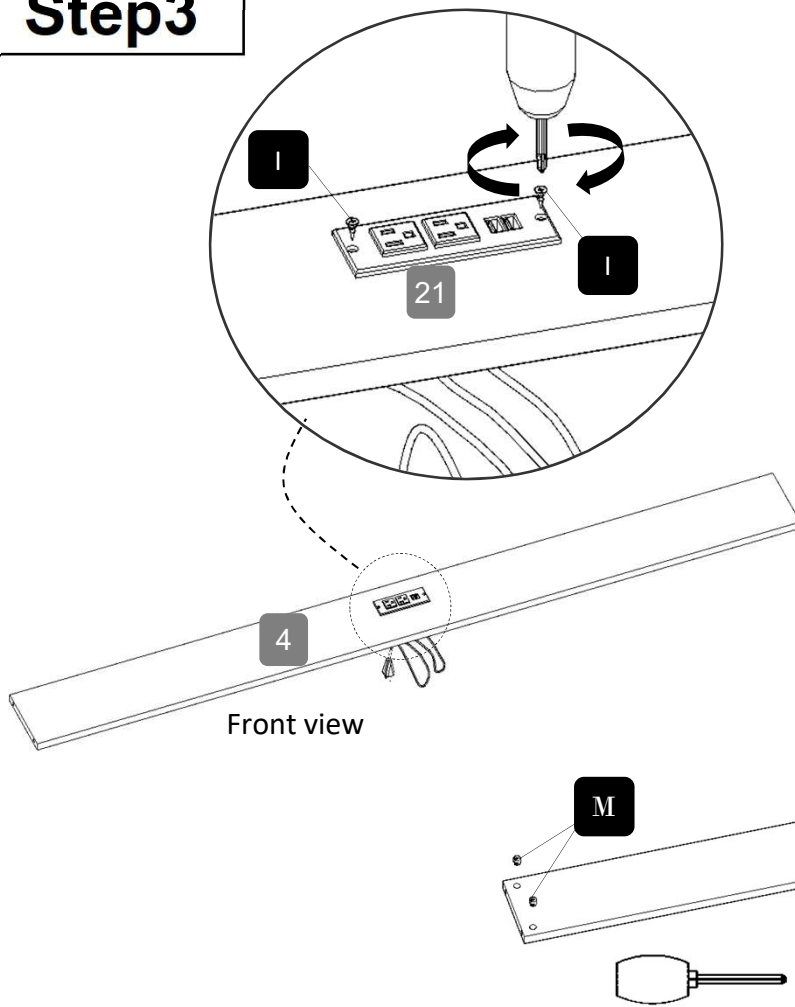

RIGHT

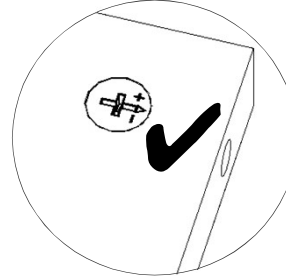


WRONG

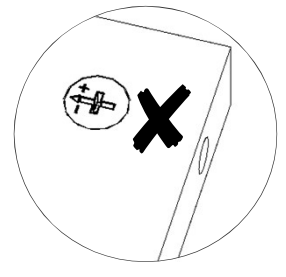


Assembly Tools Required(Not Included)

Step4

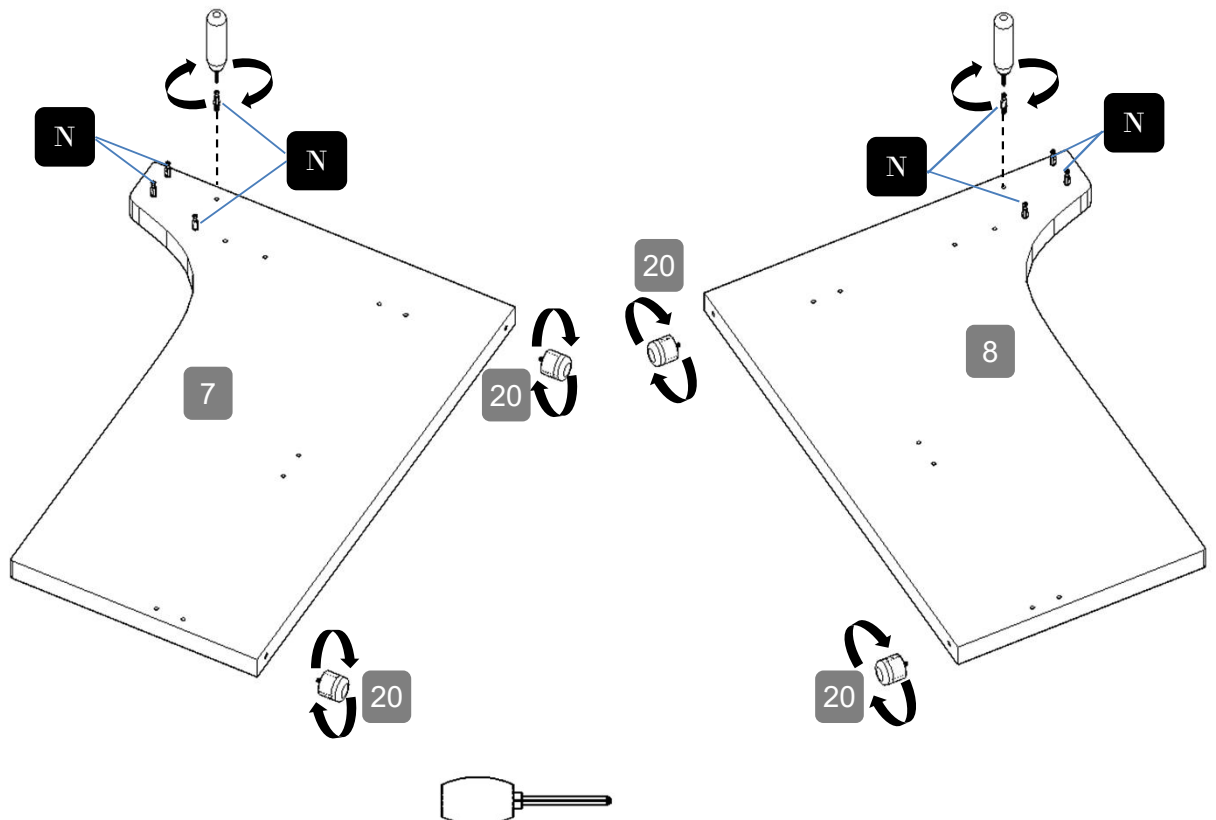

Assembly Tools Required(Not Included)

Step5

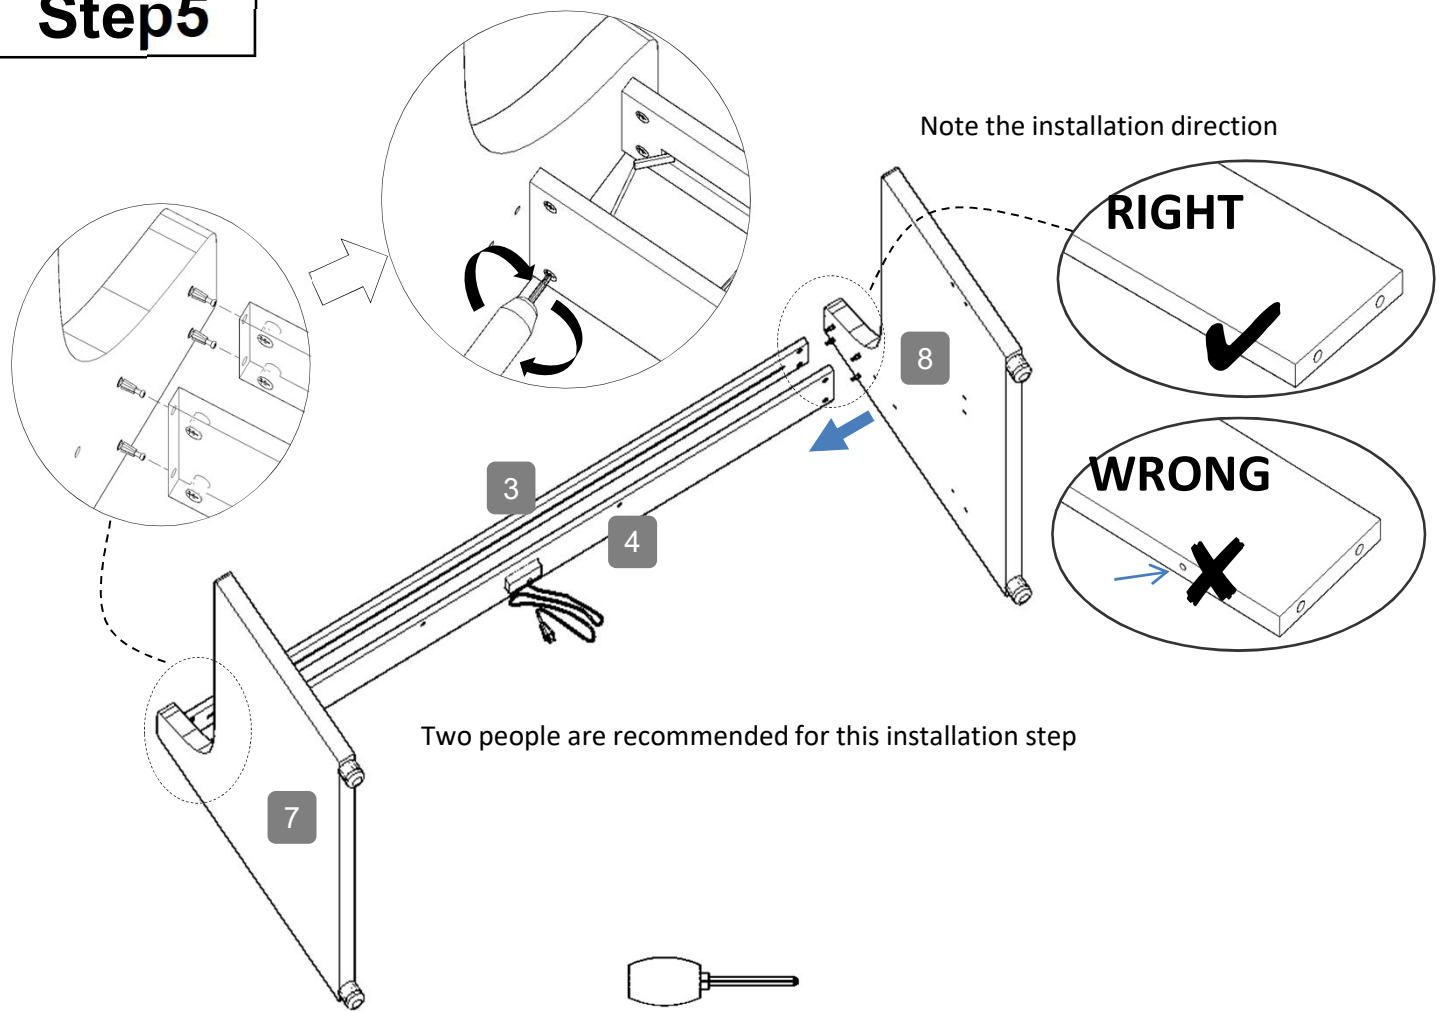

Assembly Tools Required(Not Included)


Step6

Use your bare hands or a tool to turn the screw to 80%

B



Bolts(M6X16mm) X4

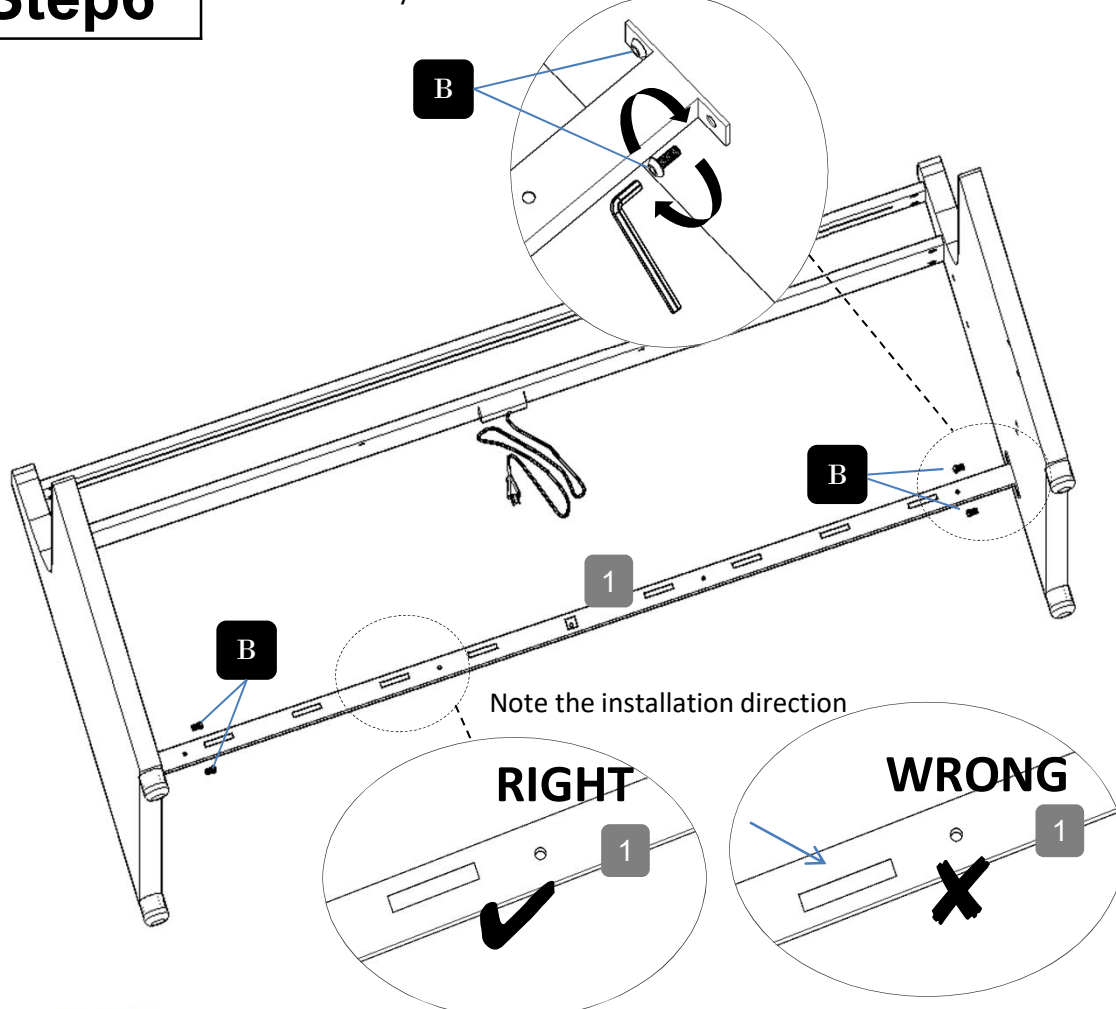


Step7

J



Screws (M4X25mm) X10

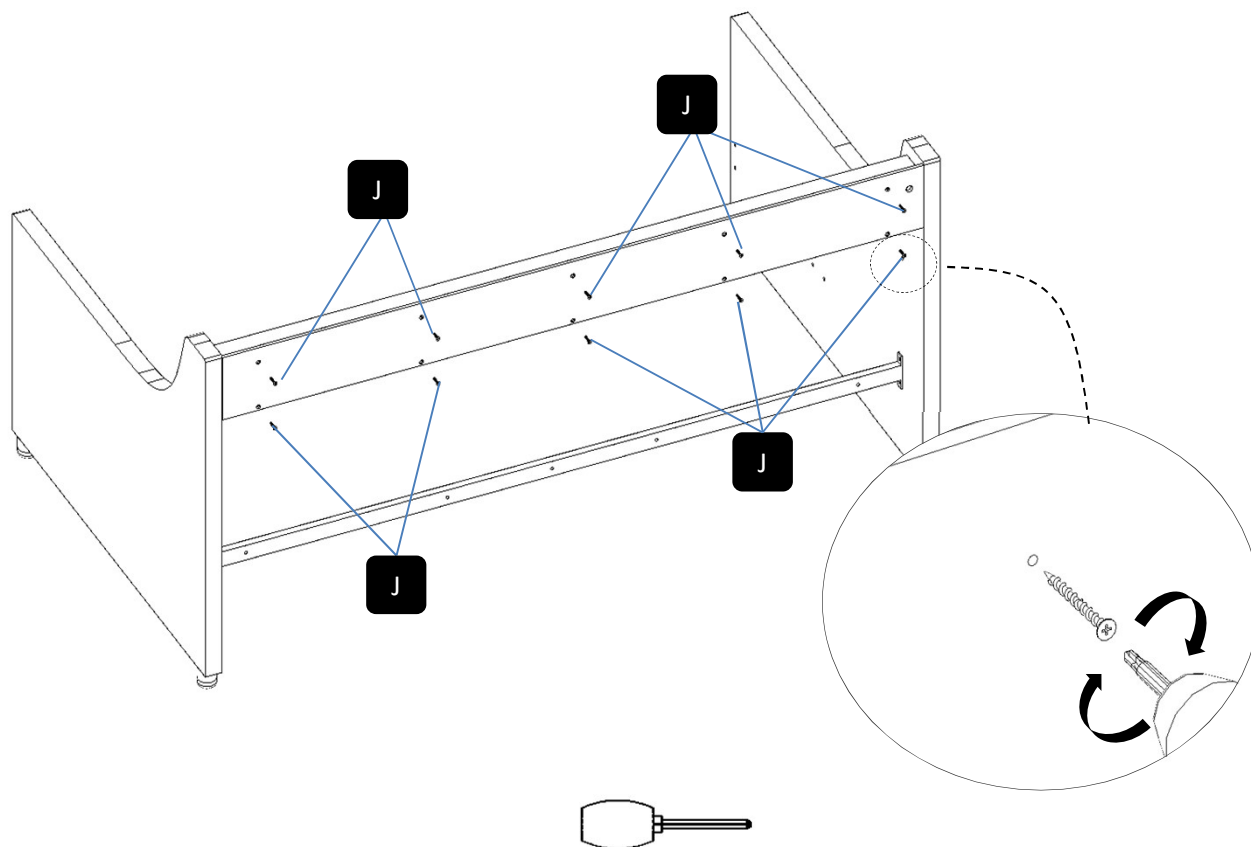

Assembly Tools Required(Not Included)

Step8

D



Bolts(M6X35mm) X2

E




Bolts(M6X50mm) X4

H



Flat Gasket X6

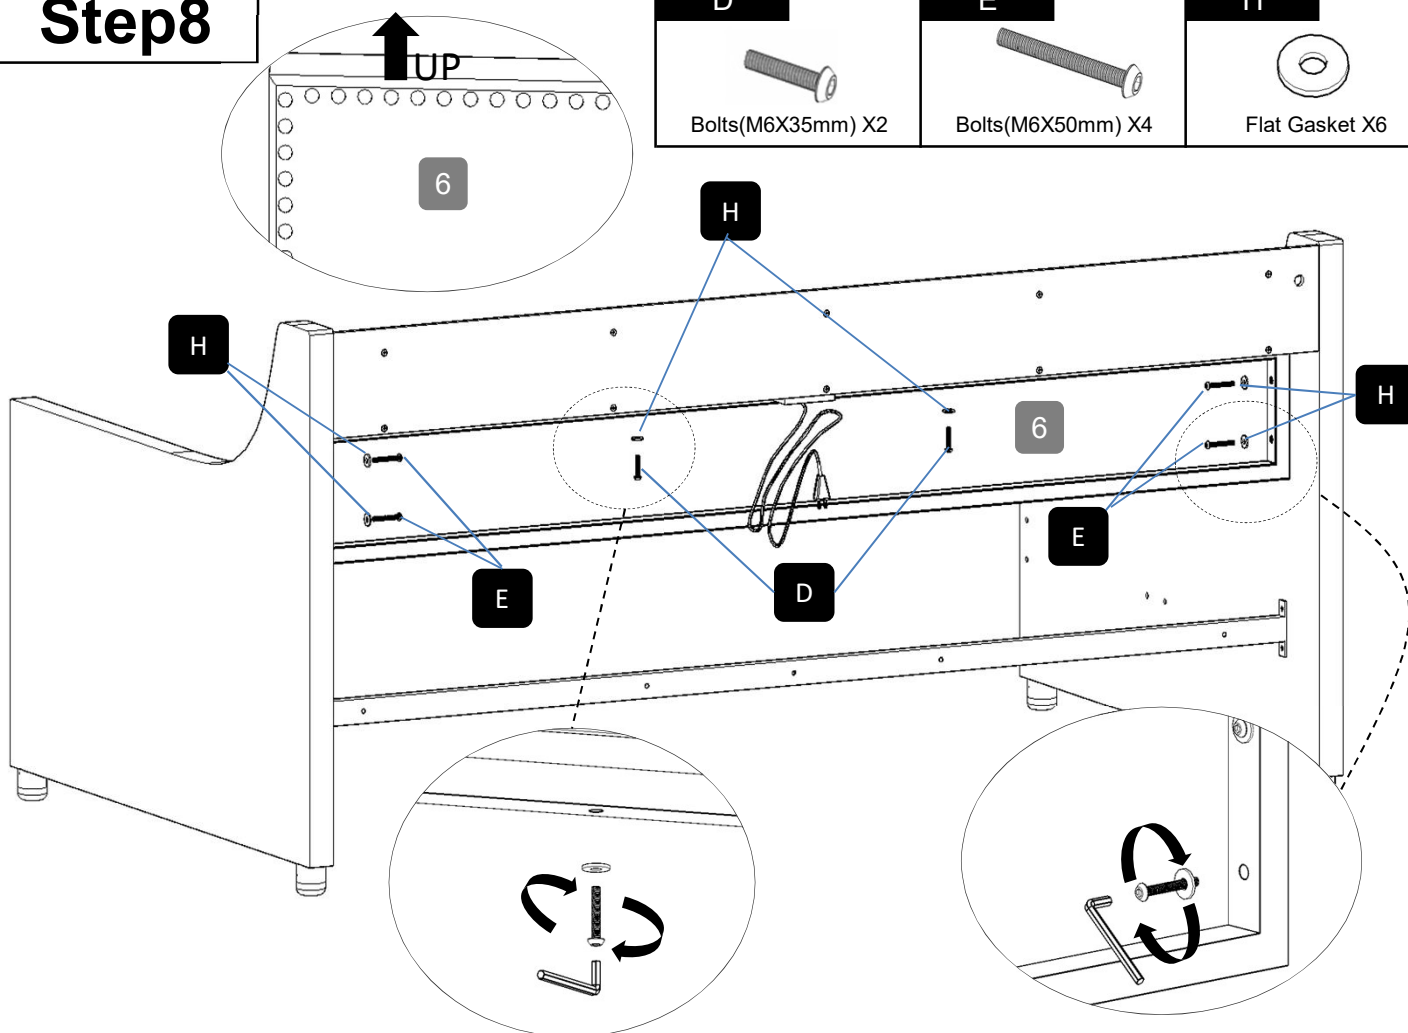


Step9

B



Bolts(M6X16mm) X4

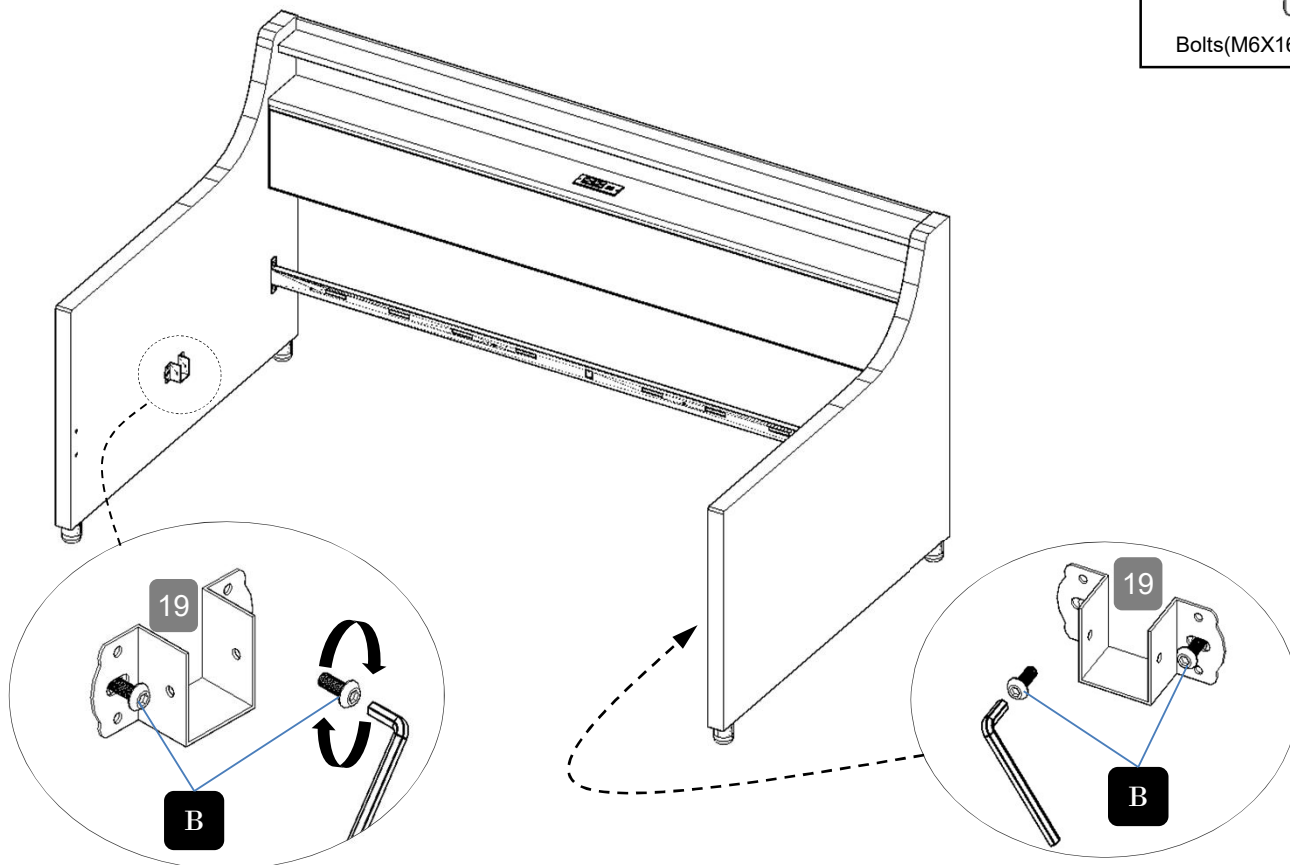

Step10

B




Bolts(M6X16mm) X1

E




Bolts(M6X50mm) X1

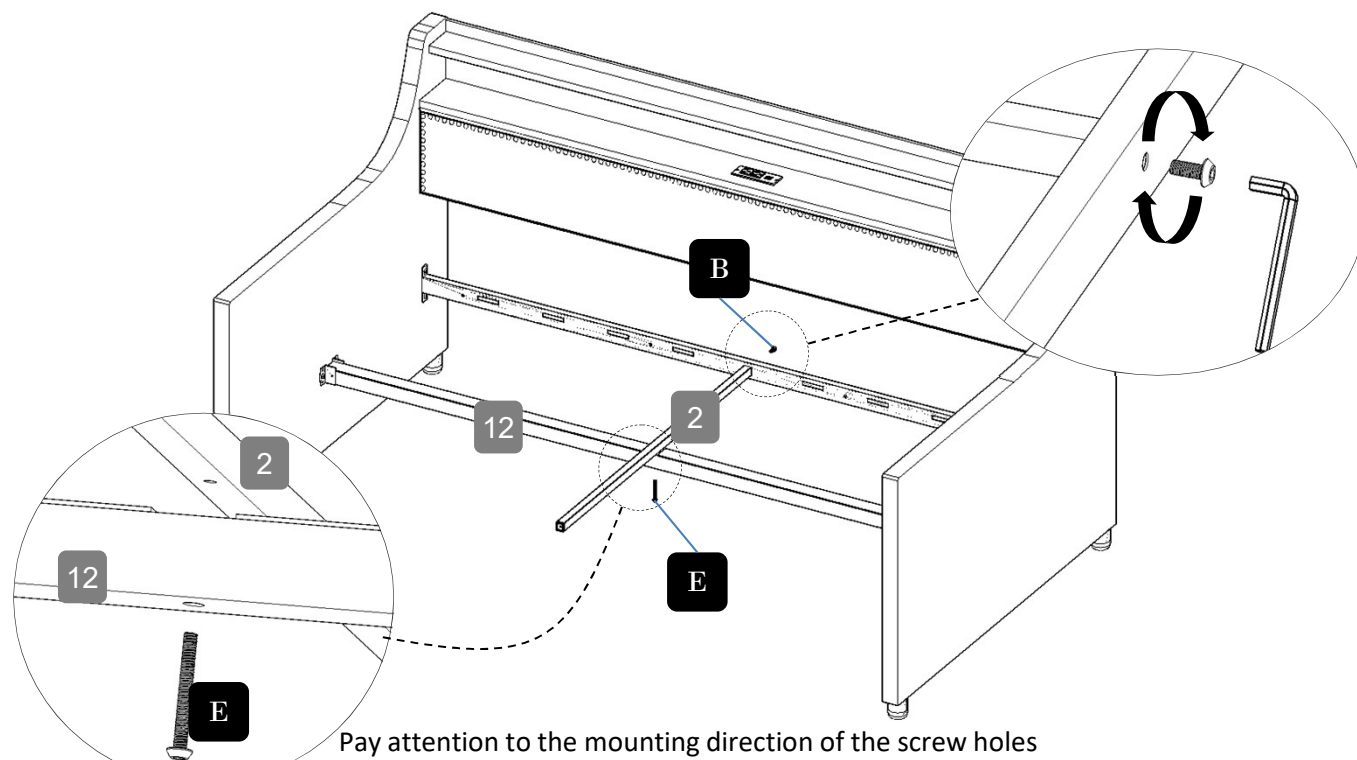

Bottom view

Pay attention to the mounting direction of the screw holes

Step11

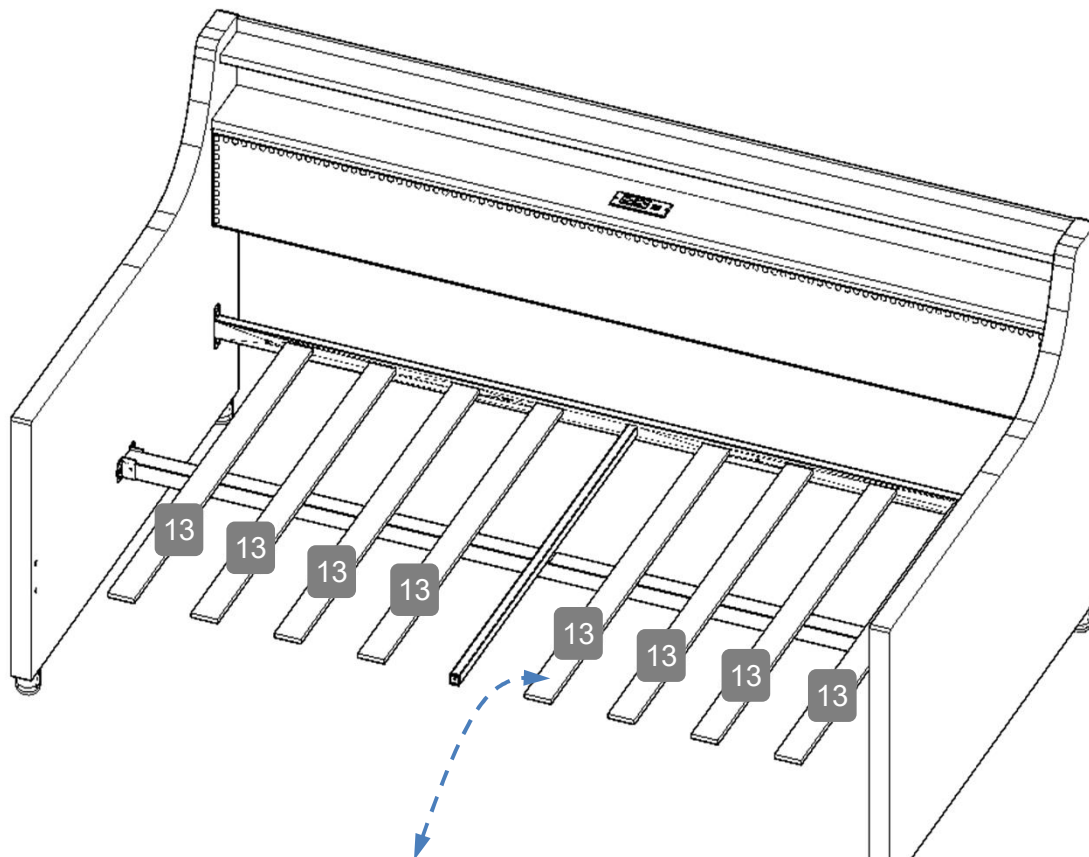




Please note that the bottom of these 8 slats is without felt, and the bottom of the other 8 slats with felt is used in step 18 of the installation diagram

Step12



B



Bolts(M6X16mm) X5

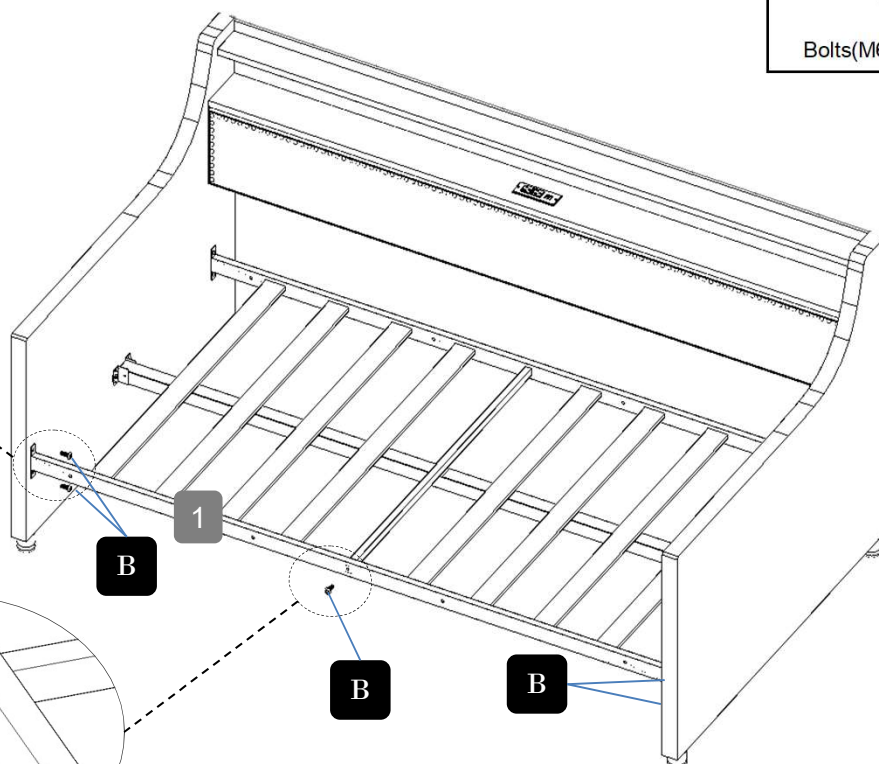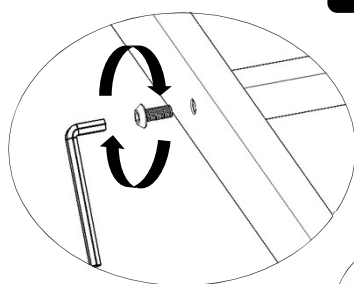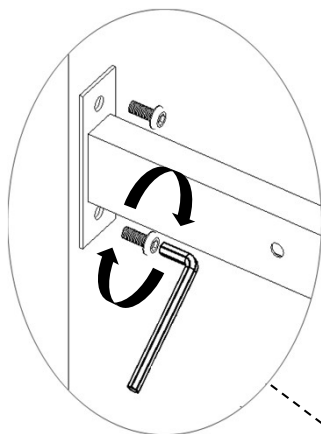

Note the installation direction of metal slat frame NO.1

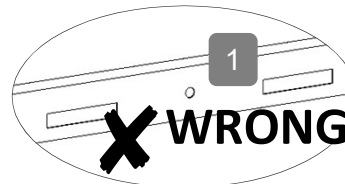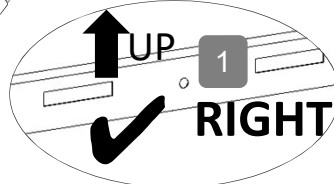


Step13

C



Bolts(M6X30mm) X8

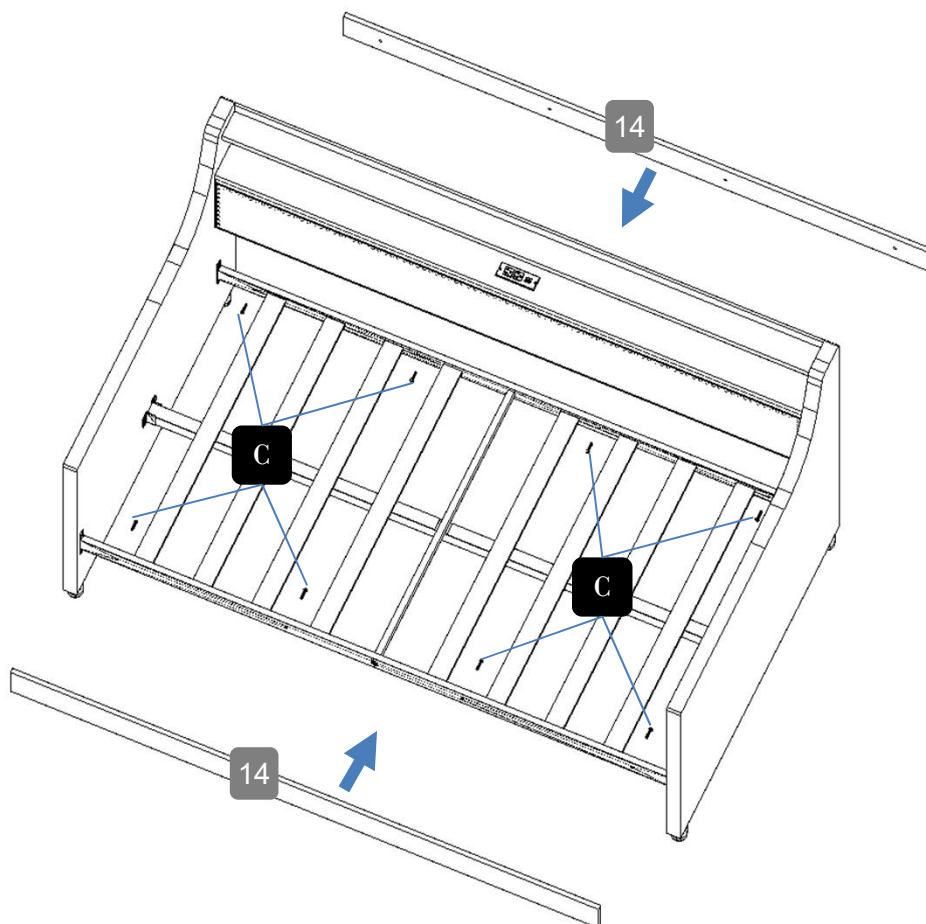

Step14

B




Bolts(M6X16mm) X2

L




Angle iron x2





After this step, you can lock the other bolts tightly

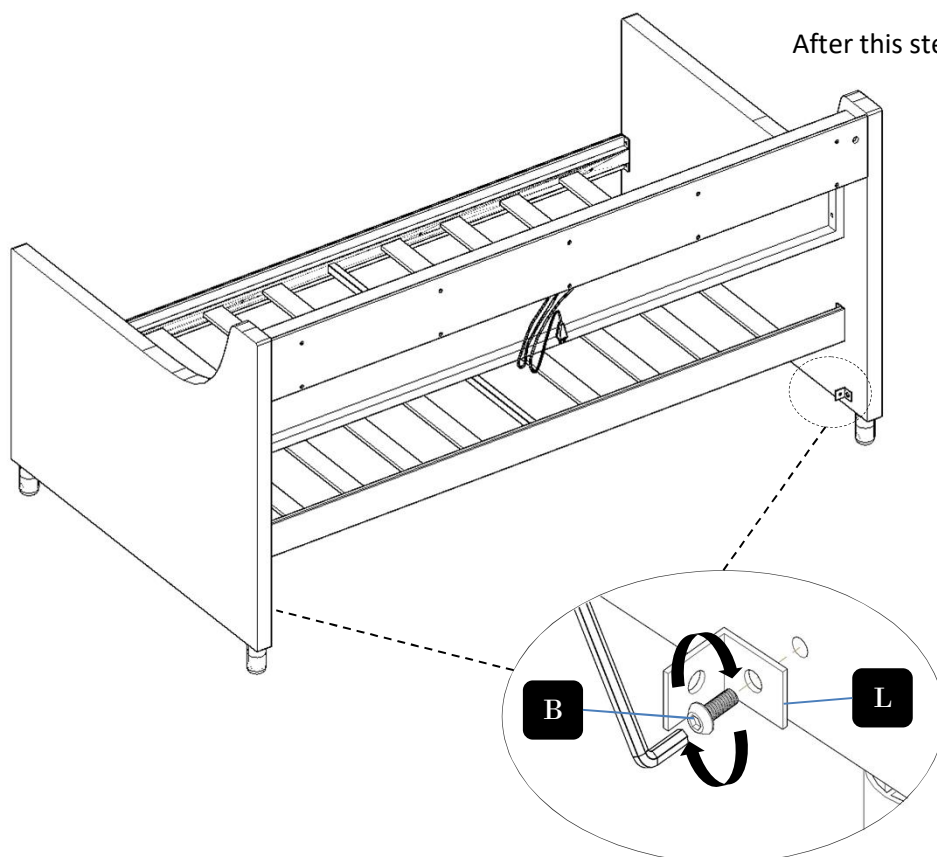


Step15

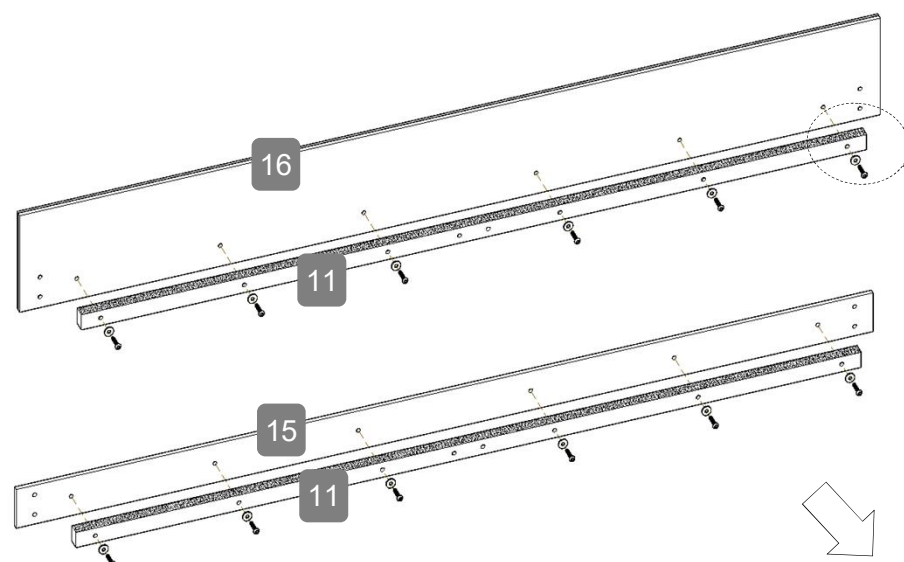

D	H
Bolts(M6X35mm) X12	Flat Gasket X12

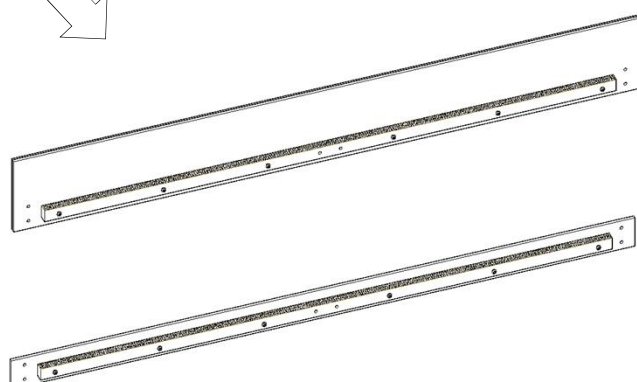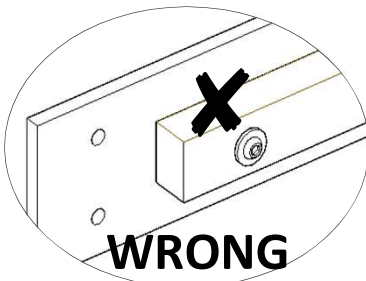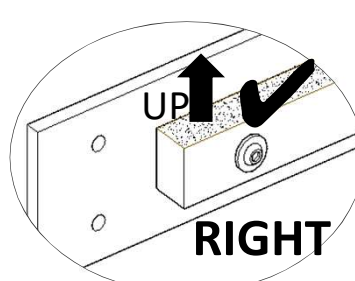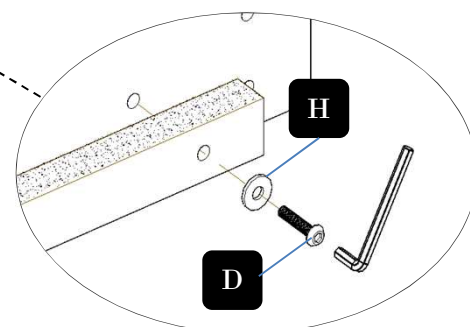


Step16

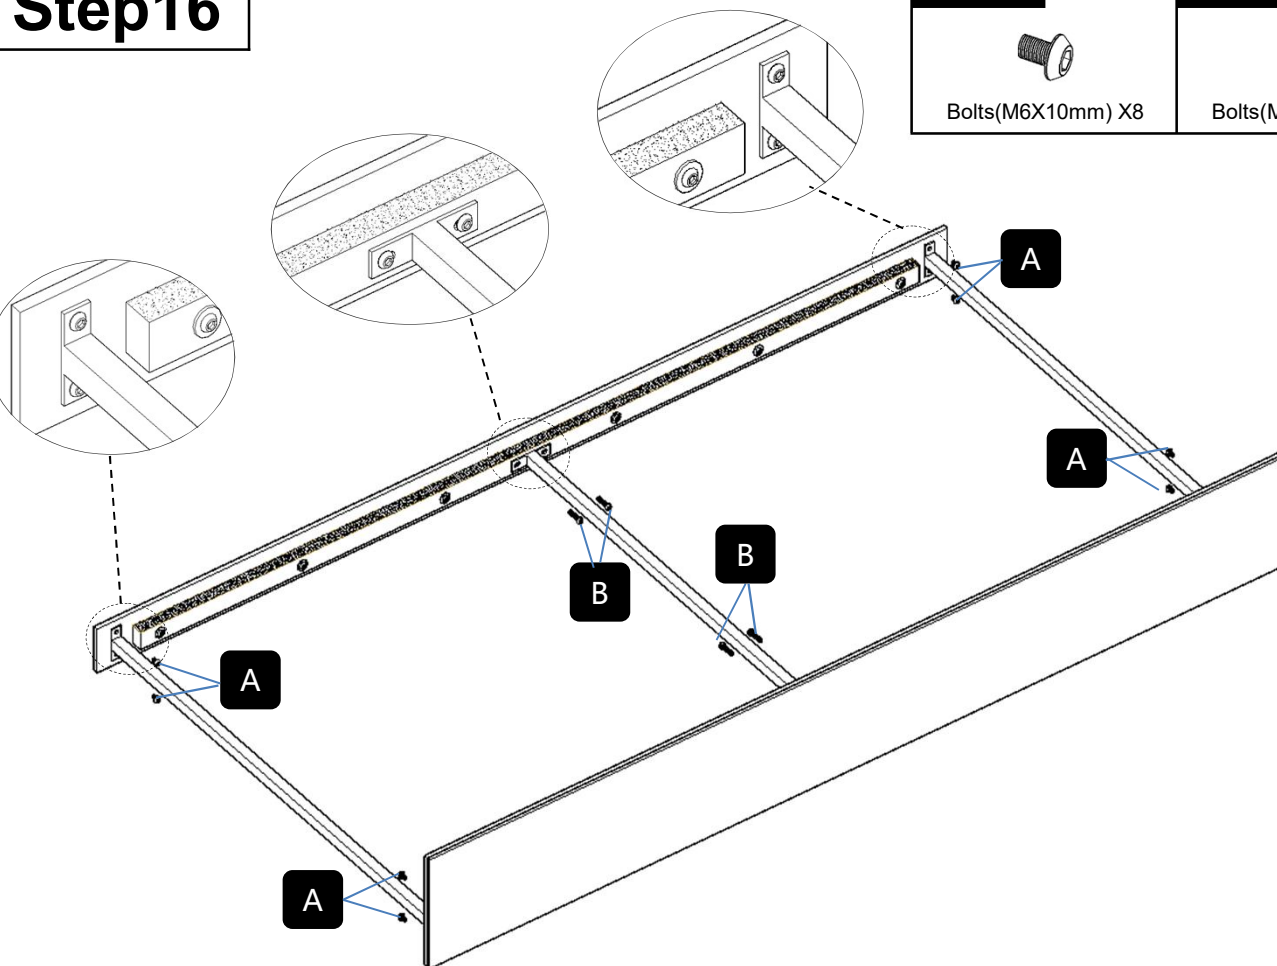


A	B
Bolts(M6X10mm) X8	Bolts(M6X16mm) X4




Step17

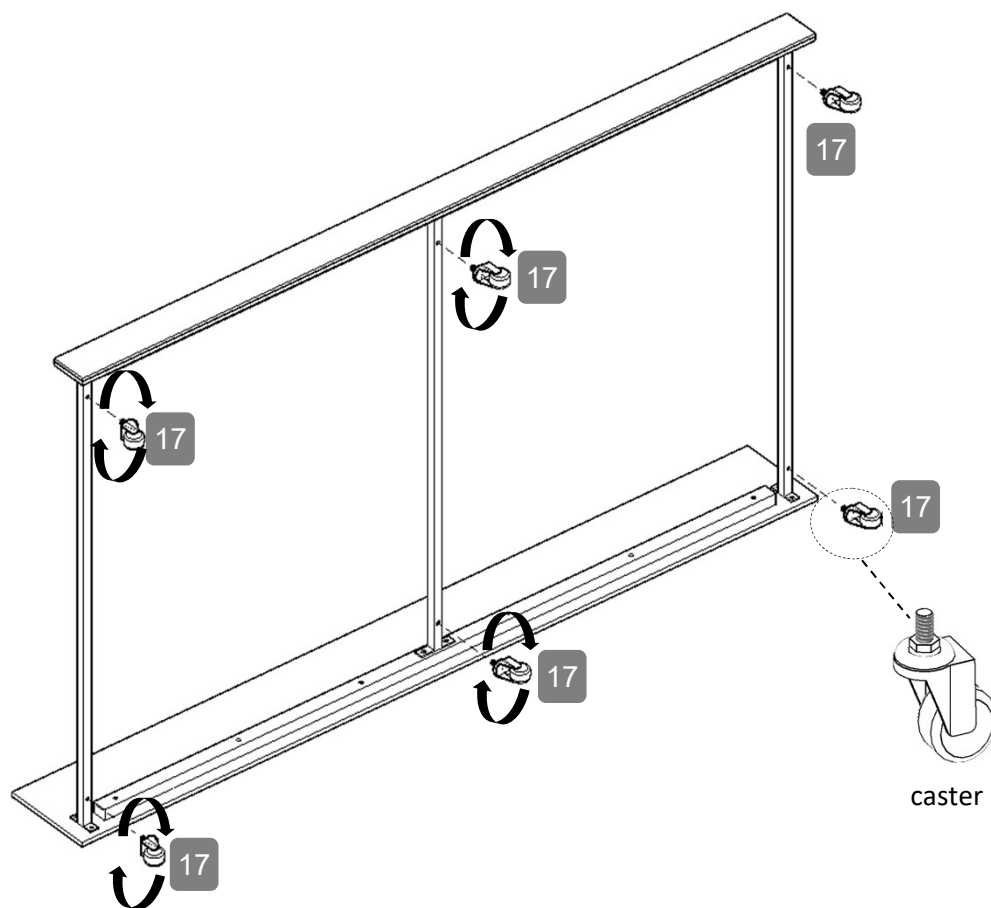

Step18

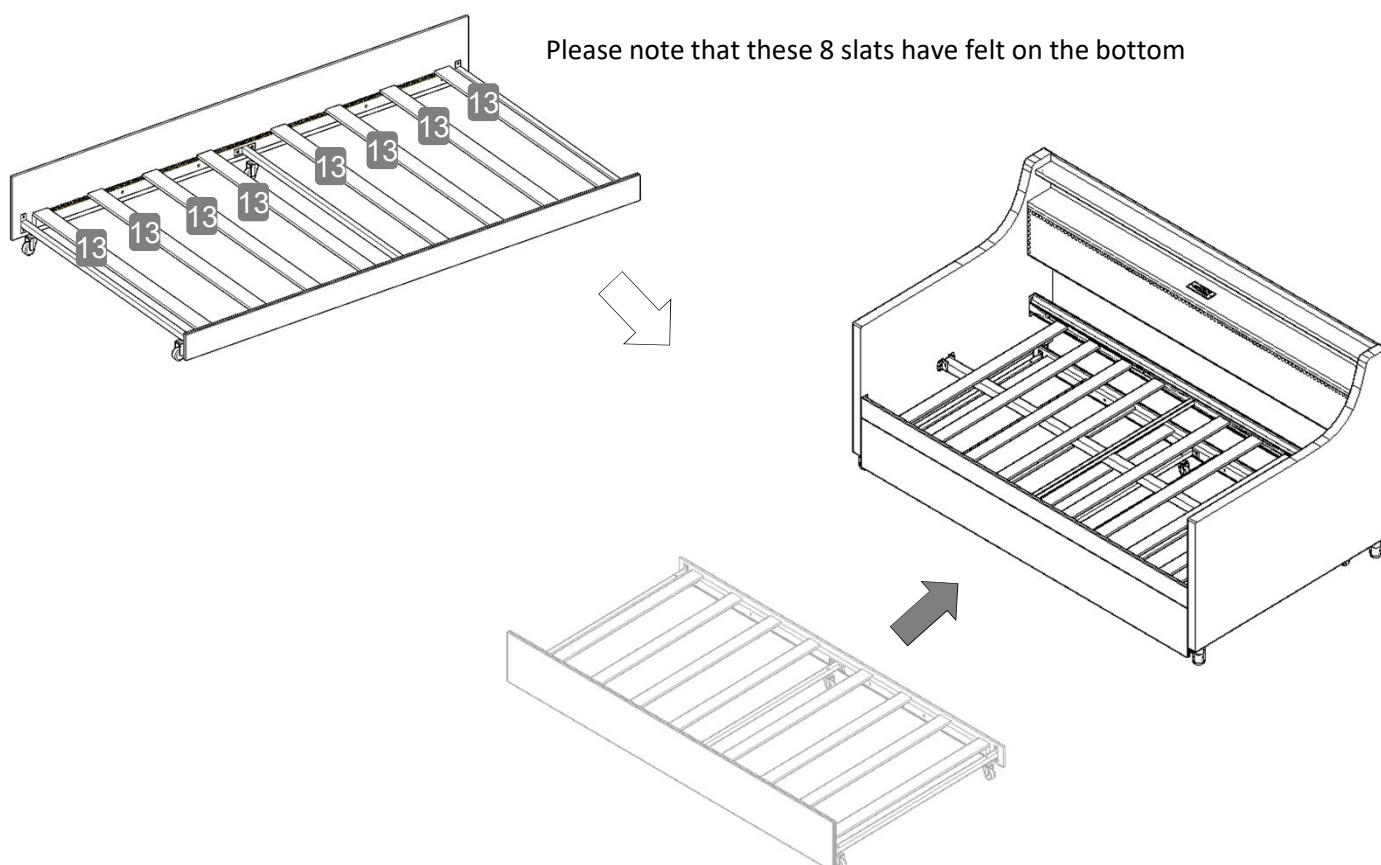


Step19

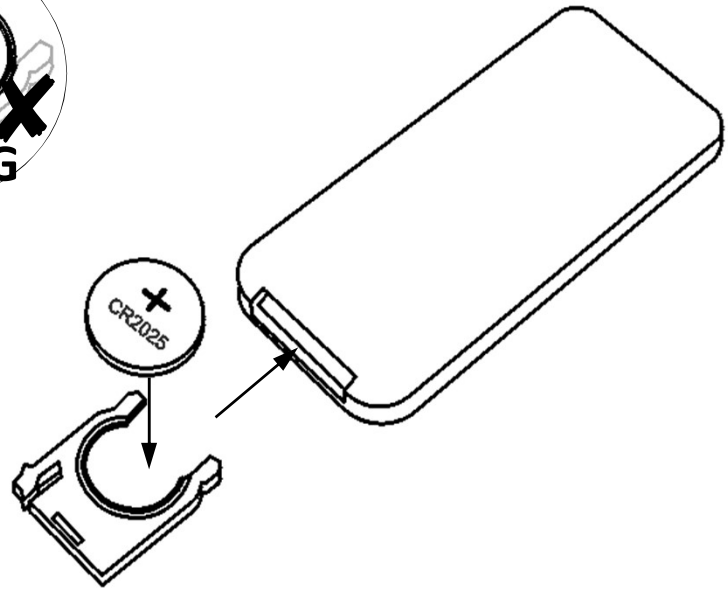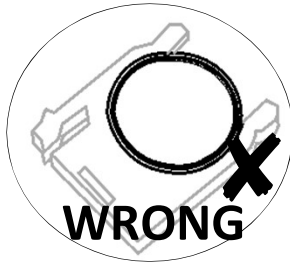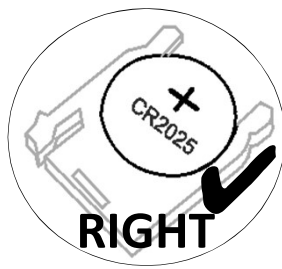

Remote control does not contain batteries, please buy your own a CR2025 button battery installed into the remote control

Step20

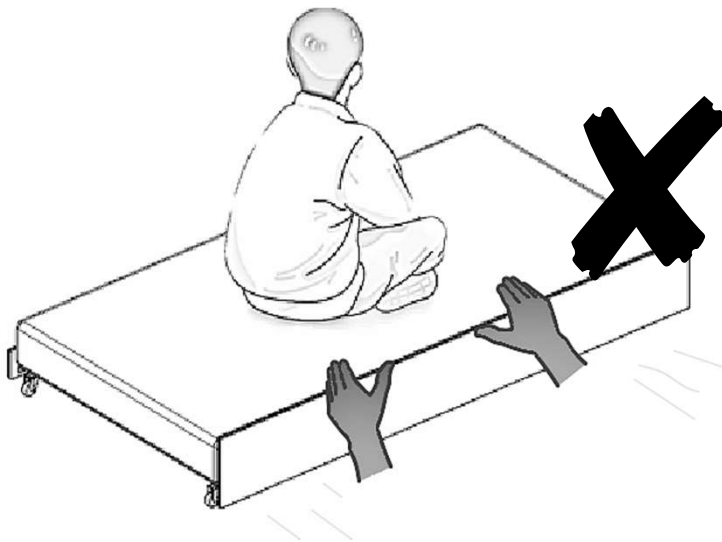

Note: Please don't move the bed when someone is in it