


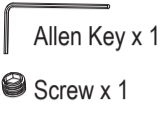
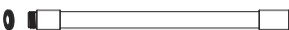
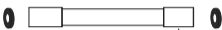






**Flexible Shower Bar System**

INSTALLATION INSTRUCTIONS


<p><b>What's in the package.</b></p>  <p>Handheld Shower Head x 1 2.5gpm Water Regulator (Grey) x 1</p>  <p>Washer x 1 2.5gpm Water Regulator (Grey) x 1 Fixed Showerhead x 1</p>  <p>1.8gpm Water Regulator (Red) x 2 - 1 for handheld shower head / 1 for fixed shower head - For CA residents or customers who wish to conserve more water</p>	 <p>Allen Key x 1 Screw x 1</p>	<p>Upper Flexible Tube x1 (Longer) Washer x1</p>  <p>Lower Flexible Tube x1 (Shorter) Washer x2</p>  <p>Anti-twist</p>  <p>Handheld Shower Head Bracket x1</p>	 <p>Shower Hose x 1 Washer x 2</p>  <p>2-Way Diverter x 1</p>  <p>Teflon Tape x 1</p>
--	--	--	--

① Remove old showerhead.



Old Shower (Remove)

② Wrap Teflon tape clockwise a few rounds to cover the shower arm threads.




③ Attach 2-way diverter to the shower arm by rotating hex nut clockwise by hand.

Cover the hex nut with a cloth to avoid scratch.


Lightly snug the hex nut with a wrench to make sure

- Hex nut is fully tightened.
- 2-way diverter is firmly connected to the shower arm.

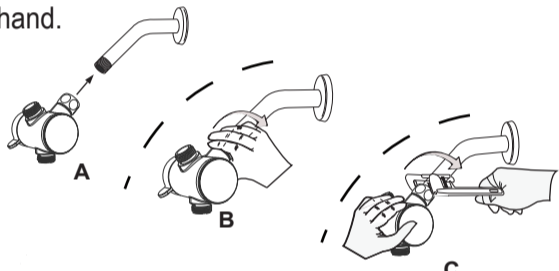


④ Ensure a washer is inside the connector of the upper (longer) flexible tube.

Connect upper (longer) flexible tube to the diverter.

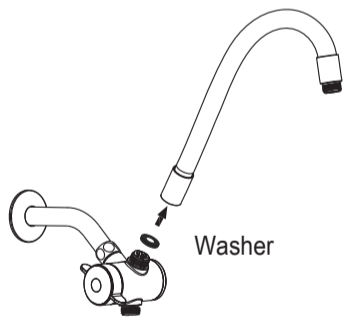

⑤ Ensure a washer is inside the connector of the lower (shorter) flexible tube.

Connect the lower (shorter) flexible tube to the diverter.

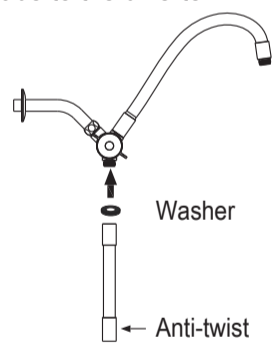


Washer

Anti-twist

⑥ Ensure a washer is between the lower flexible tube and handheld shower head bracket.

Connect the handheld shower head bracket to the lower flexible tube.

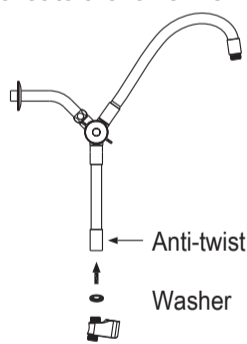


Anti-twist

Washer

These 2 steps may already be pre-assembled.

⑦ Ensure a washer in each of the hose nuts.

Connect -  
HEX NUT to the HANDHELD SHOWERHEAD BRACKET;  
CONICAL NUT to the HANDHELD SHOWERHEAD.

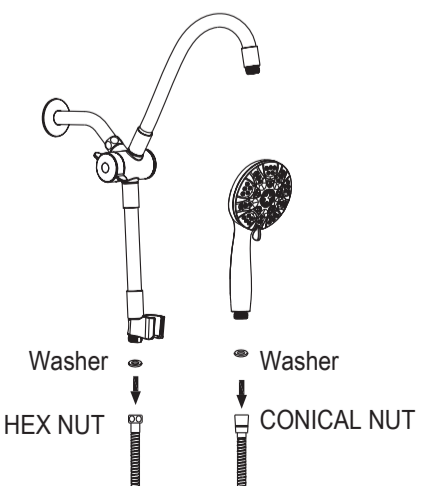

Washer

HEX NUT


Washer

CONICAL NUT

⑧ Ensure a washer is in the ball joint of the fixed showerhead.

Attach the fixed showerhead to the upper flexible tube.

Put the screw into the hole located on the ball joint, then fasten it tightly with the Allen key.

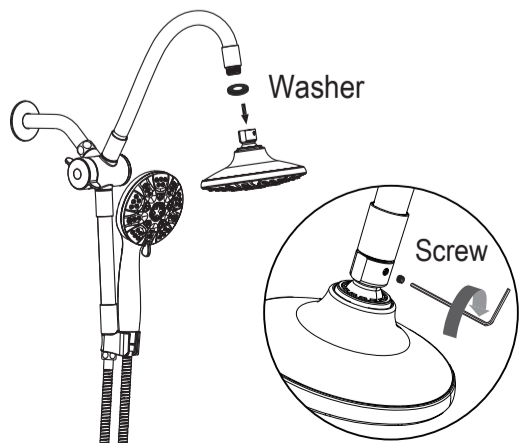

Washer

Screw