



Product Installation Manual






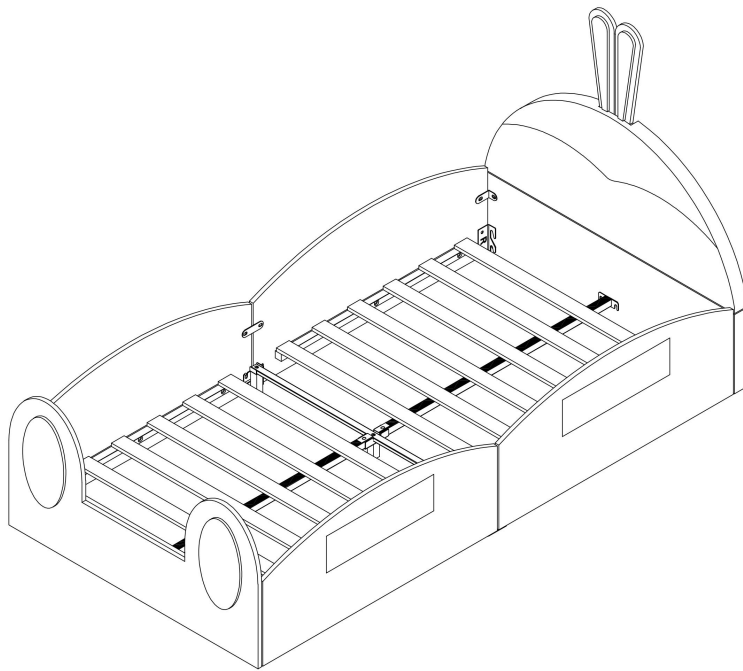


W5305P519059 / W5305P519060

W5305P519061 / W5305P519062

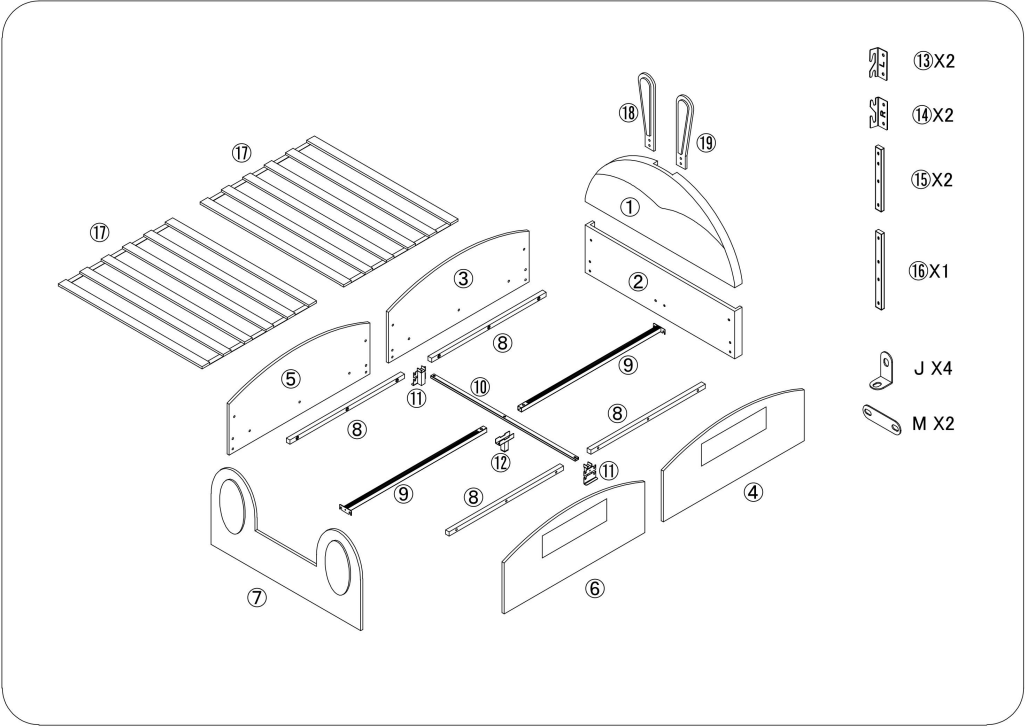


A		M8x18	X40
B		M8x35	X32
C		M8x45	X1
D		D5mm	X1

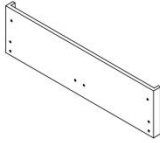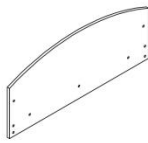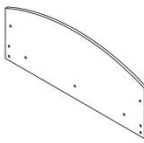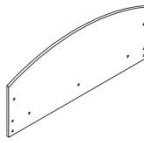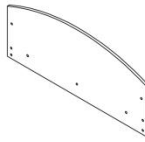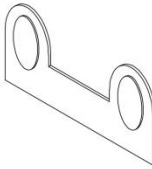 1 x1	 2 x1	 3 x1	 4 x1	 5 x1
 6 x1	 7 x1	 8 x4	 9 x2	 10 x1
 11 x2	 12 x1	 13 x2	 14 x2	 15 x2
 16 x1	 17 x2	 18 x1	 19 x1	 J x4
 M x2				

2/9

Step 1


B		M8x35	16PCS
D		D5	1PC

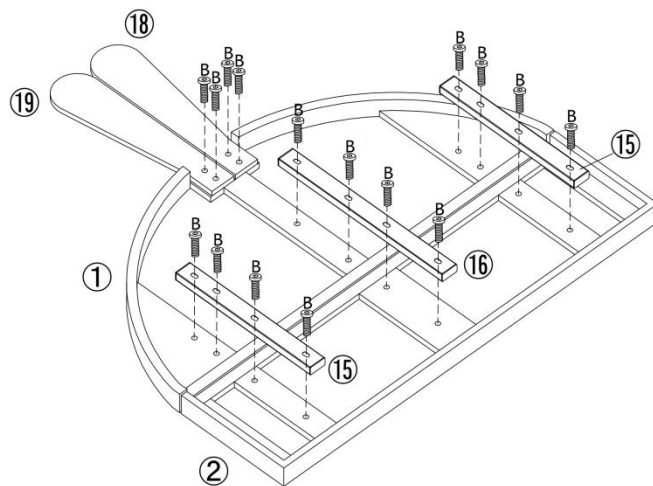

Step 2

A		M8x18	6PCS
D		D5	1PC


Please pre-install the screws to 50% first.

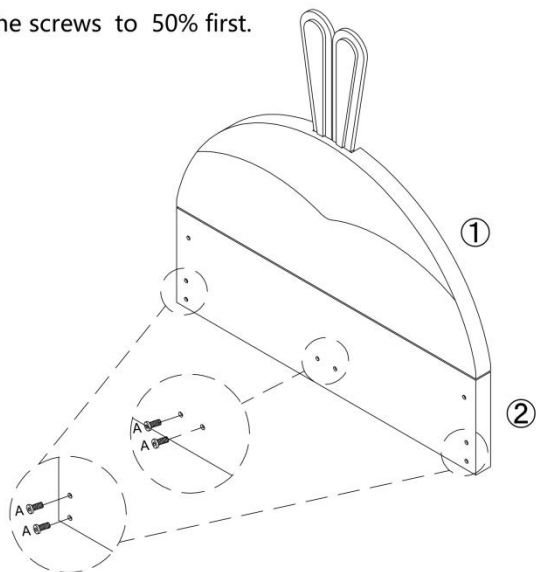

Step 3


A		M8x18	6PCS
D		D5	1PC

Please pre-install the screws to 50% first.

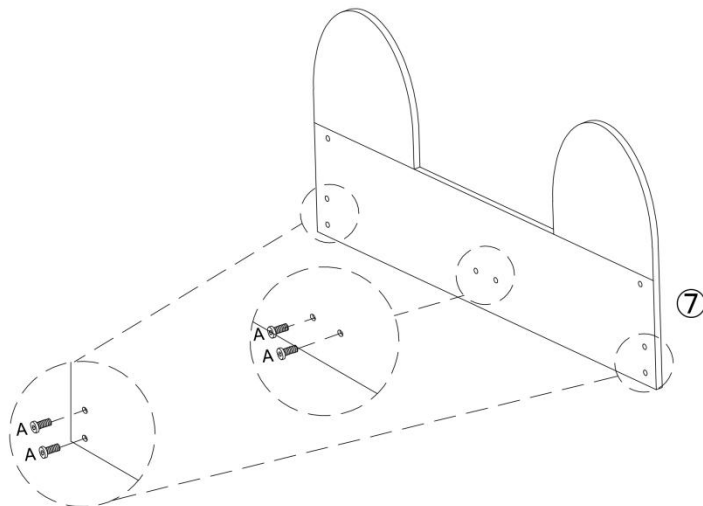


Step 4

B		M8x35	4PCS
C		M8x45	1PCS
D		D5	1PC

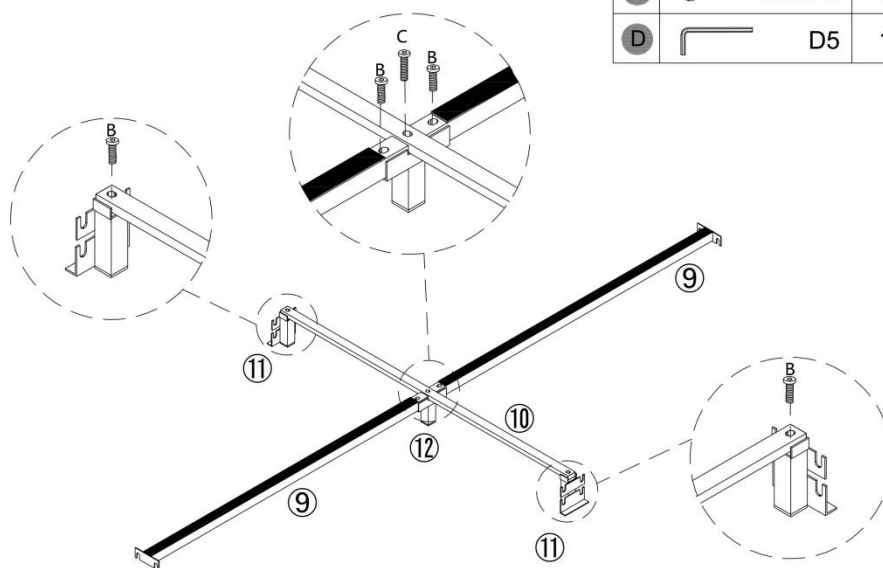


Step 5

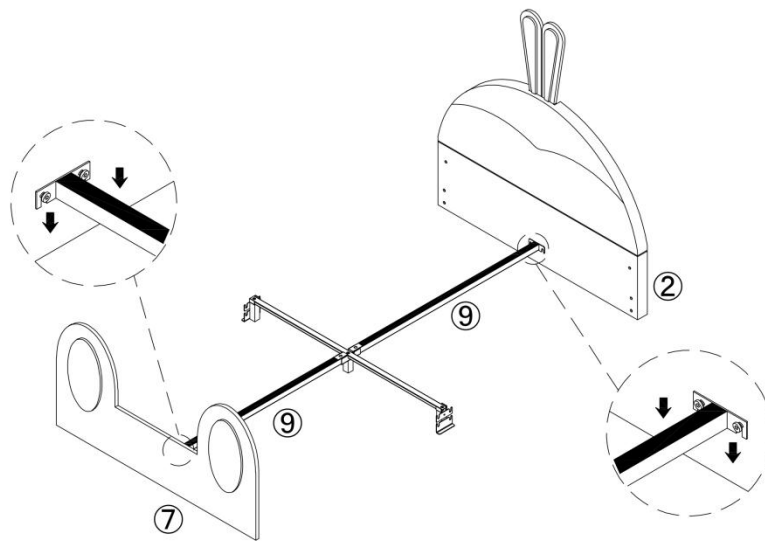


Step 6

A		M8x18	4PCS
B		M8x35	6PCS
D		D5	1PC

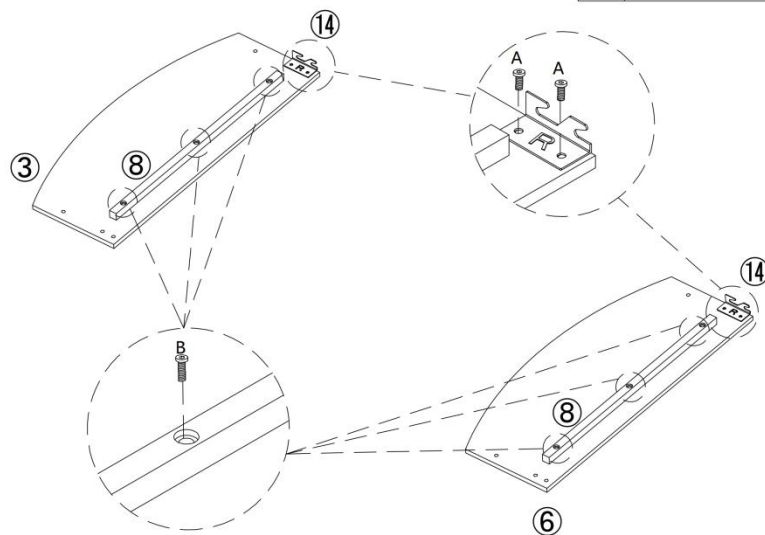

Step 7


A		M8x18	4PCS
B		M8x35	6PCS
D		D5	1PC

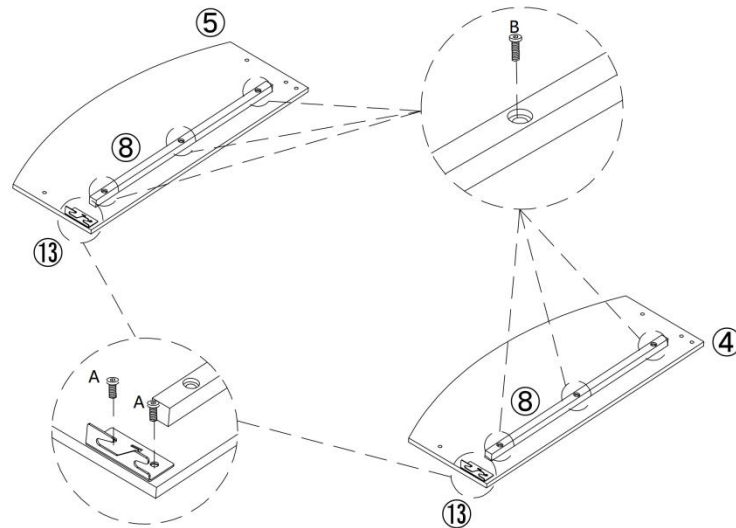

Step 8

Please pre-install the screws to 50% first.


A		M8x18	4PCS
D		D5	1PC

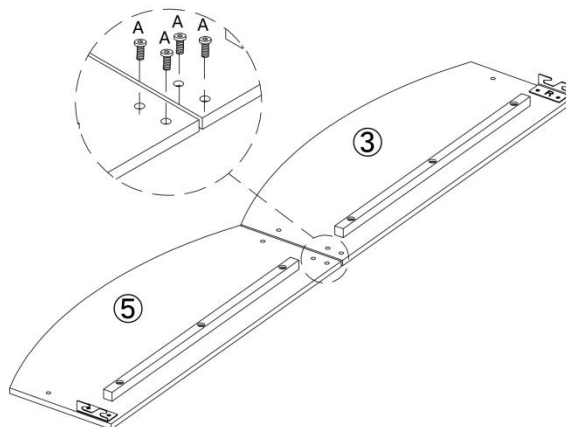

Step 9


A		M8x18	4PCS
D		D5	1PC

Please pre-install the screws to 50% first.

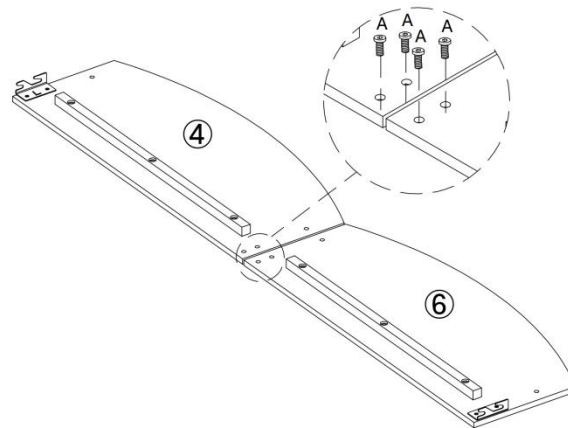

Step 10

Pass the screws of Part 5 and Part 3 through the middle of the screw mounting position on Part 11 and snap them into place, then hang Part 13 onto Part 7, hang Part 14 onto Part 2.

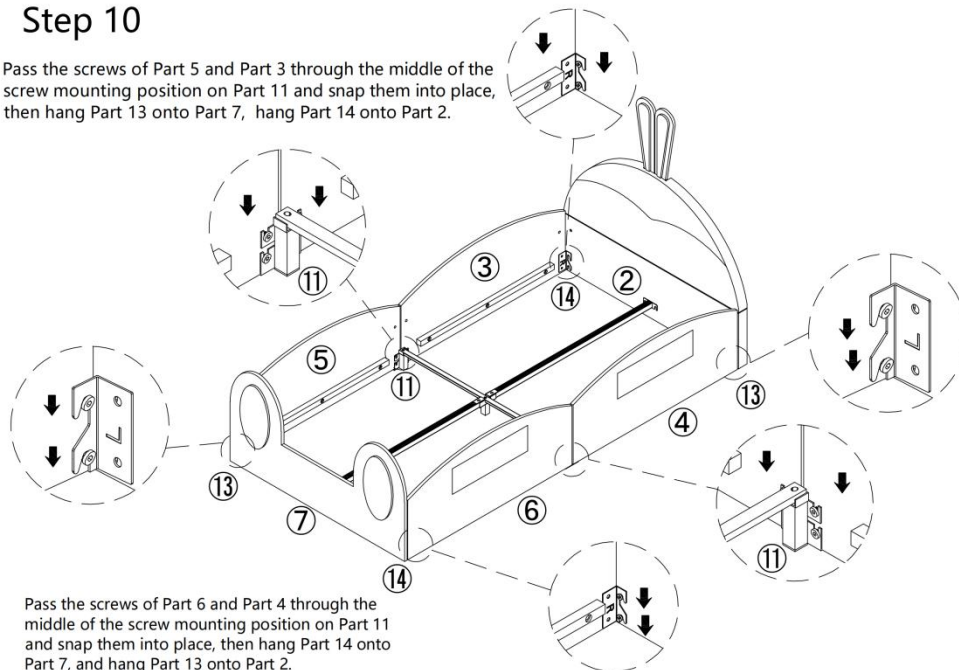


Pass the screws of Part 6 and Part 4 through the middle of the screw mounting position on Part 11 and snap them into place, then hang Part 14 onto Part 7, and hang Part 13 onto Part 2.


Step 11

Tighten all screws at this step.


A		M8x18	12PCS
D		D5	1PC

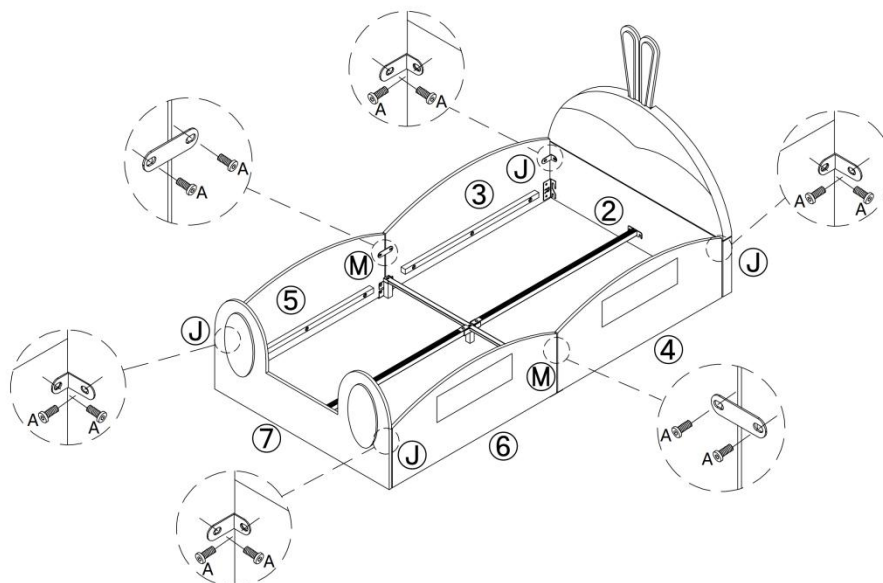

Step 12

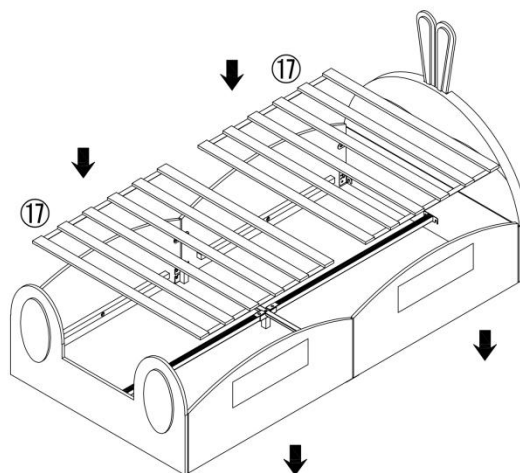

Step 13

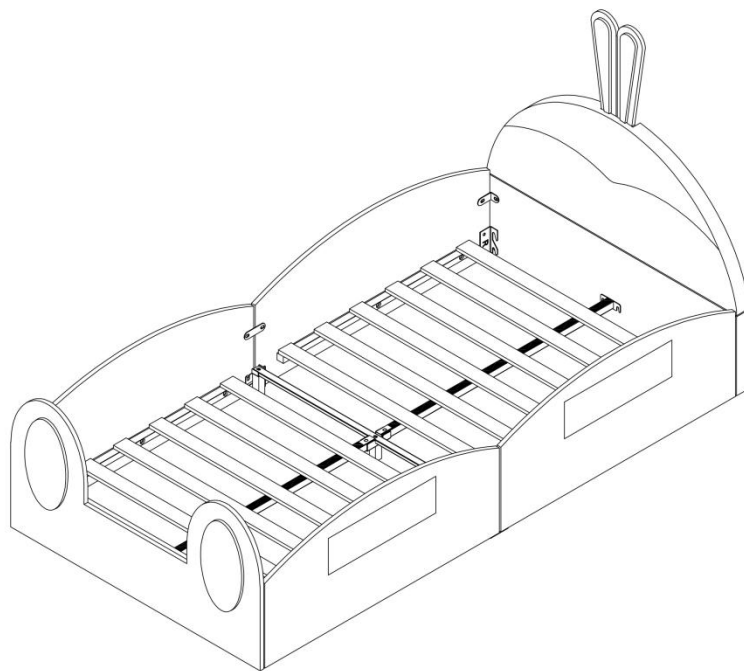

Ventilation Warning: It is recommended to ventilate for 48 hours after installation.