

No	Part	Qty
1	Headboard	1
2	Right Bedside	1
3	Sprung Base	1
4	Footboard	1
5	Wood Legs	2
6	Metal Legs	4
7	Left Bedside	1
8	Angle Iron	2

HARDWARE FOR BED				
No	Part			Qty
A			Screw M6X45	8
B			Screw M8X10	8
C			Gasket M6	8
D			M6x18	8
E			Nut M8	2
F			Gasket M8	2


HARDWARE FOR BEDFRAME				
No	Part			Qty
E			Nut M8	8
F			Gasket M8	16
G			Screw M8X20	4
H			Screw M8X45	4

- !**
- Please check contents and read instructions before commencing assembly.
 - Please use a soft mat to avoid damaging during assembly
 - Assemble this article following the enclosed instructions carefully.

30min


X2

STEP1

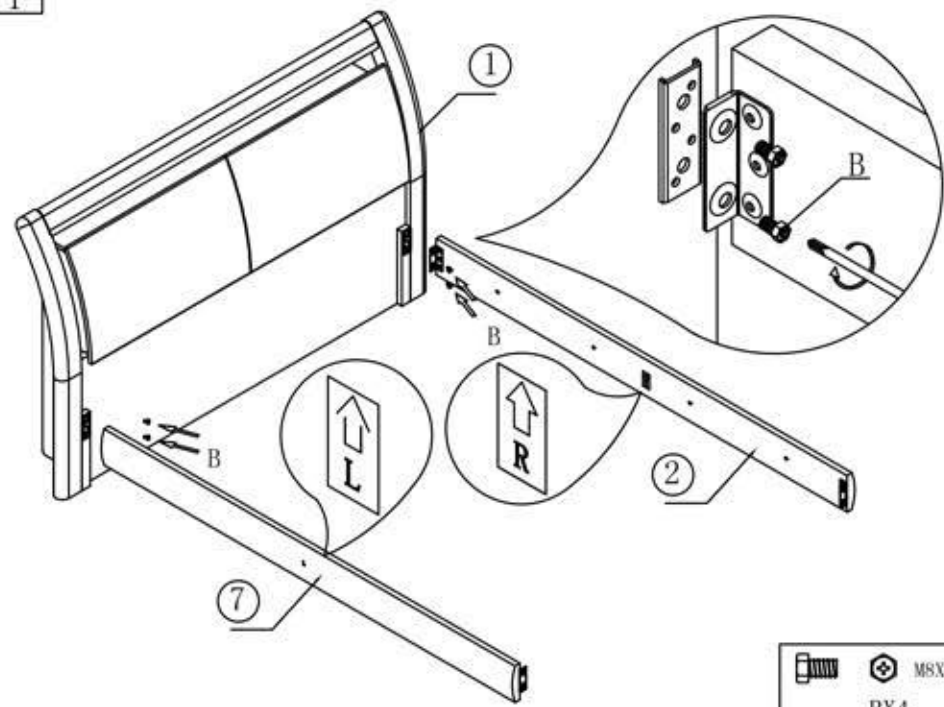


		M8X10
		BX4

STEP2

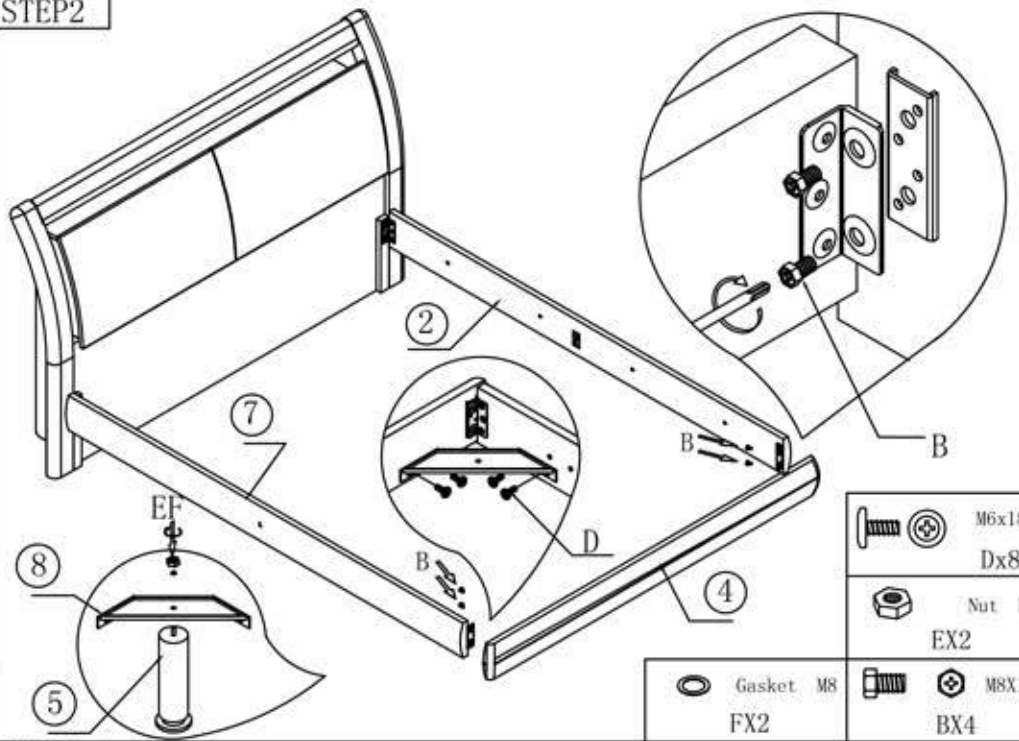

		M6x18
		Dx8
		Nut M8
		EX2
		Gasket M8
		FX2
		M8X10
		BX4


STEP3

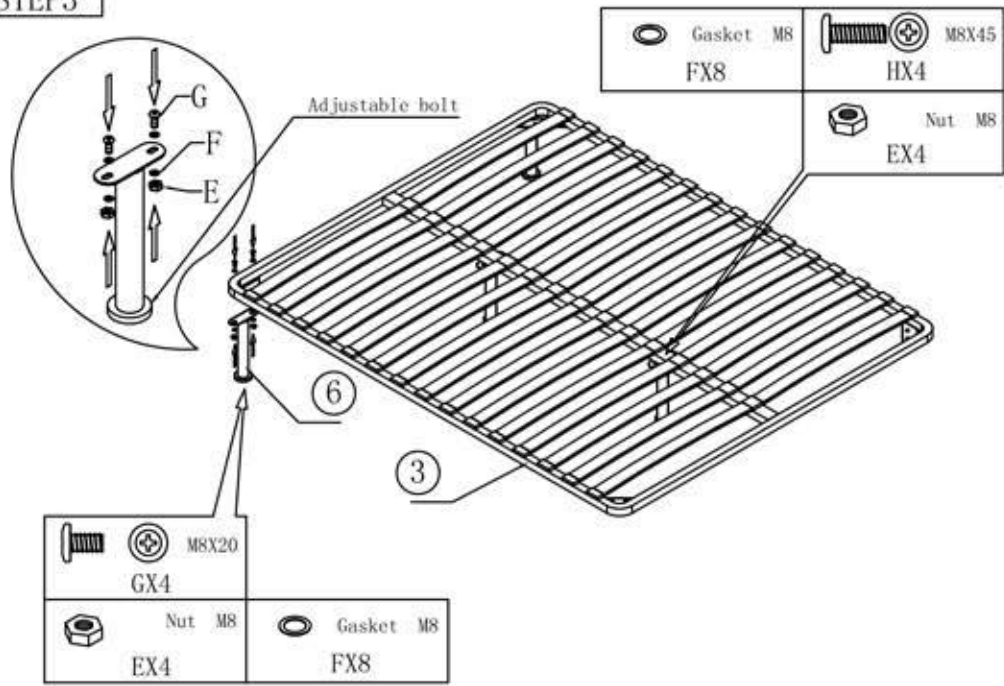

		M8X45
		HX4
		Nut M8
		EX4

		M8X20
		GX4
		Nut M8
		EX4
		Gasket M8
		FX8

STEP4

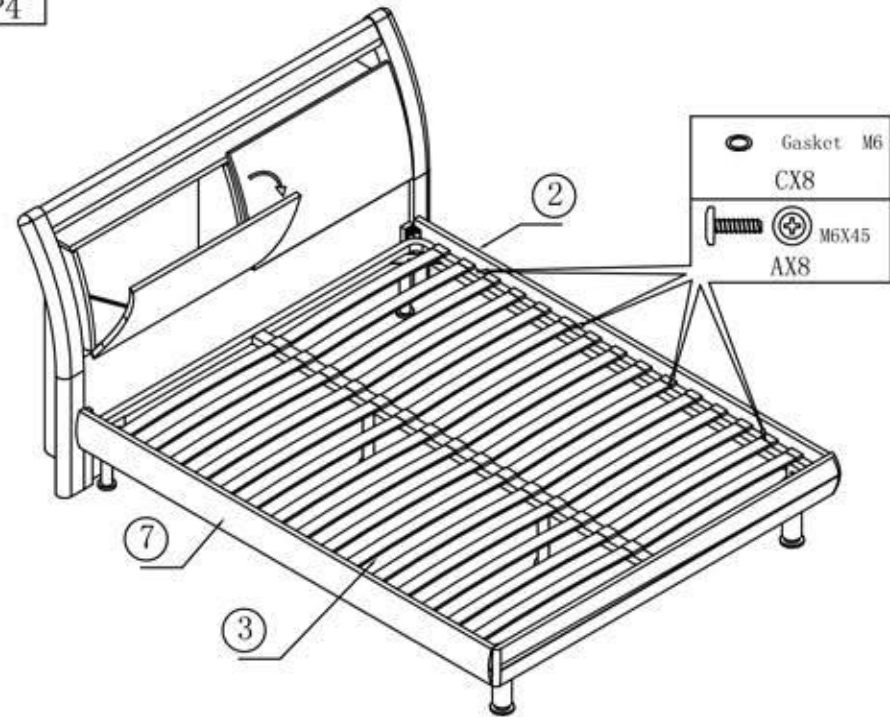

		M6X45
		AX8
		Gasket M6
		CX8