









ASSEMBLY INSTRUCTION

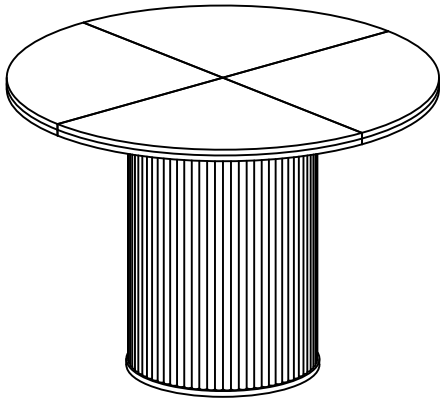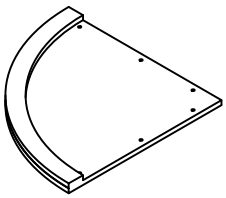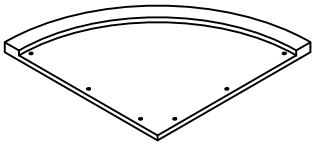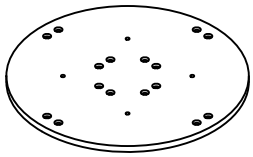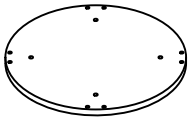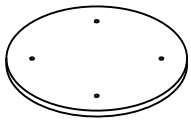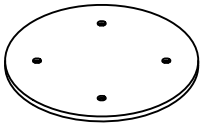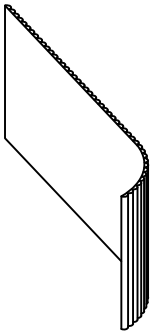


A  6*13 24pcs	B  8*30 4pcs	C Ø25 6pcs	D  8*18 24pcs	E  M5 1pcs	F  4pcs	G  8*20 4pcs
H  6*20 16pcs						


①  2pcs	②  2pcs	③  1pcs
④  1pcs	⑤  1pcs	⑥  1pcs
⑦  1pcs	⑧  4pcs	

ASSEMBLY INSTRUCTION


STEP1

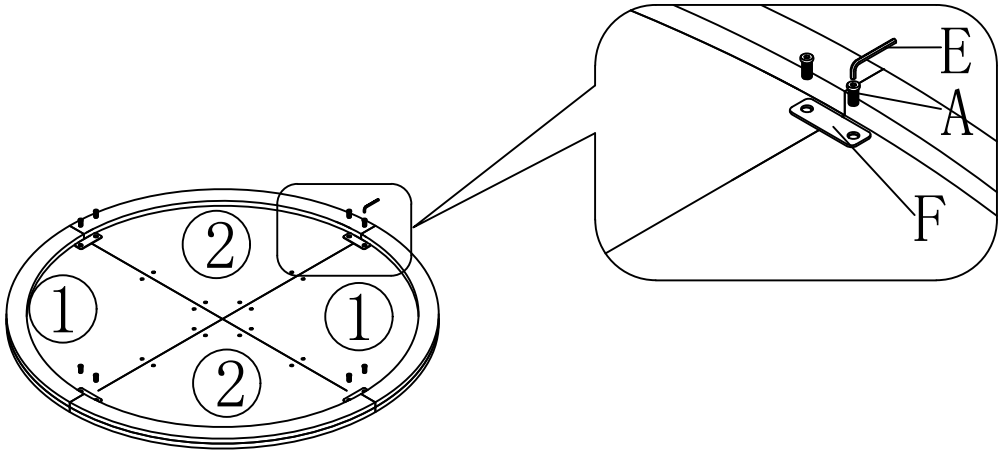

STEP2

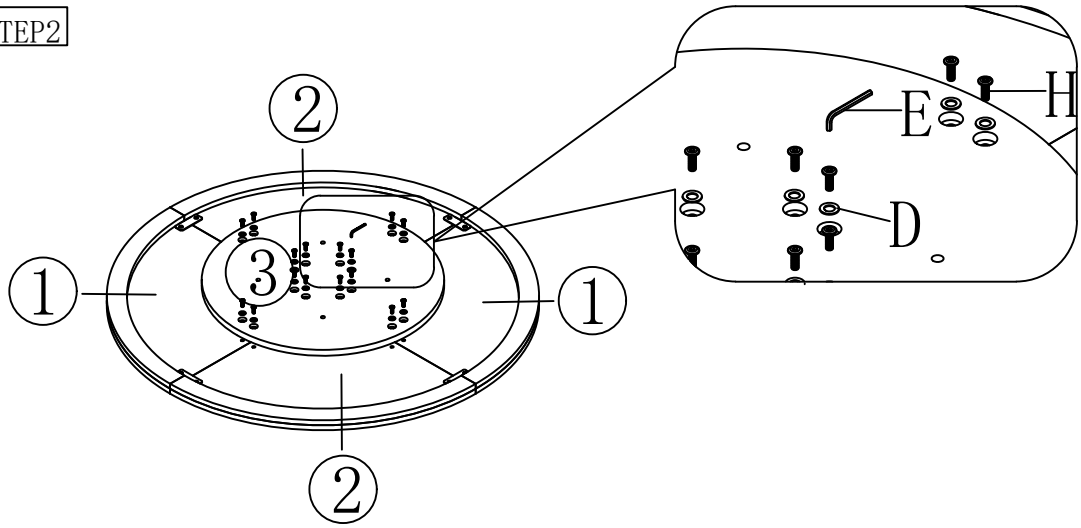


STEP3

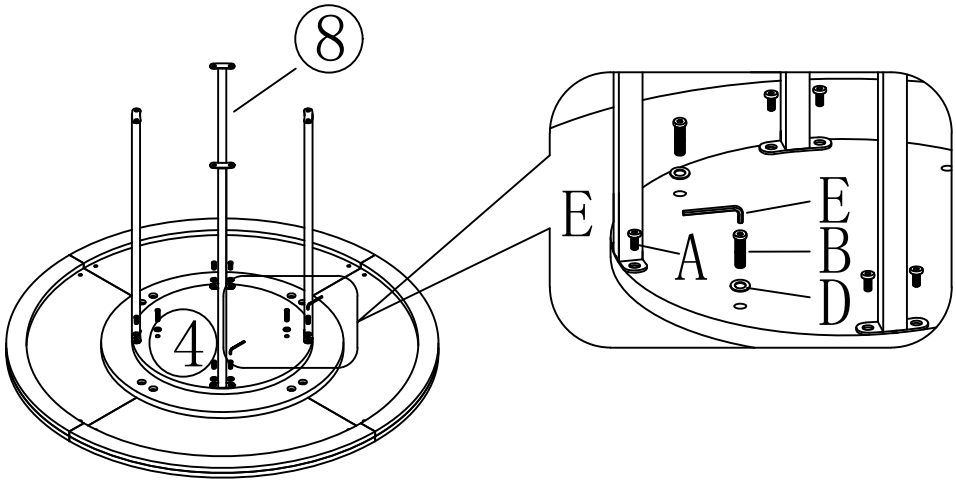


ASSEMBLY INSTRUCTION

STEP4

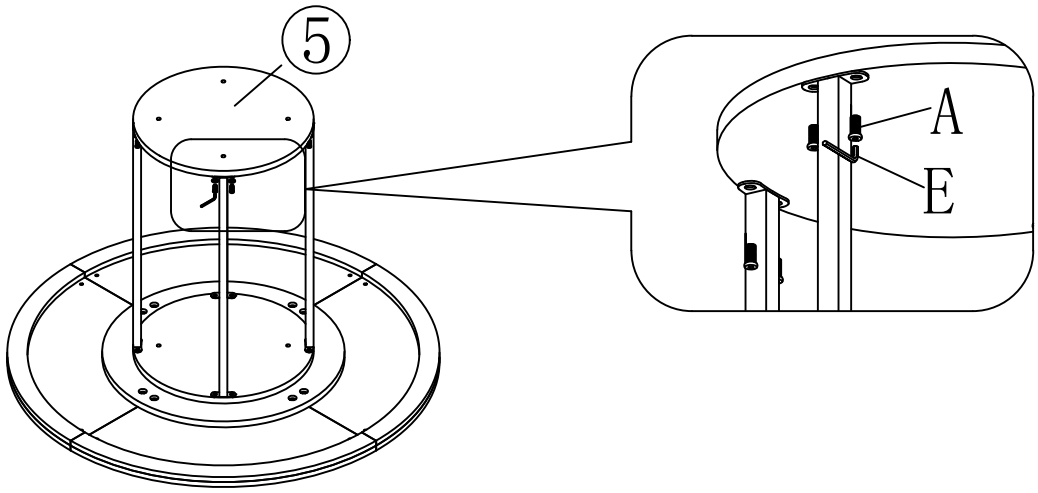

STEP5

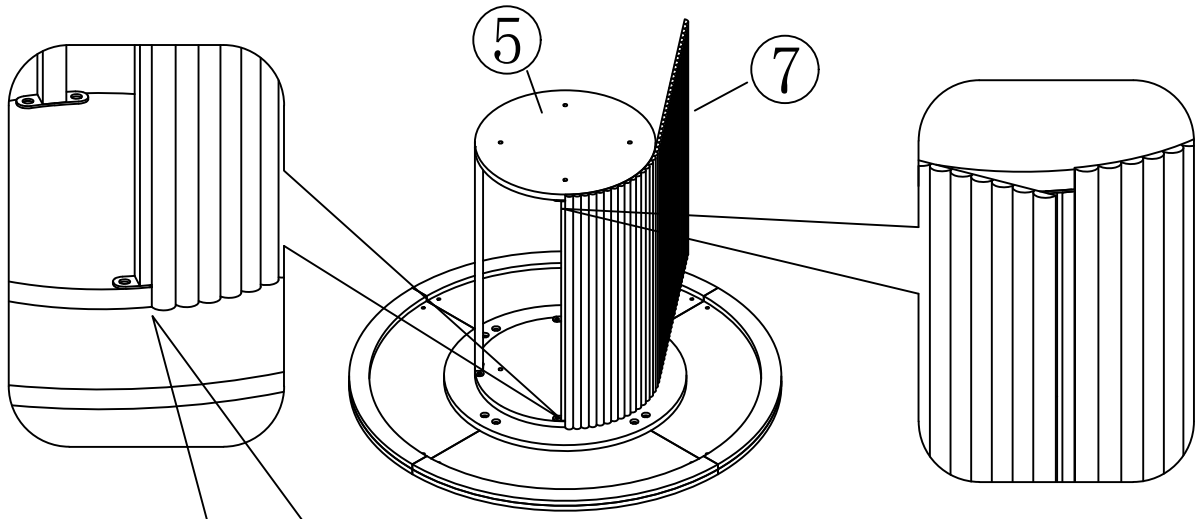

Align the middle part of the link bar when the coaming board is surrounded. If there is a gap after the whole encirclement, please open it and straighten it and re-wrap it.

STEP6

