
How to Measure Your Window For Cordless Cellular Shades

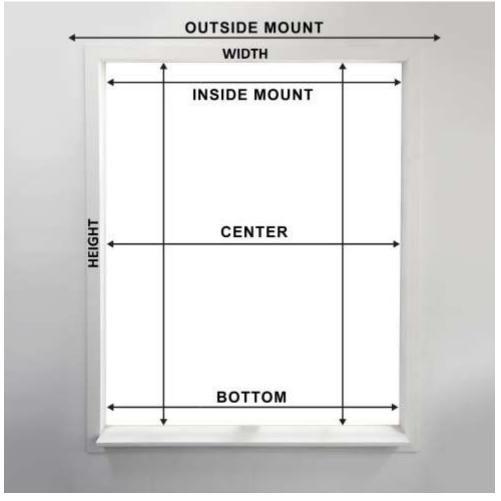

bottom within your window recess. Use the narrowestneewidth as your window-width.abo2. Height/Length: To find the height, measure exacthardwindow-recess height at left, middle, and right side. Use2. Vthe longest height as your window-height.great3. Depth: Minimum 3/4 inch required. If you want a flushrecomount a minimum of 2 inches is required.wid4. ORDERING: Choose a width that is 1/4 inch or smaller3. Height thatthe same or longer than your window-height. *Orderingthe	etermine where the blind is to be placed. You will d a minimum of 7/8 inches of flat mounting space ve your window to accommodate the mounting dware.
your window-width will create a large light gap, so think opt about what will satisfy your need. 4. C	<u>Vidth:</u> Choose a product-width that is the same or ater than the width of your window recess. We ommend adding 2 to 6 inches extra to the measured- th to maximize light control and privacy. <u>leight/Length:</u> Measure exact measured-height from top of the proposed headrail location to the base of sill. If there is no sill, measure where you would like blind to drop. Add 2 to 6 inches to the height for imum light control and privacy. PRDERING: Choose a width that is the same or wider n the product-width from above. Choose a height that

All of our products ship exactly as ordered. There are no deductions.

Example: If you order a 24"Width x 60"Height/Length, then the product that you'll receive will be 24"Width x 60"Height/Length.