


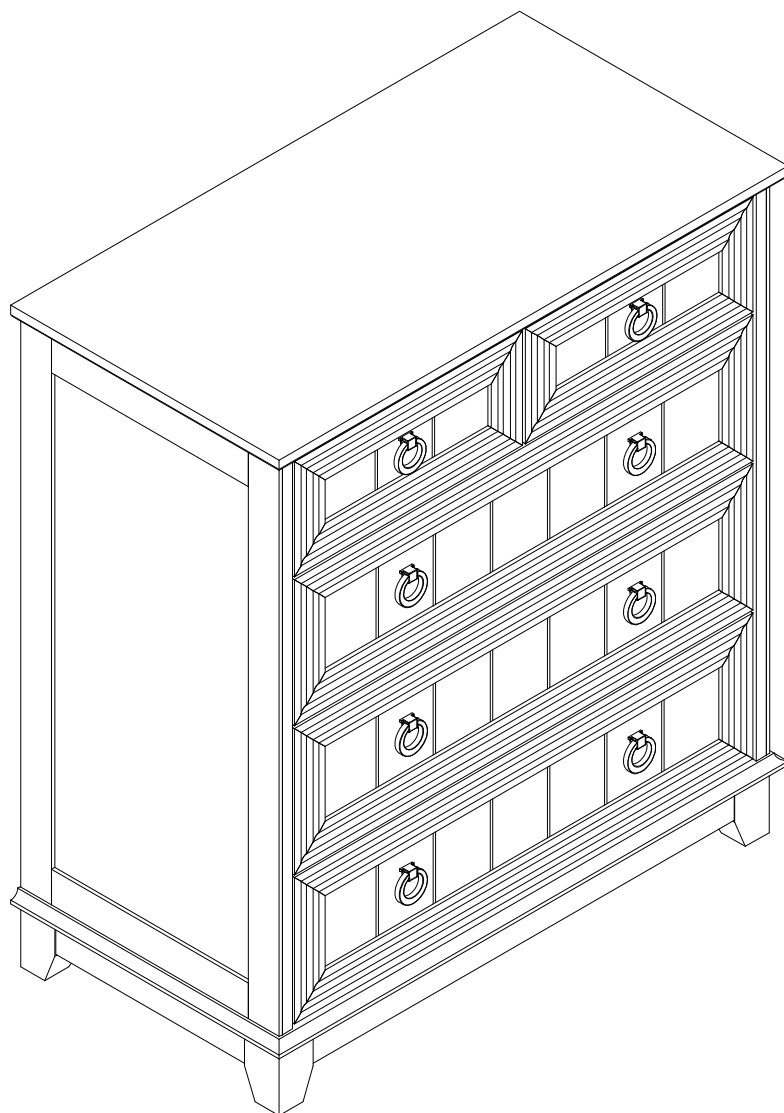

ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.



BEFORE STARTING

Before Using Product



- Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.



WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.
- Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.

QUICKFIT

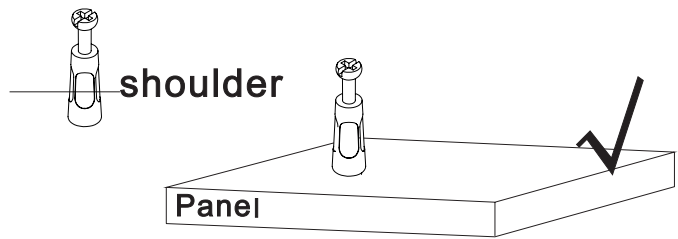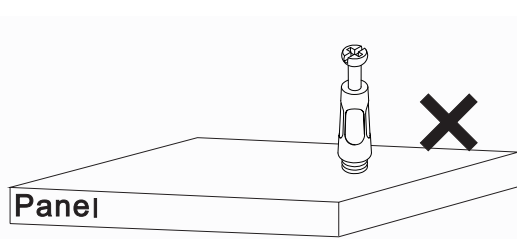


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

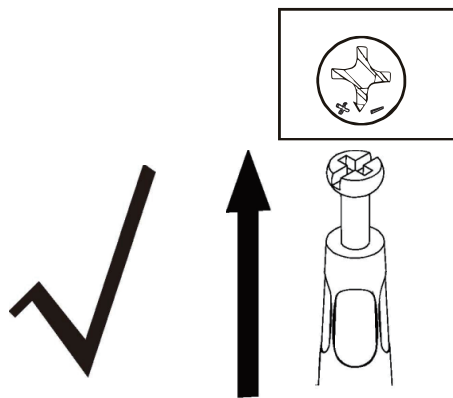


CORRECT

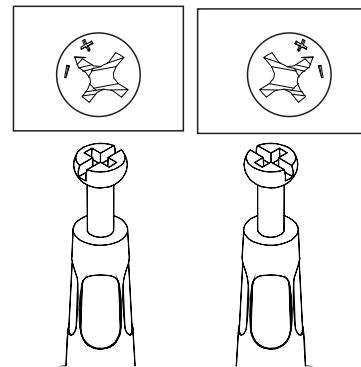


WRONG

When fitting cam lock, ensure starting position is correct before you insert cam lock to quickfit.

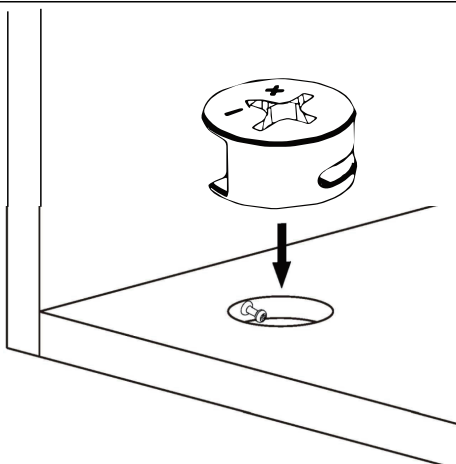


Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.

















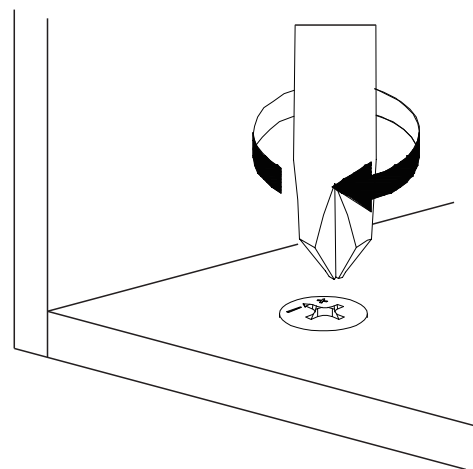


Turn cam lock clockwise to tighten.






PART LIST

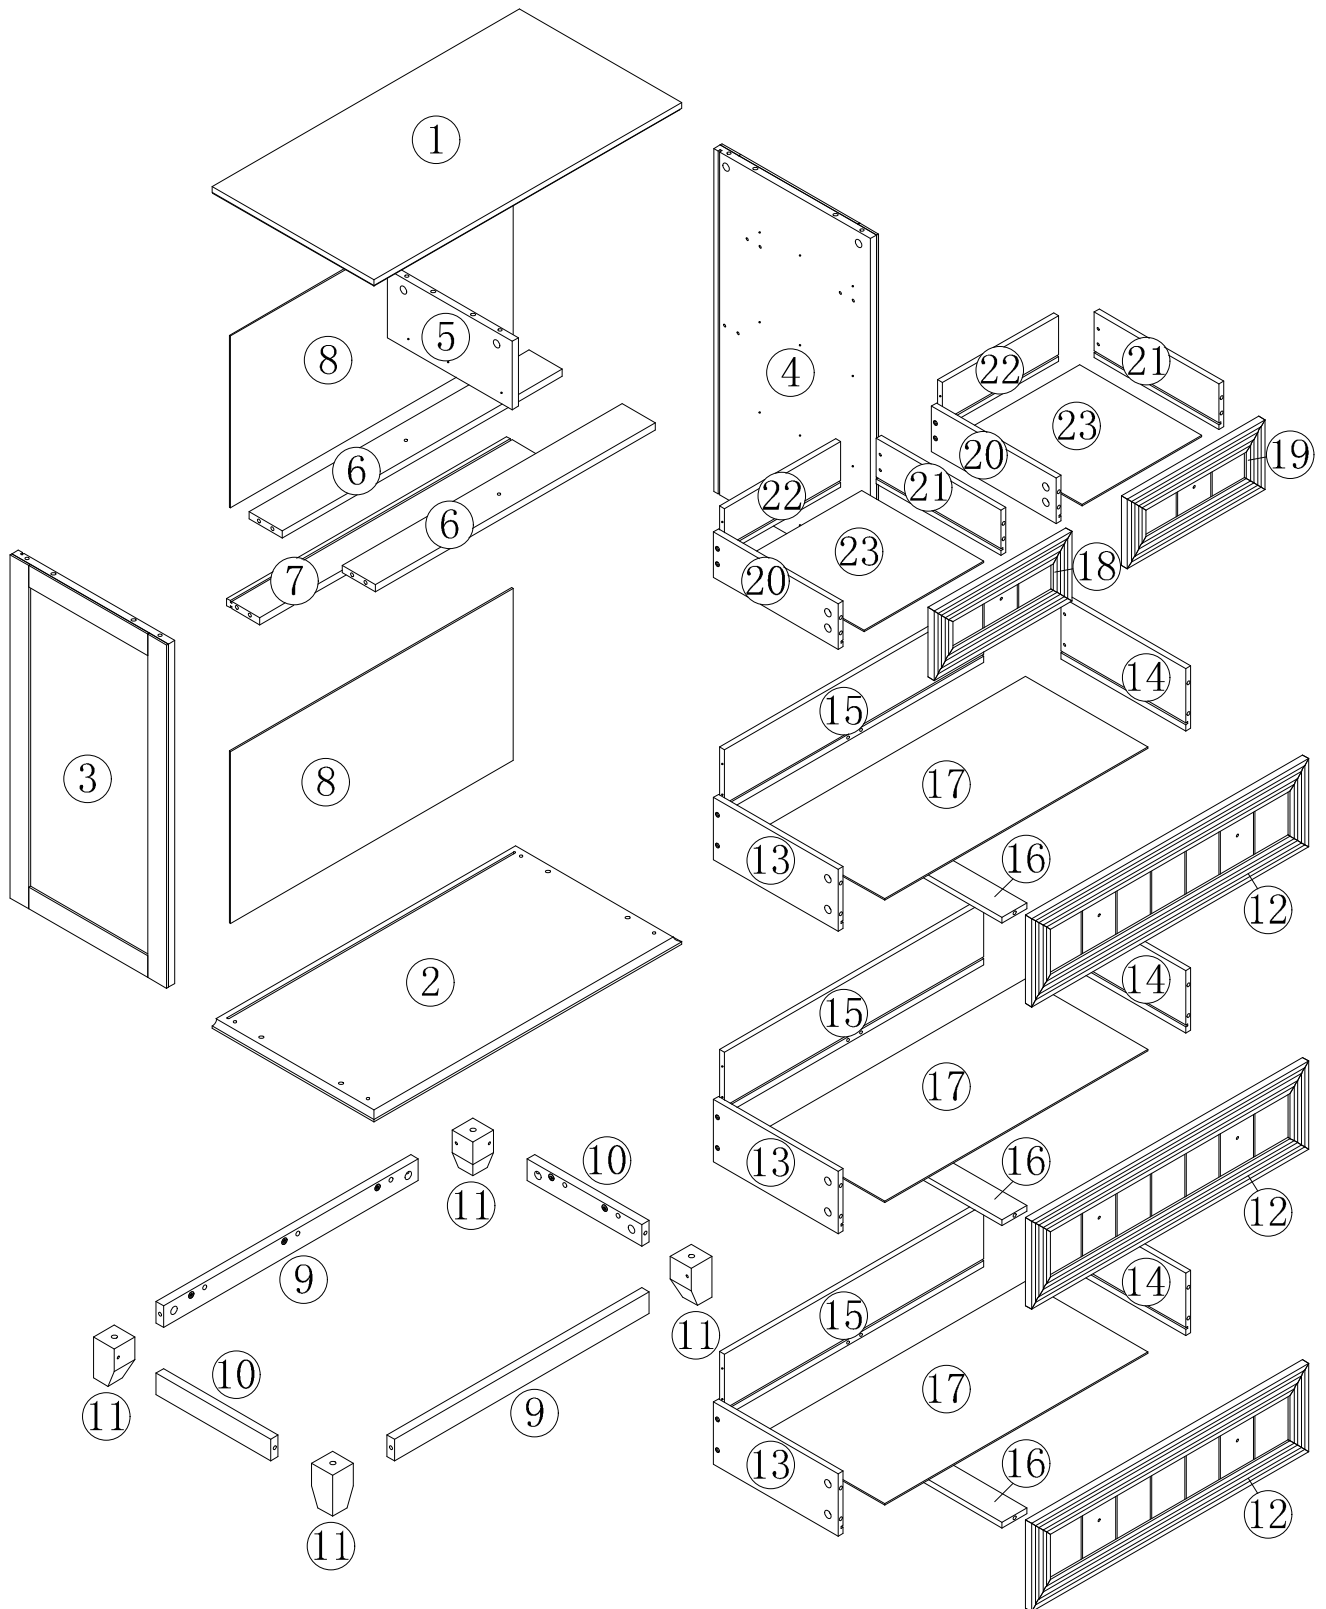







PART LIST

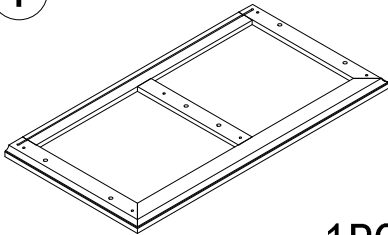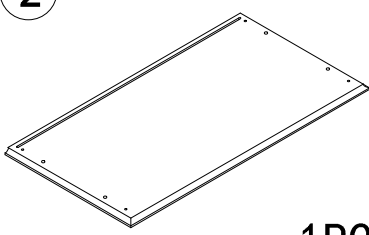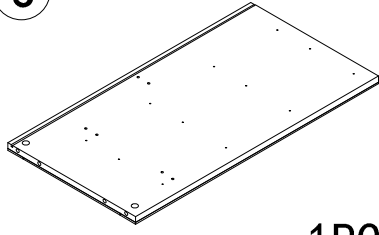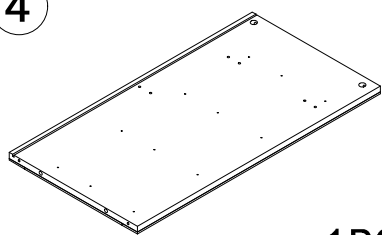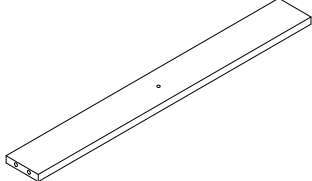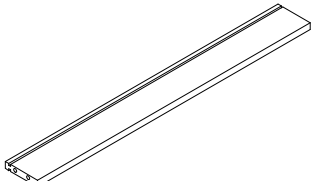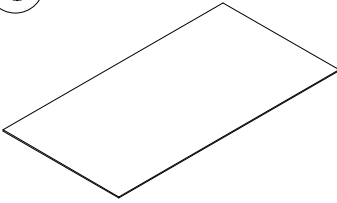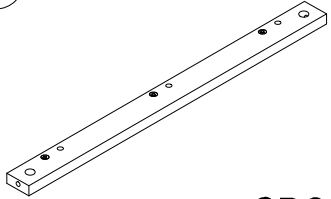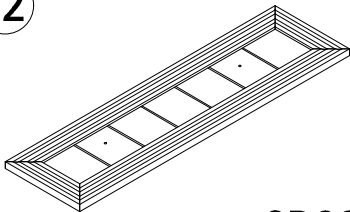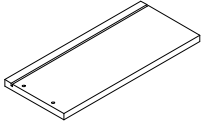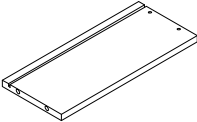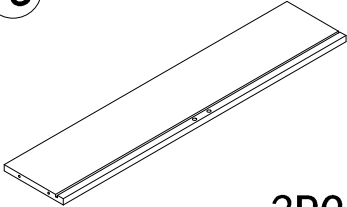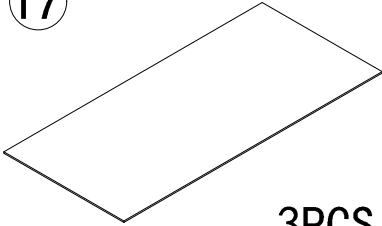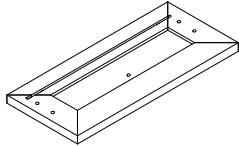 1PC	 1PC	 1PC
 1PC	 1PC	 2PCS
 1PC	 2PCS	 2PCS
 2PCS	 4PCS	 3PCS
 3PCS	 3PCS	 3PCS
 3PCS	 3PCS	 1PC

PART LIST

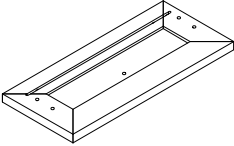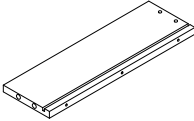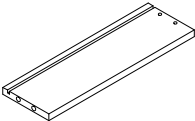
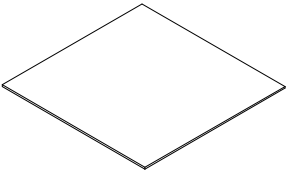
19  1PC	20  2PCS	21  2PCS
22  2PCS	23  2PCS	

HARDWARE LIST

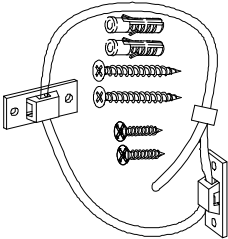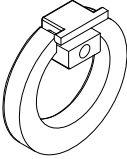
A  ø6X35 (49+4)PCS	B  ø15X9.5 (49+4)PCS	C  (8+1)PCS
D  ø8X30 (14+1)PCS	E  ø5X40 (32+3)PCS	F  ø6X12 (20+1)PCS
G  10PCS	H  (8+1)PCS	I  ø3X15 (8+1)PCS
J  5SET	K  ø3X12 (60+4)PCS	L  2SET
M  8PCS	 2PCS	 1PC




J X 5SET




CL




CR



DL




DR

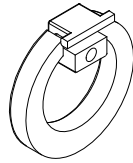


=




+

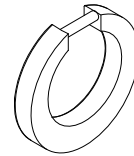

M

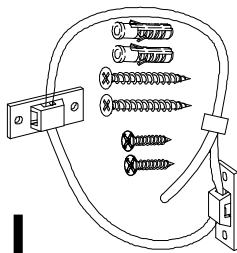

=

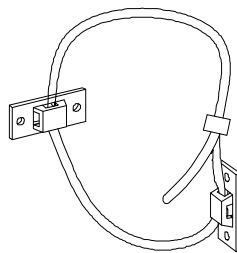

+





+



+




STEP 1

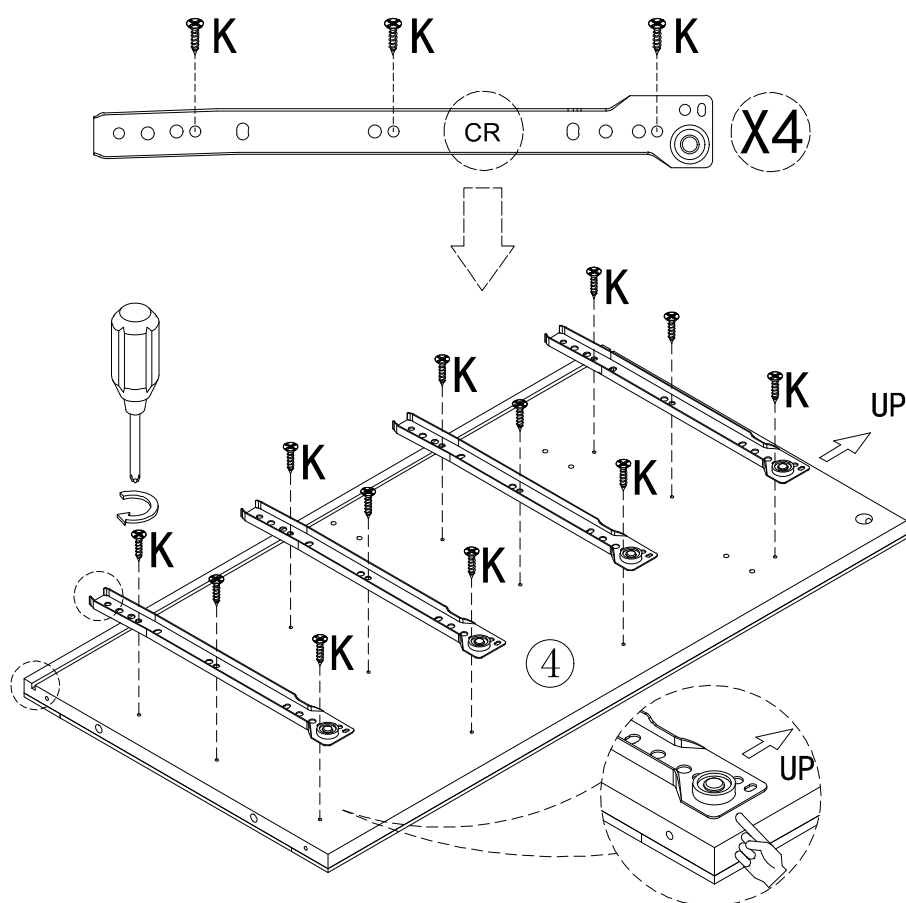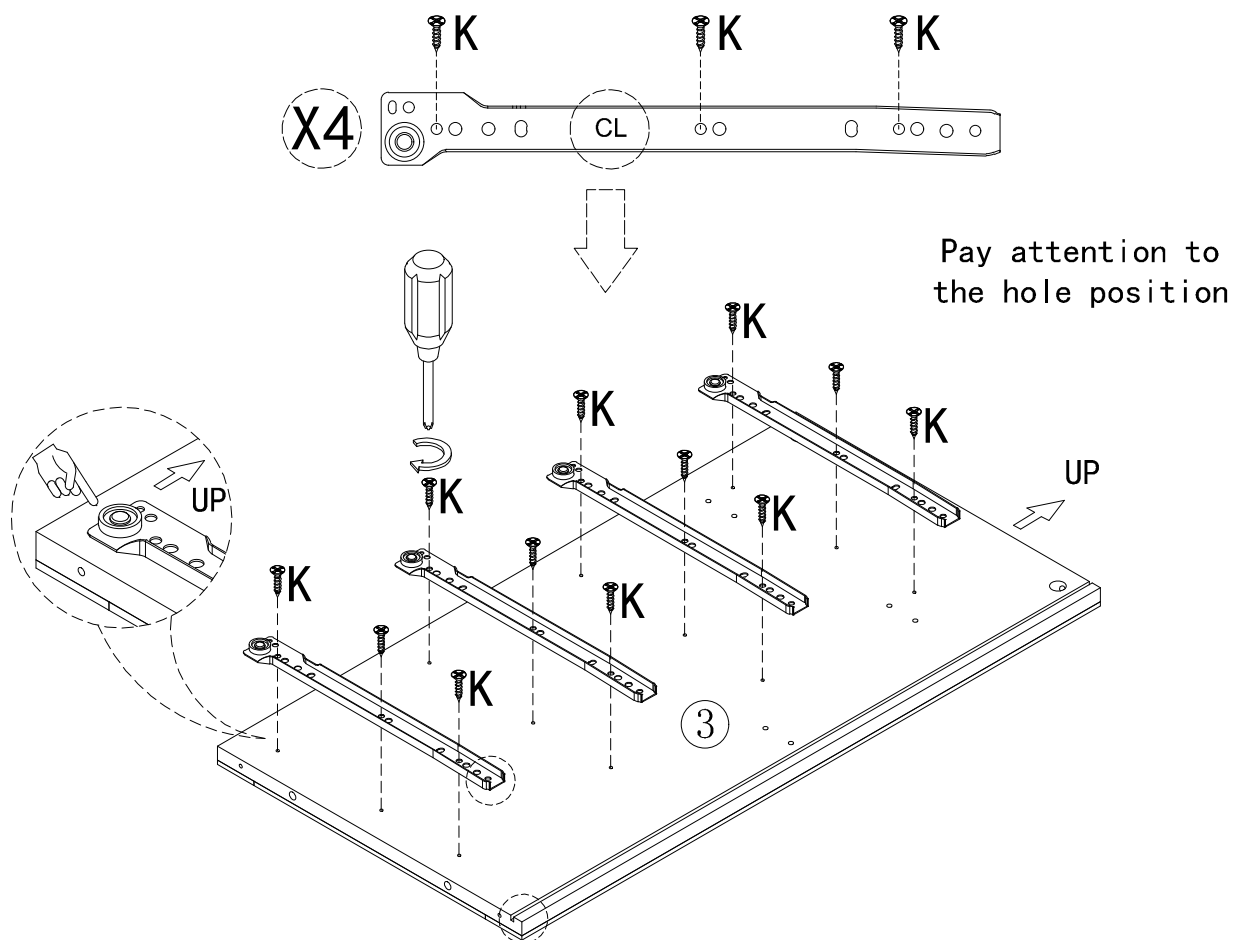


K X 24PCS

STEP 2



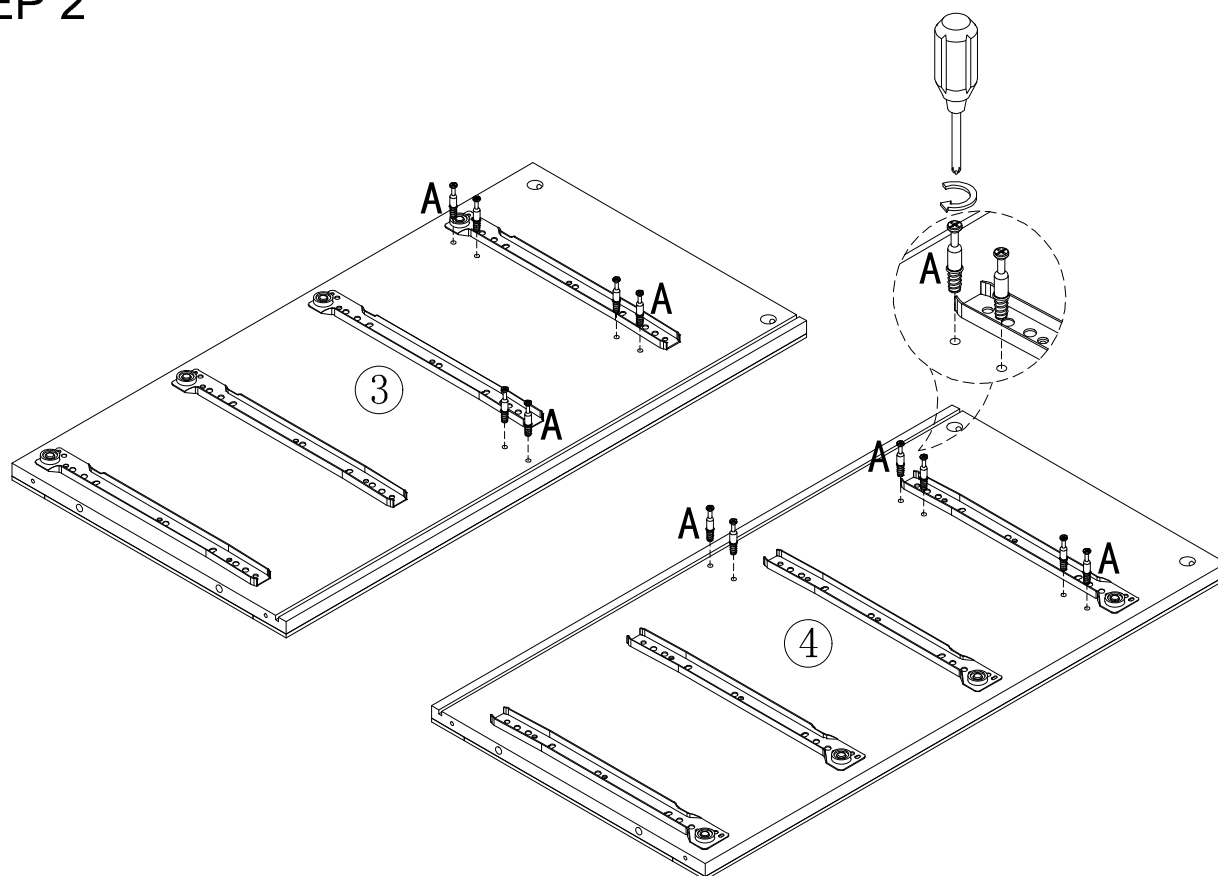


A X 12PCS

STEP 3

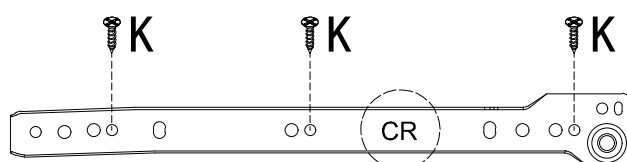

Pay attention to
the hole position

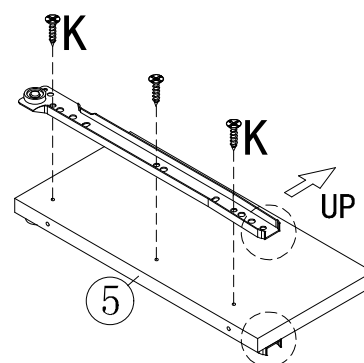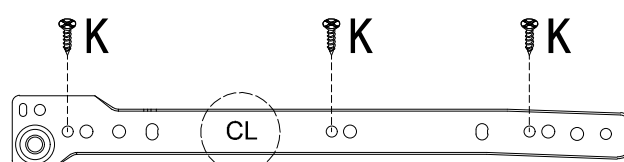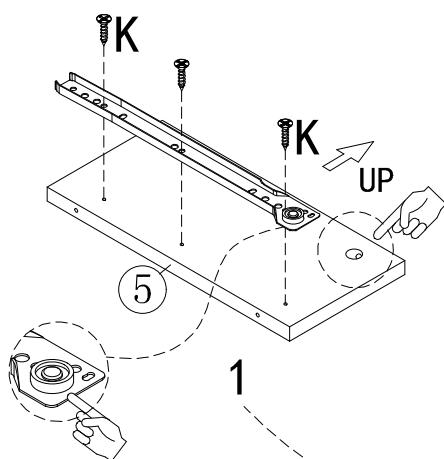


180°




K X 6PCS

STEP 4

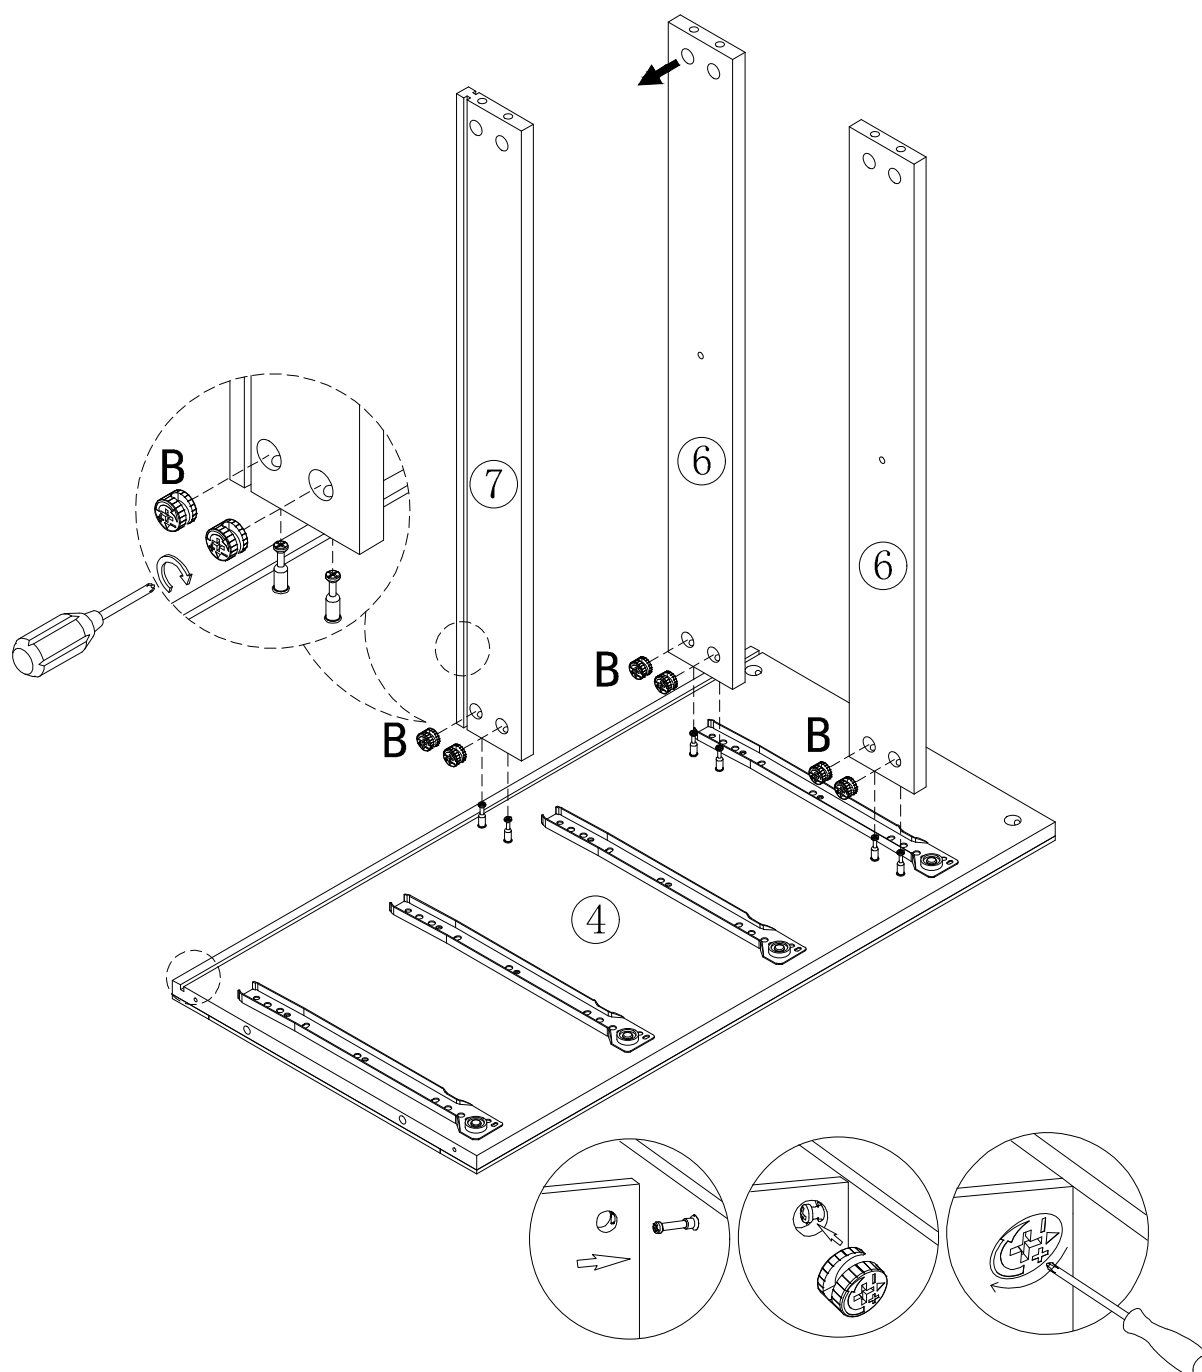


B X 6PCS

STEP 5

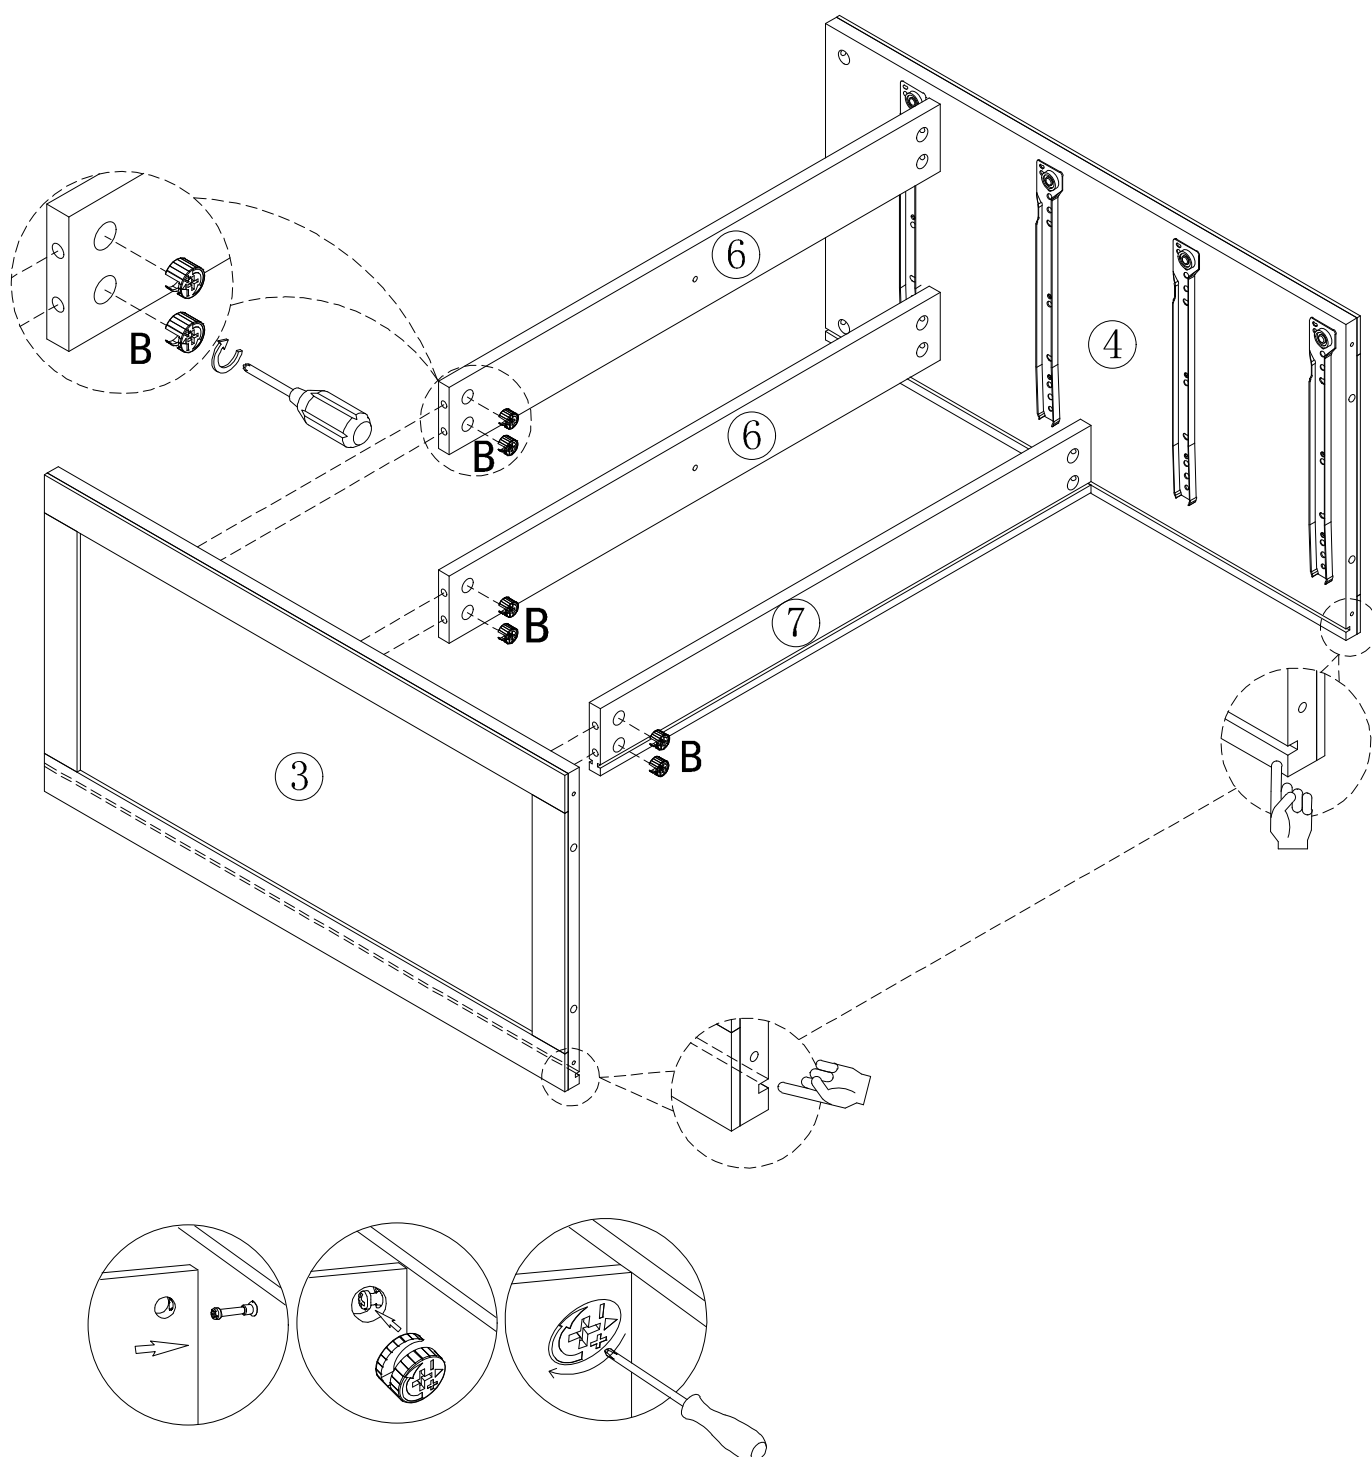


B X 6PCS

STEP 6

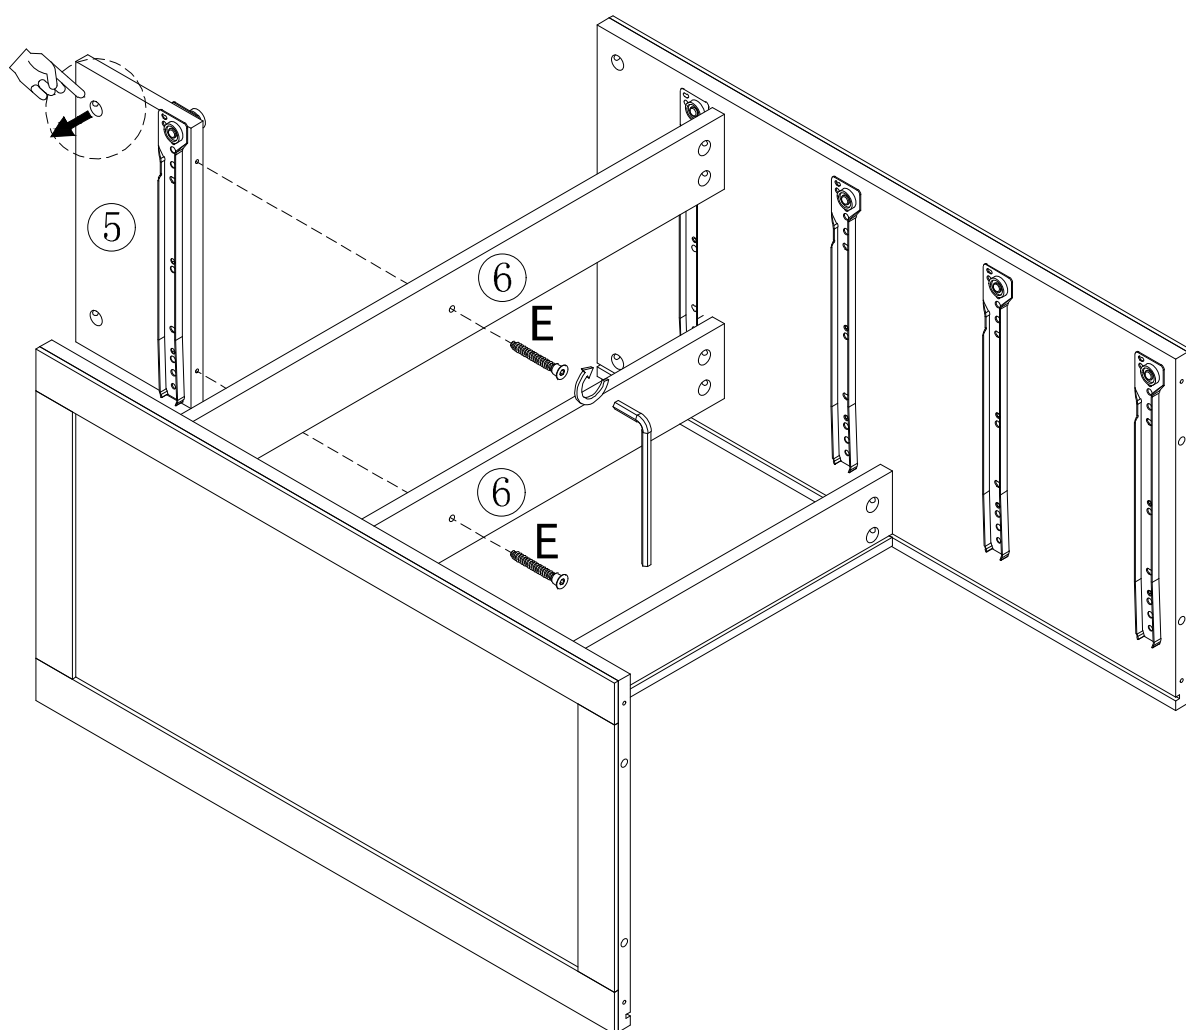


E X 2PCS

STEP 7

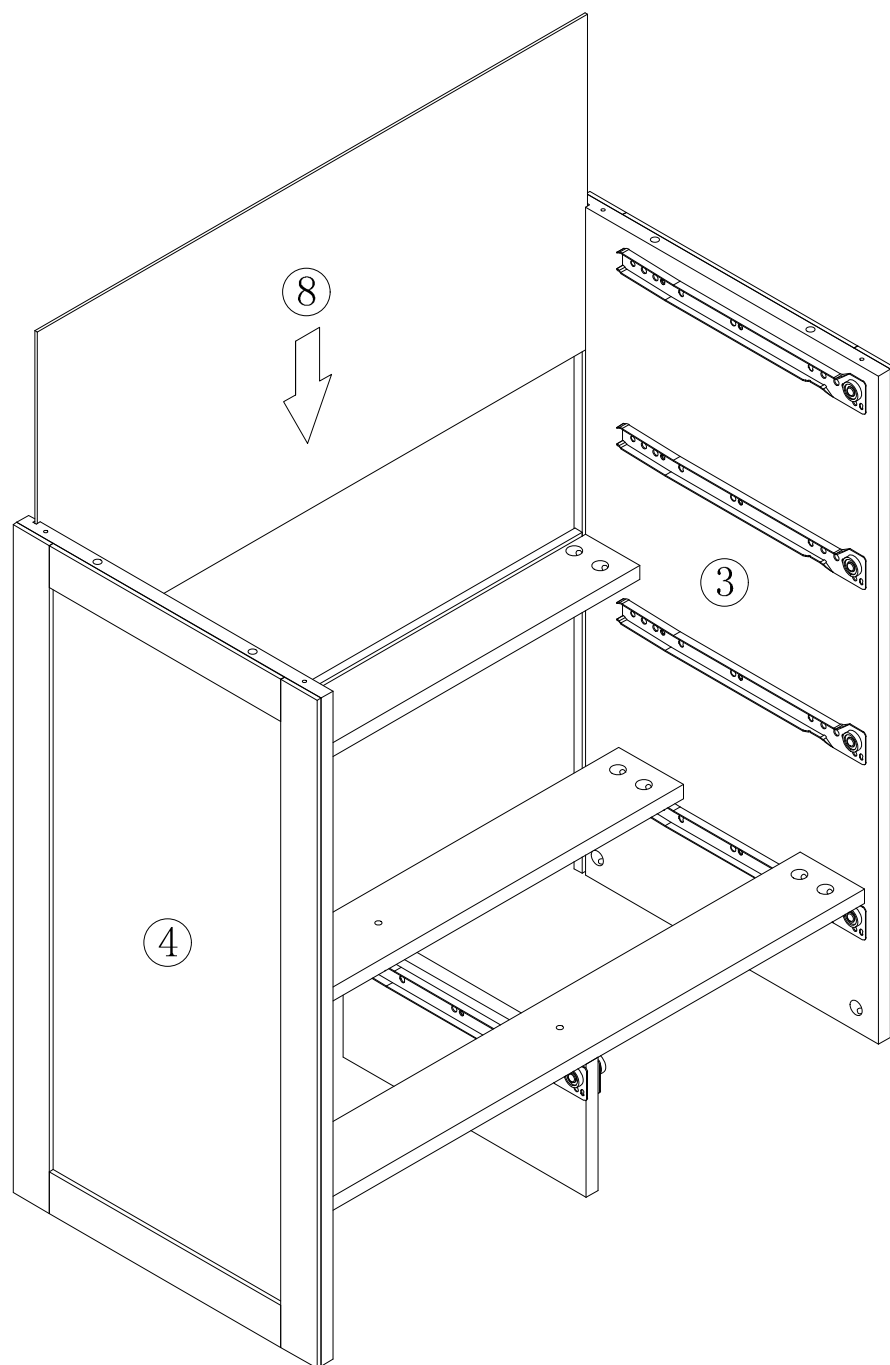


STEP 8

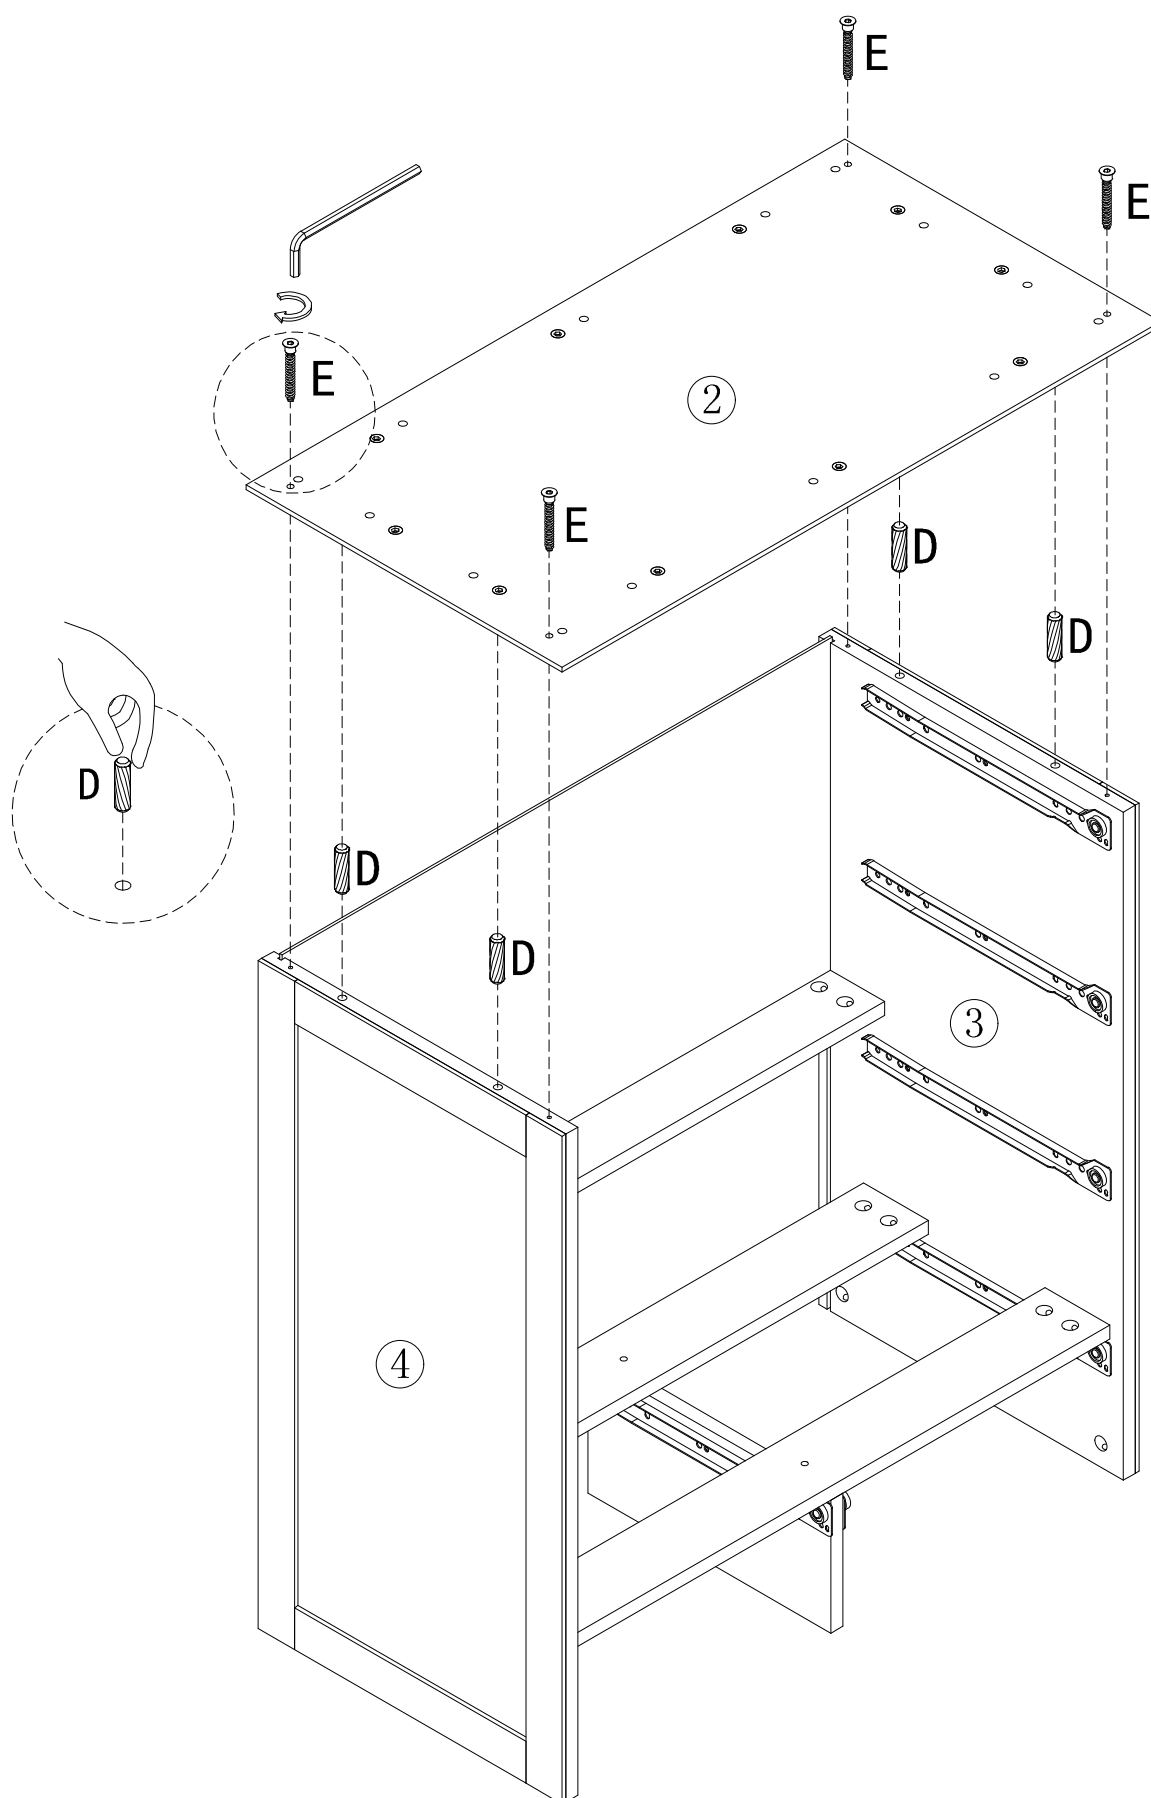


	D X 4PCS
	E X 4PCS


STEP 9

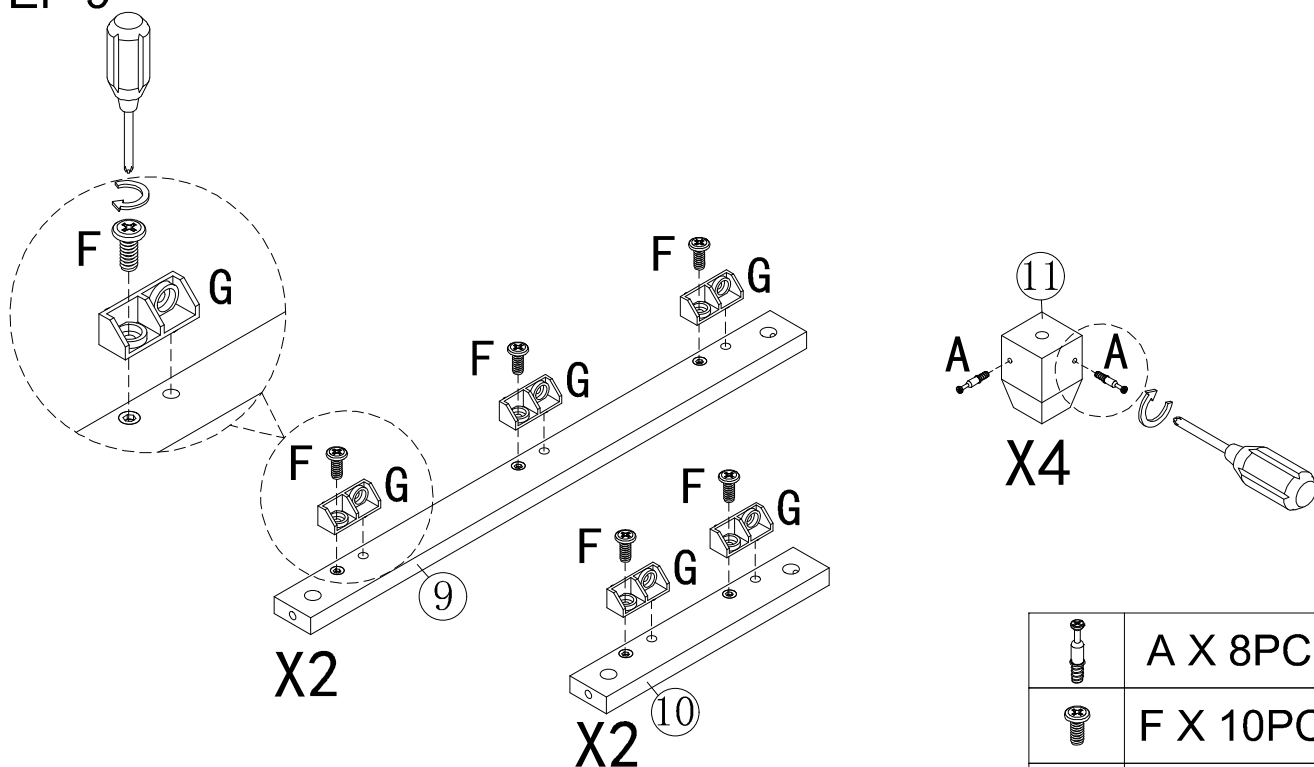

STEP 10

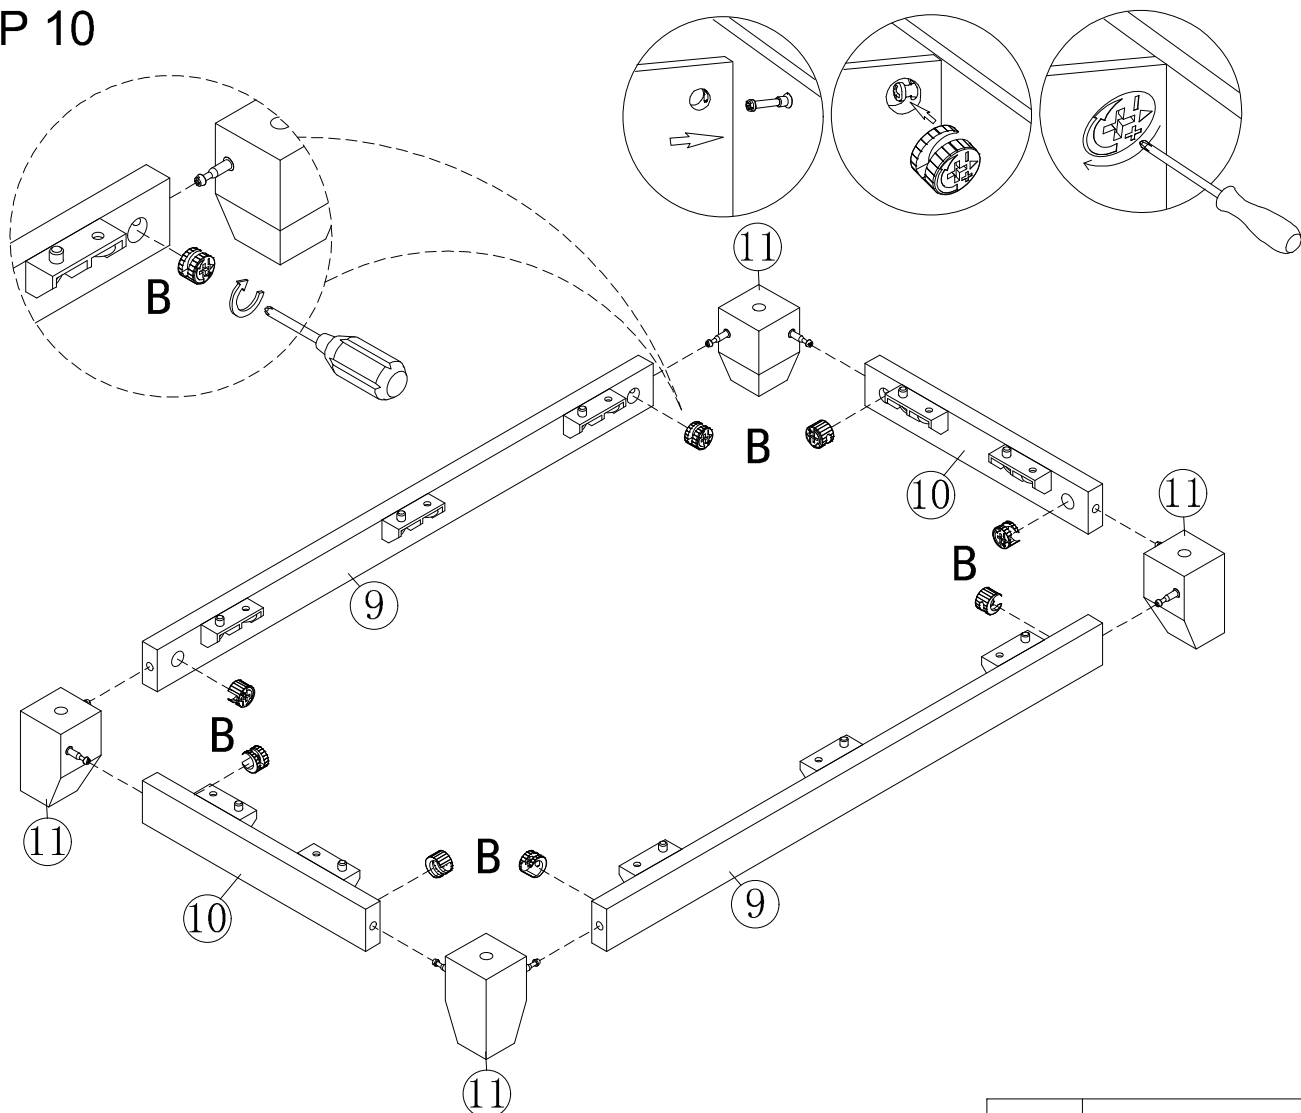


STEP 11

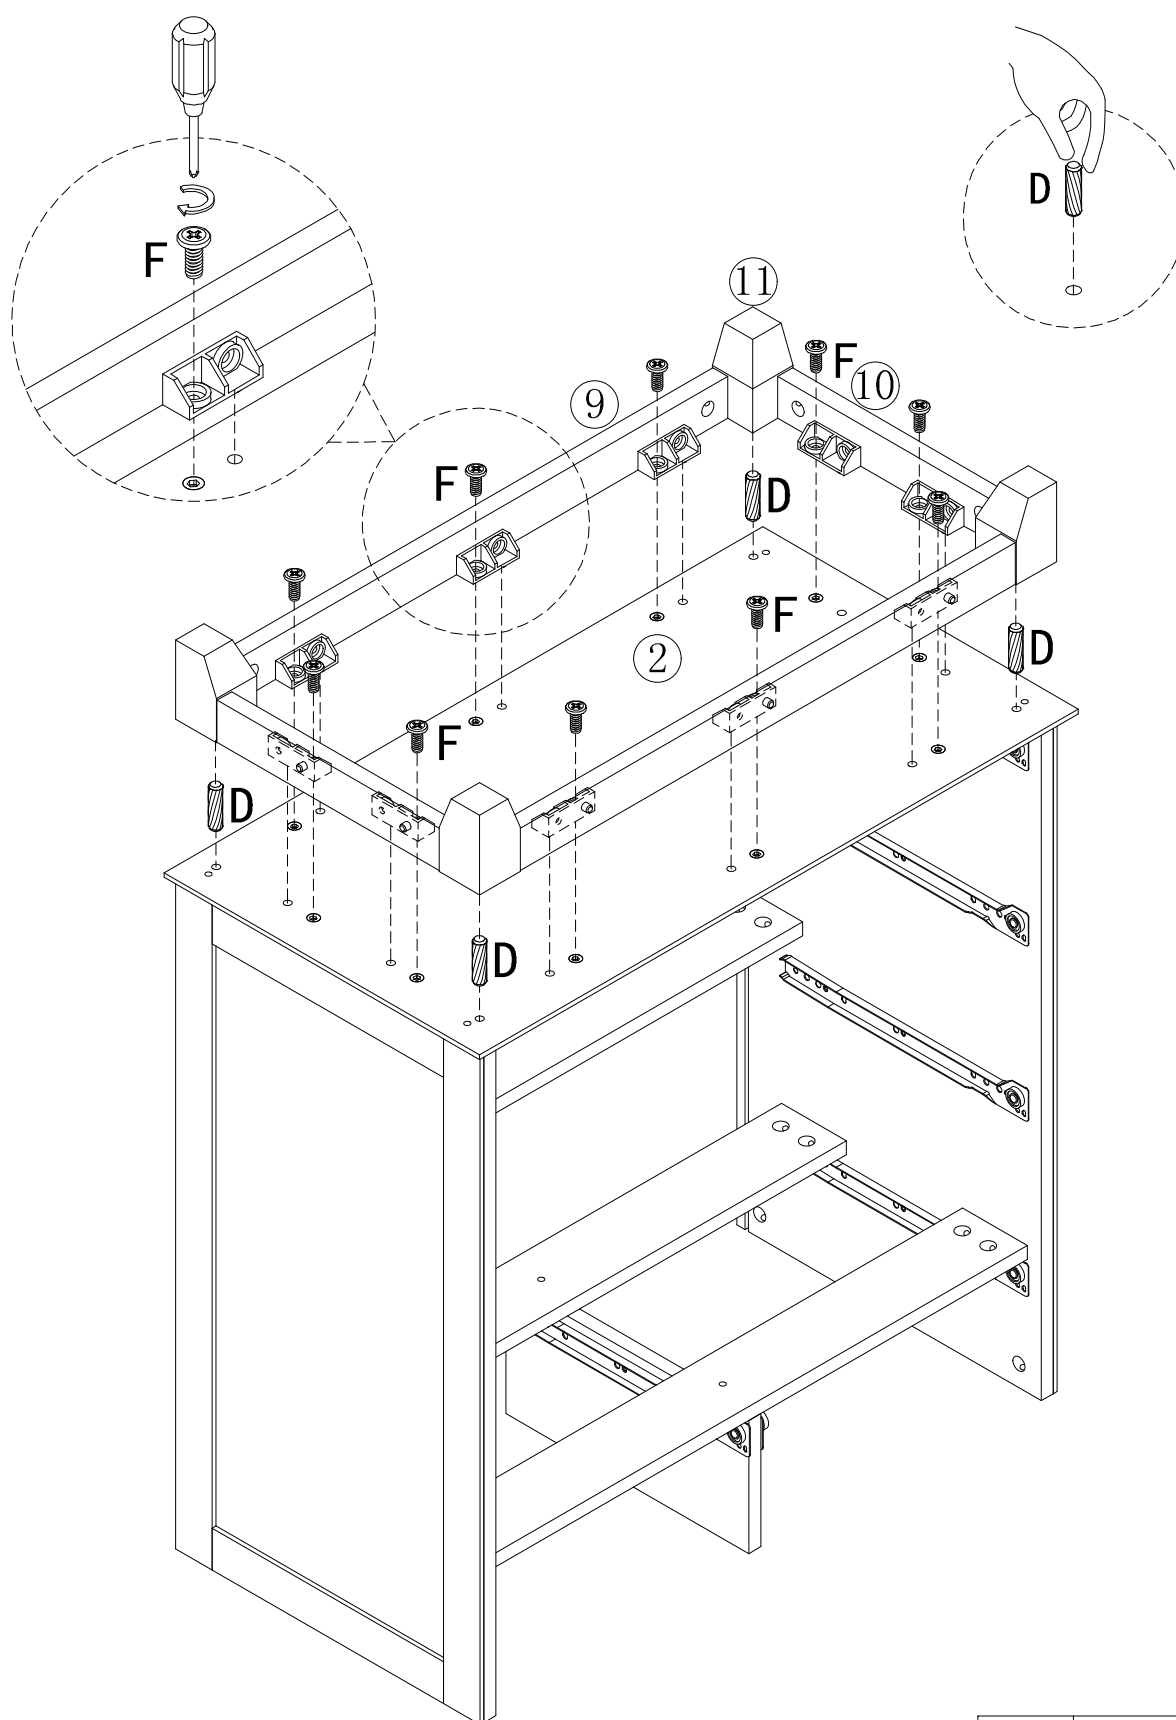


	D X 4PCS
	F X 10PCS

STEP 12

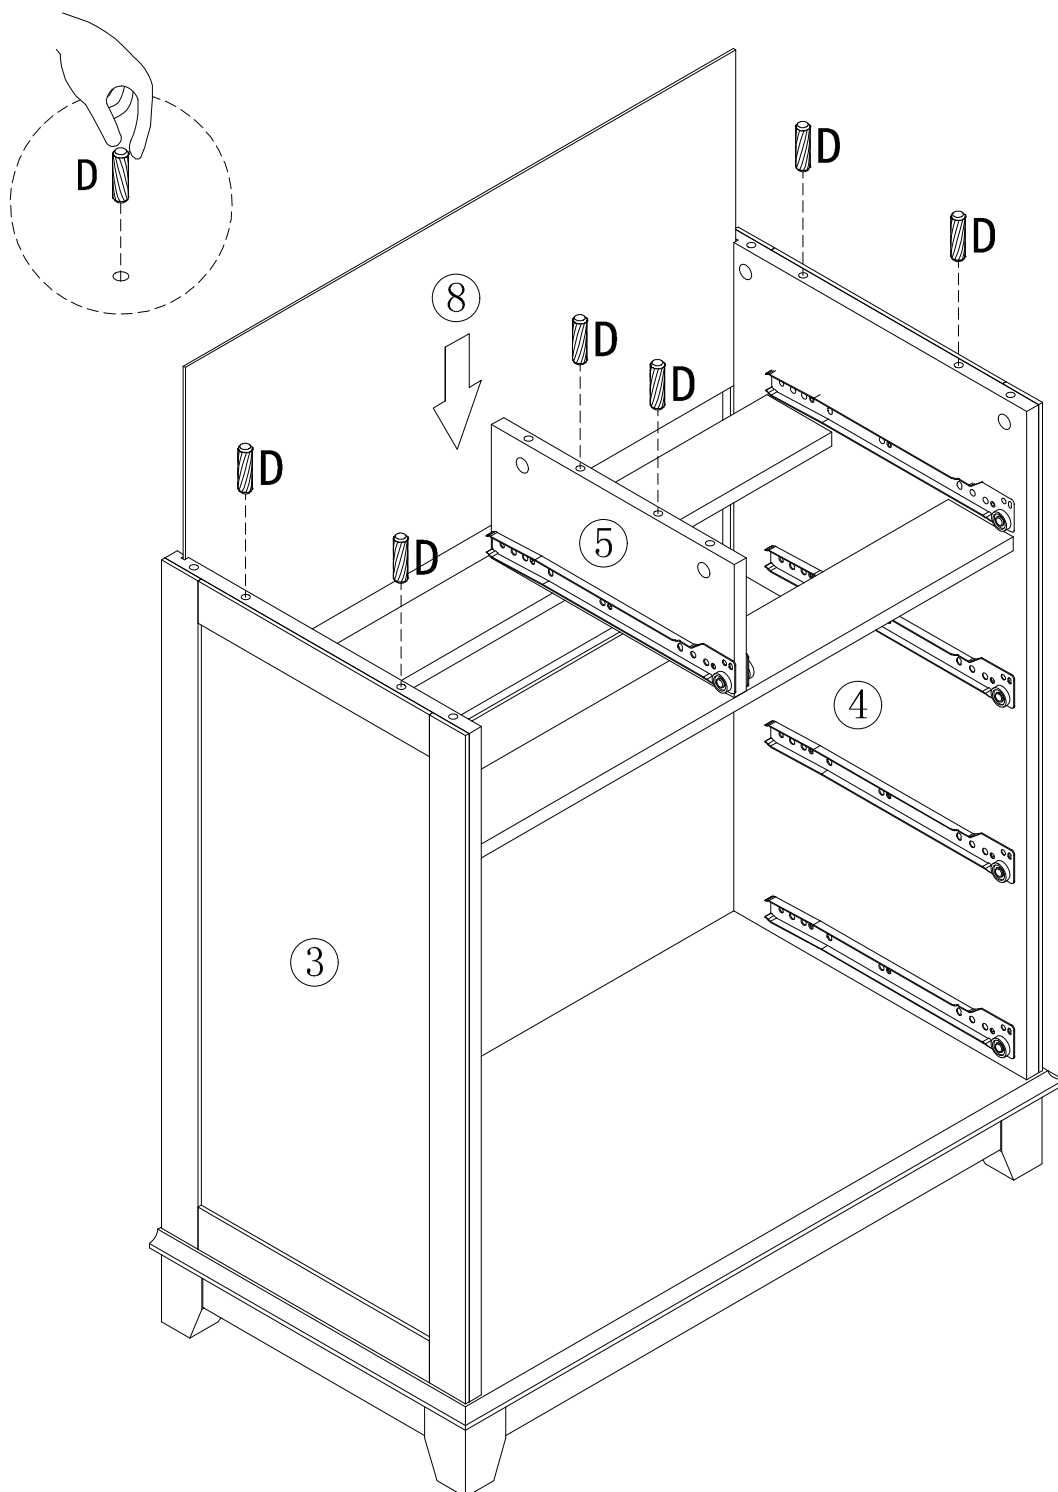


D X 6PCS

STEP 13

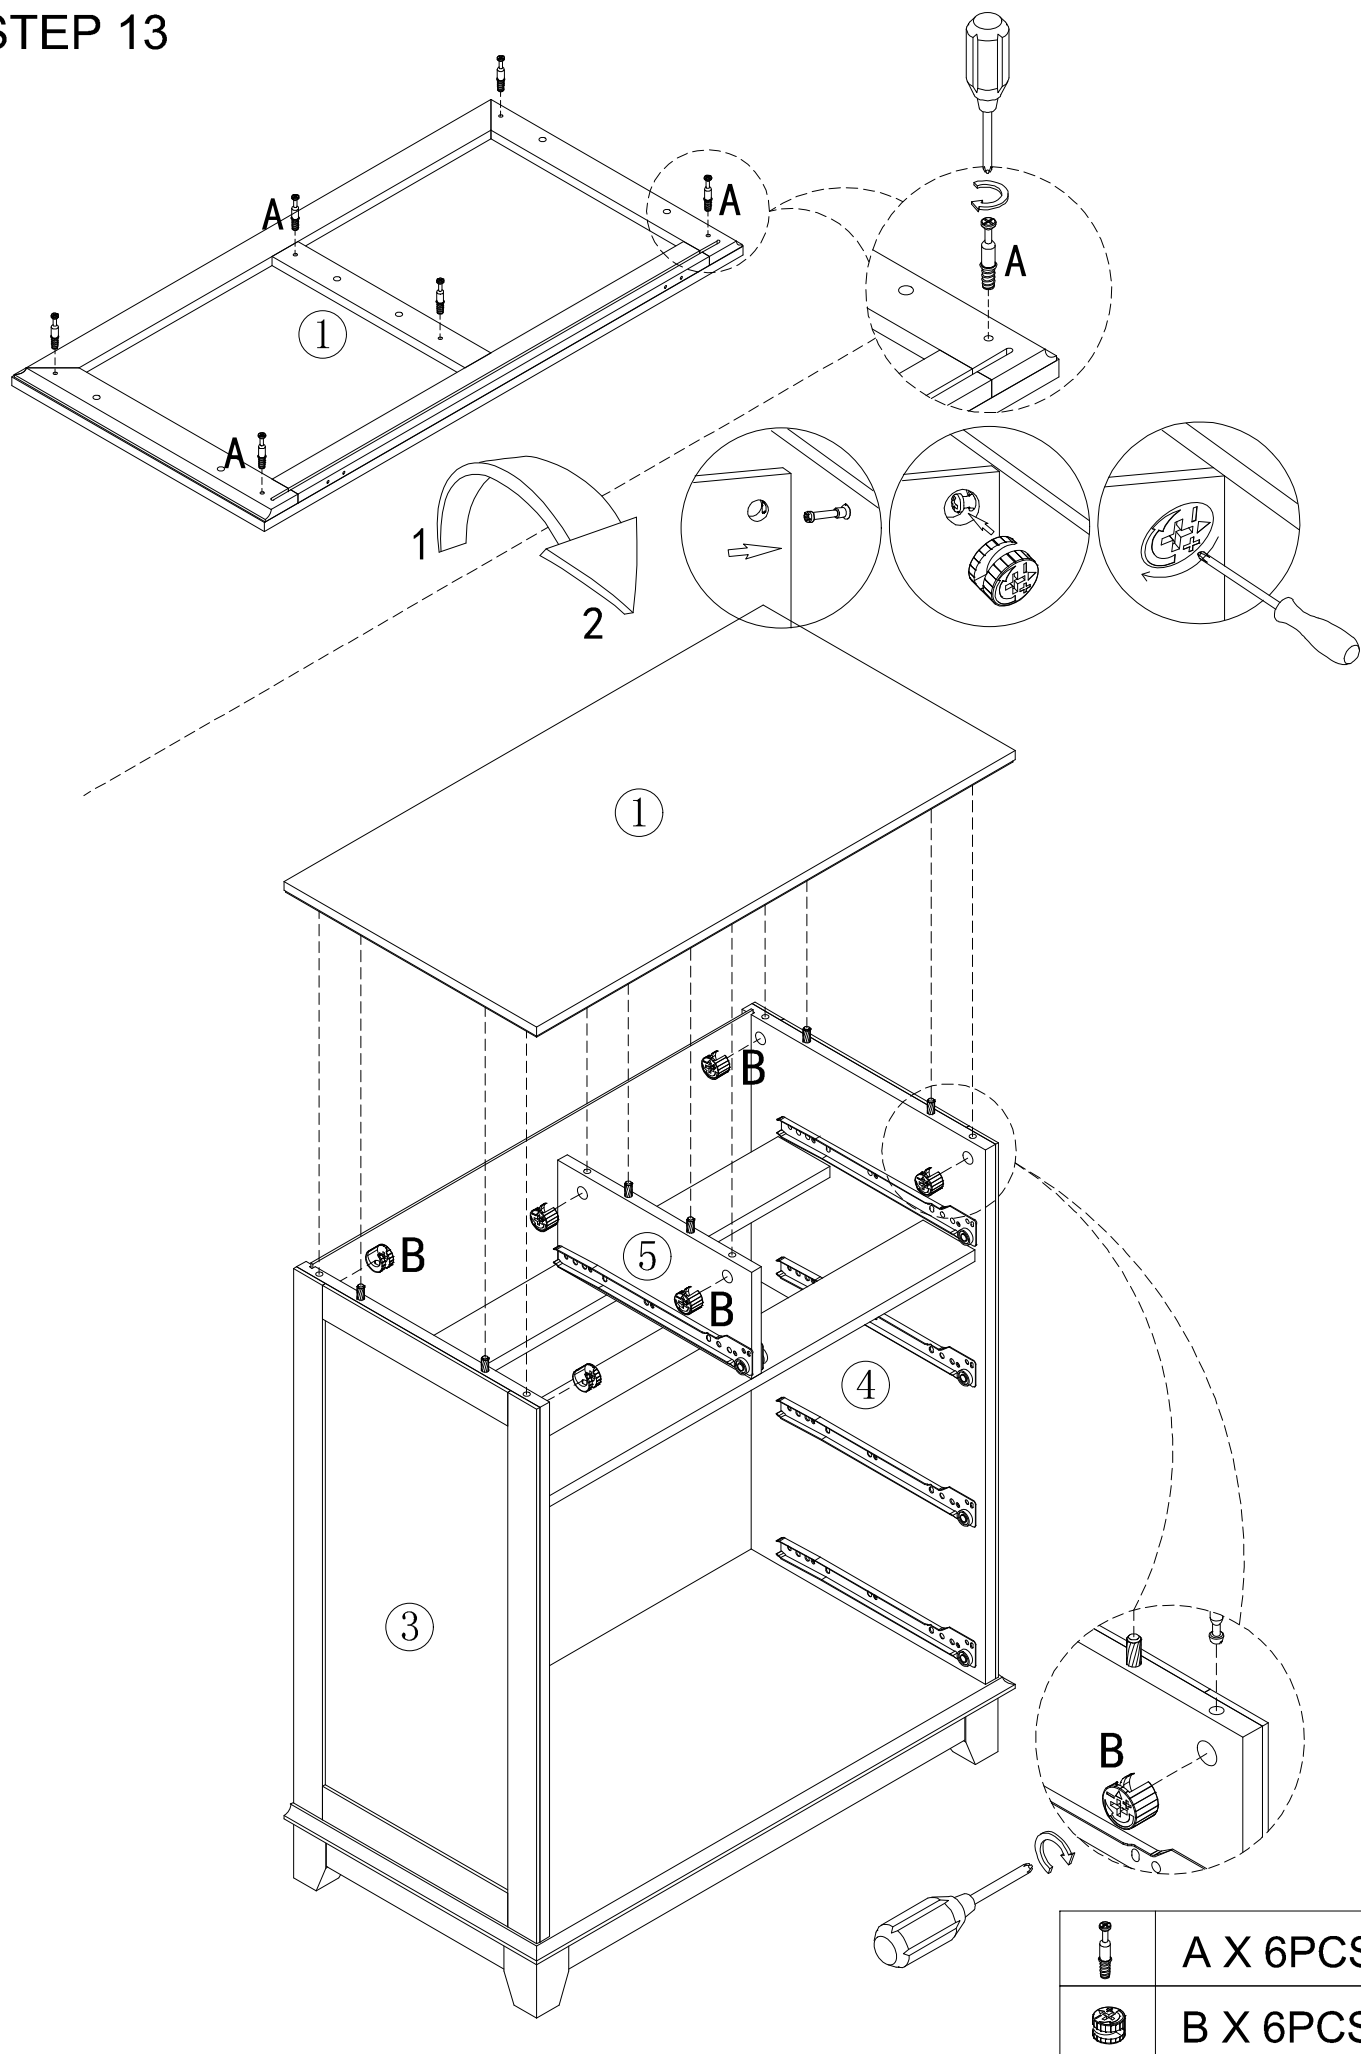


STEP 14

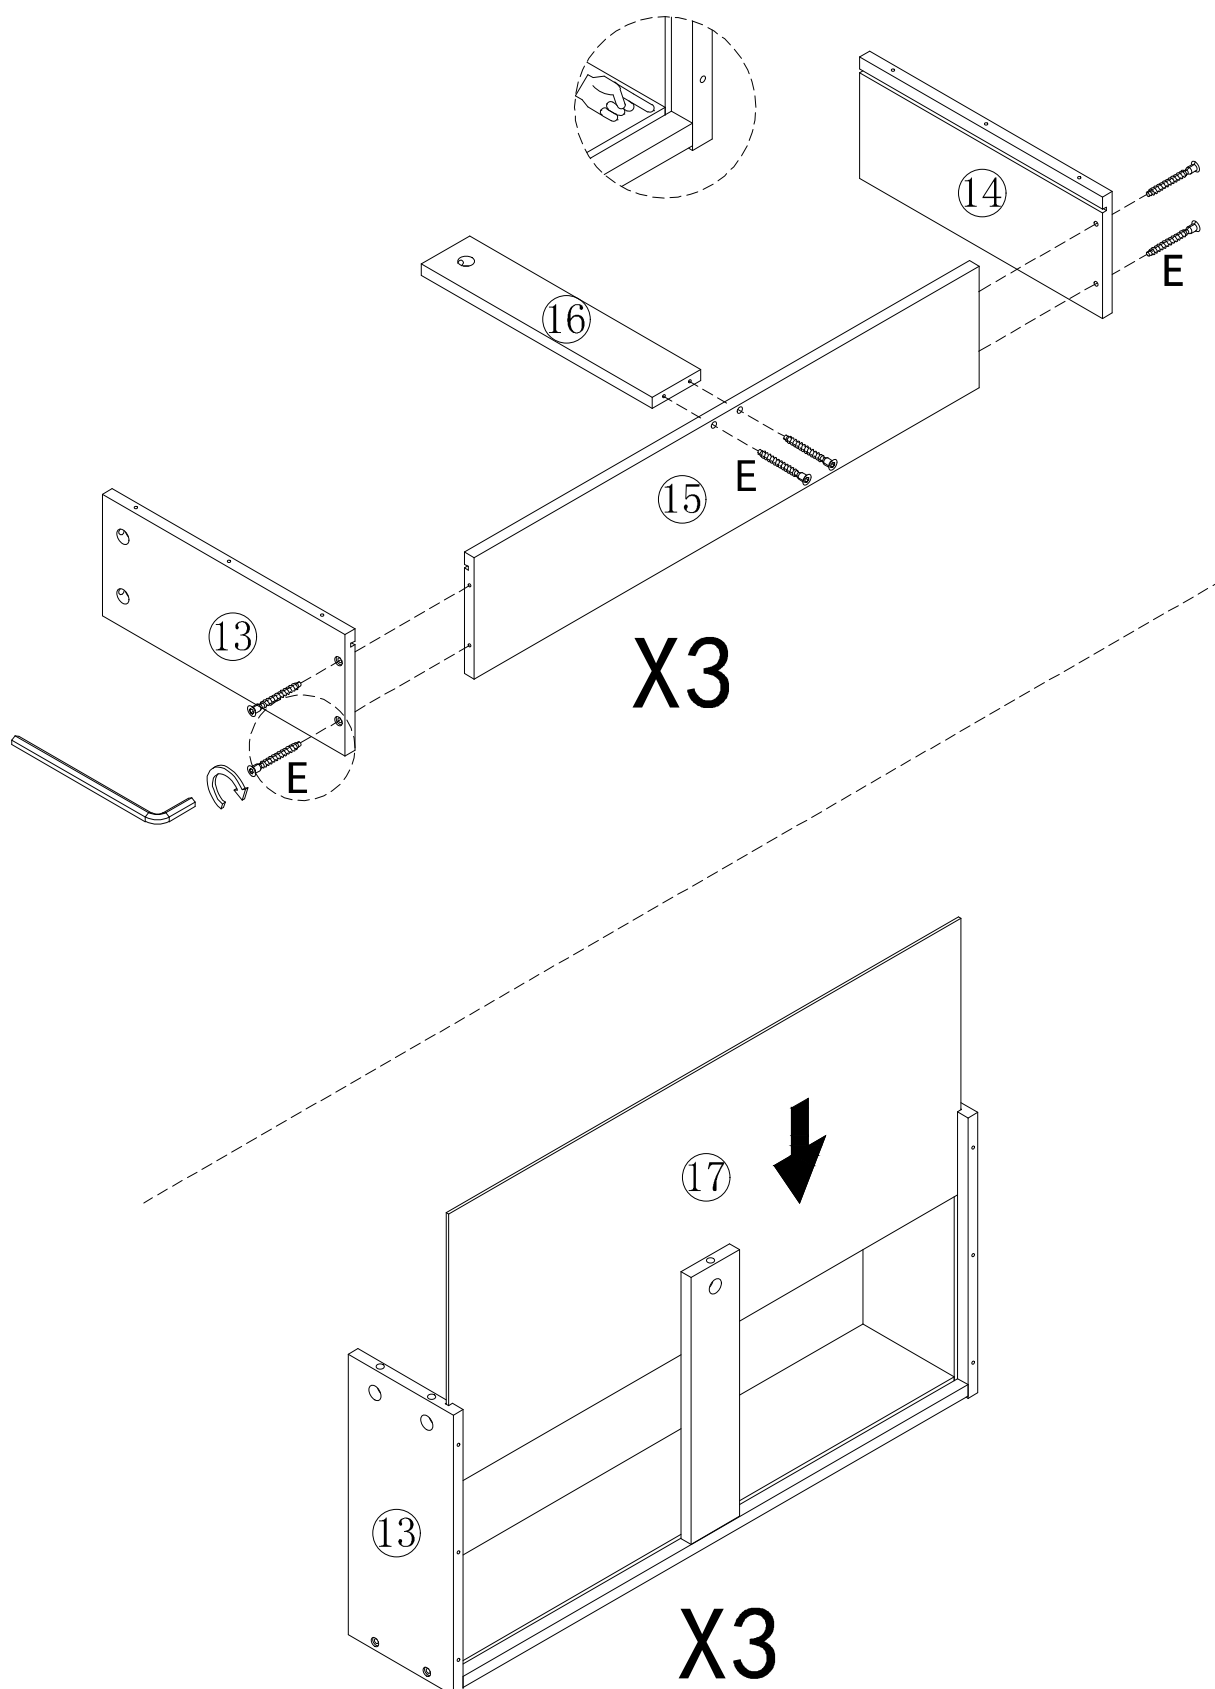


E X 18PCS

STEP 15

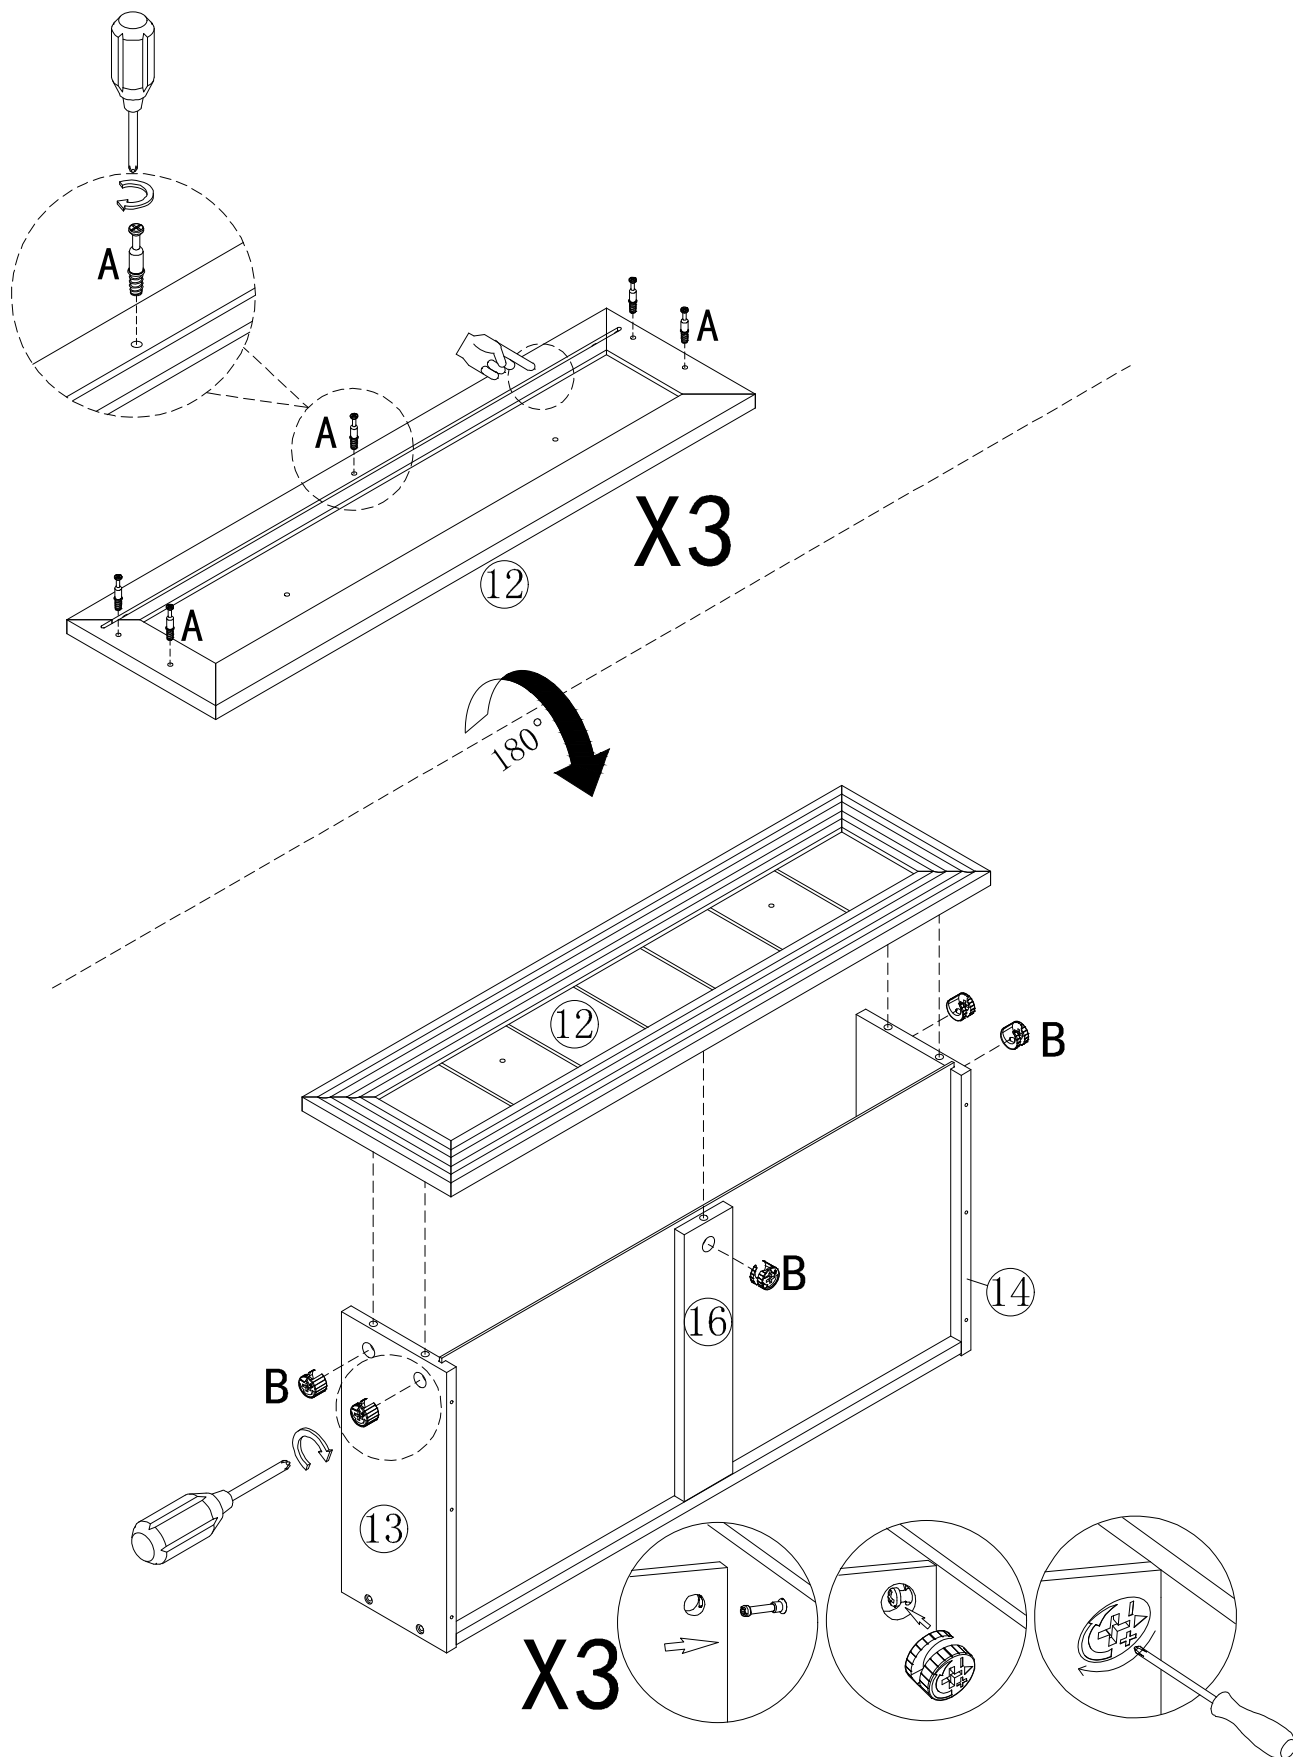


	A X 15PCS
	B X 15PCS

STEP 16

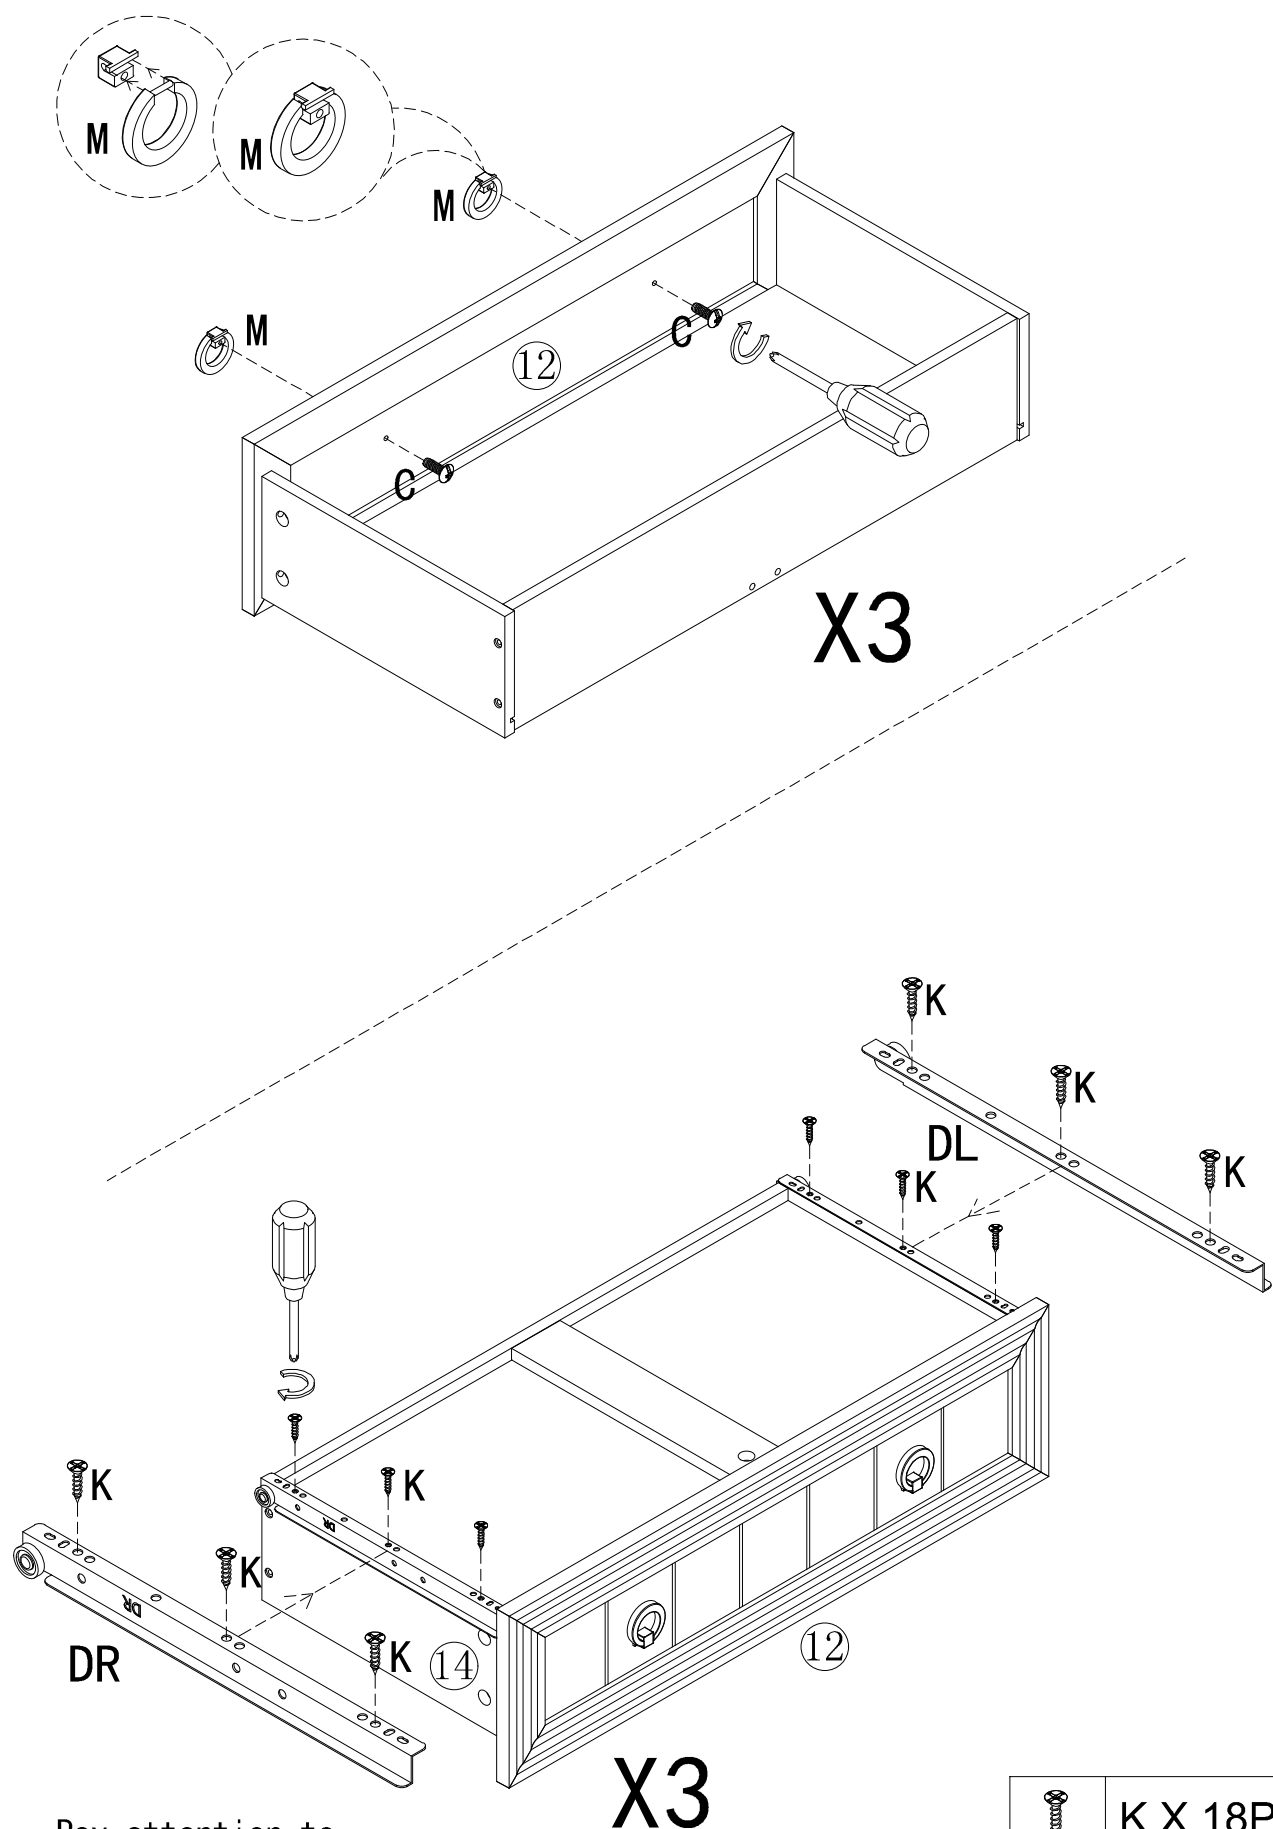


	K X 18PCS
	M X 6PCS
	C X 6PCS


STEP 17

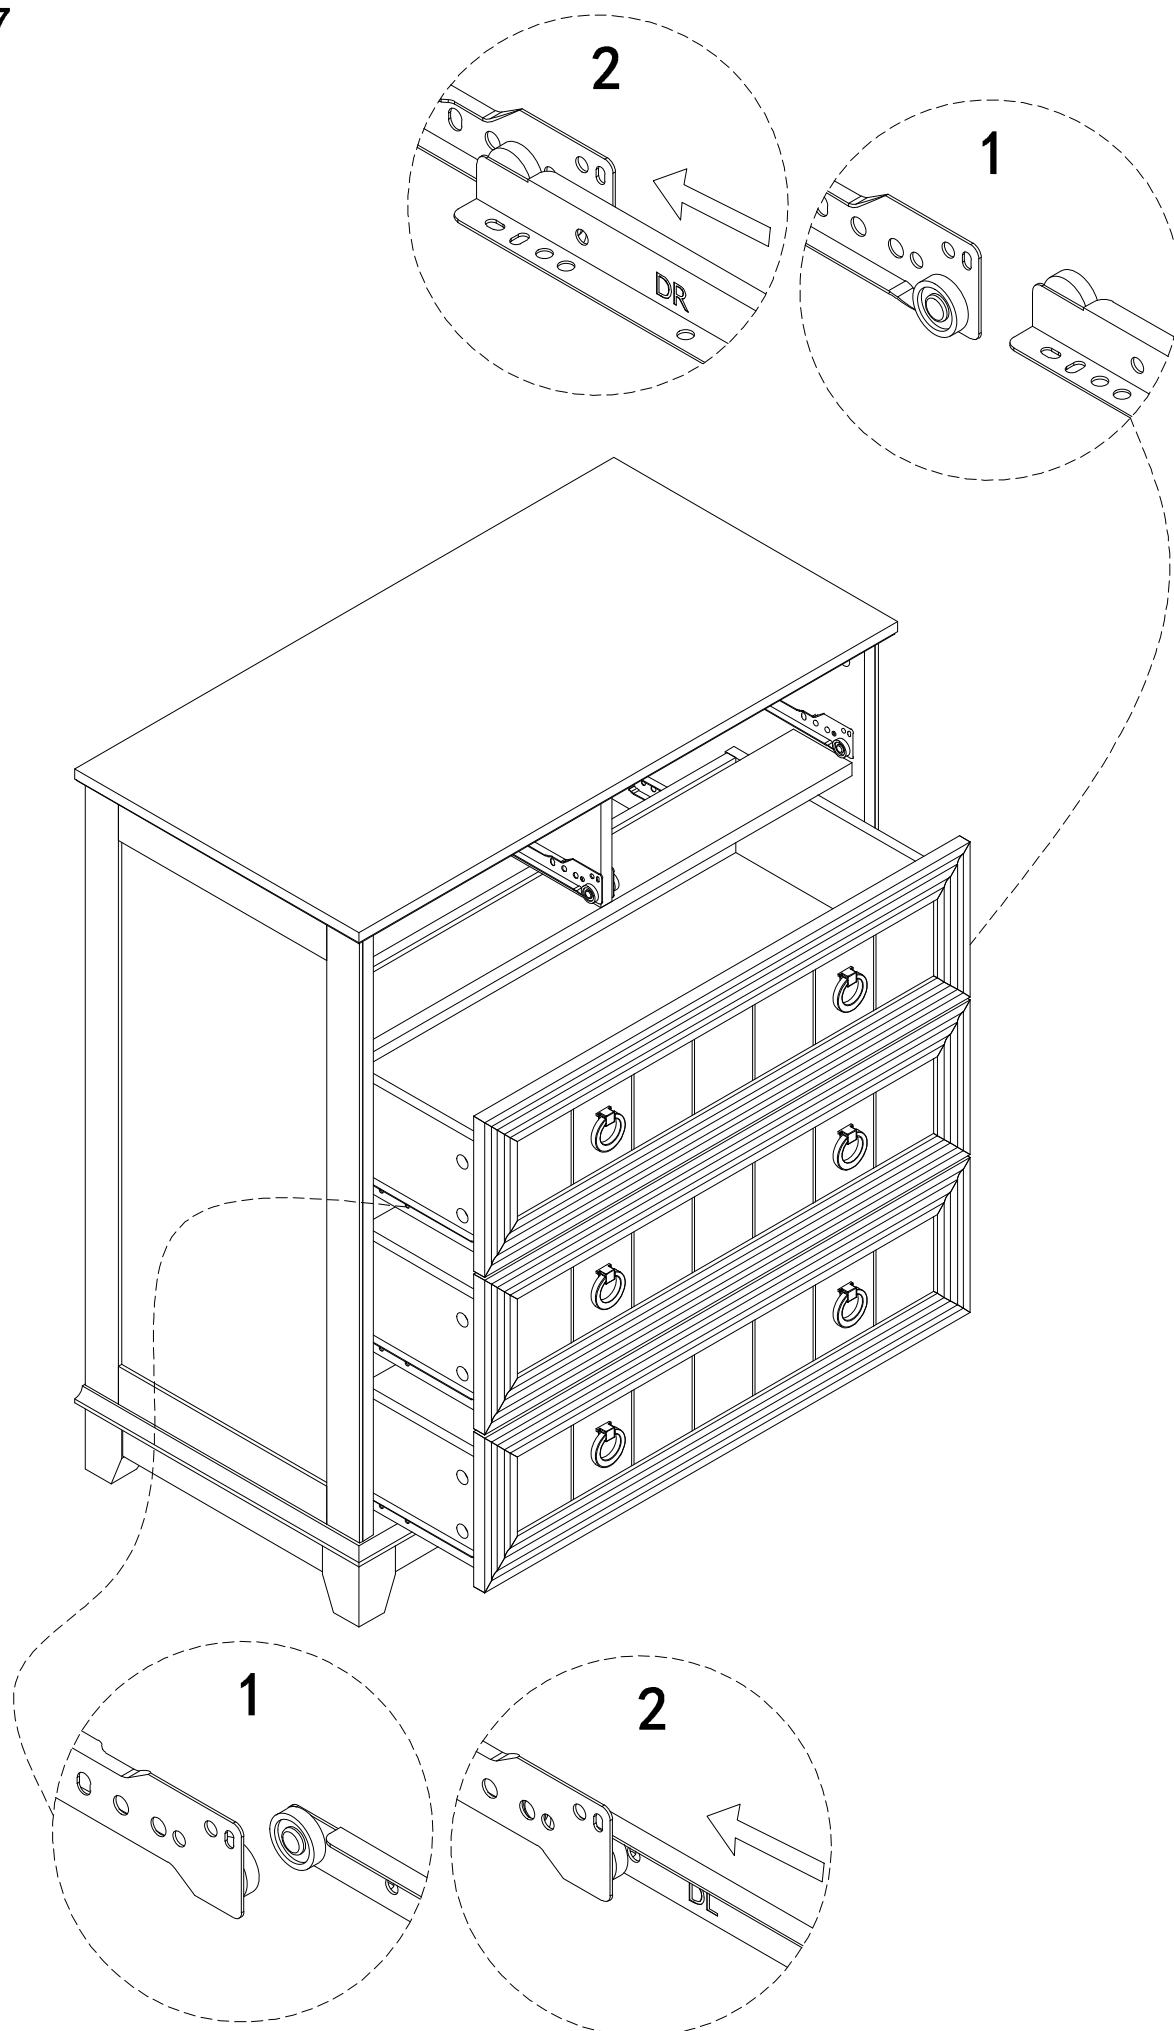

STEP 18

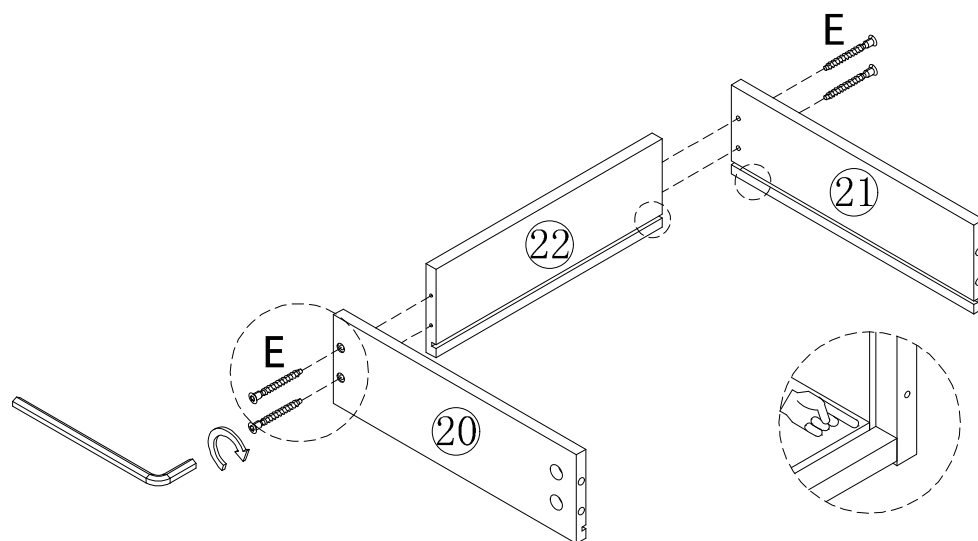

X2

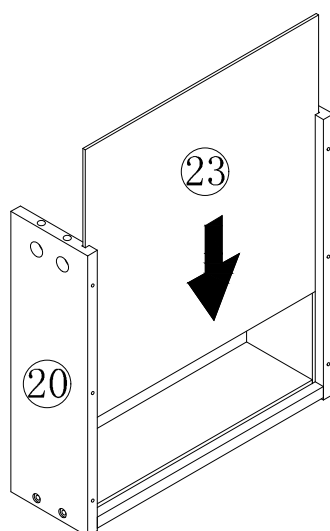


X2




E X 8PCS

STEP 19

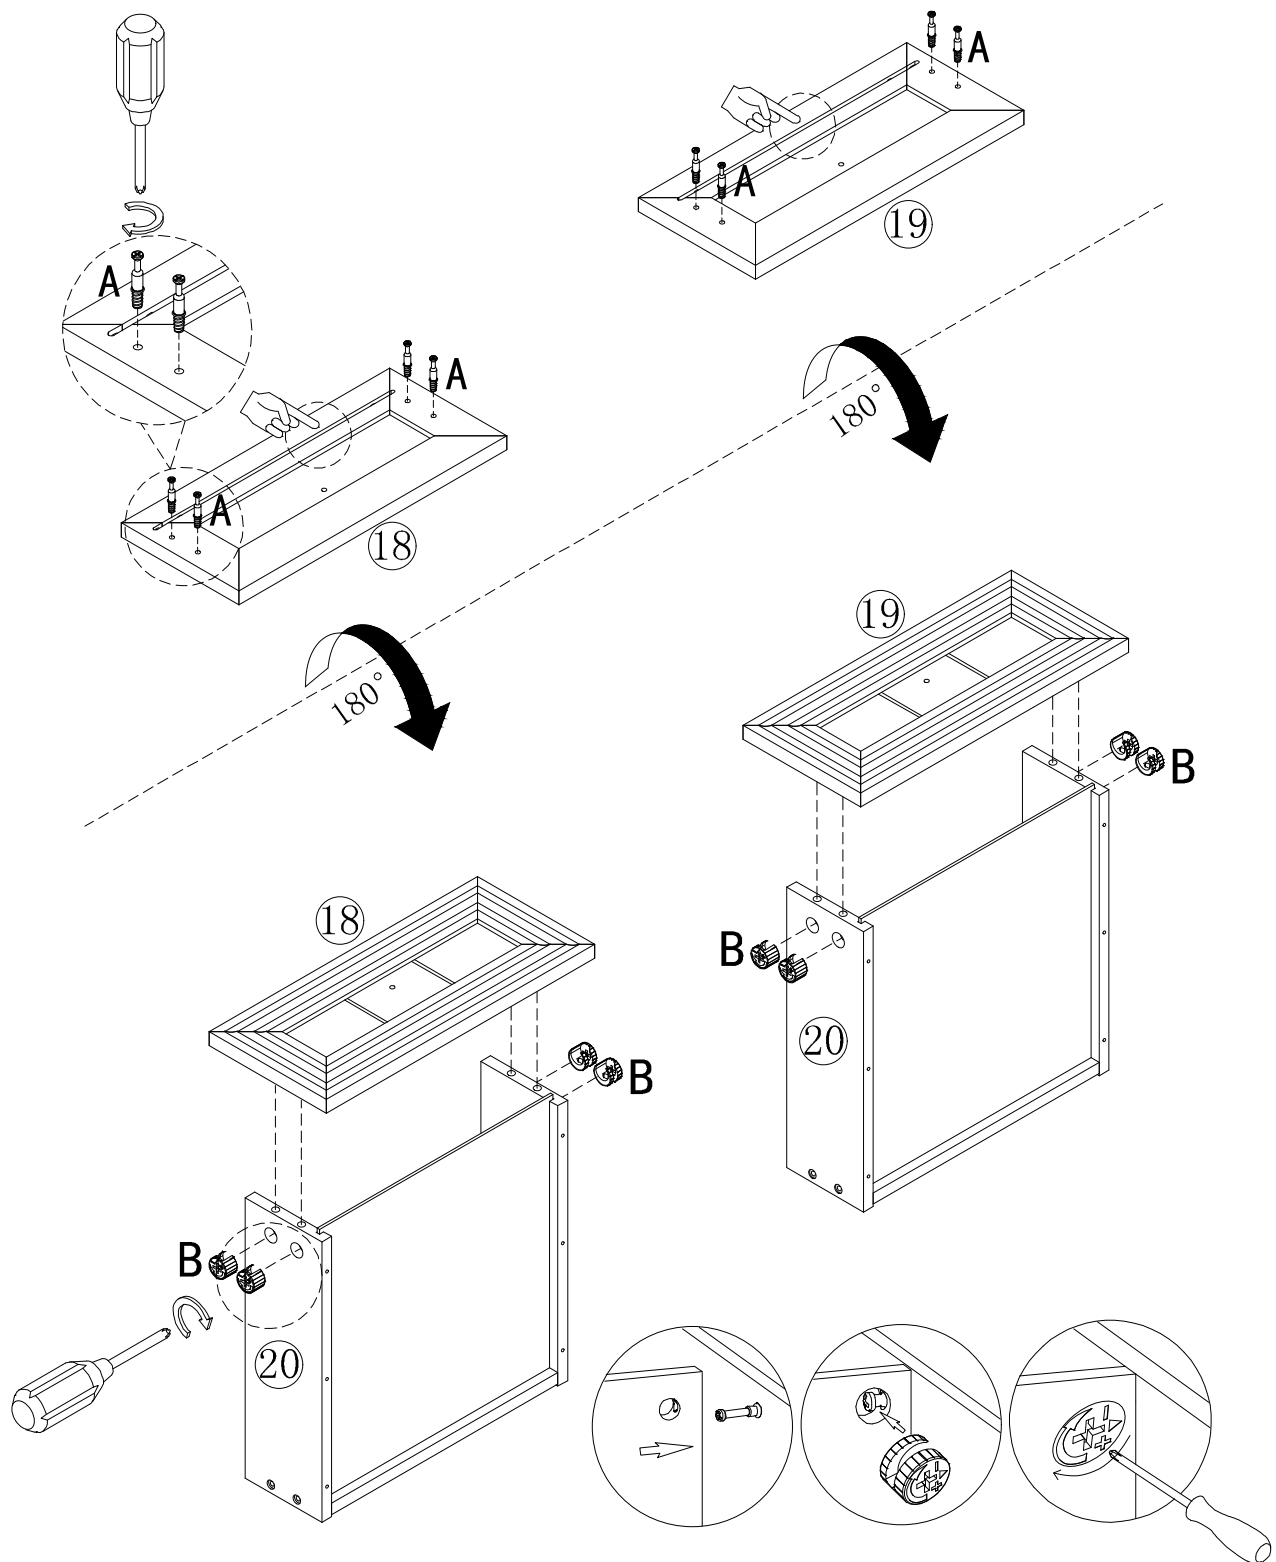


	A X 8PCS
	B X 8PCS

STEP 20





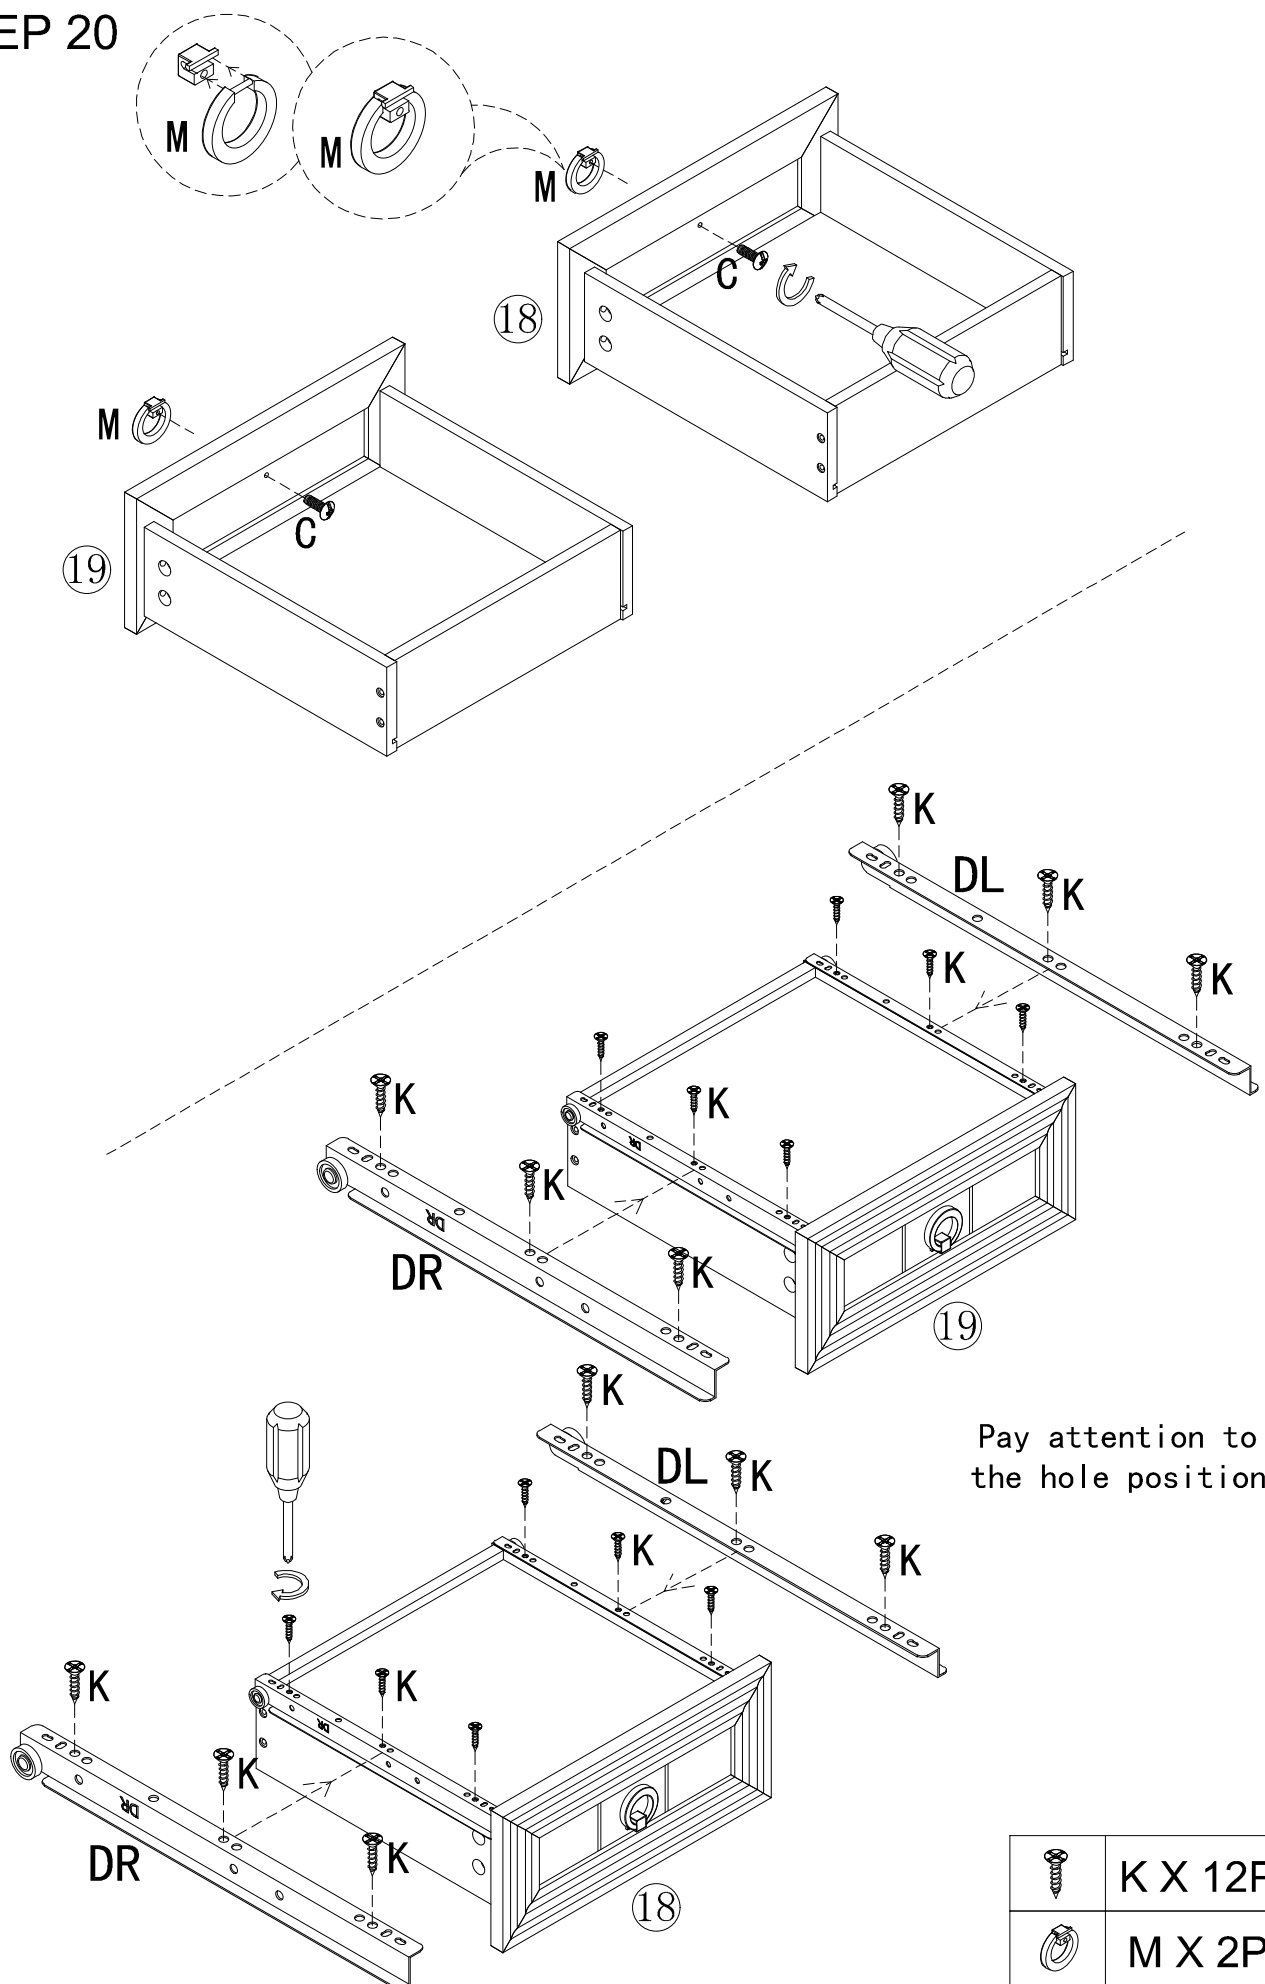


	K X 12PCS
	M X 2PCS
	C X 2PCS



STEP 21

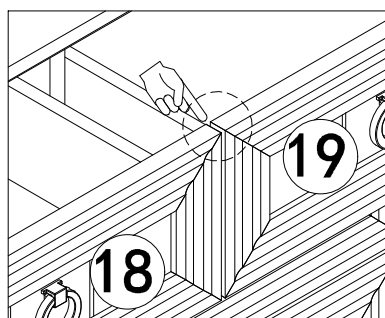


Note: Please insert the drawer into the corresponding position according to the number

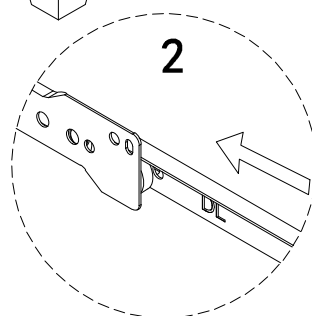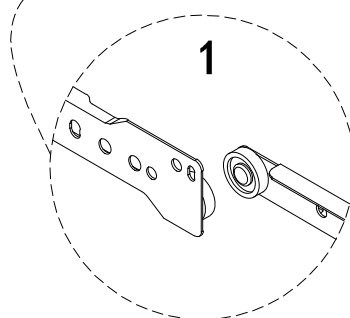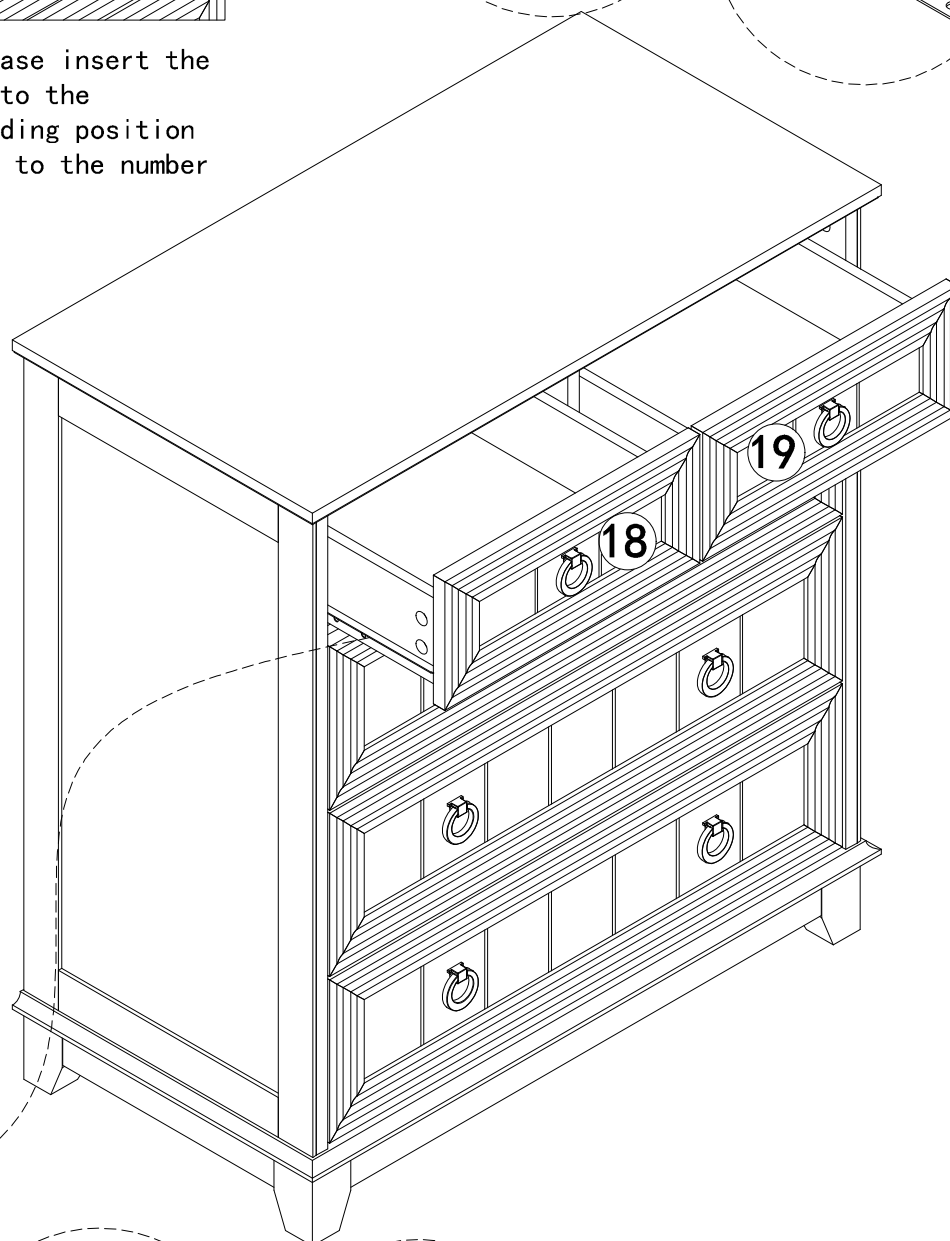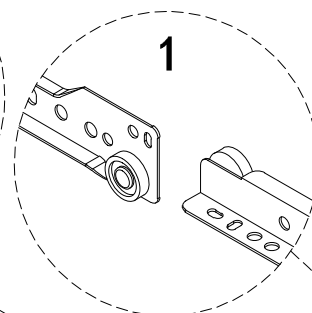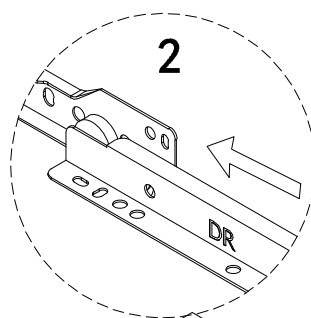

STEP 22

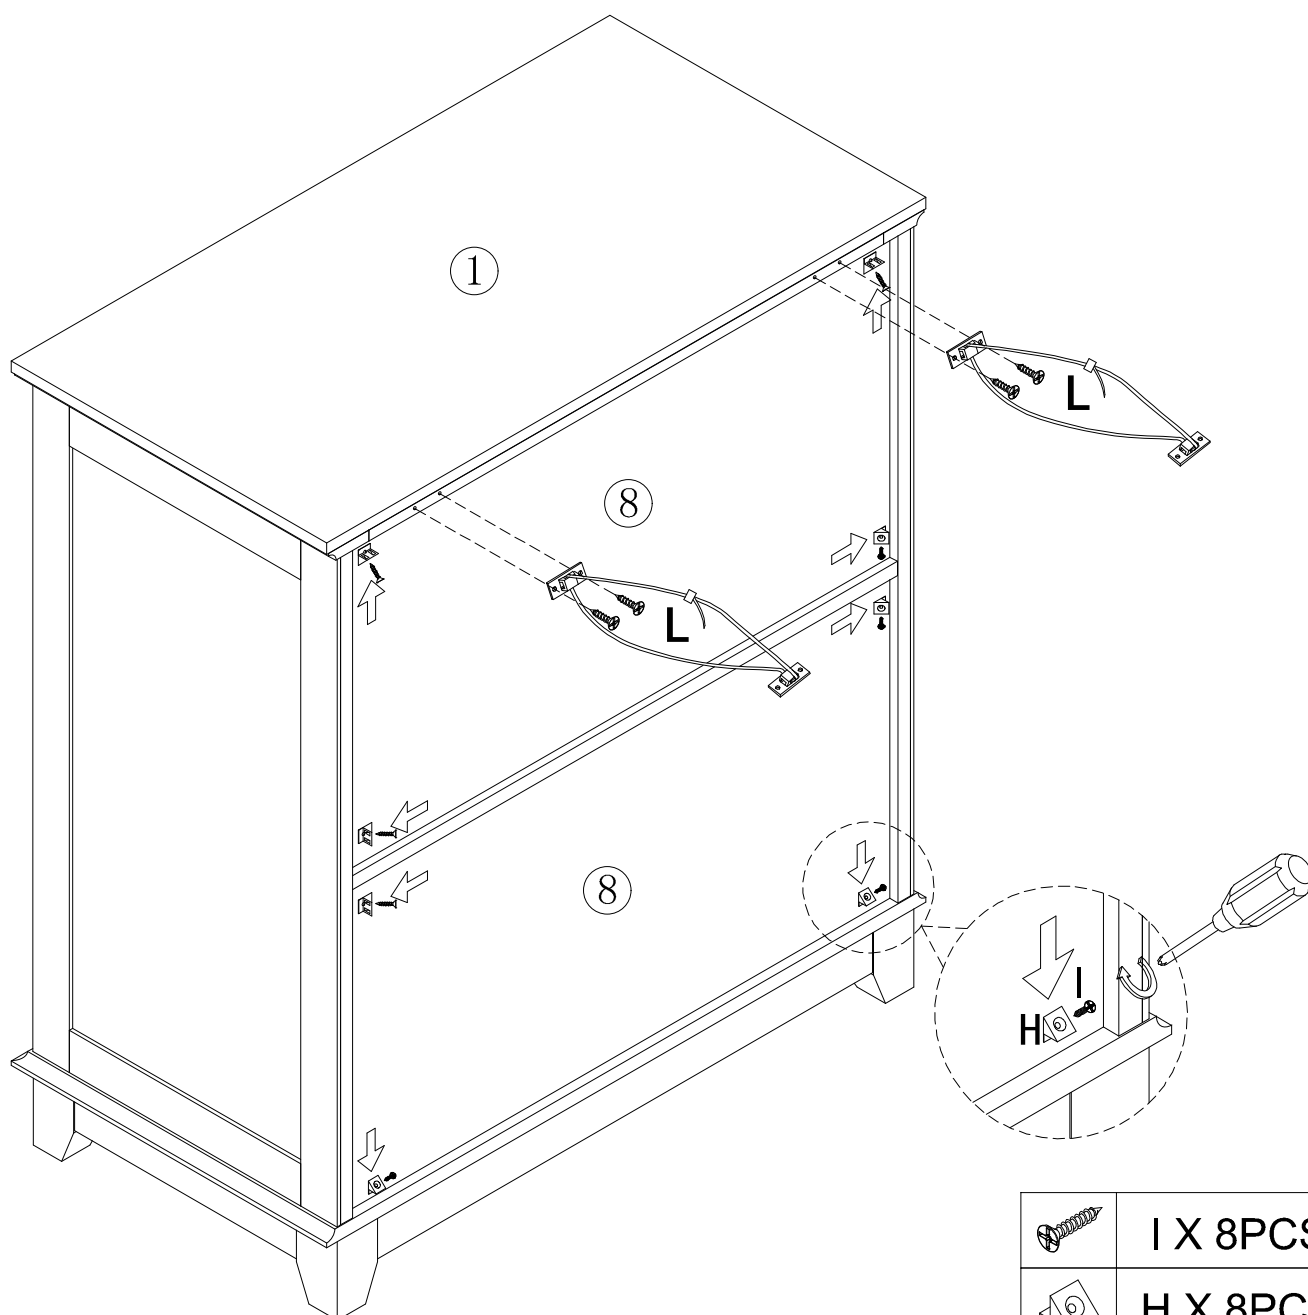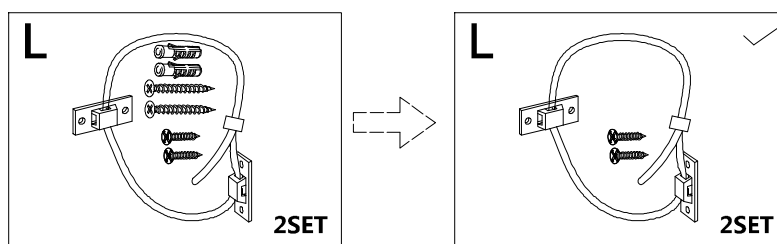

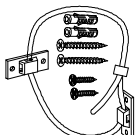	I X 8PCS
	H X 8PCS
	L X 2SET

STEP 23

