



Installation & Assembly

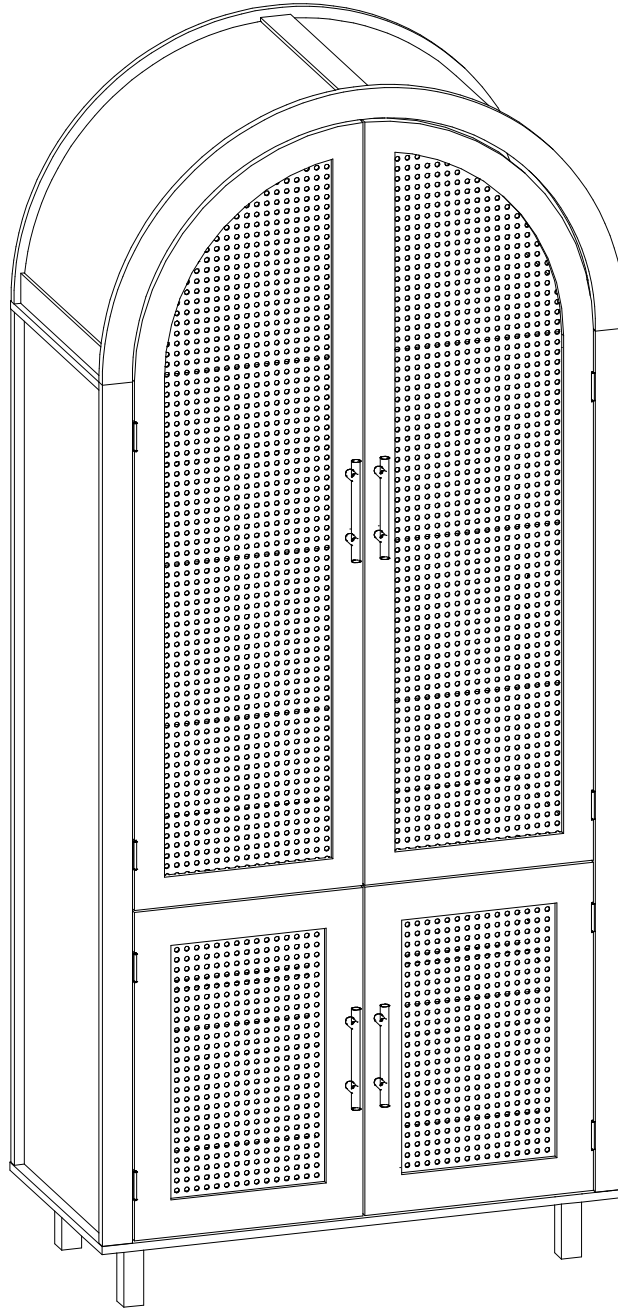



 WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.



















- 1.Note:**This is not clothing storage cabinet and it is not recommended to use it as a clothing storage cabinet.
- 2.All cabinets** come with TRO, stainless steel or our "L-Bracket" when shipped.

Installation & Assembly

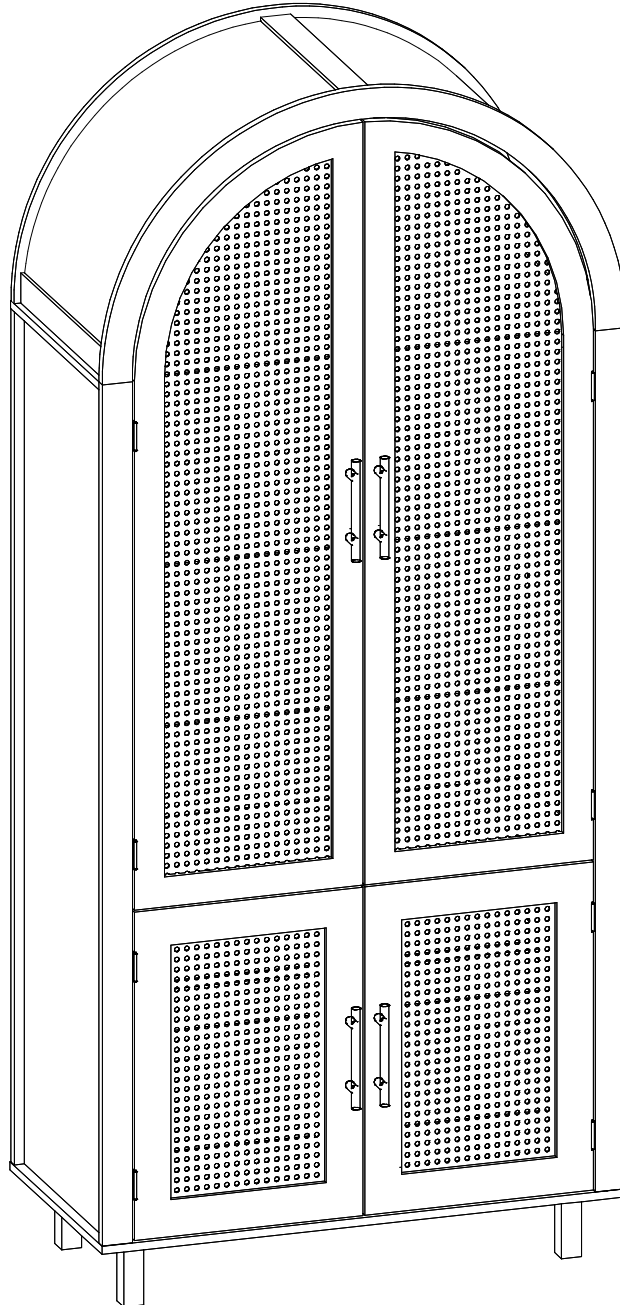


Part List

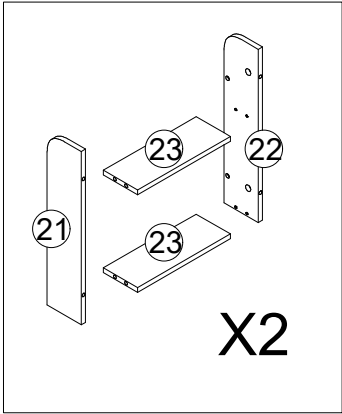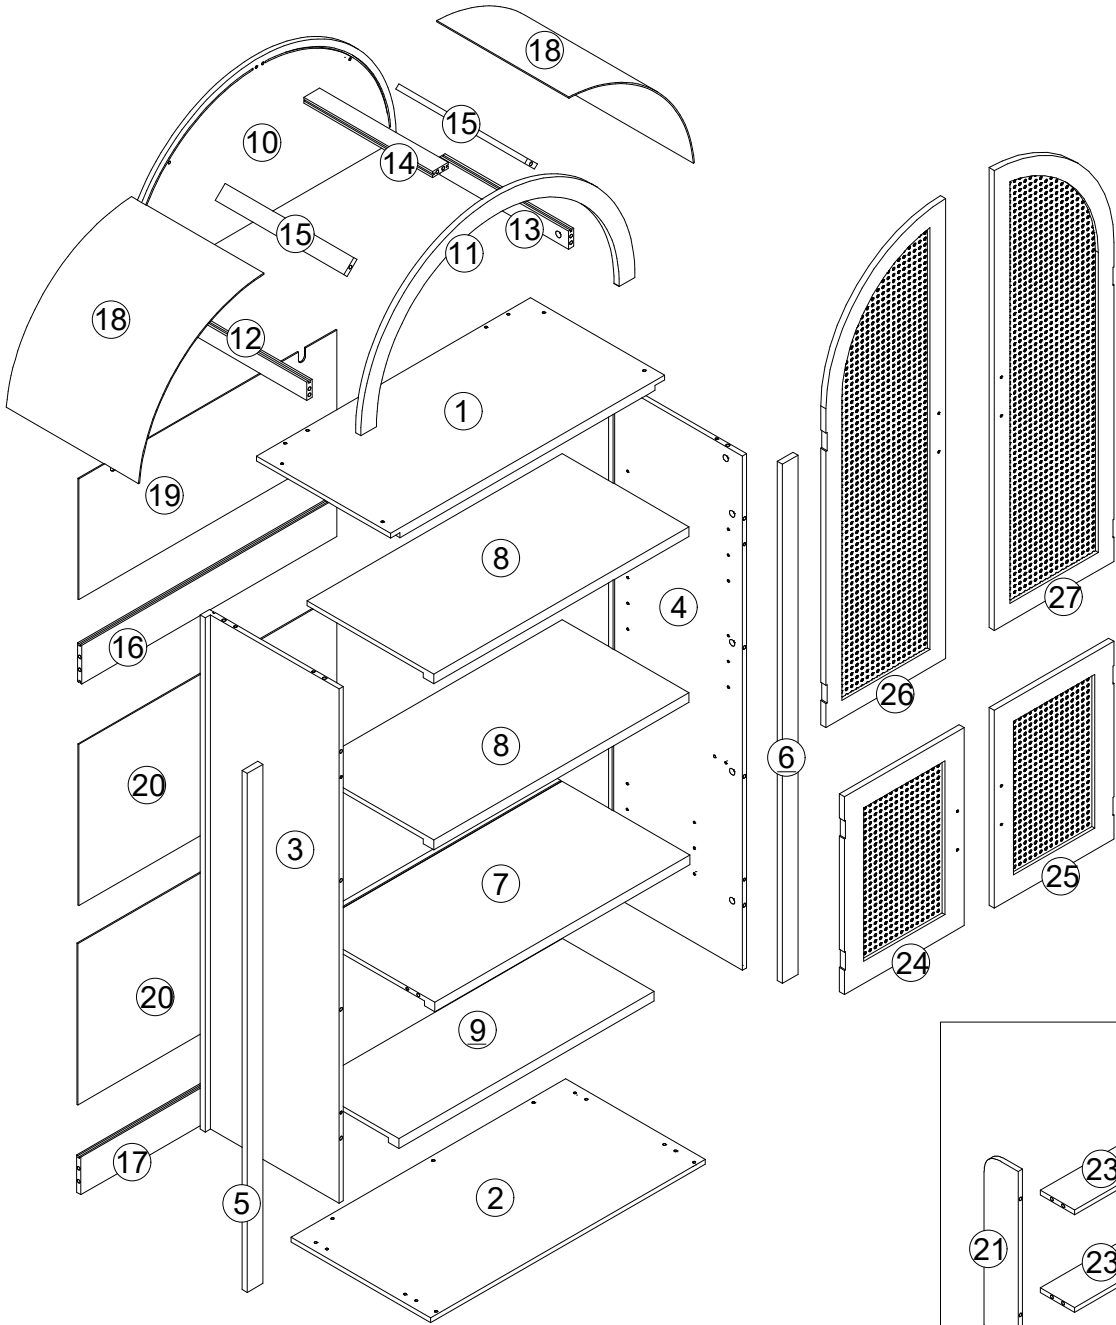

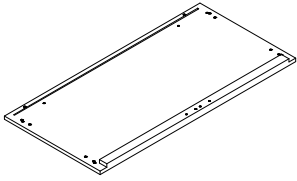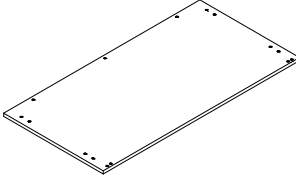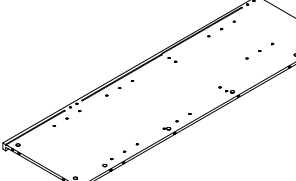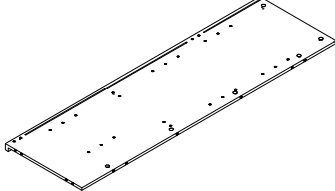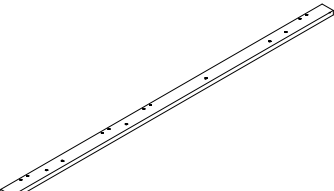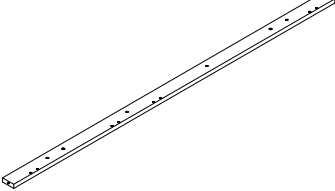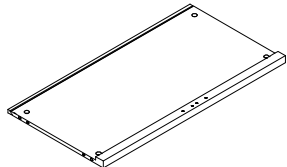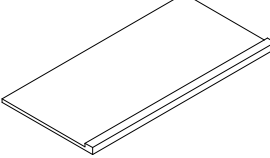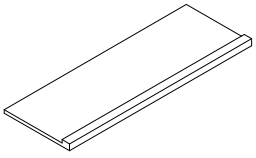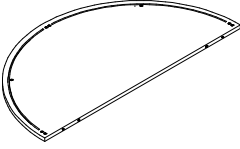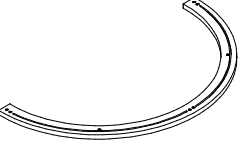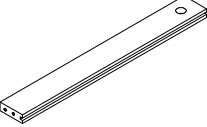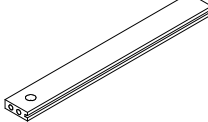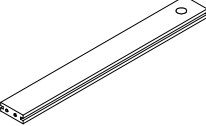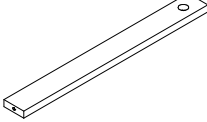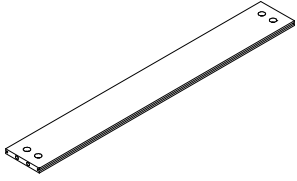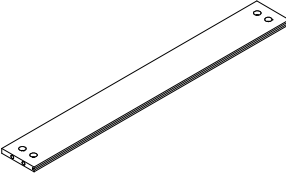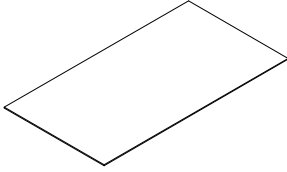
①  X1PC	②  X1PC	③  X1PC
④  X1PC	⑤  X1PC	⑥  X1PC
⑦  X1PC	⑧  X2PCS	⑨  X1PC
⑩  X1PC	⑪  X1PC	⑫  X1PC
⑬  X1PC	⑭  X1PC	⑮  X2PCS
⑯  X1PC	⑰  X1PC	⑱  X2PCS

19

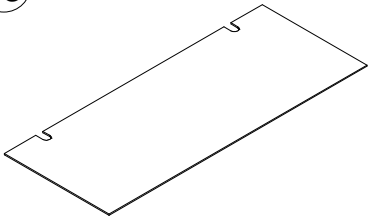


X1PC

20

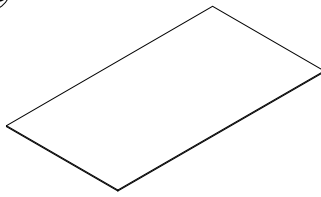


X2PCS

21

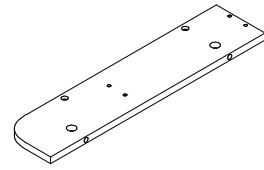


X2PCS

22

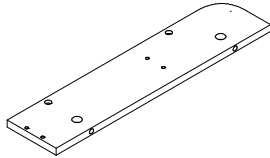


X2PCS

23

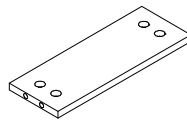


X4PCS

24

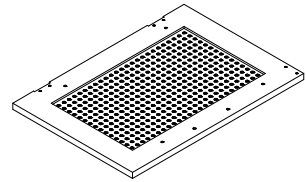


X1PC

25

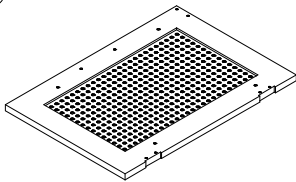


X1PC

26

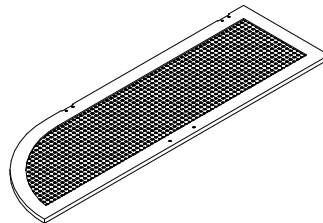



X1PC

27

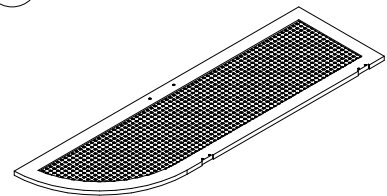



X1PC

Ⓐ	X53	Ⓑ	X53	Ⓒ	X22	Ⓓ	X20	Ⓔ	X26	Ⓕ	X40
						 Plug the hole					
Ø6*35mm		Ø15*9.5mm		Ø6*30mm		Ø20mm		Ø5*40mm		Ø3.5*12mm	

Ⓖ	X4	Ⓗ	X4	Ⓘ	X12	Ⓙ	X4	Ⓚ	X8	Ⓛ	X12
		 		 							
		Ø3*16mm		Ø3*16mm							



Ⓜ	X8	Ⓝ	X4	Ⓞ	X4	Ⓟ	X2	Ⓠ	X12	Ⓡ	X1
						  					
M4*18mm						Ø4*12&Ø6*30&Ø4*35mm		4*12mm		S4	

Step1

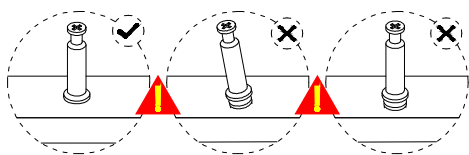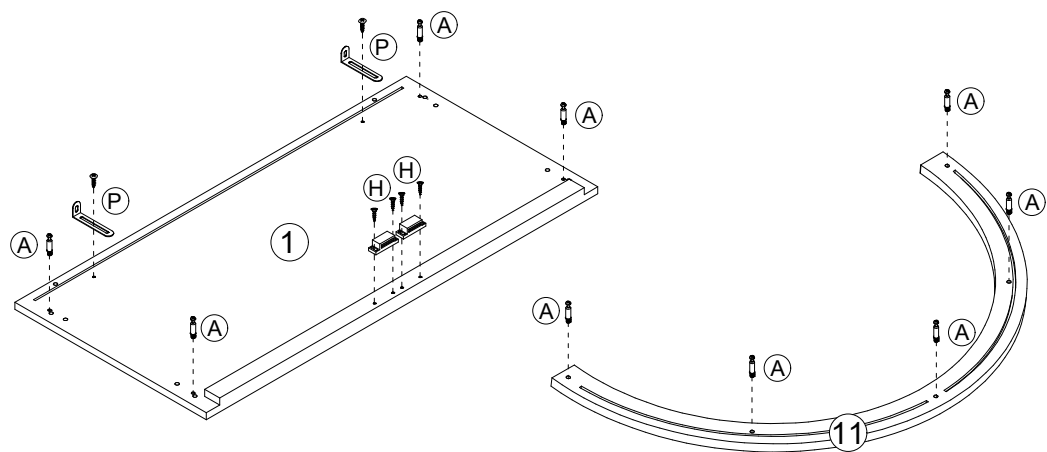


(P)	X2	(H)	X2	(A)	X9
Ø4*12mm		Ø3*16mm		Ø6*35mm	

Step2

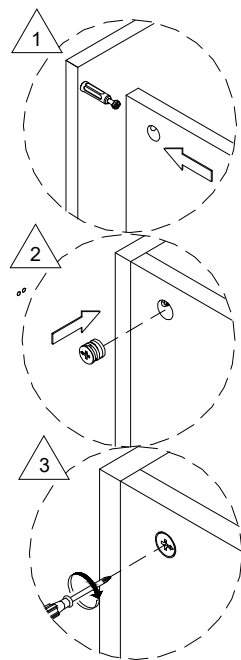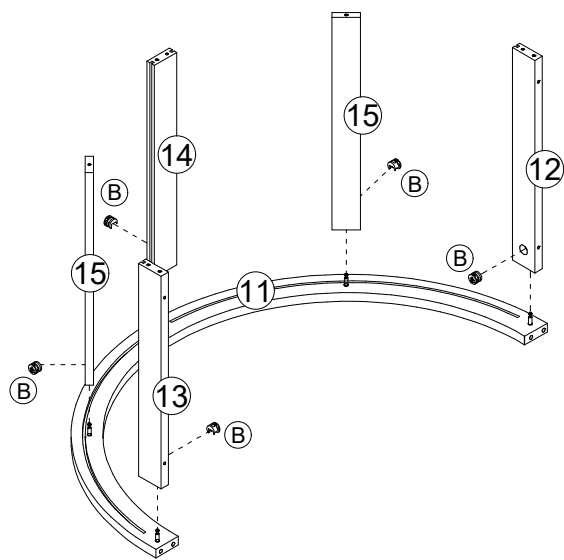


(B)	X5
Ø15*9.5mm	

Step3

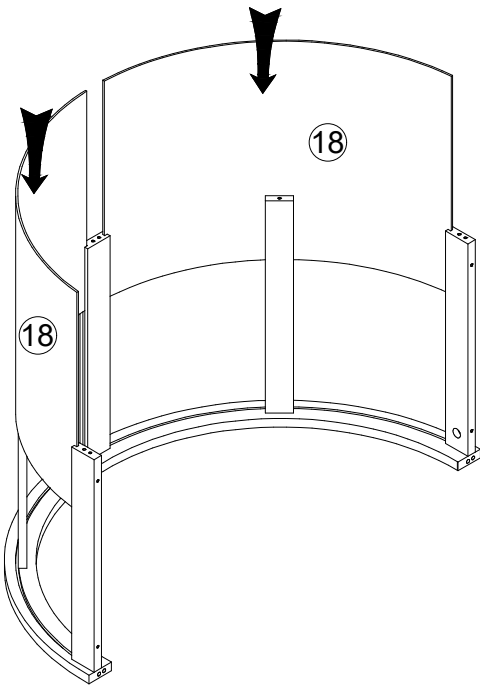


Step4

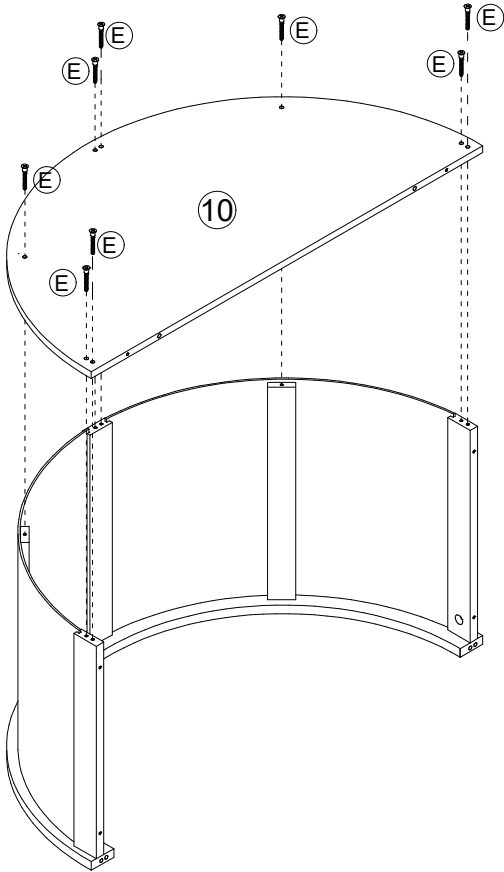



Ⓔ	X8
	
Ø5*40mm	

Step5

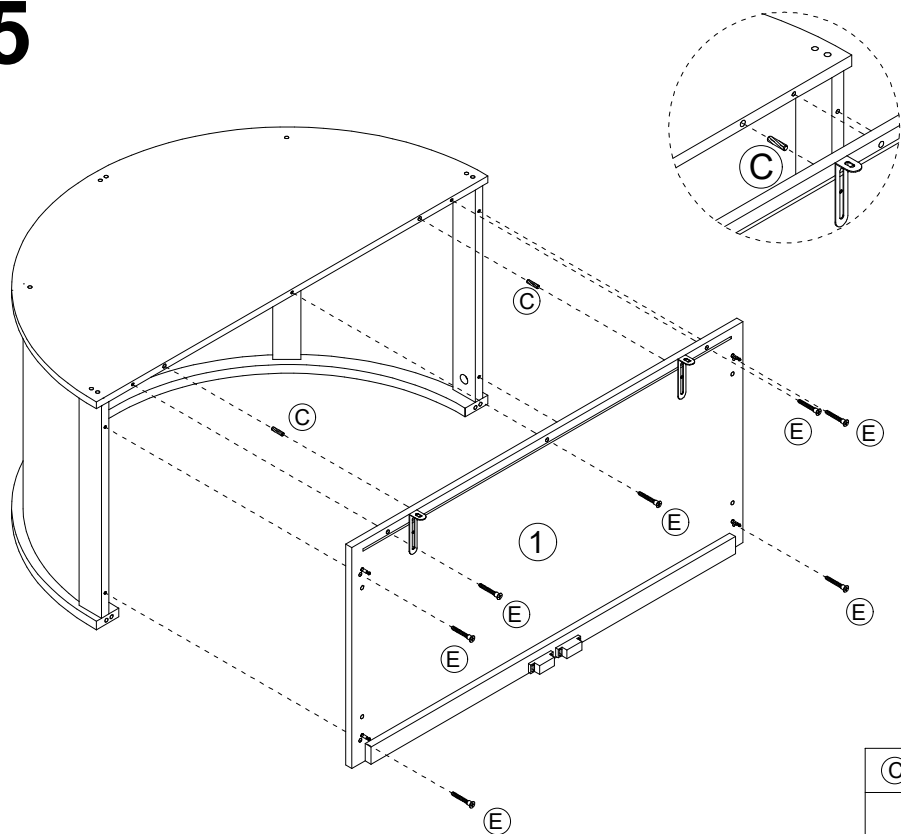



(C)	X2	(E)	X7
			
Ø6*30mm		Ø5*40mm	

Step6

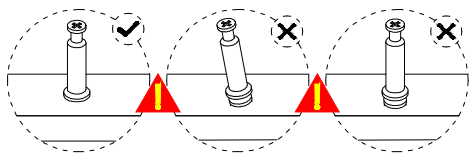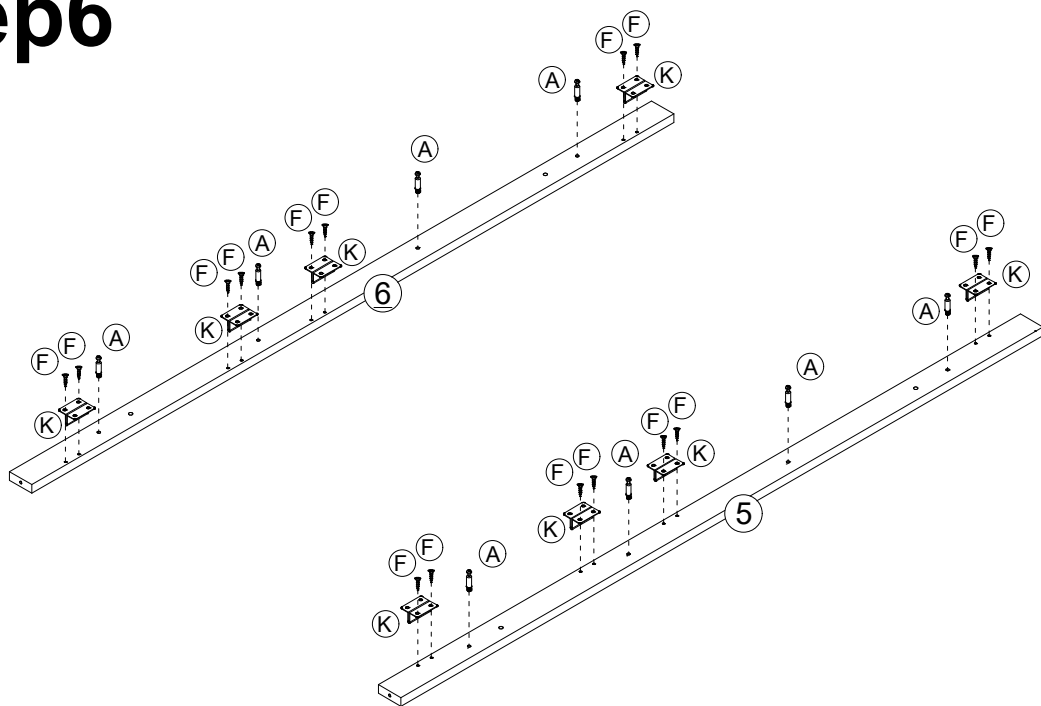


(K)	X8	(F)	X16	(A)	X8
					
		Ø3.5*12mm		Ø6*35mm	

Step7

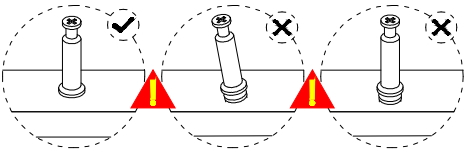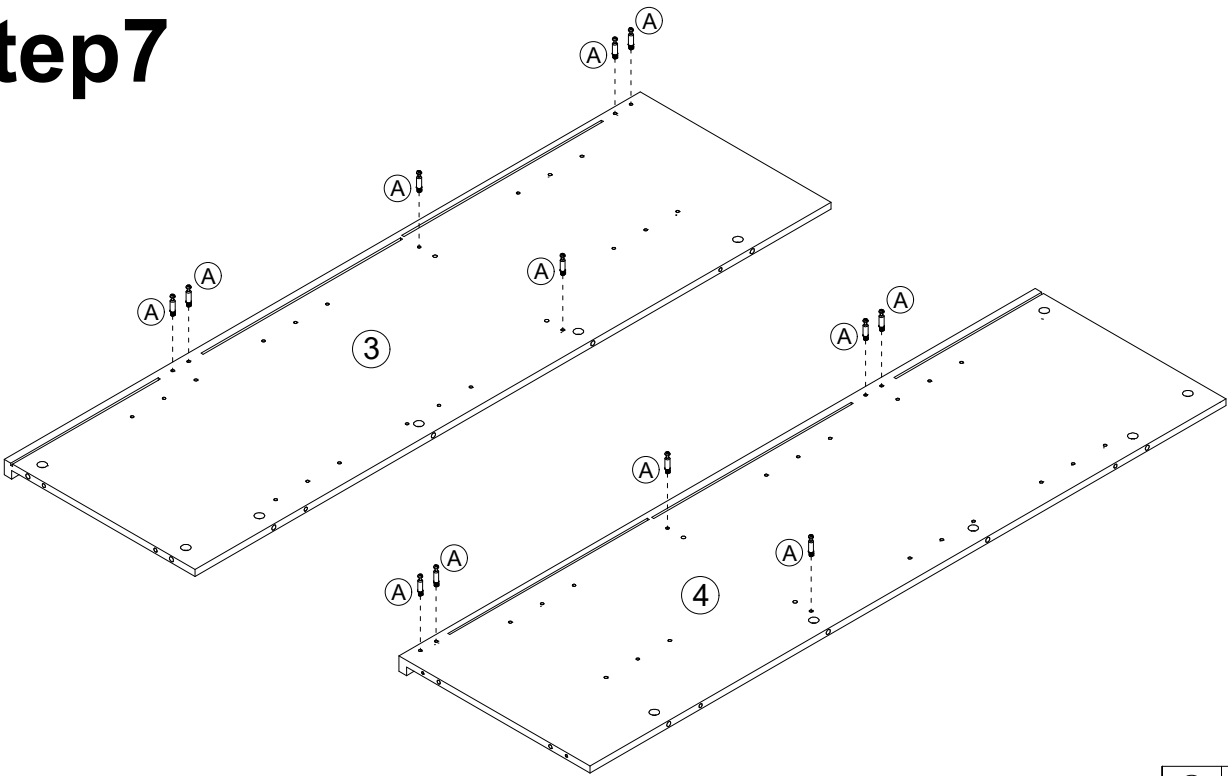


A	X12
	
Ø6*35mm	

Step8

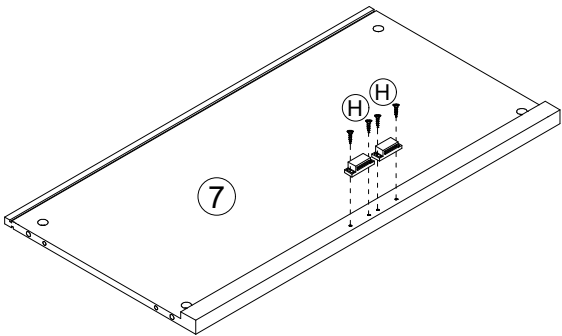


H	X2
	
Ø3*16mm	



Step9

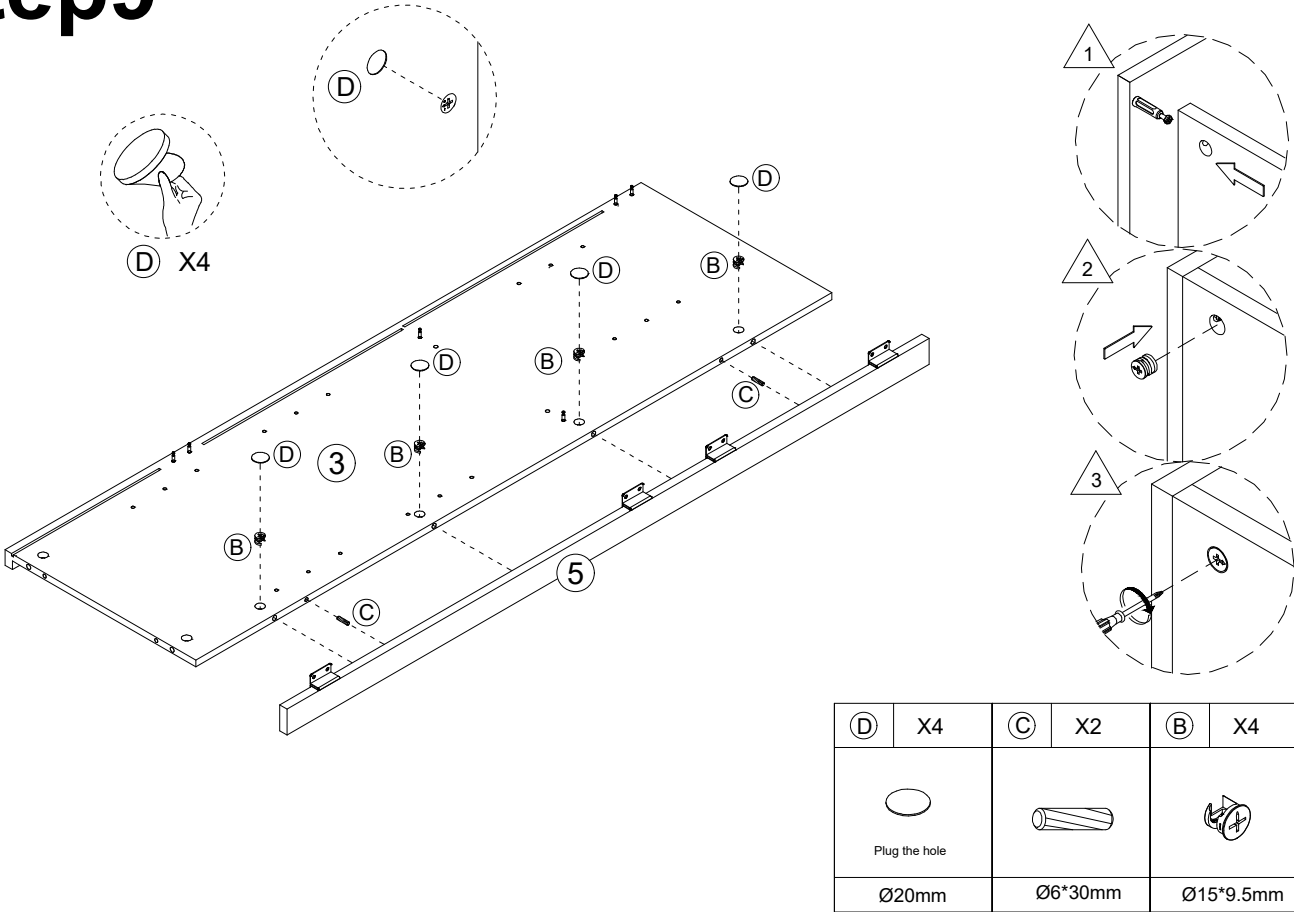

Step10

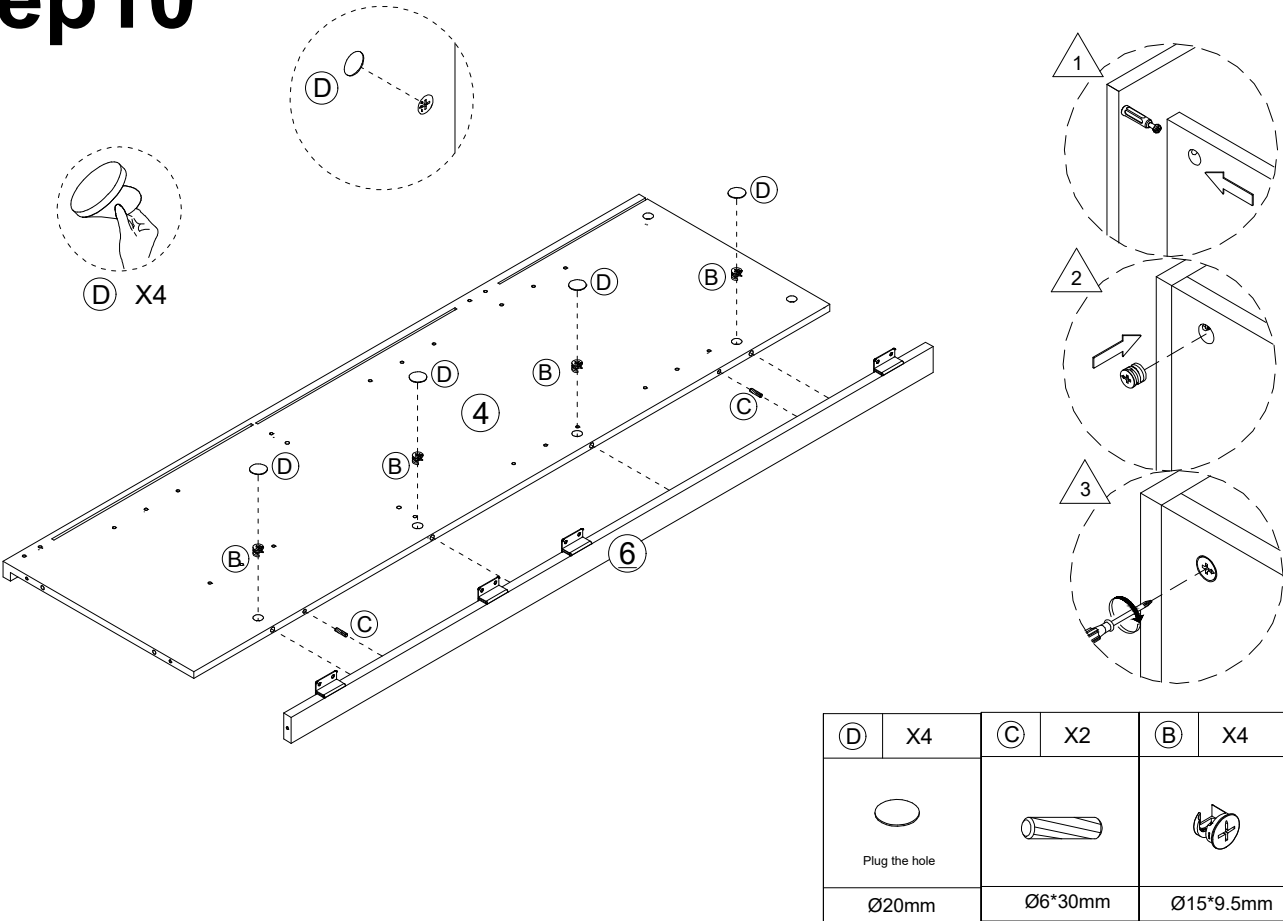


Step11

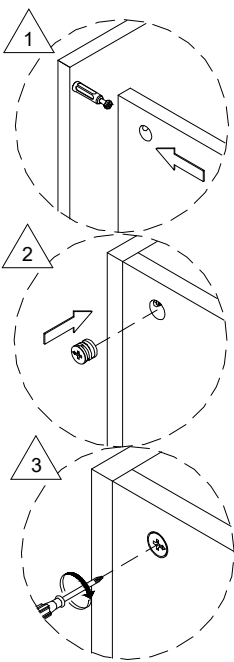
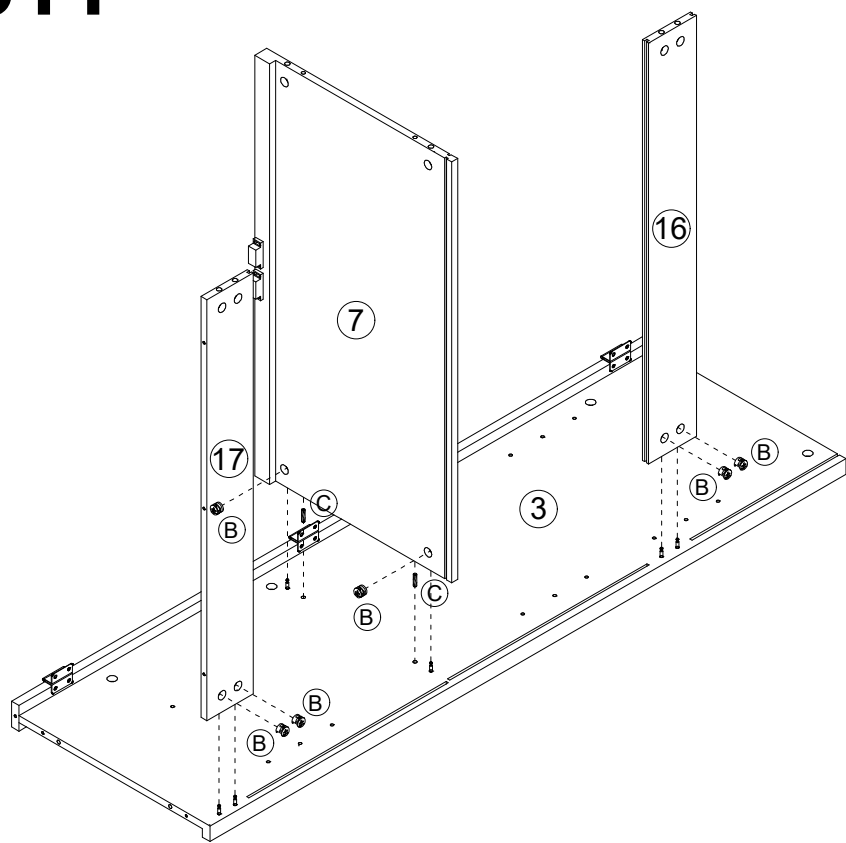


C	X2	B	X6
			
Ø6*30mm		Ø15*9.5mm	

Step12

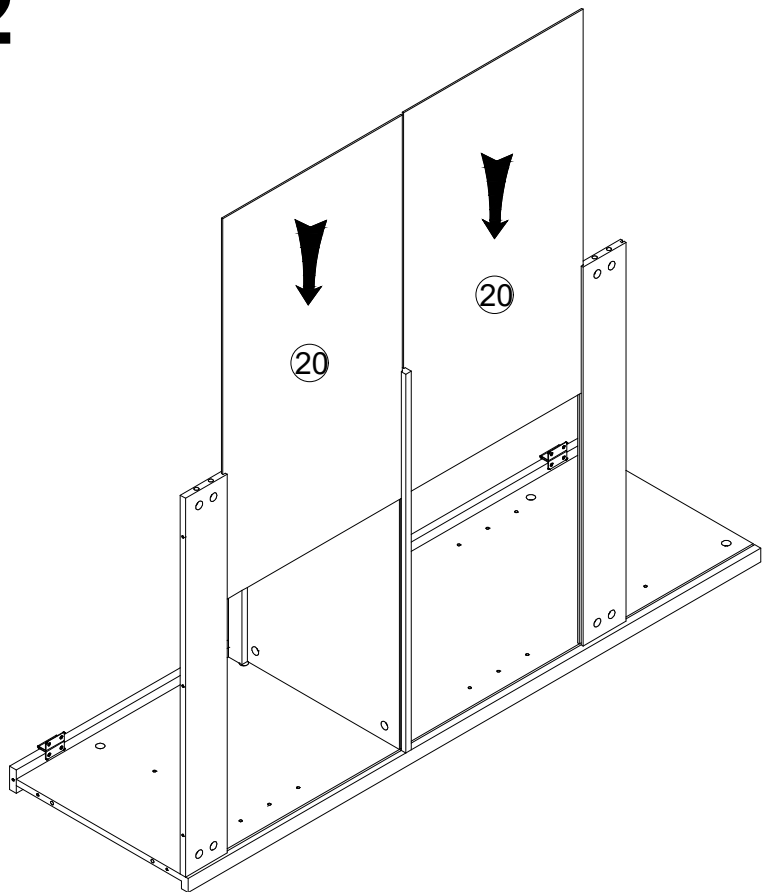


Step13

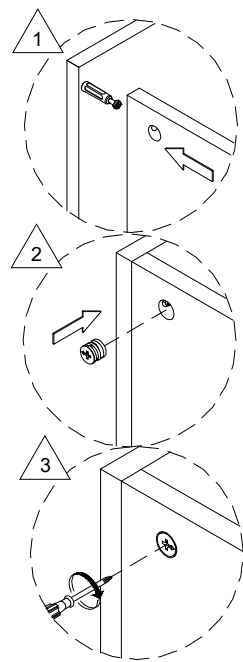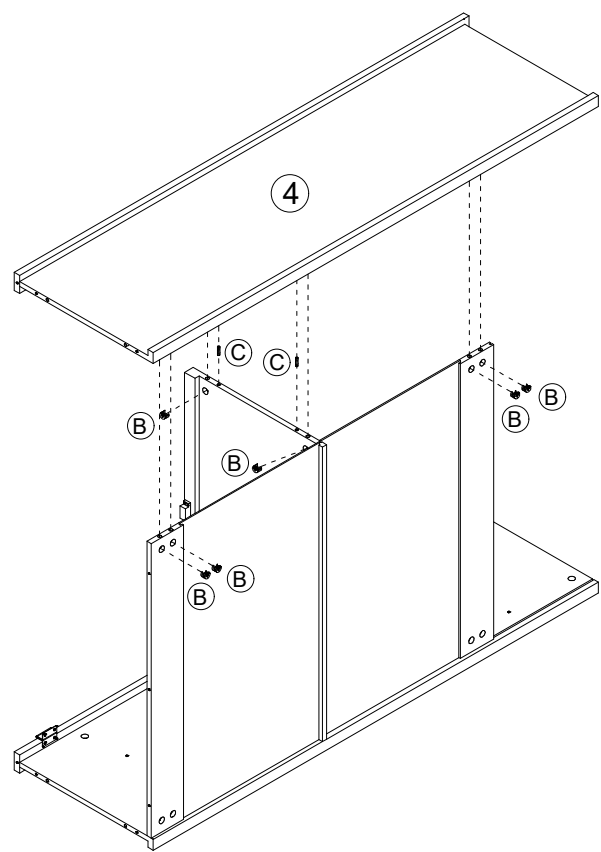


(C)	X2	(B)	X6
			
Ø6*30mm		Ø15*9.5mm	

Step14

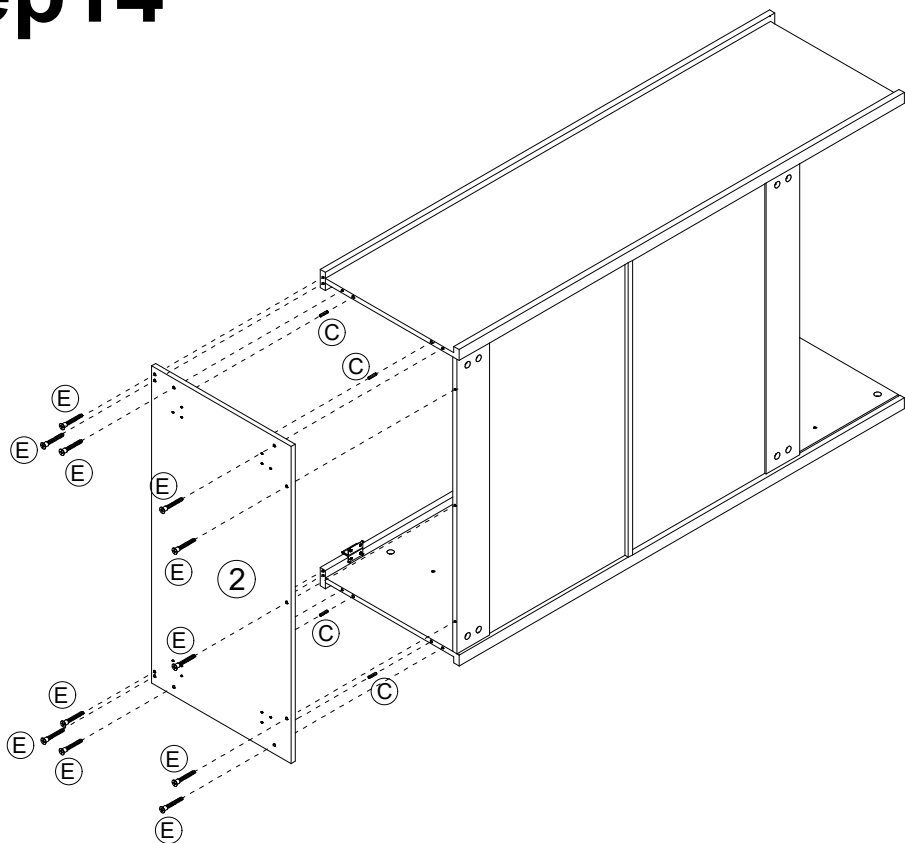


(C)	X4	(E)	X11
			
Ø6*30mm		Ø5*40mm	

Step15

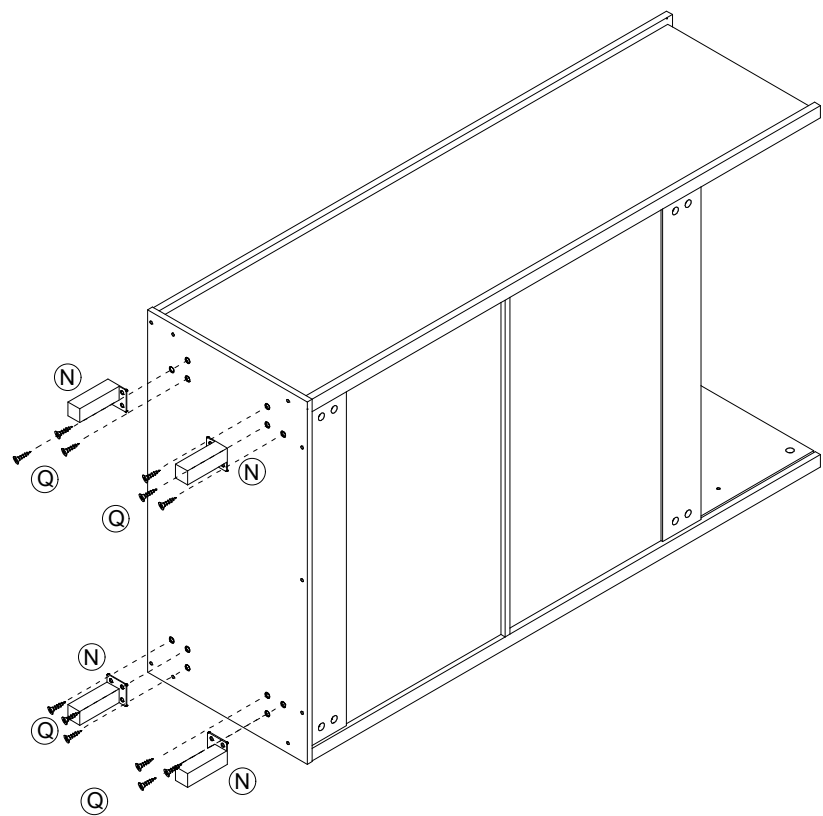





Q	X12	N	X4
			
4*12mm			

Step16

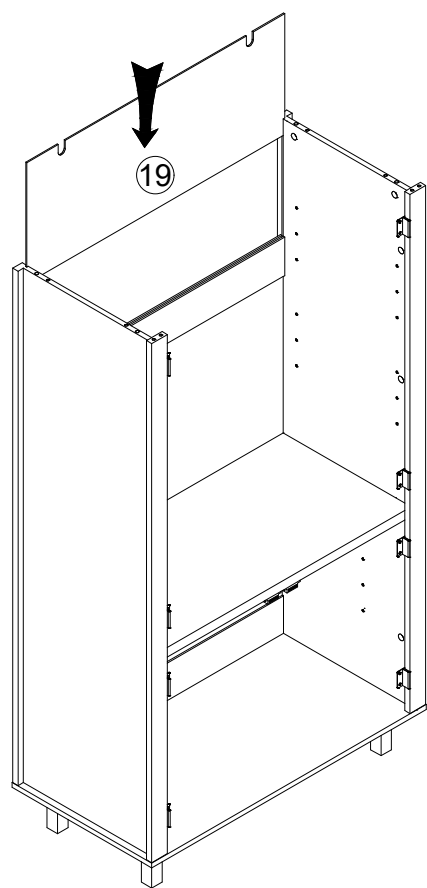



Step17


Two people are needed to install it

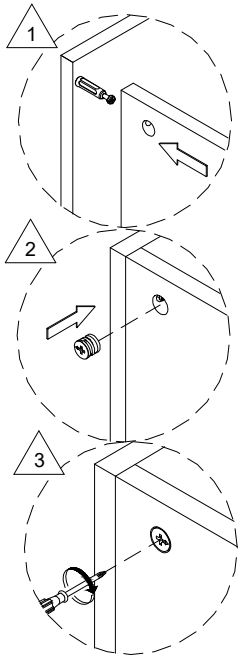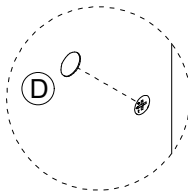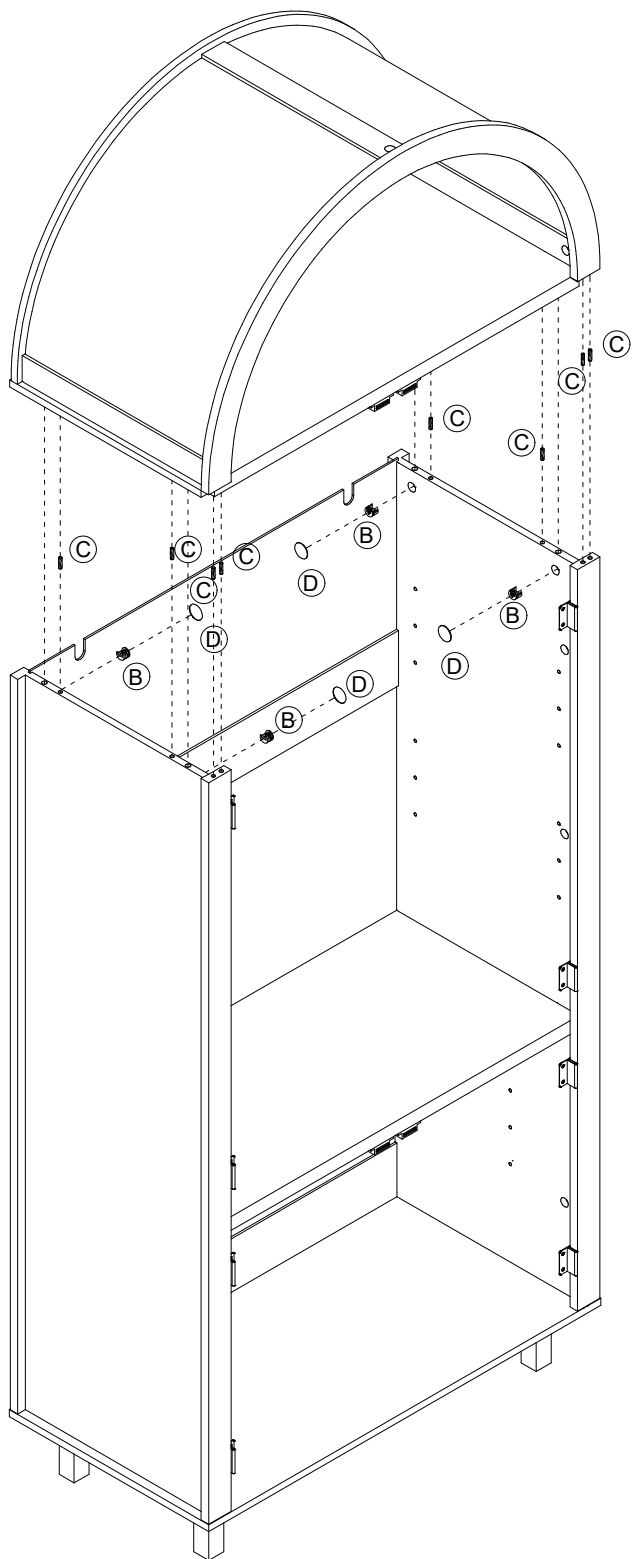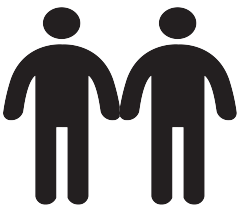



(D)	X4	(C)	X8	(B)	X4
	Plug the hole				
Ø20mm		Ø6*30mm		Ø15*9.5mm	

Step18

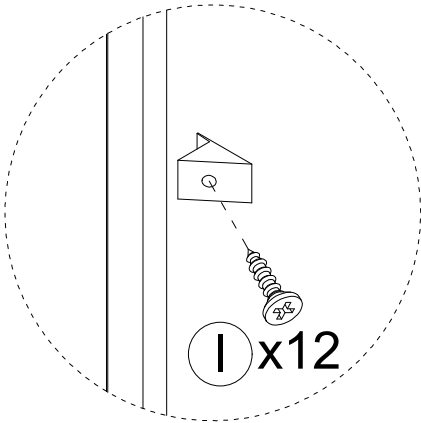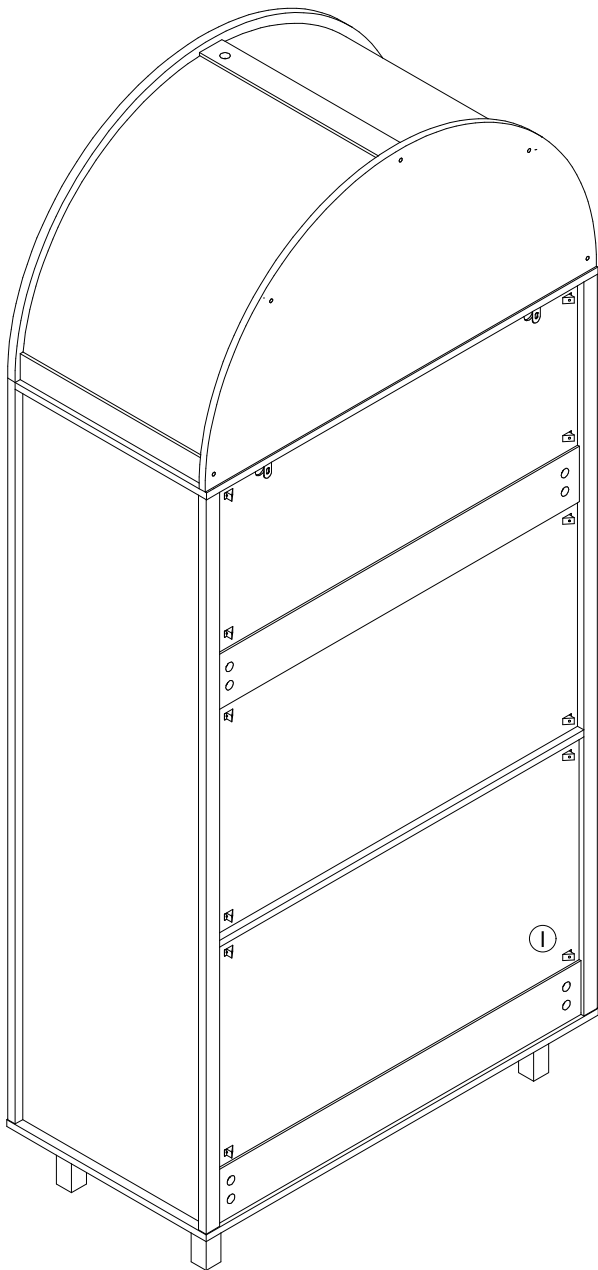




I	X12
	
Ø3*16mm	

Step19

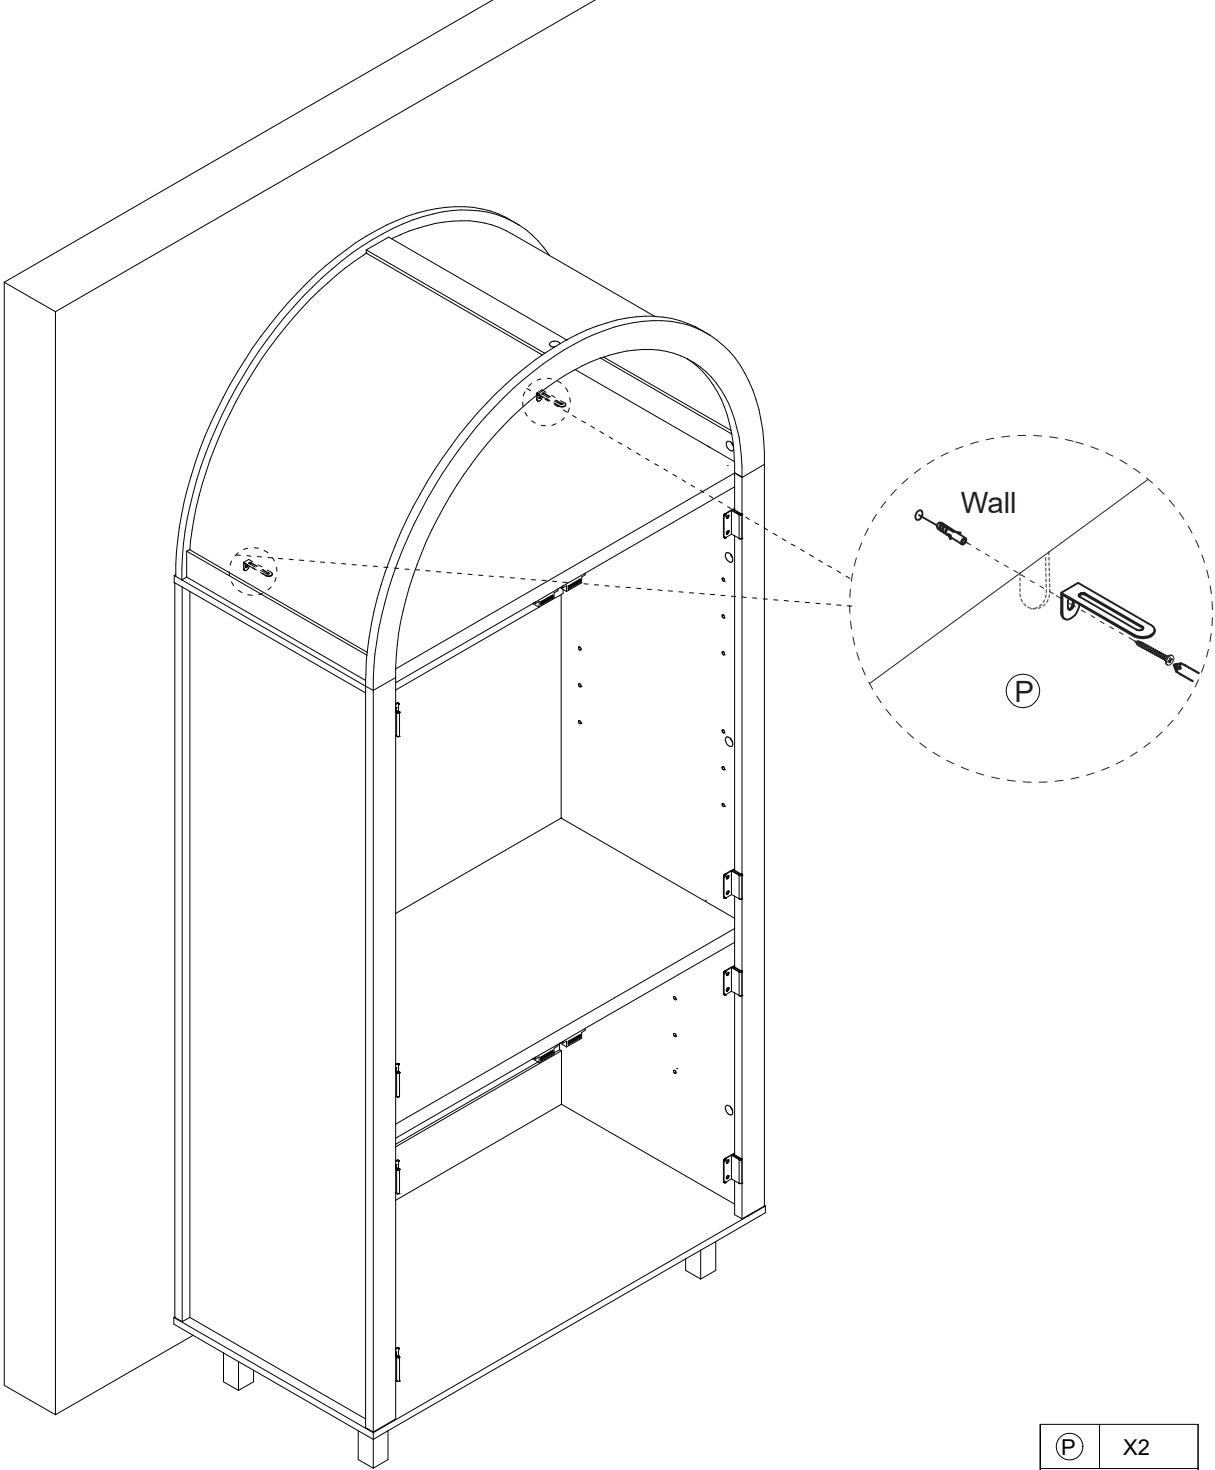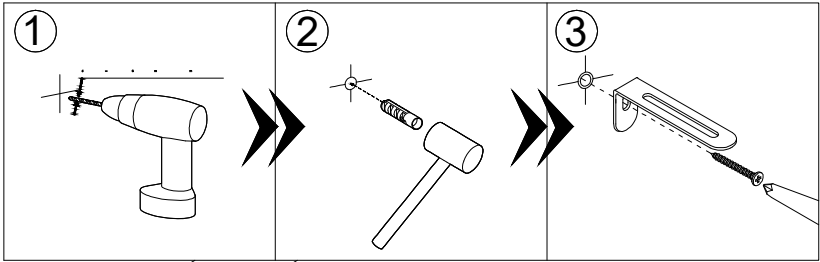



(P)	X2
	
Ø6*30&Ø4*35mm	

Step20

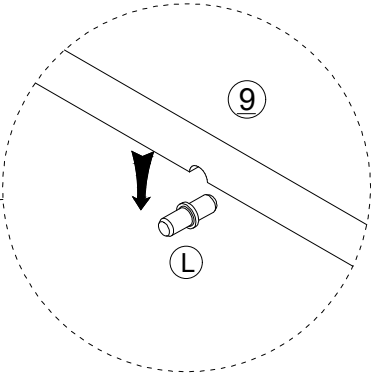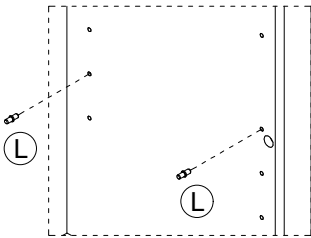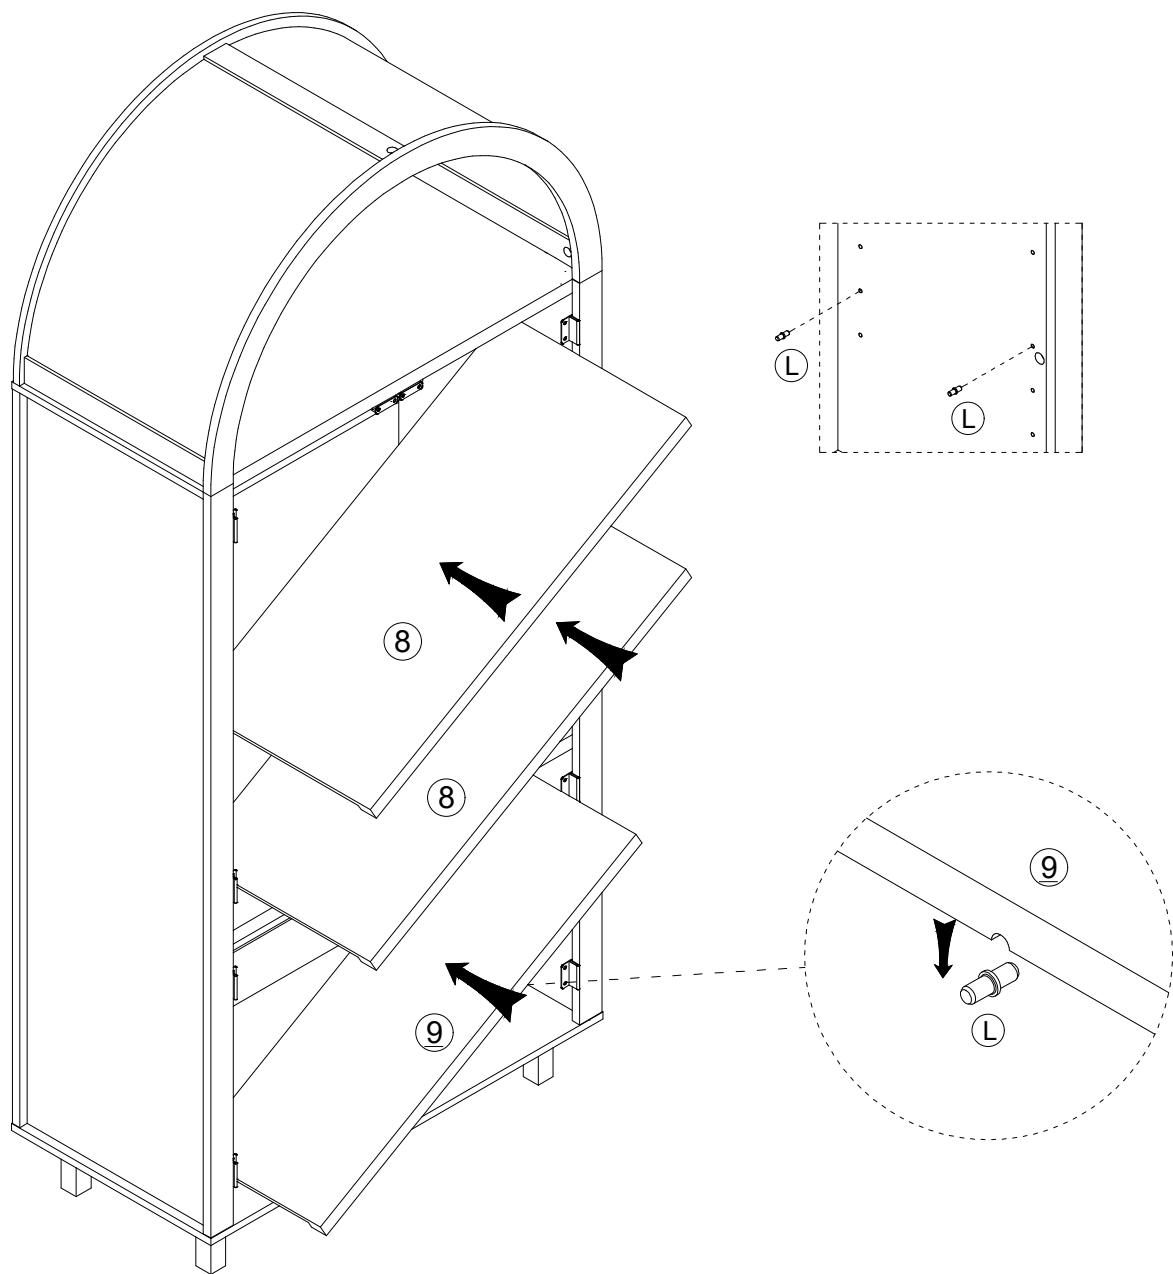


(L)	X12

Step21

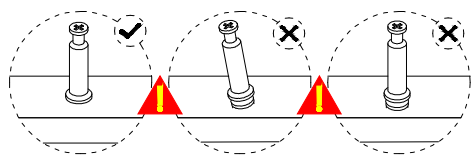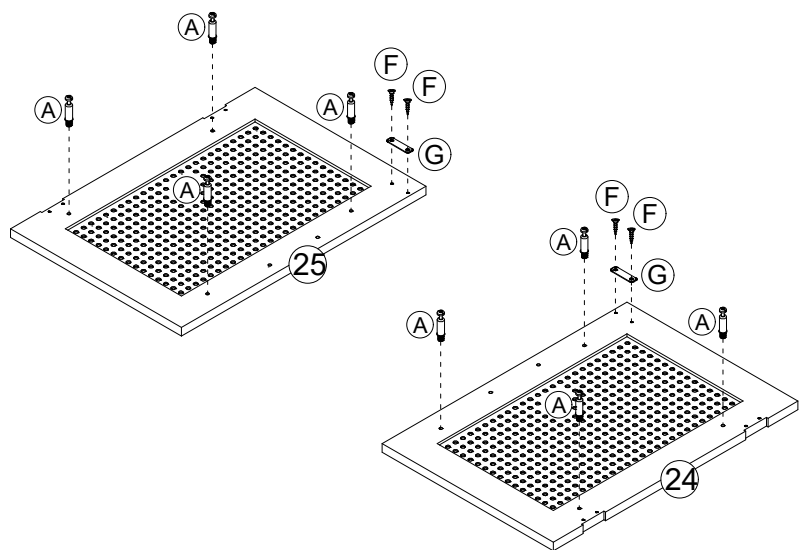


G	X2	F	X4	A	X8
					
		Ø3.5*12mm		Ø6*35mm	

Step22

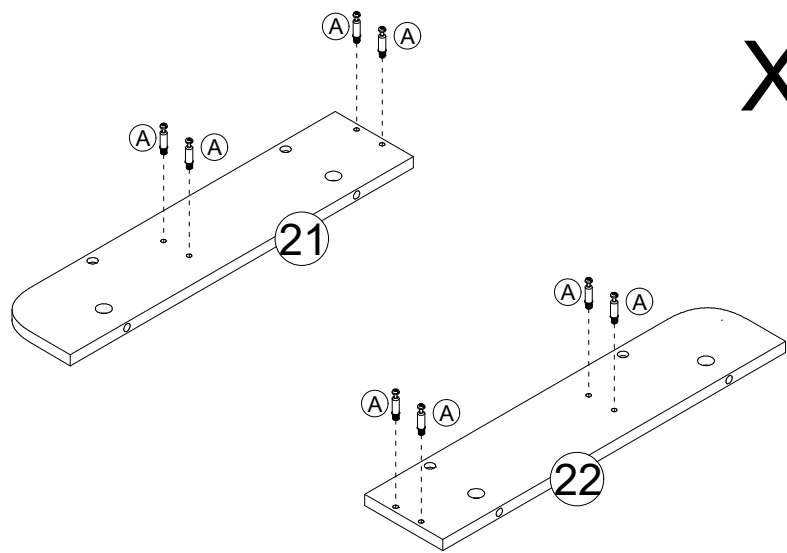


X2

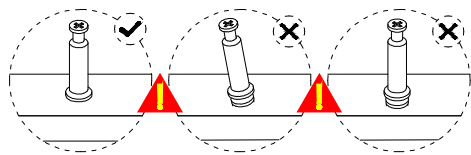


A	X16
	
Ø6*35mm	

Step23



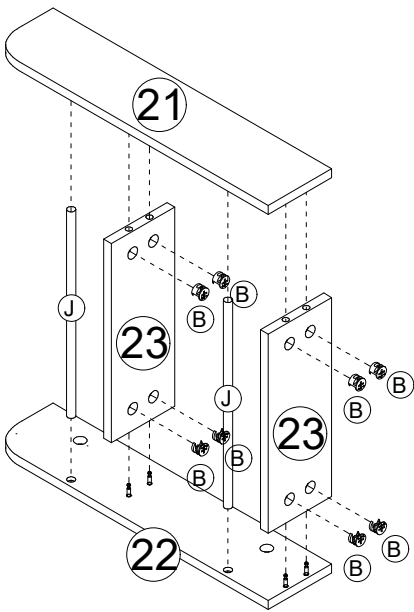


X2

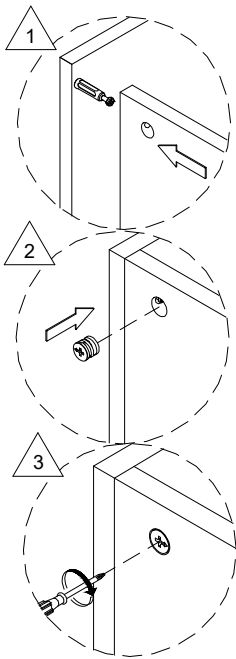


J	X4	B	X16
			
		Ø15*9.5mm	

Step24

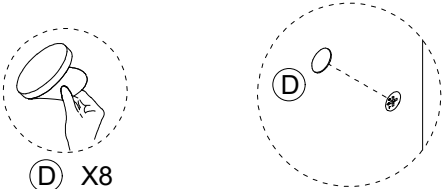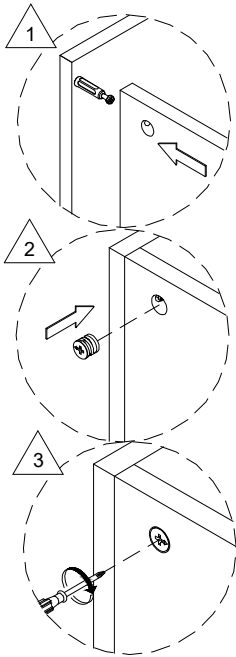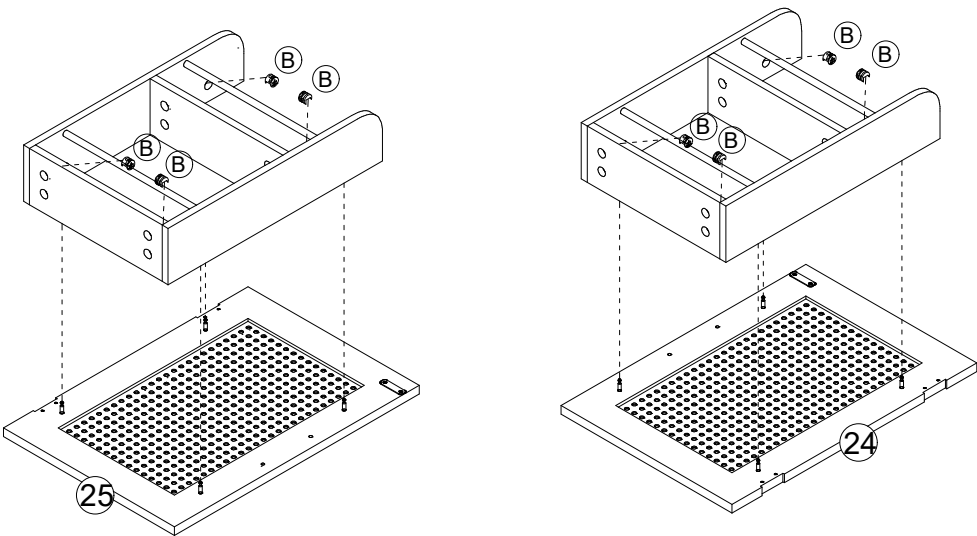


D	X8	B	X8
			
Plug the hole			
Ø20mm		Ø15*9.5mm	

Step25

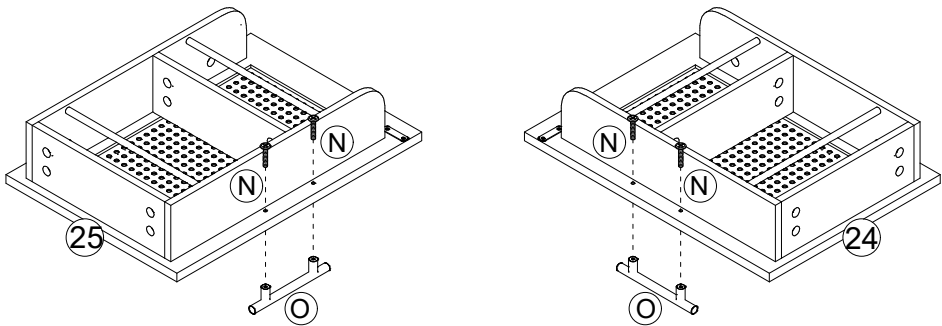


⊙	X2	N	X4
		M4*18mm	

Step26

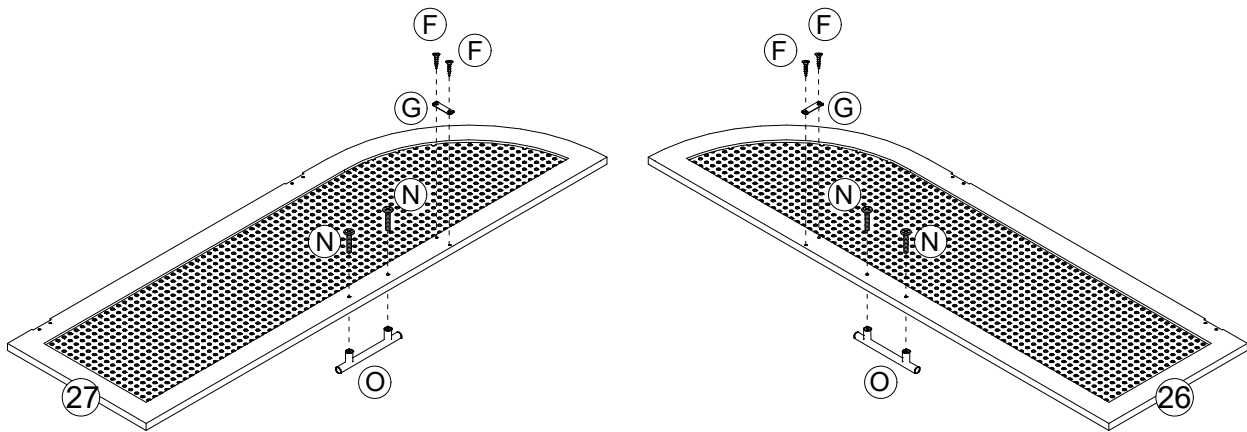

⊙	X2	N	X4	G	X2	F	X4
		M4*18mm				Ø3.5*12mm	

Step27

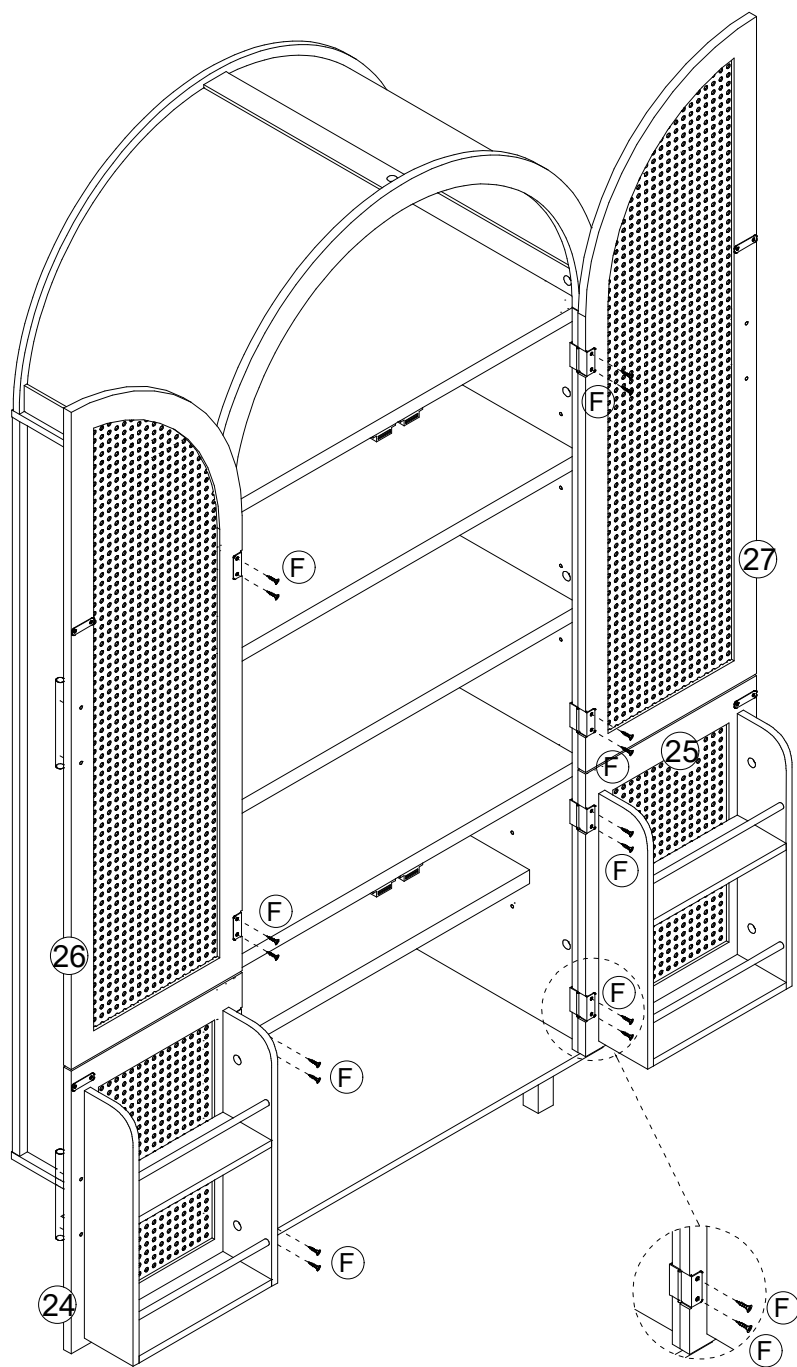

(F)	X16
	
Ø3.5*12mm	

COMPLETE

