

Instruction Manual

Please save this manual for future reference.


Brown MDF Wood Pillar Drum Side Table

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality





PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

Hardware:

Ⓐ x8	Ⓑ x2	Ⓒ x20+3	Ⓓ x12+2	Ⓔ x2
 4x25mm	 6x30mm	 4x35mm		 6x20mm


Panels:

① x1	② x1	③ x1	④ x4	⑤ x1
				




Instruction Manual

Please save this manual for future reference.

Brown MDF Wood Pillar Drum Side Table

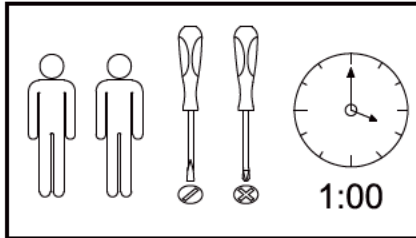

Tools required for assembly: Philips screwdriver and Flathead Screwdriver (if using power tools, use with care)

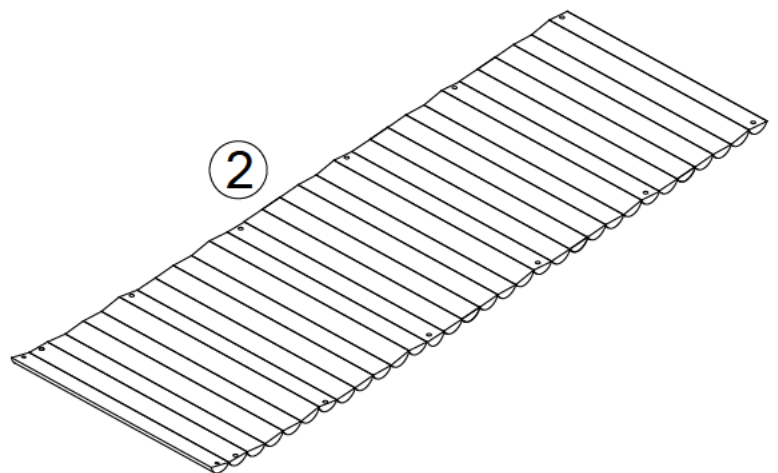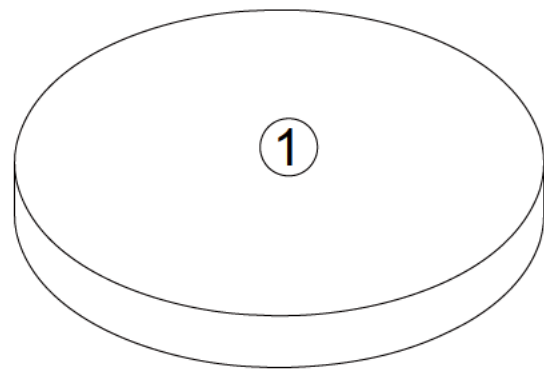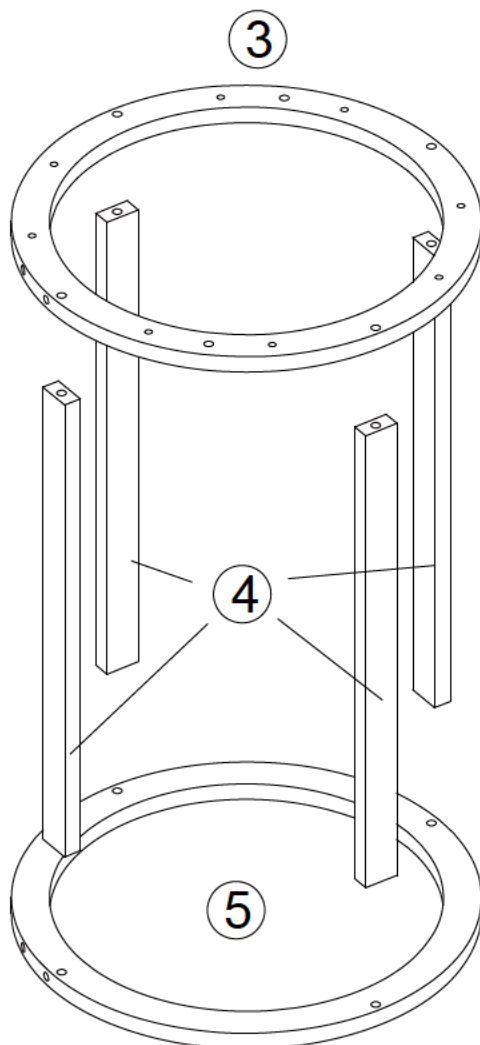


Instruction Manual

Please save this manual for future reference.

Brown MDF Wood Pillar Drum Side Table

Step 1: Check the position mark on the board. Then align mark and all screw holes on 3&5.


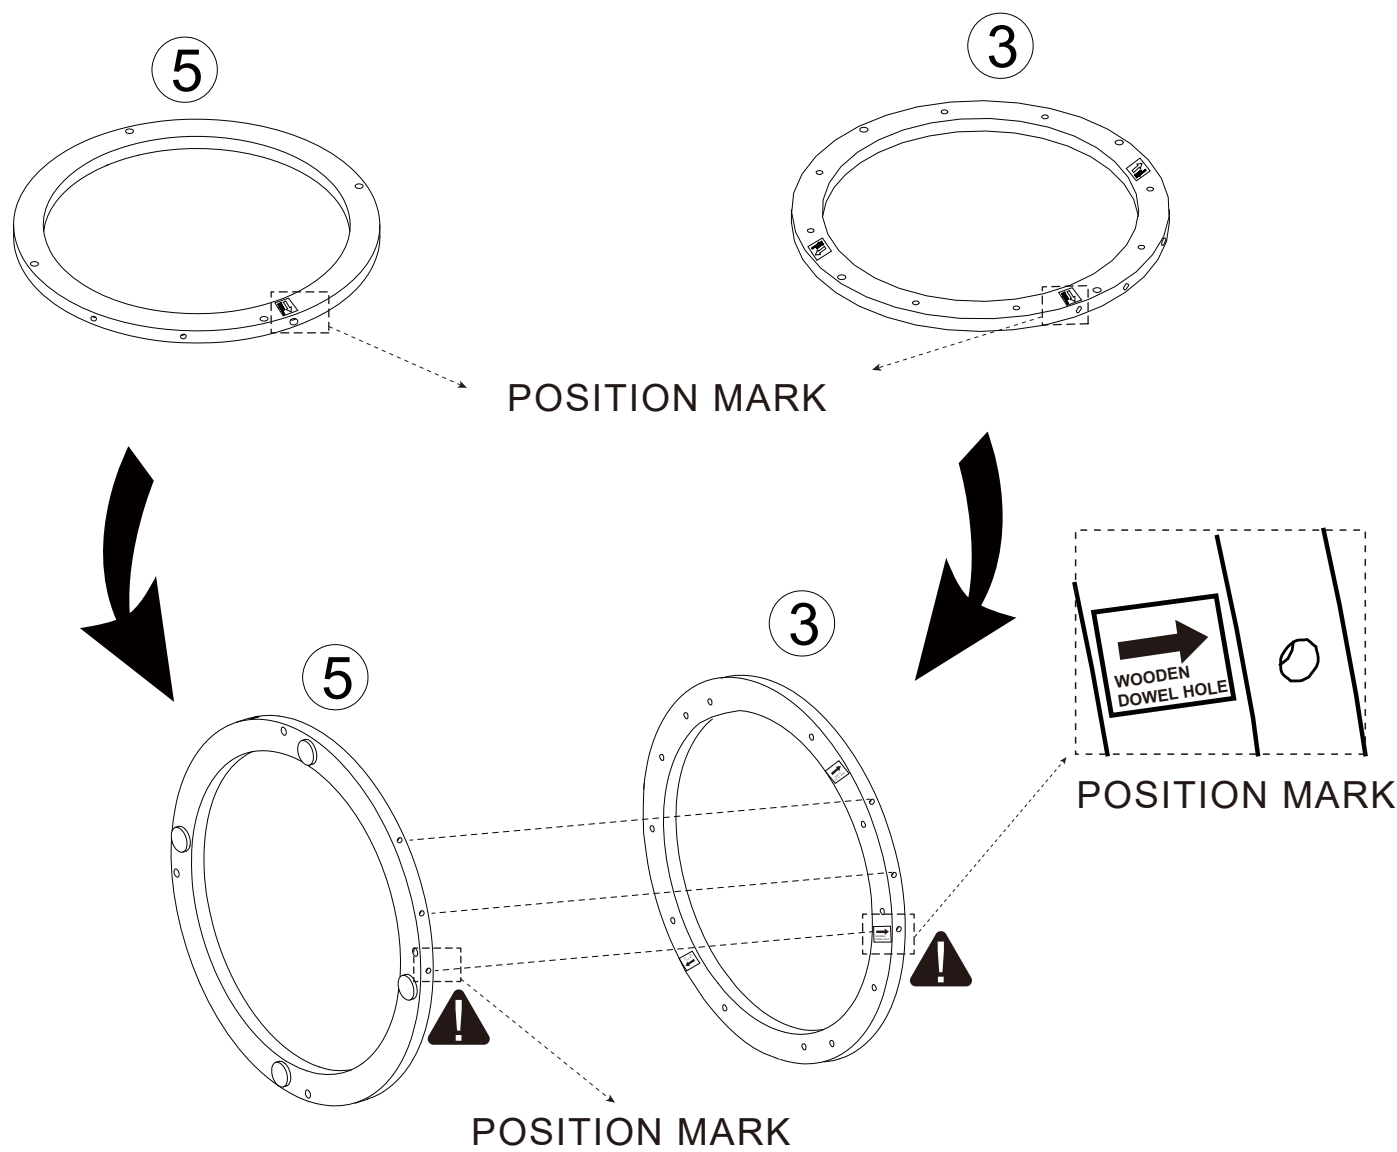


Instruction Manual

Please save this manual for future reference.

Brown MDF Wood Pillar Drum Side Table

Step 2: Firstly, assemble part 5 and 4 by screw C, then assemble part 3 and 4 by screw C, need to ensure the position mark is right, otherwise will influence the assemble of part 2.

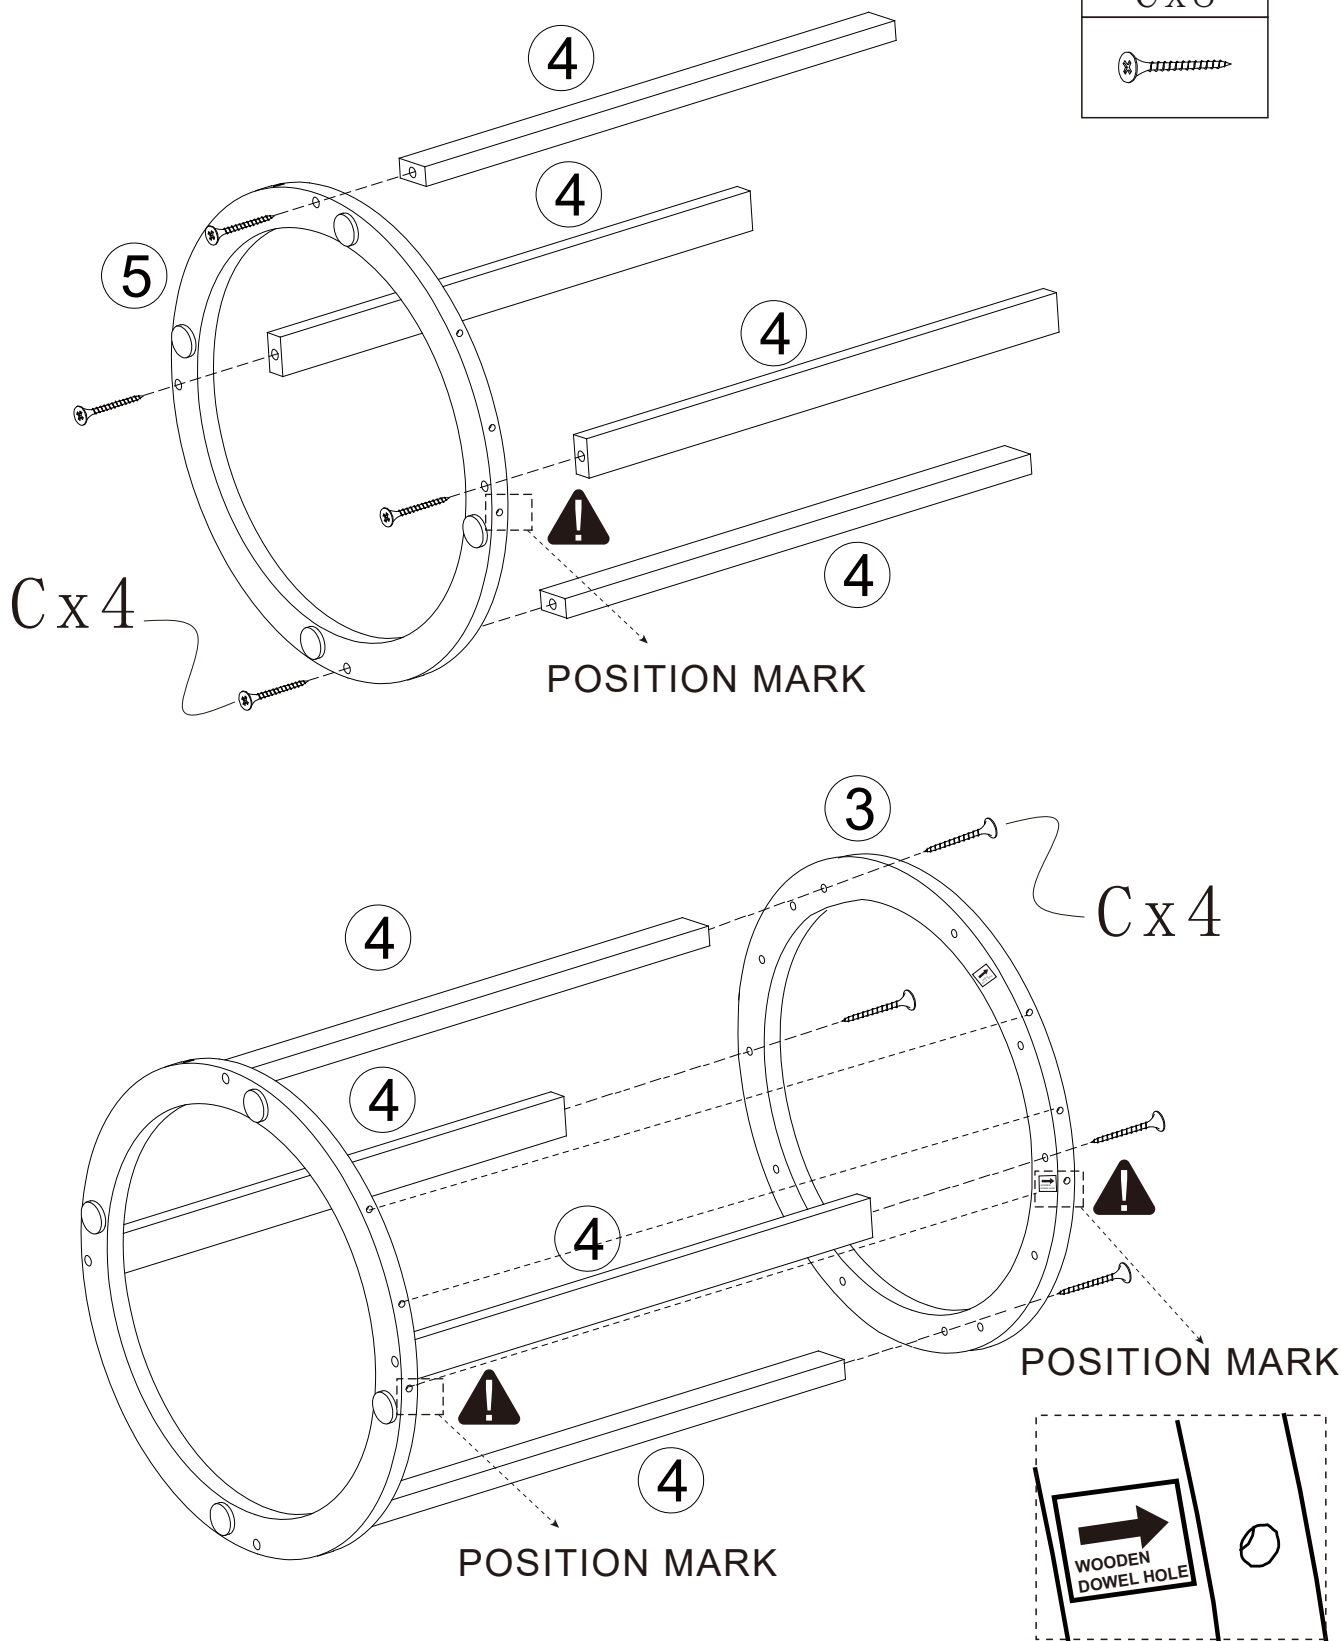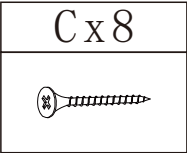


Instruction Manual

Please save this manual for future reference.

Brown MDF Wood Pillar Drum Side Table

Step 3: Insert B into 2.

B x 2


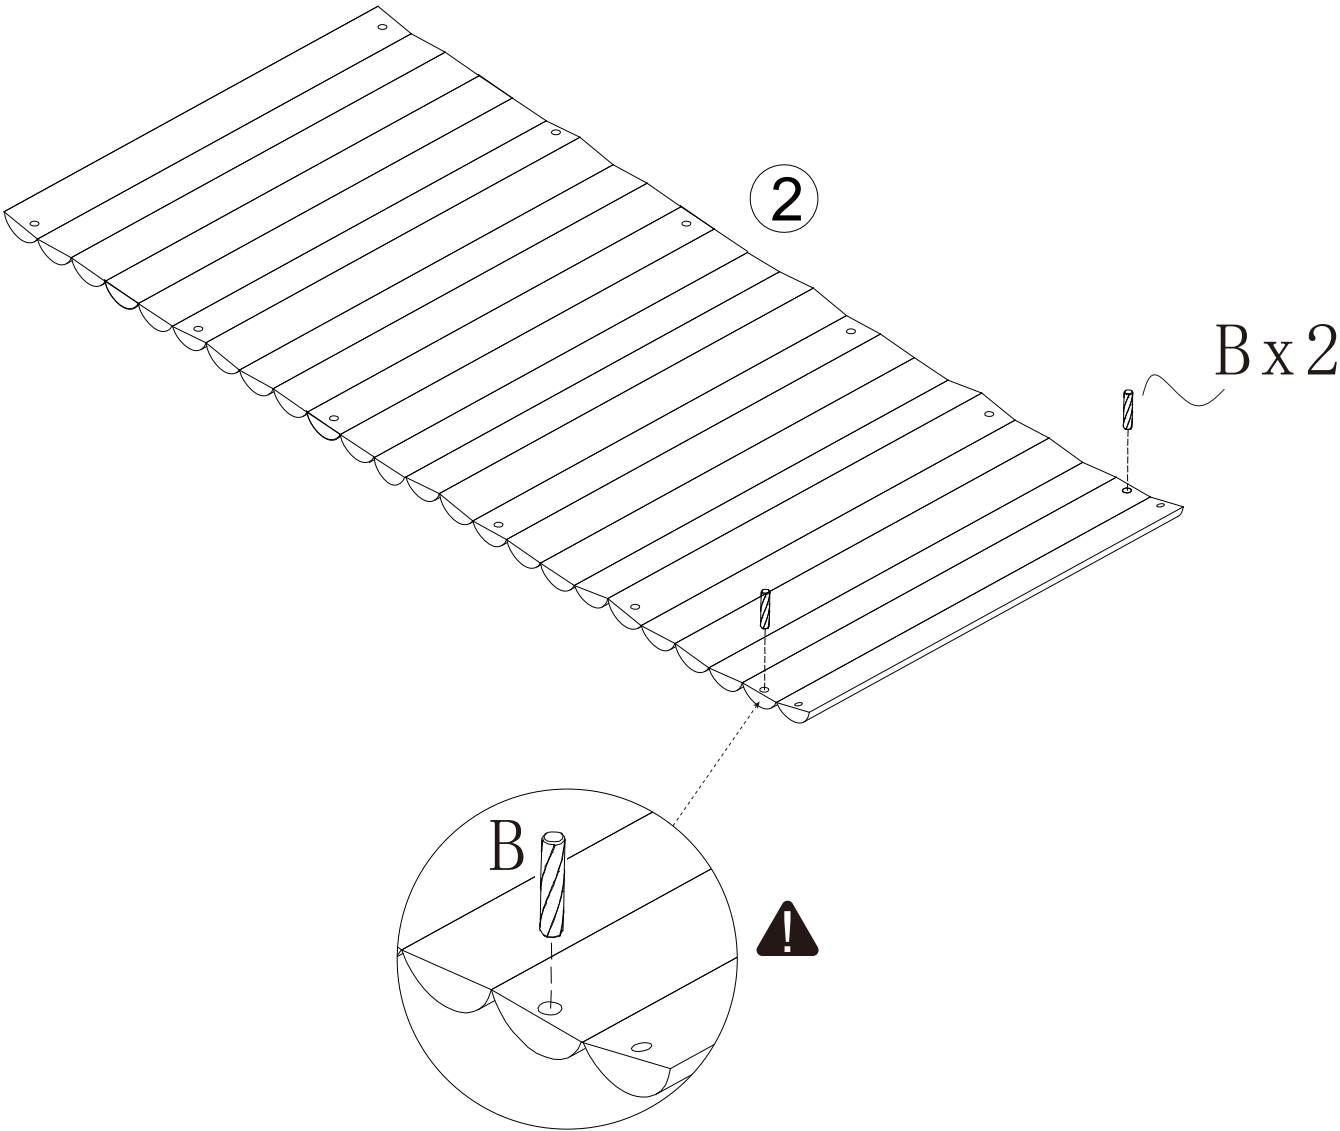
Instruction Manual

Please save this manual for future reference.

Brown MDF Wood Pillar Drum Side Table

Step 4: Make sure the holes in the inner and outer are aligned. And then C screw are tightly locked in sequence.

Cx12

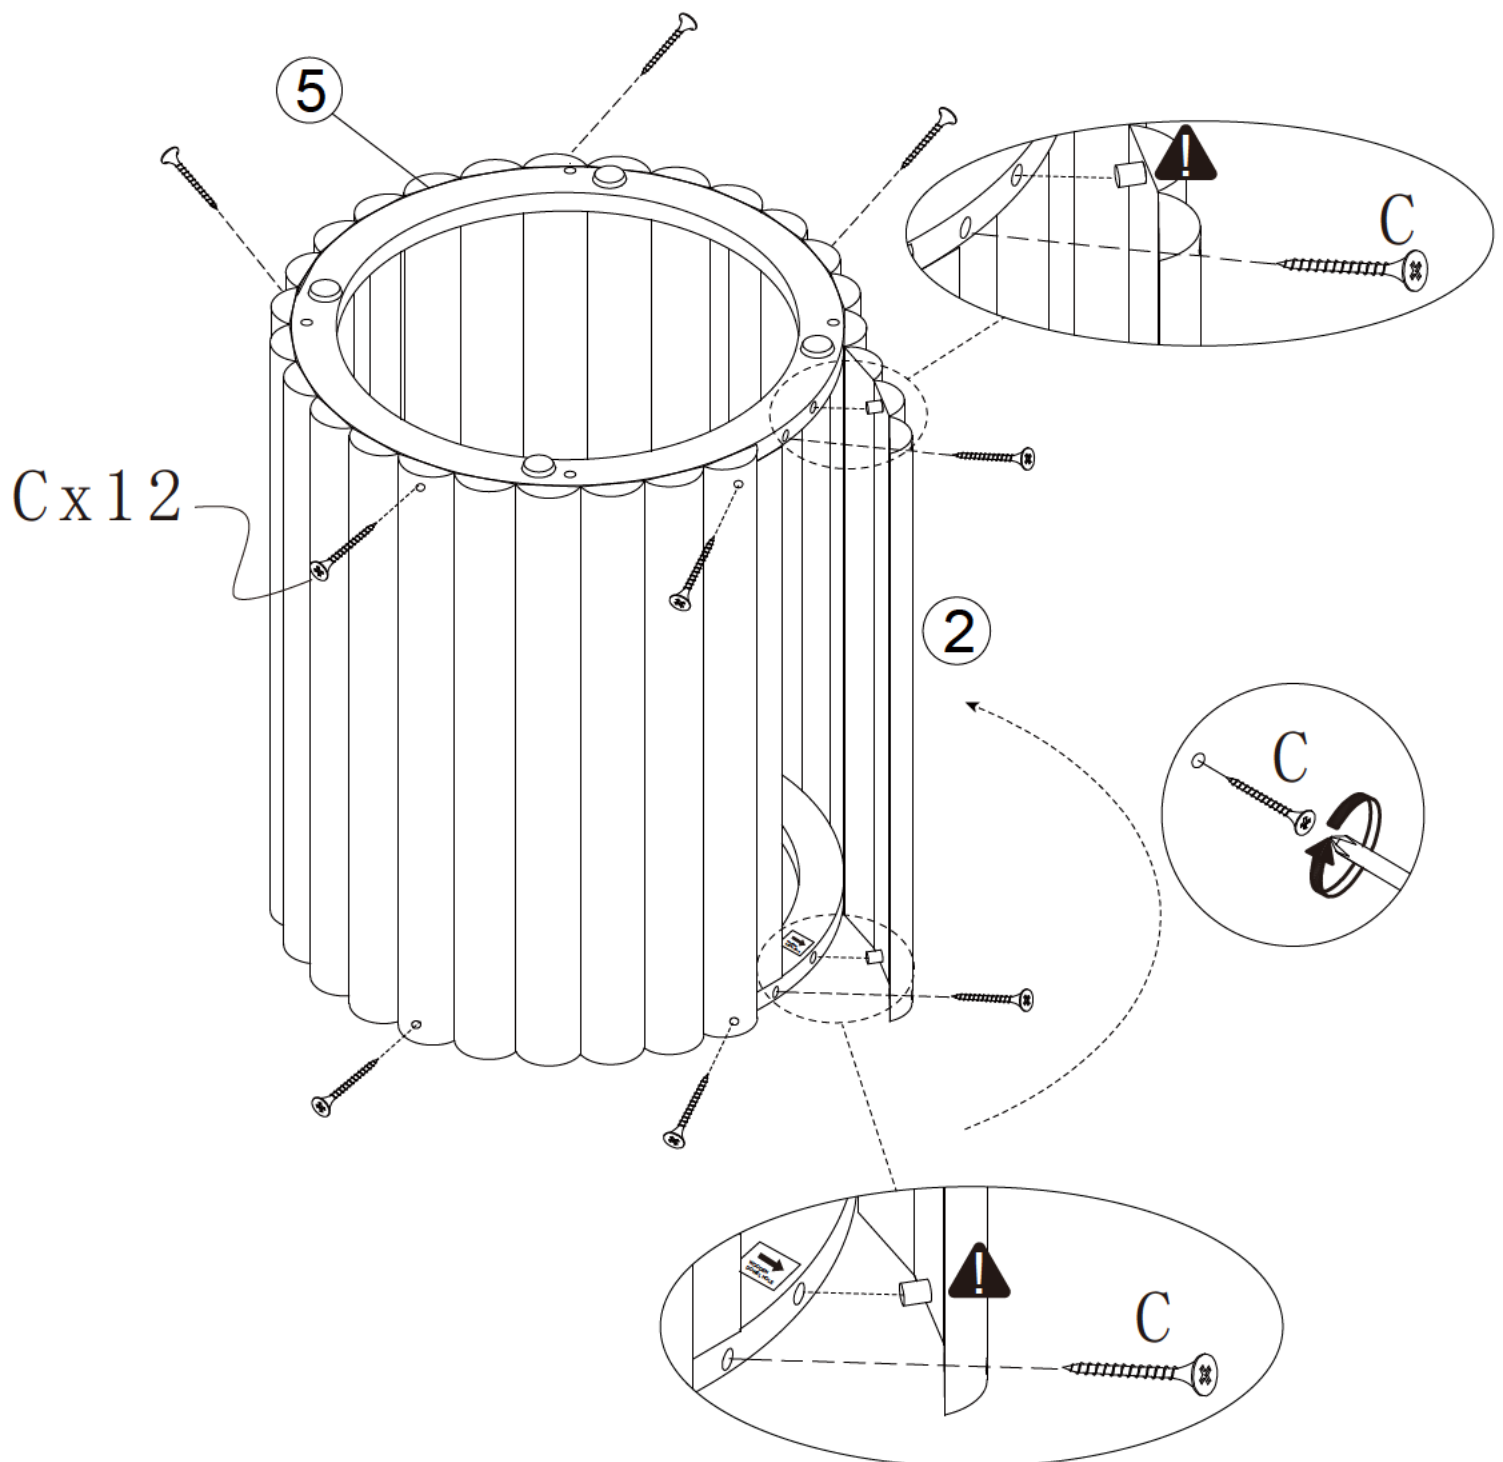


Instruction Manual

Please save this manual for future reference.

Brown MDF Wood Pillar Drum Side Table

Step 5: Check the position mark on the board. Then align mark and wooden dowel on 1&3.

Ex 2

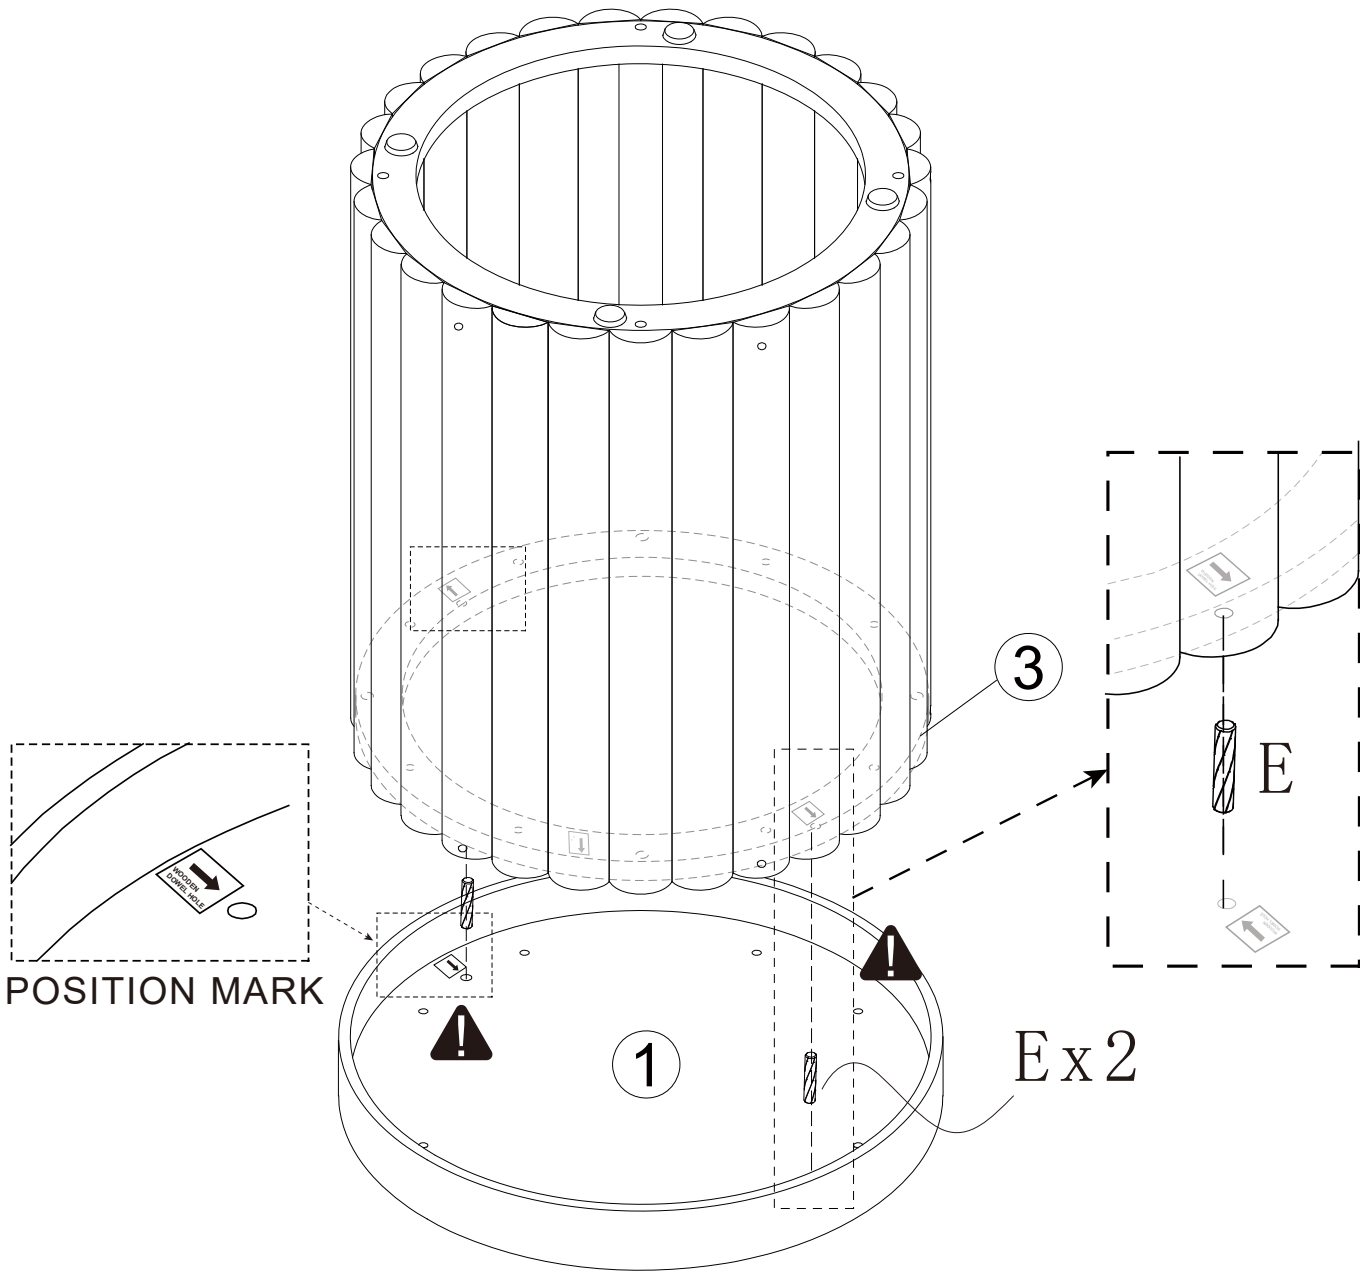



Instruction Manual

Please save this manual for future reference.

Brown MDF Wood Pillar Drum Side Table

Step 6: Please lock A screw at 80% before all the holes aligned, then tighten all screws at 100%.

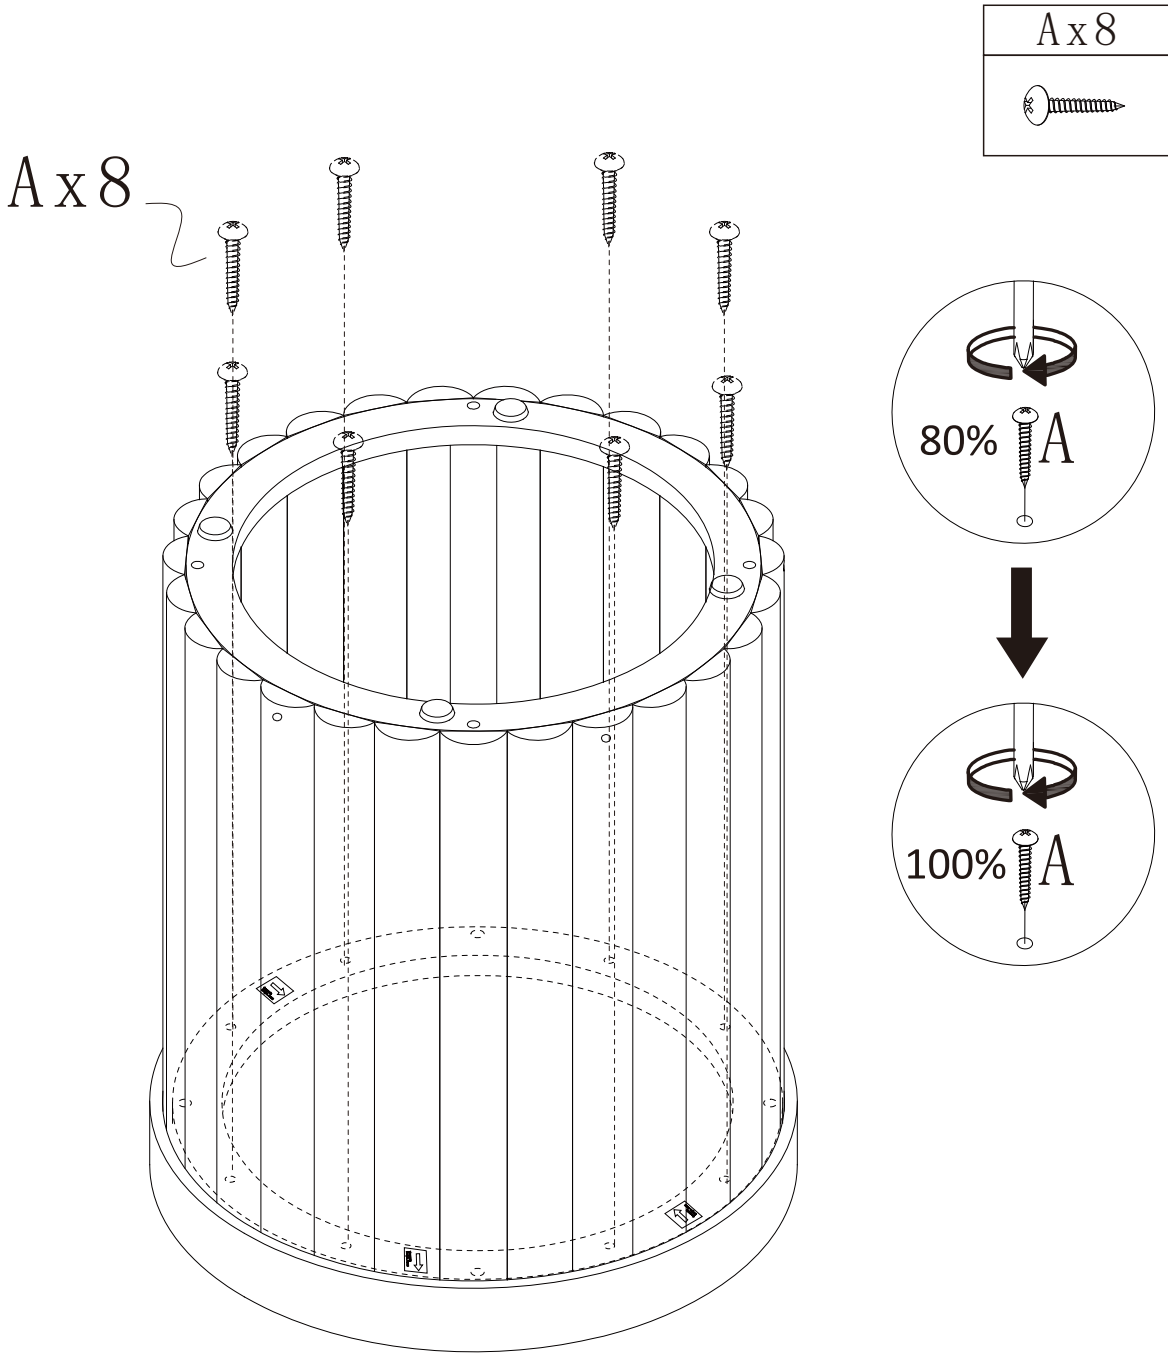

Instruction Manual

Please save this manual for future reference.

Brown MDF Wood Pillar Drum Side Table

Step 7: Attach D to the screw surface.

