


ASSEMBLY INSTRUCTIONS

10FT X 20FT CARPORT

ITEM NO.: CPX1020

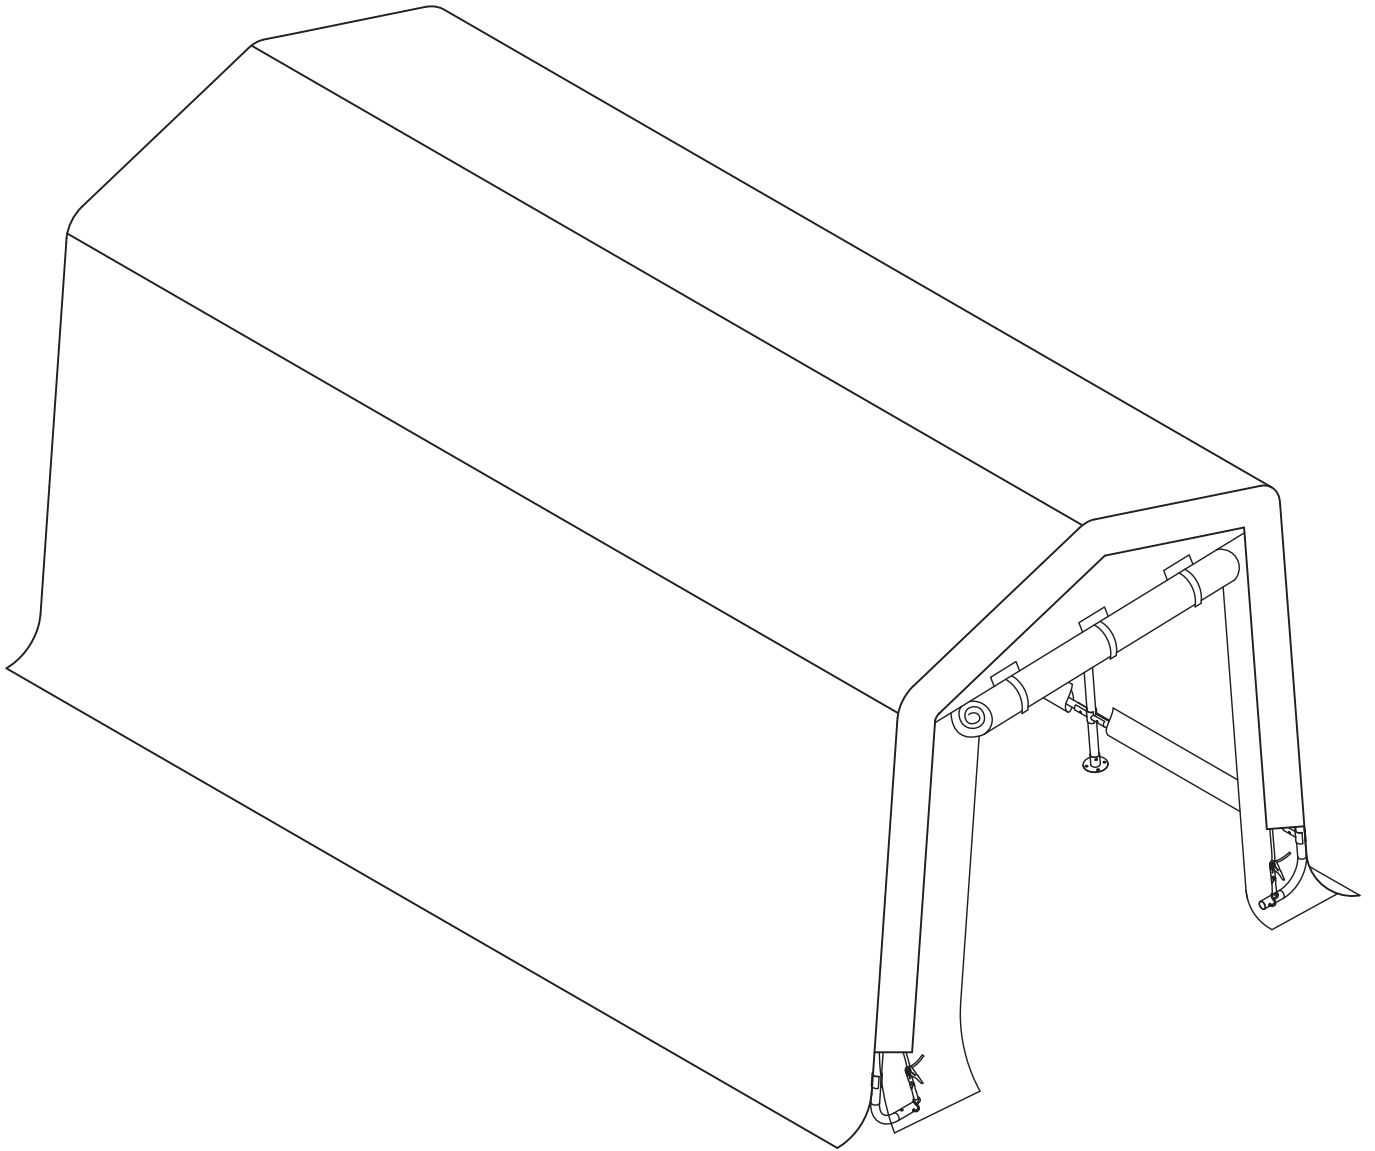

Before You Start

Please read all instruction carefully.

Retain instructions for future reference.

Separate and count all parts and Hardware.

Read through each step carefully and follow the proper order.

Keep all small parts and packaging materials for this product


Customer Service E-mail: aftersales.group.sam@gmail.com

Important Safety Instructions



- *Keep all flame and heat sources away from this canopy fabric.
- *Please check with your local governing authority / local municipal before purchasing this item, some municipalities have restrictions and requirements.
- *This canopy should not be used during heavy wind, ice, storm, or snow conditions.
- *The accumulation of snow and ice on canopy roof may pose a safety concern. Under severe weather conditions, disassemble your canopy and store indoors. It is strongly recommended that the canopy remain secure to the ground at all times via the base plates and nylon straps supplied. Avoid placing the unit on soft ground and ground that is prone to flooding.
- *Keep all children and pets away from assembly area.
- *The Canopy should not be used by children under the age of 8 or people with mental disorders. Please do so under the supervision of the guardian if necessary, Please do not allow children to play as a toy with these parts.







All optional tools listed below are not included in this product.

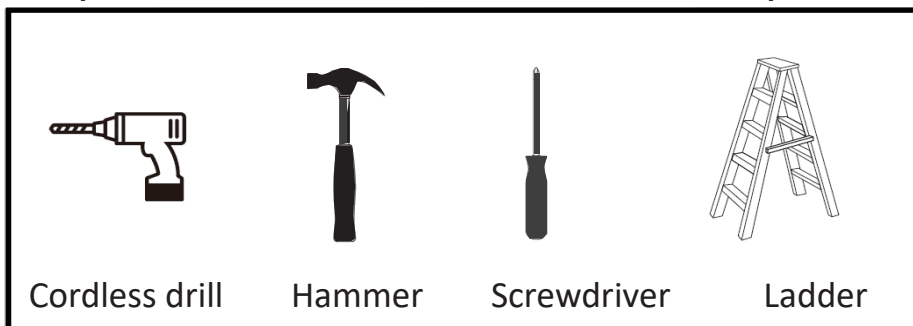

CARE AND MAINTENANCE

- *Our steel components for garden accessories and furniture are treated with rust inhibiting paint that protects it from rusting. However, due to the nature of steel, surface oxidation (rusting) will occur once these protective coatings are scratched. This is not a defect and thus not covered by the warranty.
- *To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, we recommend immediate touch-up with rust inhibiting paint.
- *Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and caused damaging stains which may be difficult to remove.
- *This can be prevented if the above-mentioned measures are taken to keep the product from oxidizing.
- *Use damp cloth to wipe off the stains as quickly as possible.


PARTS LIST

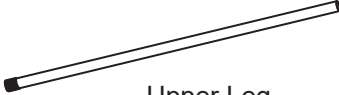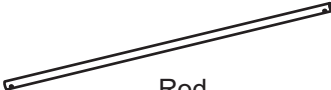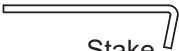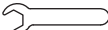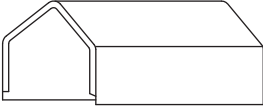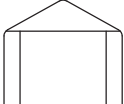LABEL	IMAGE	QTY	LABEL	IMAGE	QTY
A1	 Lower Leg	4	K1	 Connector	8
A2	 Upper Leg	4	K2	 Connector	12
B1	 Upper Leg	6	K3	 Joint Plate	10
B2	 Lower Leg	6	K4	 Plugs	6
C1	 Top Tube	10	AA	 Bolt M6×15mm	34+2
D2	 Top Tube	10	BB	 Bolt & Nut M6×45mm	40+2
E1	 Top Tube	5	CC	 Bolt & Nut M6×70mm	5
F2	 Rod	8	DD	 Elastic Band	32
G1	 Base Plate	6	EE	 Stake	16
H1	 Support Tube	4	FF	 Allen Key	1
I3	 Top Cross Tube	1	GG	 Wrench	1
I4	 Top Cross Tube	7	HH	 Fastener	4
J3	 Top Cross Tube	2	II	 Tarp	1
J4	 Top Cross Tube	2	JJ	 Front Tarp	2

ASSEMBLY STEPS:


1

Organize all the parts and place them flat on the ground.

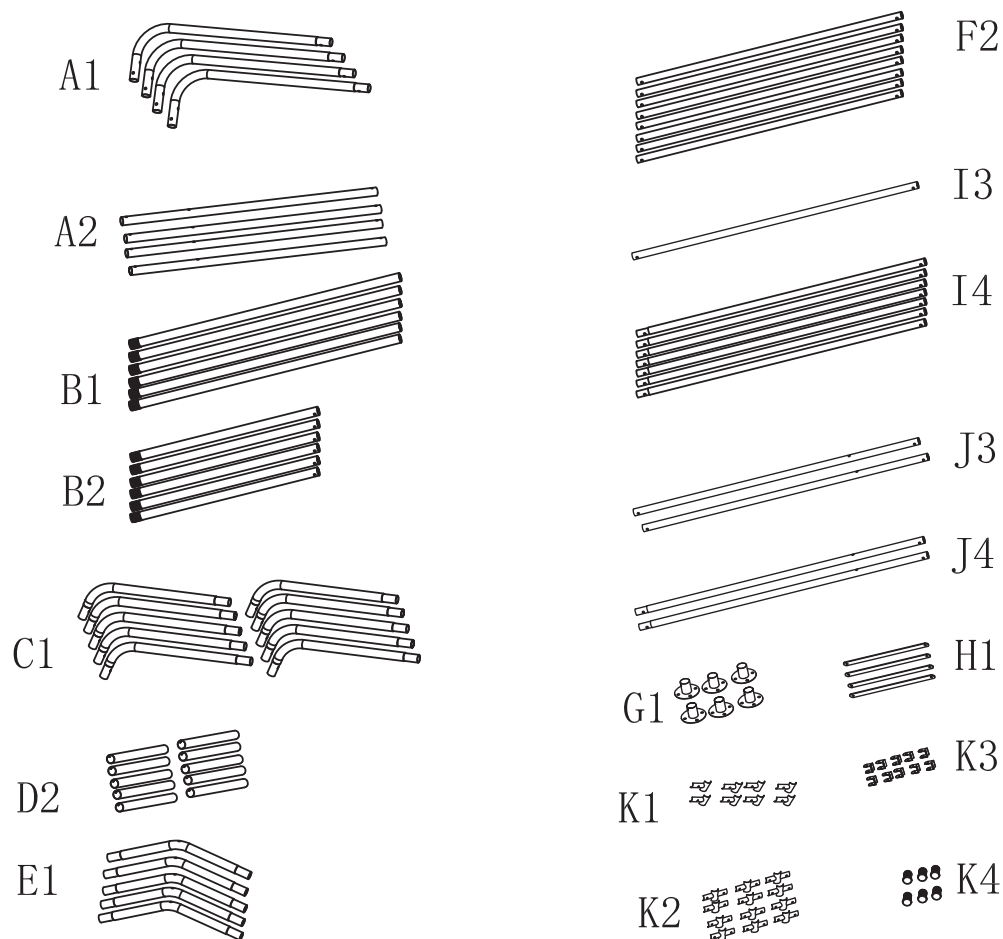


2

Connect **Top Tube (C1/D2/E1)**, fix by using **Bolt (AA)**.

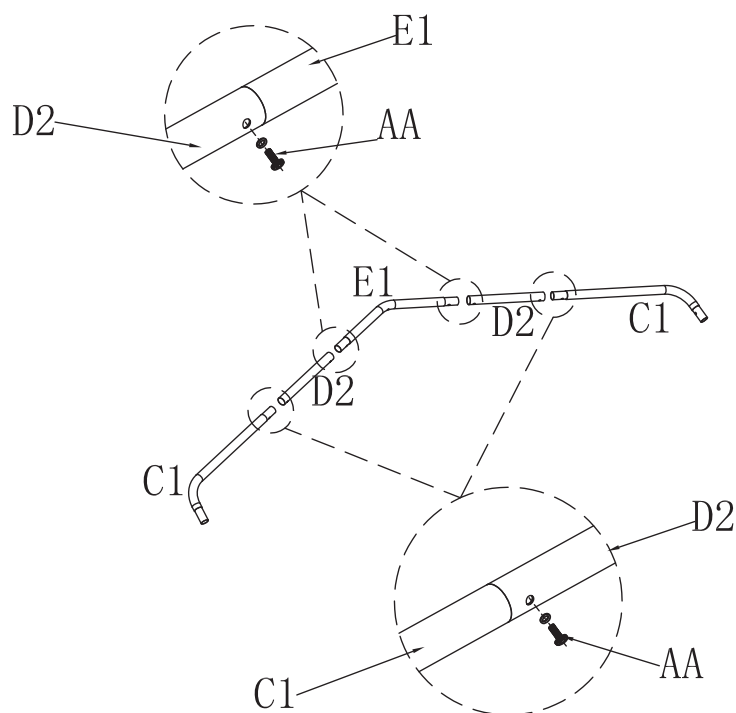


*5

- ③ Assembly **Upper Leg (A2)** / **Joint Plate (K3)** with assembled Top Tube, fix by using **Bolt (AA)**.

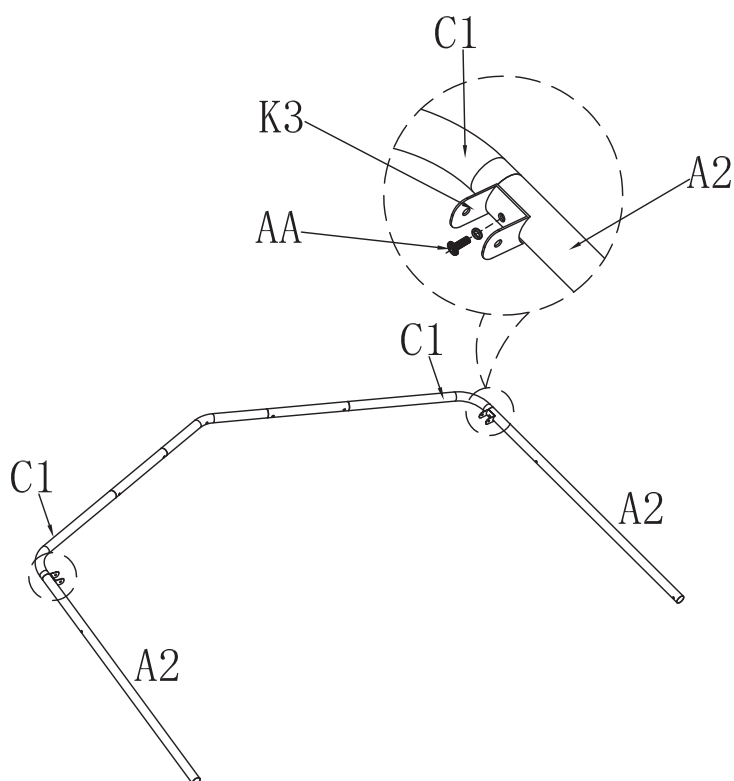

*2


- ④ Assembly **Upper Leg (B1)** / **Joint Plate (K3)** with assembled Top Tube, fix by using **Bolt (AA)**.

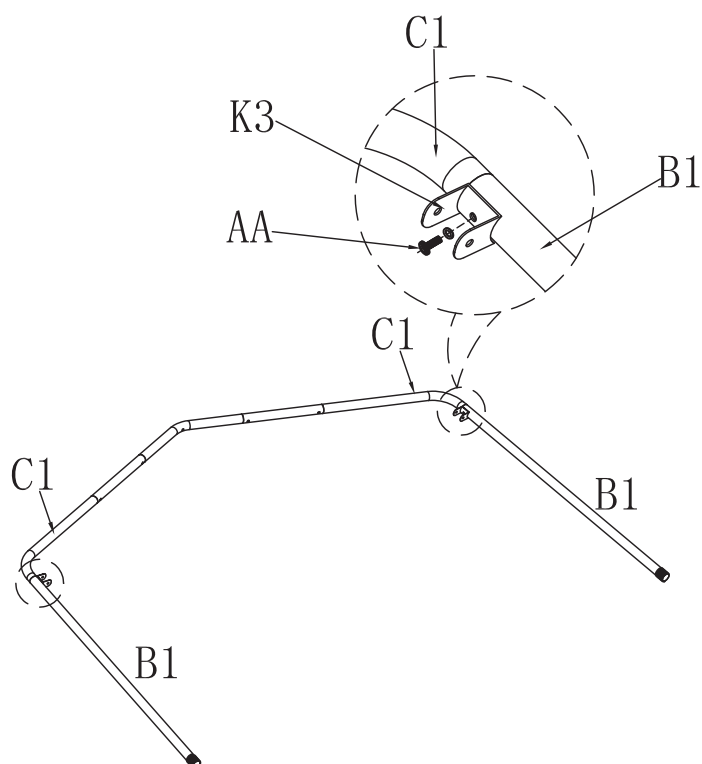

*3


5

Pre-Assemble Top Cross Tube (I3)/(I4), then insert Plugs (K4) into end of Tube;
Pre-assemble Top Cross Tube (J3)/(I4)/(J4), then insert Plugs (K4) into end of Tube.

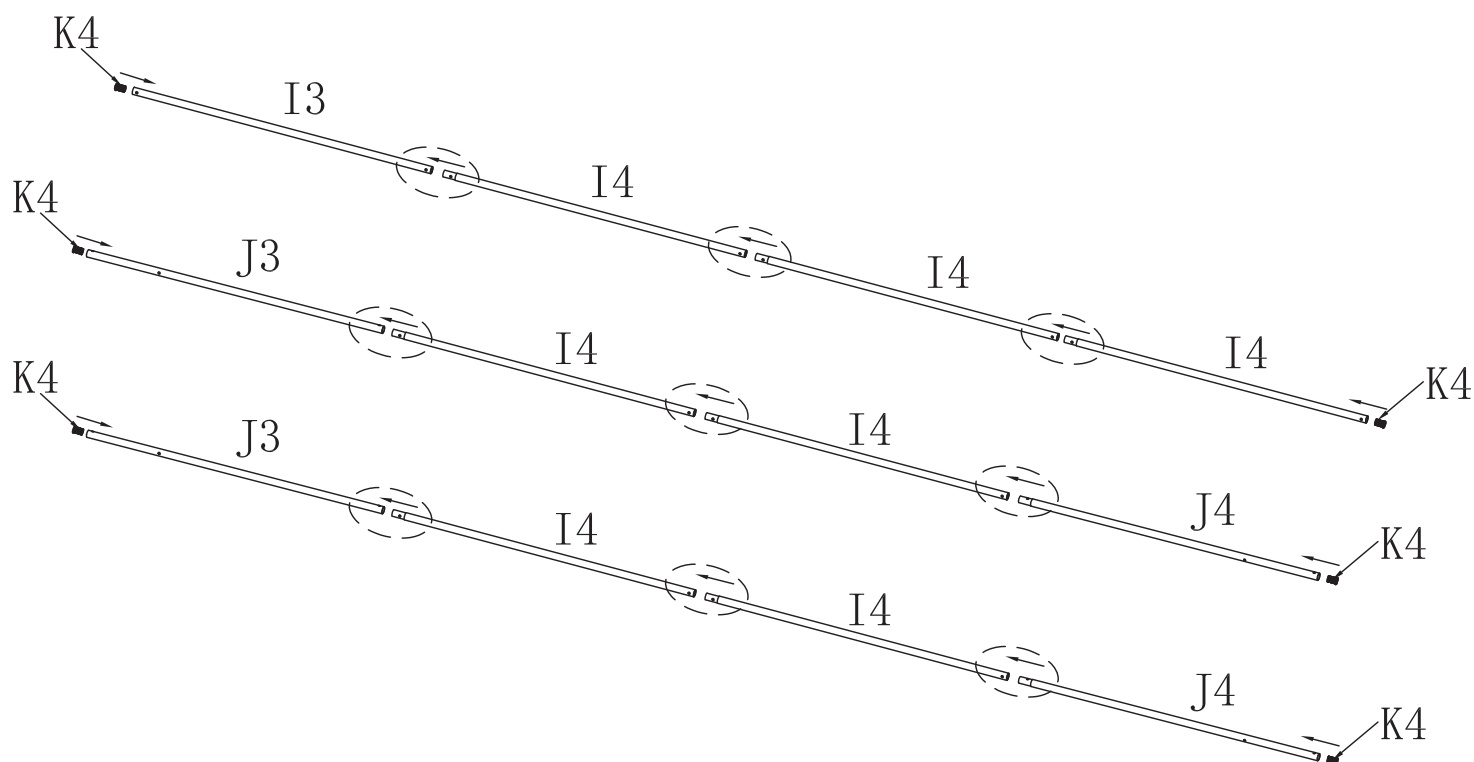


6


Connect Pre-assembled Top Tube (I3/I4) to assembled Top Tube(E1), fix by Bolt & Nut (CC).

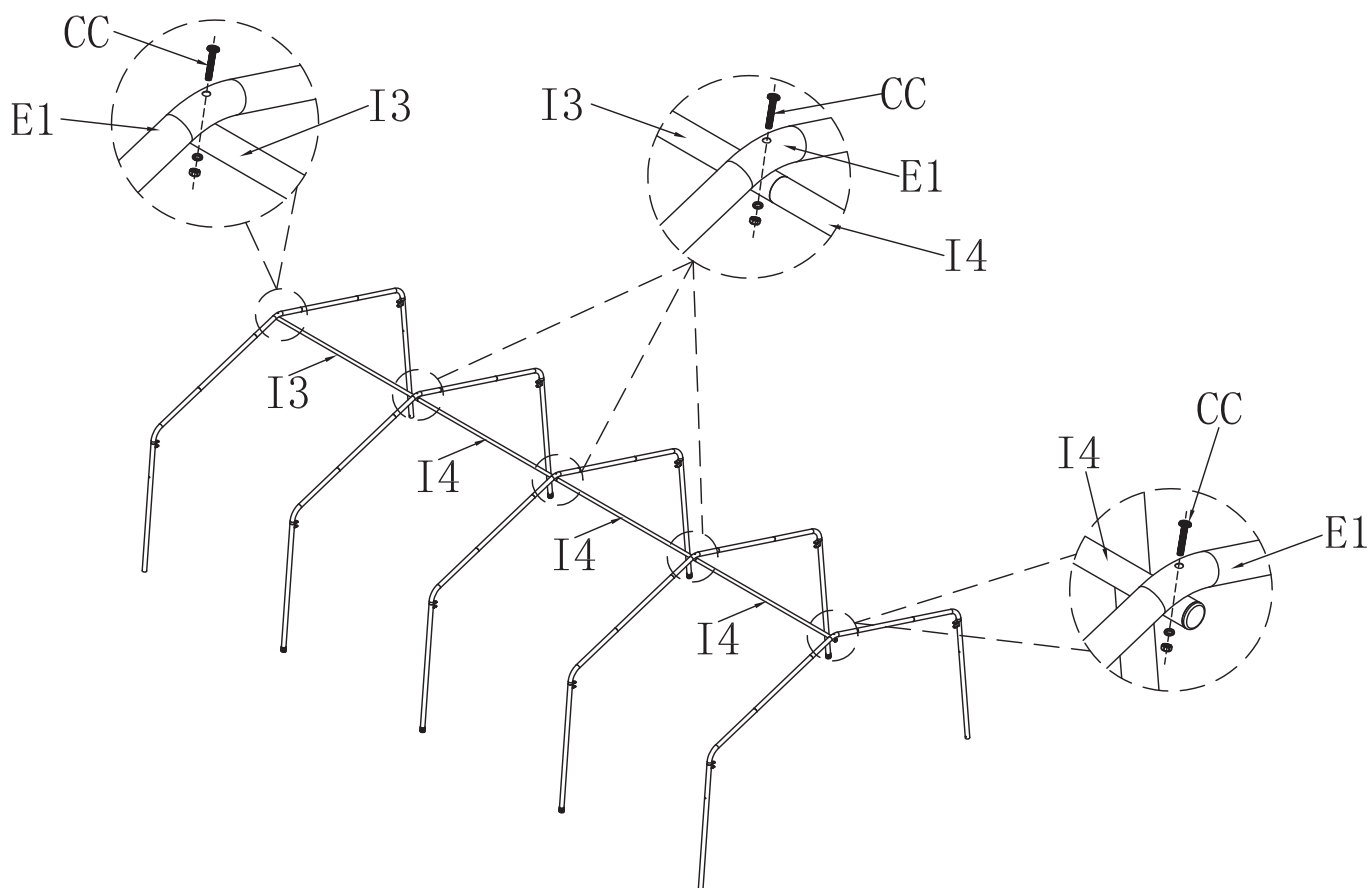

- 7** Attach **Support Tube (H1)** to **Upper Leg (A2)** and **Top Cross Tube (J3/J4)**, fix by using **Bolt & Nut (BB)**; Fix Pre-assembled **Top Cross Tube (J3/I4/J4)** to **Joint Plate (K3)**, by using **Bolt & Nut (BB)**.

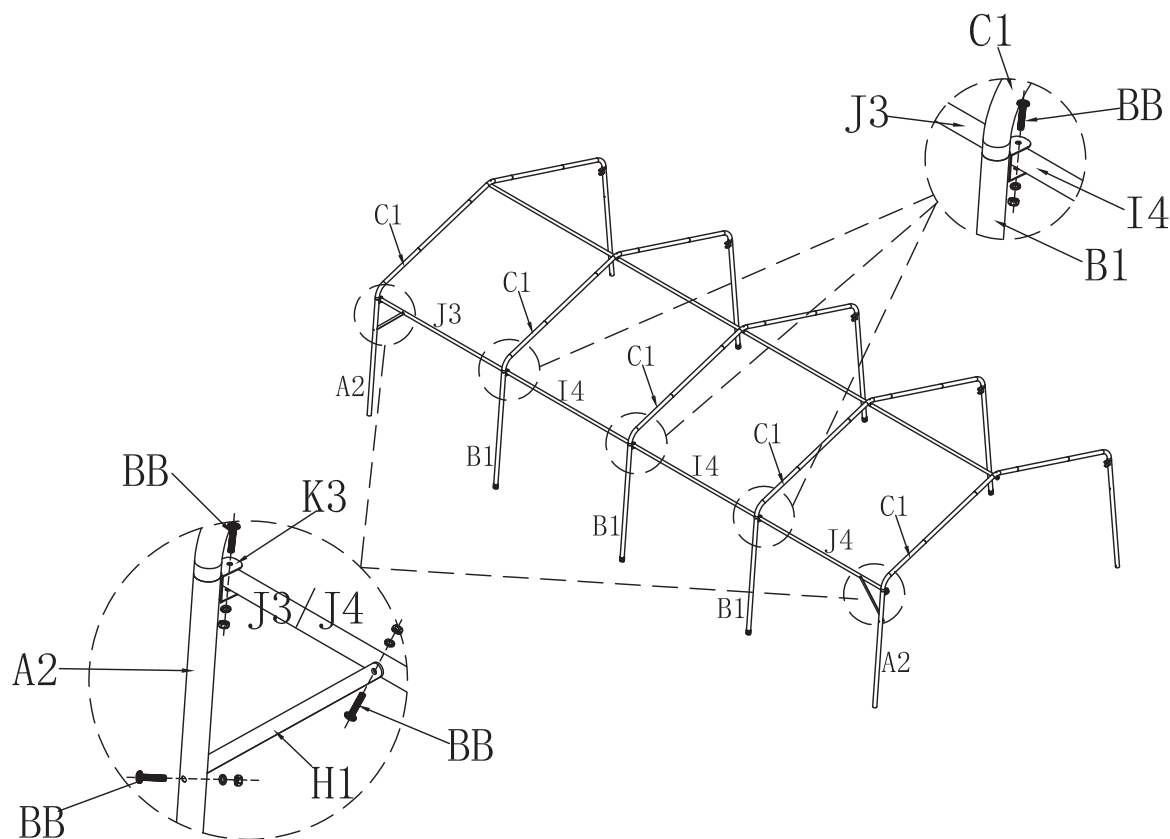


- 8** Attach **Support Tube (H1)** to **Upper Leg (A2)** and **Top Cross Tube (J3/J4)**, fix by using **Bolt & Nut (BB)**; Fix Pre-assembled **Top Cross Tube (J3/I4/J4)** to **Joint Plate (K3)**, by using **Bolt & Nut (BB)**.

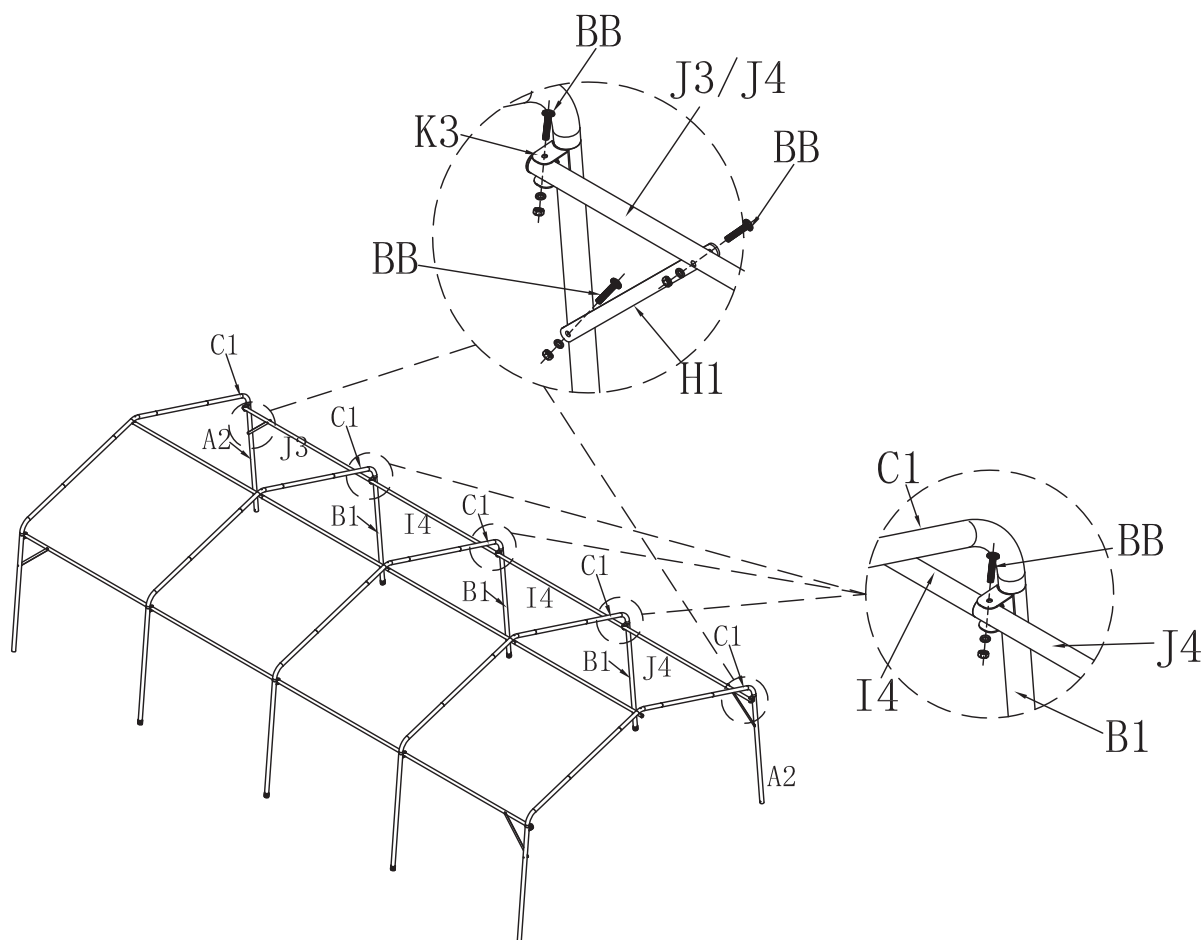

9


Attach the **Tarp (II)** to assembled Frame.

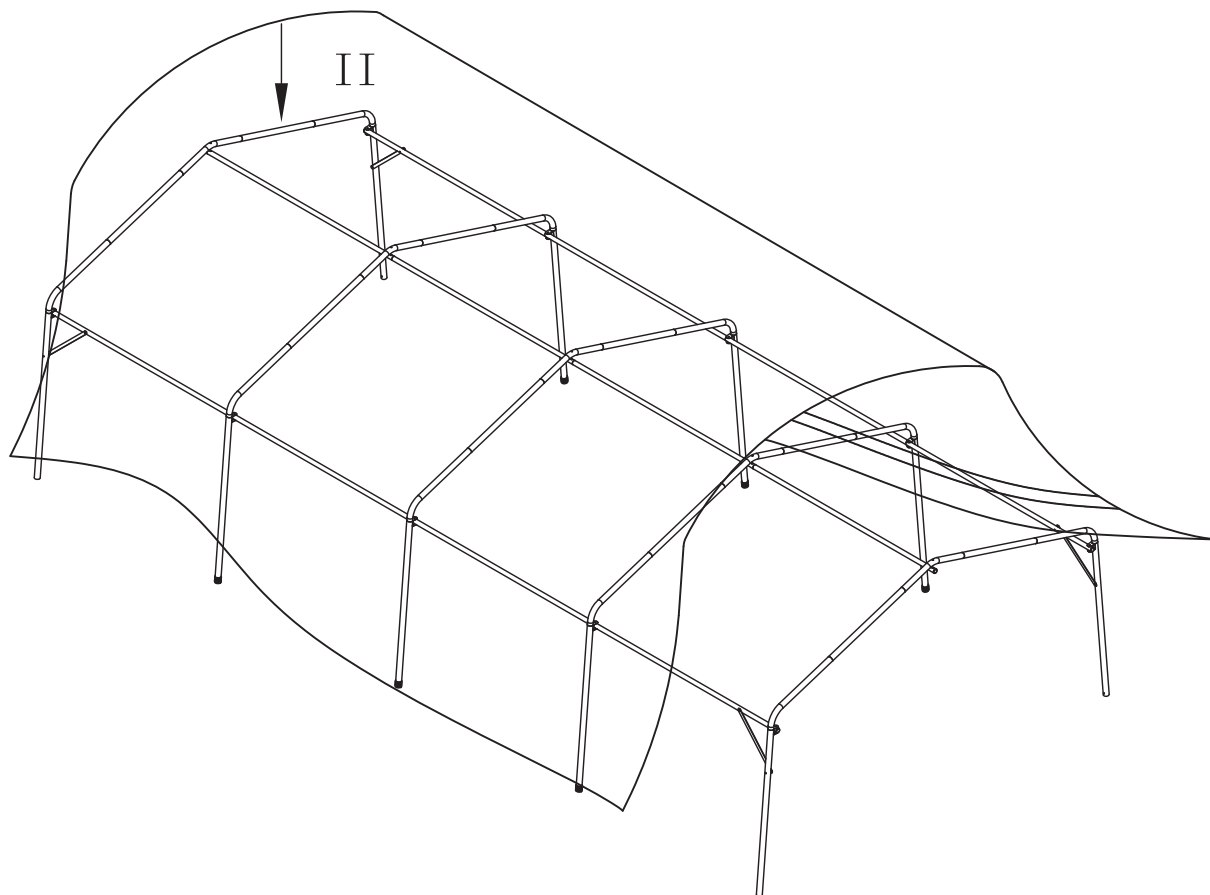

10


Pre-assemble **Lower Leg (B2)** with **Base Plate (G1)**, fix by using **Bolt & Nut (BB)**.

*6

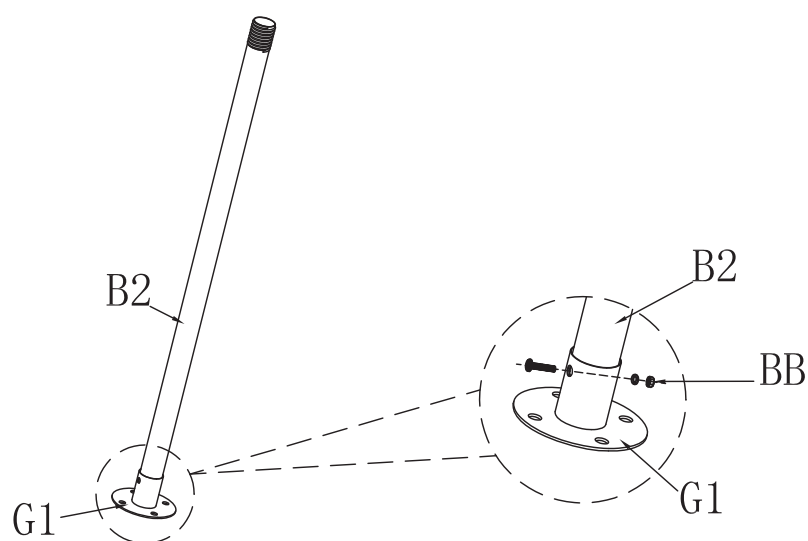


11

Insert **Lower Leg (A1)** into **Upper Leg (A2)**, fix by using **Bolt (AA)**; attach pre-assembled **Lower Leg (B2)** to **Upper Leg (B1)**.

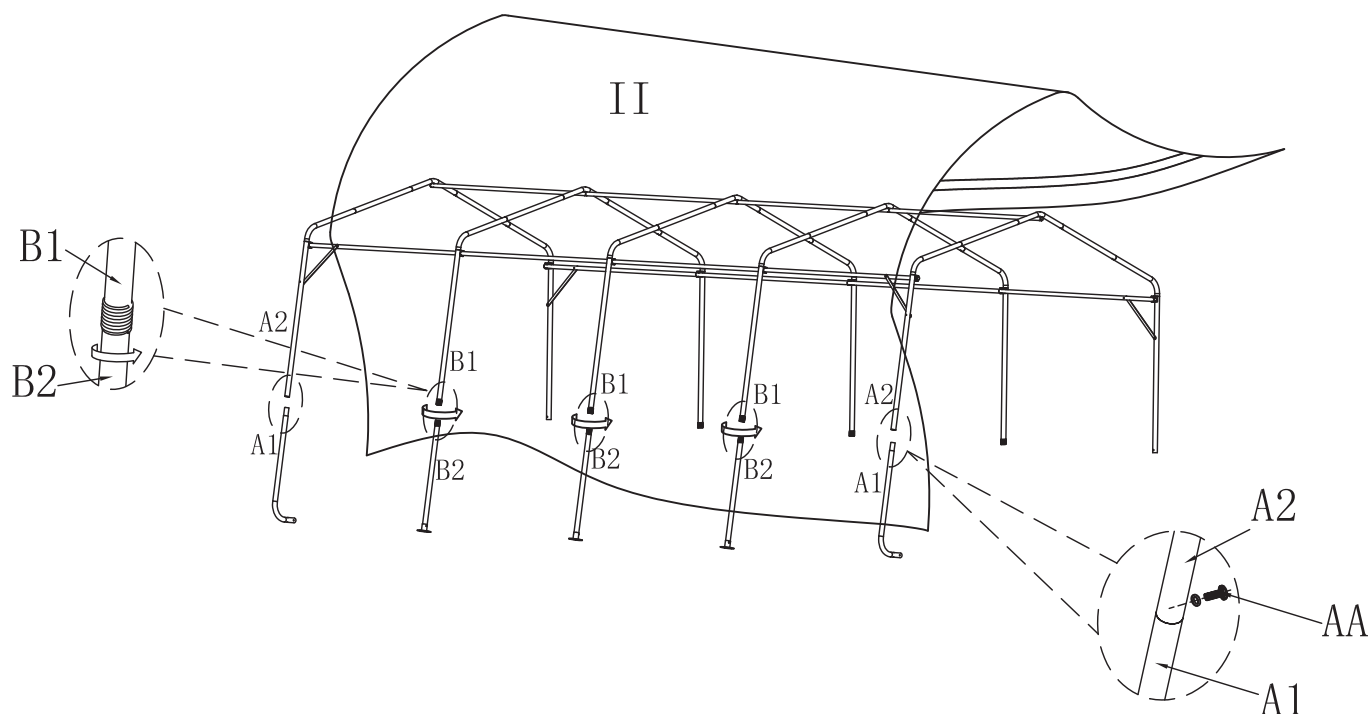


12

Insert **Lower Leg (A1)** into **Upper Leg (A2)**, fix by using **Bolt (AA)**; attach pre-assembled **Lower Leg (B2)** to **Upper Leg (B1)**.

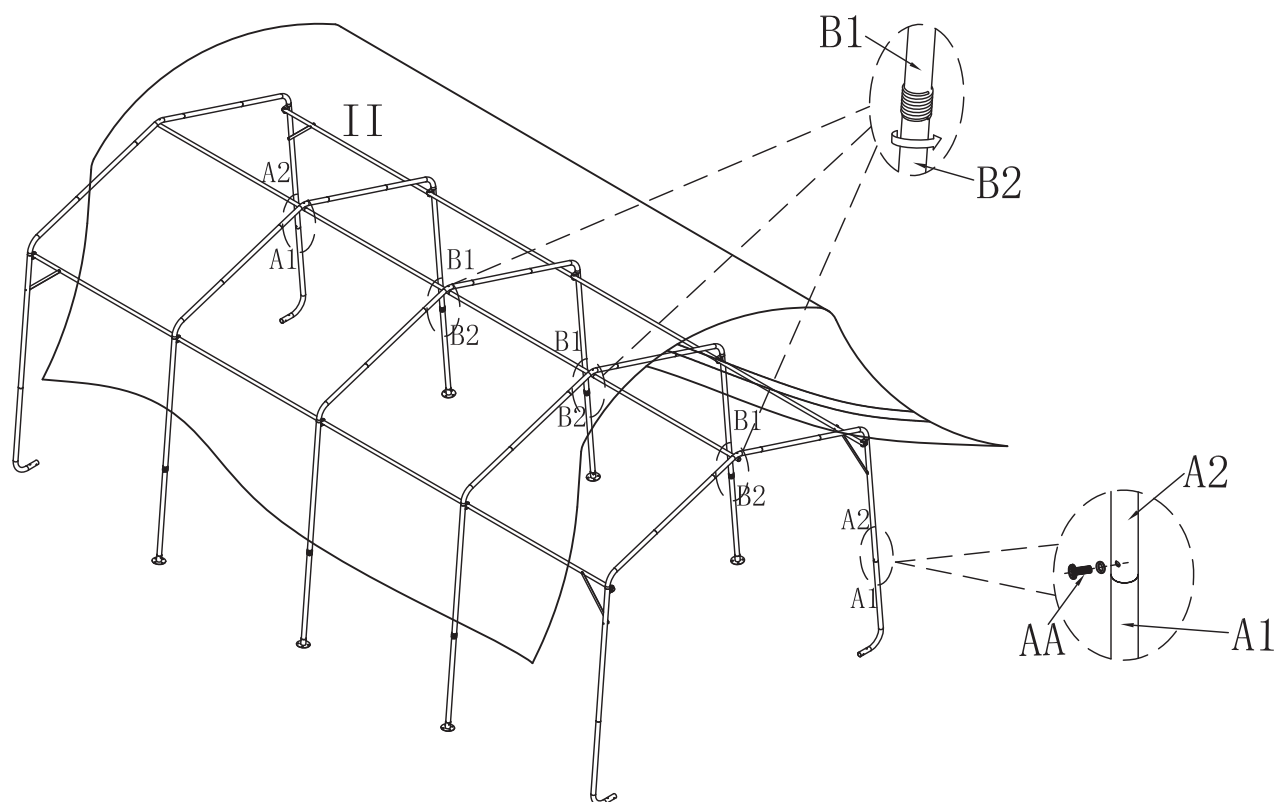


13

Insert **Rod (F2)** into bottom of **Tarp (II)**, Fix Rod to **Lower Leg (A1)/(B2)** by using **Connector (K1)/ (K2)** and **Bolt & Nut (BB)**.

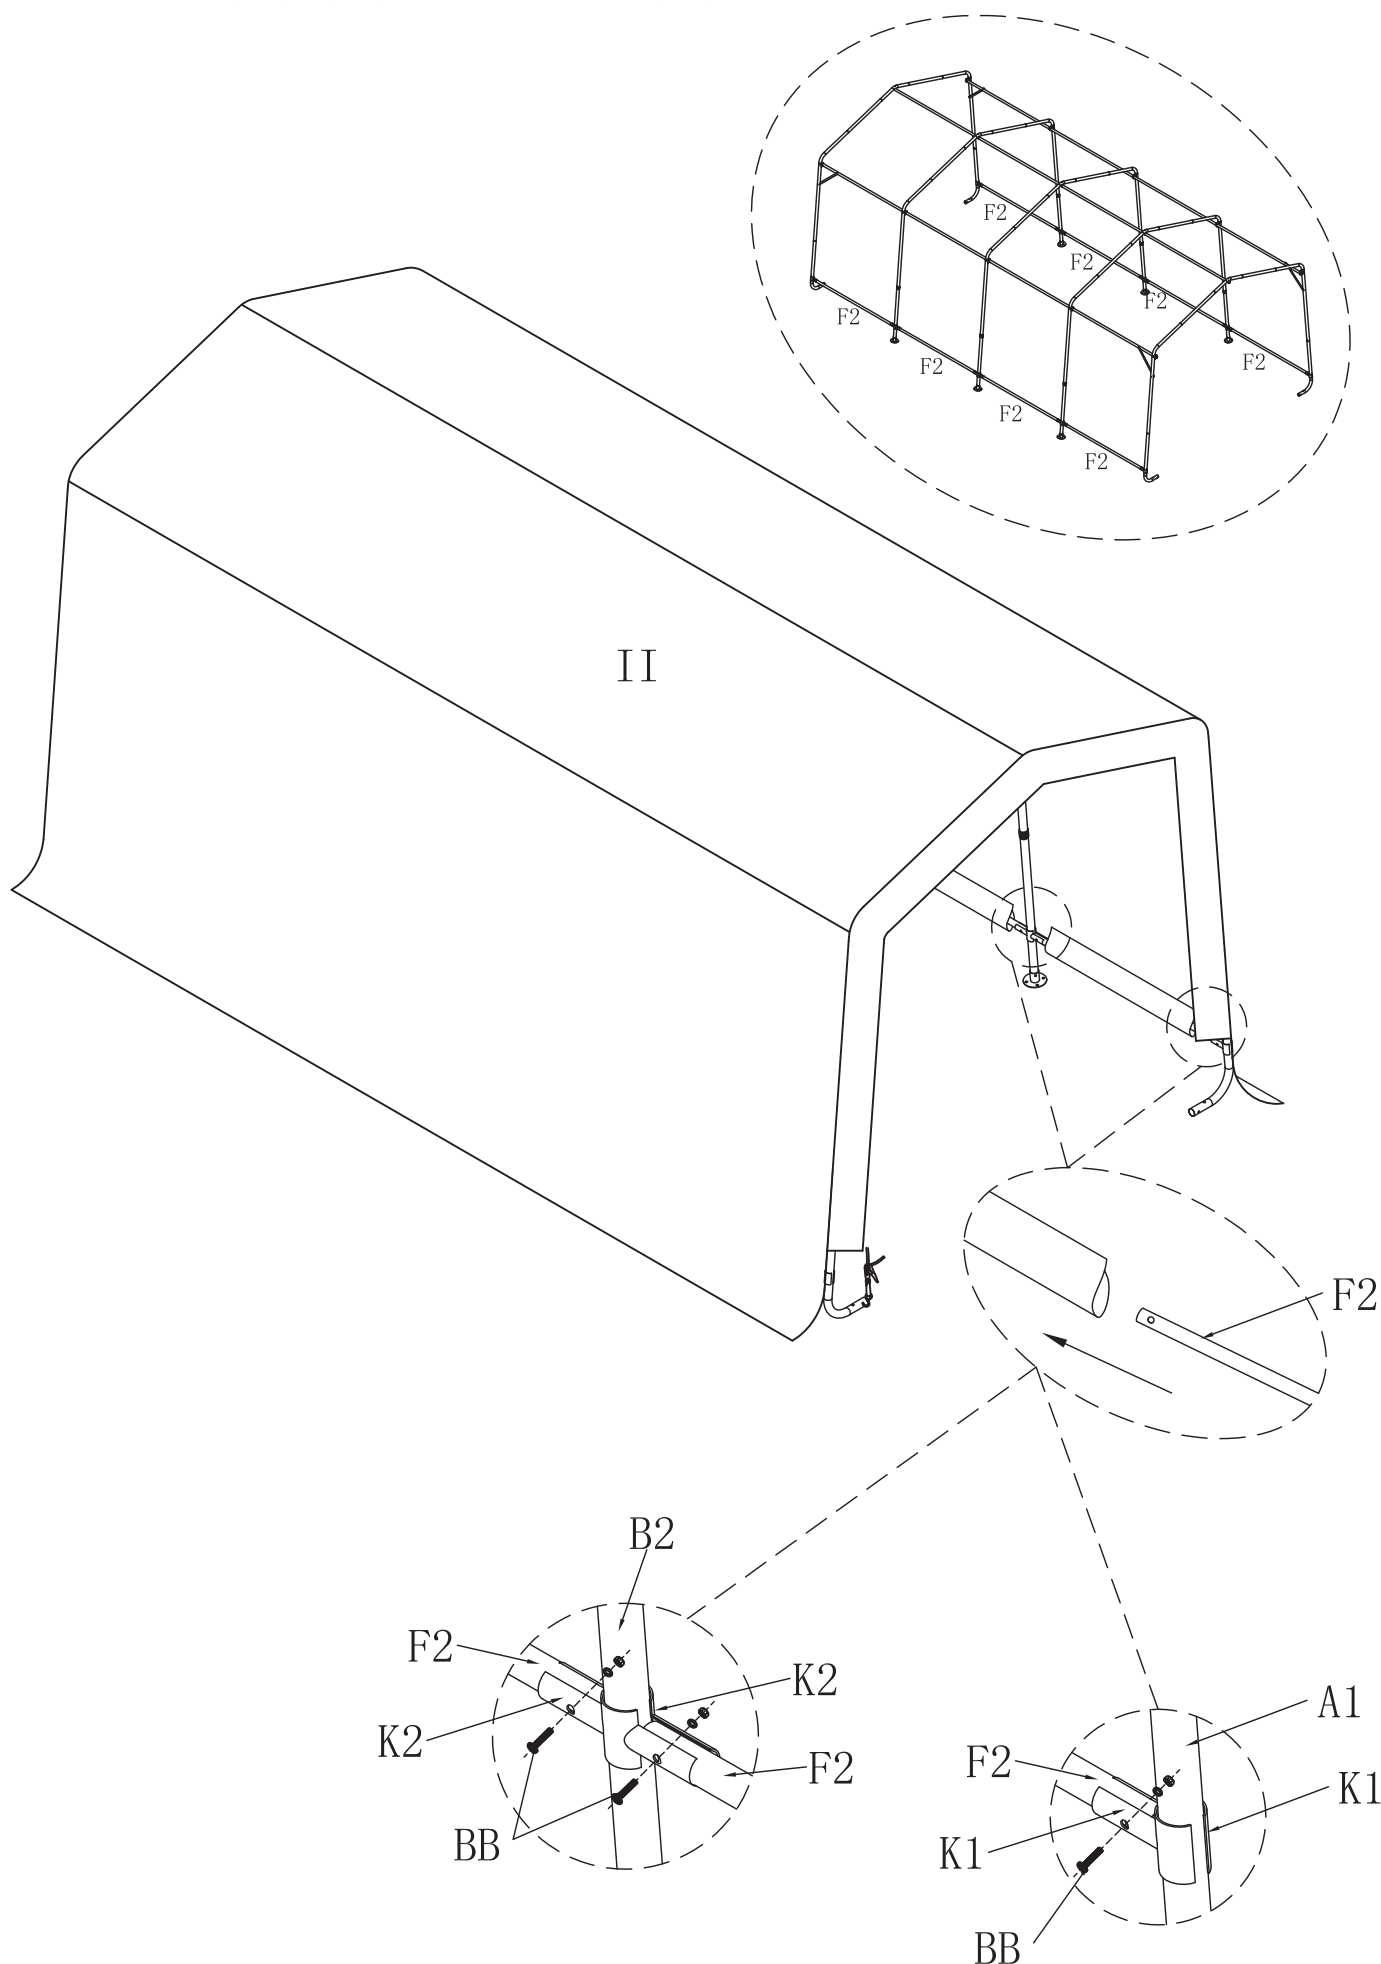


14

Attach **Front Tarp (JJ)** to frame, fix by **Elastic Band (DD)**.

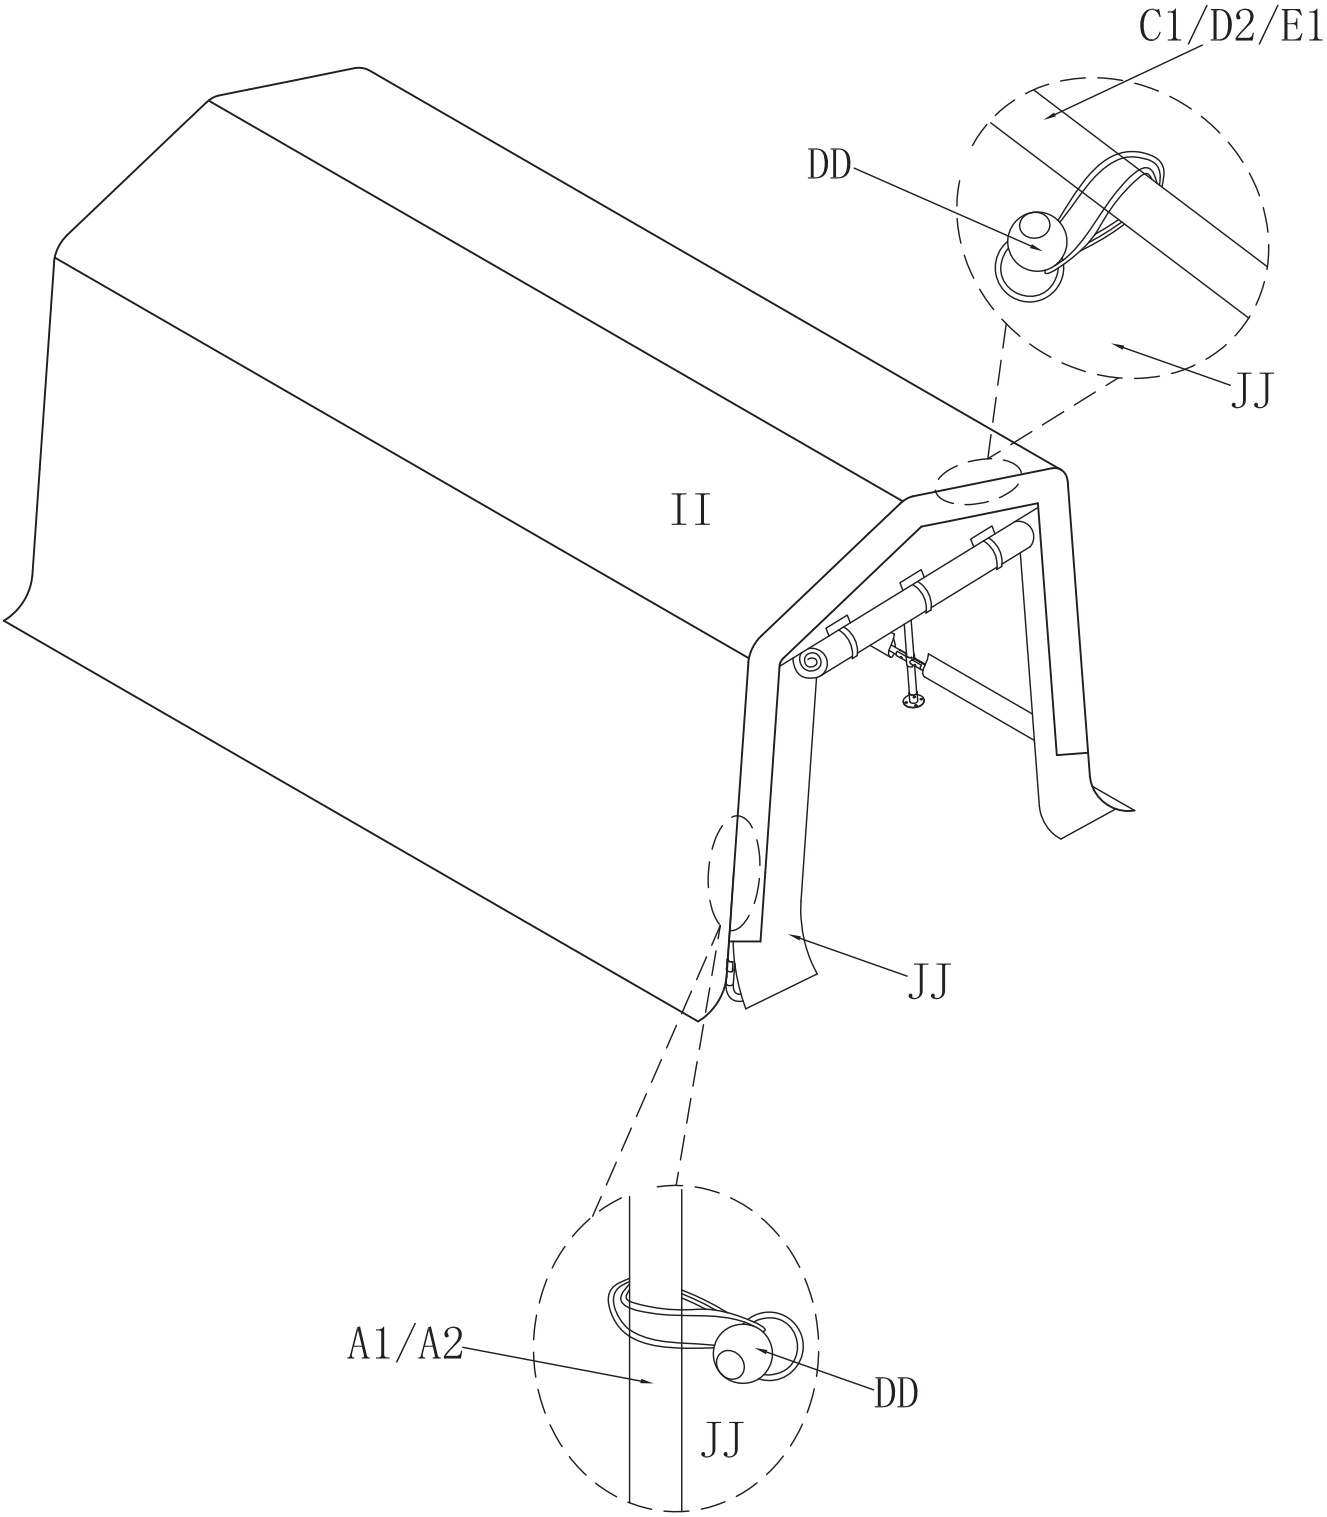

15

Fix the **Tarp (II)** to Bottom of **Leg (A1)**.

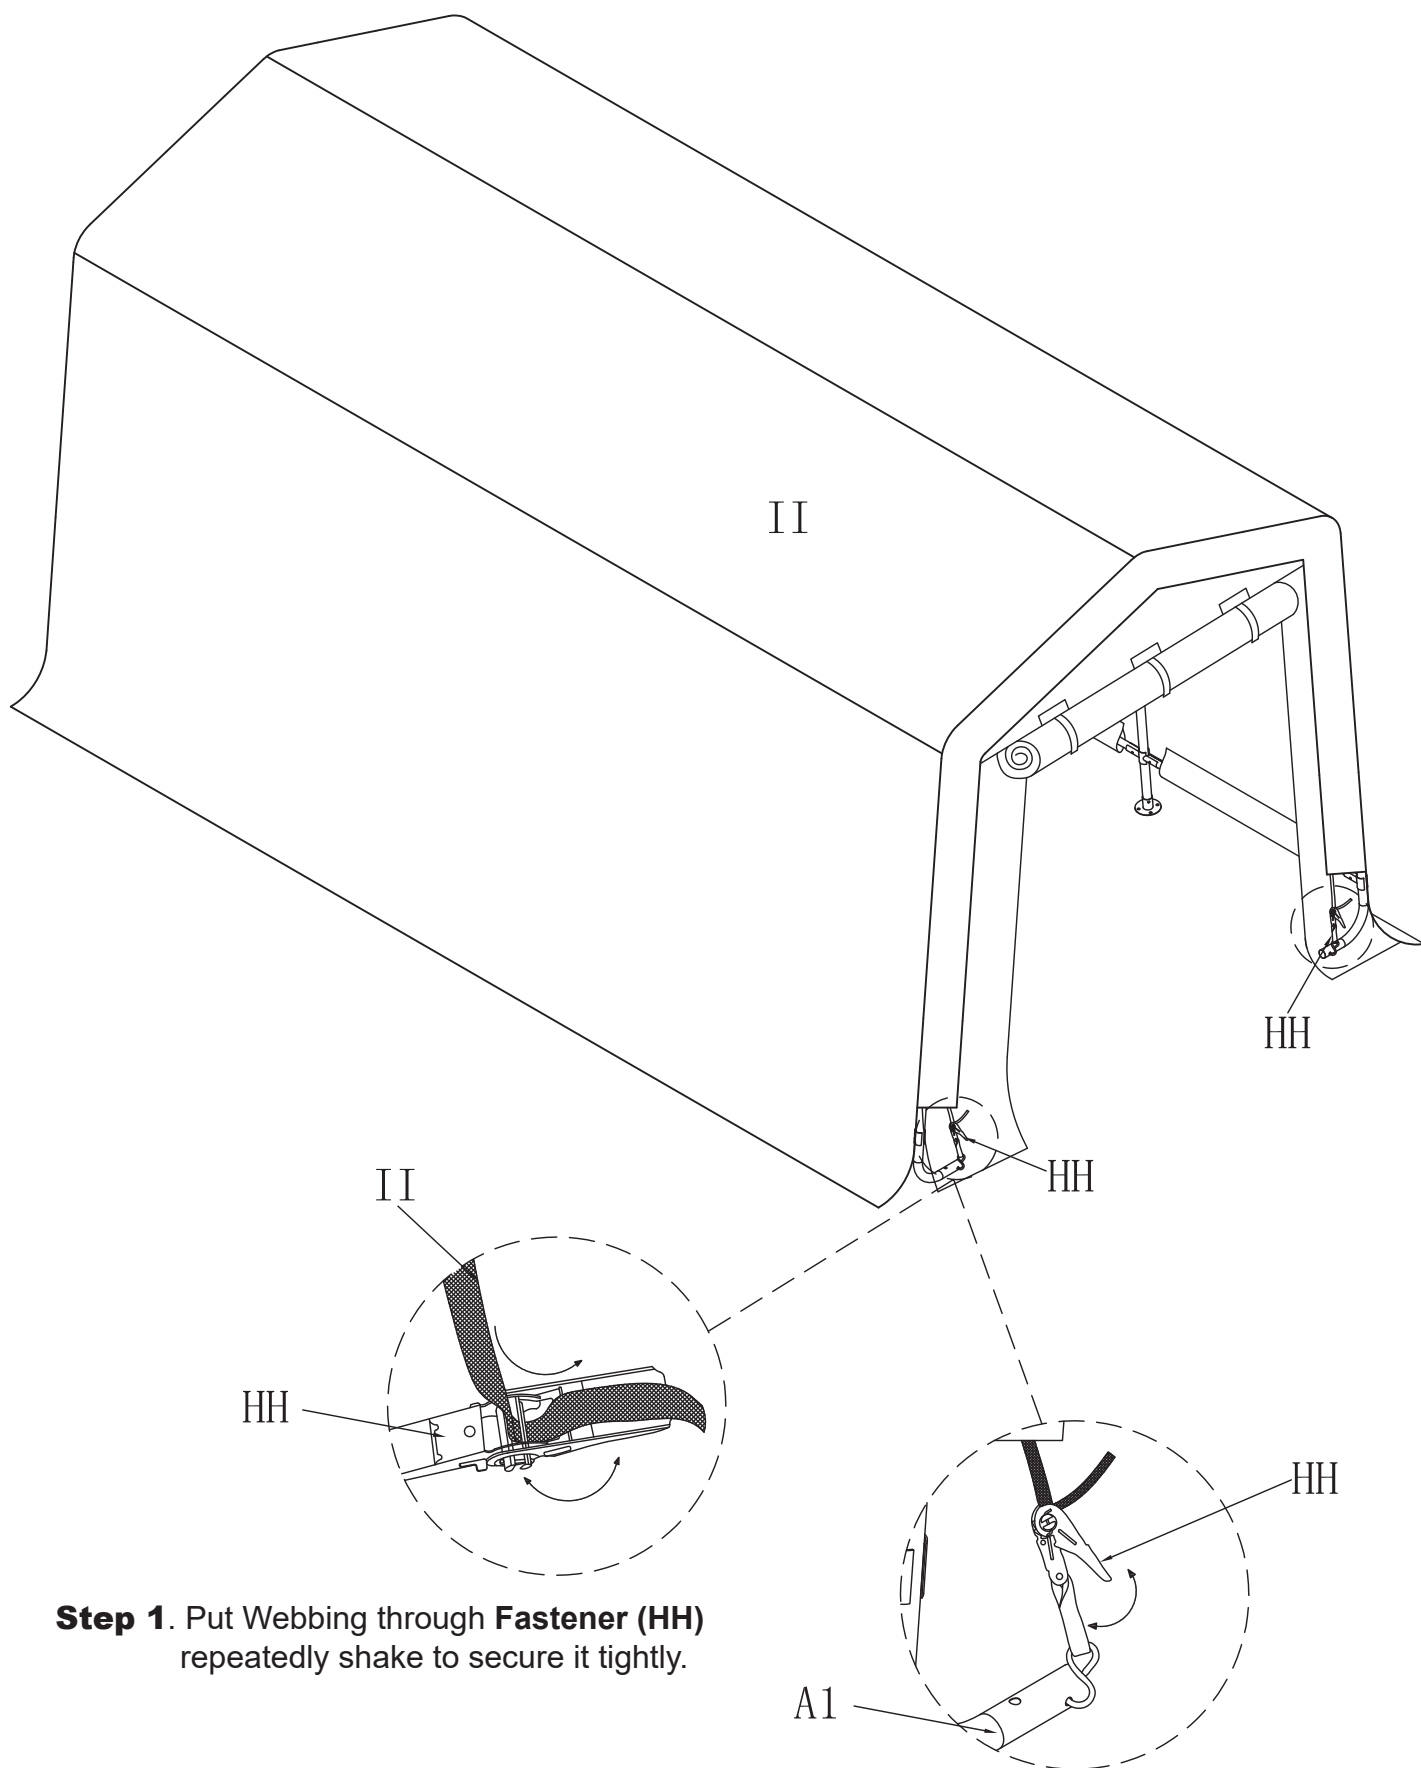

Step 1. Put Webbing through **Fastener (HH)**
repeatedly shake to secure it tightly.

Step 2. Fix **Fastener (HH)** to **Leg (A1)**.

16

Fix assembled Carport on Ground by using **Stake(EE)**.

