


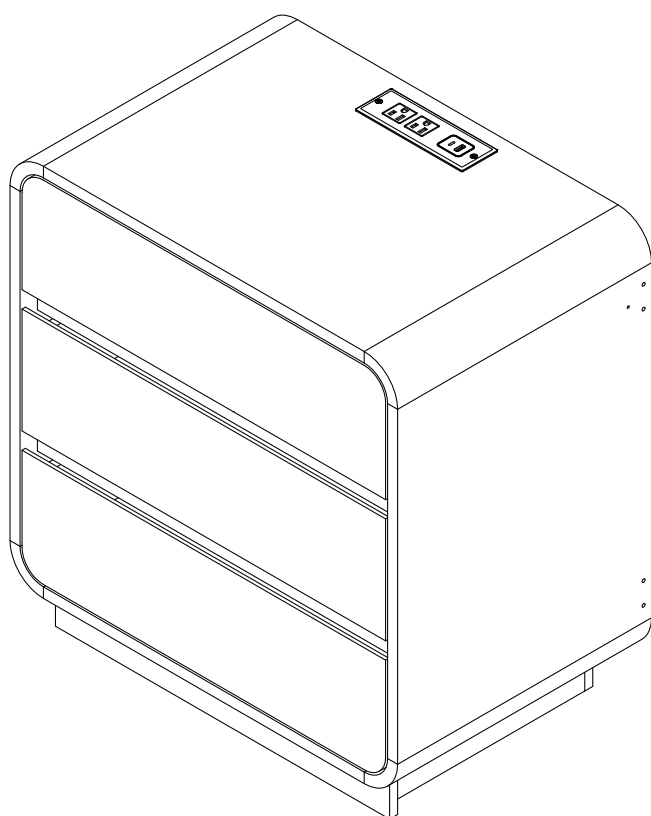


BESIDE TABLE















USER MANUAL

1






ASSEMBLY INSTRUCTIONS

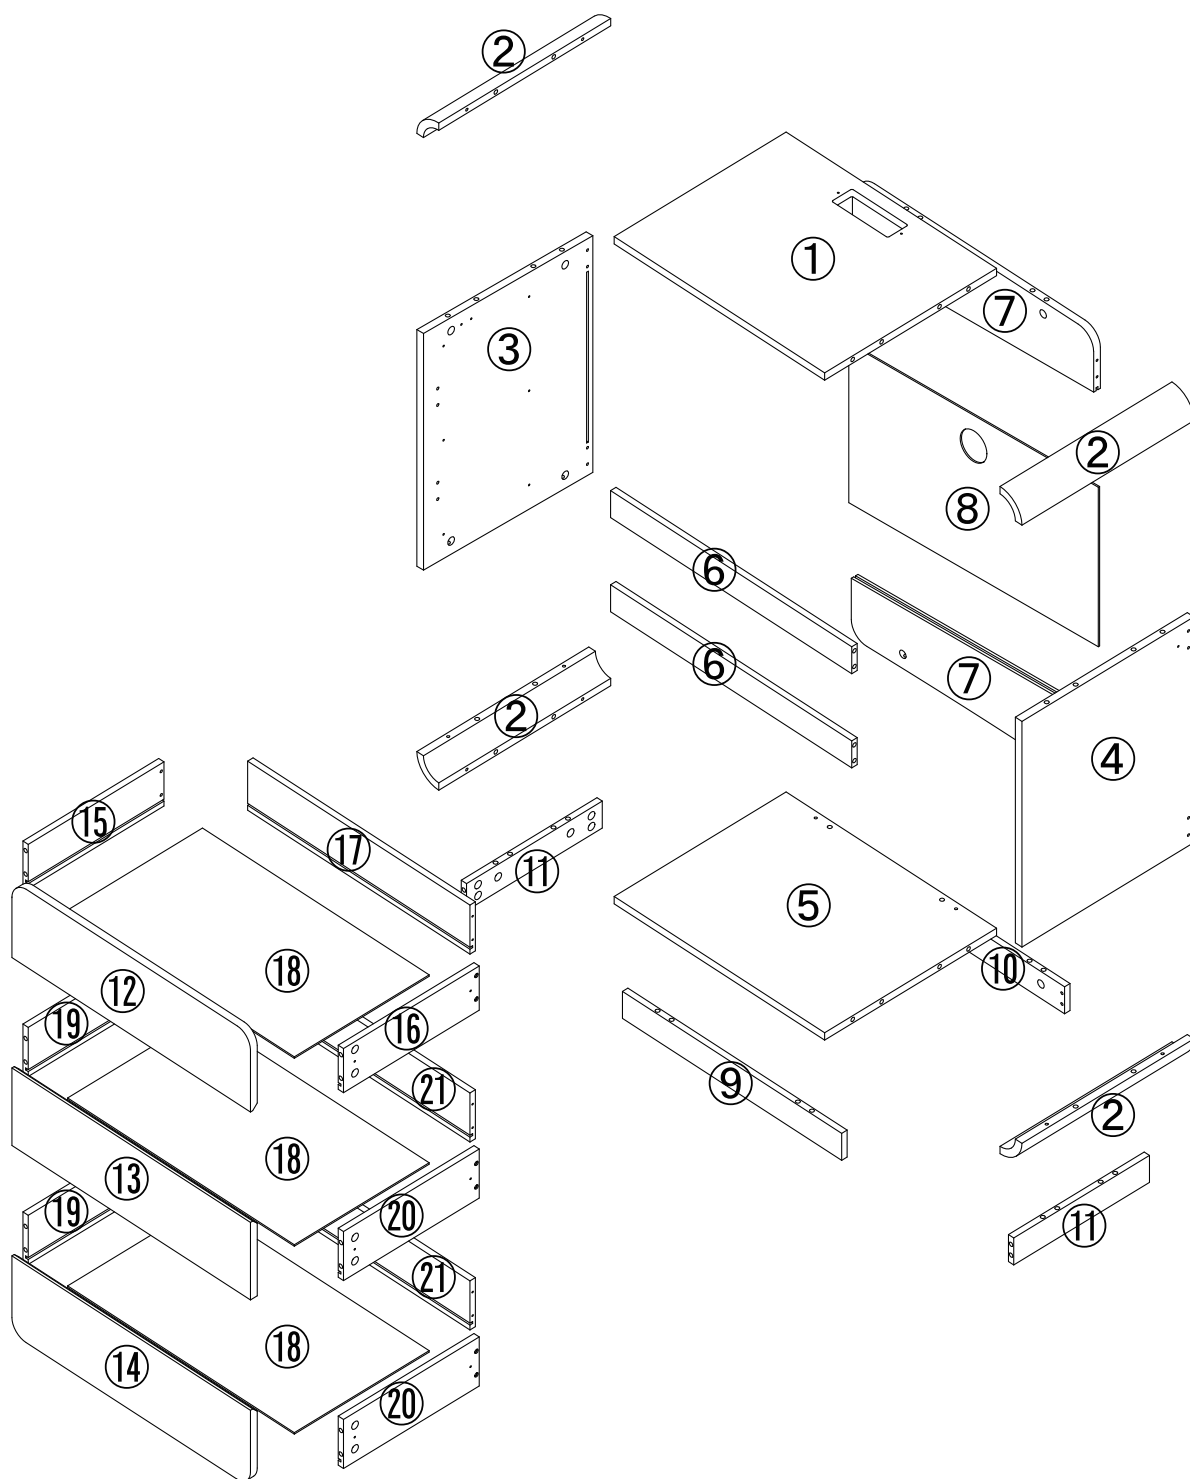

PACKAGING LIST

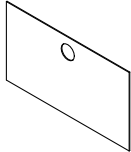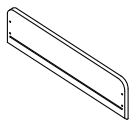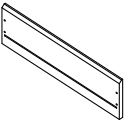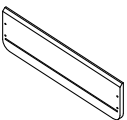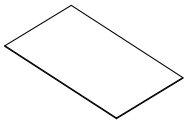			
①x1	②x4	③x1	④x1
			
⑤x1	⑥x2	⑦x2	⑧x1
			
⑨x1	⑩x1	⑪x2	⑫x1
			
⑬x1	⑭x1	⑮x1	⑯x1
			
⑰x1	⑱x3	⑲x2	⑳x2
			
㉑x2			


PACKAGING LIST

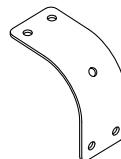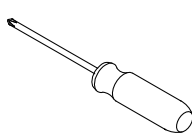					
(A) 56+2x	(B) 56+2x	(C) 28+2x	(D) 20+1x		
					
(E) 4x	(F) 4+1x	(G) 1x	(H) 34+2x		
					
(I) 6x	(J) 2x	(K) 2x			
					
(L) 1x					


4

STEP 1

Recommended for two-person. Estimated time: 1 hour. Suggested tools:




Phillips Screwdriver




Slotted Screwdriver

NOT INCLUDED

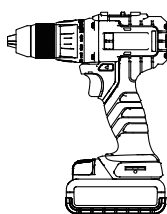

Electric Drill




Hammer







Ⓐ

12x

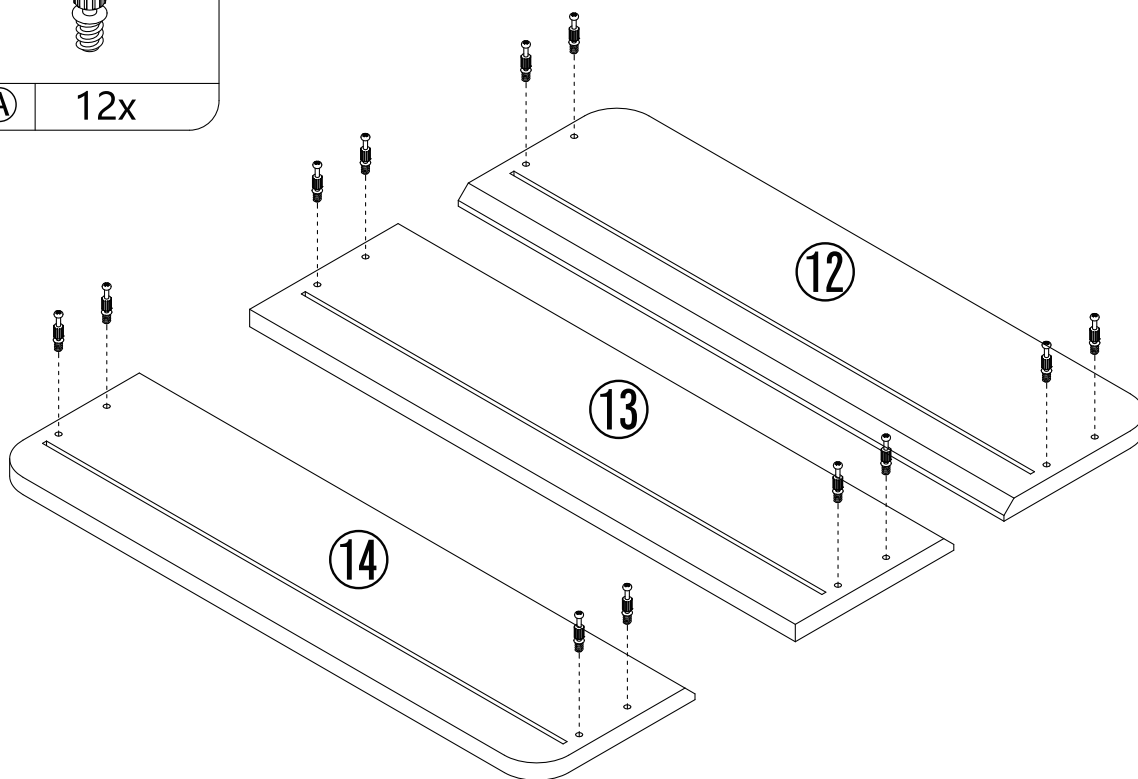

5


STEP 2

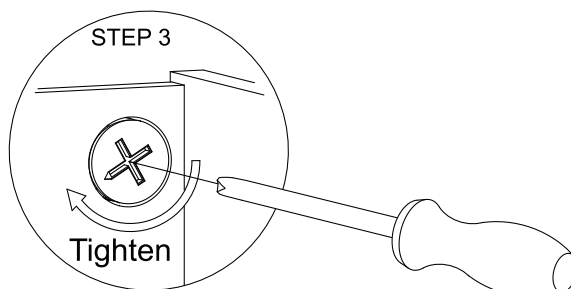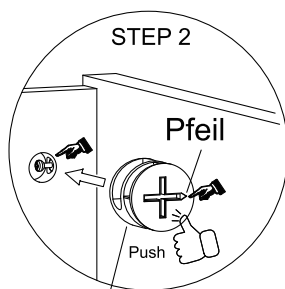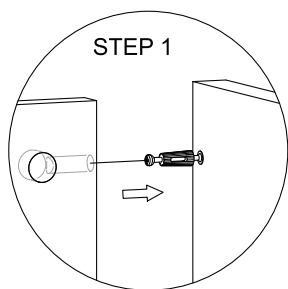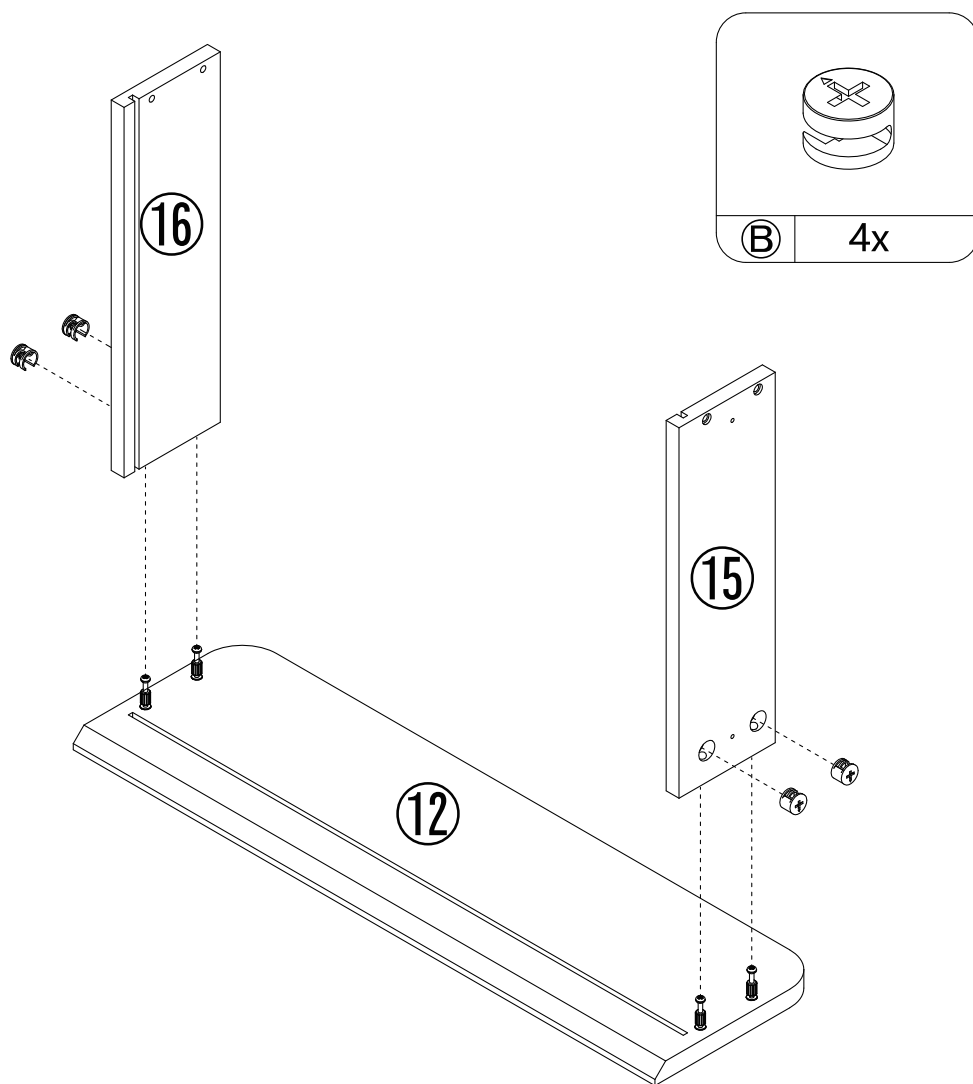

Push the KD cam all the way into the hole before tightening.



6

STEP 3

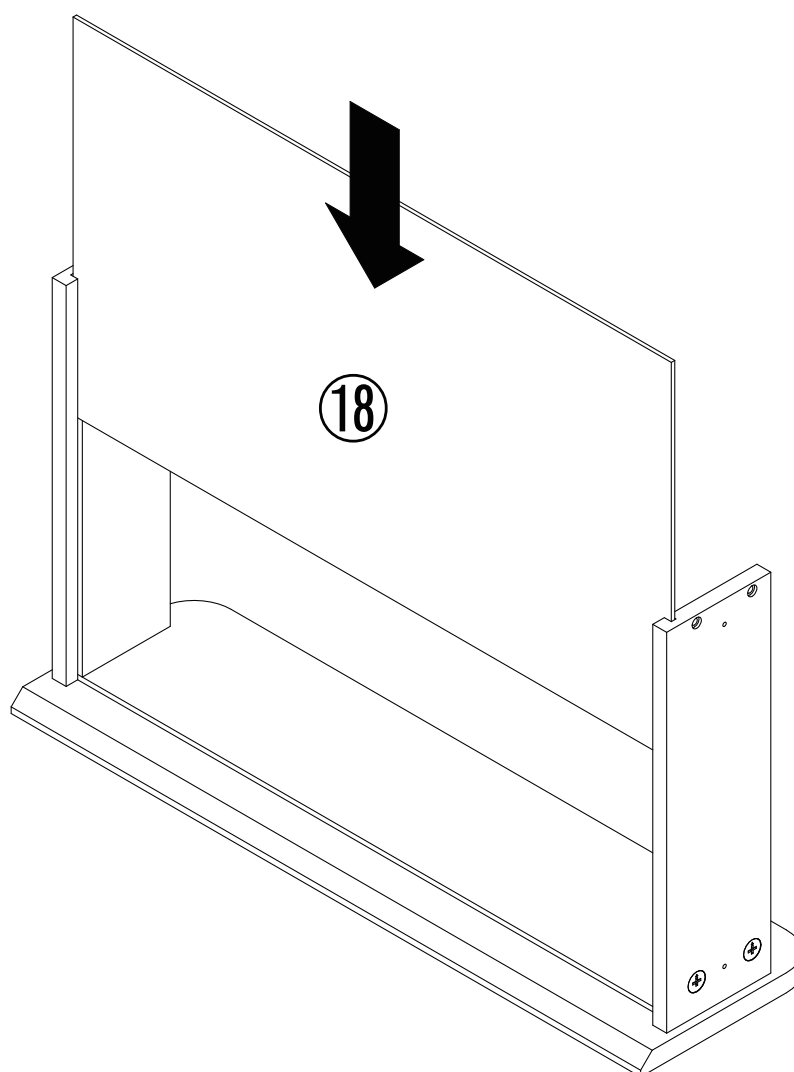


7

STEP 4

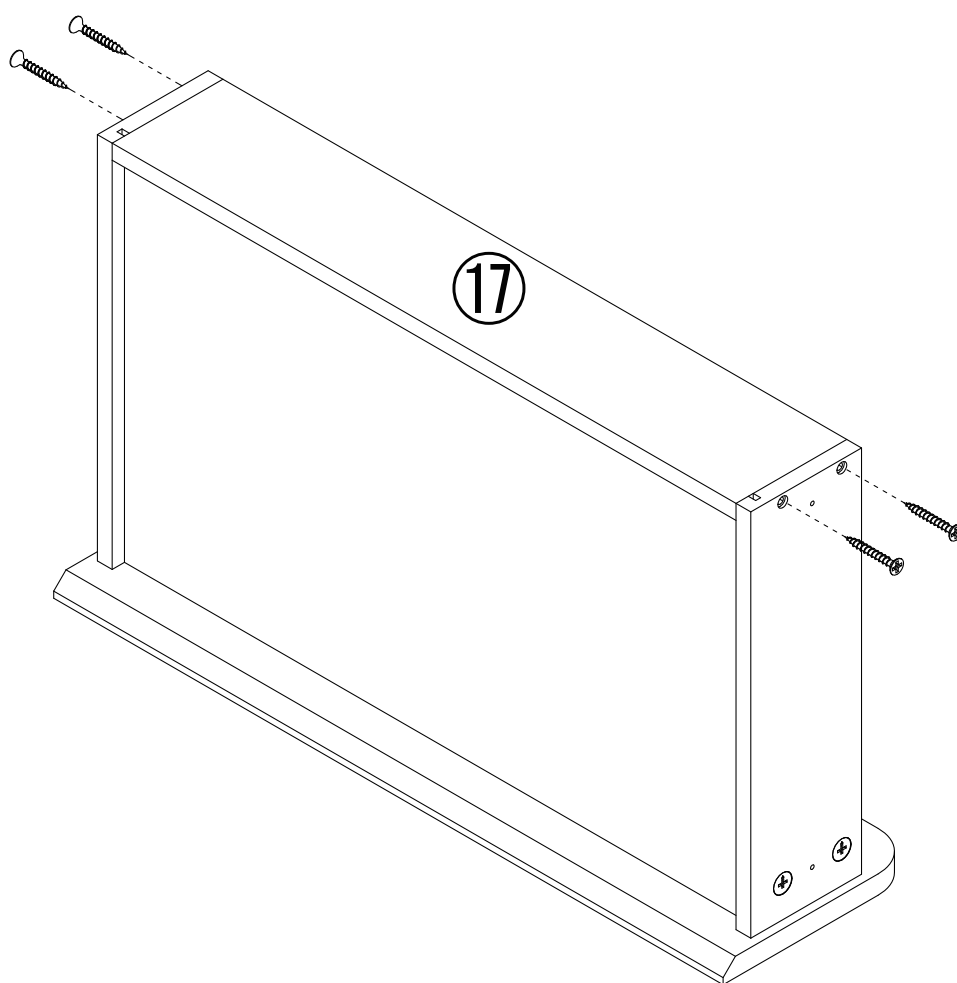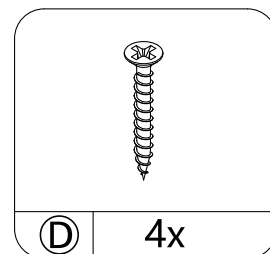


8

STEP 5

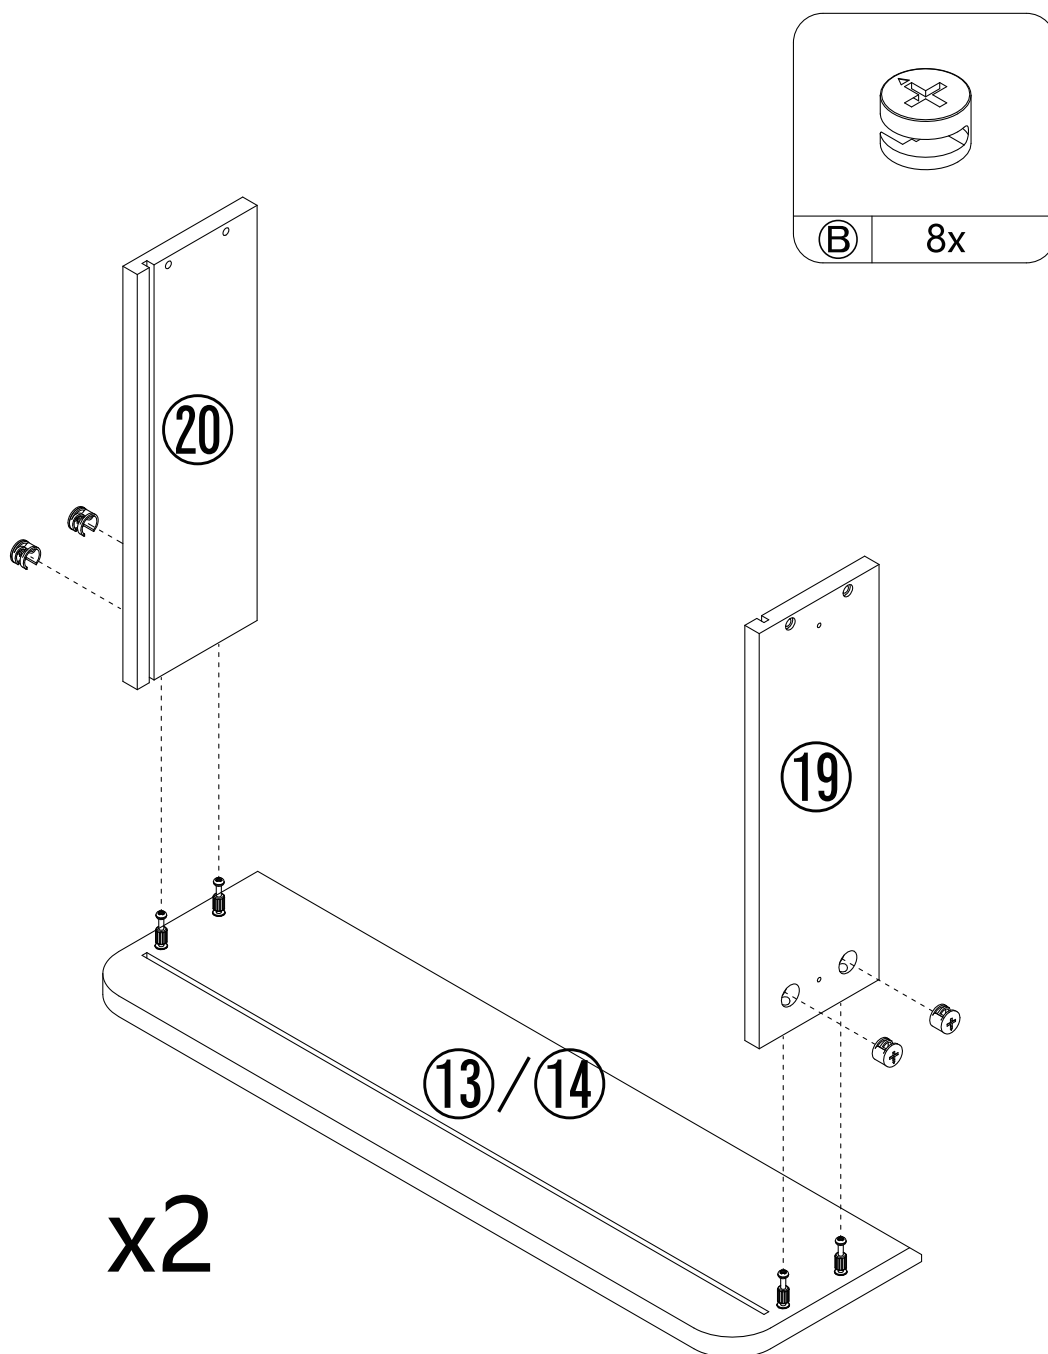

9



STEP 6

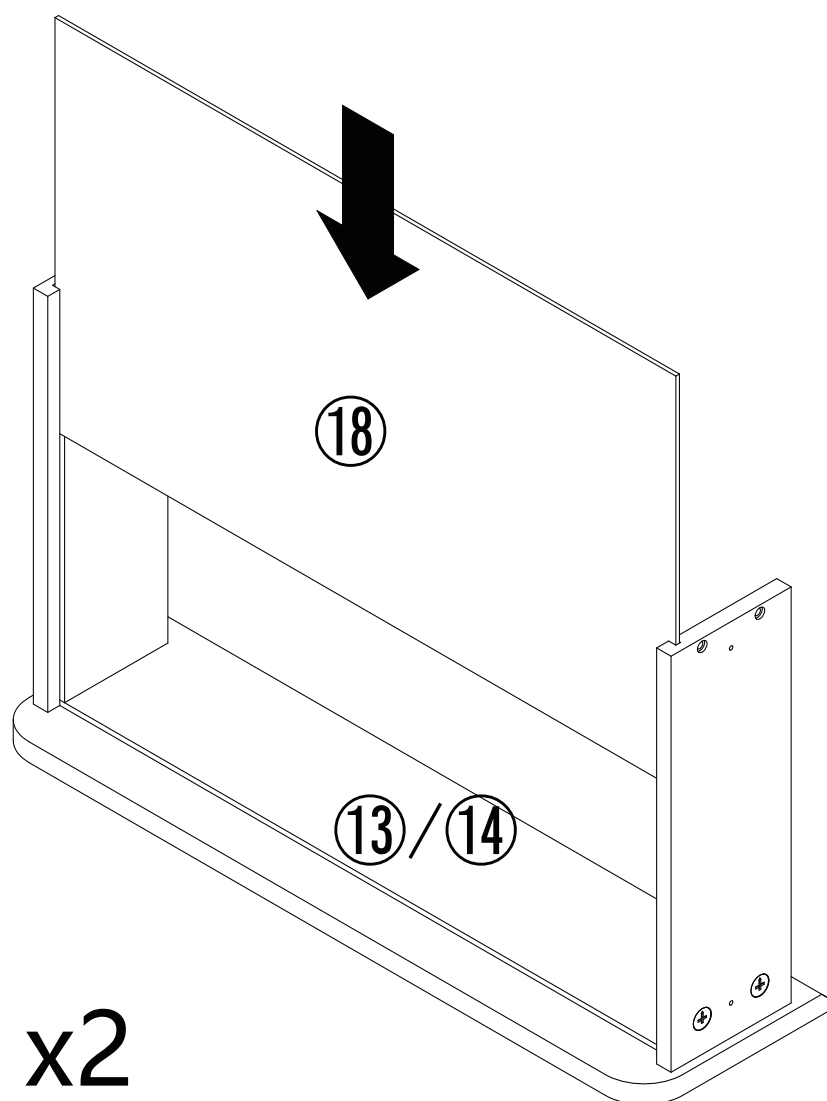

x2



10

STEP 7

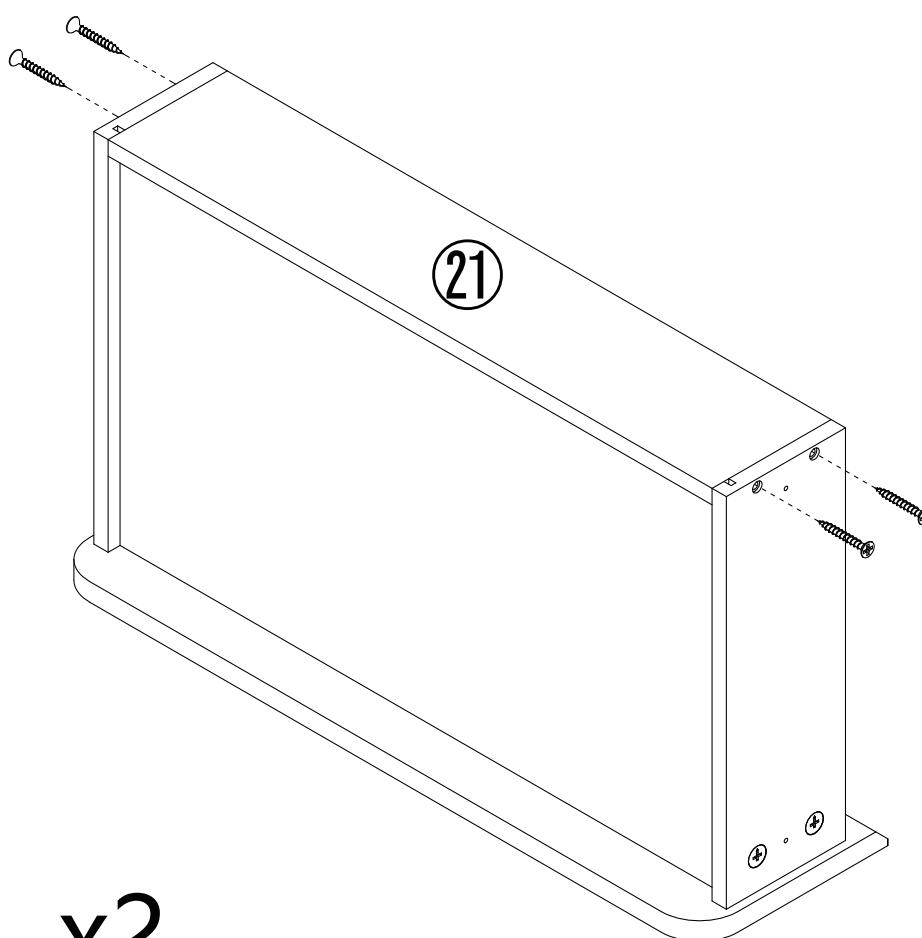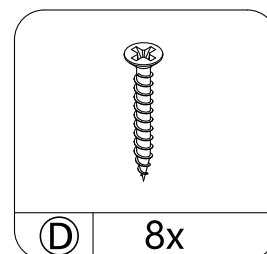


x2


STEP 8

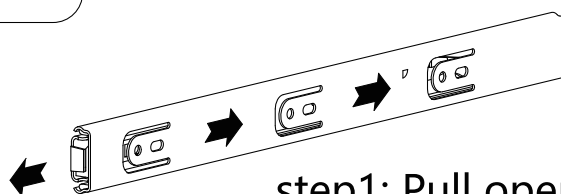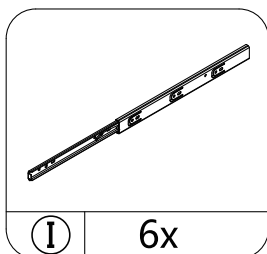

step1: Pull open the slide rail

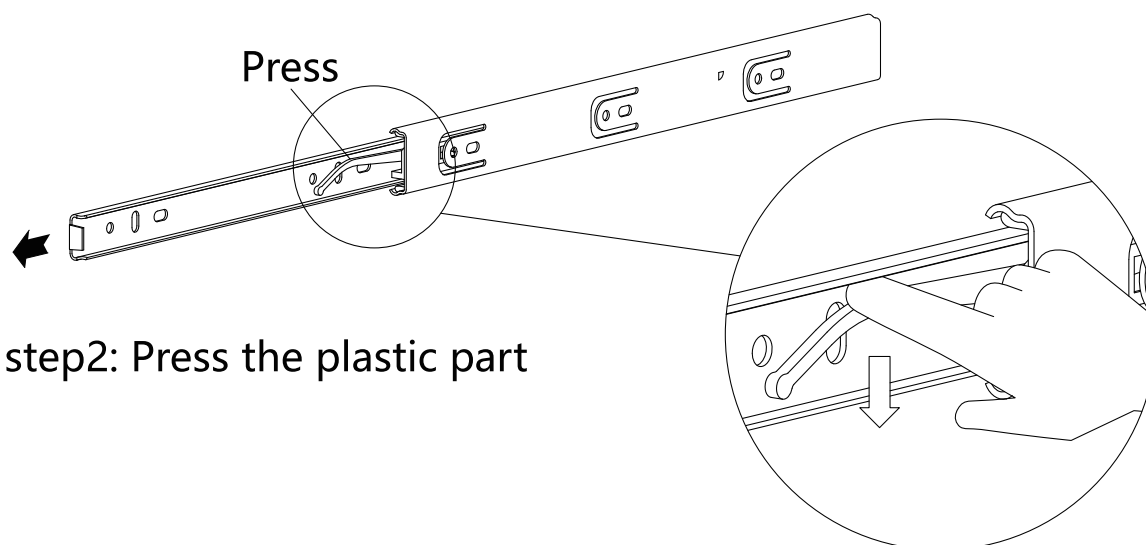

step2: Press the plastic part


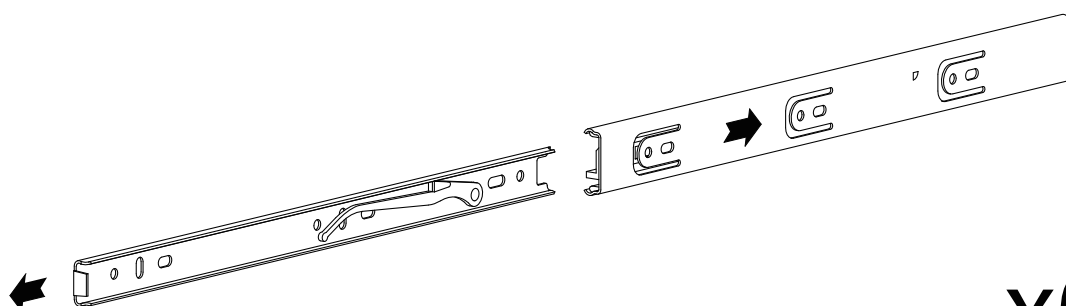


step3: Rail separation


x6

12


STEP 9

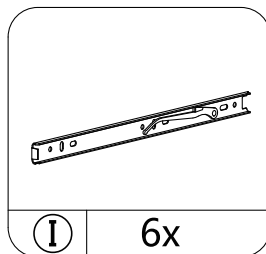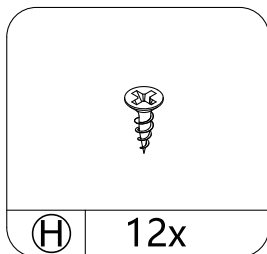





step1

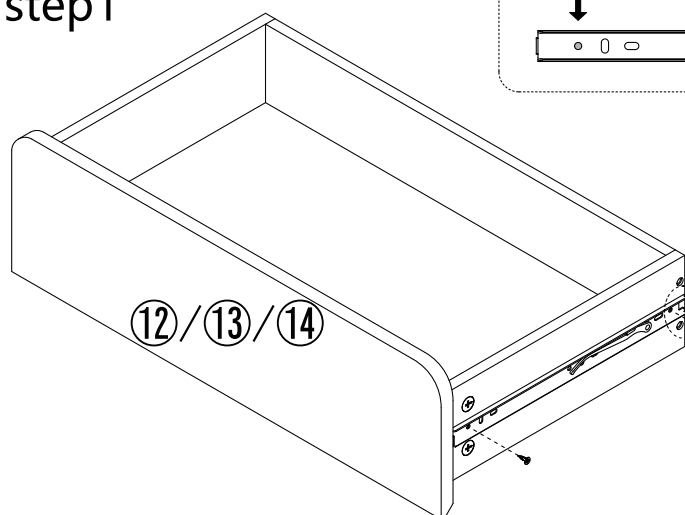

step2


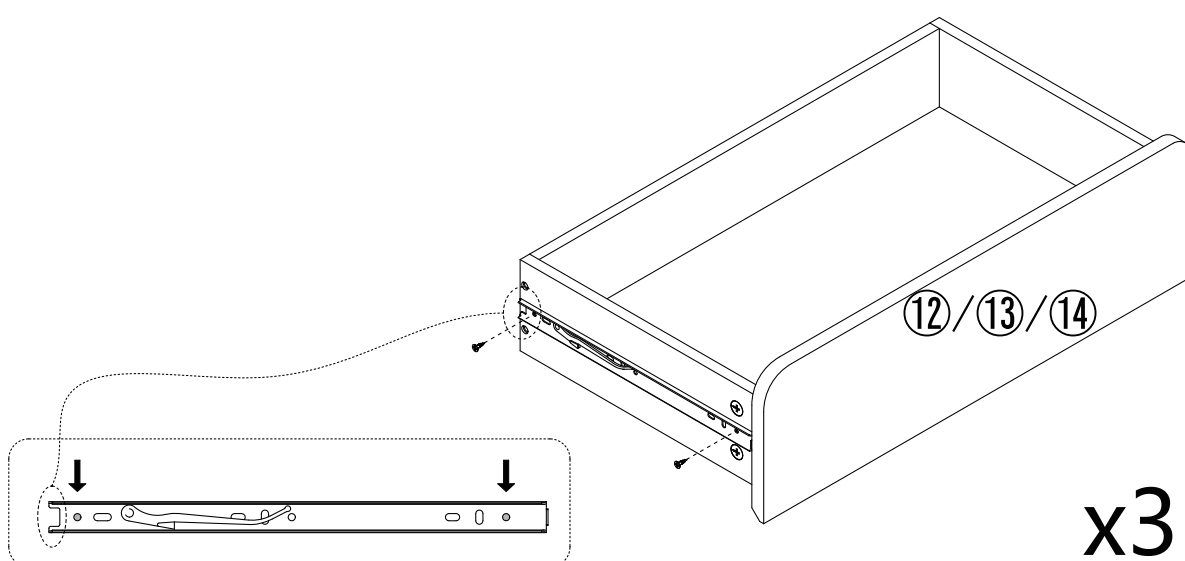


STEP 10

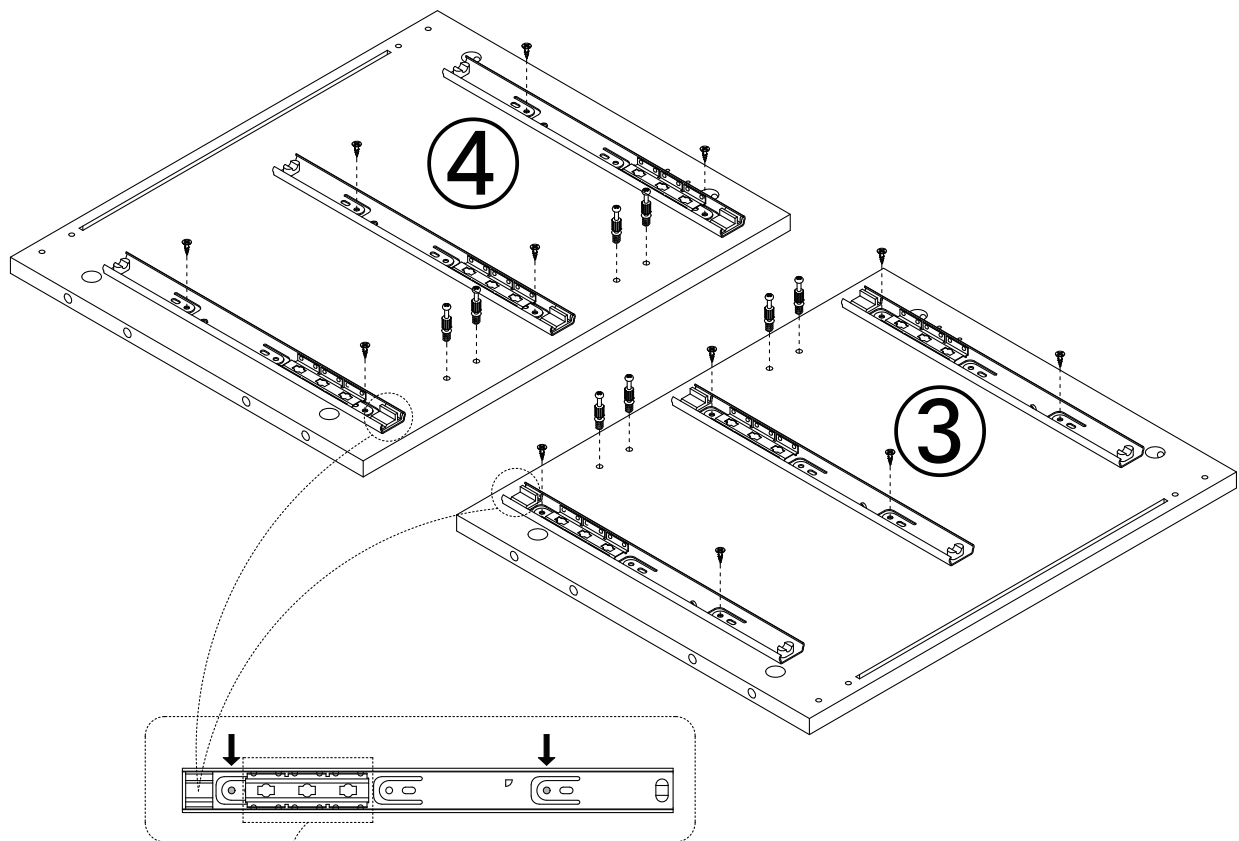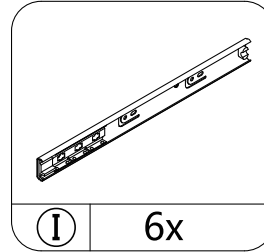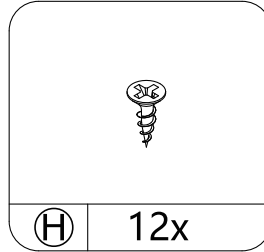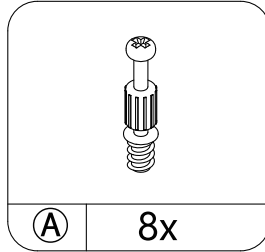



14

STEP 11

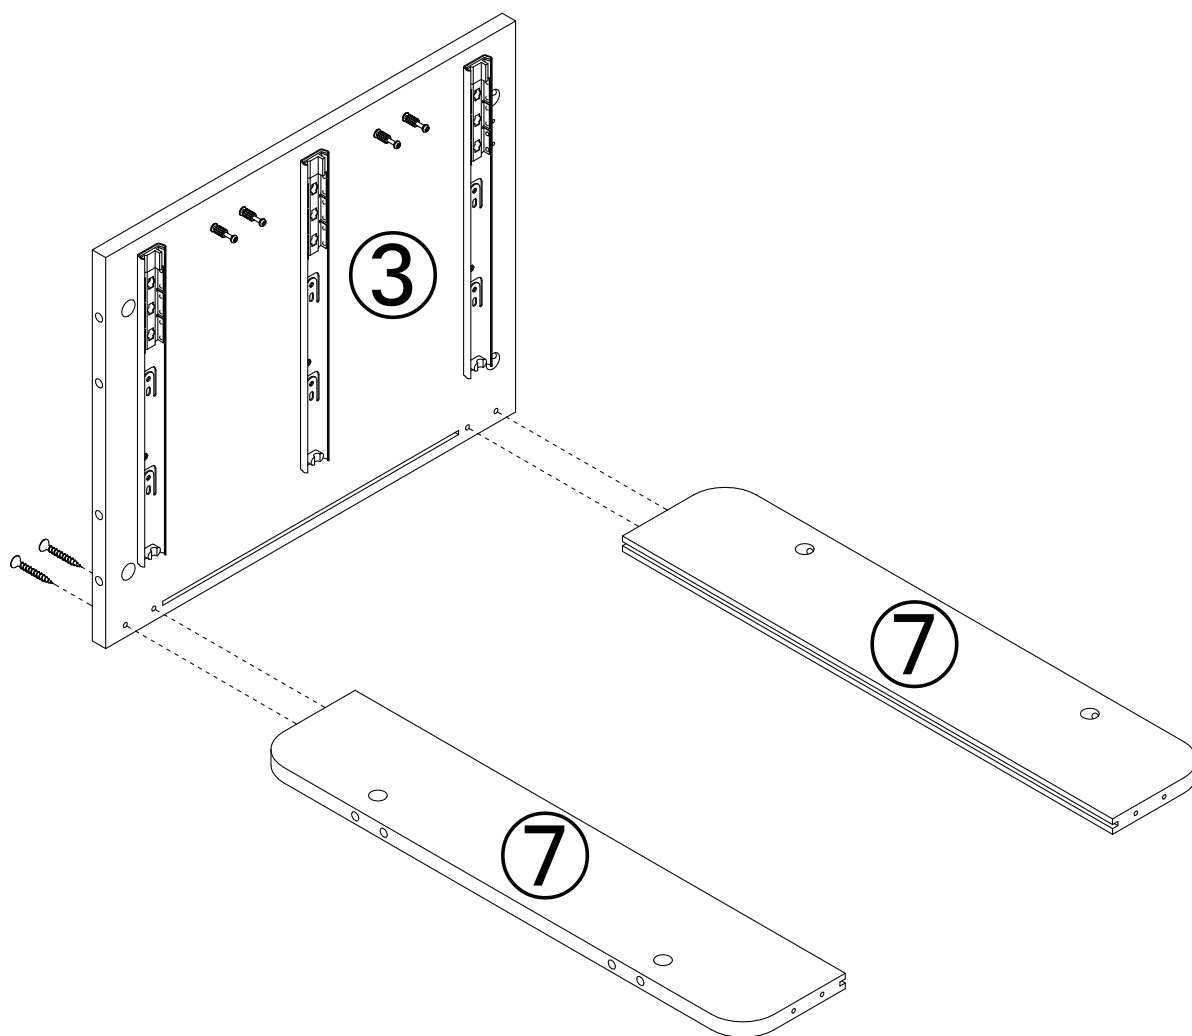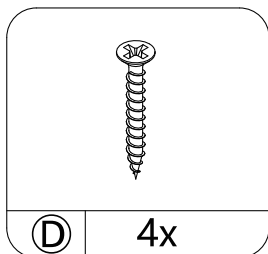


15

STEP 12


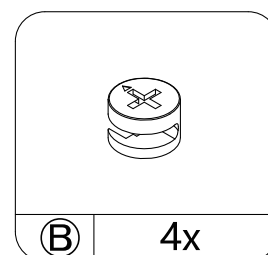
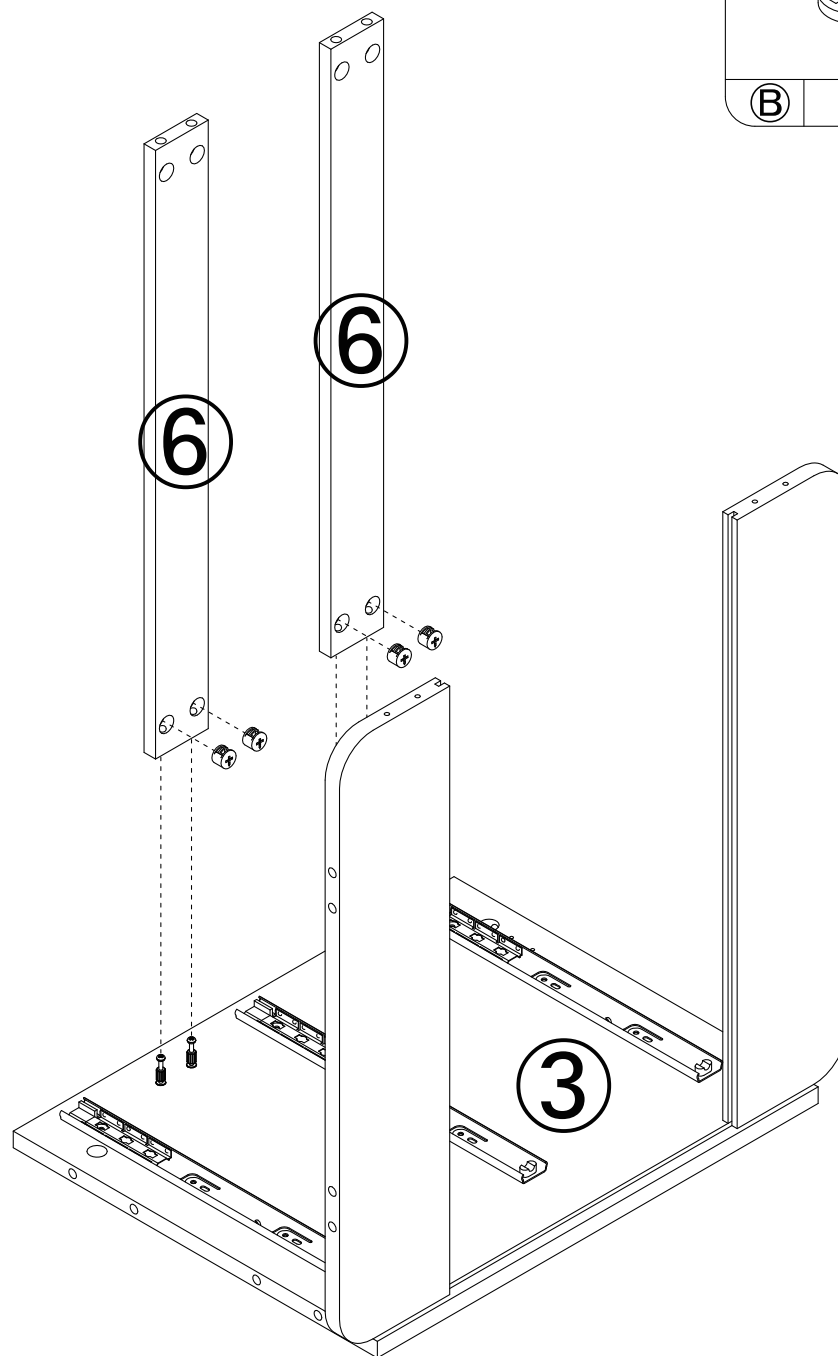


16




STEP 13

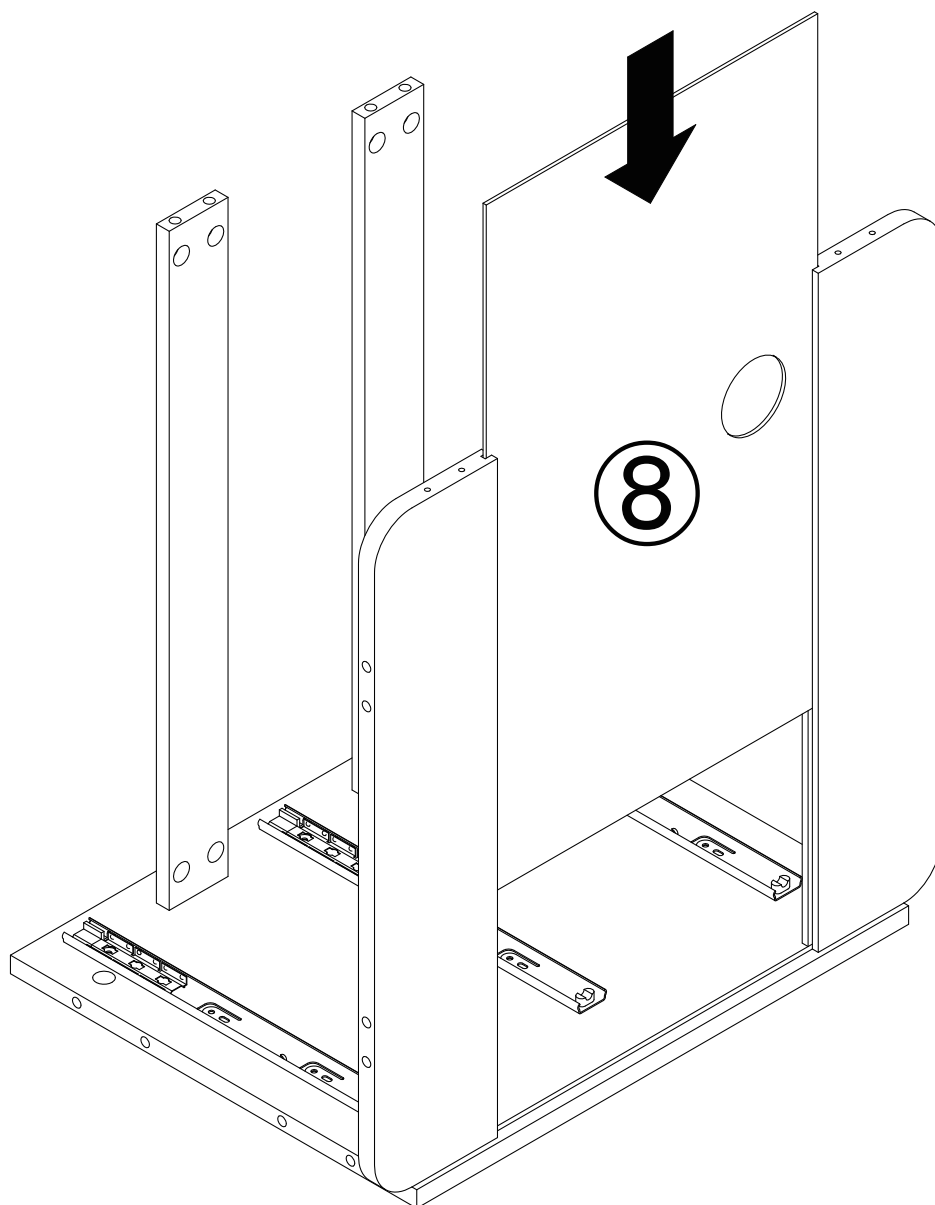

STEP 14

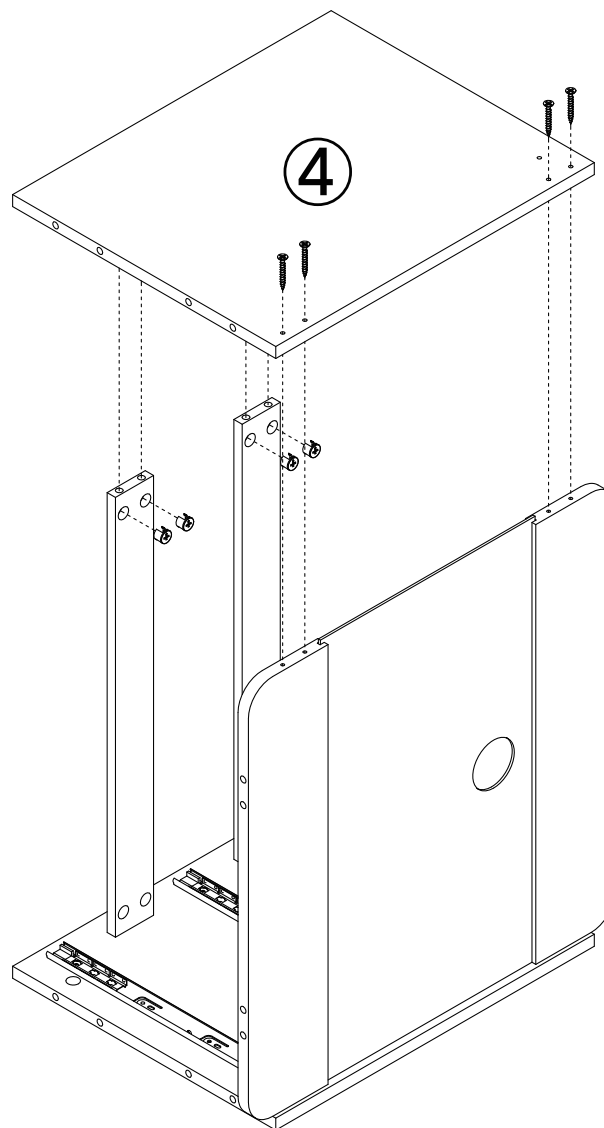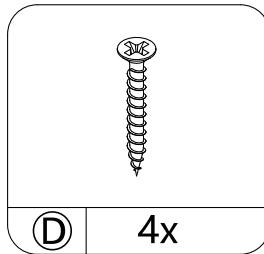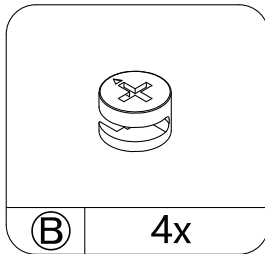


STEP 15

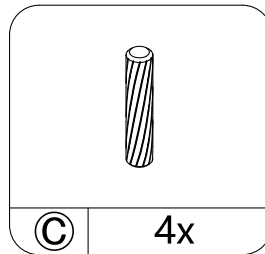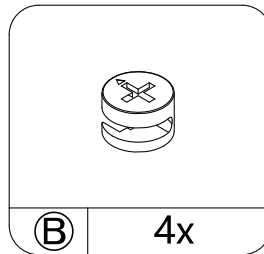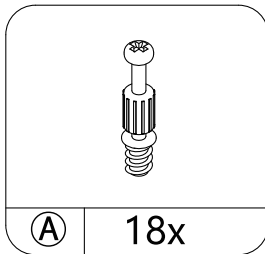


step1

This component has an irregular shape.
When you are installing, try to screw it in by
hand first and then use tools to reinforce it.



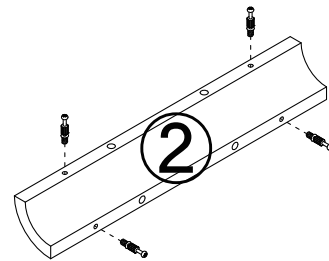


x4




step2

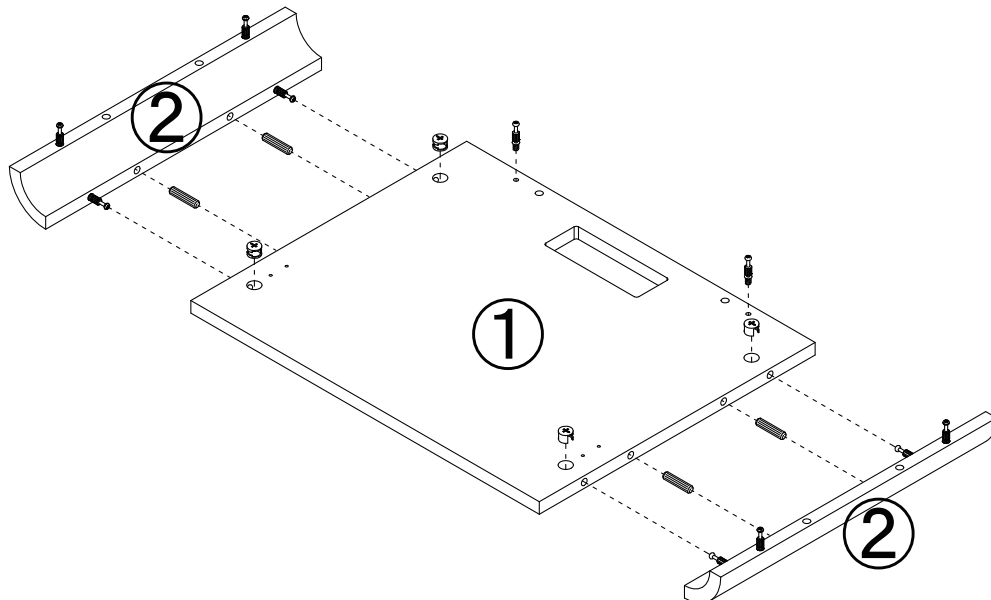

STEP 16

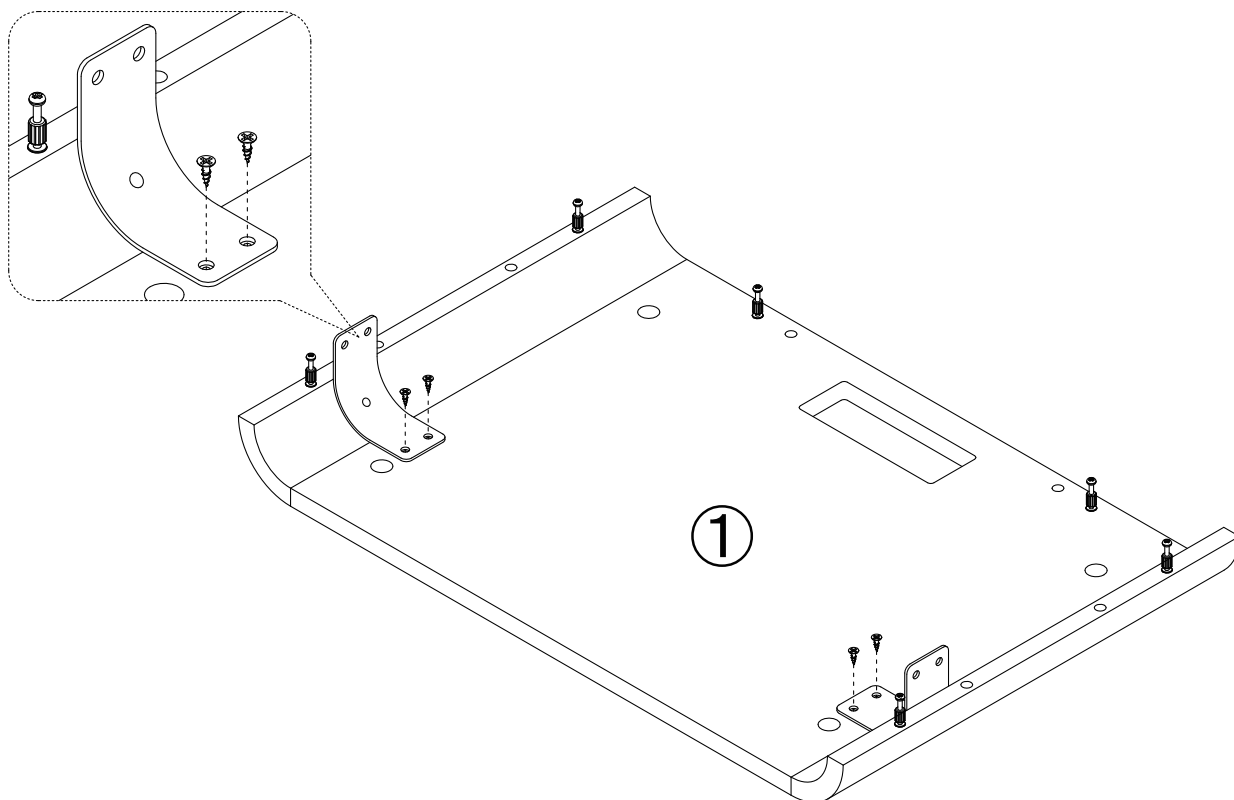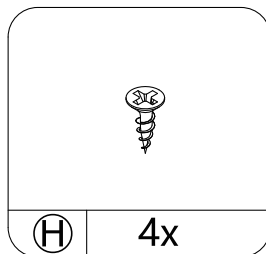
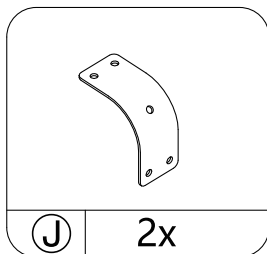


STEP 17

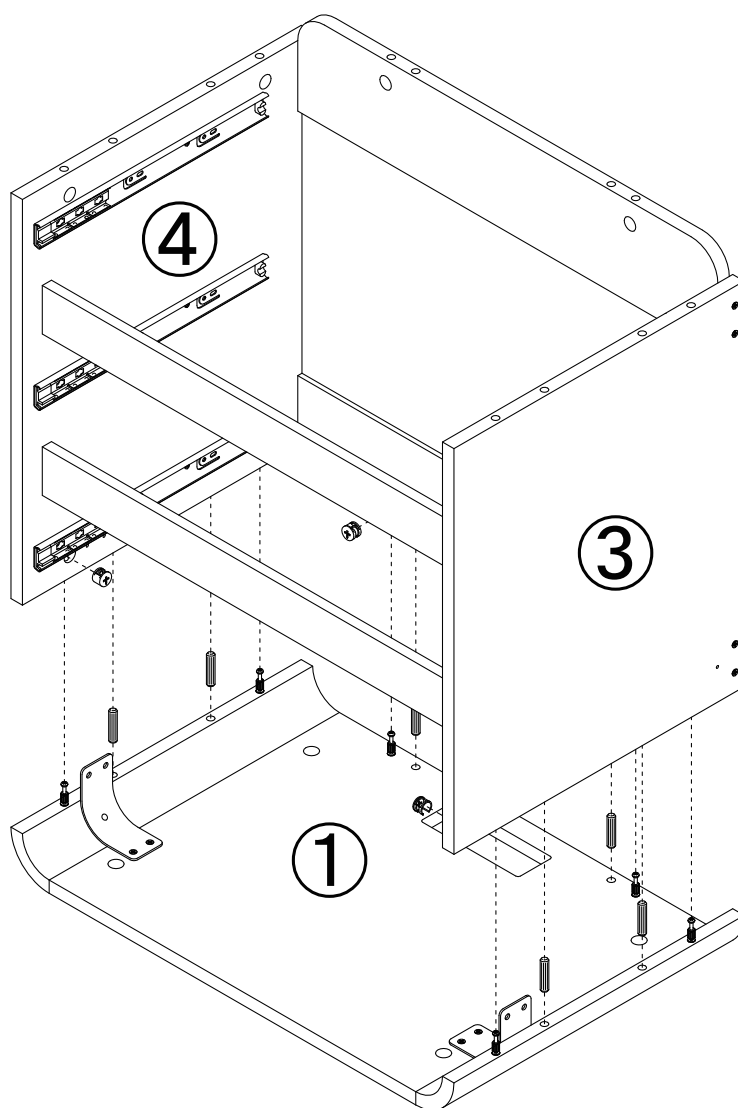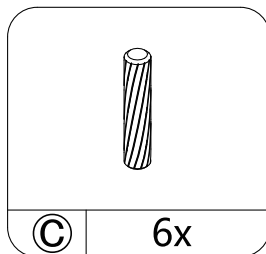
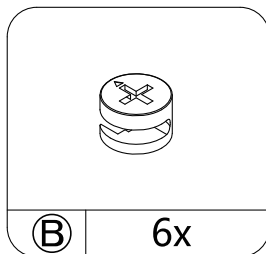


21




STEP 18

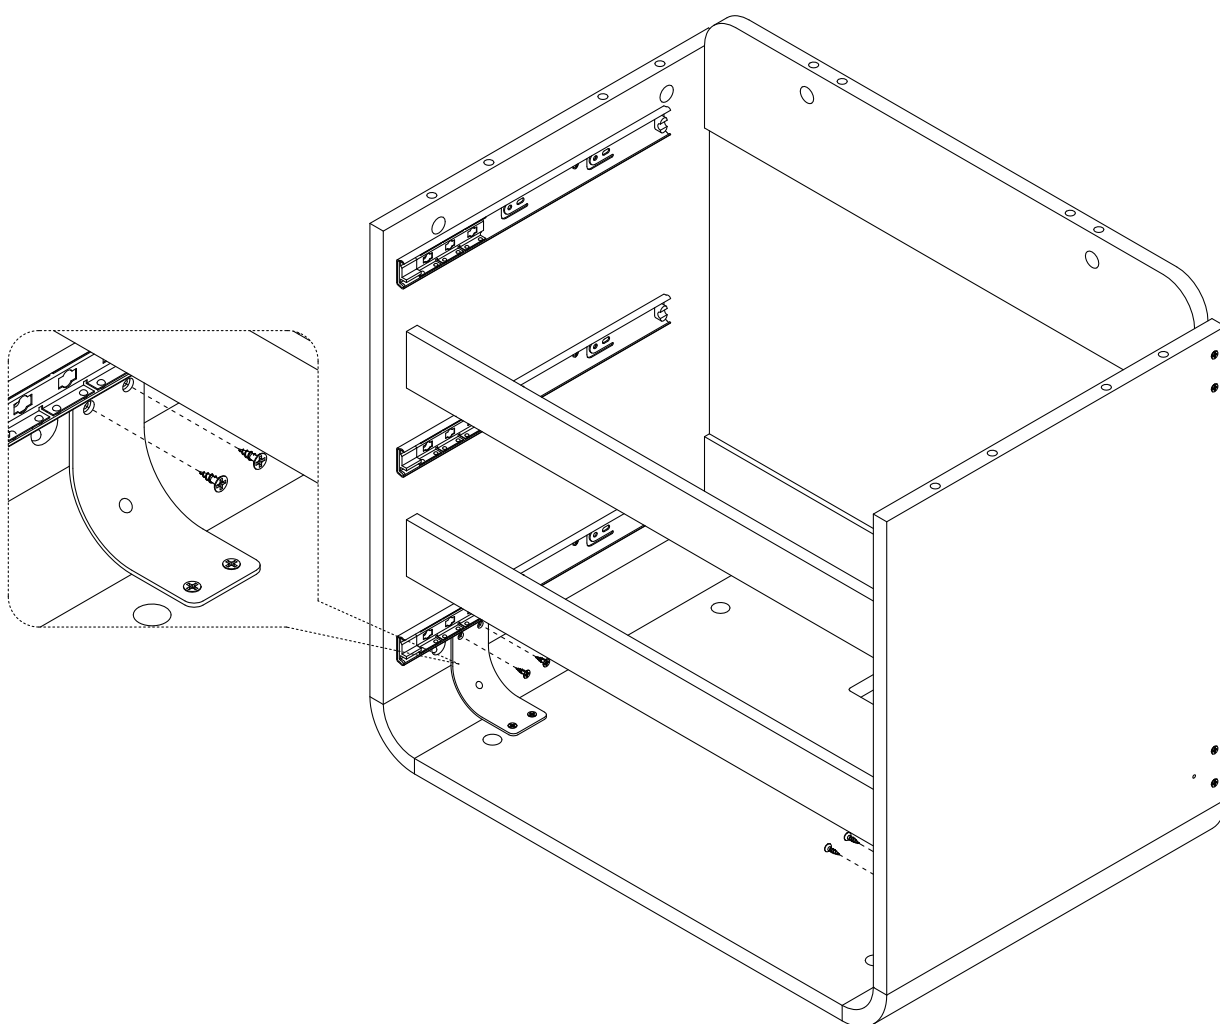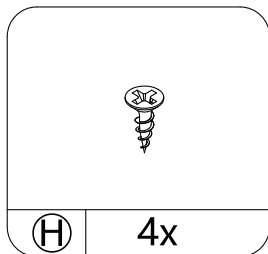




STEP 19

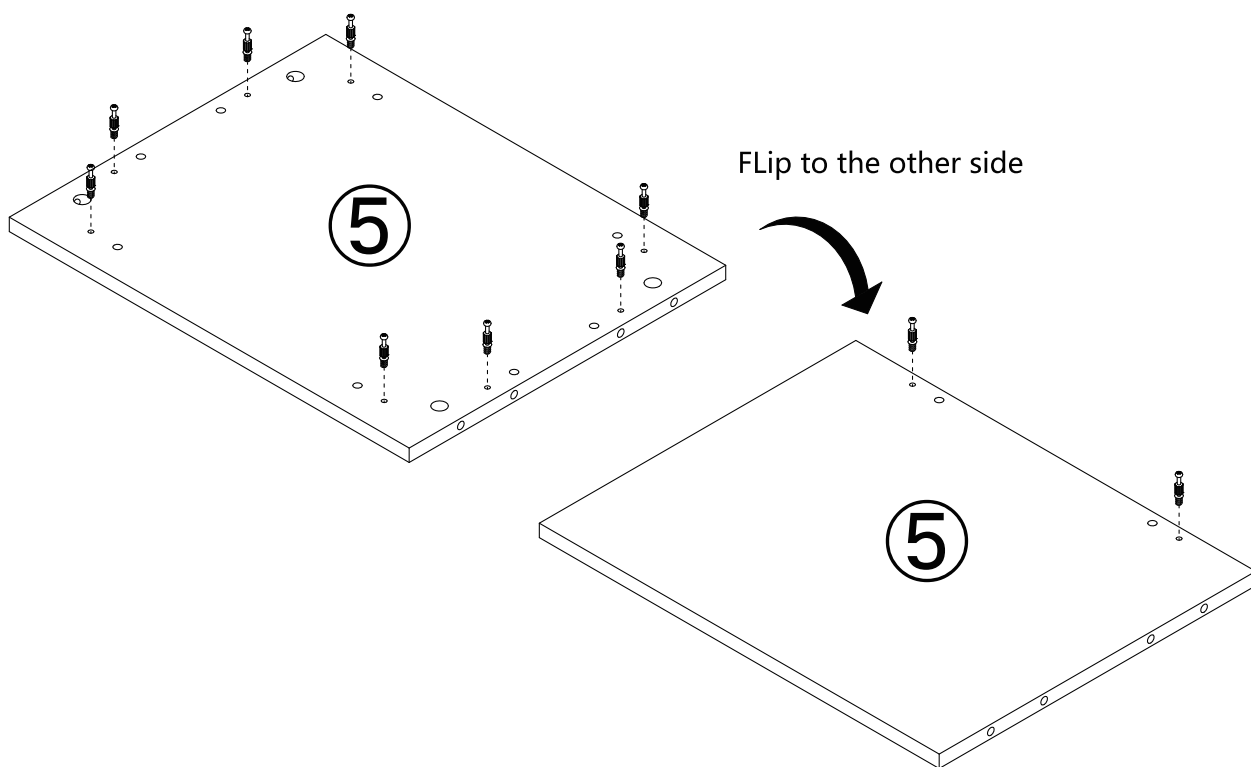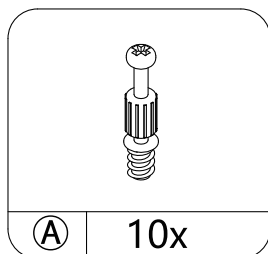



STEP 20

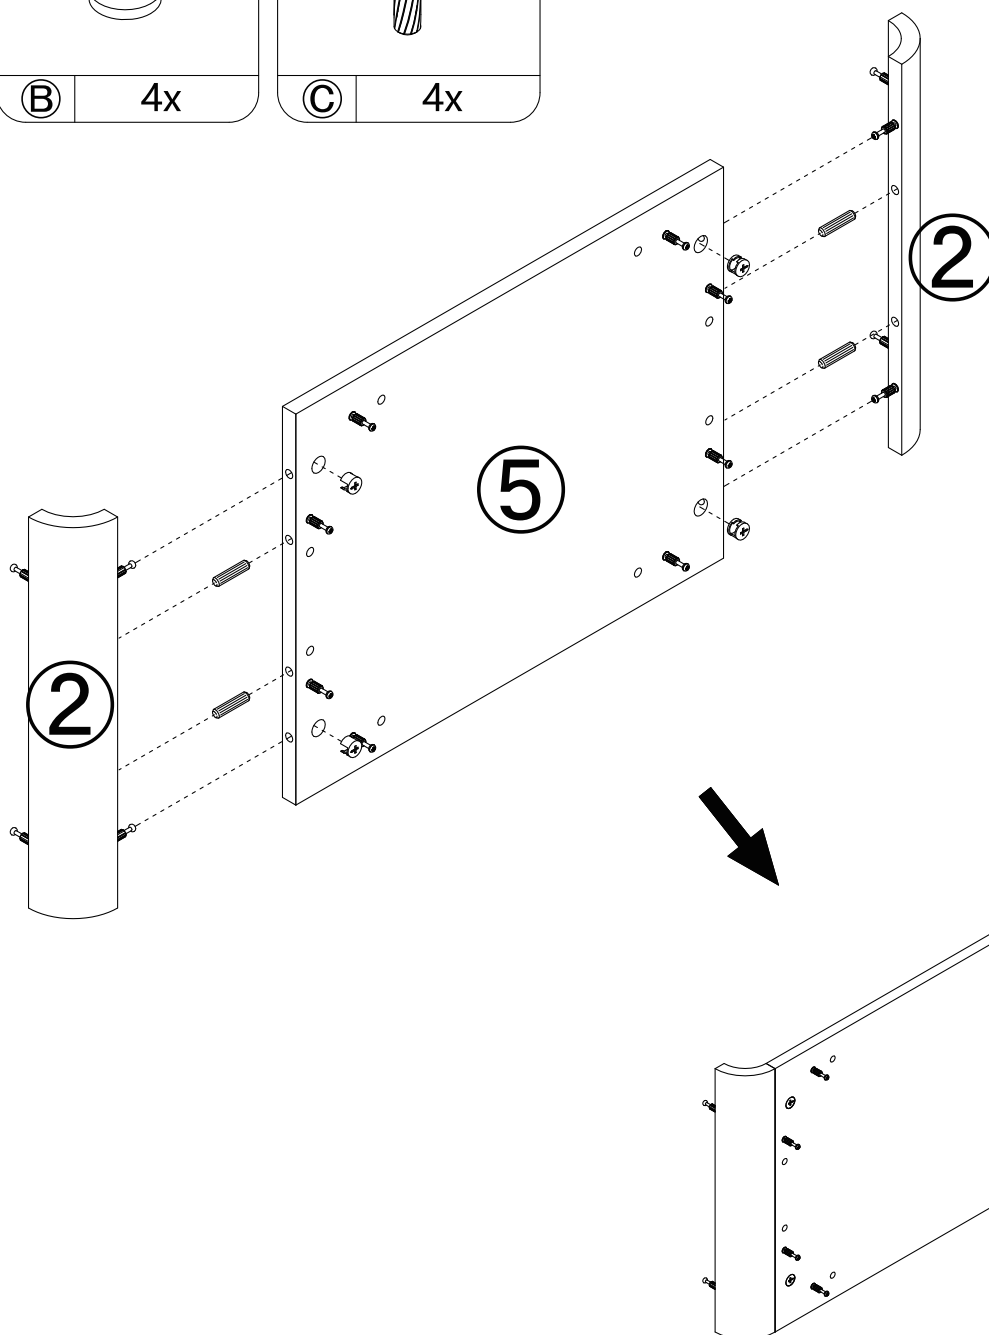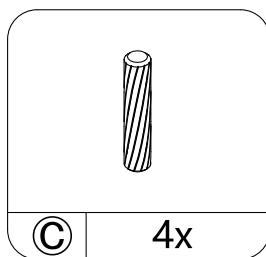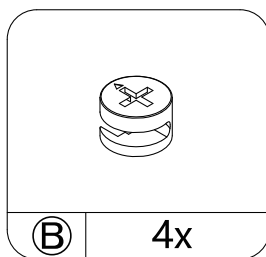


STEP 21

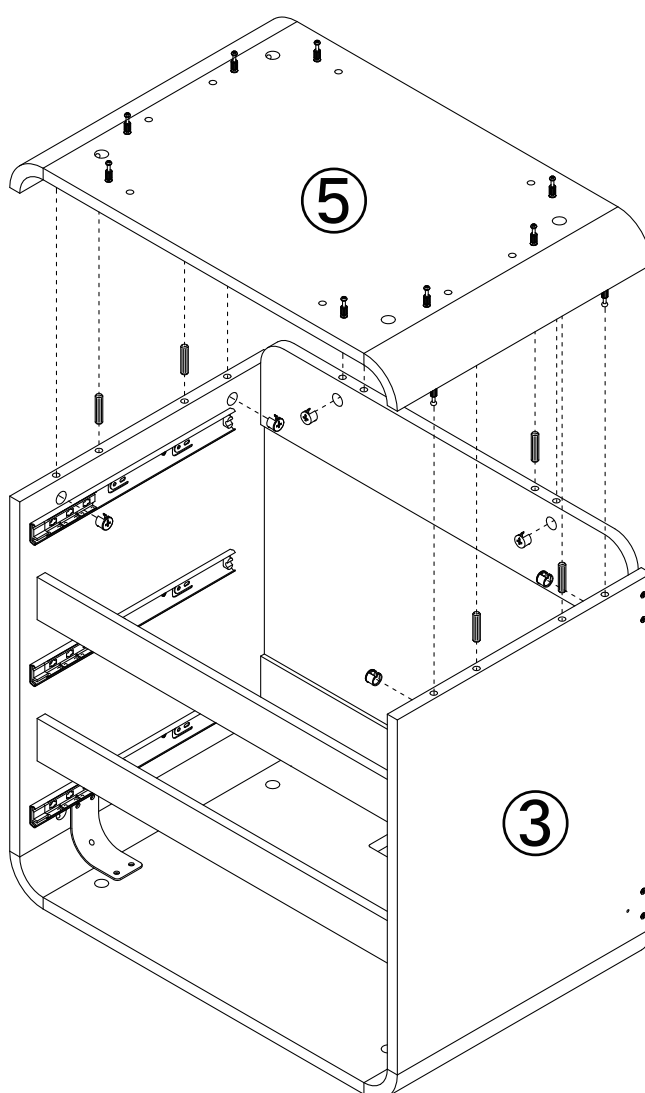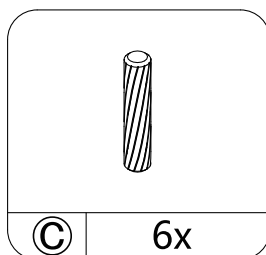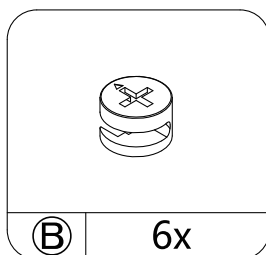


STEP 22

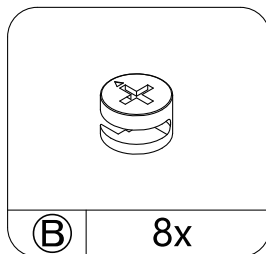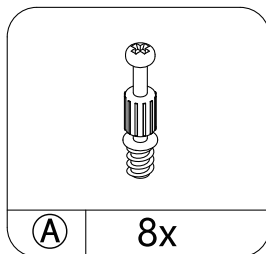




step1

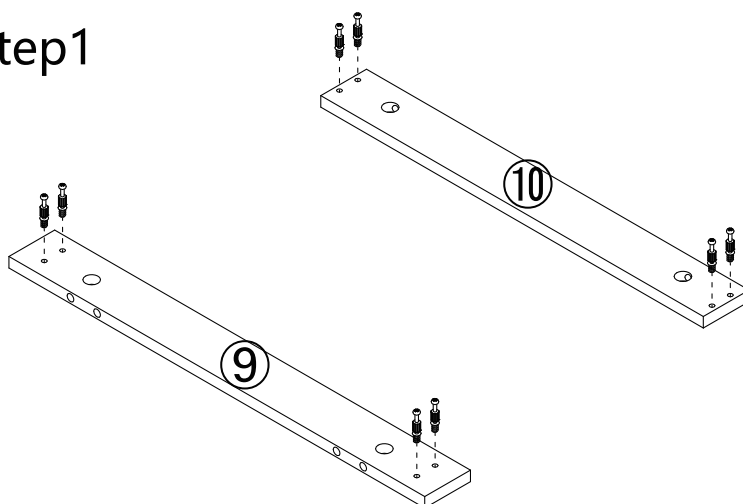

step2



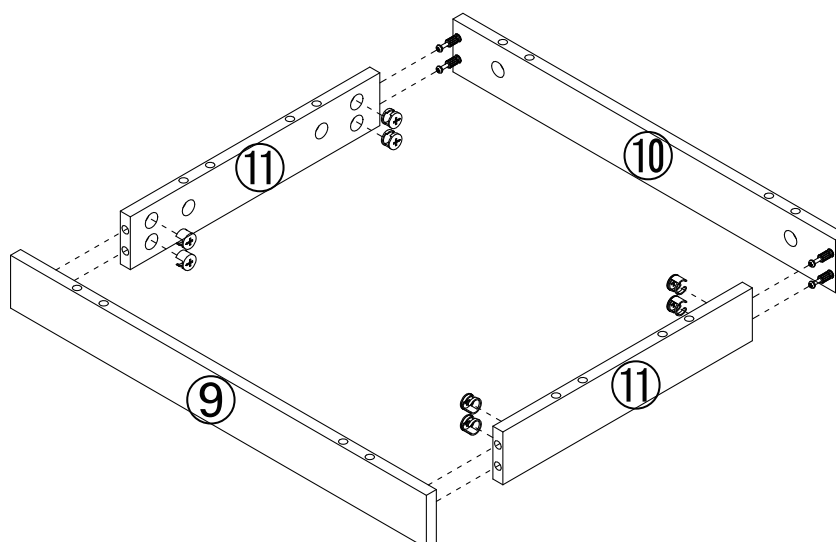


STEP 23

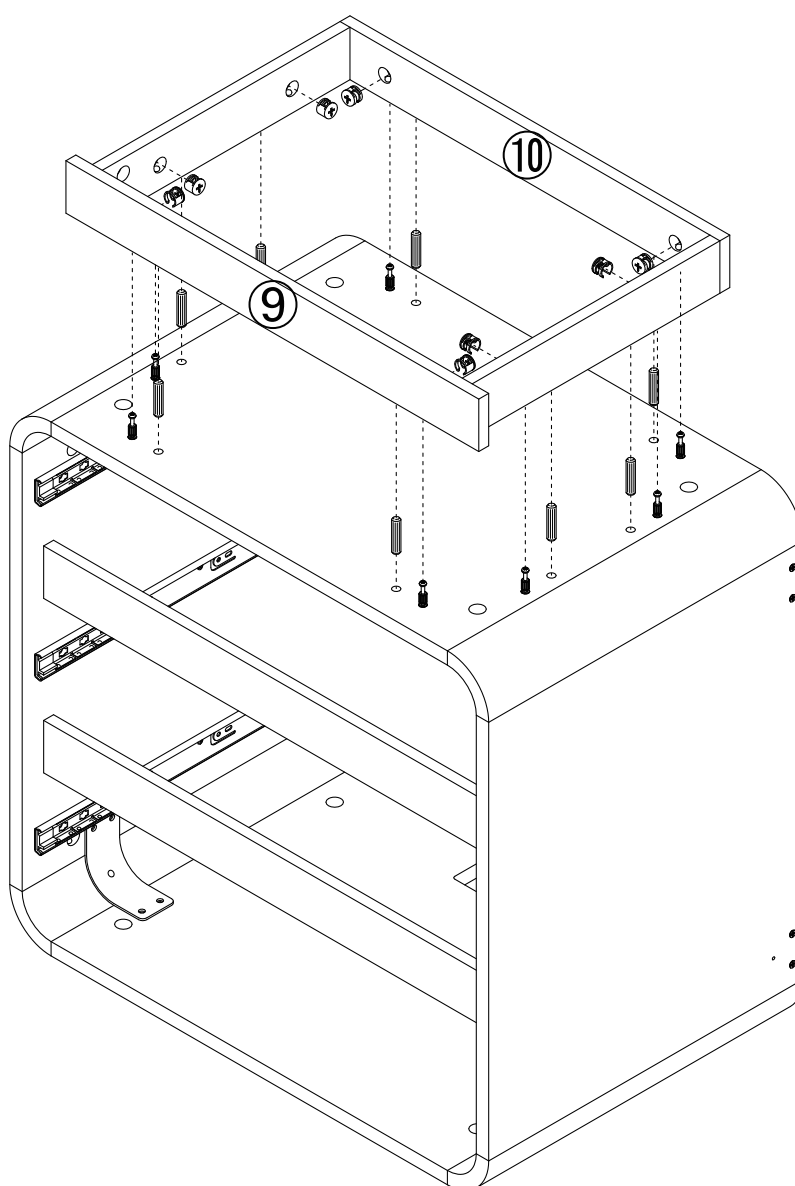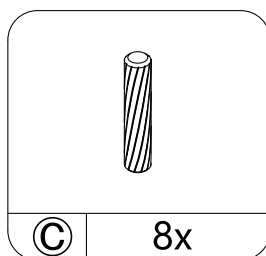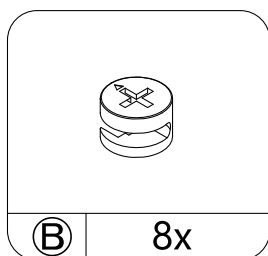



27

STEP 24

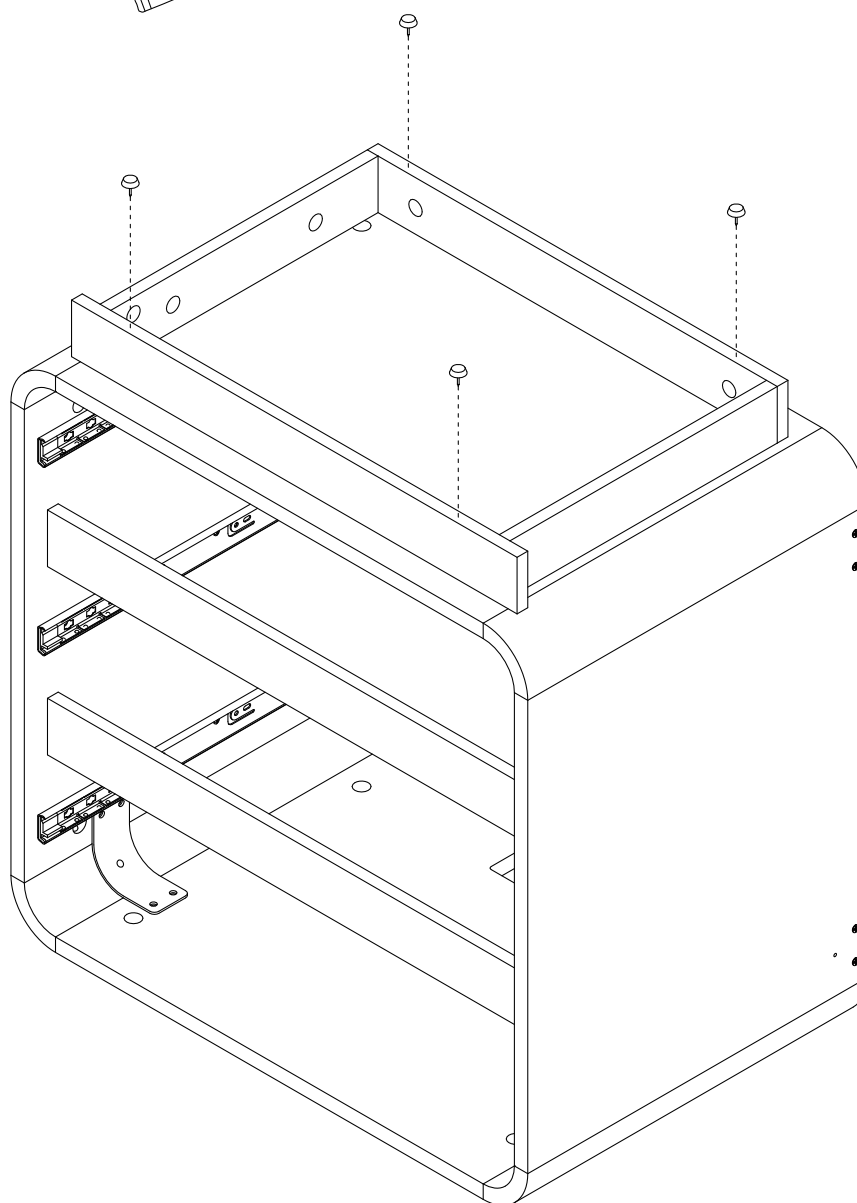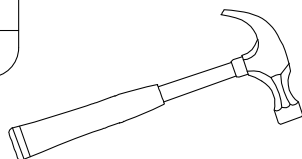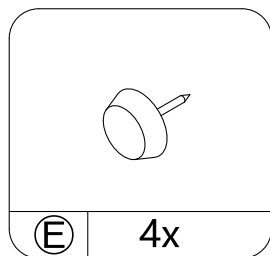


STEP 25


Once the slide rail is aligned, push it in with increased force.

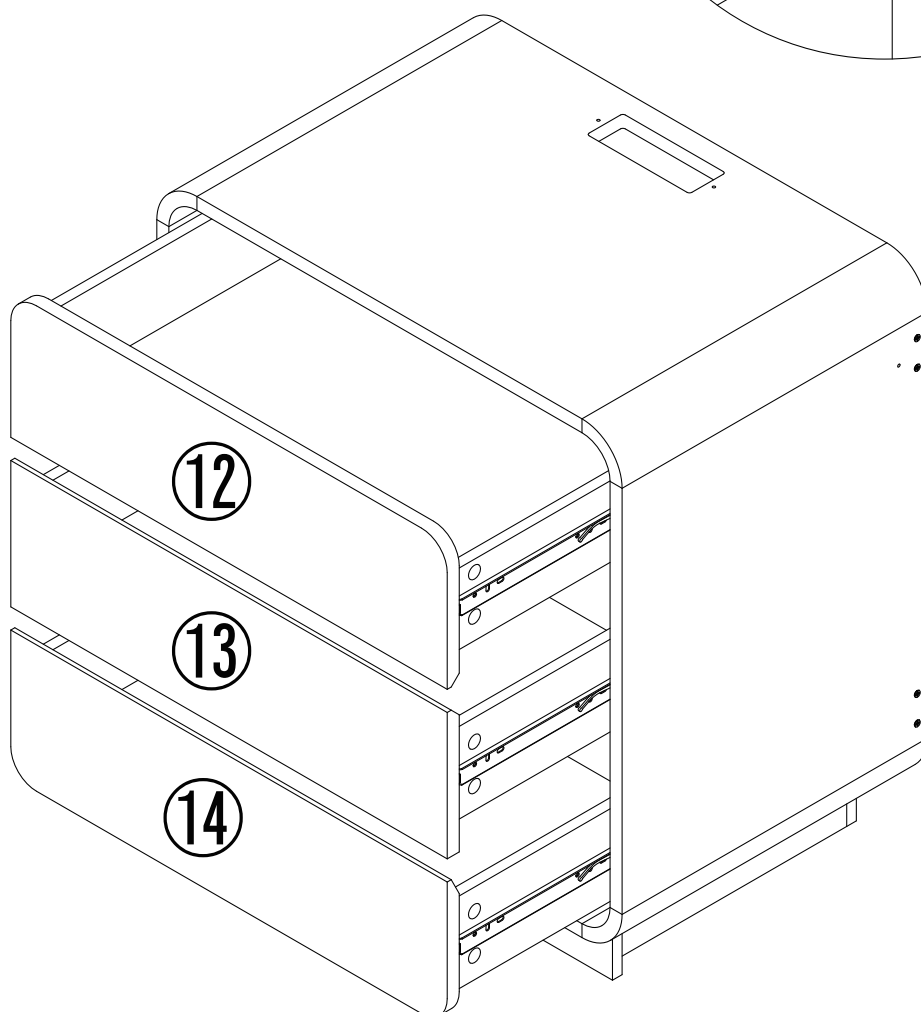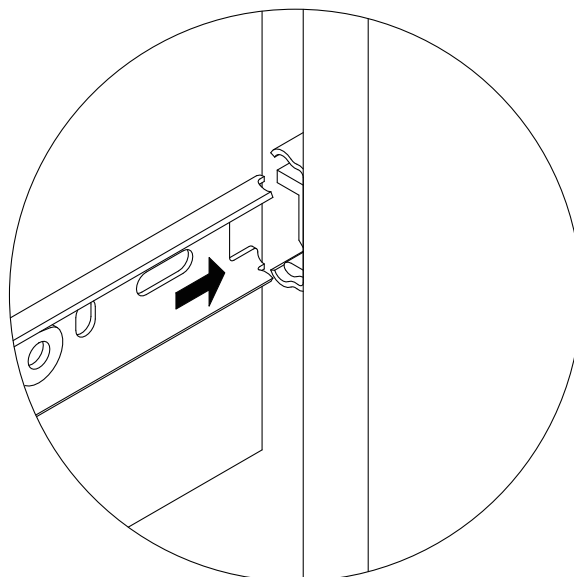




STEP 26

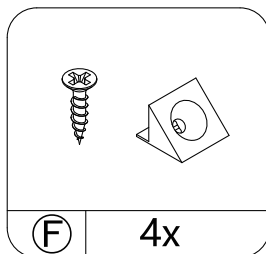

Note: The backboard buckle(number ⑤) must be installed. This can enhance the stability of the furniture.

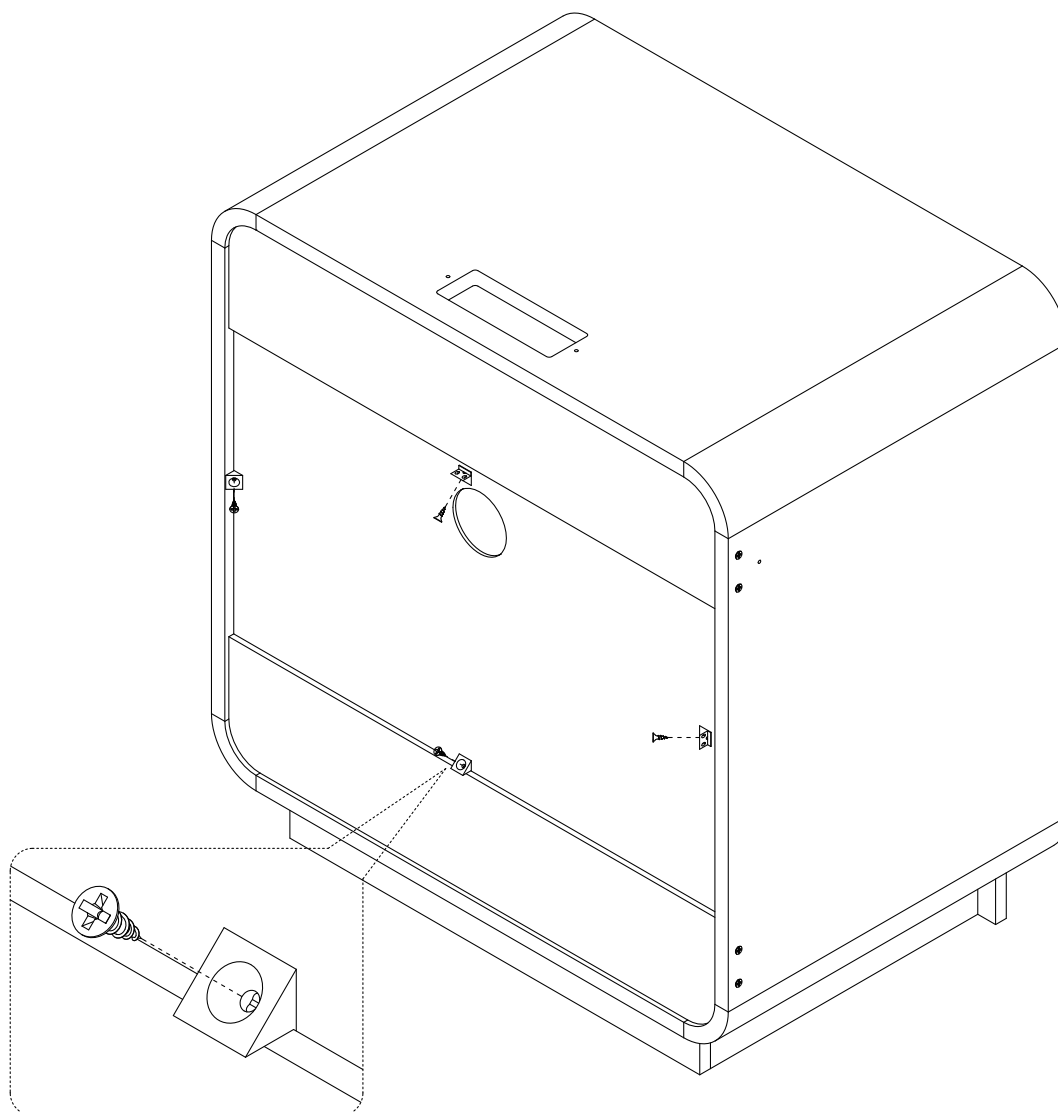

STEP 27

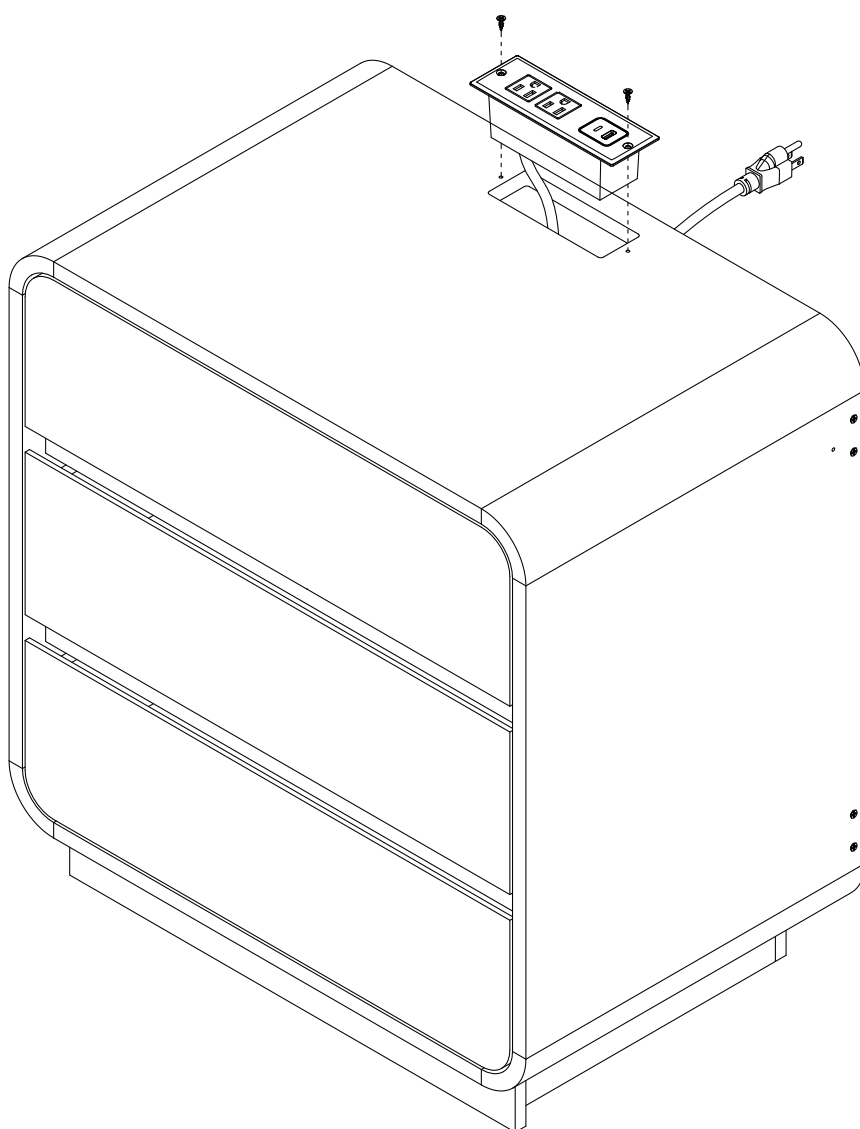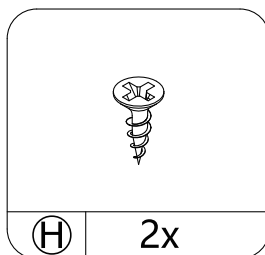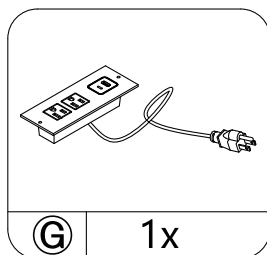

STEP 28

