
HONGMAO

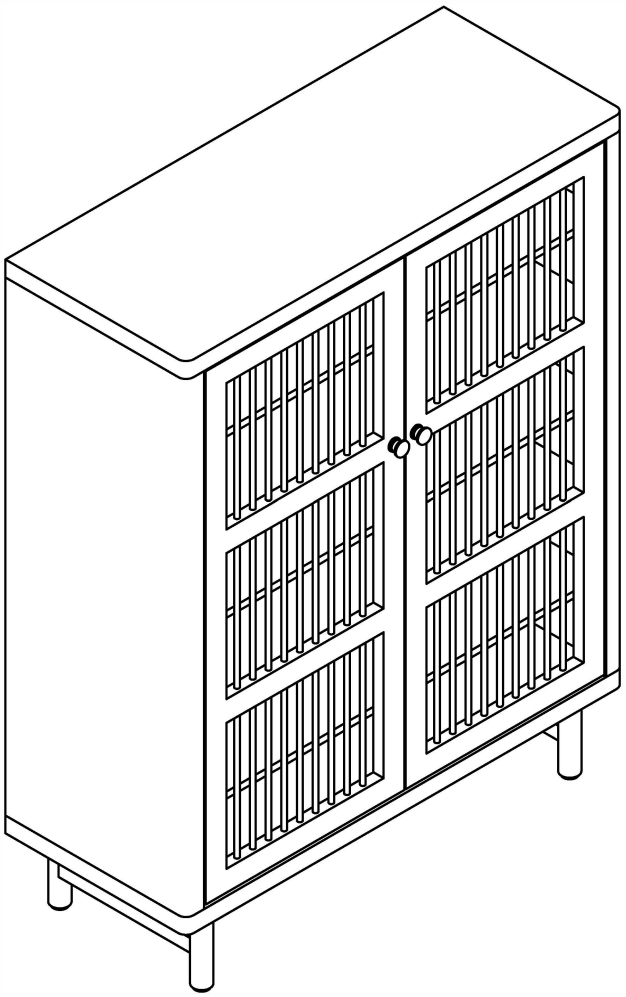

ITEM NO.HMGG0008

NOTE:

This brochure contains IMPORTANT safty info. Please read and keep for future reference.

01/18

MAINTAINANCE AND WARNING

1.Keep furniture away from heat sources.


2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).

3.Do not place furniture under direct sunlight,material will possibly fade over time.

4.Do not use on site dry cleaning machine.Children should not climb or jump on the furniture.

5.Do not write on furniture that is not protectedby a padded barrier.

6.Not for commercial use,only for residential use.

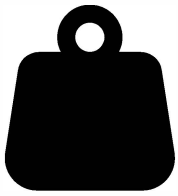


Weight Limitation

110 LBS

02/18


EXPLOSIVE VIEW

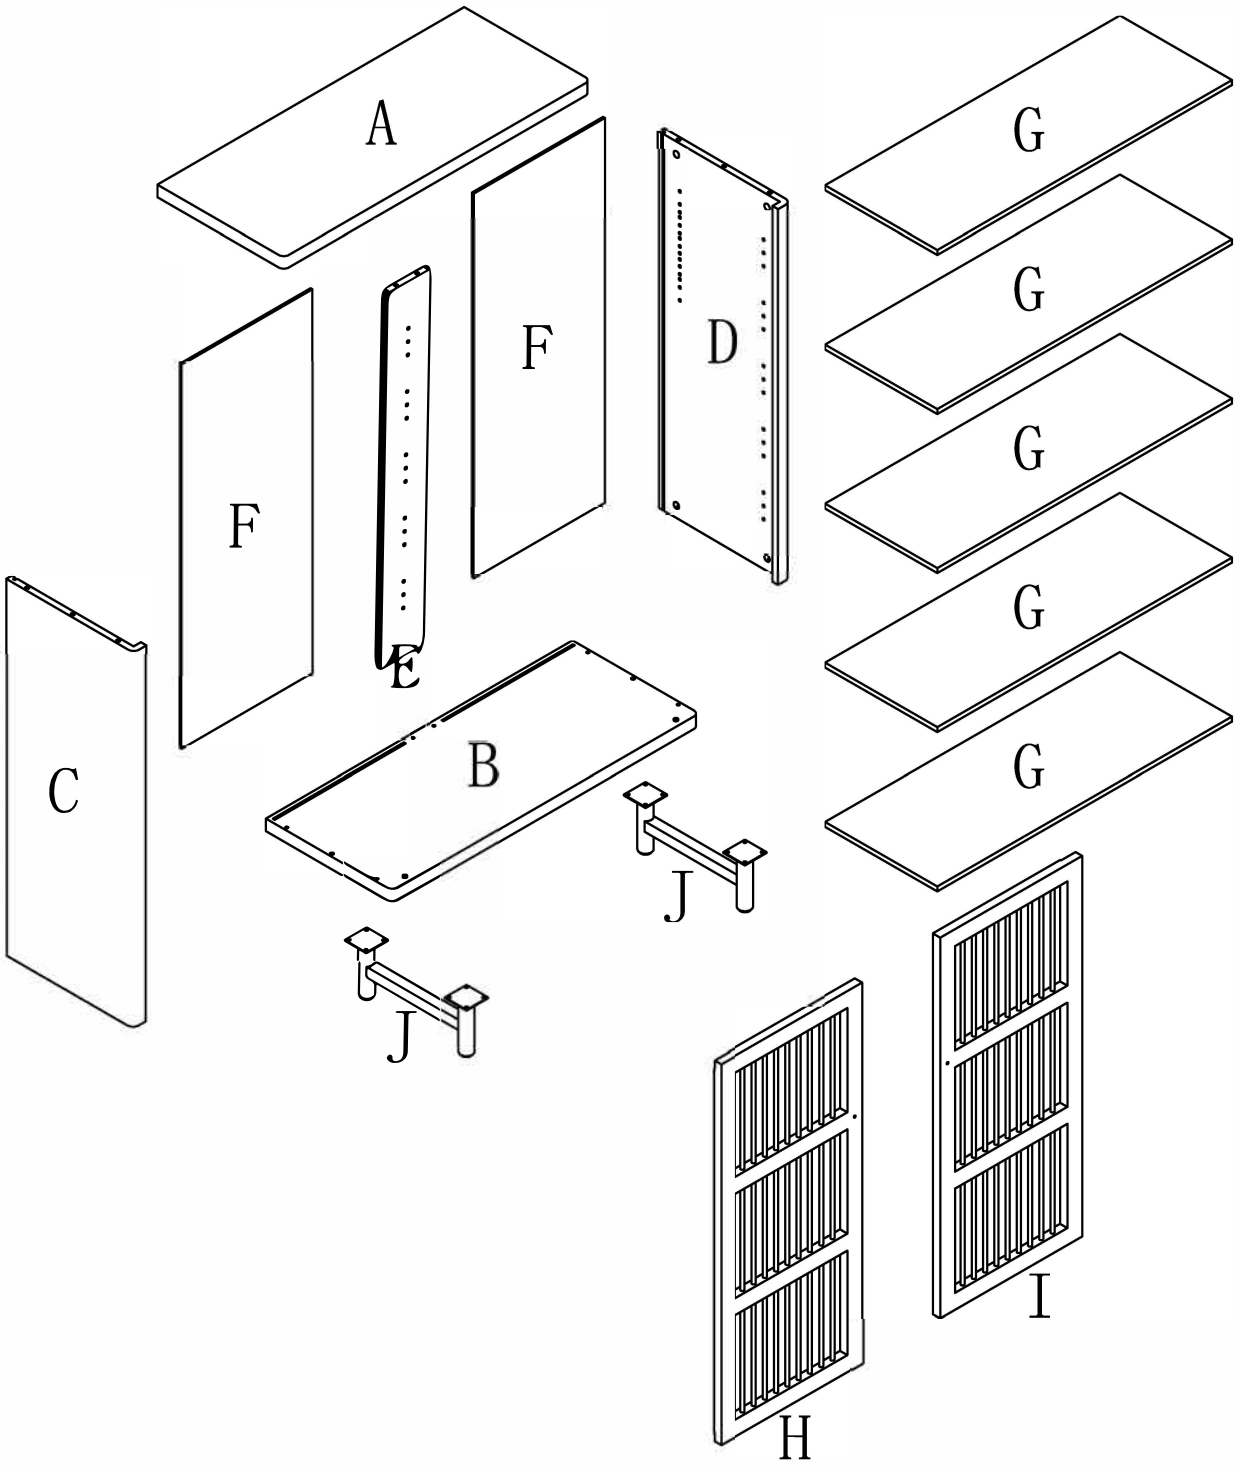




PARTS LIST


A	x1

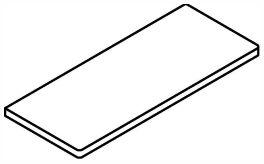


B	x1

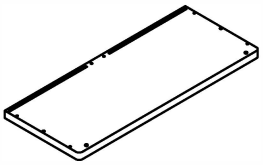

C	x1



D	x1




E	x1




F	x2




G	x5

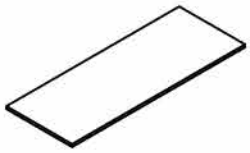


H	x1




I	x1





J	x2

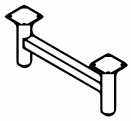



HARDWARE LIST

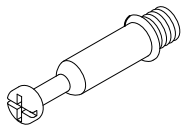
#1	x12
	

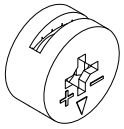
#2	x12
	


#3	x4
	ϕ8*30mm

#4	x16
	ϕ8#*3/4"

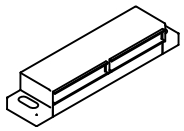
#5	x1
	

#6	x4
	ϕ3*14mm*7#

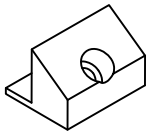
#7	x12
	


#8	x16
	ϕ3*16mm*7#

#9	x25
	


#10	x2
	

#11	x2
	ϕ4*19mm
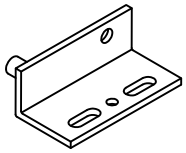
#12	x2
	
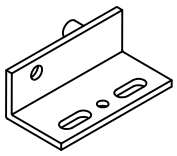
#13	x2
	


#14	x8
	ϕ3.5*14mm*7#

#15	x4
	


#16	x4
	


#17	x4
	ϕ3.5*35mm*7#


#18	x2
	

#19	x1
	

HARDWARE SPARE LIST
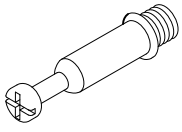
#1	x1
	
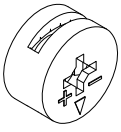
#2	x1
	


#4	x1
	ϕ8#*3/4"

05/18

ASSEMBLY INSTRUCTIONS

STEP-1

1.Insert 2x leg (J) into the designated holes on Part(B).Tighten 16x screw (#4) using Screwdriver(#19).

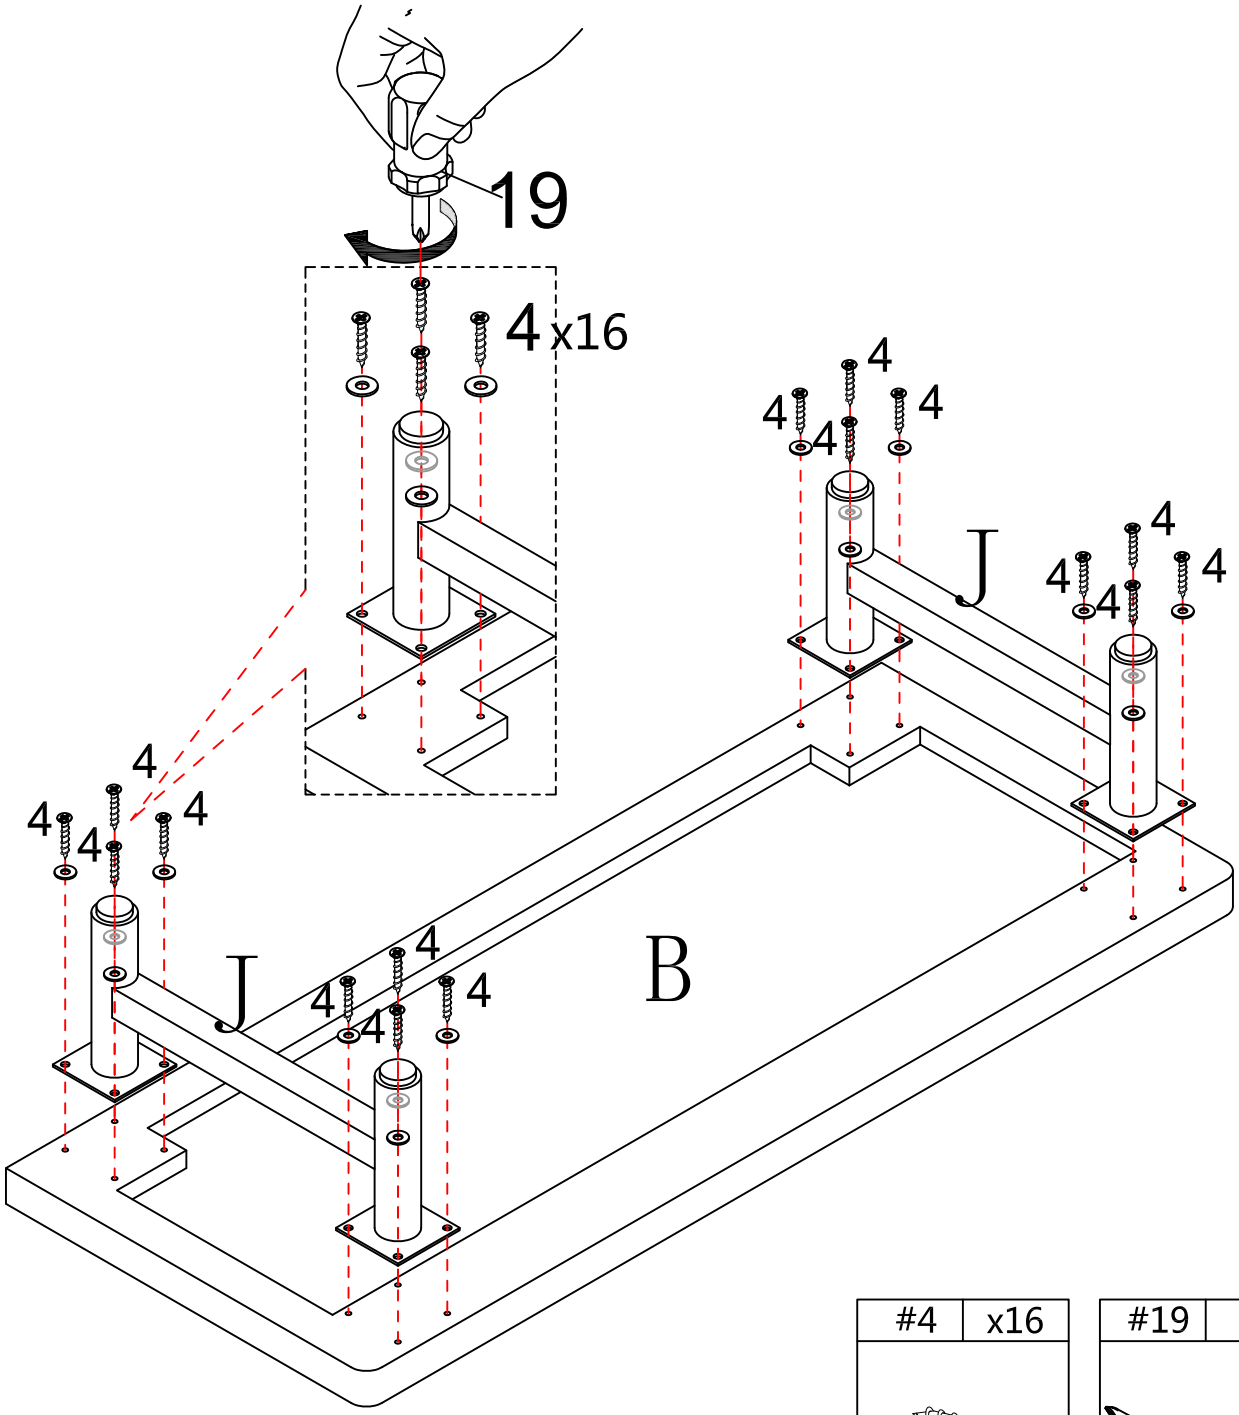

#4	x16
ϕ8#*3/4"	

#19	x1


06/18

ASSEMBLY INSTRUCTIONS

STEP-2

1.Insert 2x Bolt (#1) into the designated holes on Part(B).Connect part(E) with part (B) Tighten 2x Bolt (#1) using Screwdriver(#19).

2.Insert 2x Cam locks (#2) into the designated holes on Part (C).using Screwdriver (#19) to lock them.

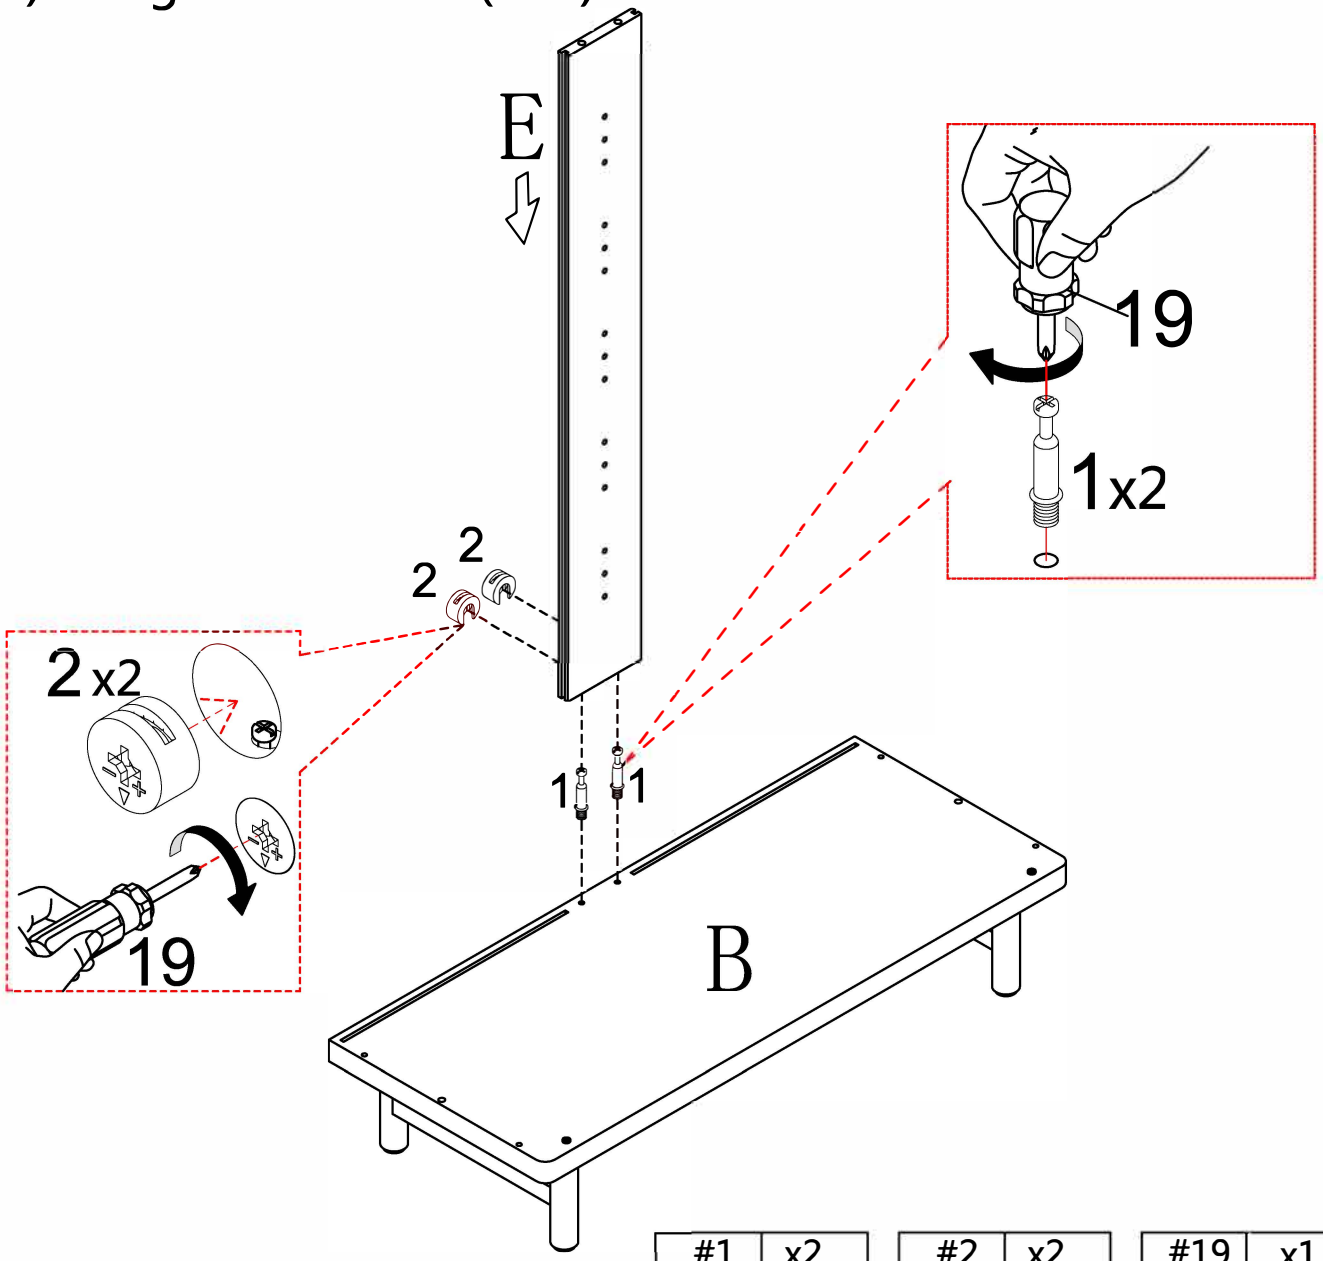

#1	x2

#2	x2

#19	x1

07/18


ASSEMBLY INSTRUCTIONS

STEP-3

1.Insert 4x Bolt (#1) into the designated holes on Part(B).Tighten 4x Bolt (#1) using Screwdriver(#19).

2.Insert 2x Dowels (#2) into the designated holes on Part (B) and then connect Part (C&B&D).

3.Insert 4x Cam locks (#2) into the designated holes on Part (C&D).using Screwdriver (#19) to lock them.

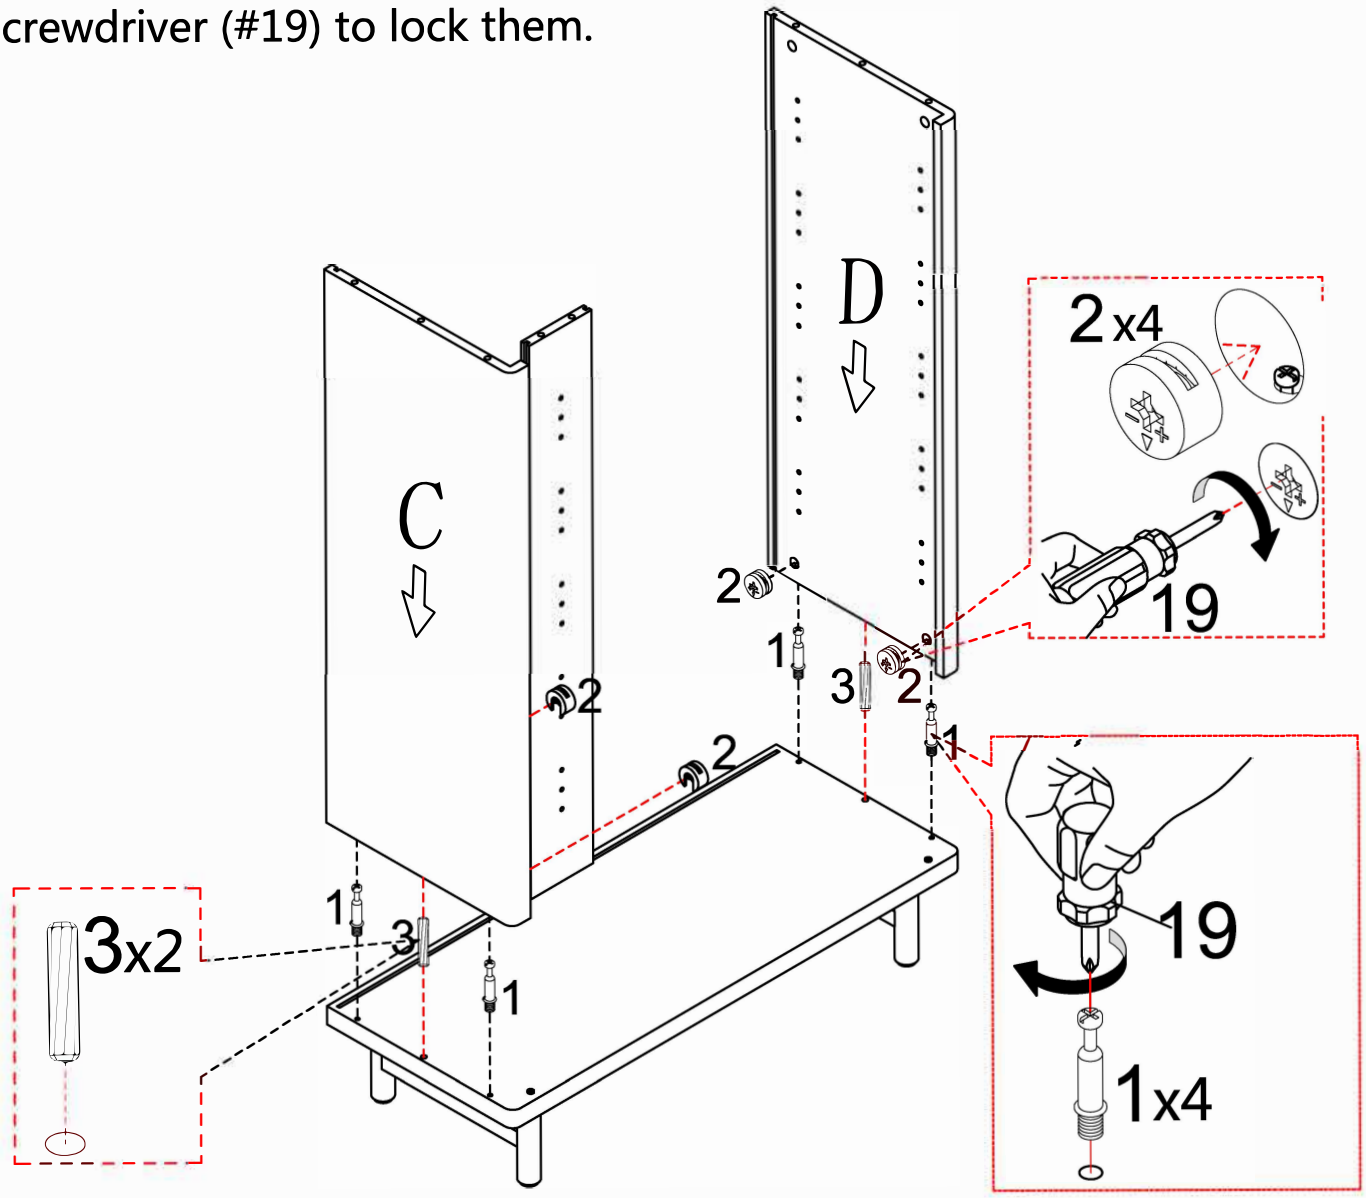

#1	x4

#2	x4

#3	x2
ø8*30mm	


#19	x1

08/18

ASSEMBLY INSTRUCTIONS

STEP-4


1.Slide 2x Part (F) into the groove in part (C&D) make sure they are also in groove in part (B).

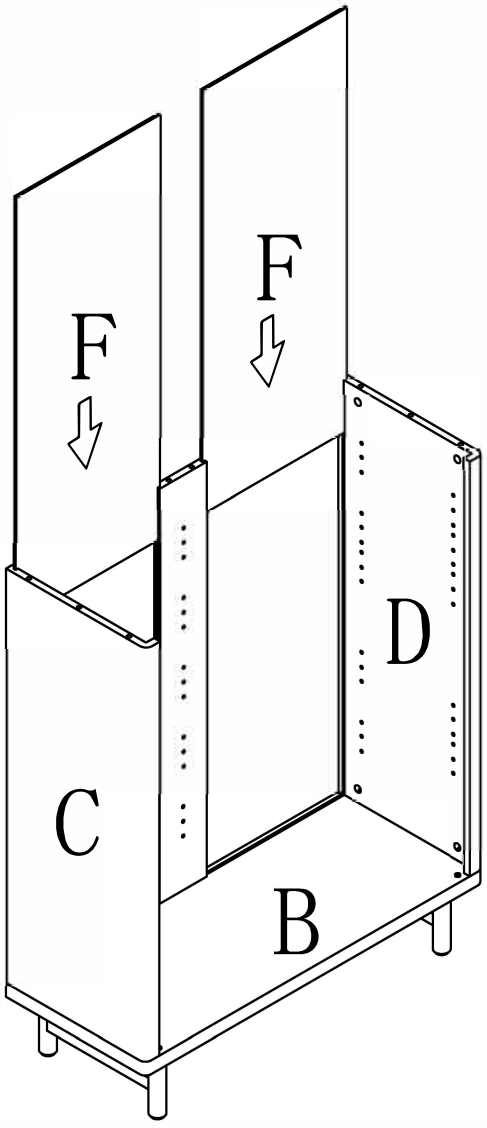



ASSEMBLY INSTRUCTIONS


STEP-5

1.Insert 1x Magnetic catch (#5) on Part (A), using 2x Screw (#6) to lock it. tighten screw (#6) using screwdriver (#19).

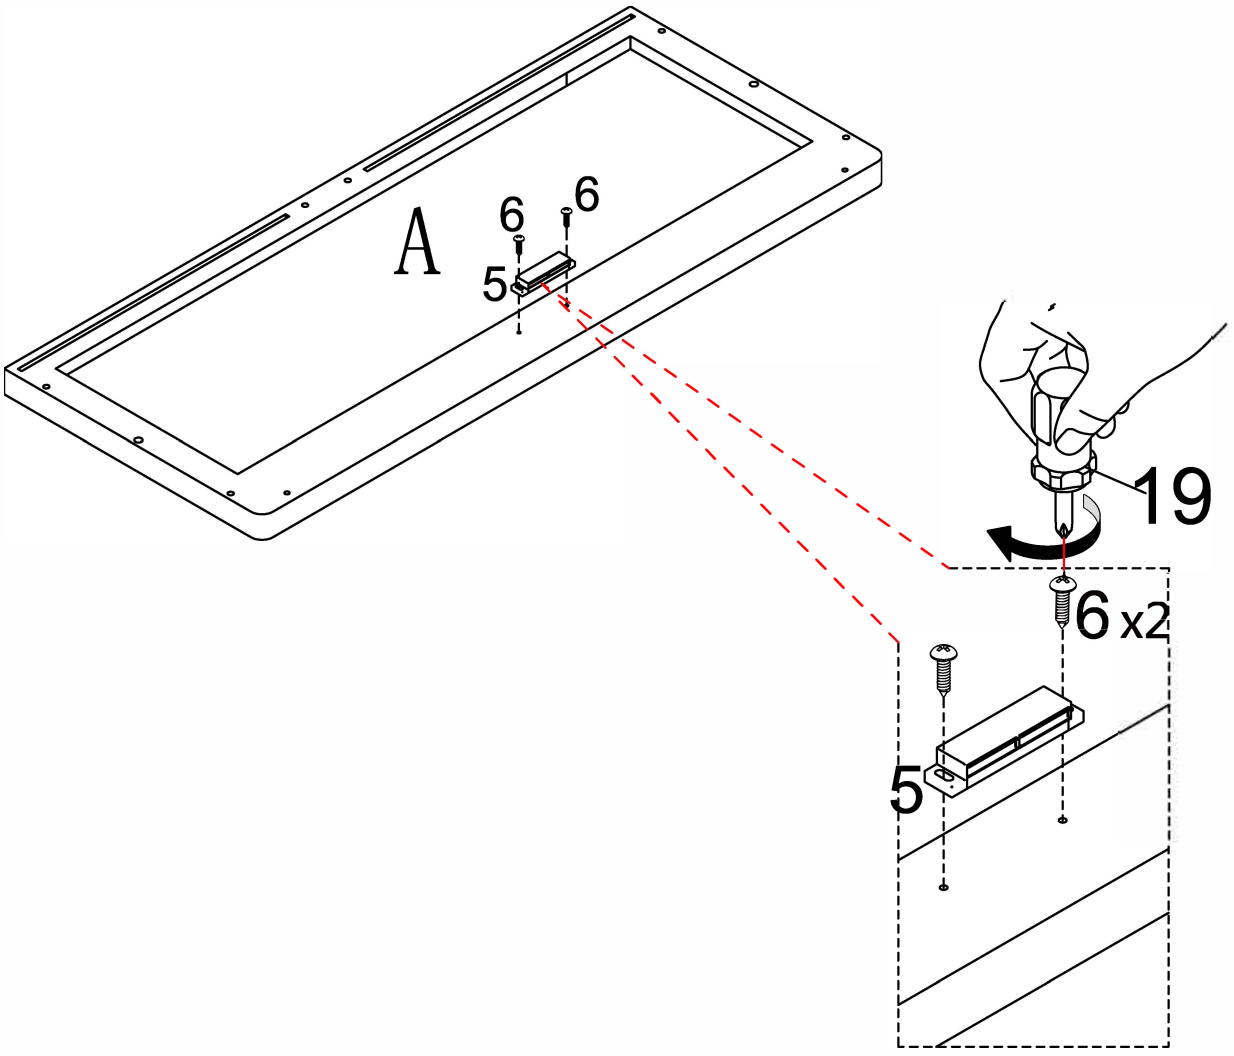
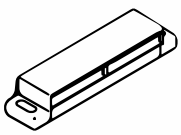
#5	x1
	


#6	x2
	
ø3*14mm*7#	

#19	x1
	

ASSEMBLY INSTRUCTIONS

STEP-6

1.Insert 6x Bolt (#1) into the designated holes on the top of Part(C&D&F). Tighten 4x Bolt (#1) using Screwdriver(#19).
2.Insert 2x Dowels (#2) into the designated holes on Part (C&D) and then connect Part (A) with them.
3.Insert 6x Cam locks (#2) into the designated holes on Part (C&D).using Screwdriver (#19) to lock them.

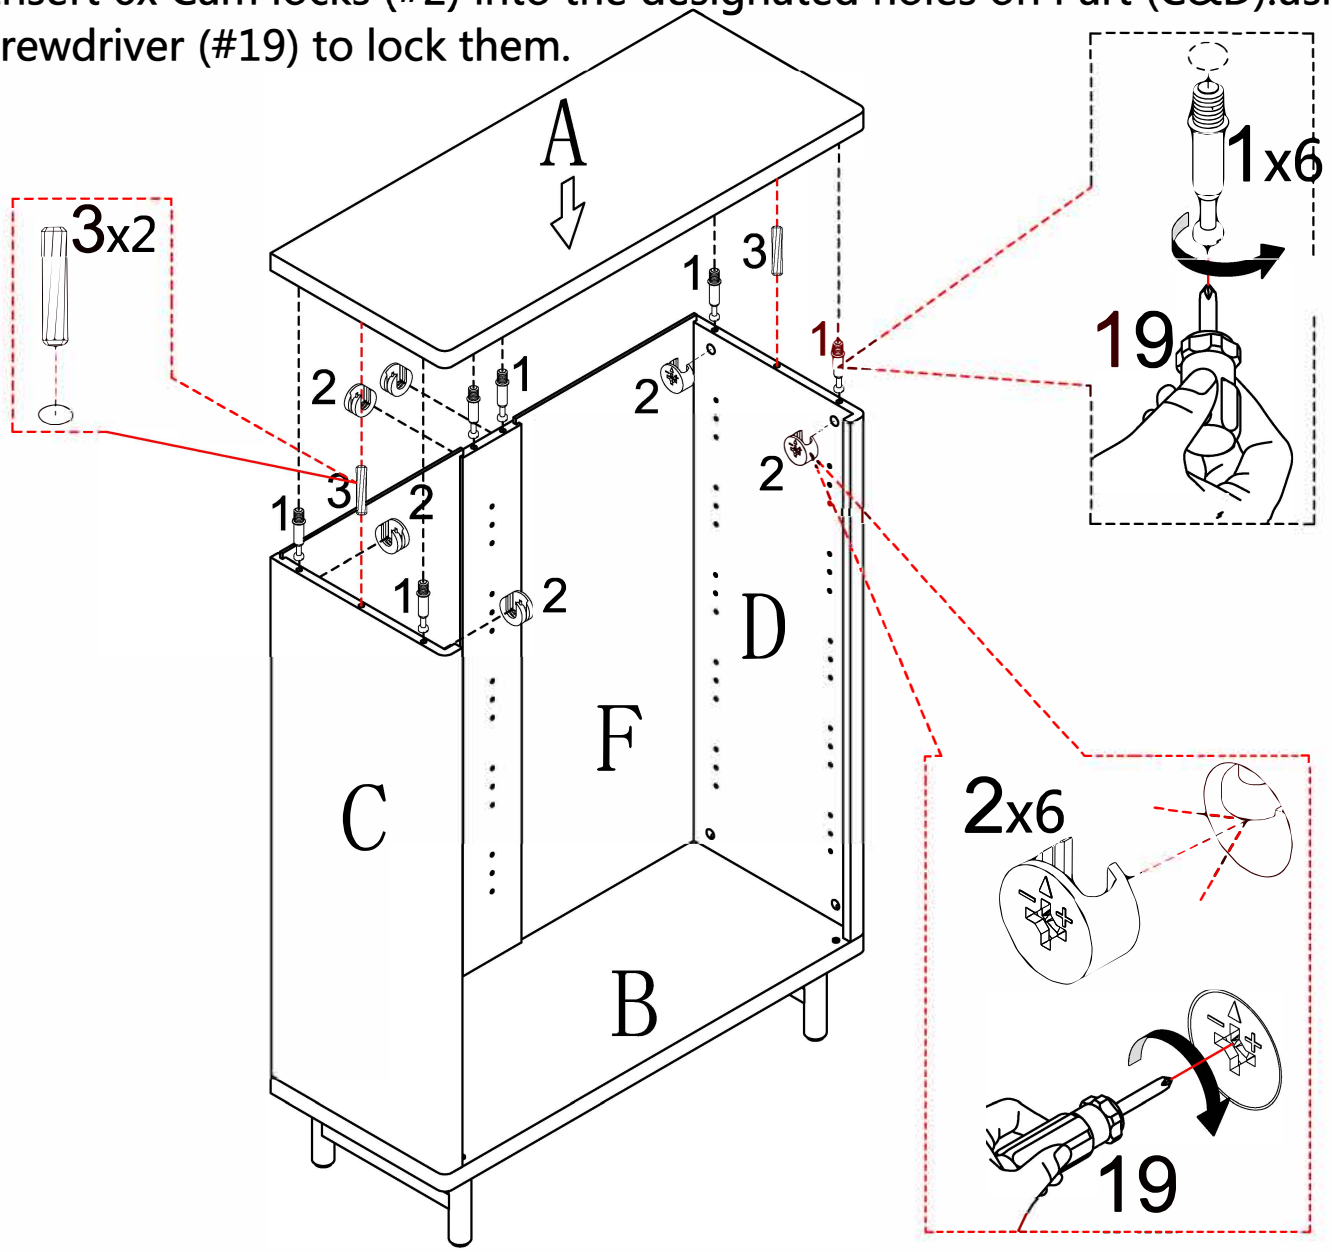

#1	x6

#2	x6

#3	x2
ø8*30mm	


#19	x1

ASSEMBLY INSTRUCTIONS

STEP-7

1.Insert 12x Part (#7) on Part (F), using 12x Screw (#8) to lock it. tighten screw (#8) using screwdriver (#19).

2.Insert 2x Part (#15) on the top of Part (A) and using 2x screw (#8) to lock them.

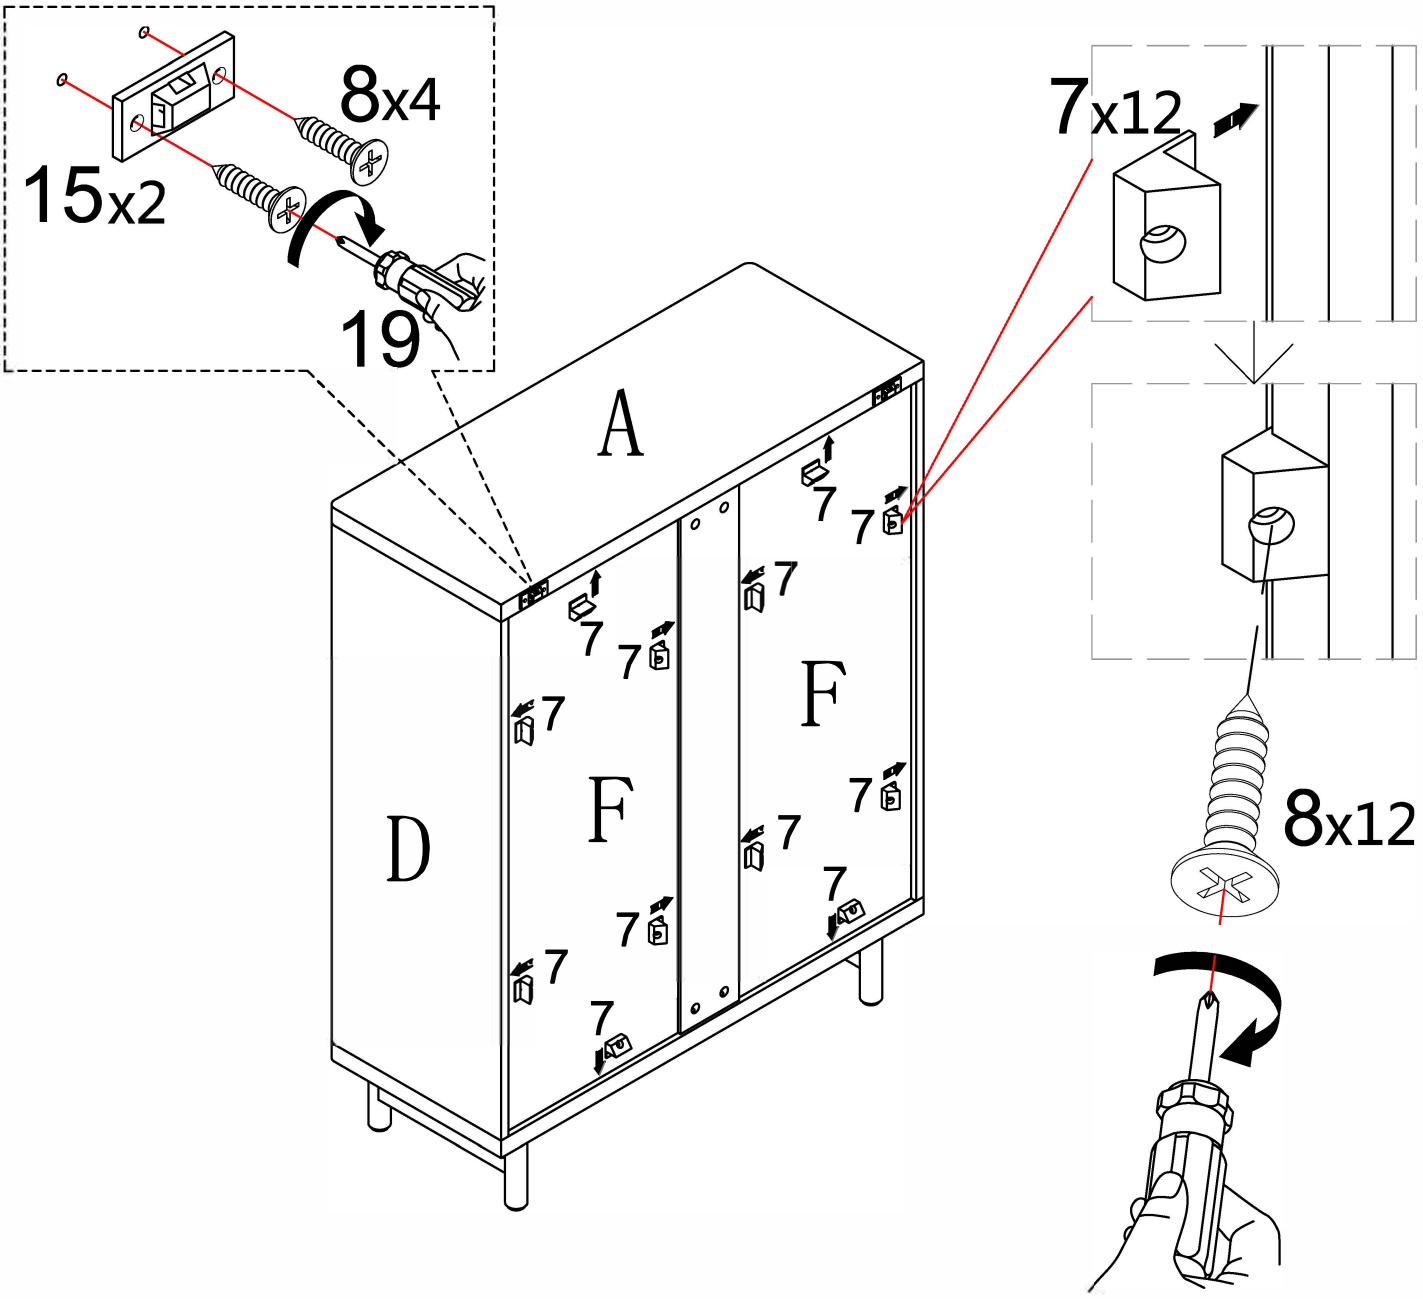

#7	x12

#8	x16
ϕ3*16mm*7#	


#15	x2

#19	x1


ASSEMBLY INSTRUCTIONS

STEP-8


1.Push 25x Shelf holder (#9) into the matching holes.
2.place 5x Part (G) on each top of shelf holder (#9).

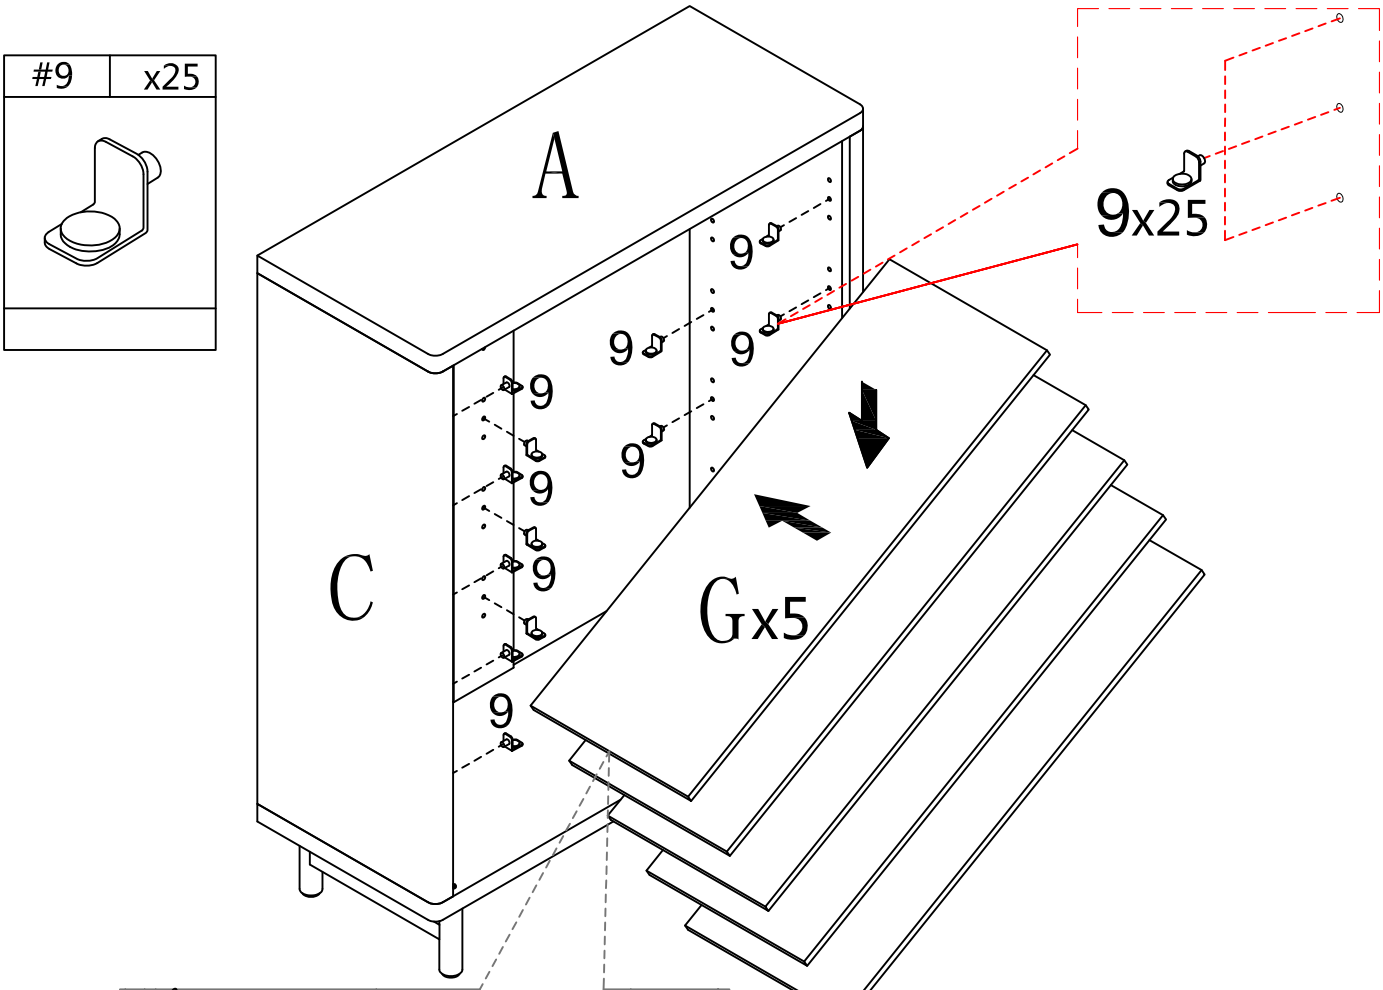

1:

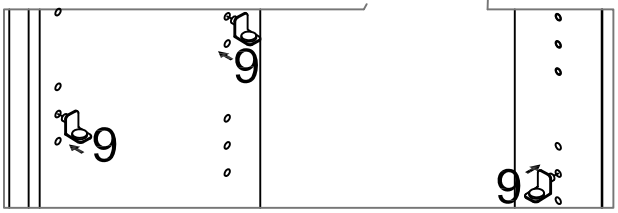

2:

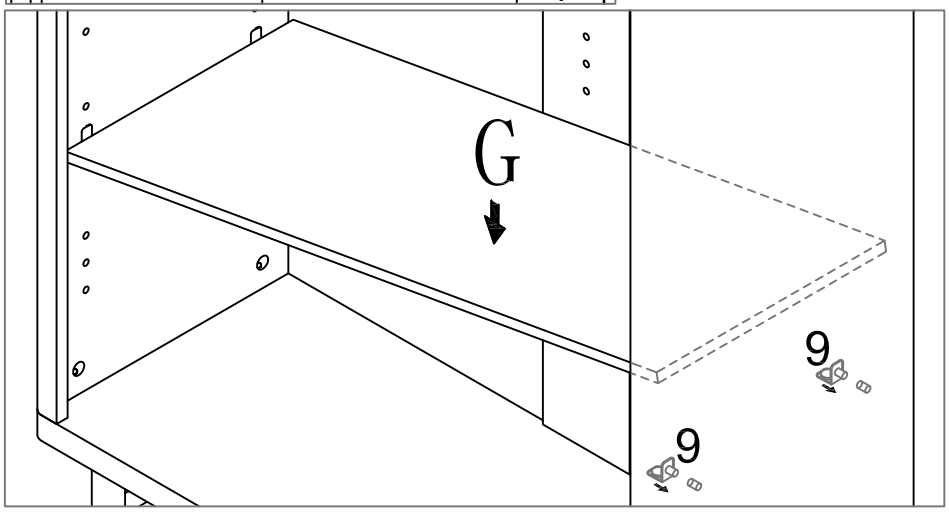


ASSEMBLY INSTRUCTIONS

STEP-9

1.Insert Part (#12) and Part (#13) on the door.and using Screw (#14) to tighten them.

2.Insert 2x Part (#10) into the designated holes on the door and using Screw to lock it.

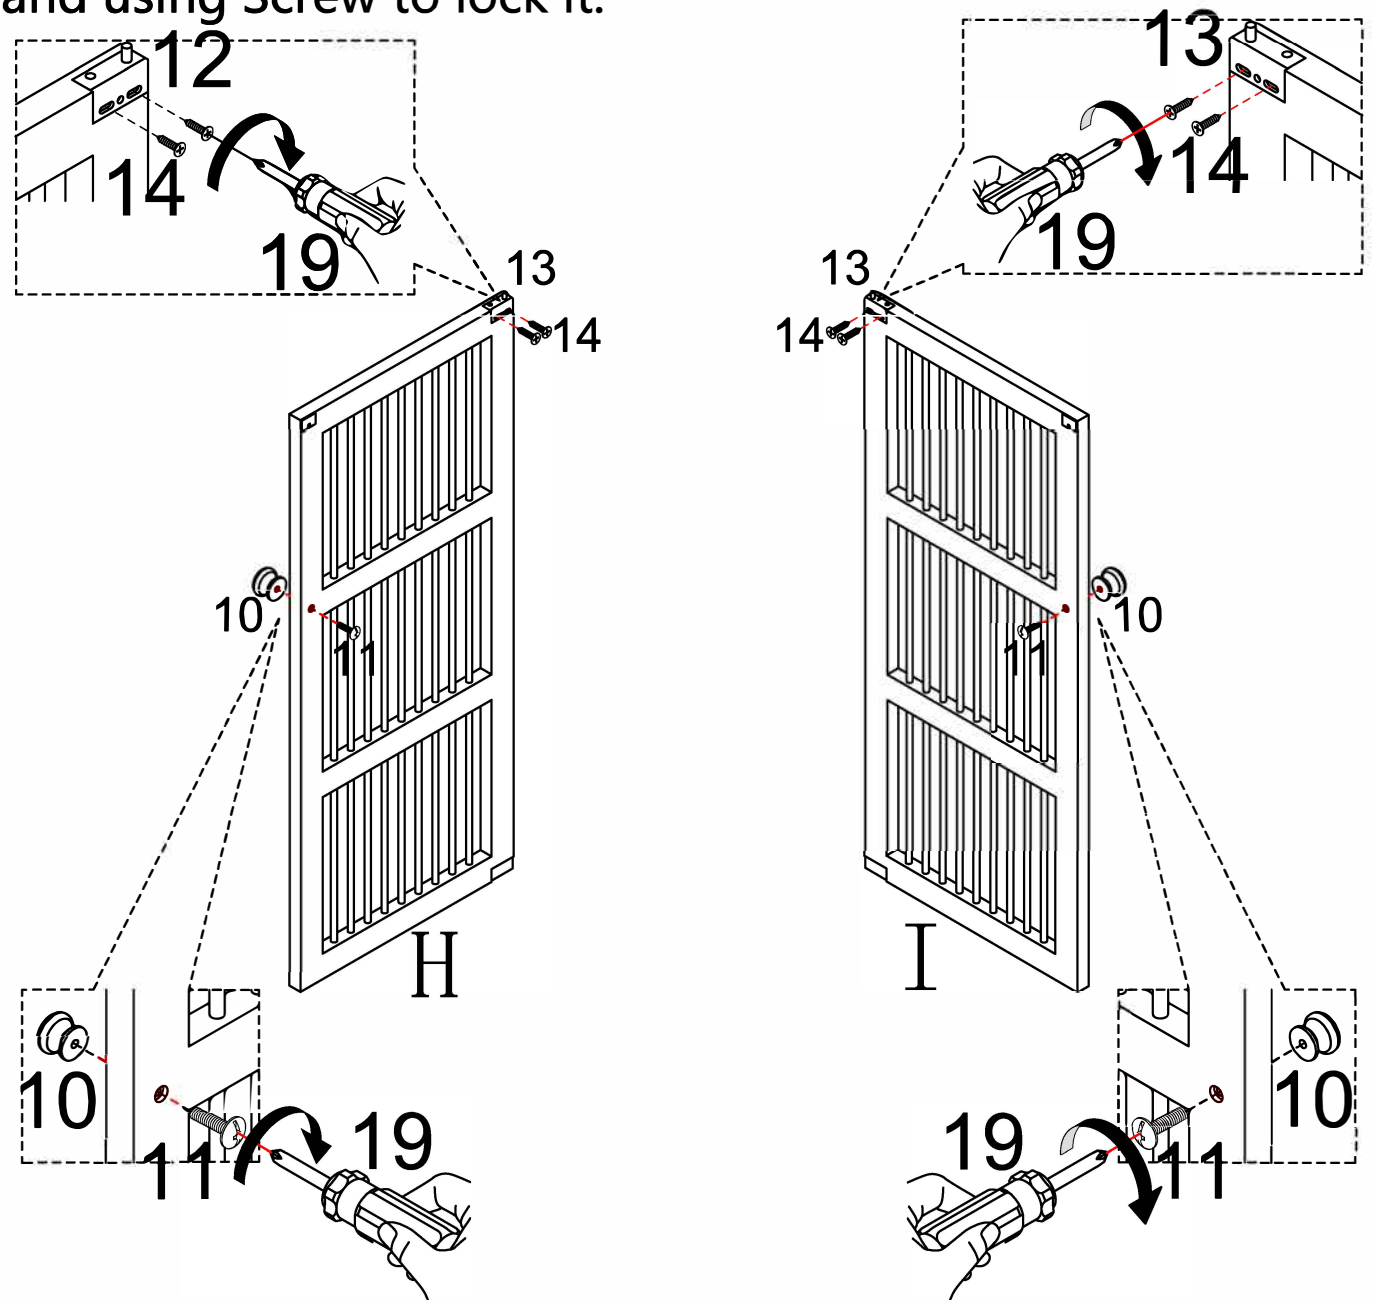





#10 x2	#11 x2	#12 x1	#13 x1	#14 x4	#19 x1
	ø4*19mm			ø3.5*14mm*7#	

ASSEMBLY INSTRUCTIONS

STEP-10

1.Insert Part (#12) and Part (#13) on the door.and using Screw (#14) to tighten them.

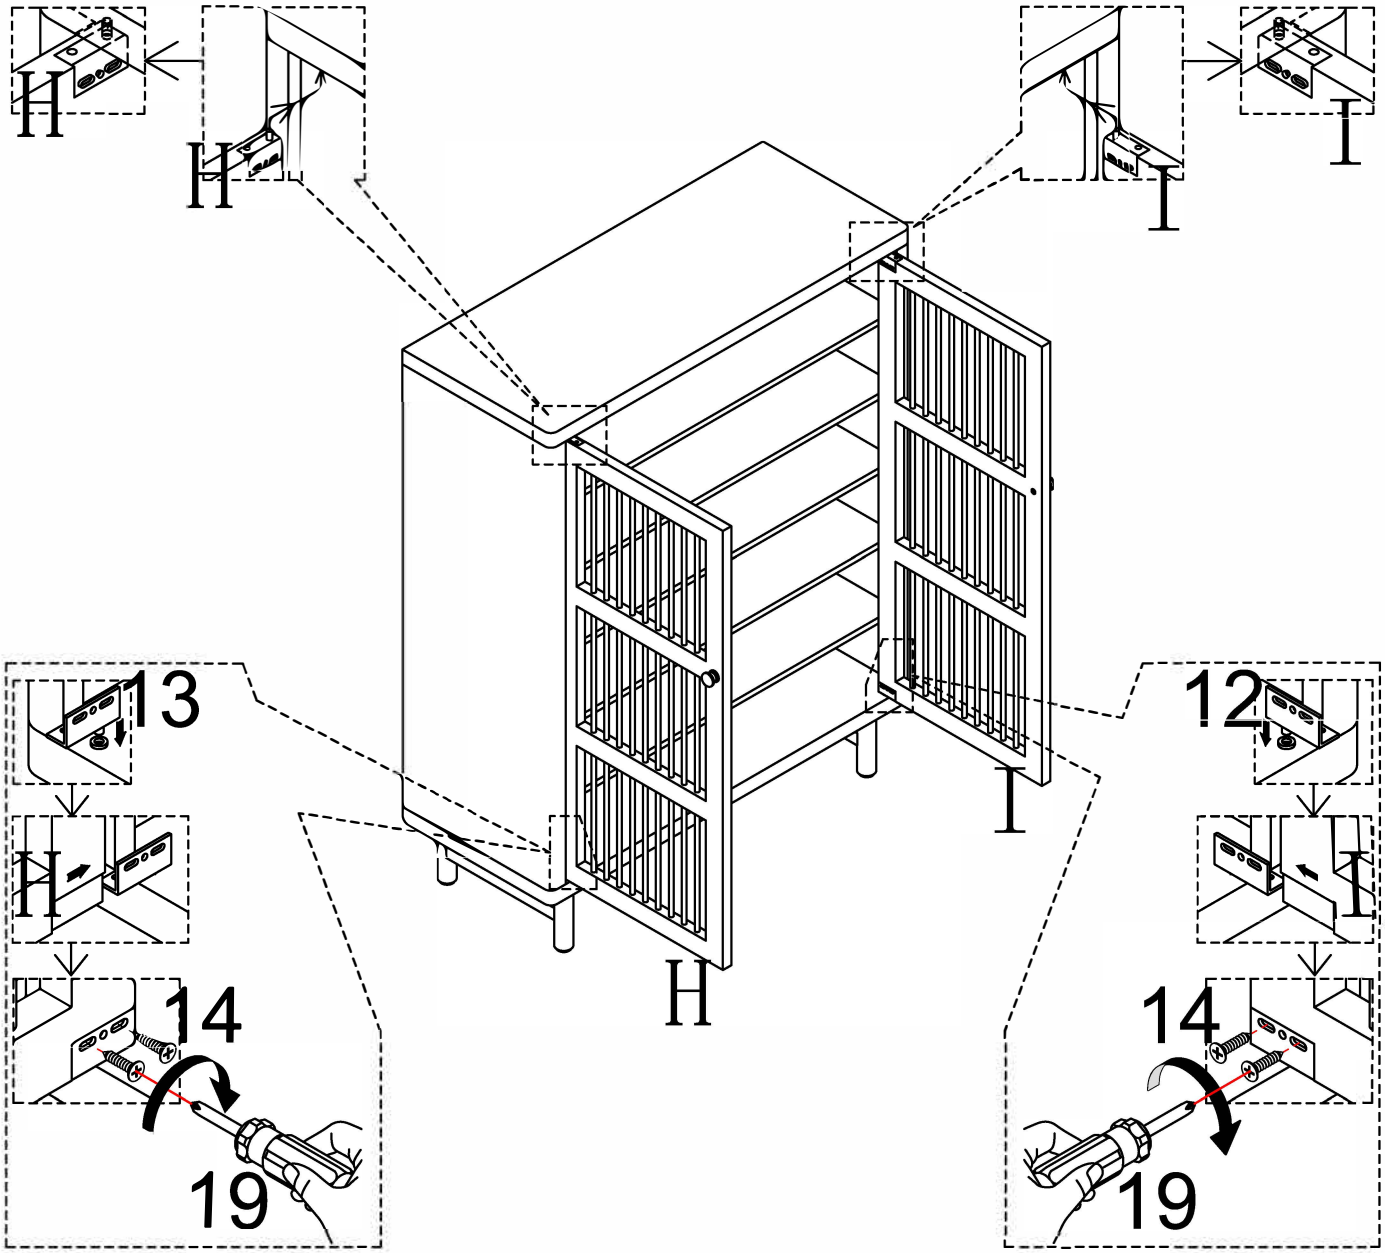

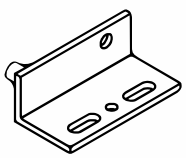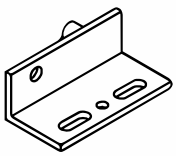
#12	x1	#13	x1	#14	x4	#19	x1
					ø3.5*14mm*7#		



ASSEMBLY INSTRUCTIONS

STEP-111. Install the anti-collapse device.

2.Make the position on the wall, that corresponds to the location of part (#15) on the Top panel. Drill and insert the expandable screw part (#16) by hammer.

3.Assemble the part (#16) to the wall, Align the hole in the part (#15)

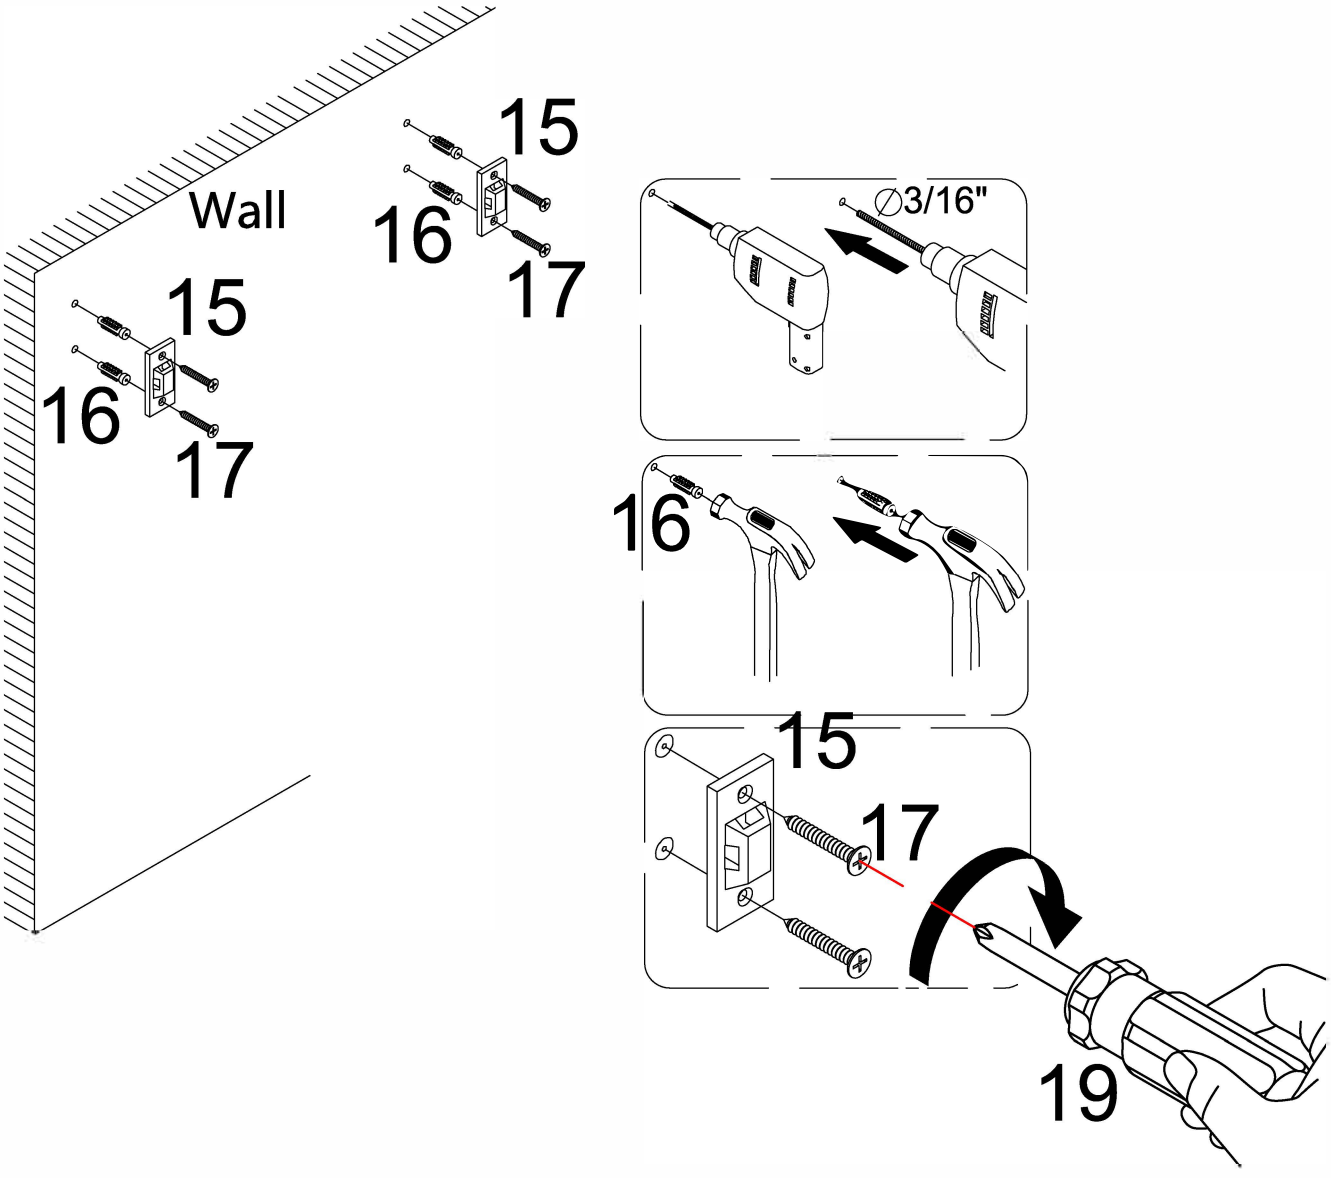


#15 x2	#16 x4	#17 x4	#19 x1
		 ø3.5*35mm*7#	

ASSEMBLY INSTRUCTIONS

STEP-12

1.Let the plastic belt (#18) pass through the both part (#15) and pull tightly.

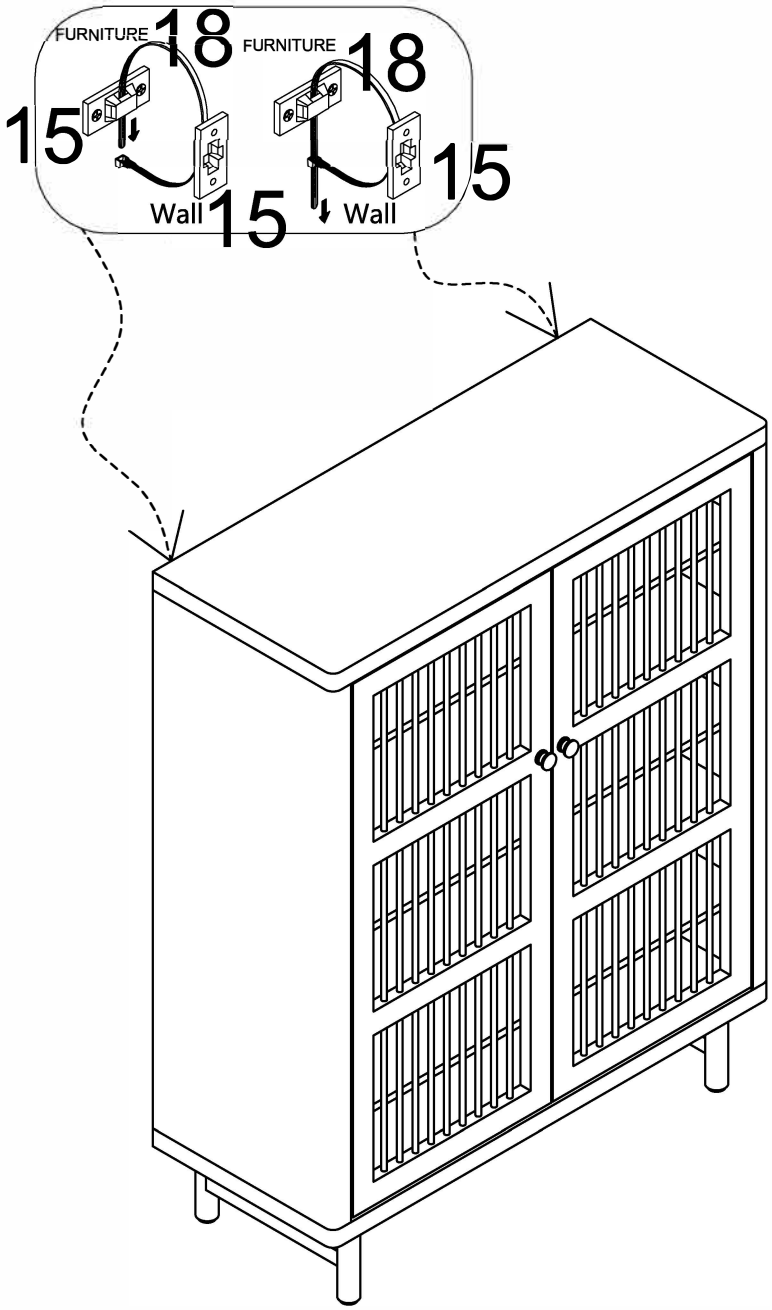

#18	x2
	

WARRANTY

1.We strive to offer high-quality products,and we also try our best to satisfy each and every customer that orders from us with product or service as needed.

2.We provide 30 days warranty starting from the time you receive the item.Each customer must provide a record of their order such as the order number,or item receipt for any items that are out of the warranty period you may also still receive.

3.Replacement parts by purchasing them with our company if they are available.

Are you having difficulty
With assembly?Missing parts?
Please send email with your order No to
hubeihongmao@163.com
For return,please check the return policy with the retailer or market place you bought from.

Appreciate your purchasing from us.
Pop up your life by our furniture piece!