


ASSEMBLY INSTRUCTION

PLEASE READ BEFORE ASSEMBLING!


Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box. Assembly on top of flattened box/blanket is recommended.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

Tip #3: Note position of all holes on each panel during assembly.

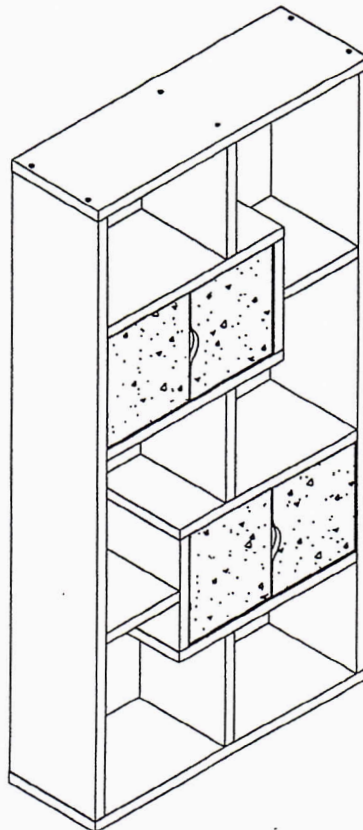


PARTS IDENTIFICATION

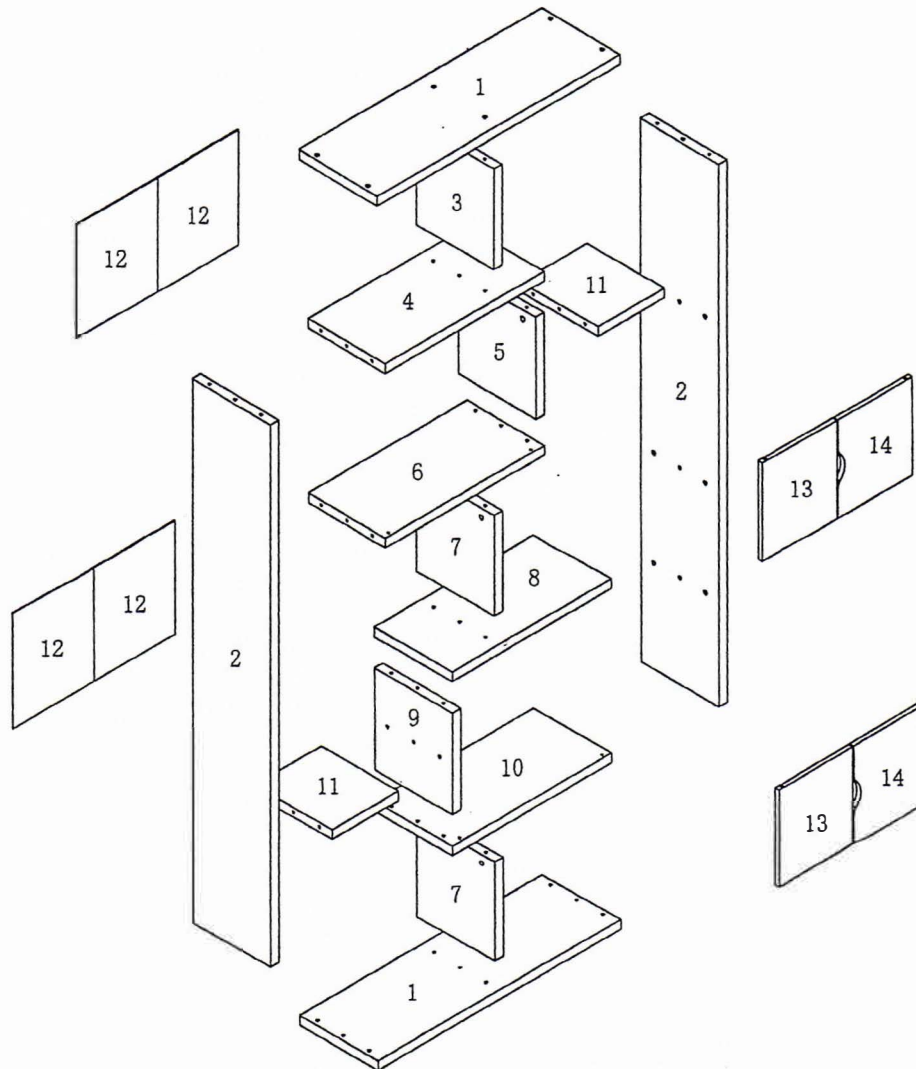


(1)	2pcs	(6)	1pc	(11)	2pcs
(2)	2pcs	(7)	2pcs	(12)	4pcs
(3)	1pc	(8)	1pc	(13)	2pcs
(4)	1pc	(9)	1pc	(14)	2pcs
(5)	1pc	(10)	1pc		


HARDWARE IDENTIFICATION

A		L29	24pcs
B		Ø15	24pcs
C		Ø7x48	20pcs
D		Glue: For securing please apply to wood dowel first before inserting into panel	1pc
E		Ø8x25	22pcs
F		Ø3x14	8pcs
G		Ø3x16	8pcs
H			4pcs
I			4pcs
J			4pcs
K		Ø22 (BLK3)	38pcs
L			42pcs
M		197×5×1	1pc
N		Ø4x25	1pc
O		Ø5x40	1pc
P		Ø8 x 40	1pc
Q		12×12×1	2pcs
R		Ø16	4pcs


STEP1

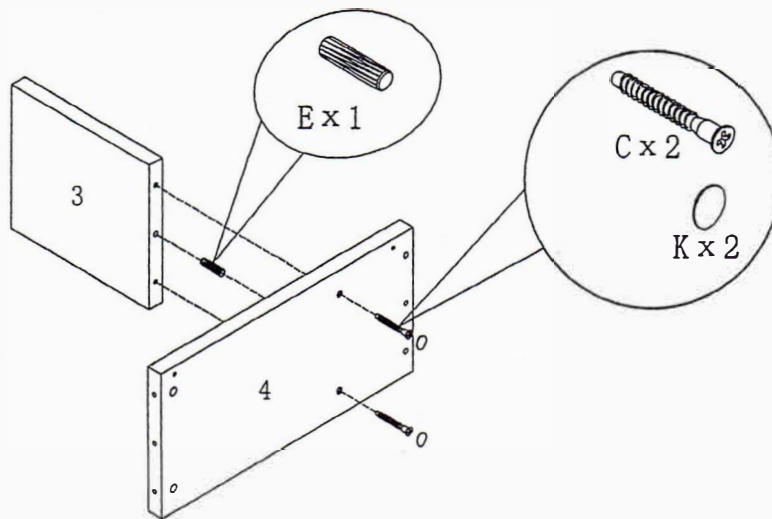


STEP2

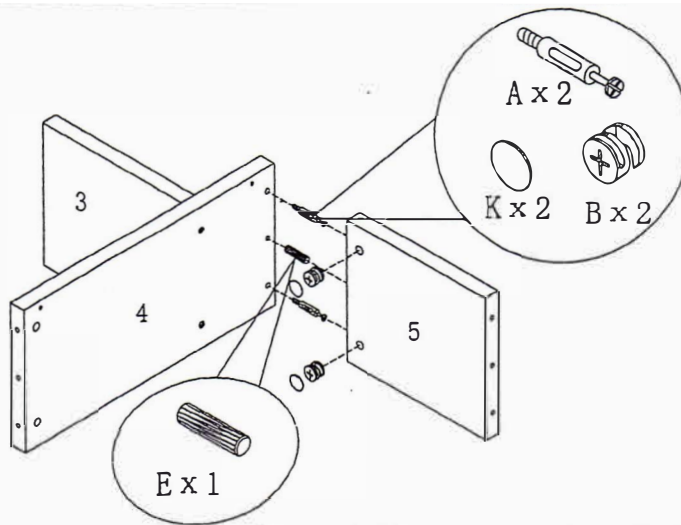


STEP3

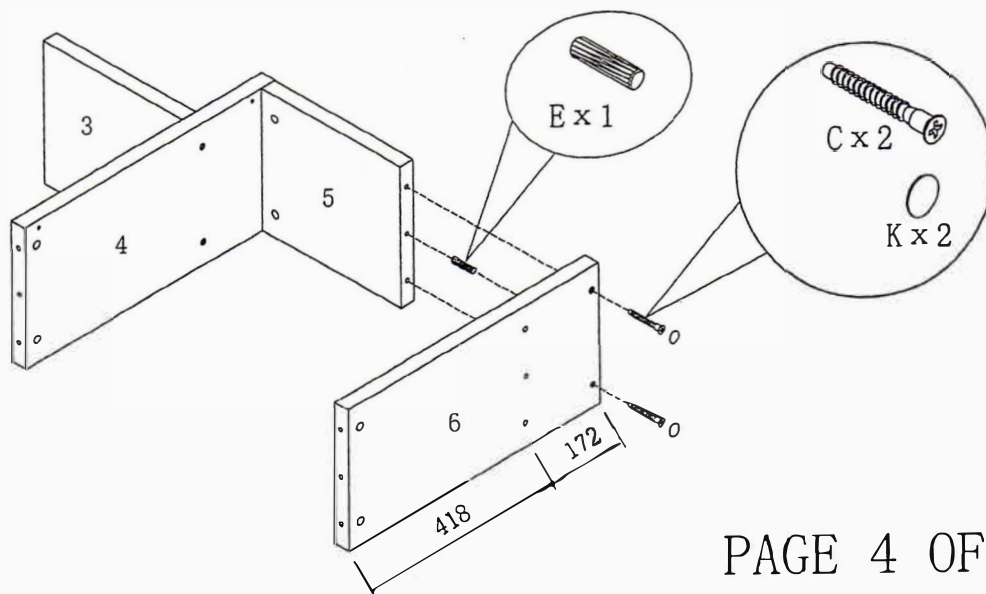


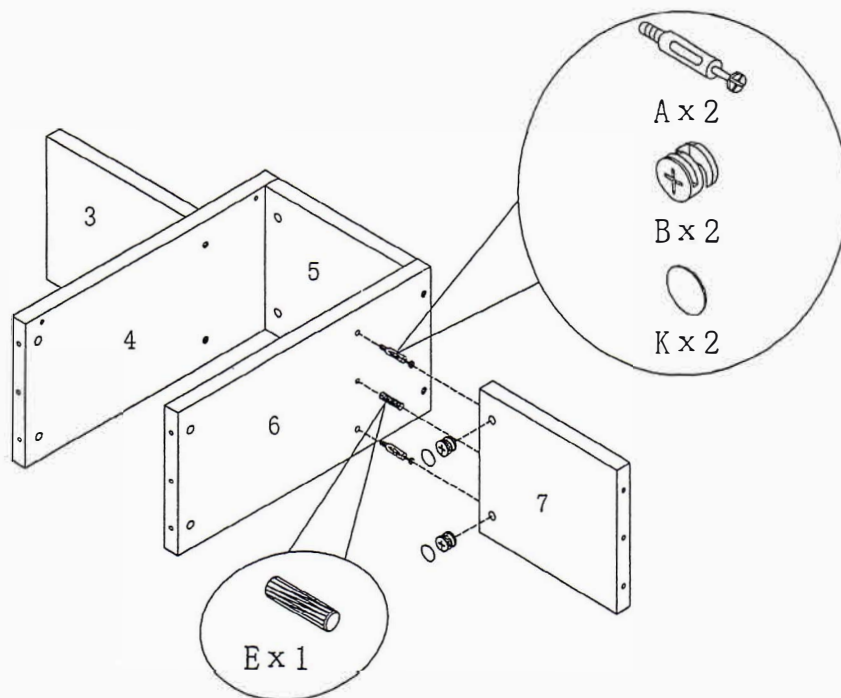


STEP4

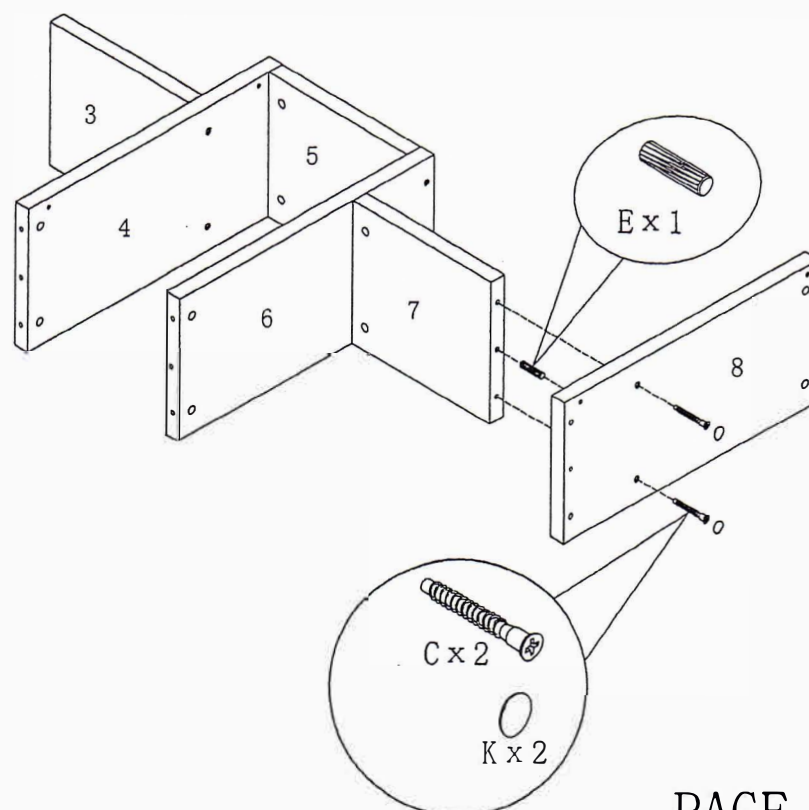


STEP5

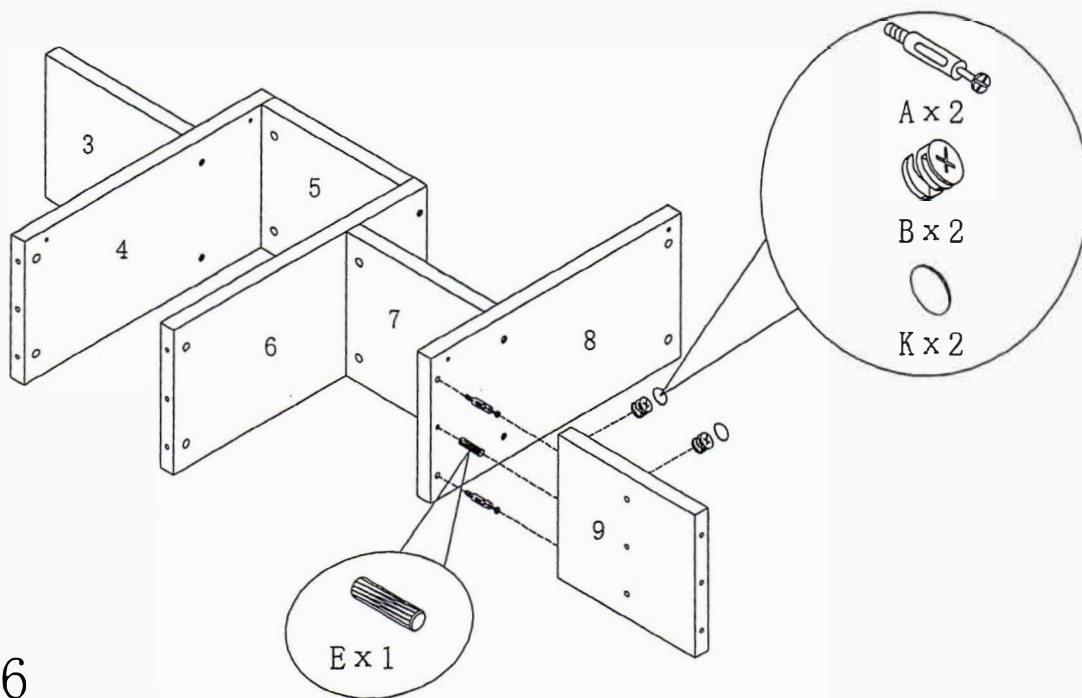

STEP6

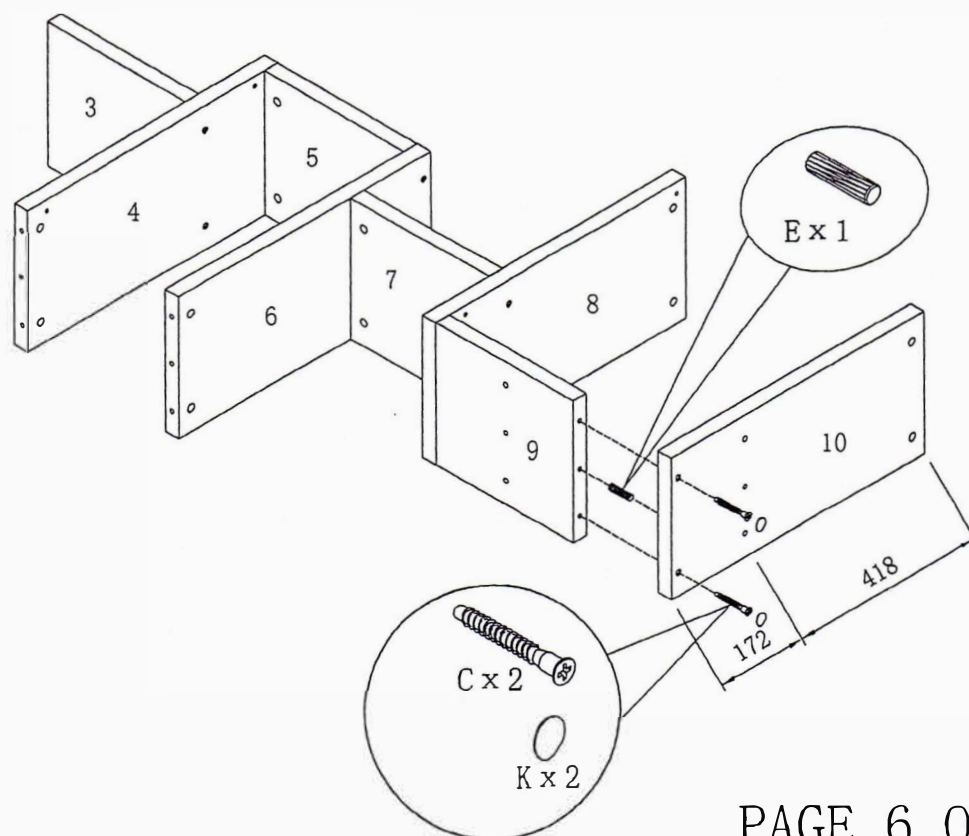



STEP7

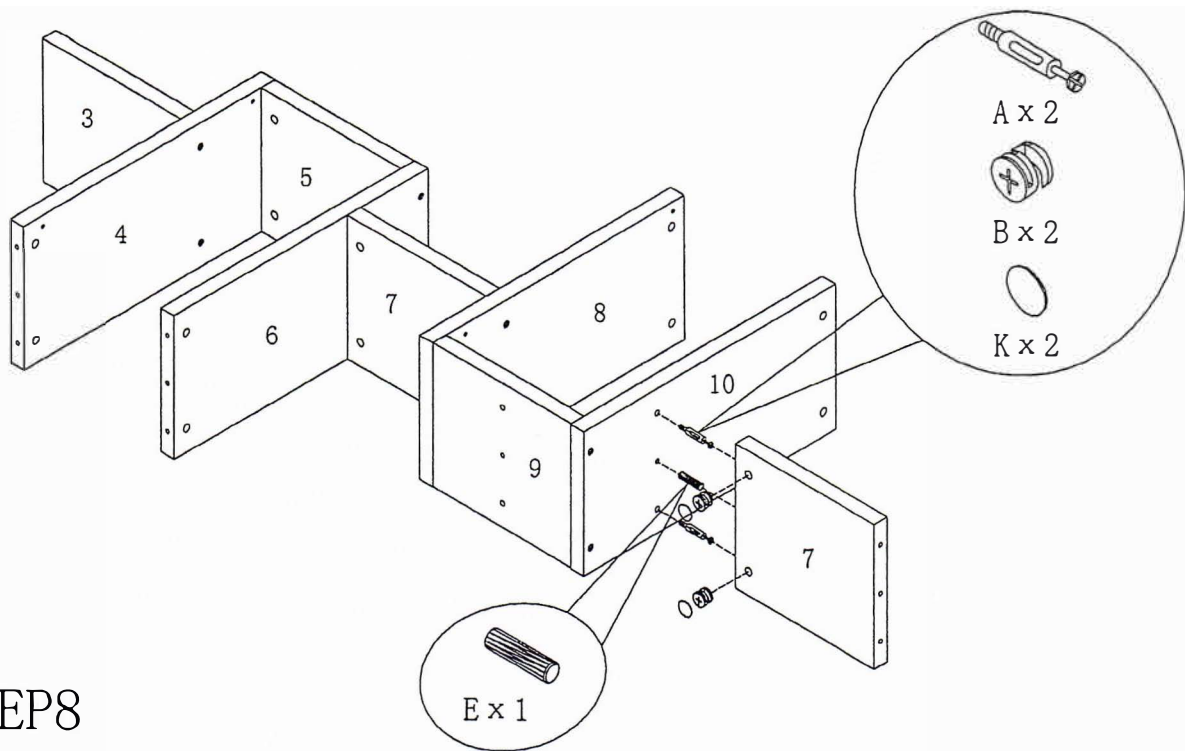


STEP8

STEP9

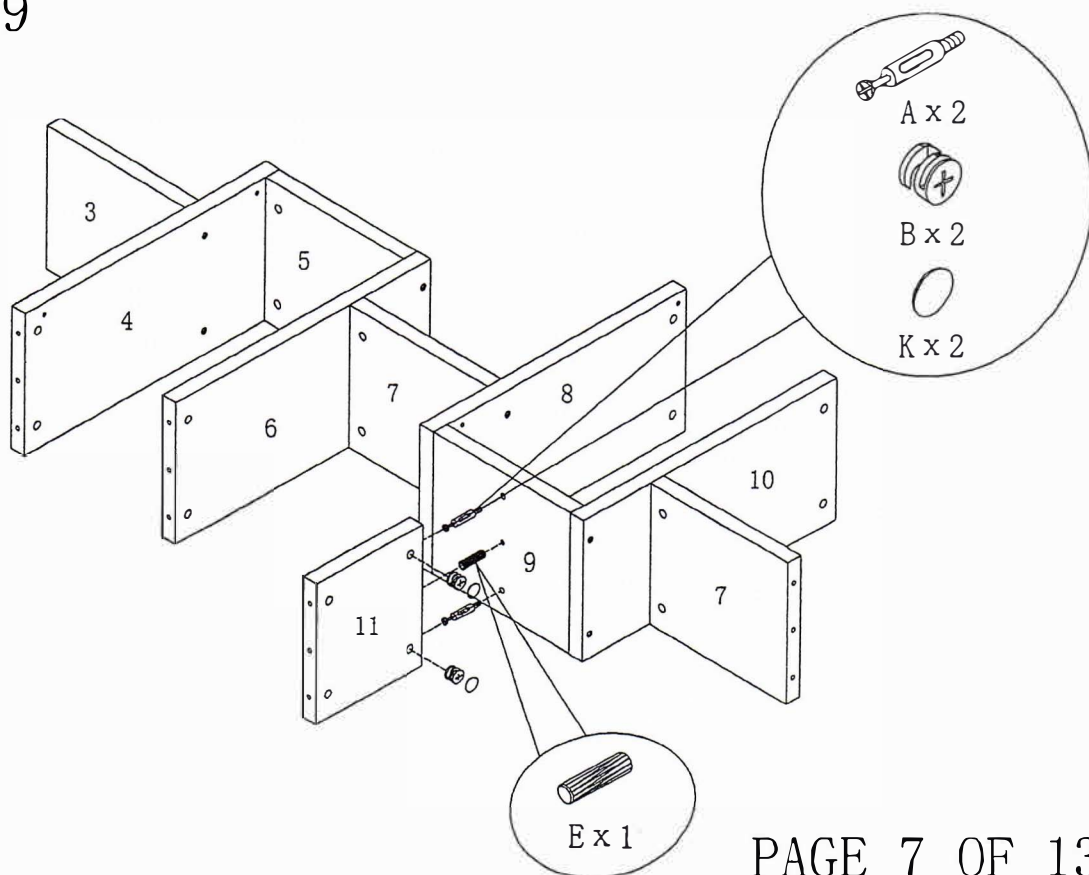


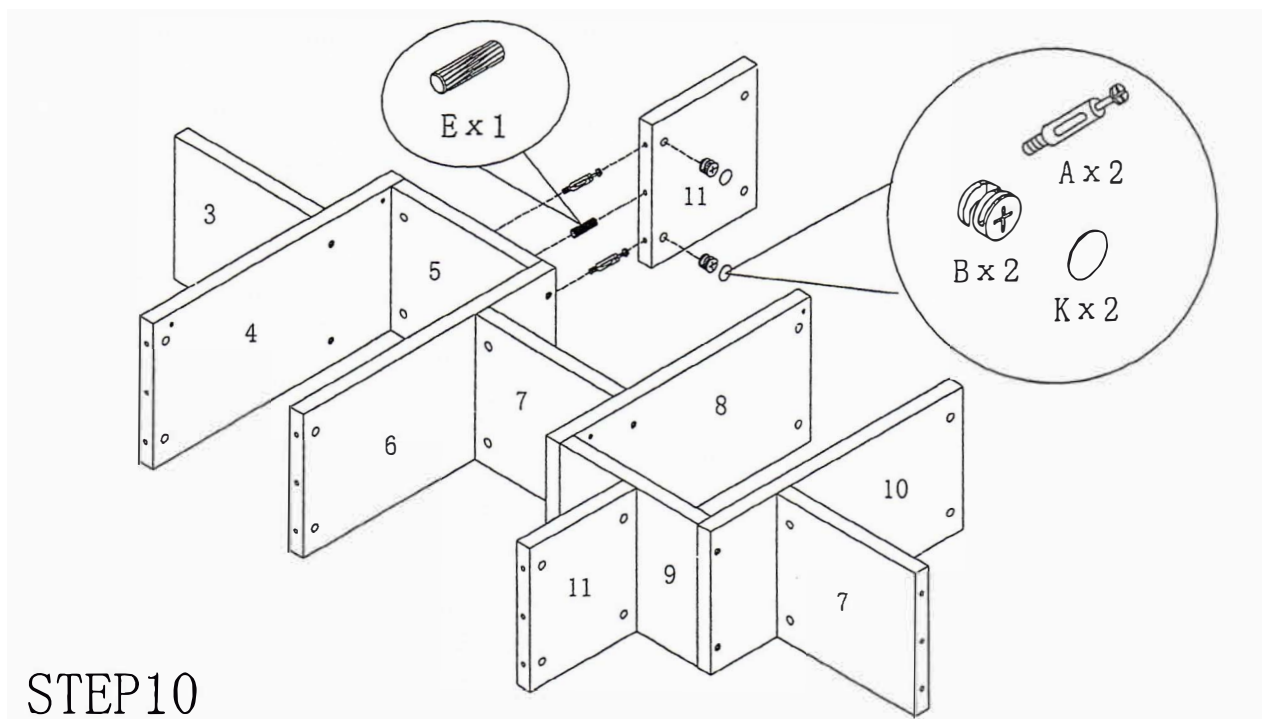


STEP 10

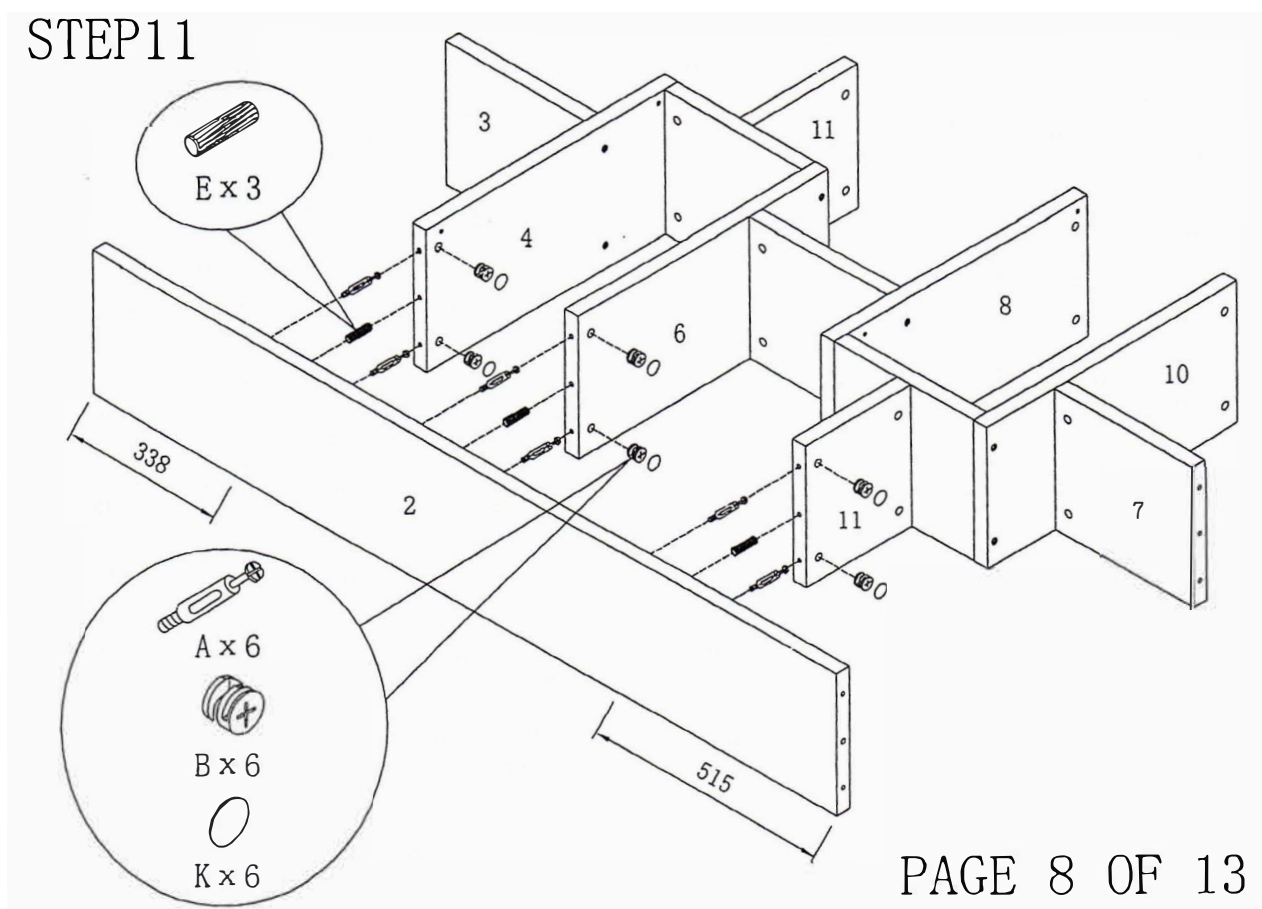


STEP 11

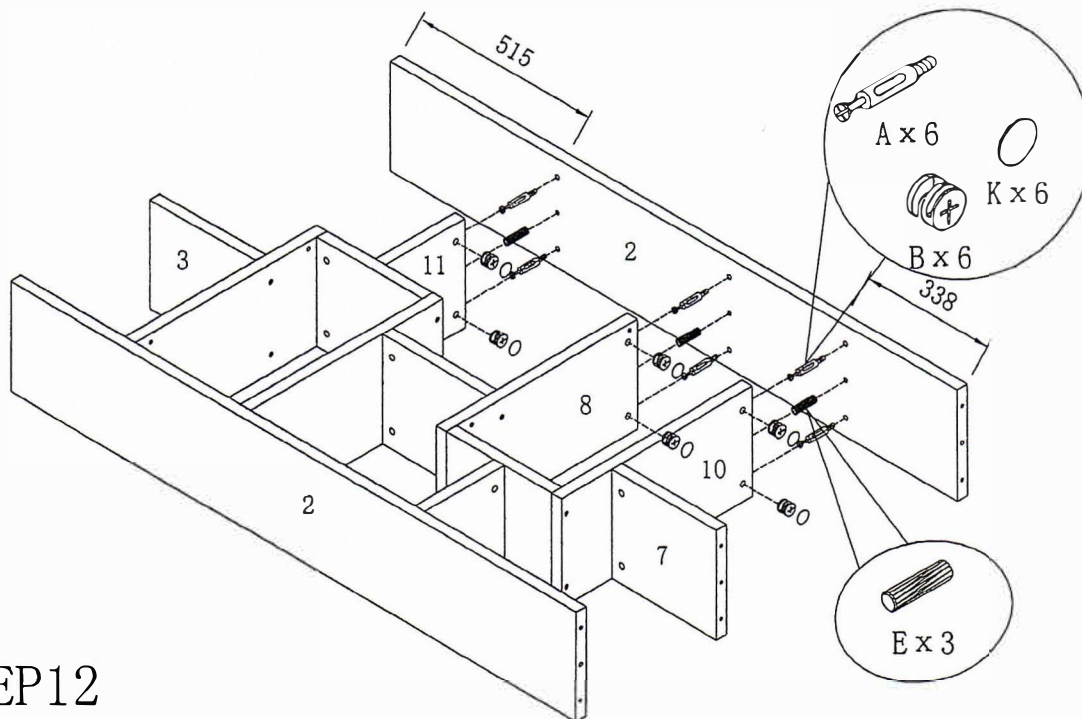

STEP12

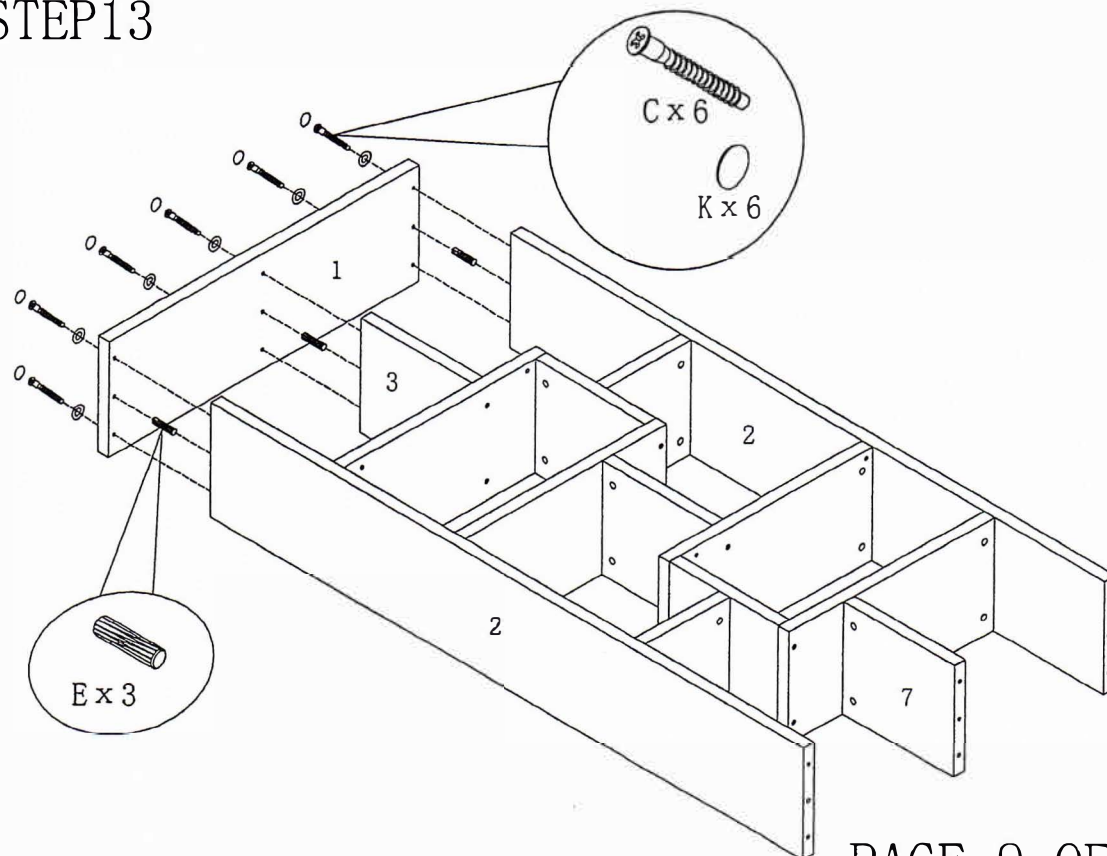



STEP13

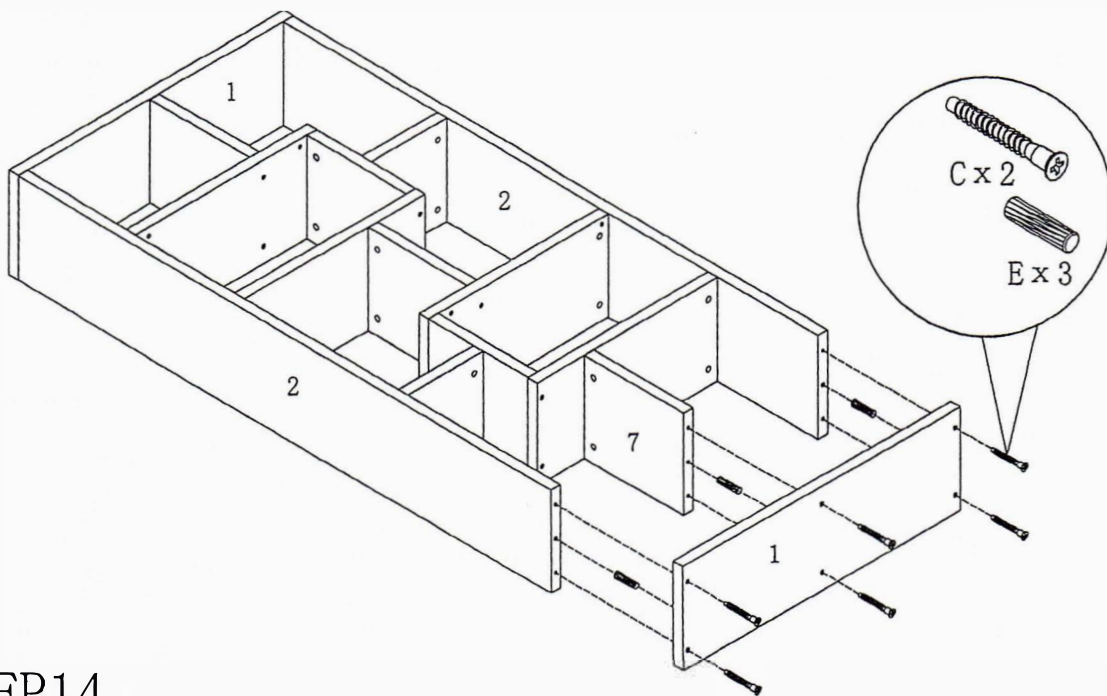

STEP14


STEP15

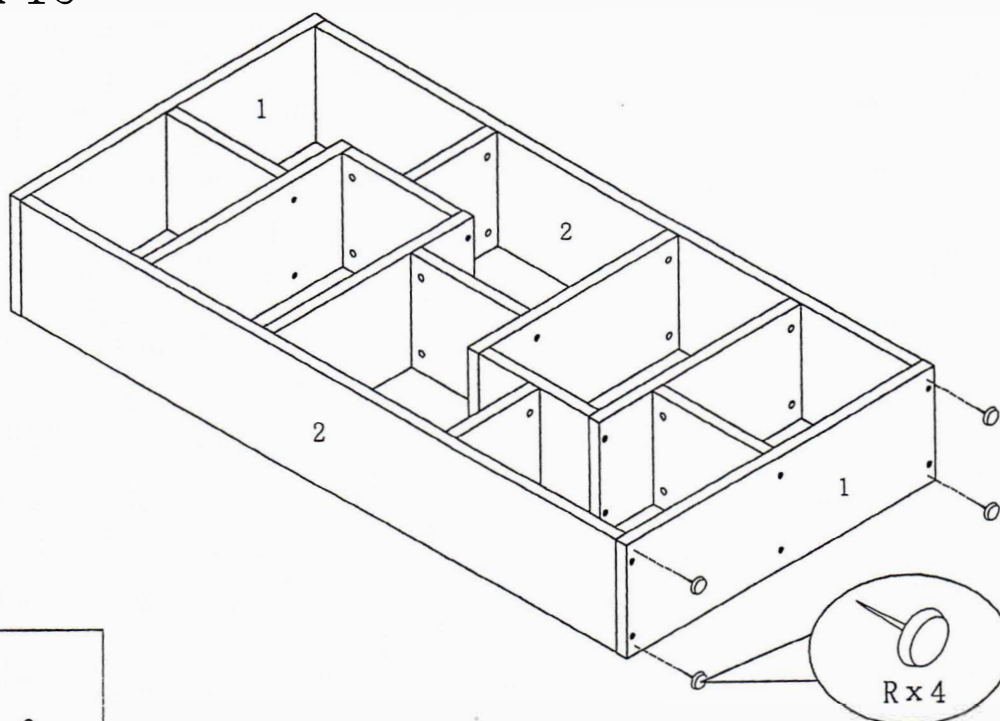


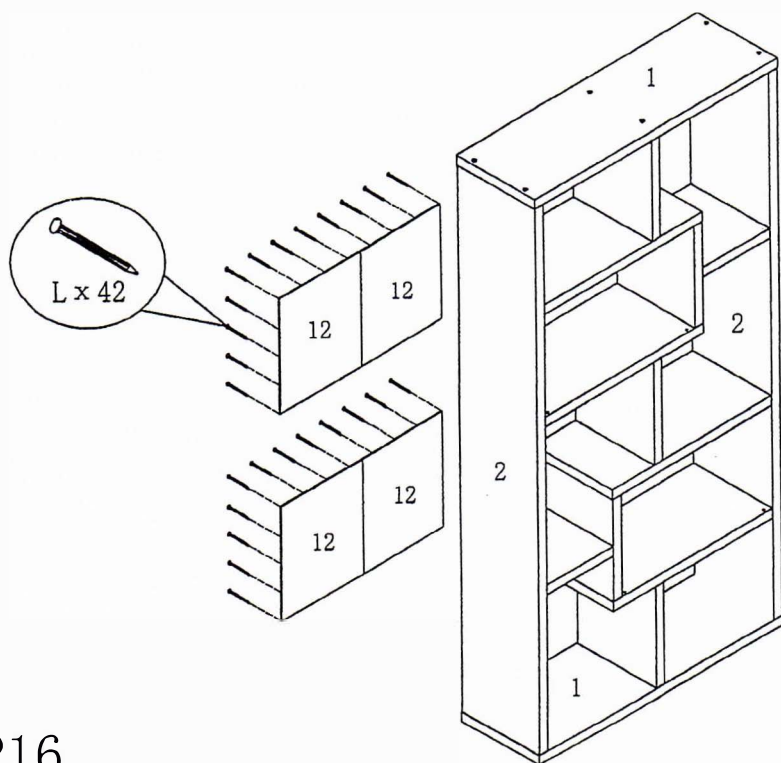

STEP 16


STEP 17

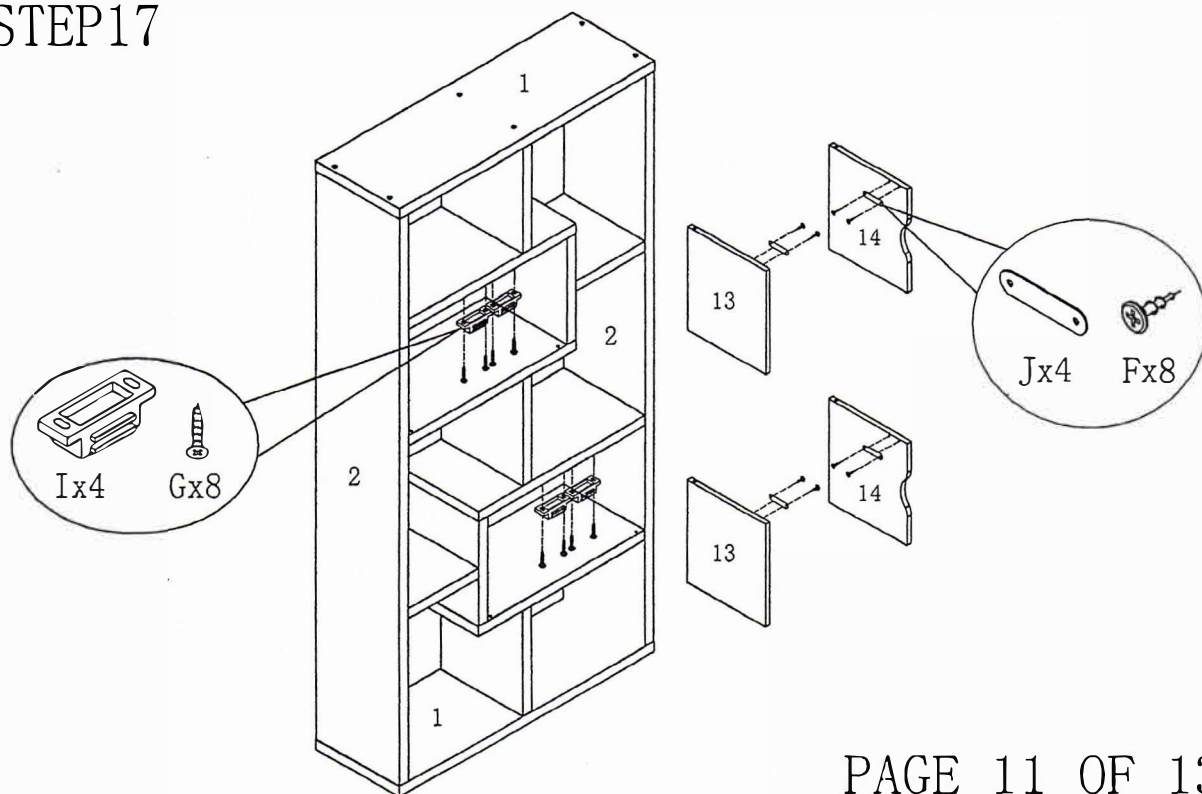

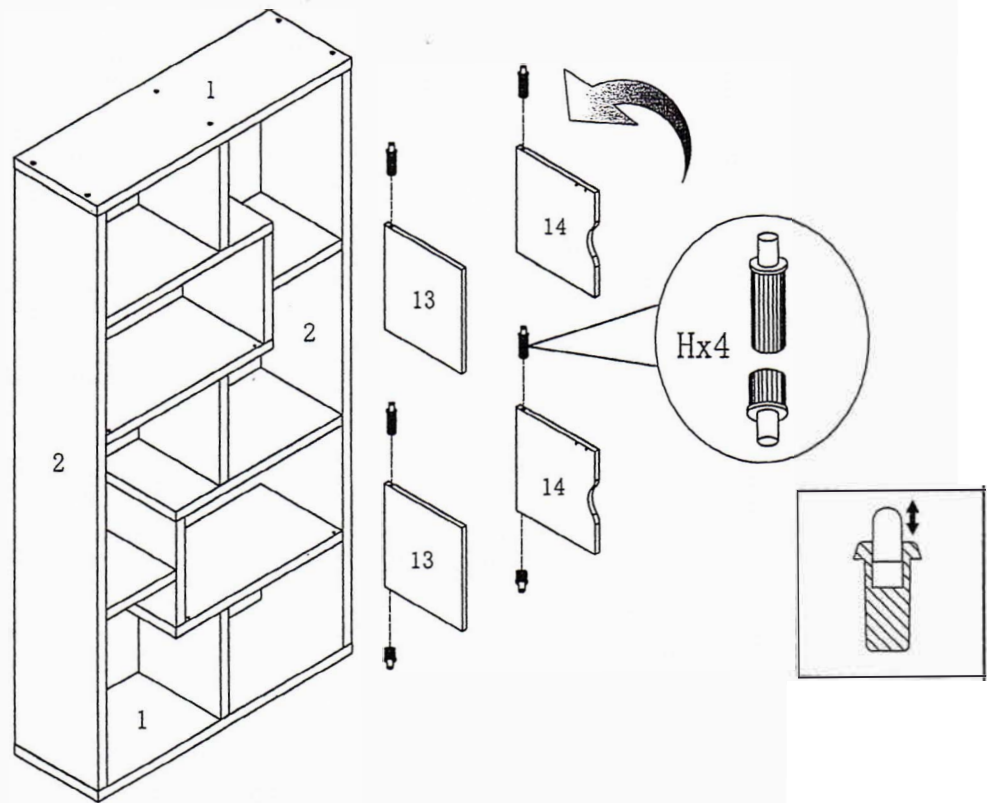

STEP18

STEP19

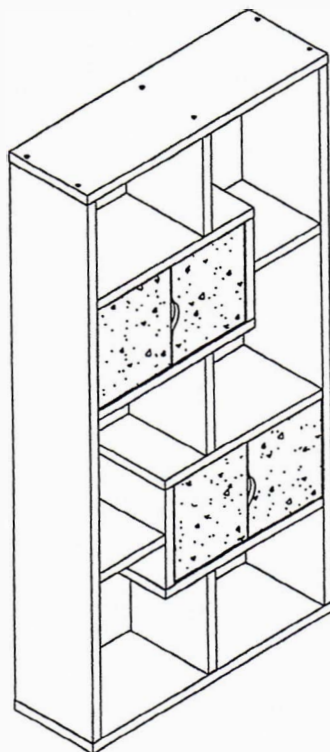


ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :

TOOLS NEEDED (NOT INCLUDED)



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS




DRYWALL SCREW $\phi 5 \times 40$ X 1PC



STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC




DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

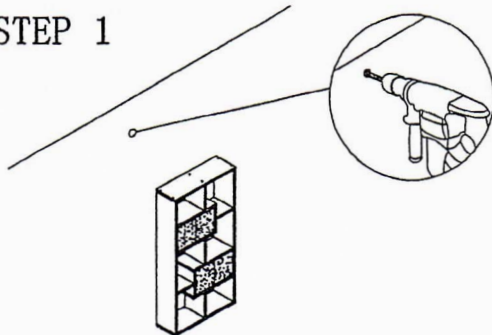


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

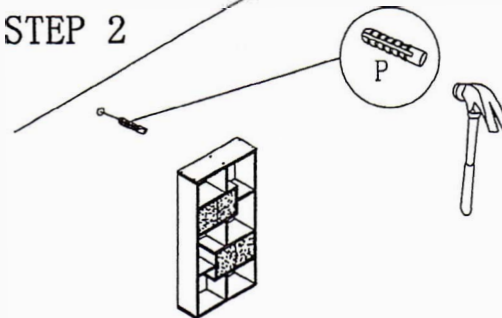


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

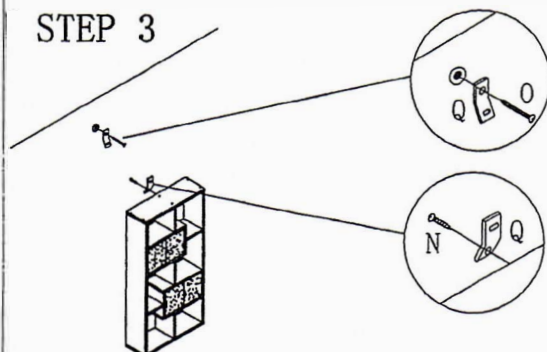

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

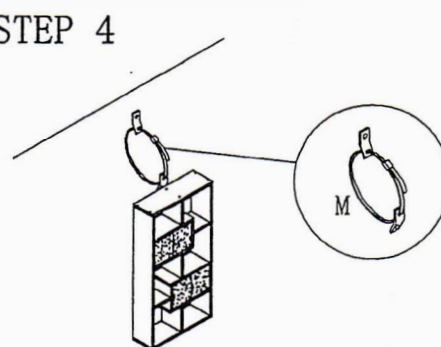

1. Insert strap thru bracket attached to wall.
 2. then thru bracket on item, and into head of strap.
2. pull lightly til strap stops.
Assembly is complete.