


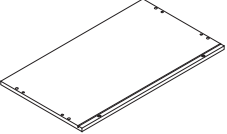


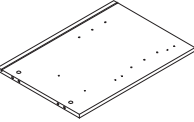

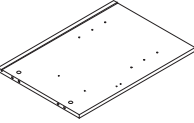
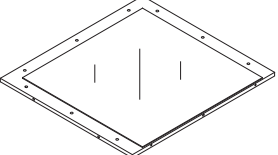
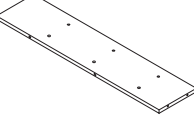
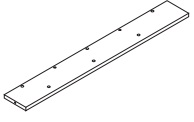
ASSEMBLY INSTRUCTIONS










- 
1. Two or more people are needed to complete the installation.

2. Please protect the wires and remote control accessories from damage during installation.











3. Professional installation is highly recommended.











4. Assemble on a flat, clean and soft surface.

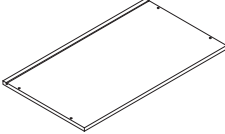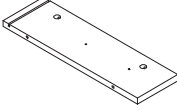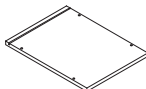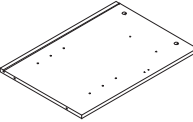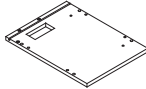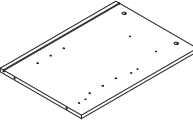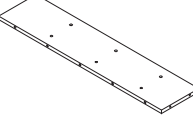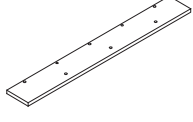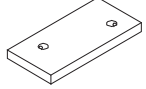Item no.	Reference Image	Qty.
1		X1
3		X1
5		X1
7		X1
9		X2
11		X1
13		X1
15		X1
17		X1

Item no.	Reference Image	Qty.
2		X1
4		X1
6		X2
8		X1
10		X1
12		X1
14		X1
16		X1
18		X3

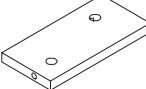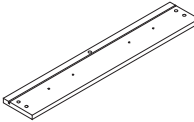ASSEMBLY INSTRUCTIONS

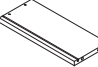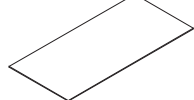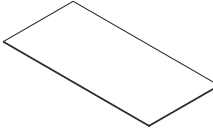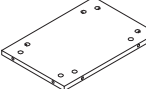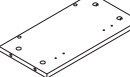Item no.	Reference Image	Qty.
19		X3
21		X1
23		X1
25		X1
27		X2
29		X2
31		X1
33		X1
35		X1
37		X1

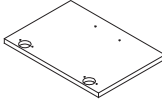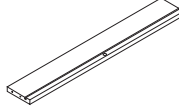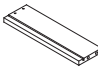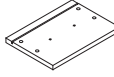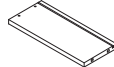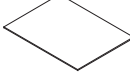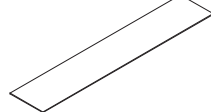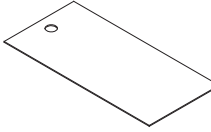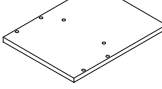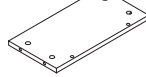Item no.	Reference Image	Qty.
20		X2
22		X1
24		X1
26		X2
28		X2
30		X2
32		X1
34		X1
36		X2
38		X1

ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
39		X1	A		X60
B		X60	C		X27
D		X84	E		X12
F		X20	G		X4
H		X4	I		X8
J		X1	K		X2
L		X6	M		X12
N		X1	O		X2
P		X3	Q		X2
R		X4	S		X1
T		X18	U		X18

ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.
V		X1

P

P1


P2

4


ASSEMBLY INSTRUCTIONS

USING CAM LOCK AND QUICKFIT


This part cannot be separated, please install in strict accordance with the assembly requirements.

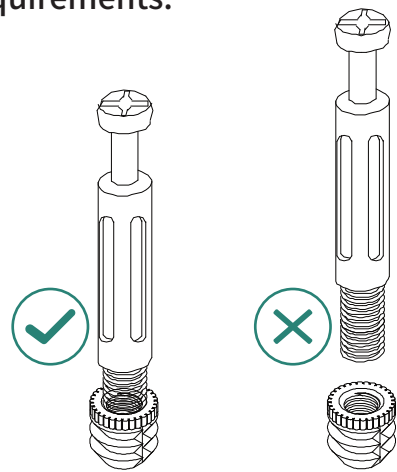

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

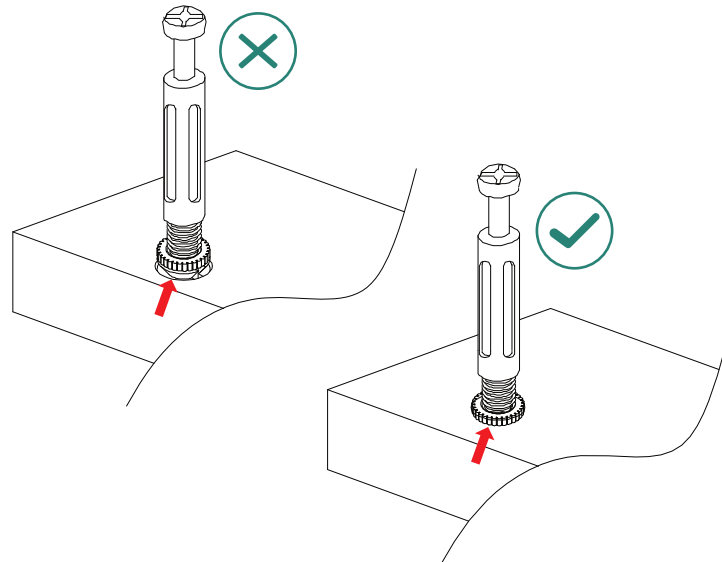


When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

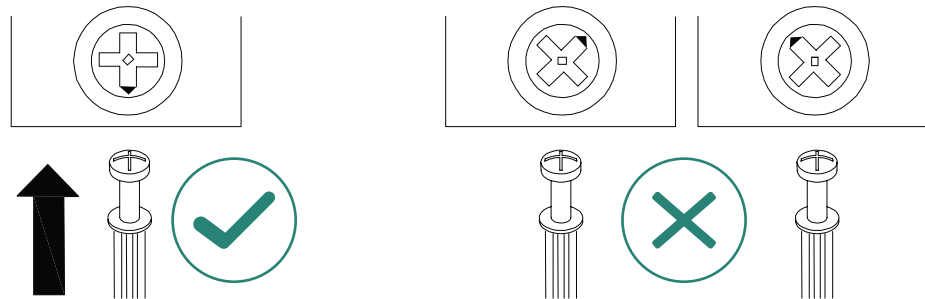

Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

Turn cam lock clockwise to tighten.

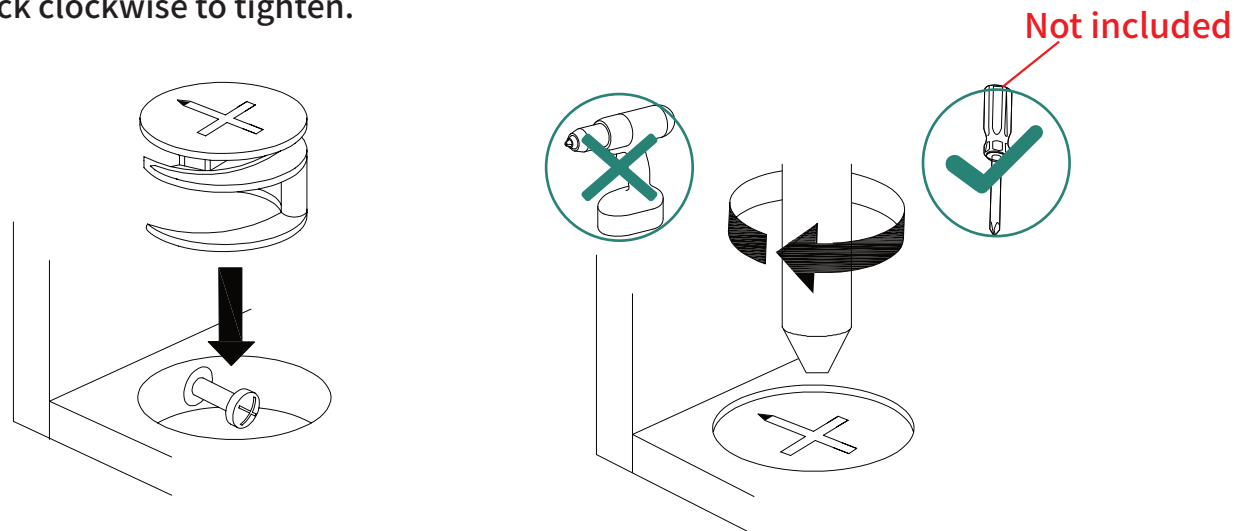


ASSEMBLY INSTRUCTIONS

PRE-FIX DRAWER RUNNER INSTRUCTIONS




Pull inner and outer drawer runners apart before fixing them to panels.



Slide drawer runners apart until the drawer lock can be seen, as shown.

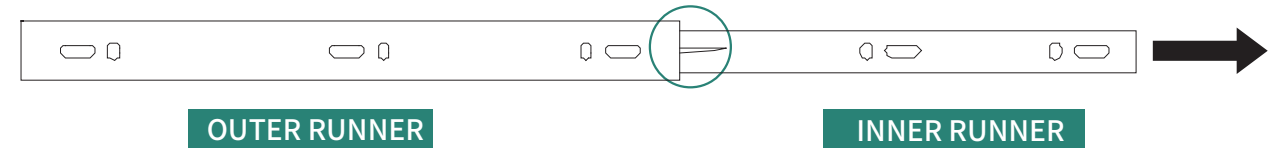



Press and hold the drawer runner lock and then continue to slide drawer runners apart, as shown.

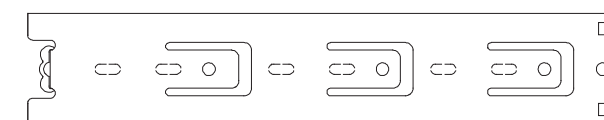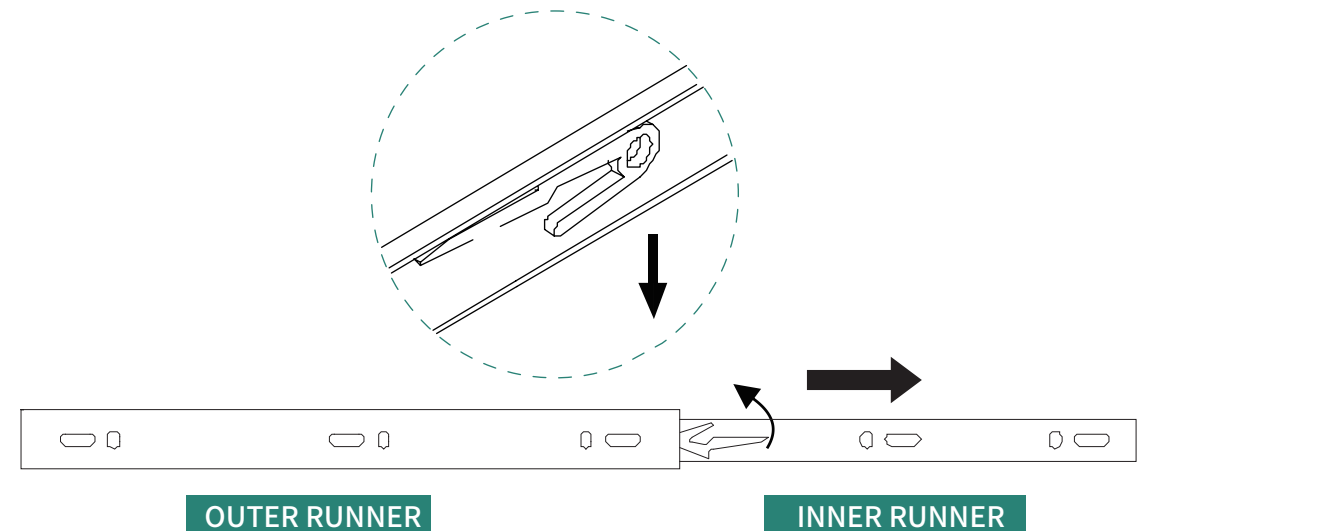

P1 OUTER RUNNER

P2 INNER RUNNER

Your inner and outer drawer runners are ready to be fixed to panels.

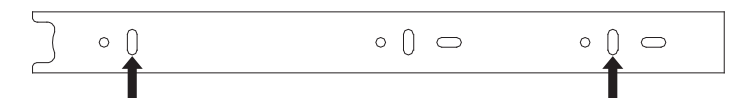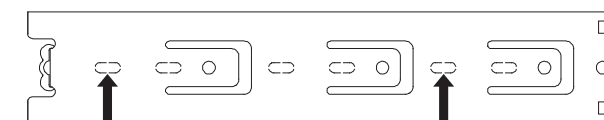

P1 OUTER RUNNER

P2 INNER RUNNER



⚠ When installing the outer guide rail, please use the guide rail notch to assemble towards the inner direction of the drawer. Please fix the screws according to the marked position. If the installed position is changed, adjust it side-to-side at the marked position.

⚠ When installing the inner guide rail, please use the guide rail notch to assemble towards the inner direction of the drawer. Please fix the screws according to the marked position. If the installed position is changed, adjust it up and down at the marked position.



ASSEMBLY INSTRUCTIONS

Regarding the installation and adjustment of the door hinge:


1. Use the "waist round hole" marked with a triangle to adjust the position of the door panel (ensure that the gap between the door panel and the upper and lower panels is consistent).
2. Use the screw at the back end of the hinge to adjust the front and back position of the door panel (ensure that the front of the door panel is in the same plane as the upper and lower panels).

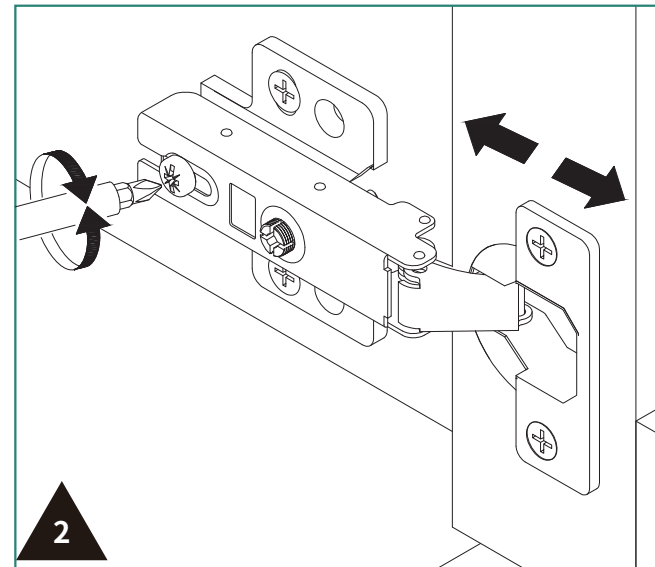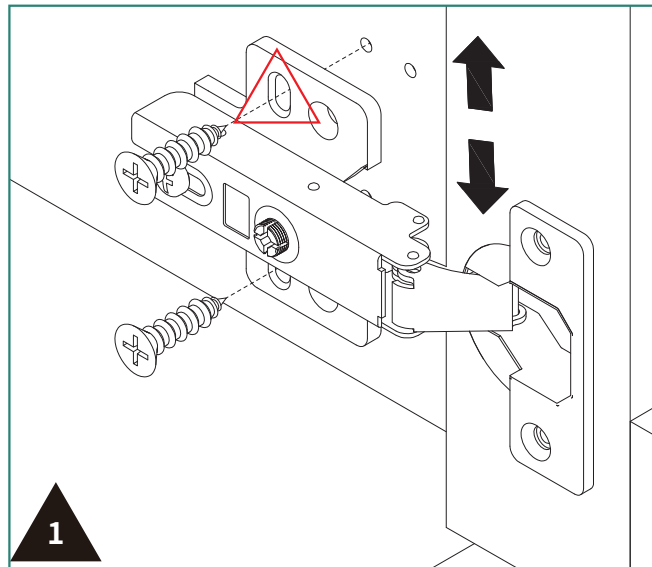


3. Use the screw at the front end of the hinge to adjust the left and right position of the door panel (ensure that the left and right sides of the door panel are in the same plane as the upper and lower panels).
4. After completing these three steps, secure the other two screws on the hinge.

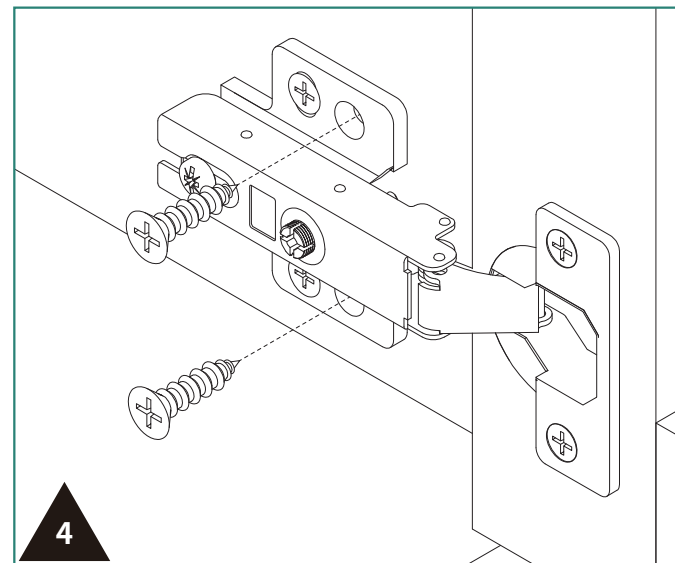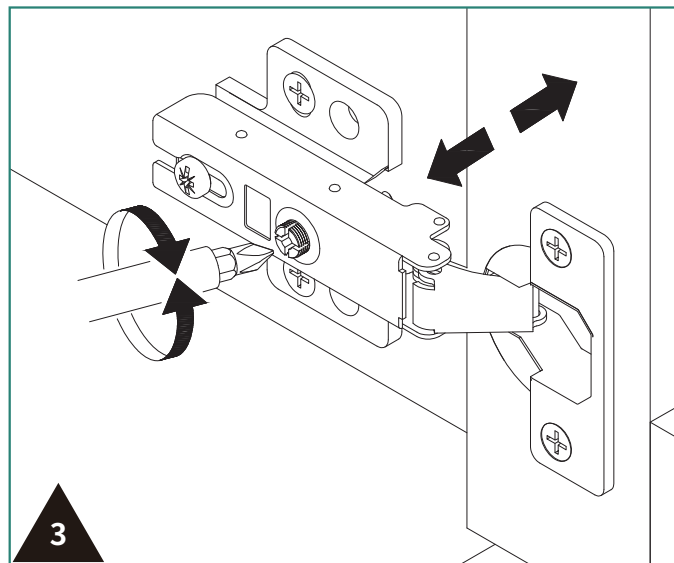

ASSEMBLY INSTRUCTIONS

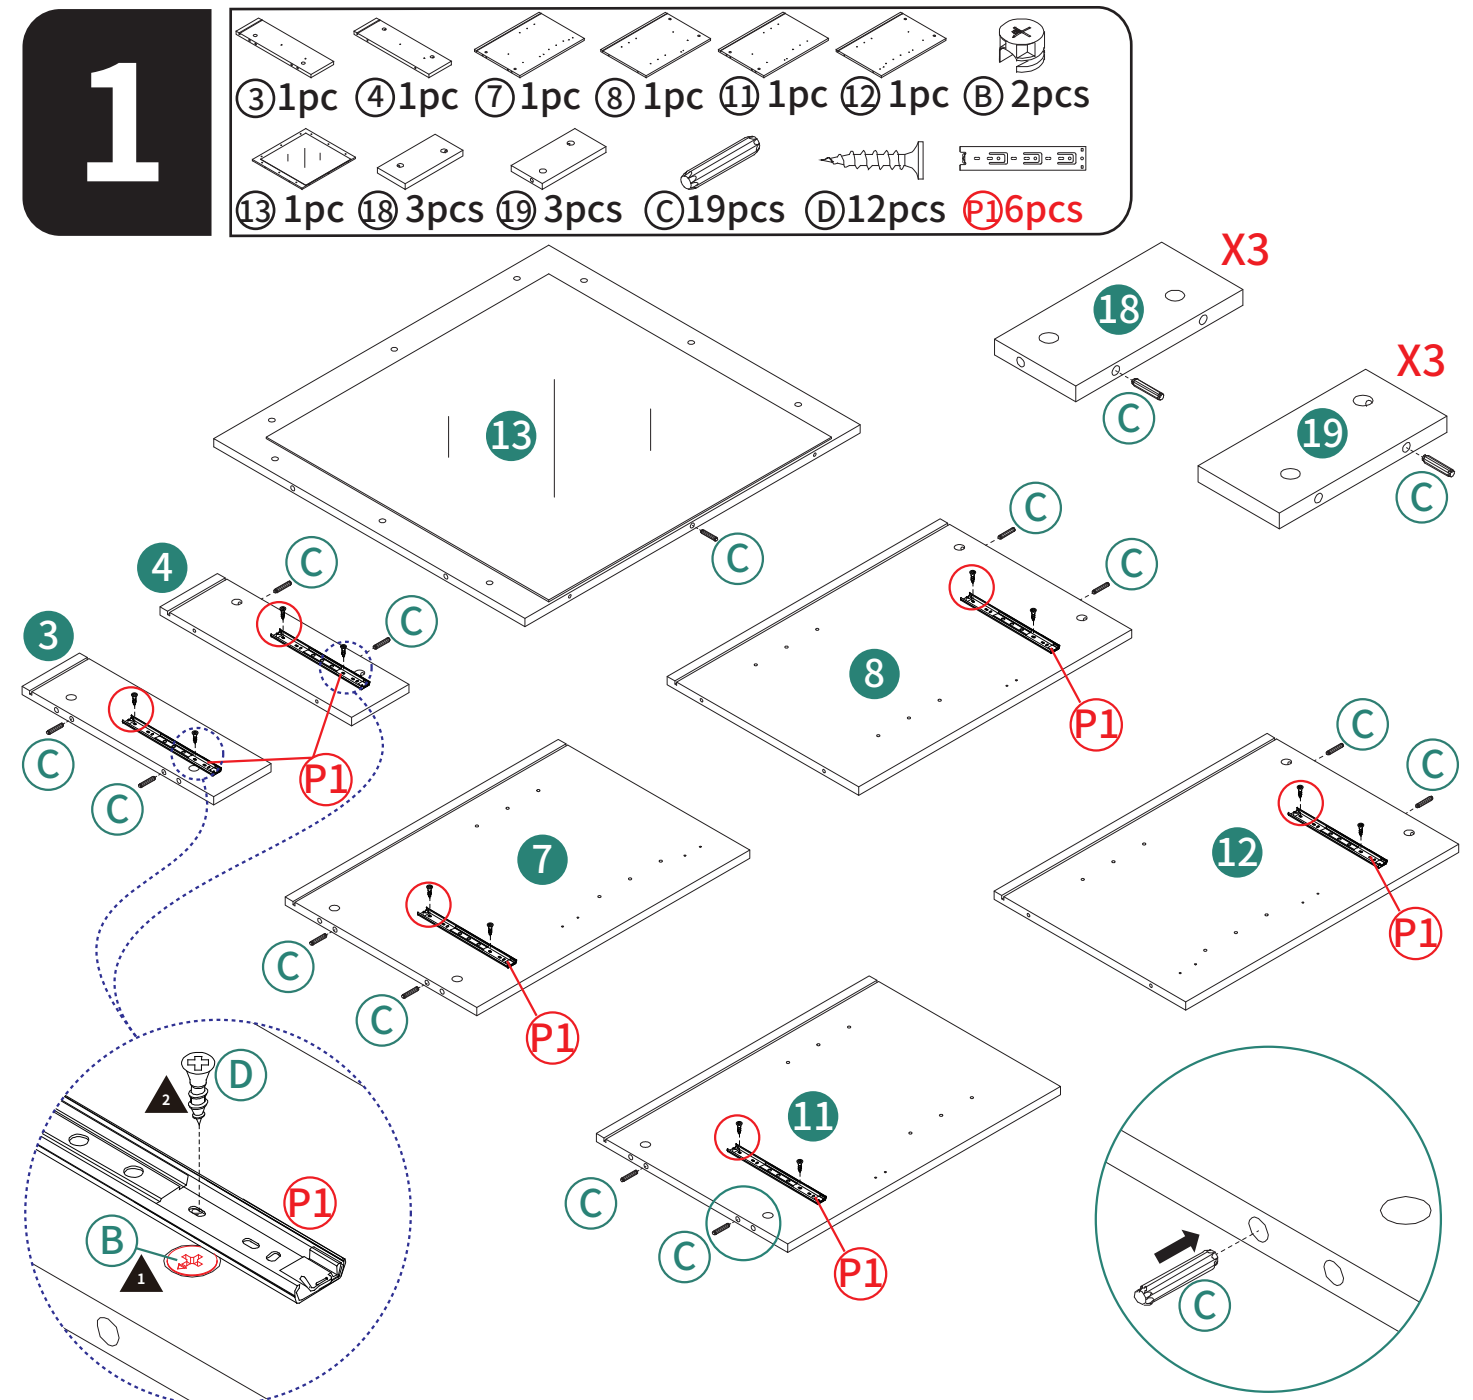

Note: Installing the slide will block the hole of part B (eccentric wheel), so it is recommended to first install part B (eccentric wheel) into its corresponding hole before installing the slide. This will facilitate step 9.

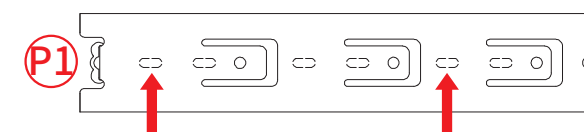


Align the screws with the center of the mounting hole of the guide rail.

ASSEMBLY INSTRUCTIONS

2

① 1pc ⑤ 1pc ⑩ 1pc ①⑥ 1pc ①⑦ 1pc ①A 24pcs

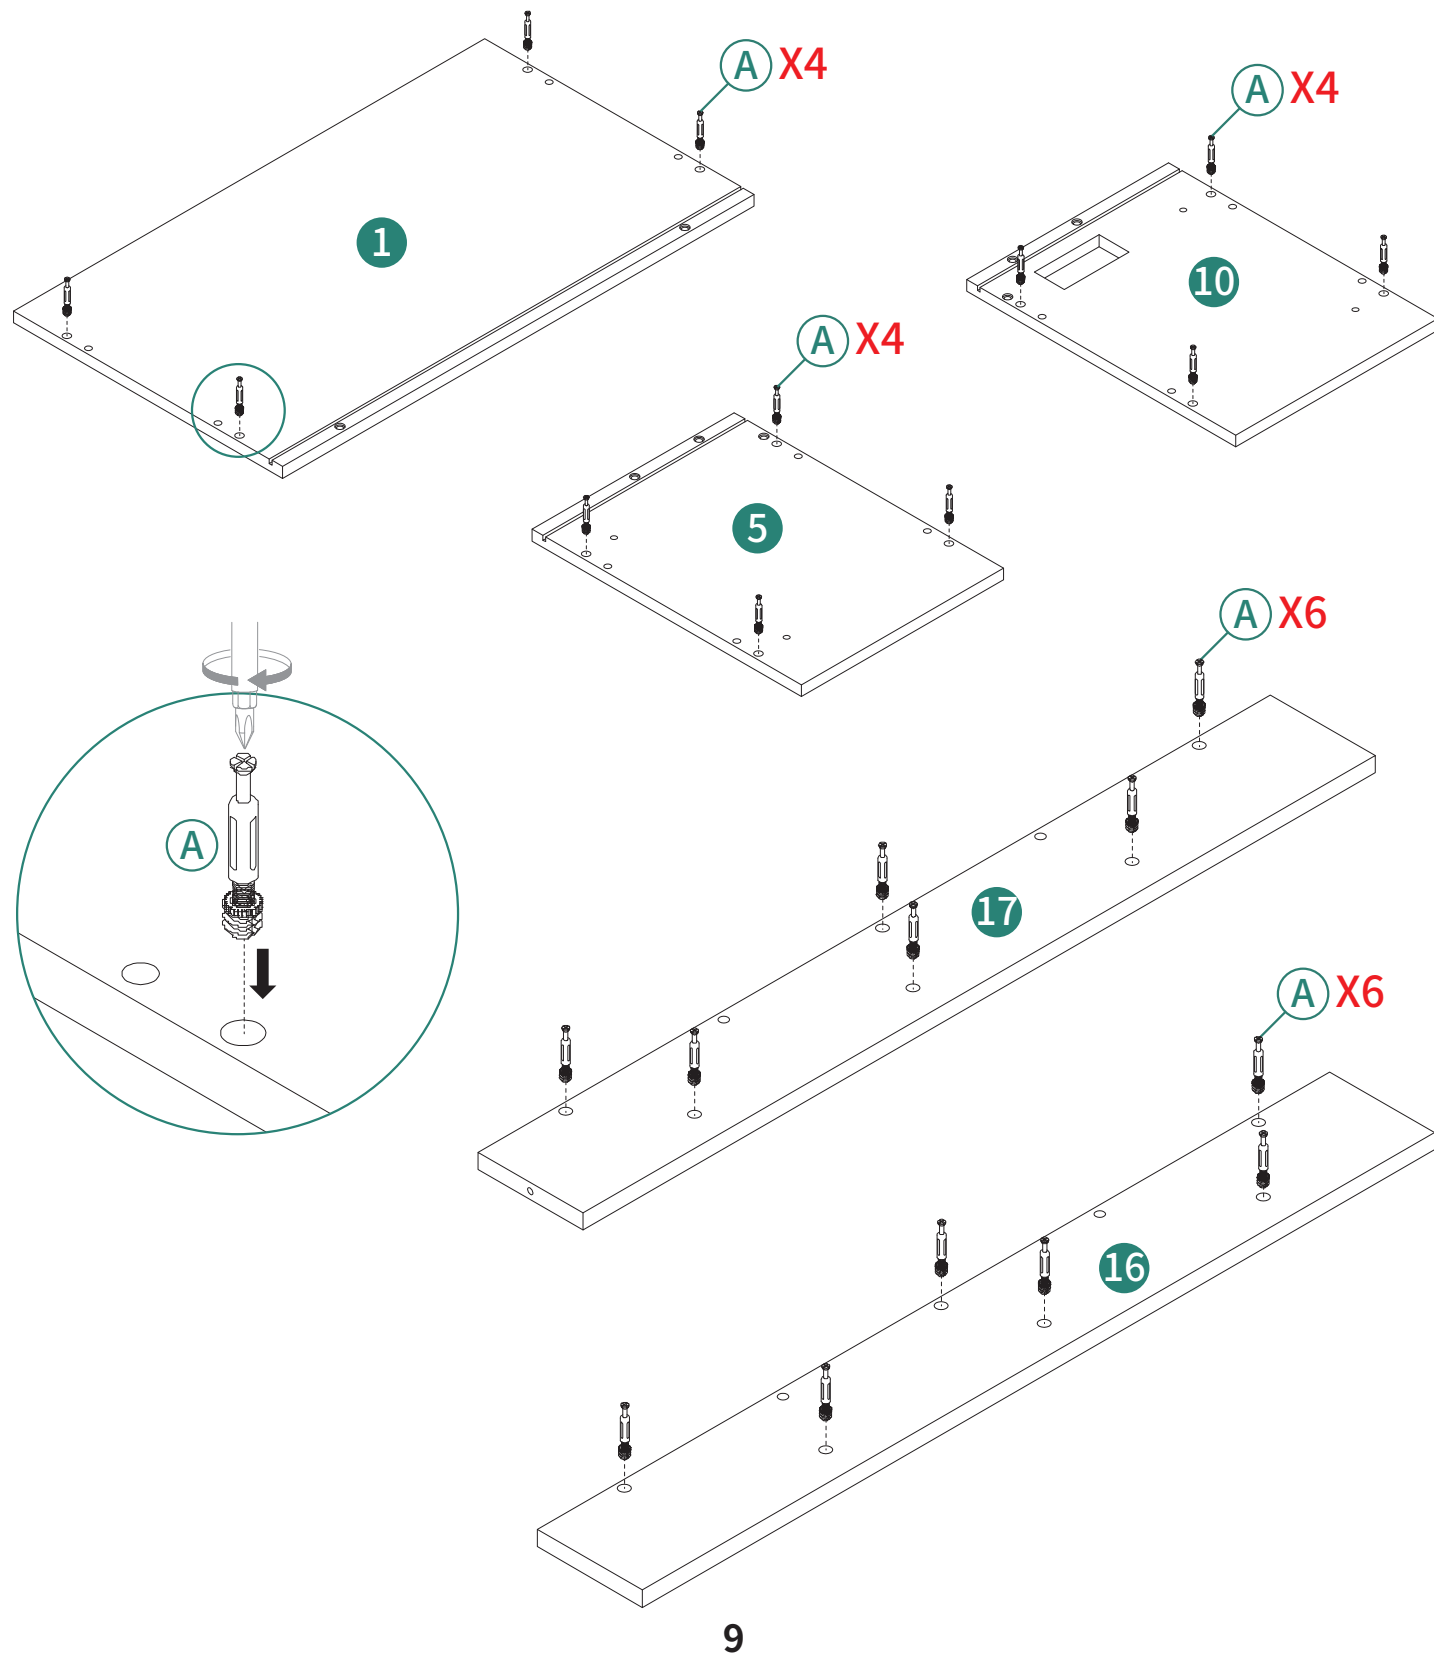


9

ASSEMBLY INSTRUCTIONS


3

①④ 1pc ①⑤ 1pc ①A 6pcs ①C 8pcs

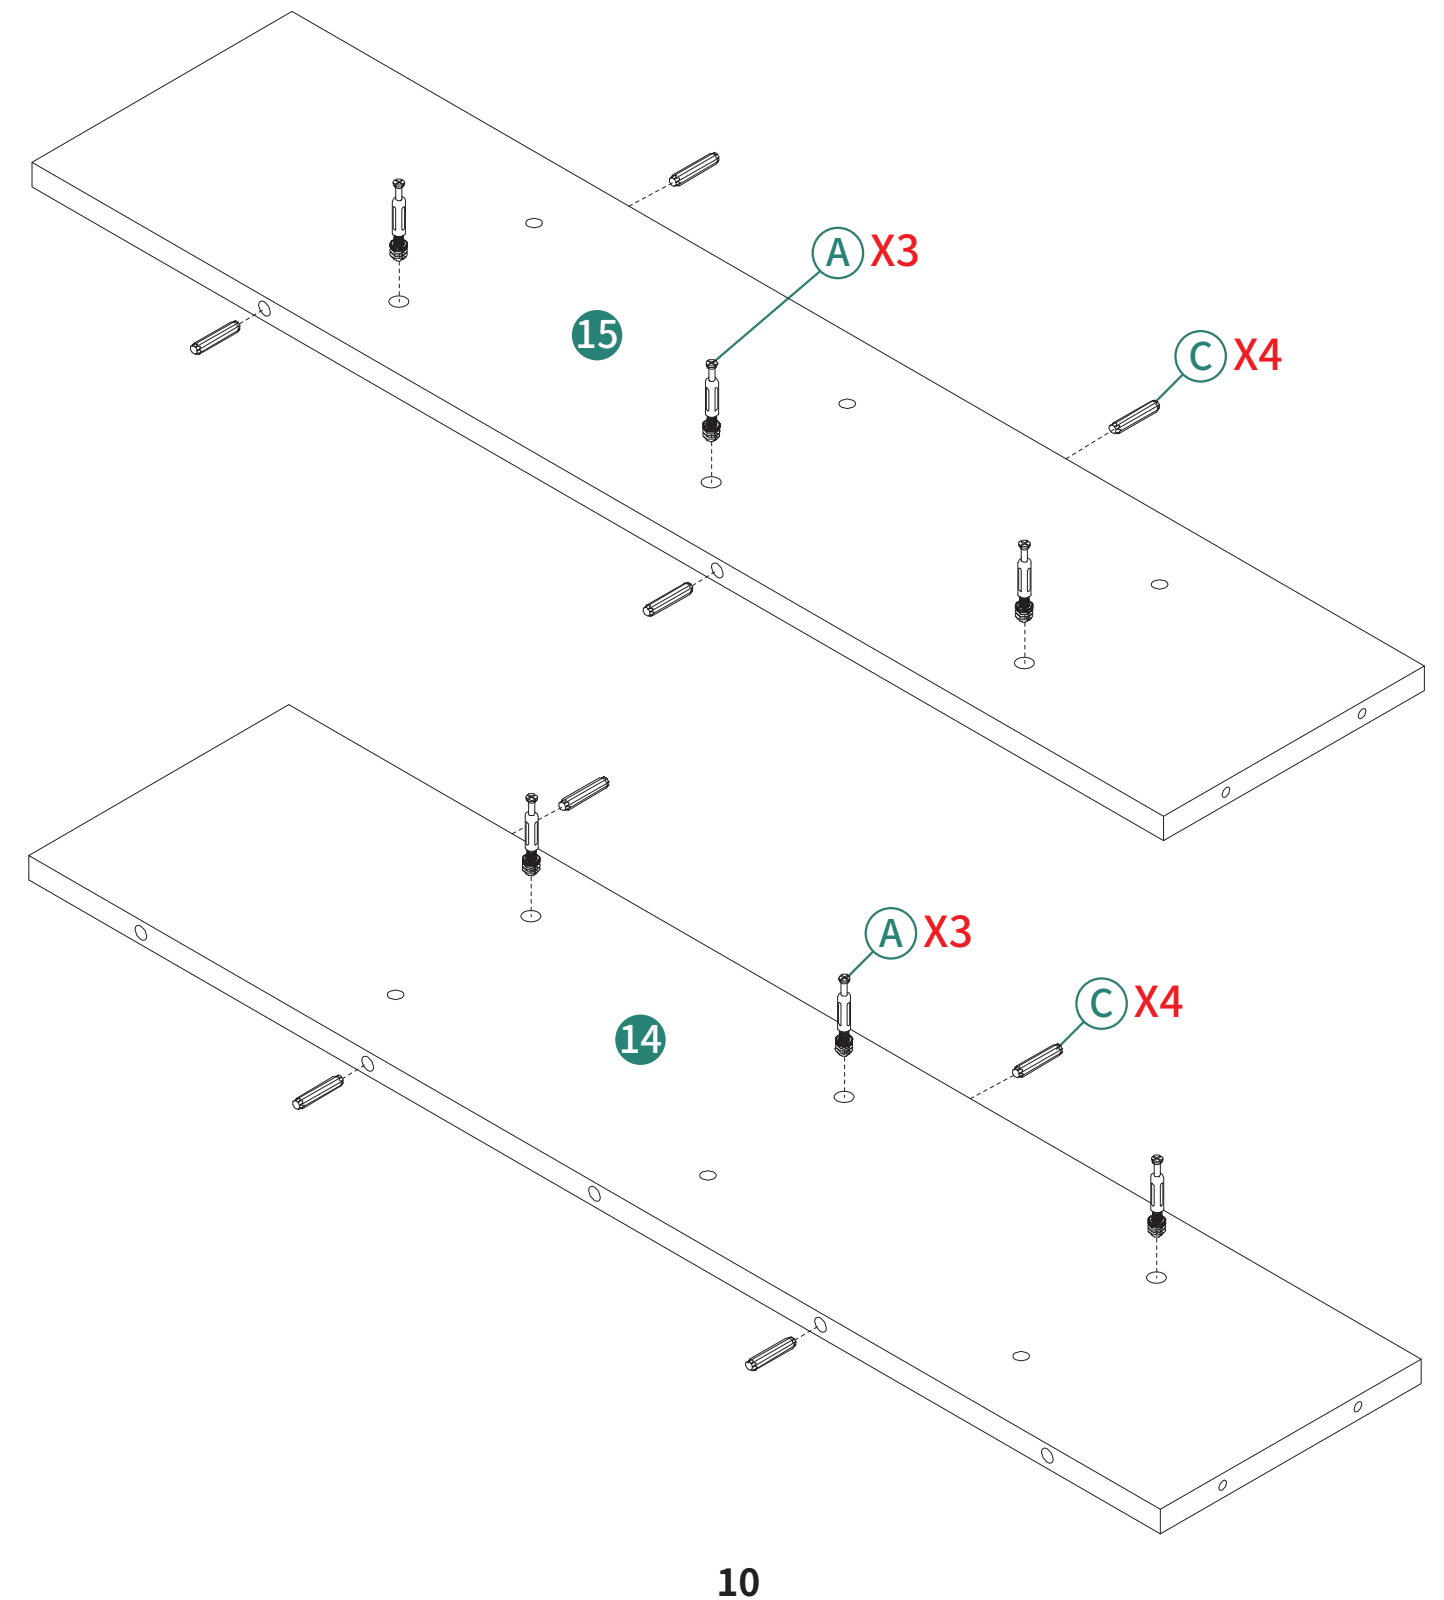


10

ASSEMBLY INSTRUCTIONS

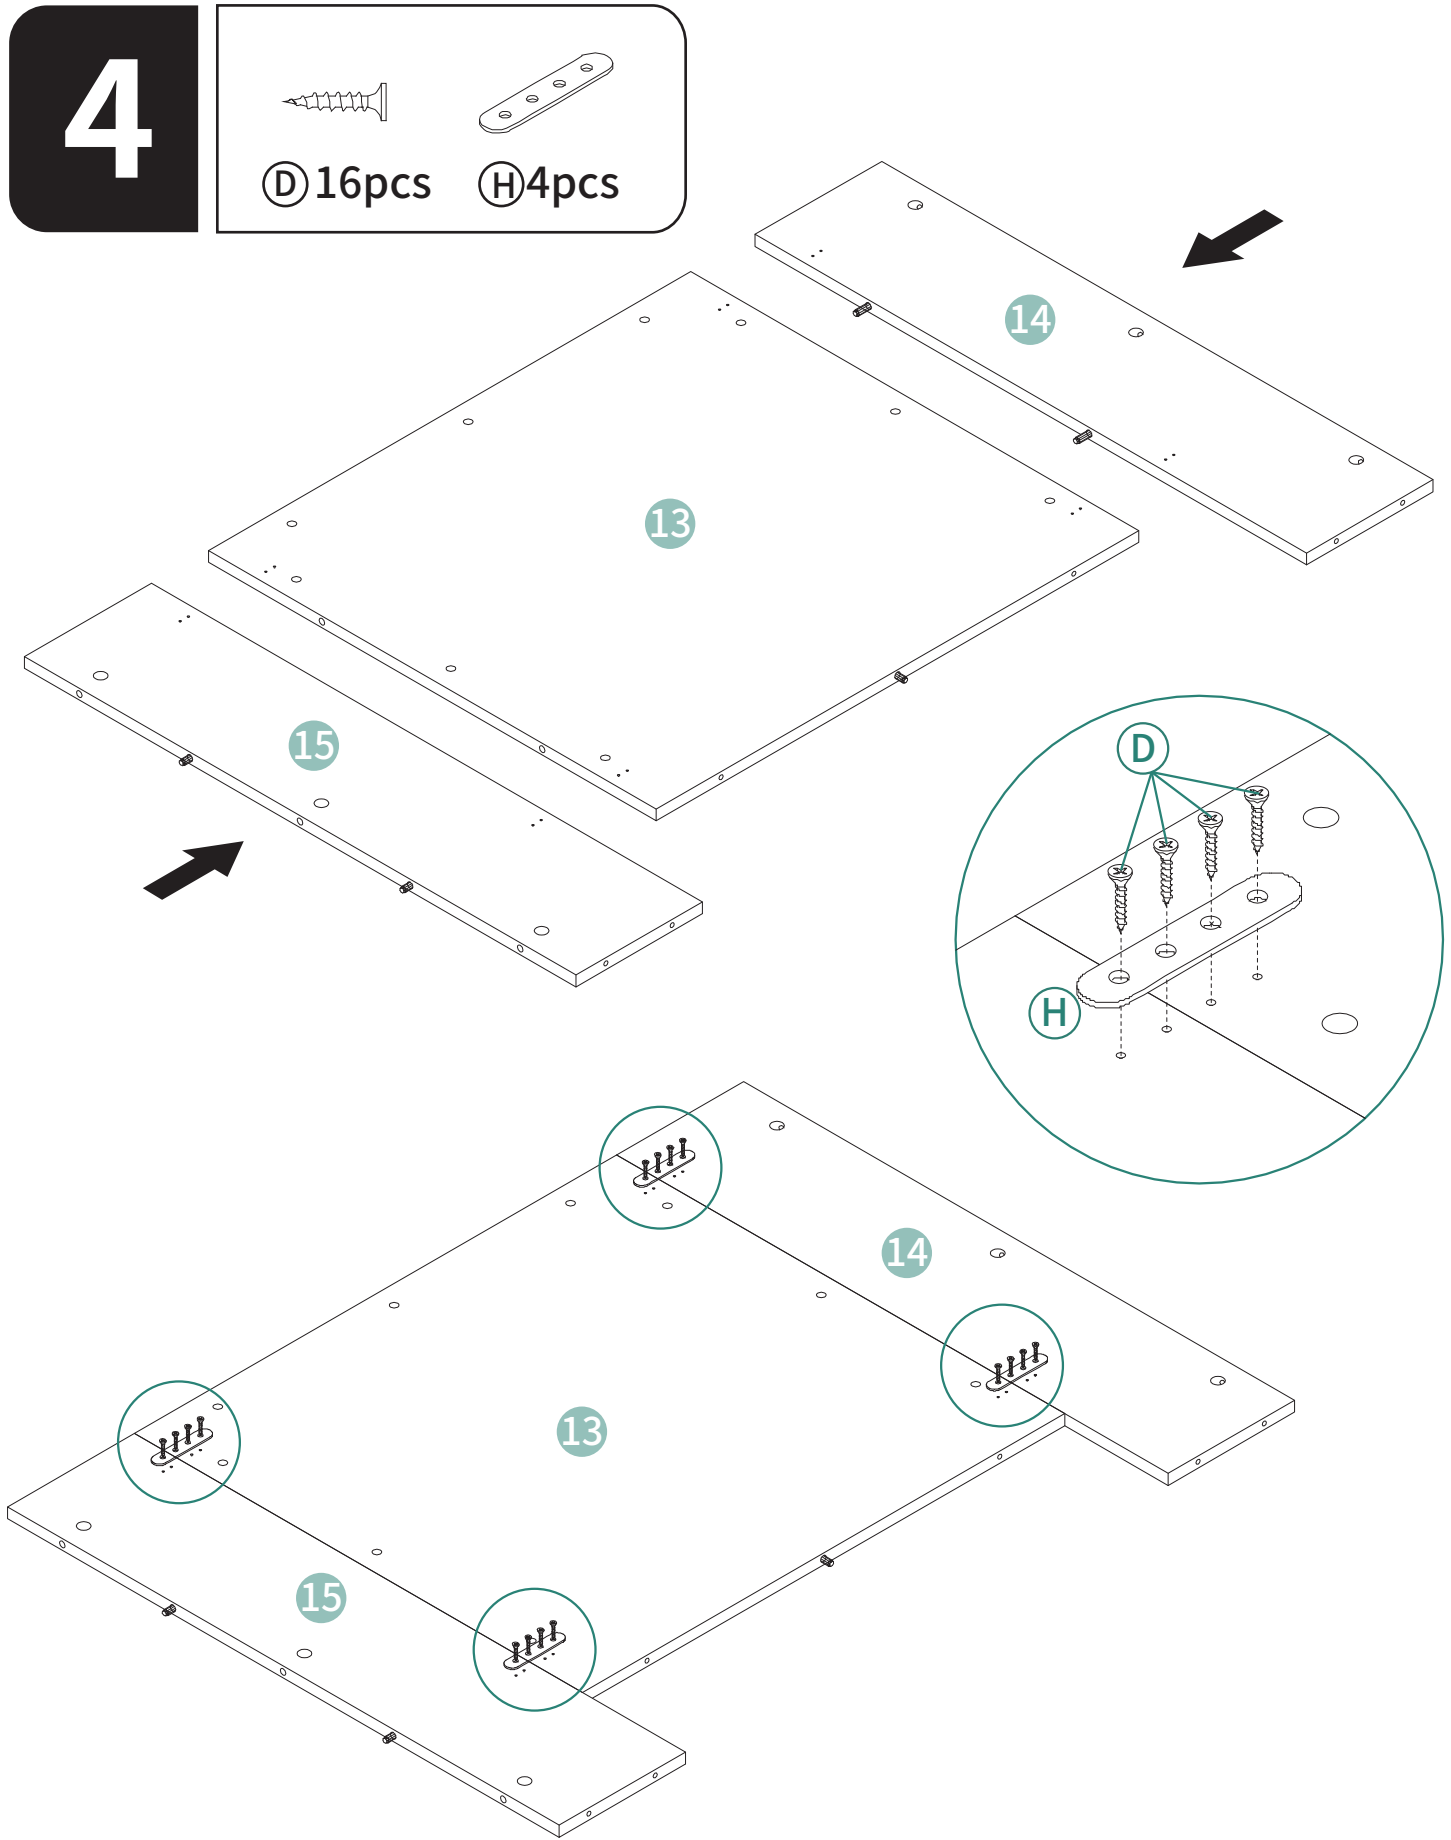

ASSEMBLY INSTRUCTIONS


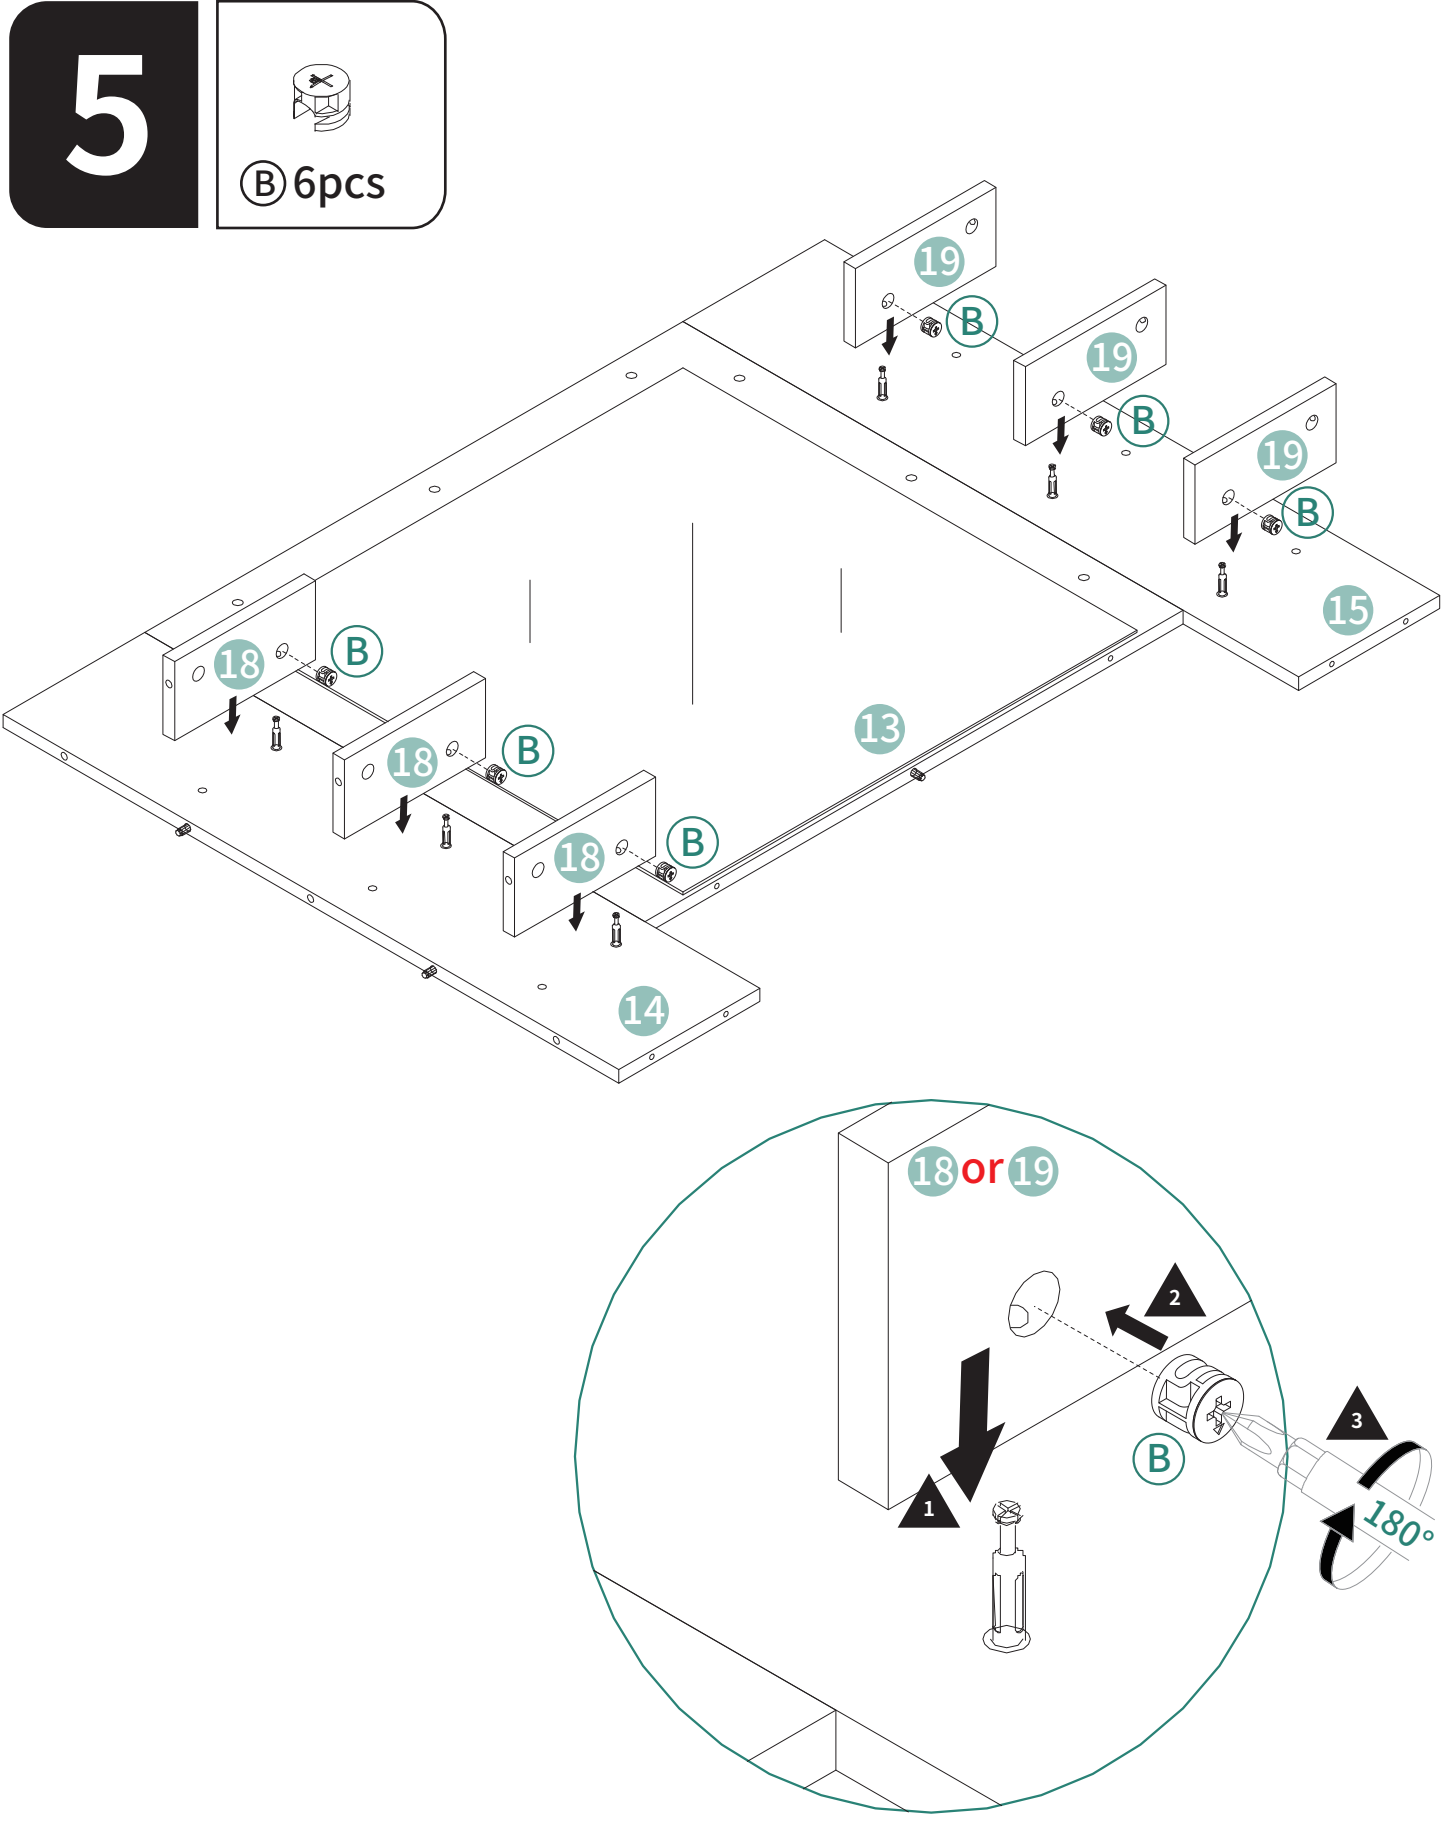


ASSEMBLY INSTRUCTIONS

6



Ⓑ 6pcs

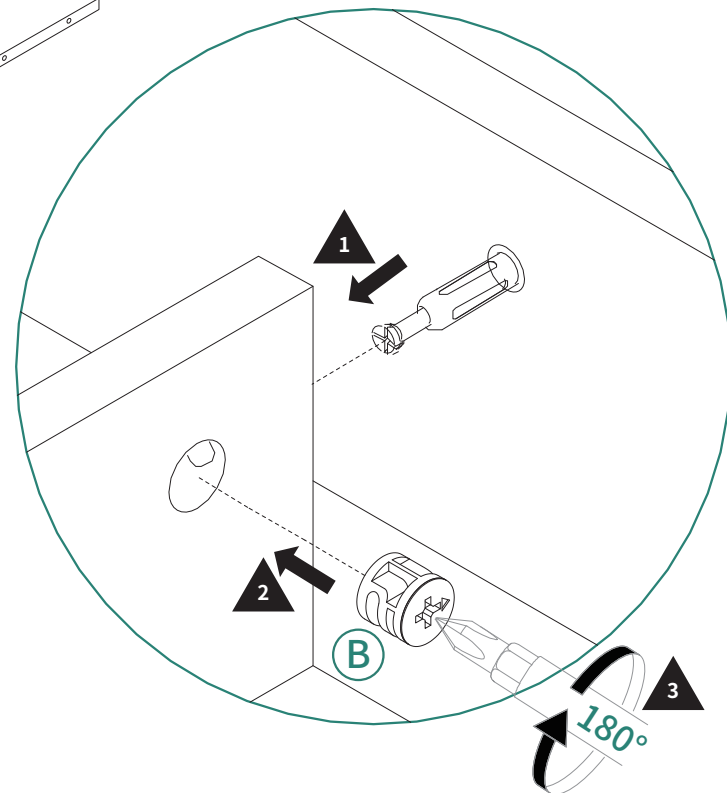
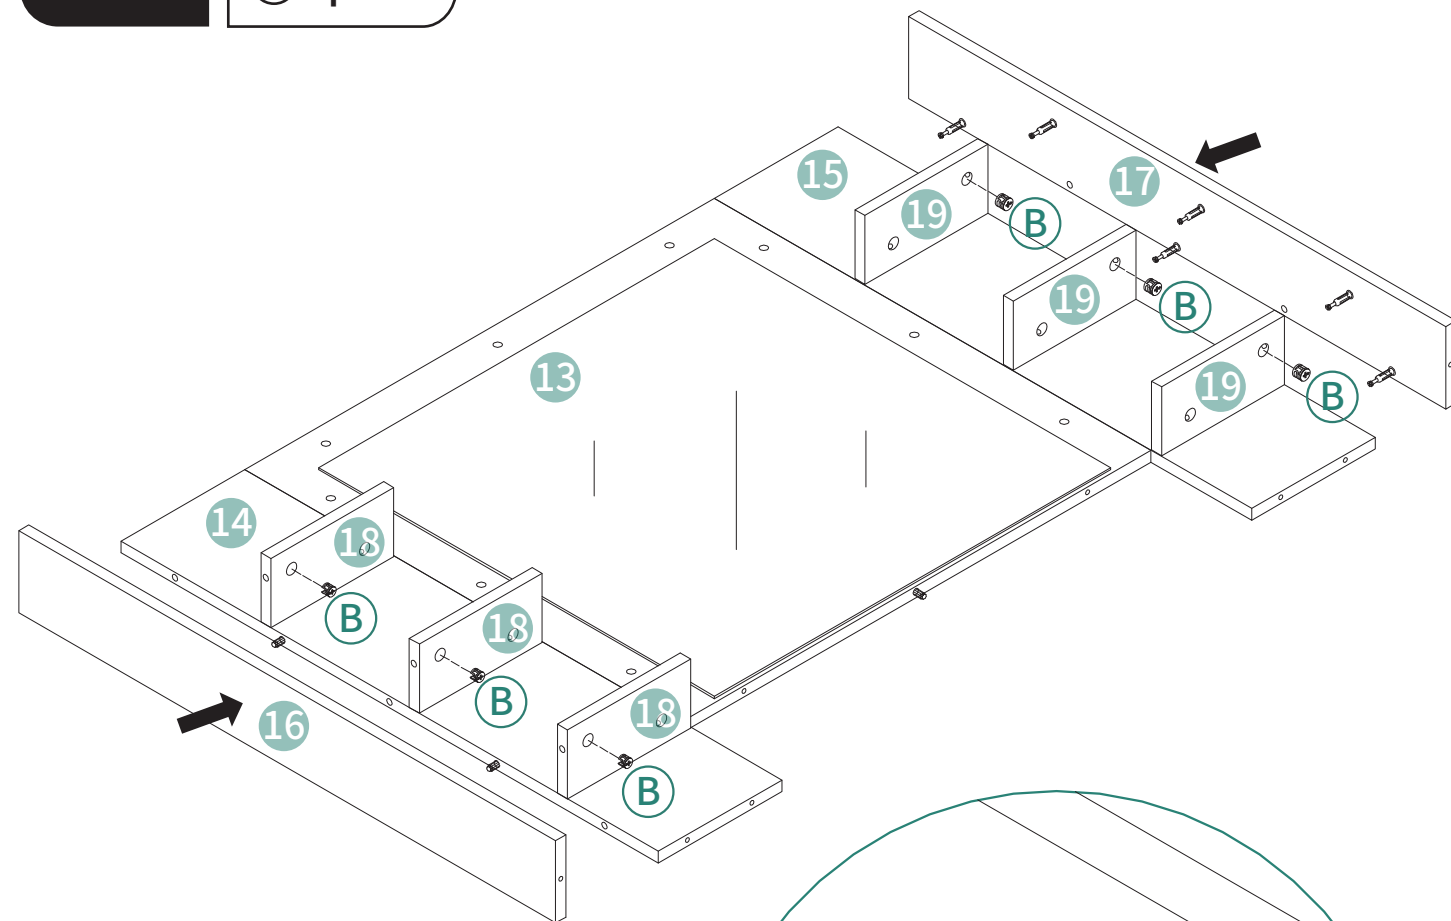


13

7



Ⓑ 6pcs

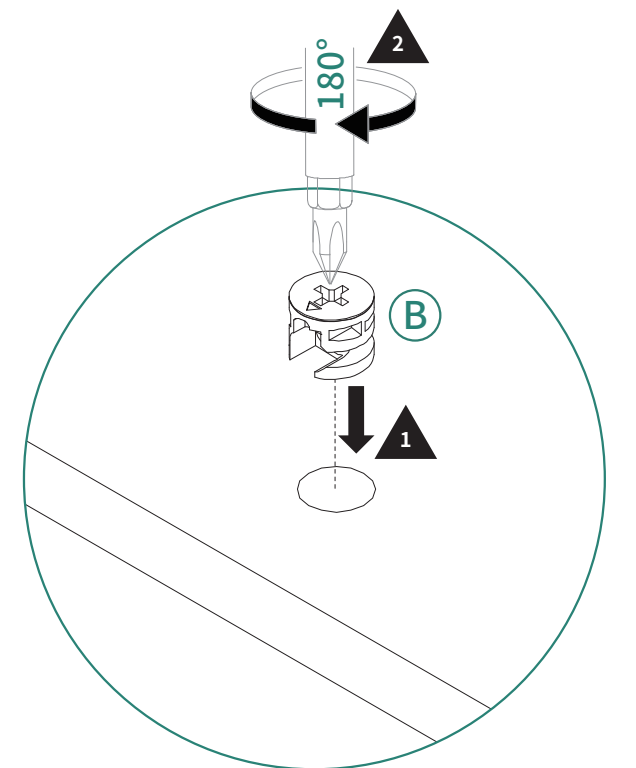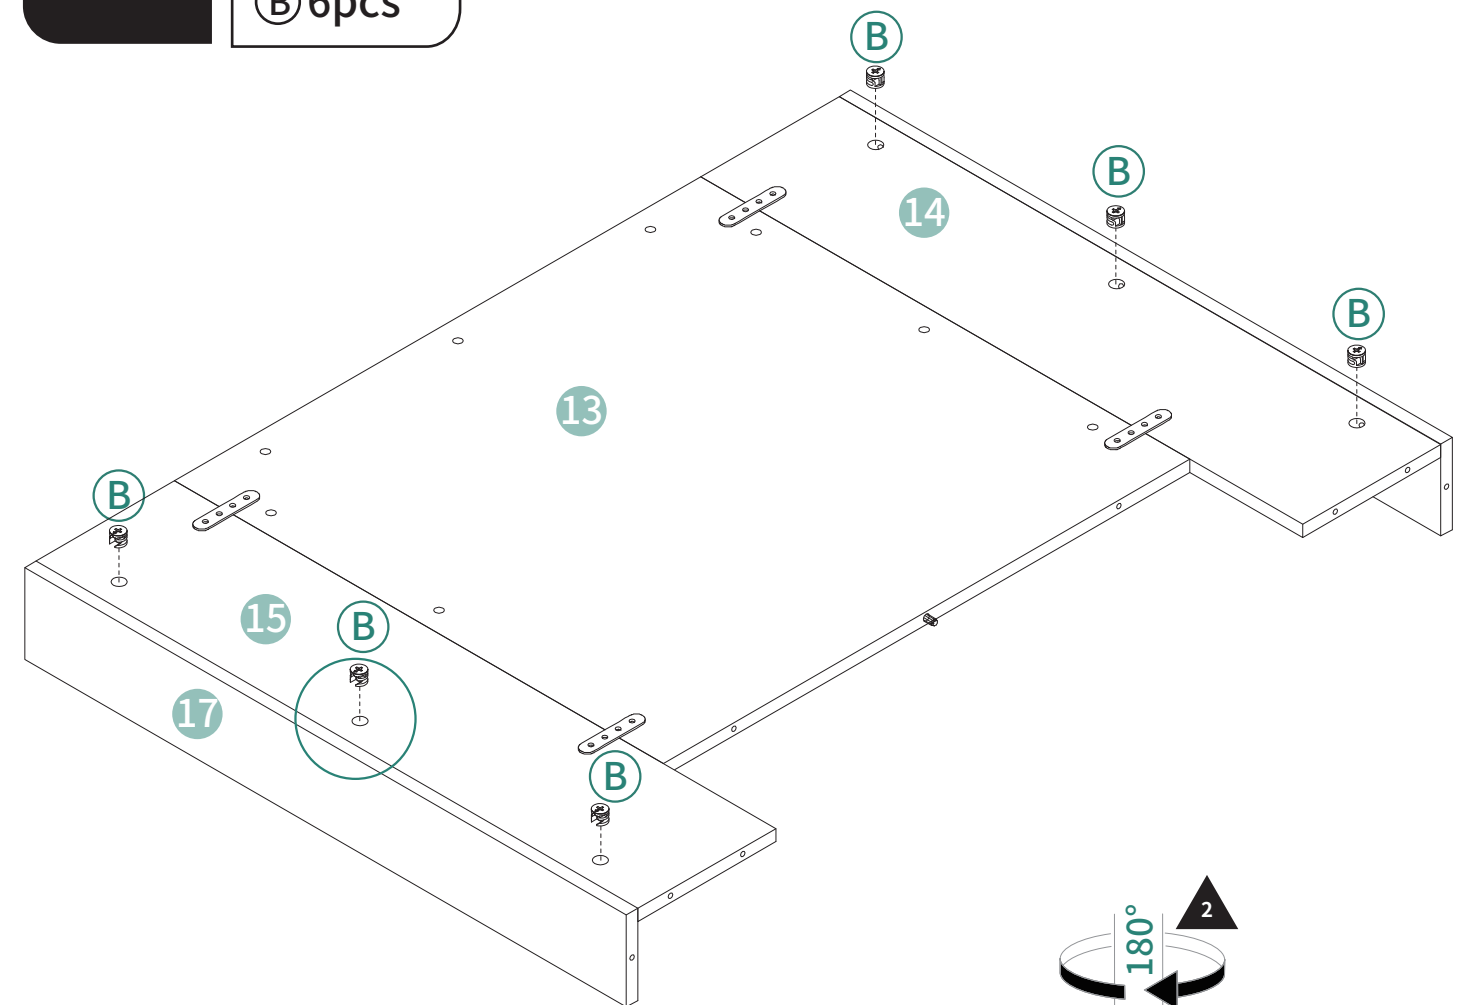


14

ASSEMBLY INSTRUCTIONS

8



ⓕ 2pcs



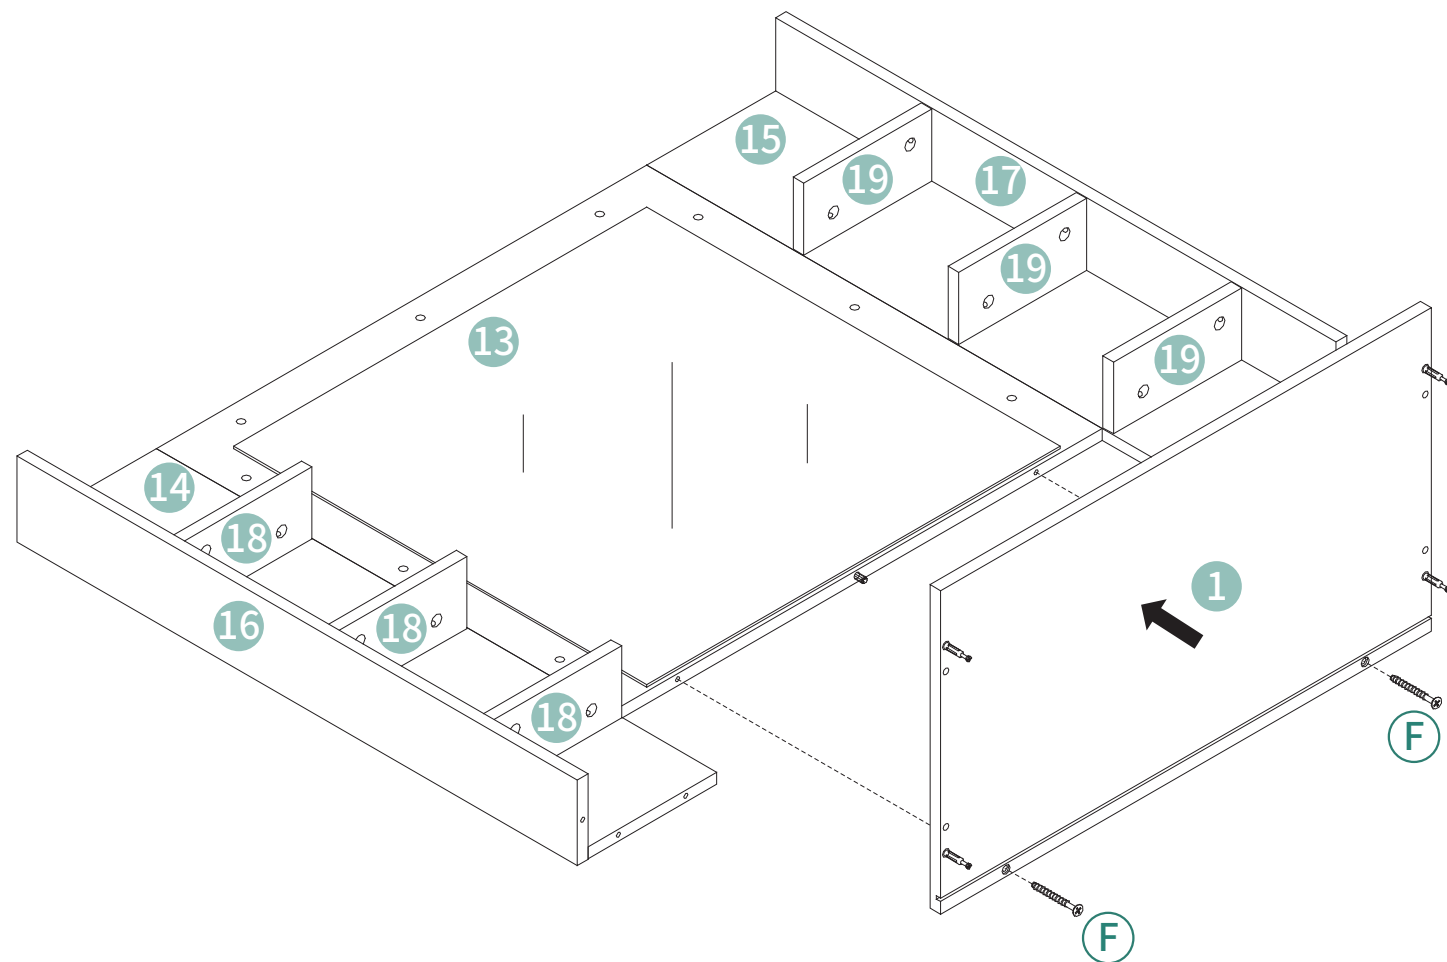


15

9






ⓑ 2pcs

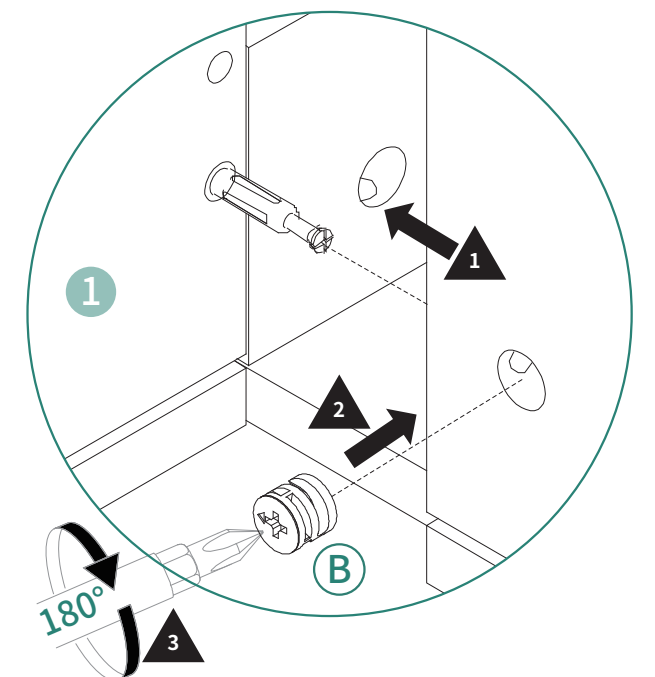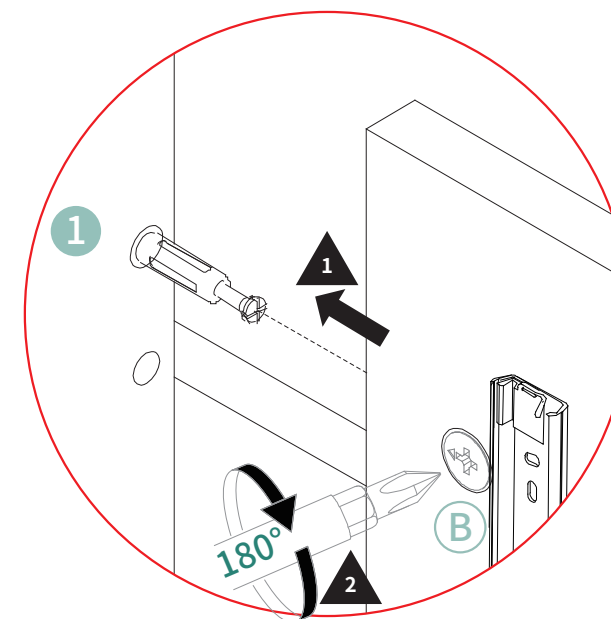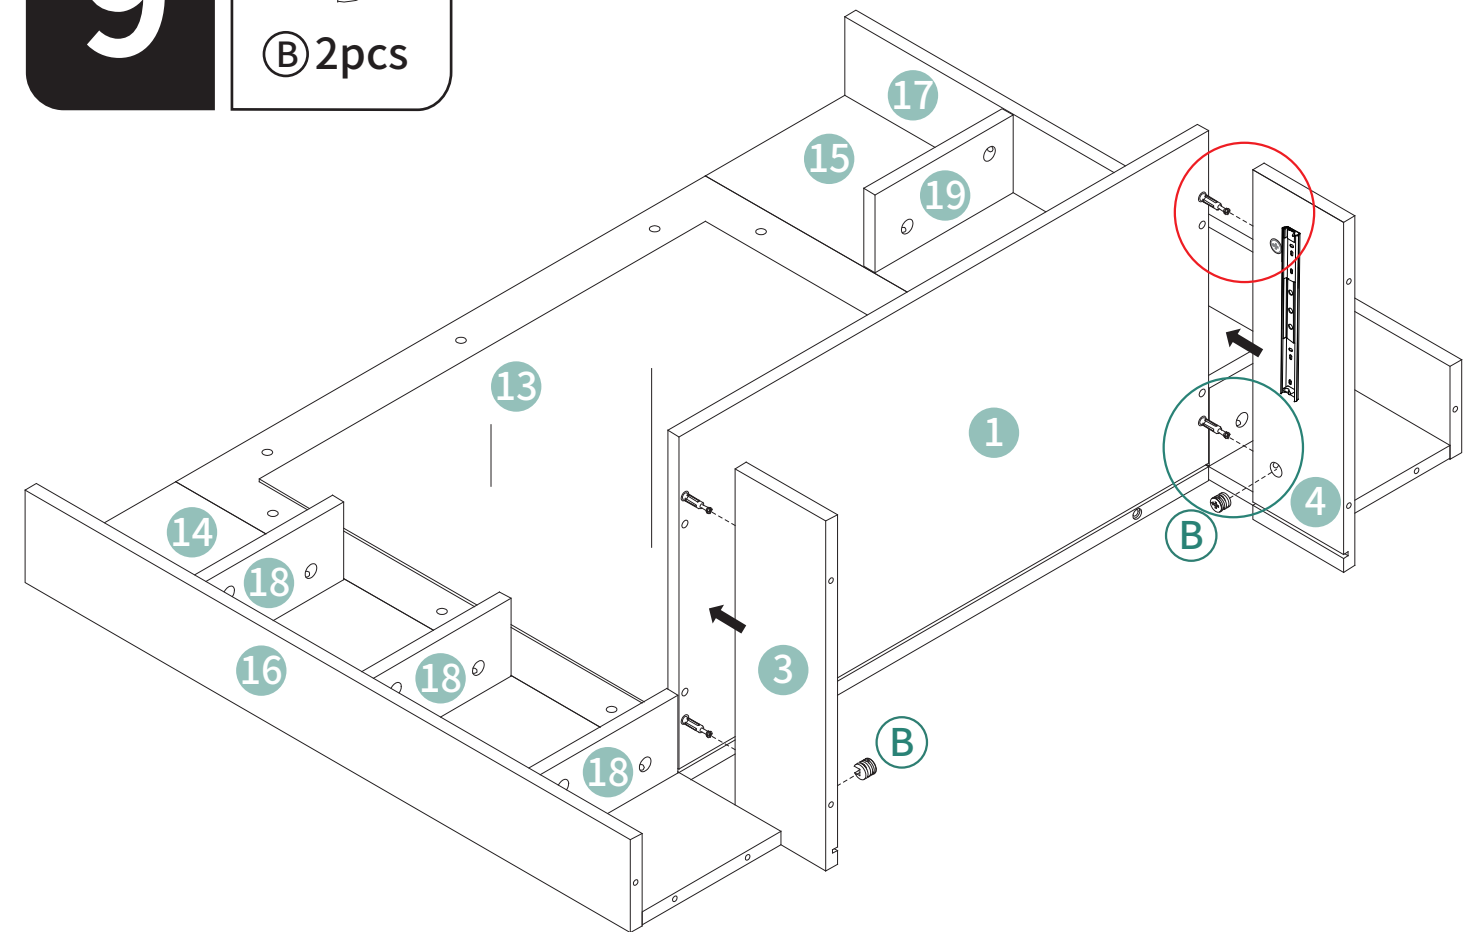

Note: Part B is the pre-installed accessory mentioned in step 1.




16

ASSEMBLY INSTRUCTIONS

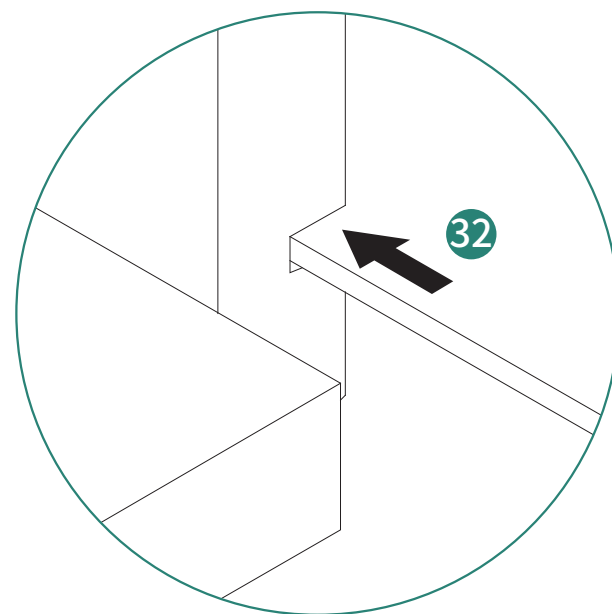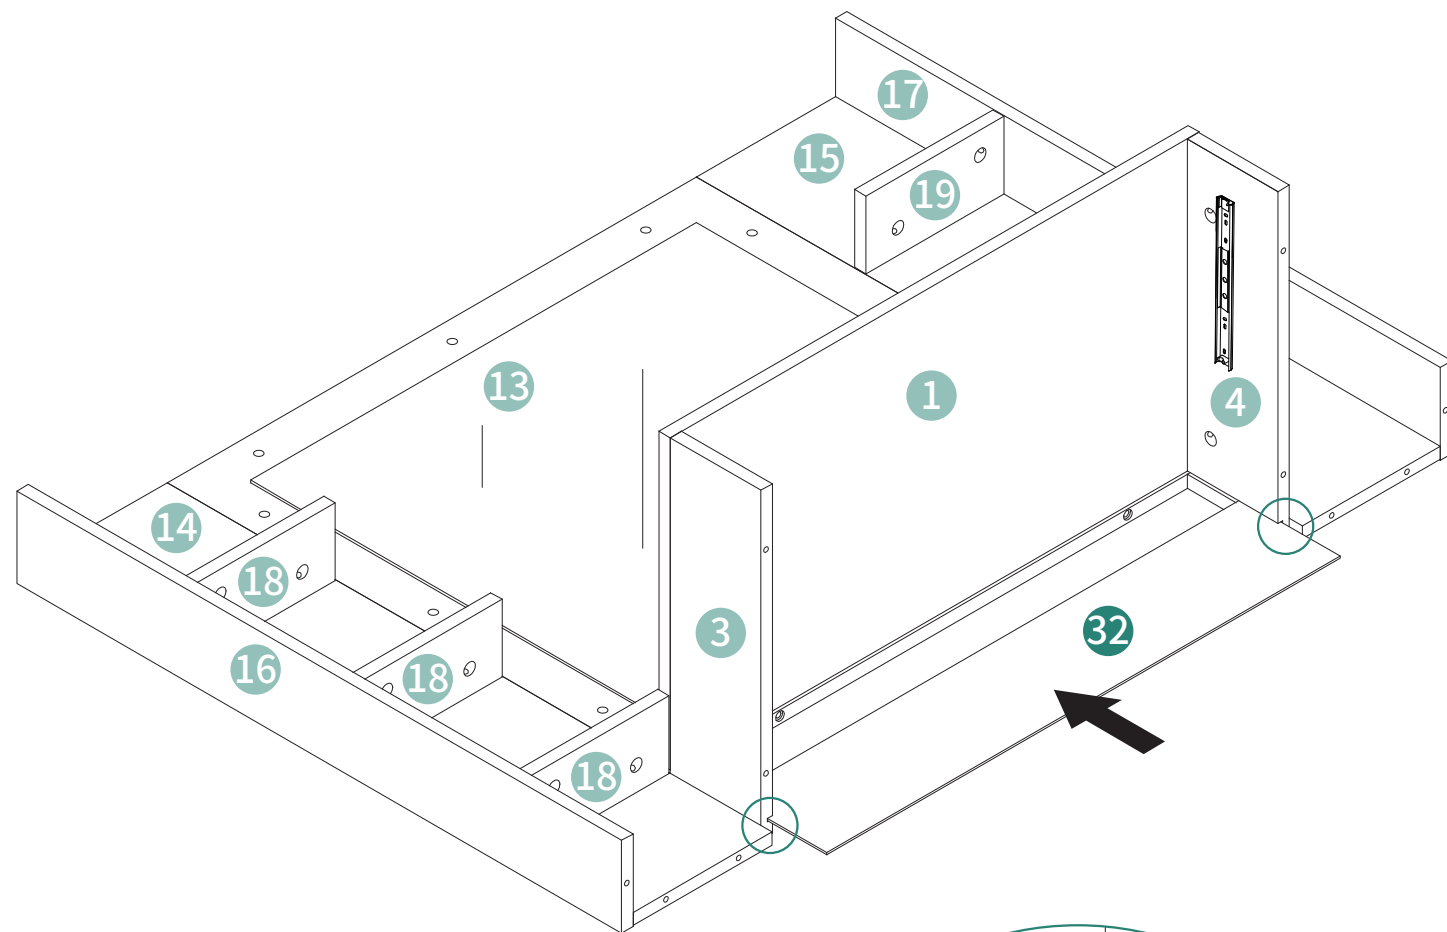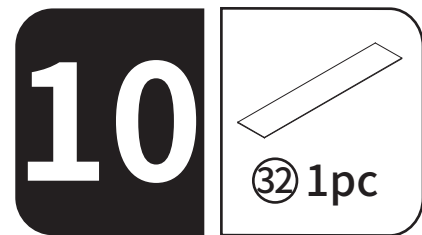

17

ASSEMBLY INSTRUCTIONS

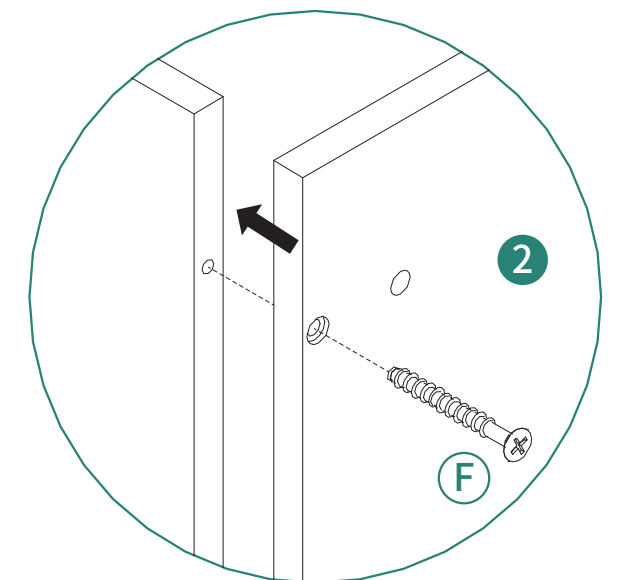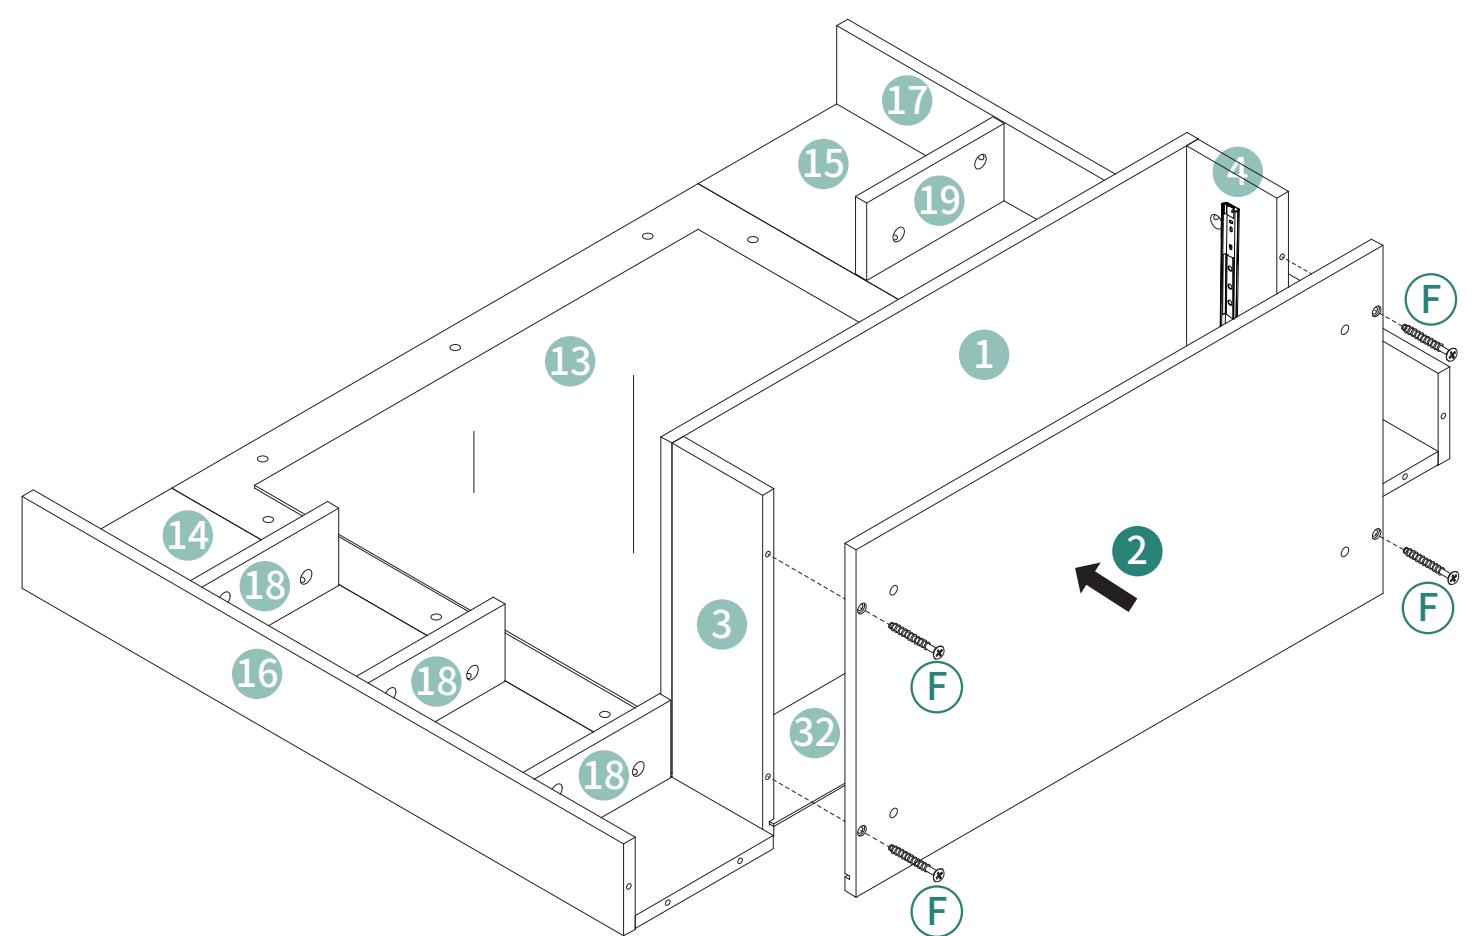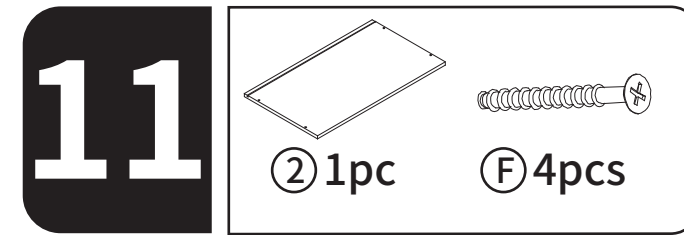


18

ASSEMBLY INSTRUCTIONS

12

ⓕ 6pcs ⓖ 4pcs

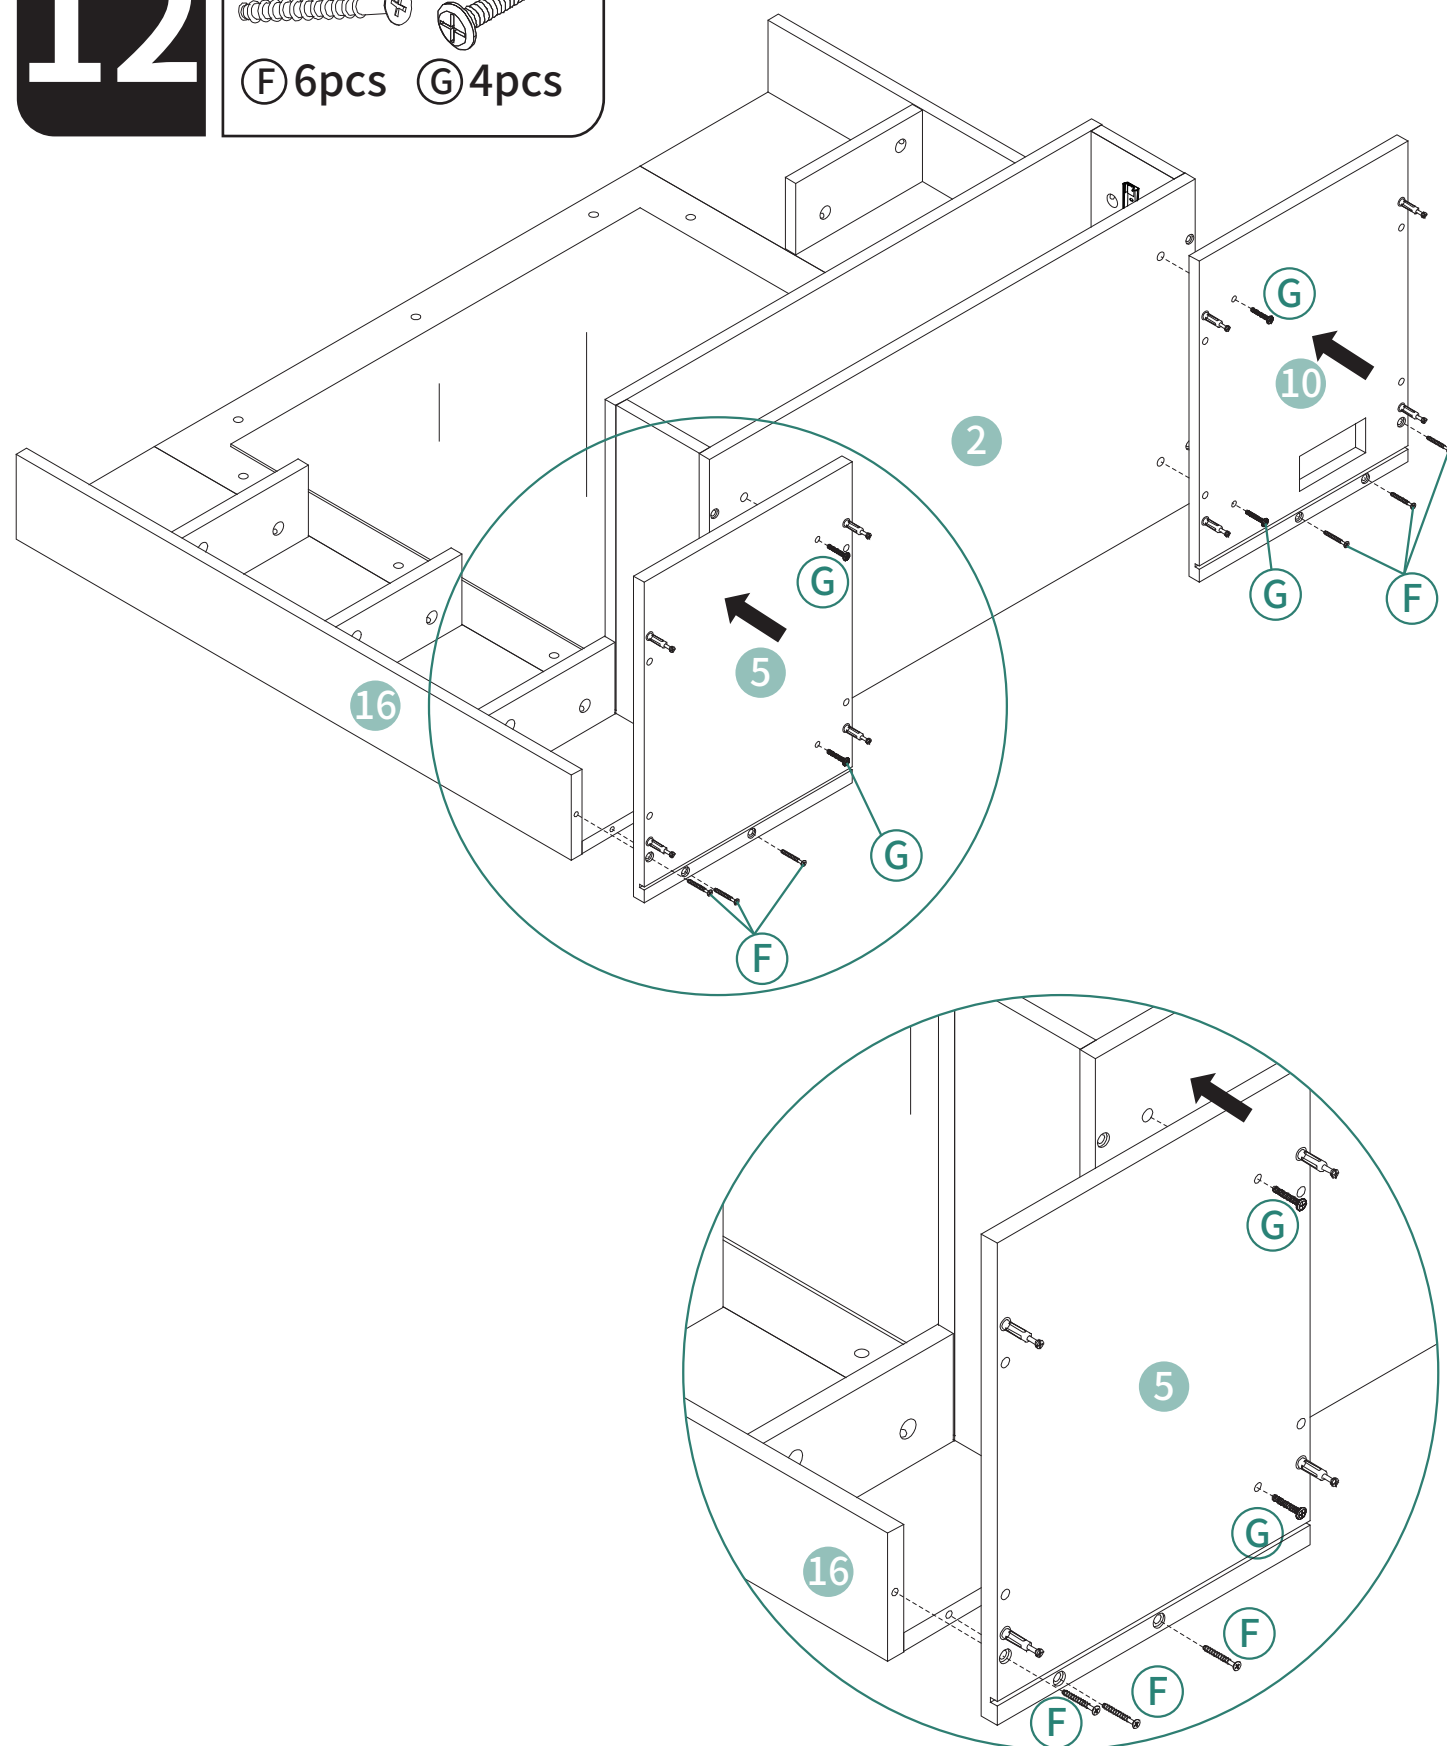


19

ASSEMBLY INSTRUCTIONS




13

ⓑ 8pcs

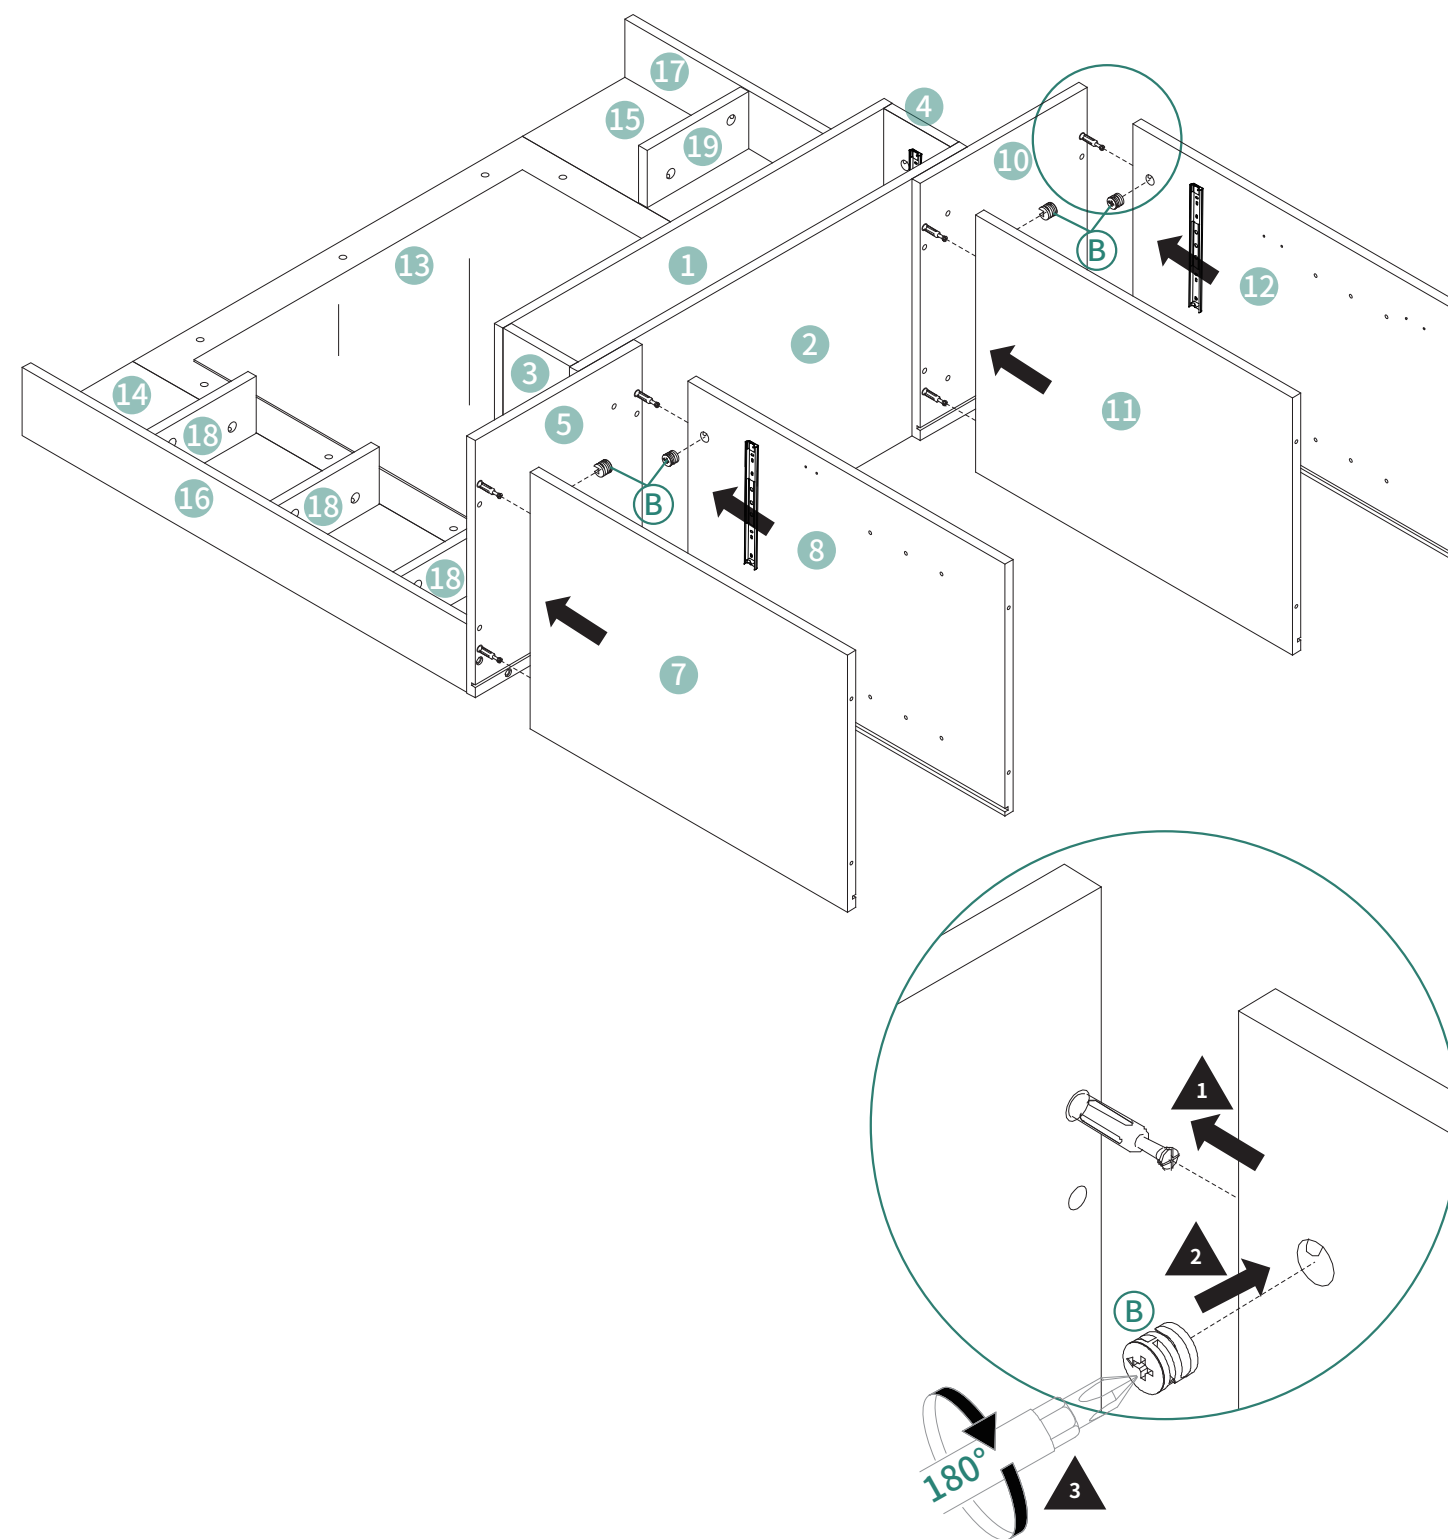



20

ASSEMBLY INSTRUCTIONS

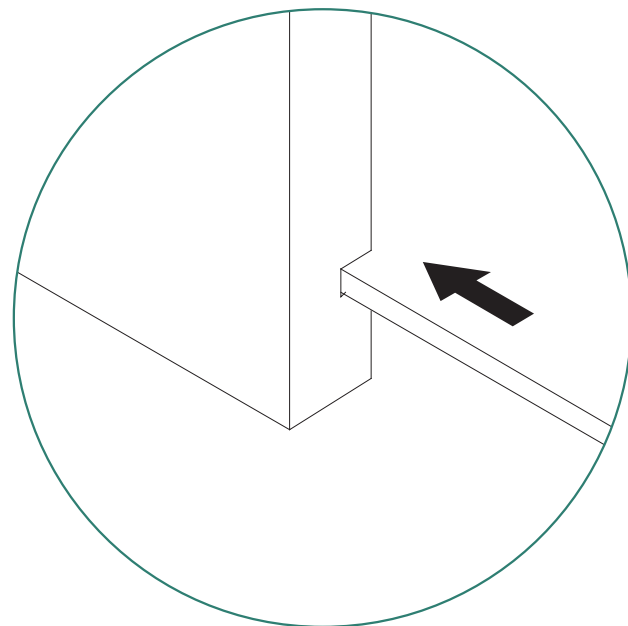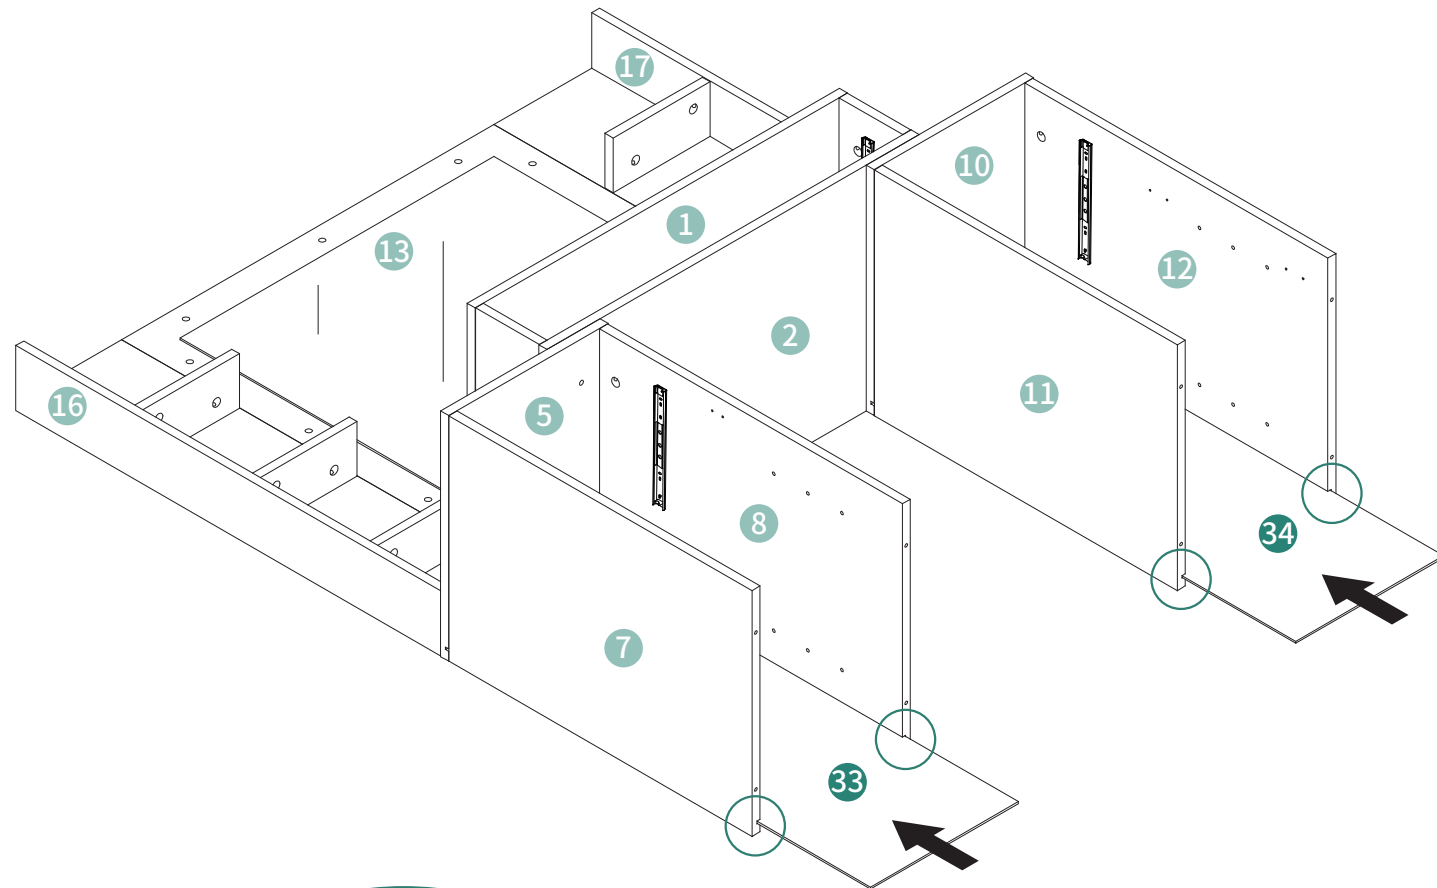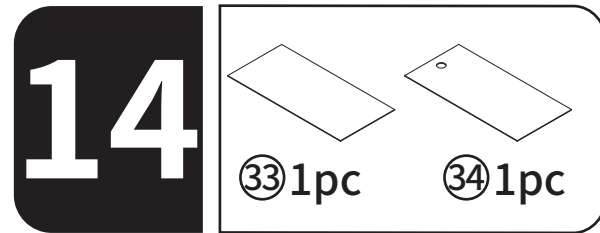

21





ASSEMBLY INSTRUCTIONS

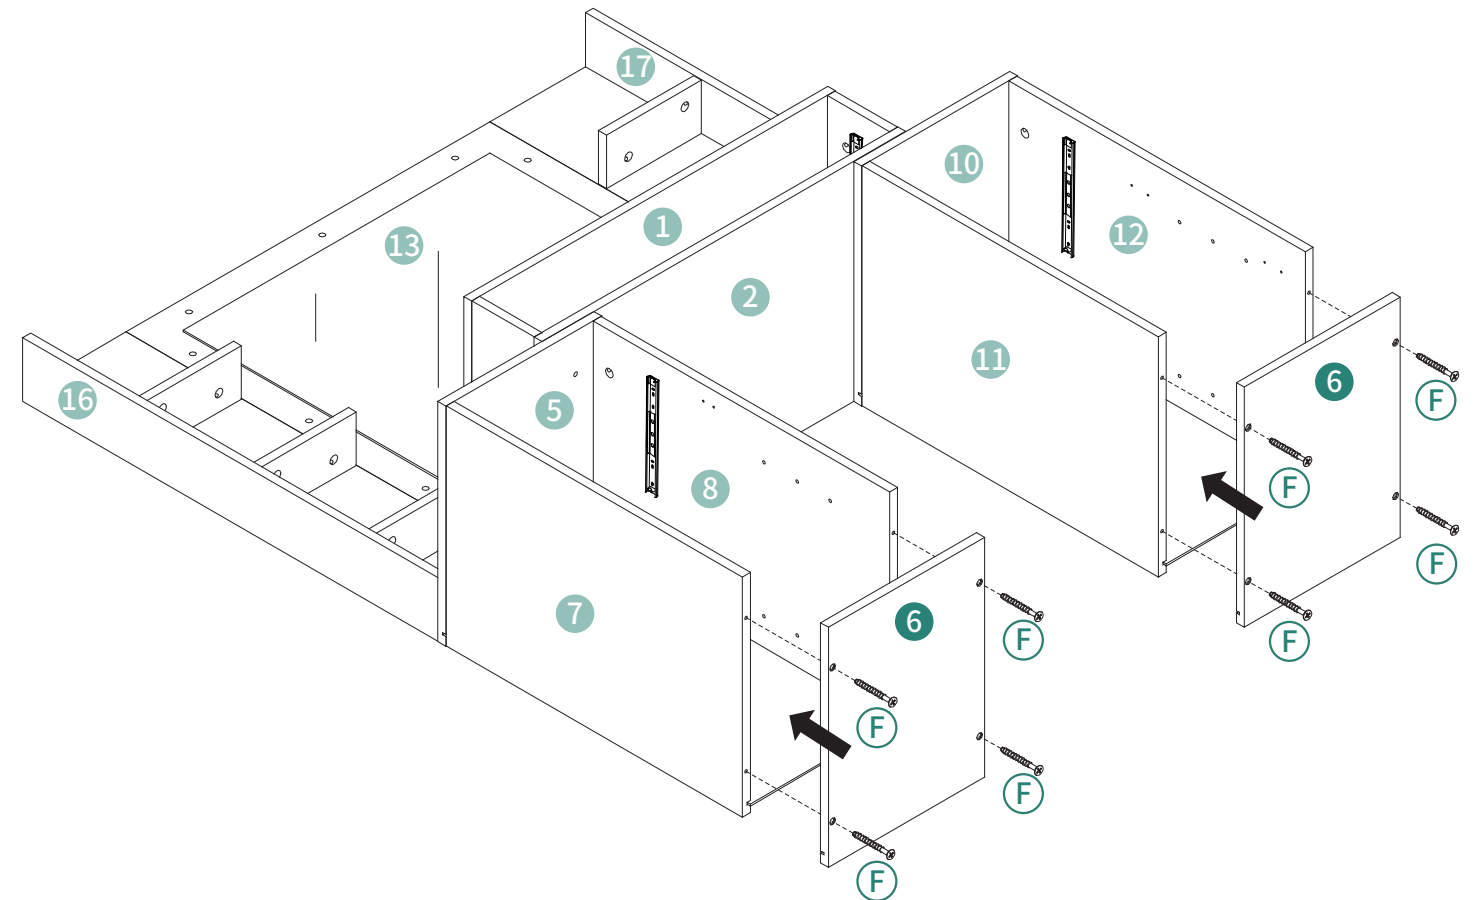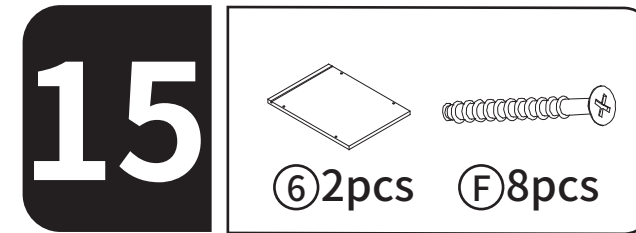

22

ASSEMBLY INSTRUCTIONS





16

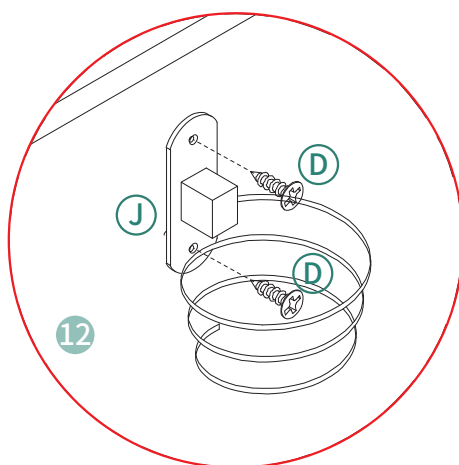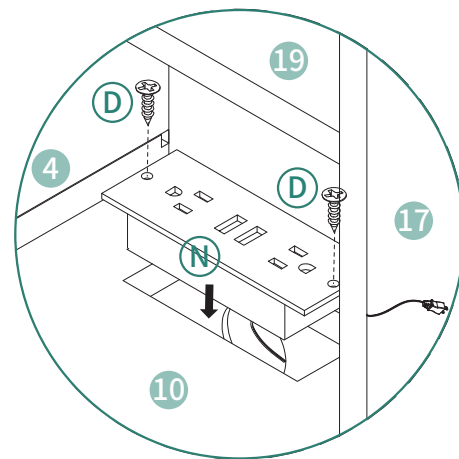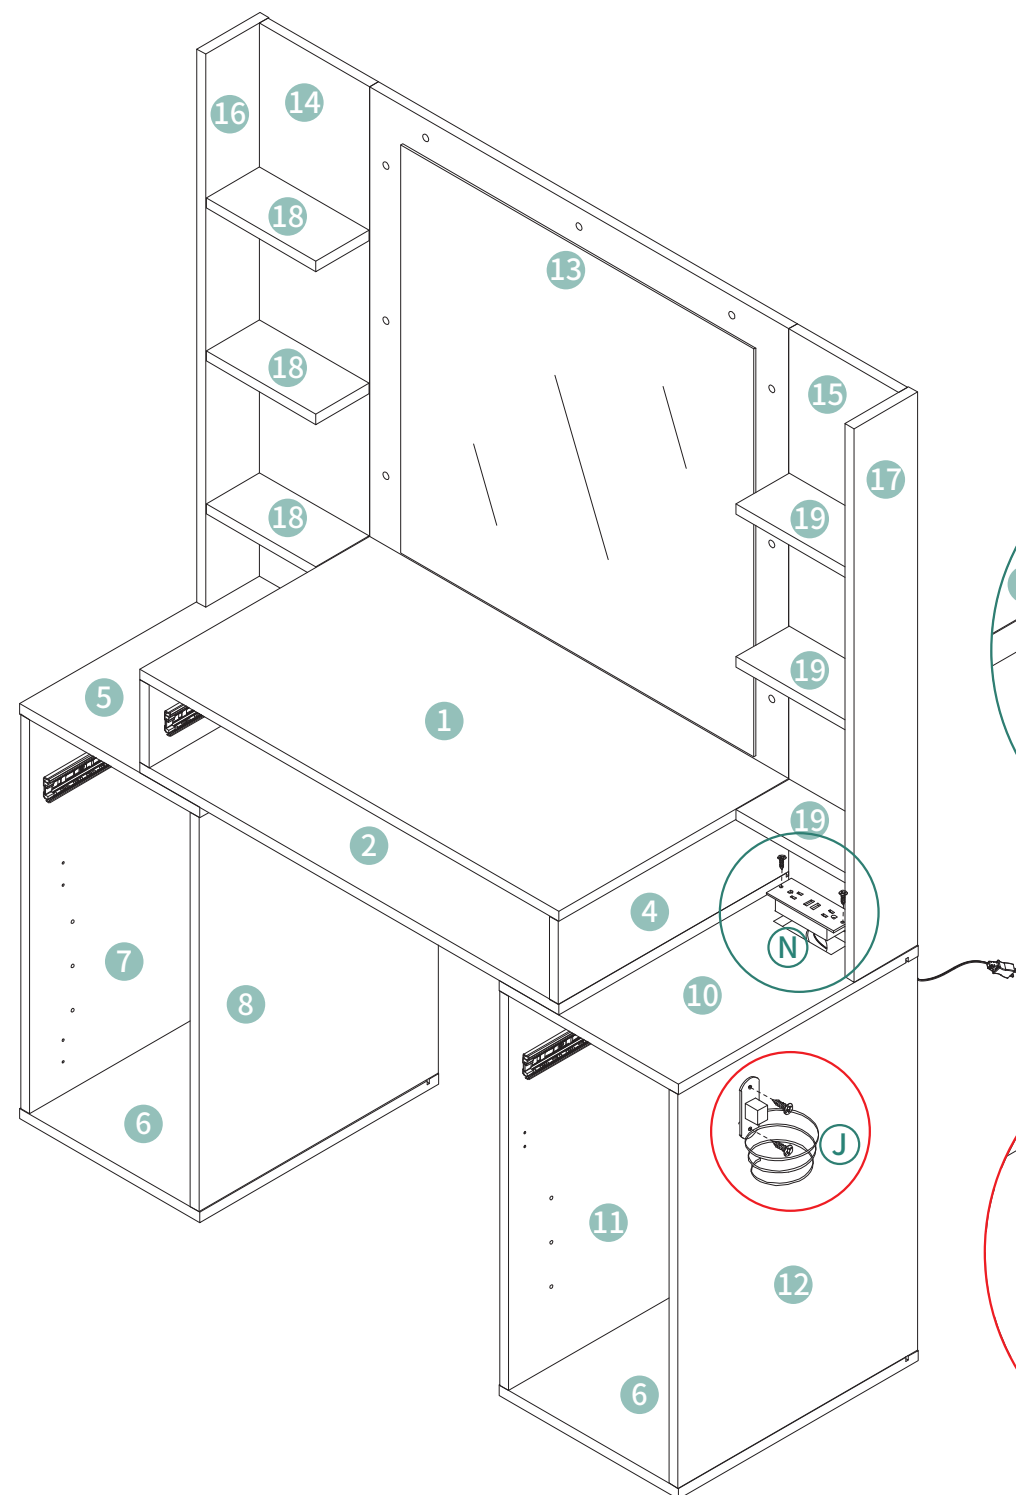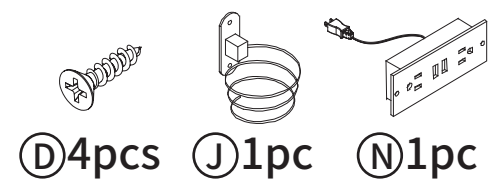

23

ASSEMBLY INSTRUCTIONS

17

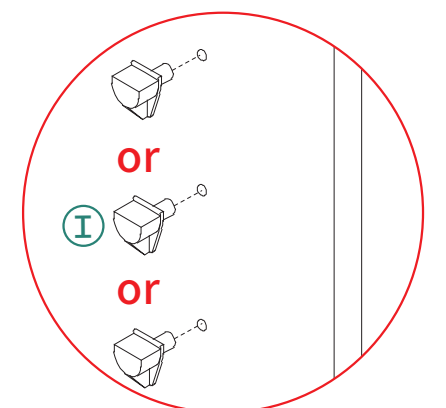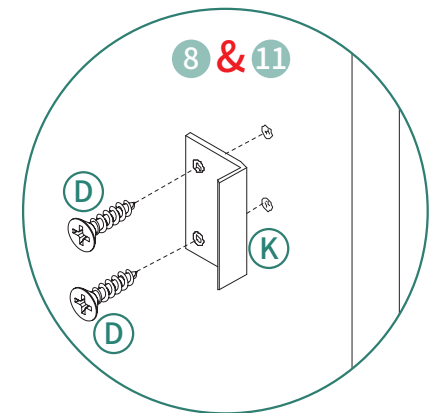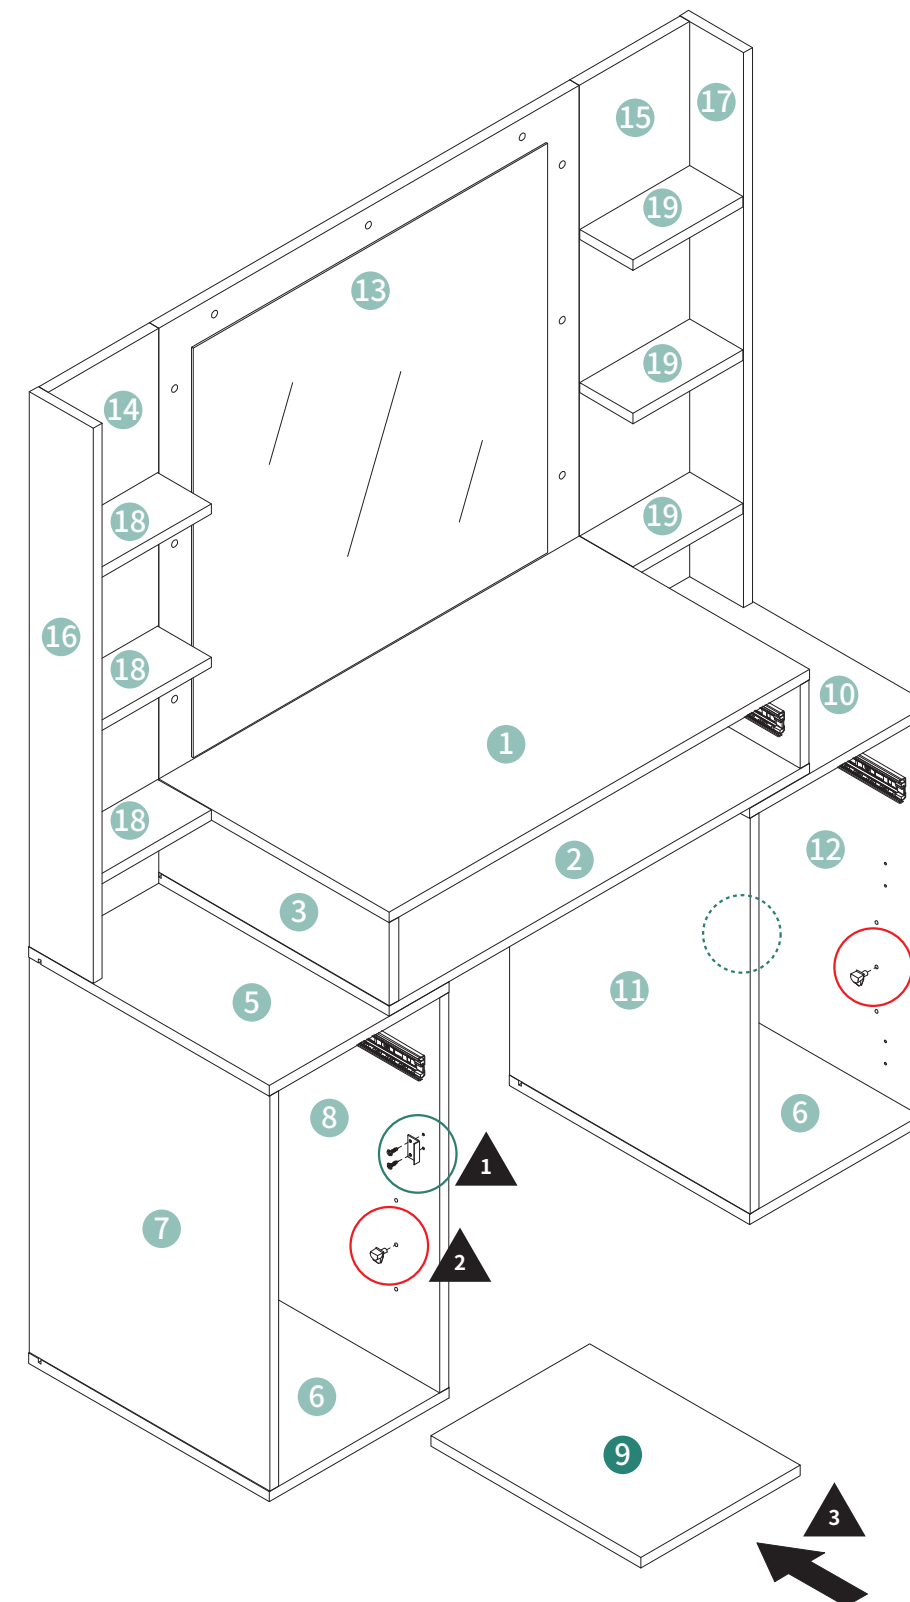
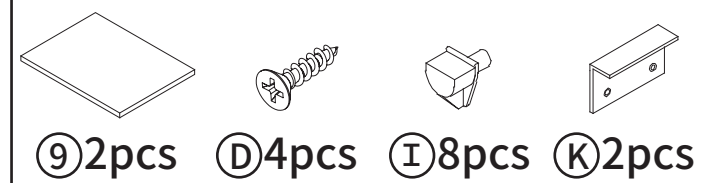


24

ASSEMBLY INSTRUCTIONS

18

②0 2pcs ①D 24pcs ①L 2pcs ①M 4pcs ①R 4pcs

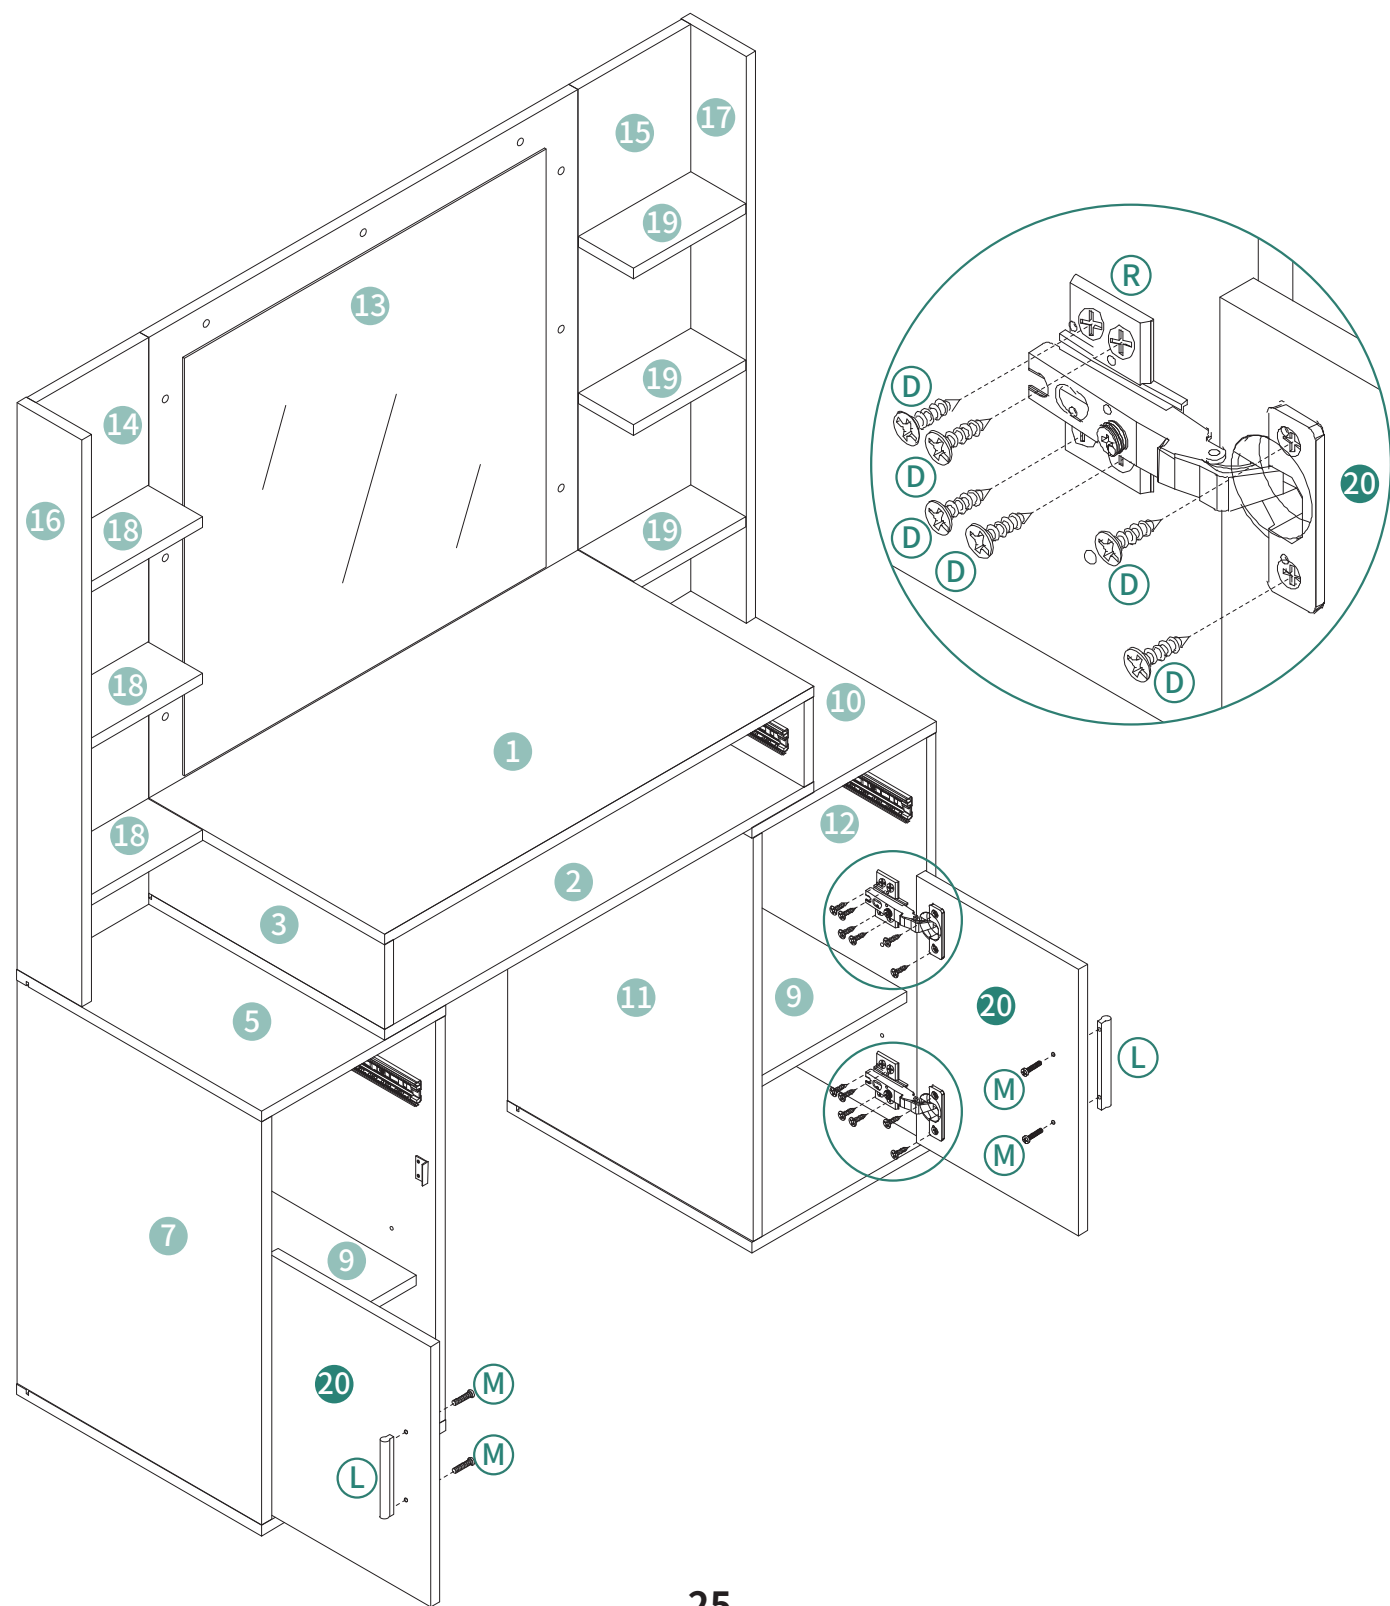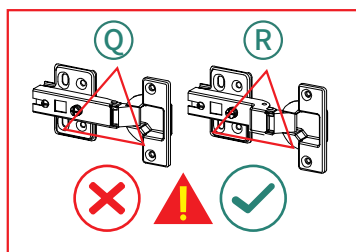


25

ASSEMBLY INSTRUCTIONS


19

②1 1pc ②2 1pc ②6 2pcs ①A 14pcs

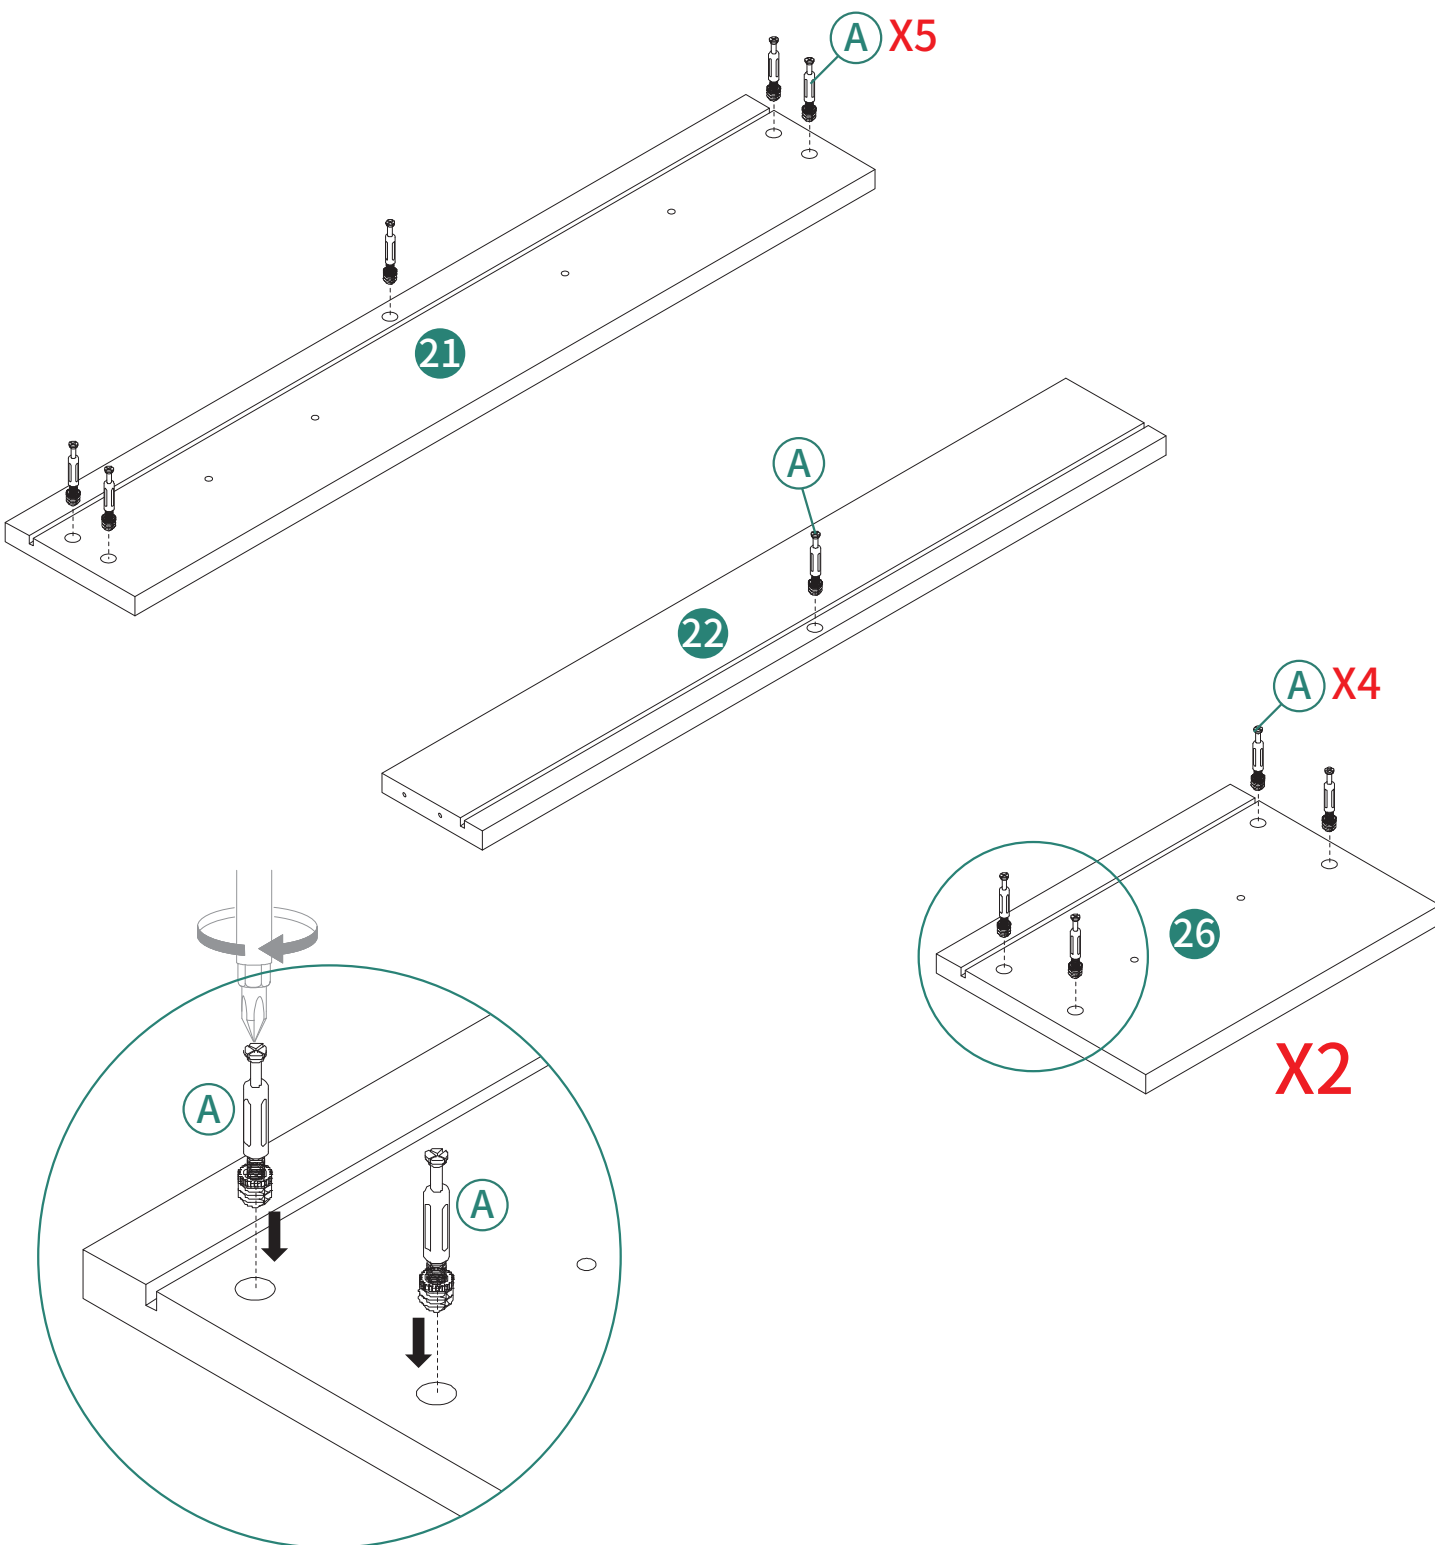


26

ASSEMBLY INSTRUCTIONS


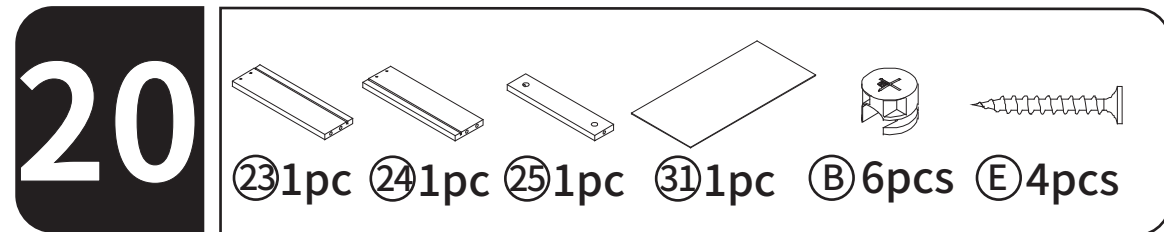


△ Pay attention to the position of the groove at the triangle mark (make sure that the groove is in the same direction).

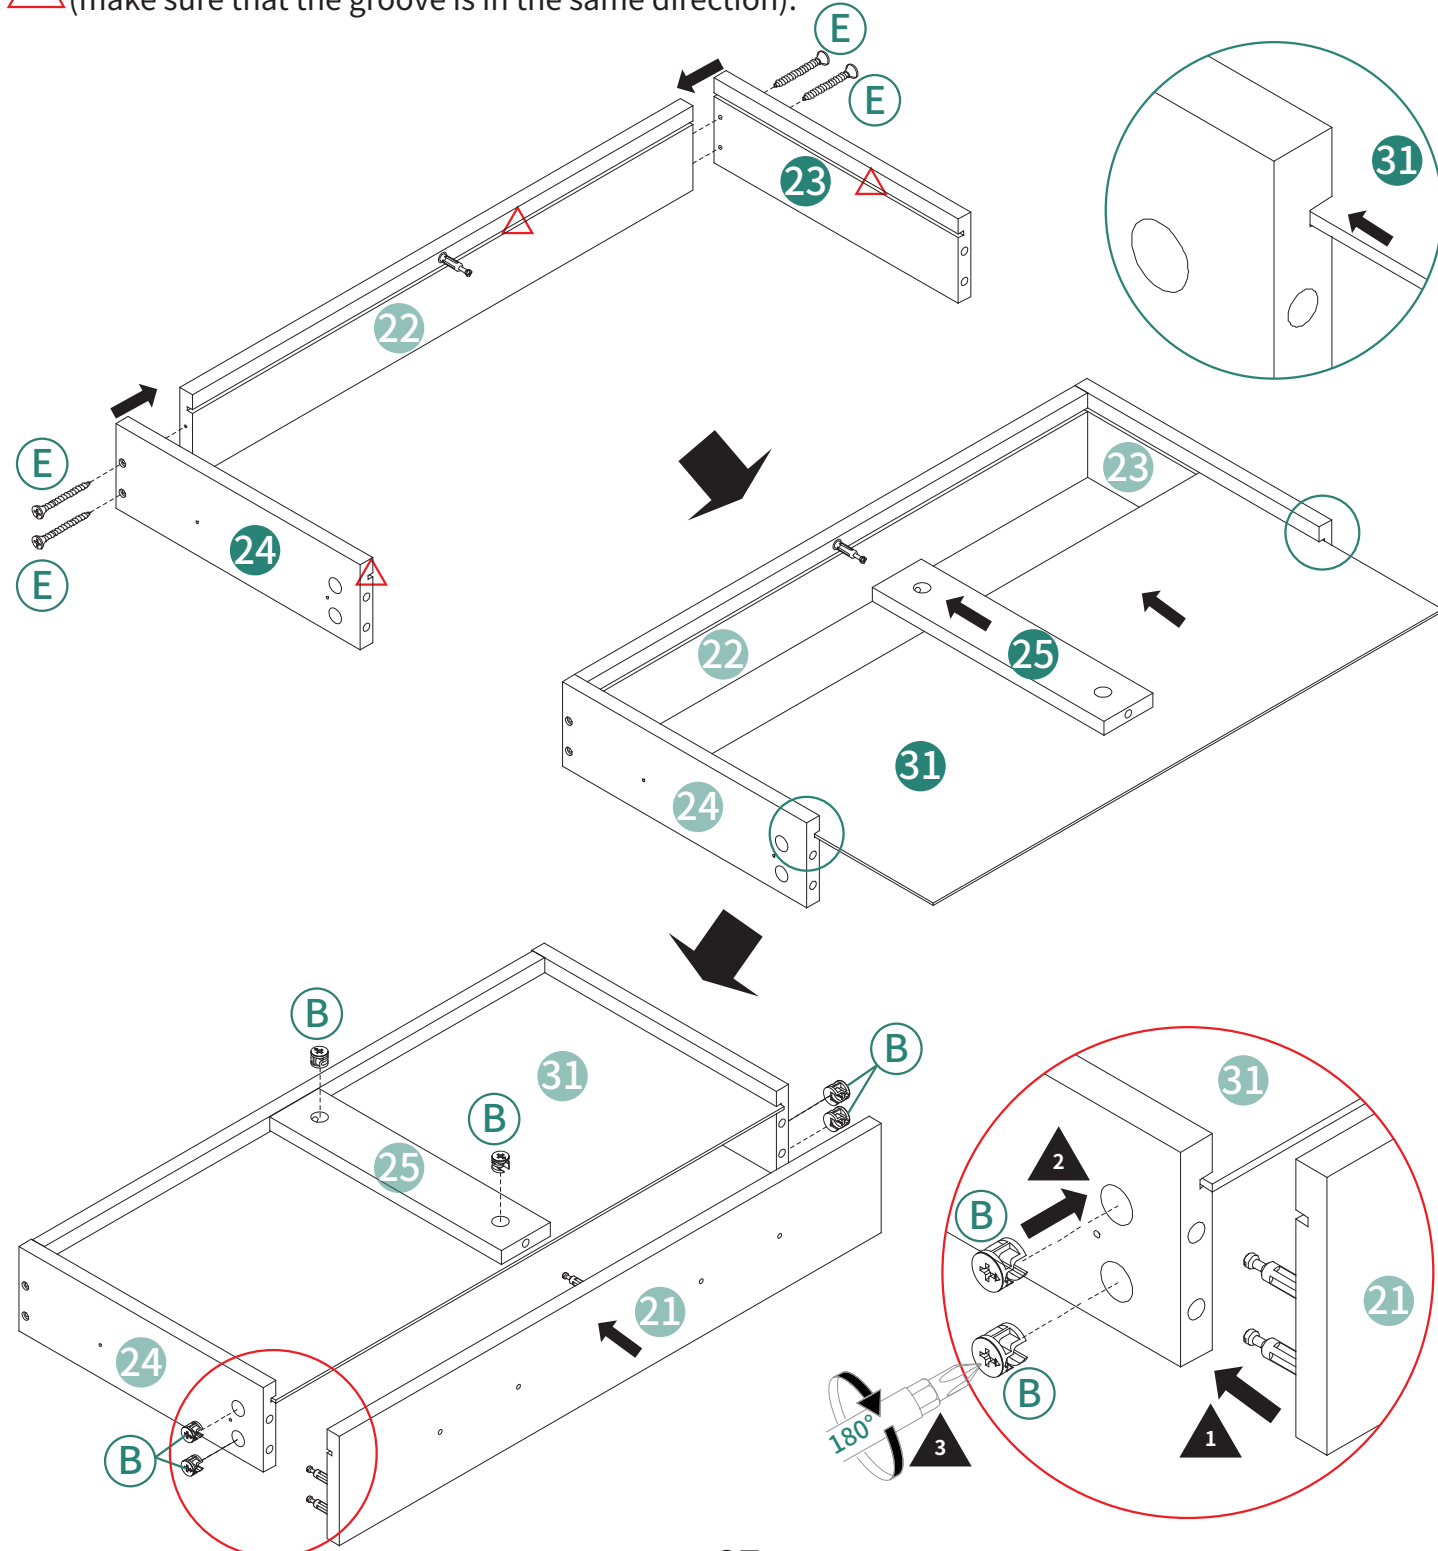

27

ASSEMBLY INSTRUCTIONS

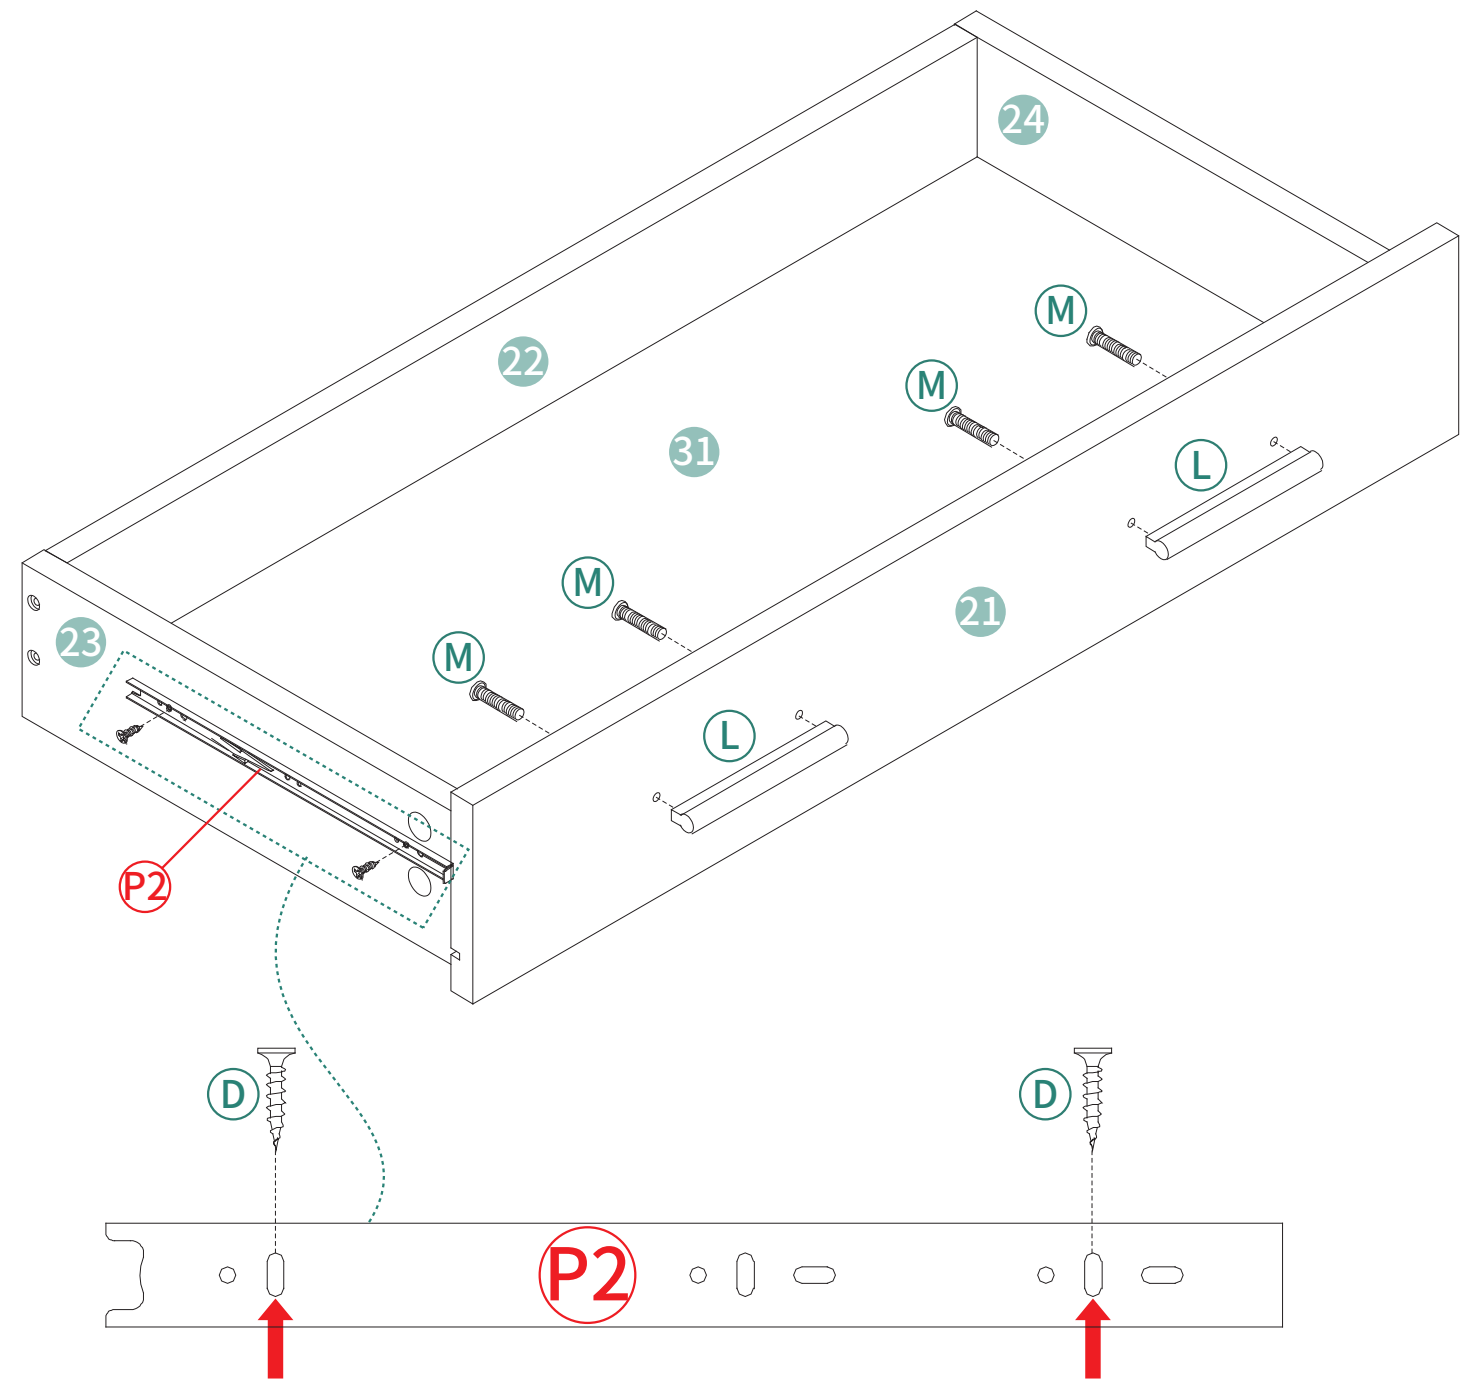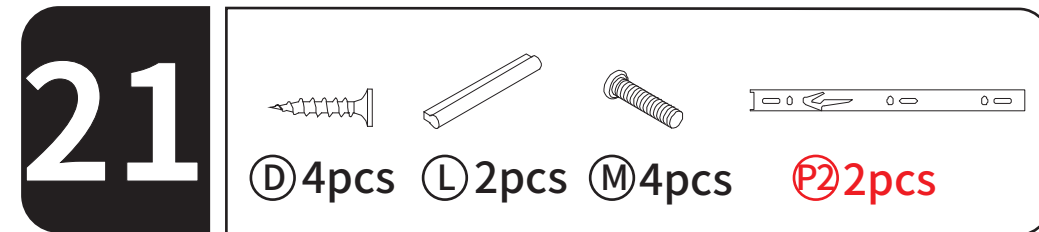


Align the screws with the center of the mounting hole of the guide rail.


28

ASSEMBLY INSTRUCTIONS

22
X2


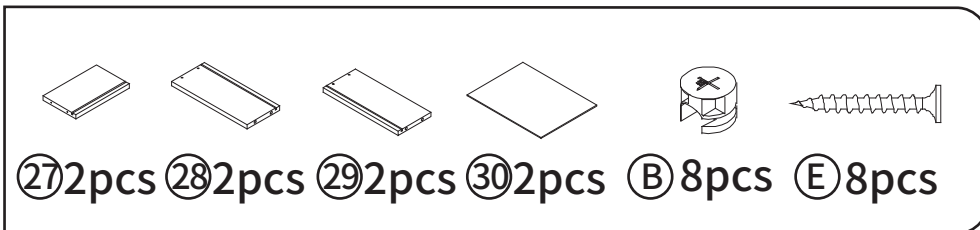


△ Pay attention to the position of the groove at the triangle mark (make sure that the groove is in the same direction).

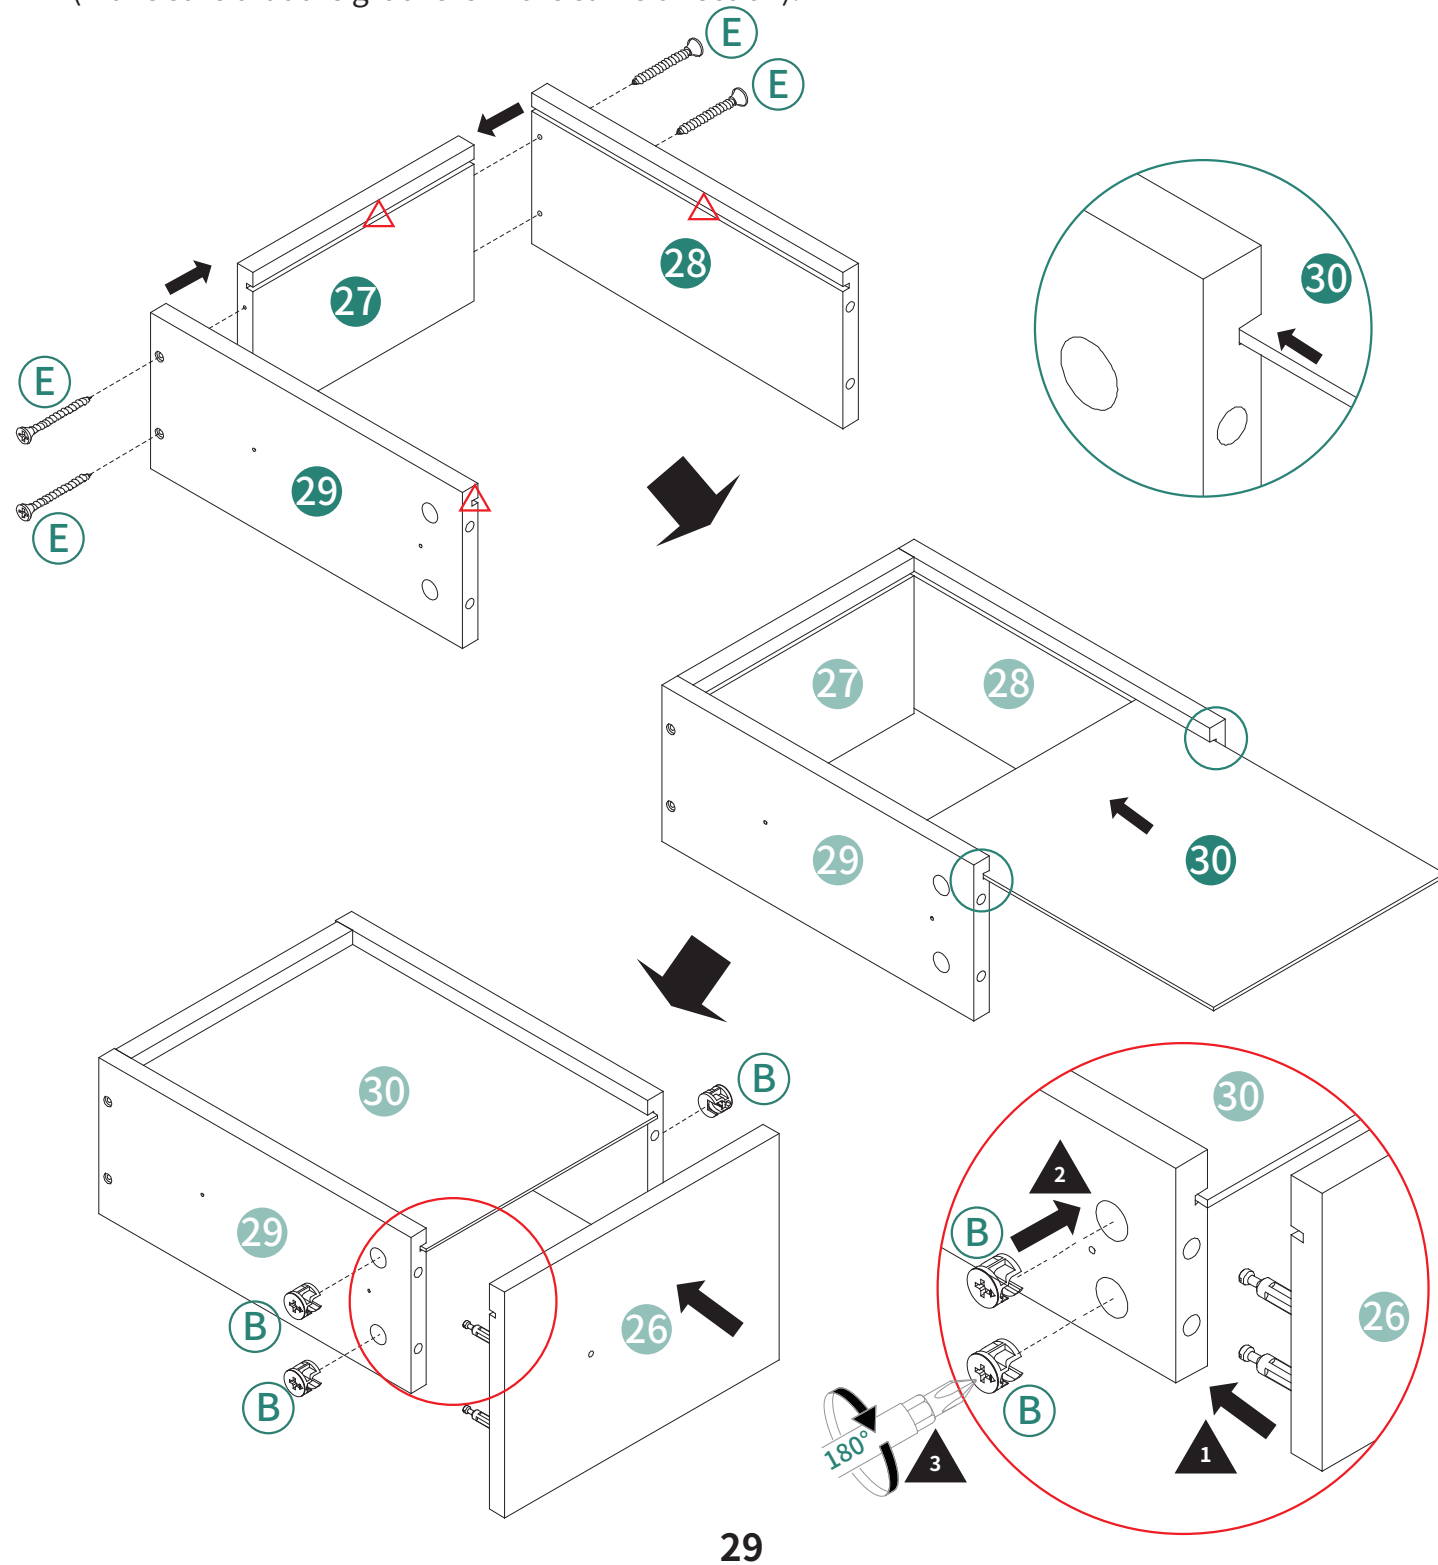

ASSEMBLY INSTRUCTIONS


23
X2

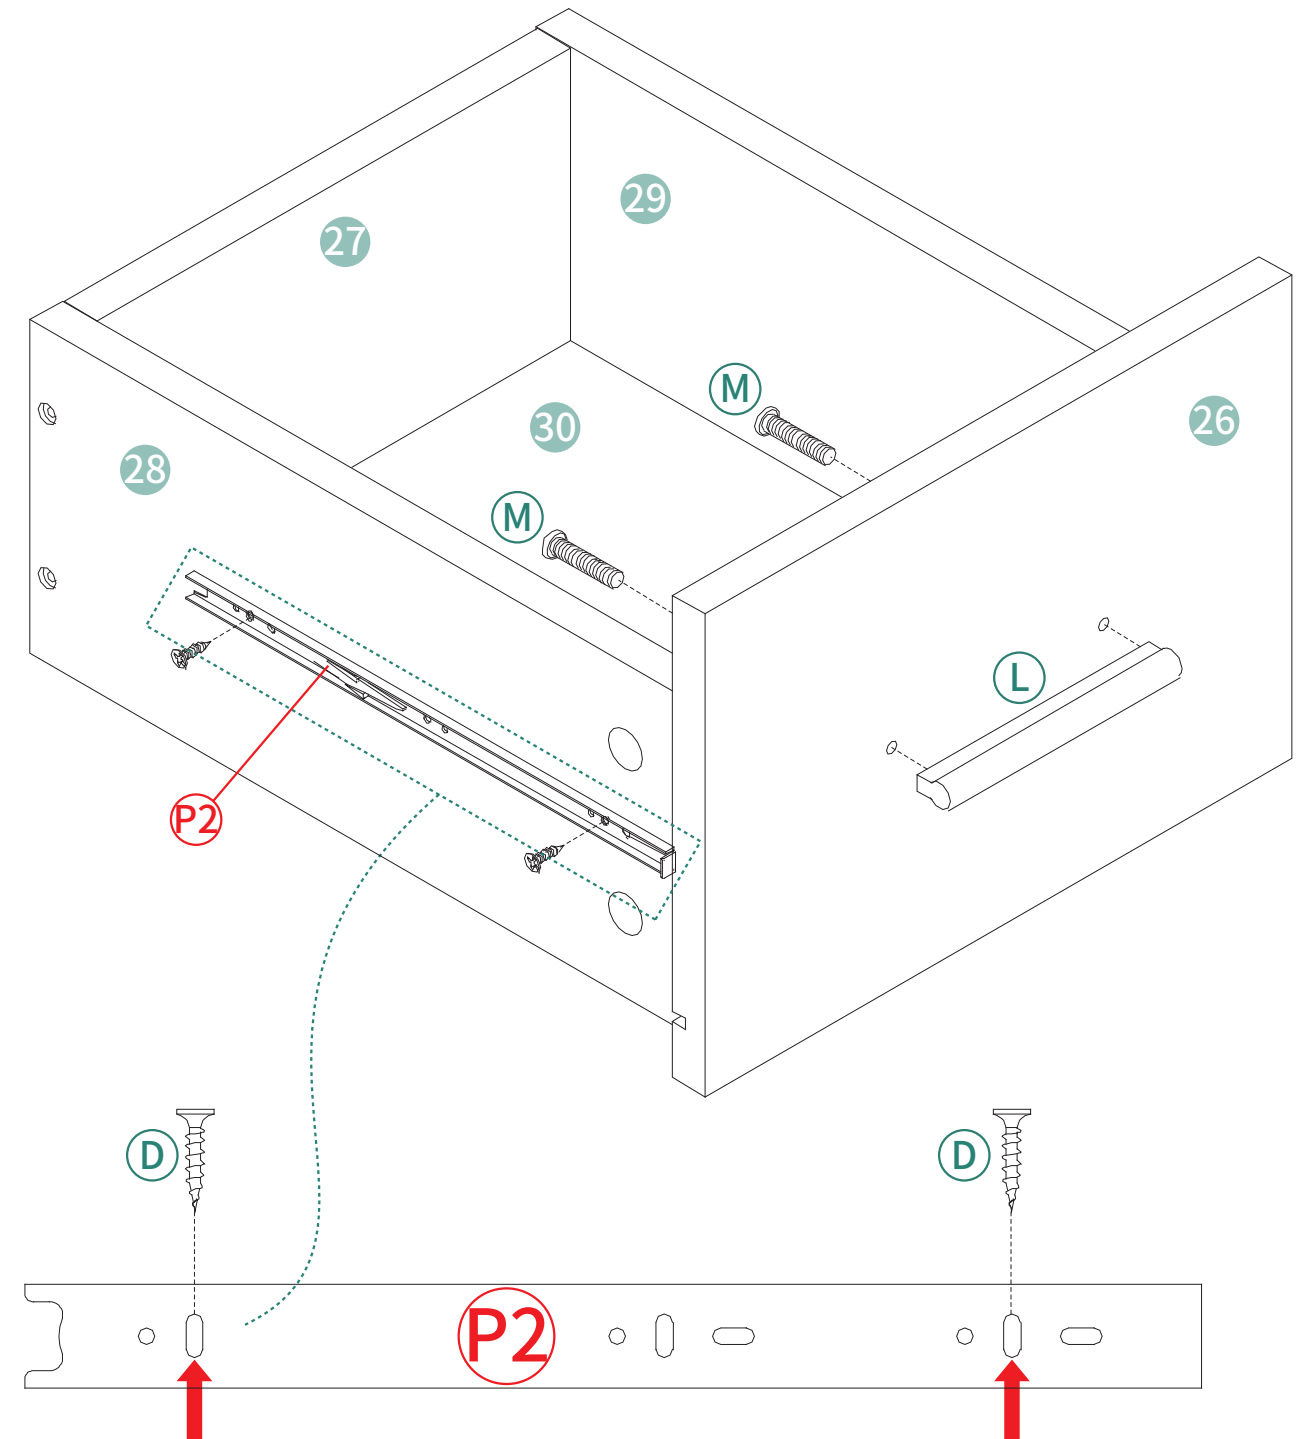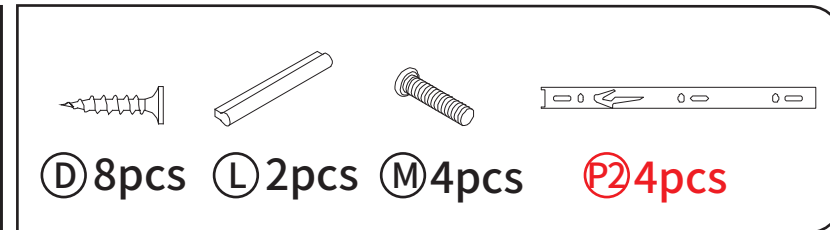

Align the screws with the center of the mounting hole of the guide rail.



30

24

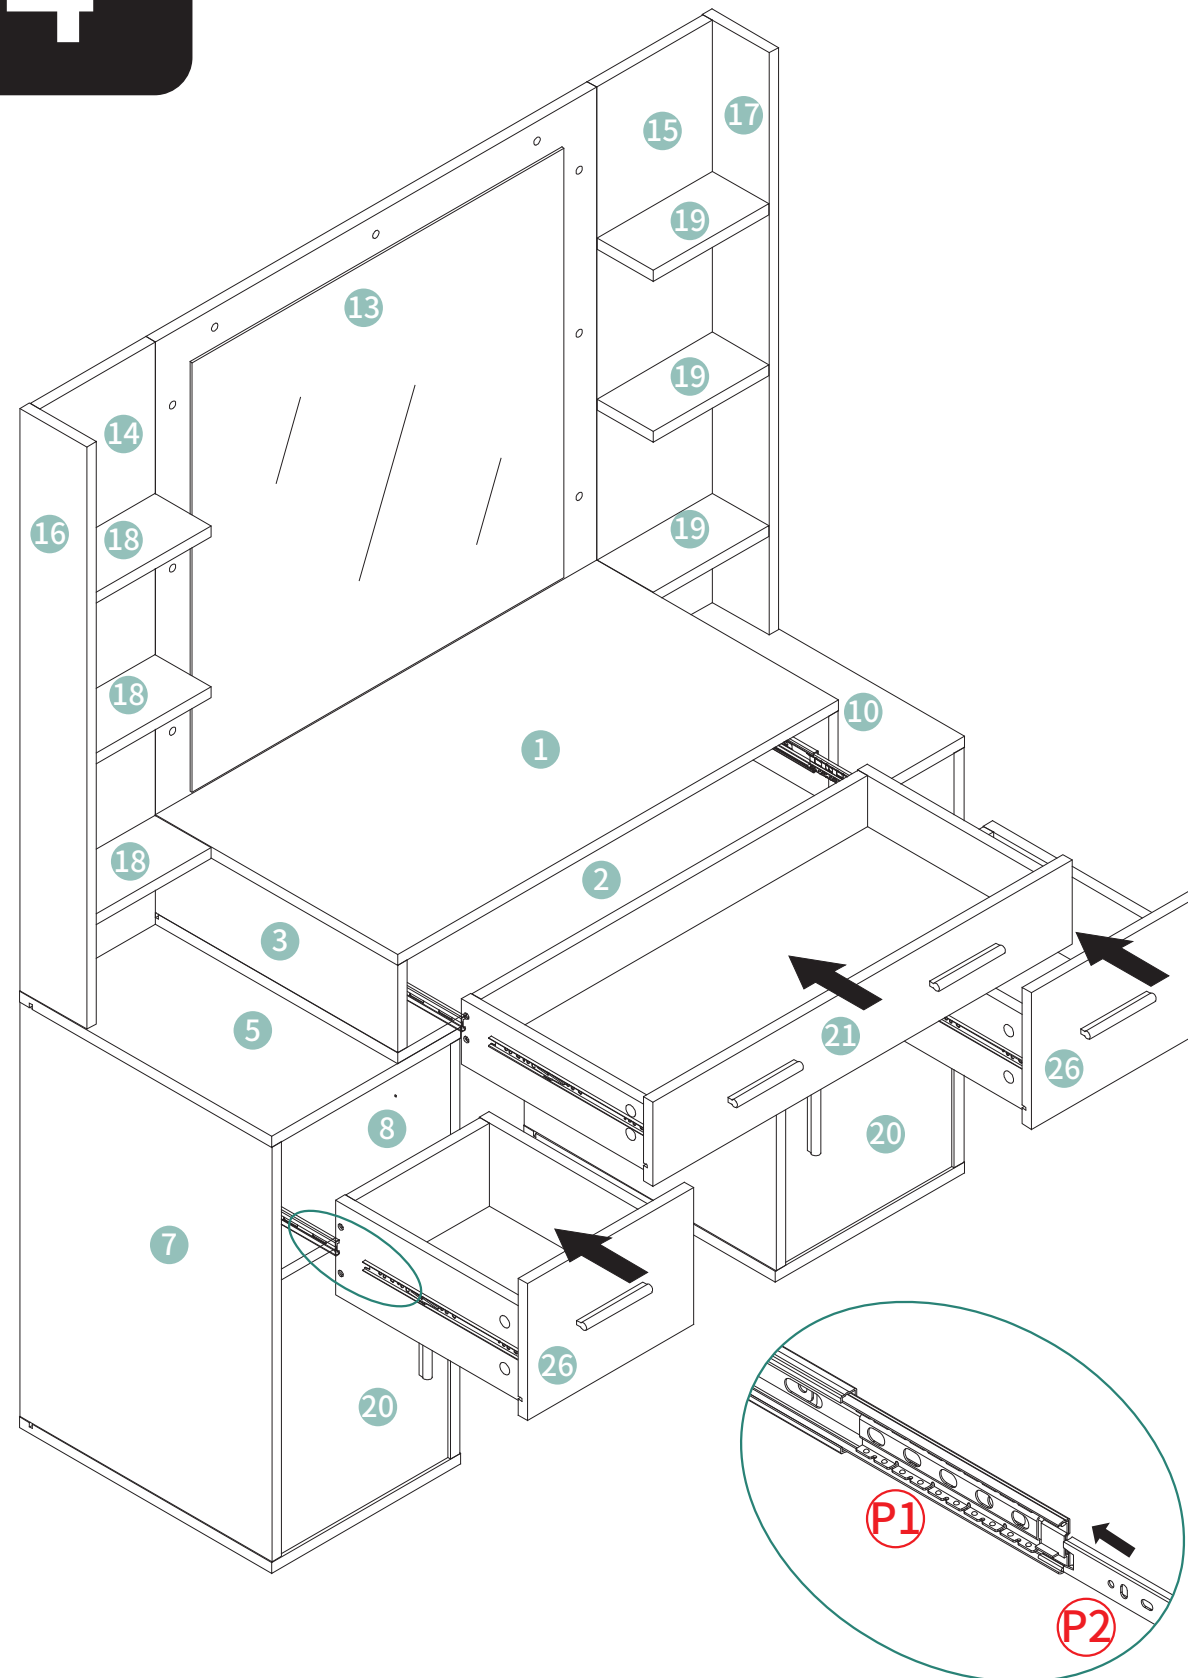

31


25

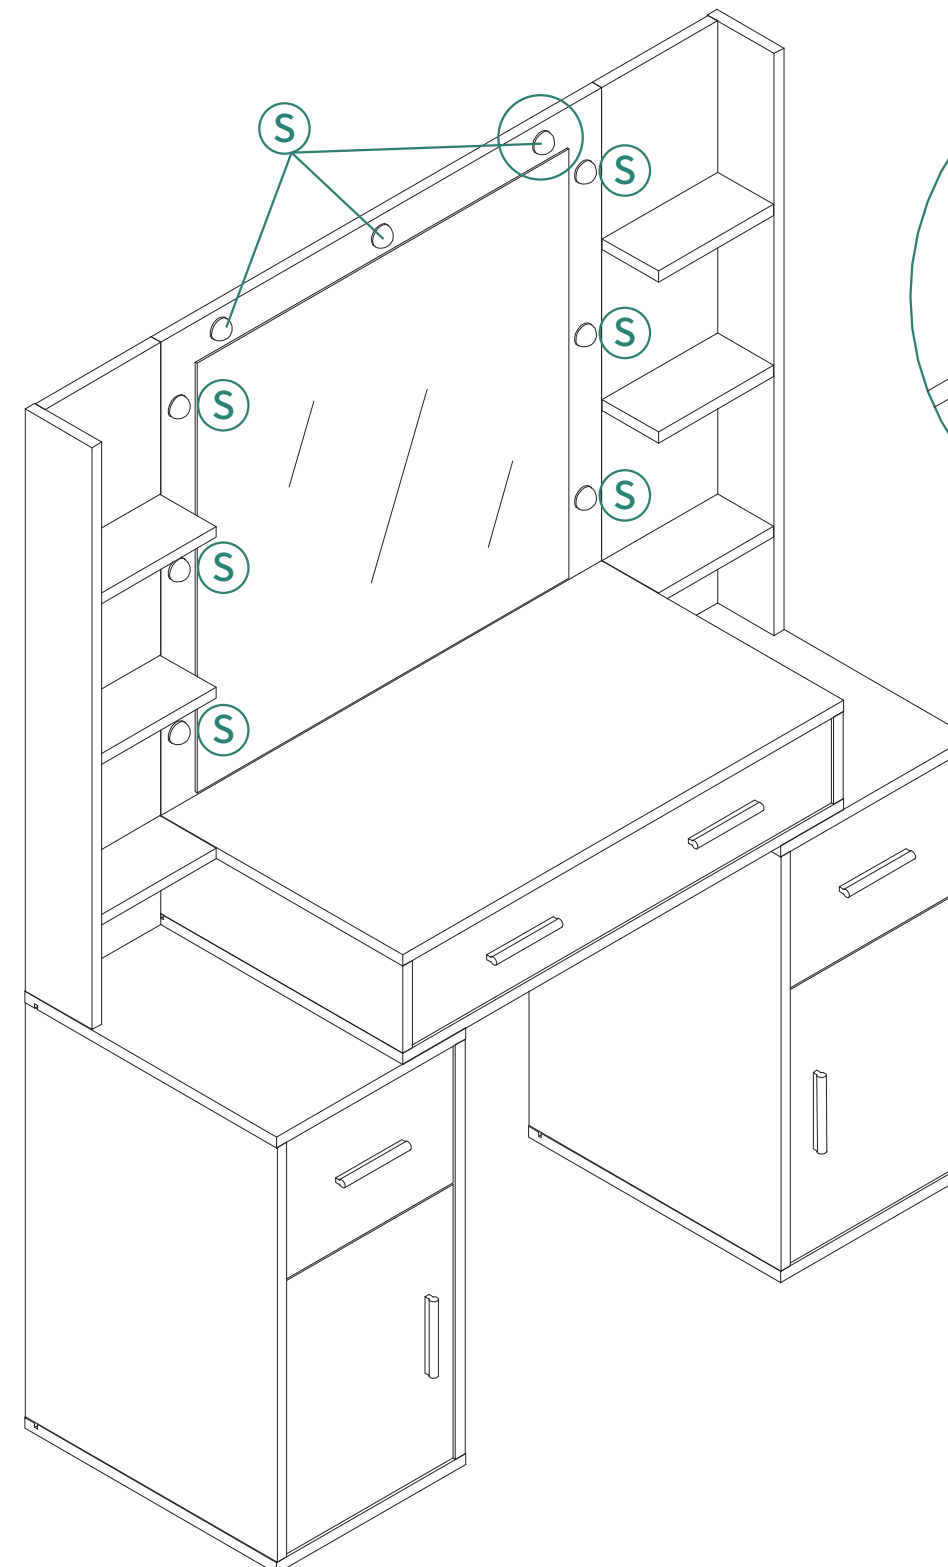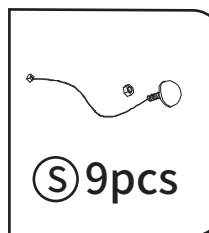







32

ASSEMBLY INSTRUCTIONS

26

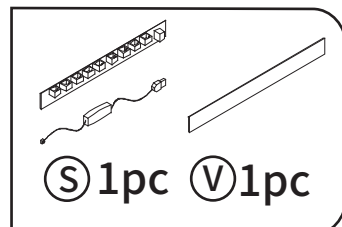




Double-sided tape

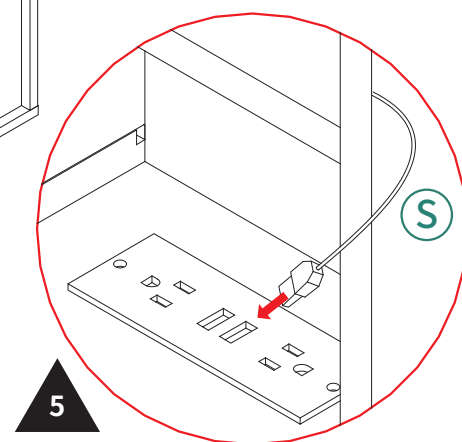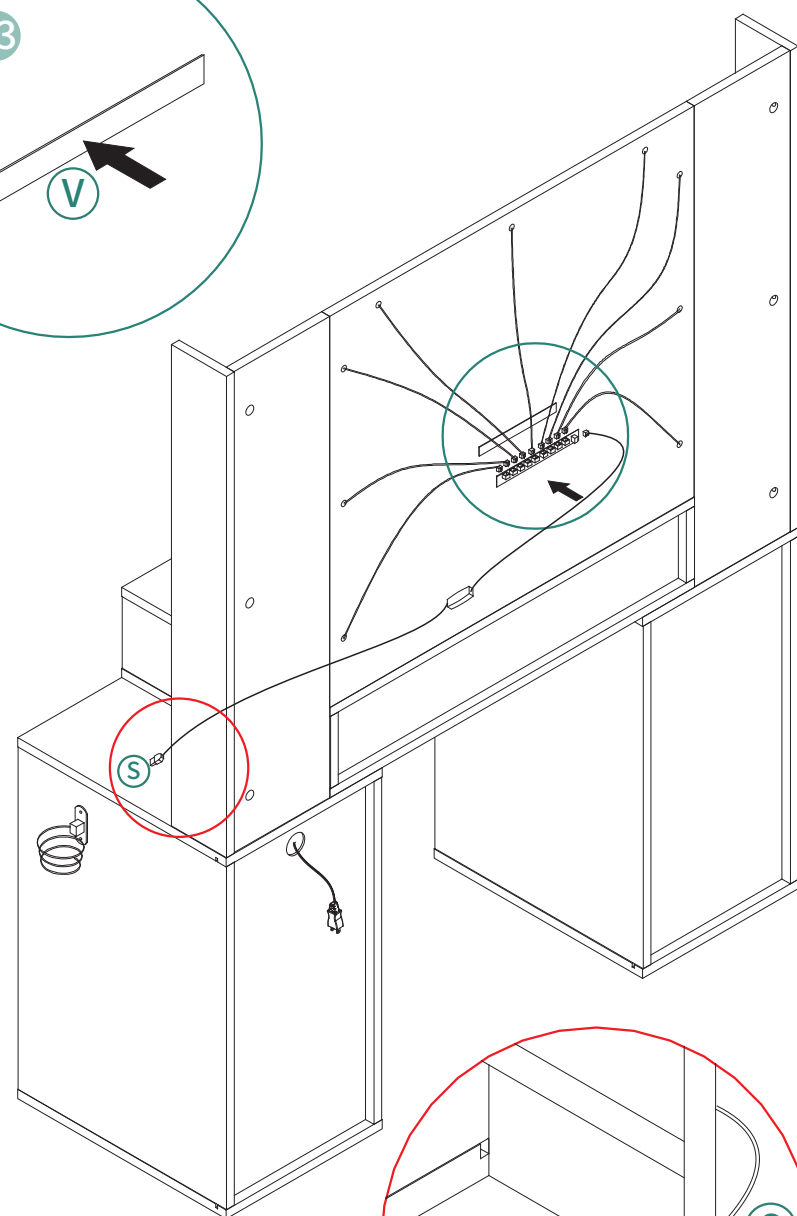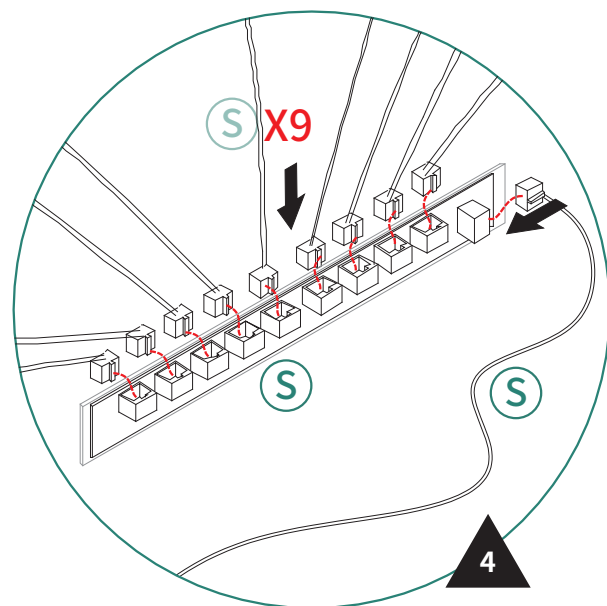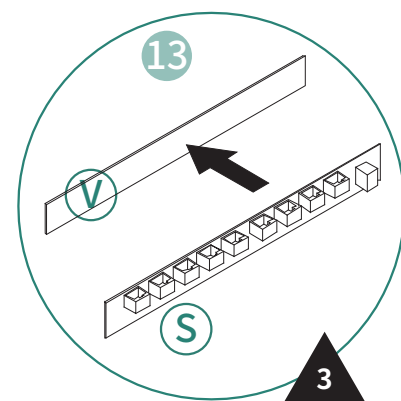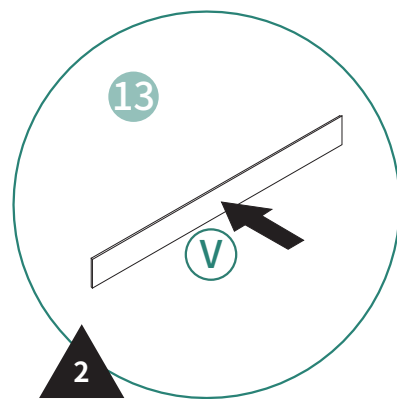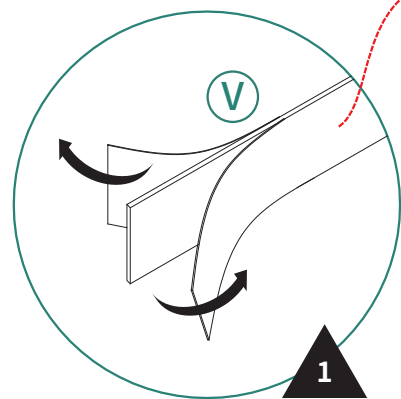

33

ASSEMBLY INSTRUCTIONS



27

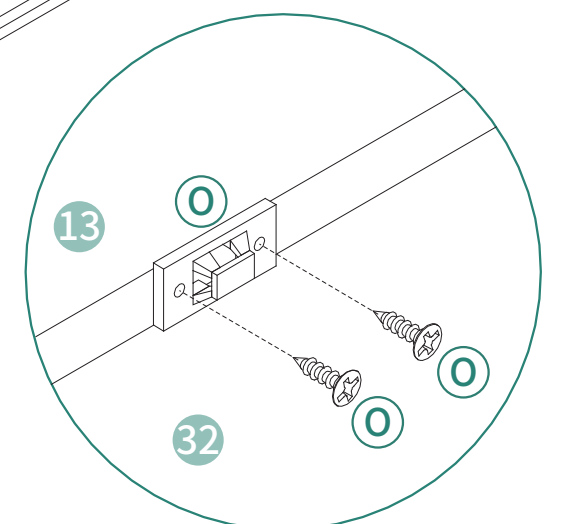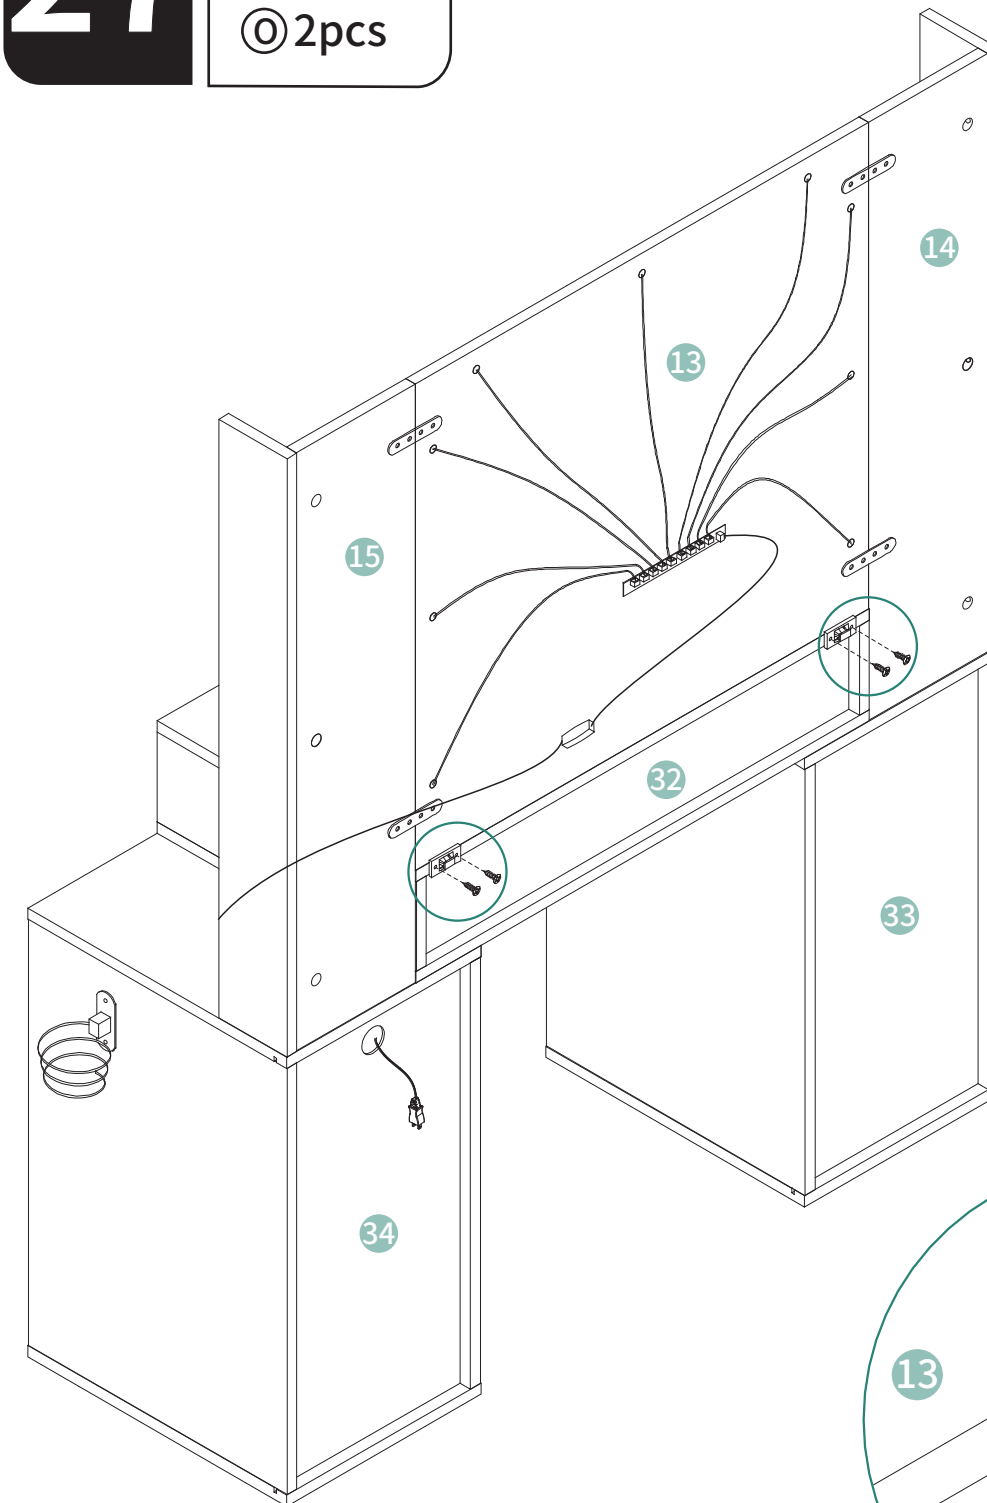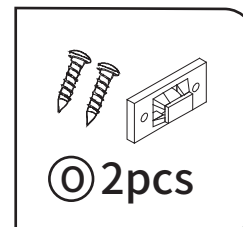




34

ASSEMBLY INSTRUCTIONS

28

 T 18pcs U 18pcs


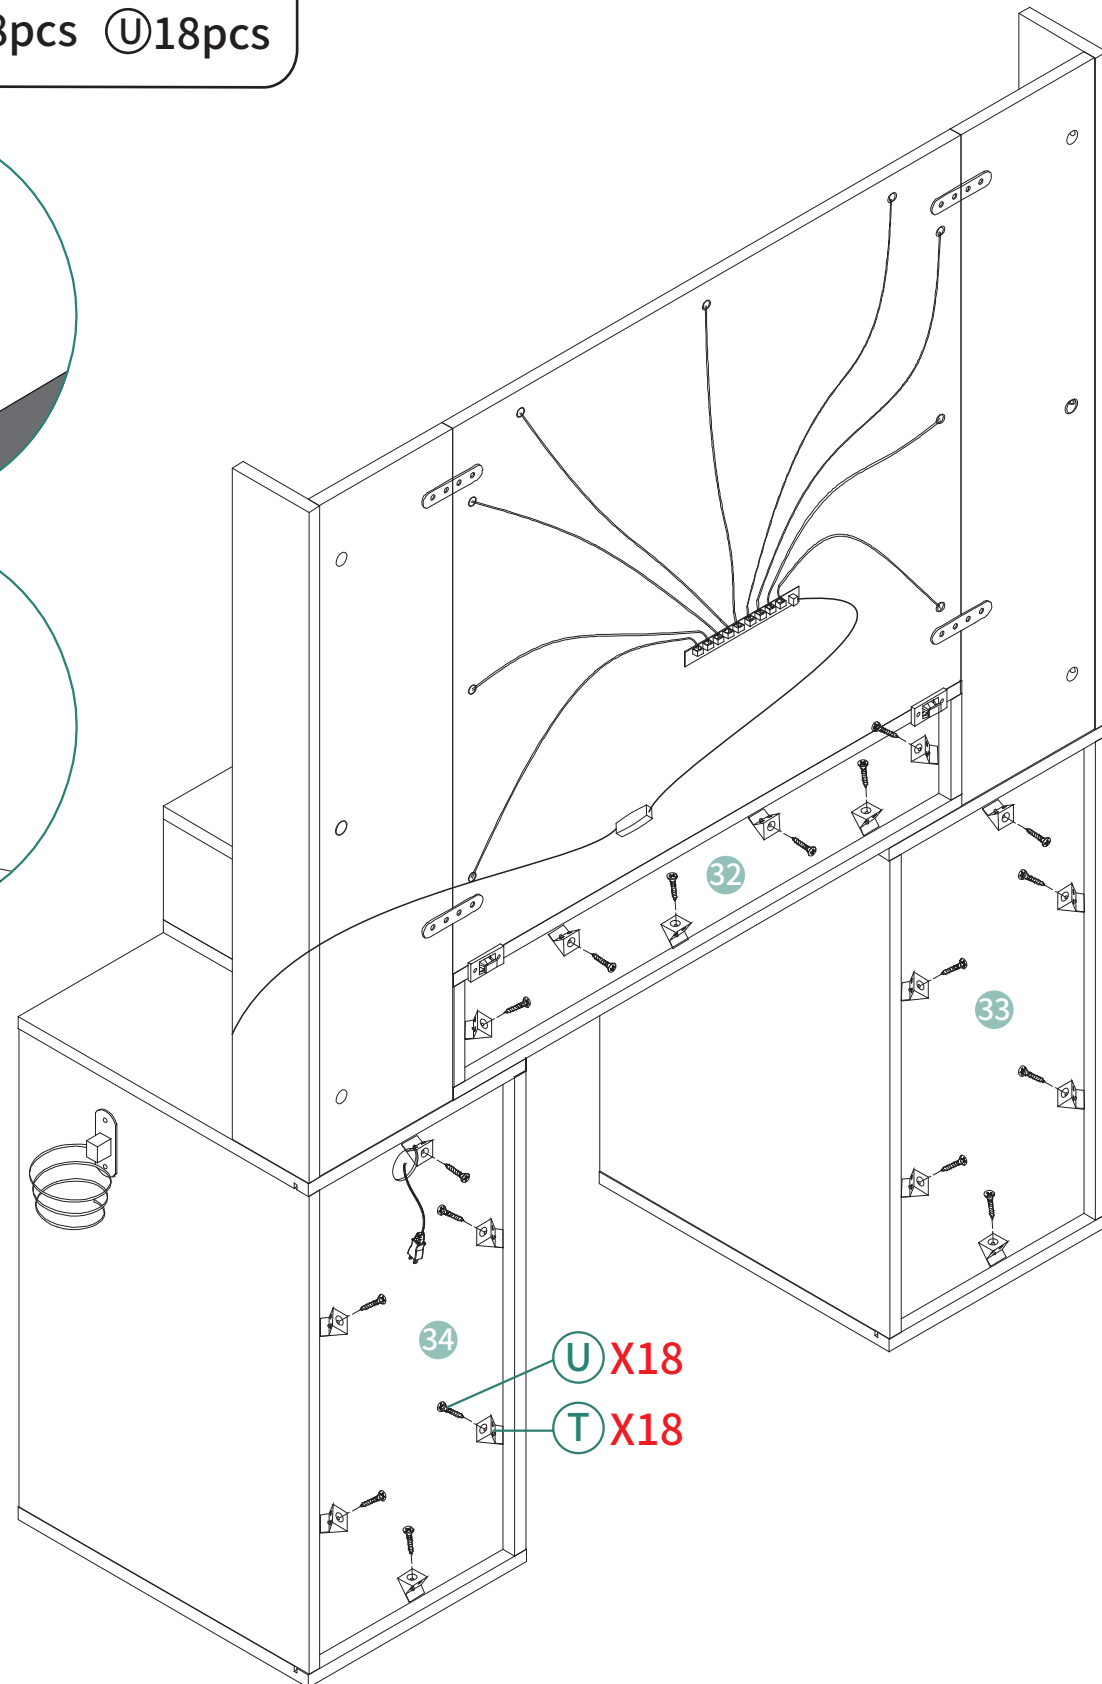
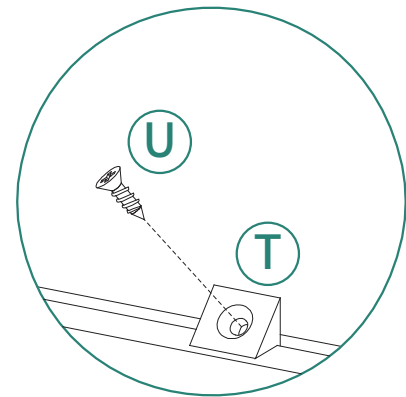
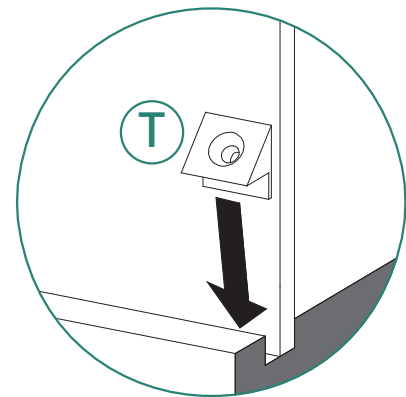


35


29




 O 2pcs

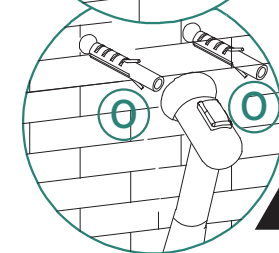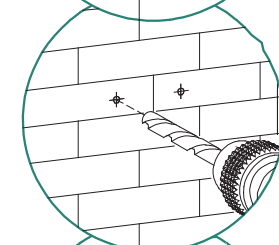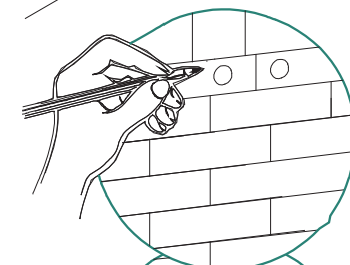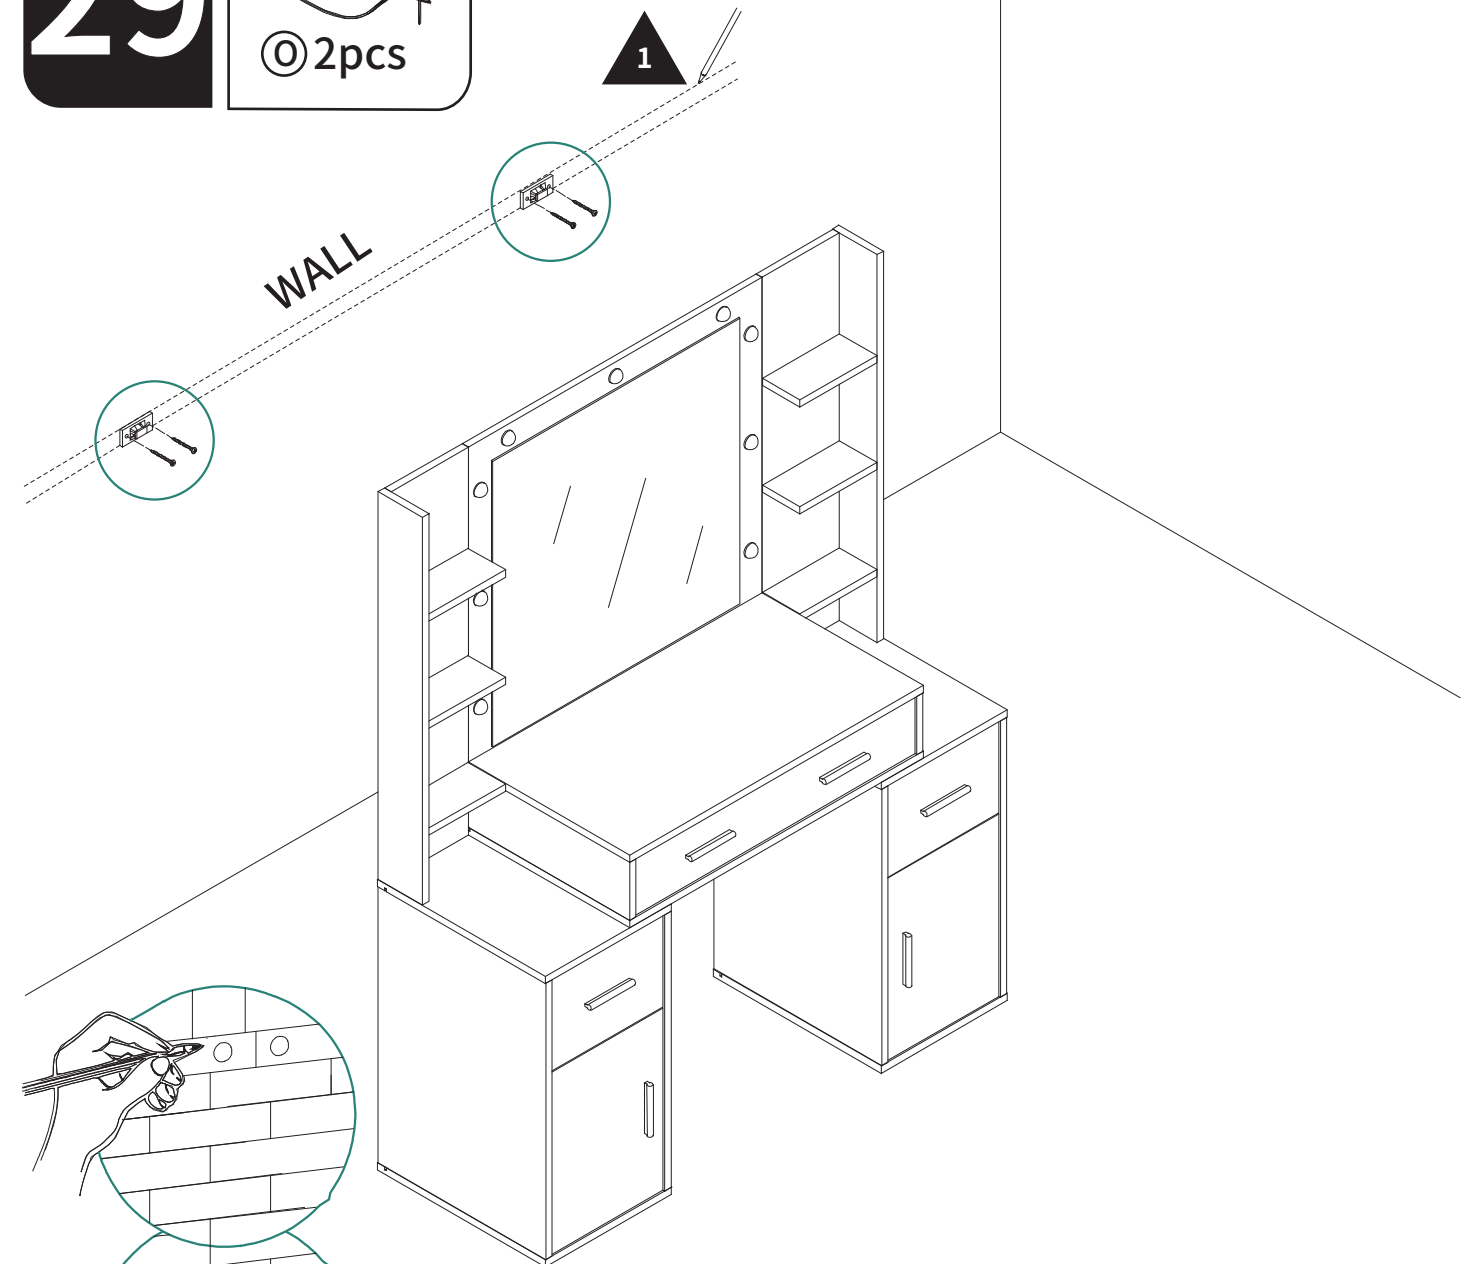

2

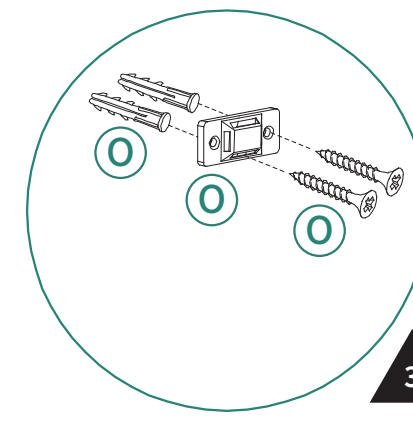



3

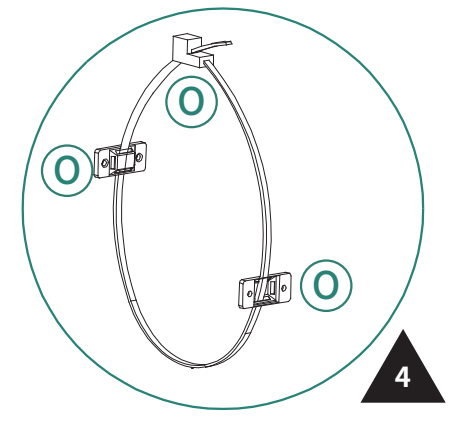



4

36

ASSEMBLY INSTRUCTIONS

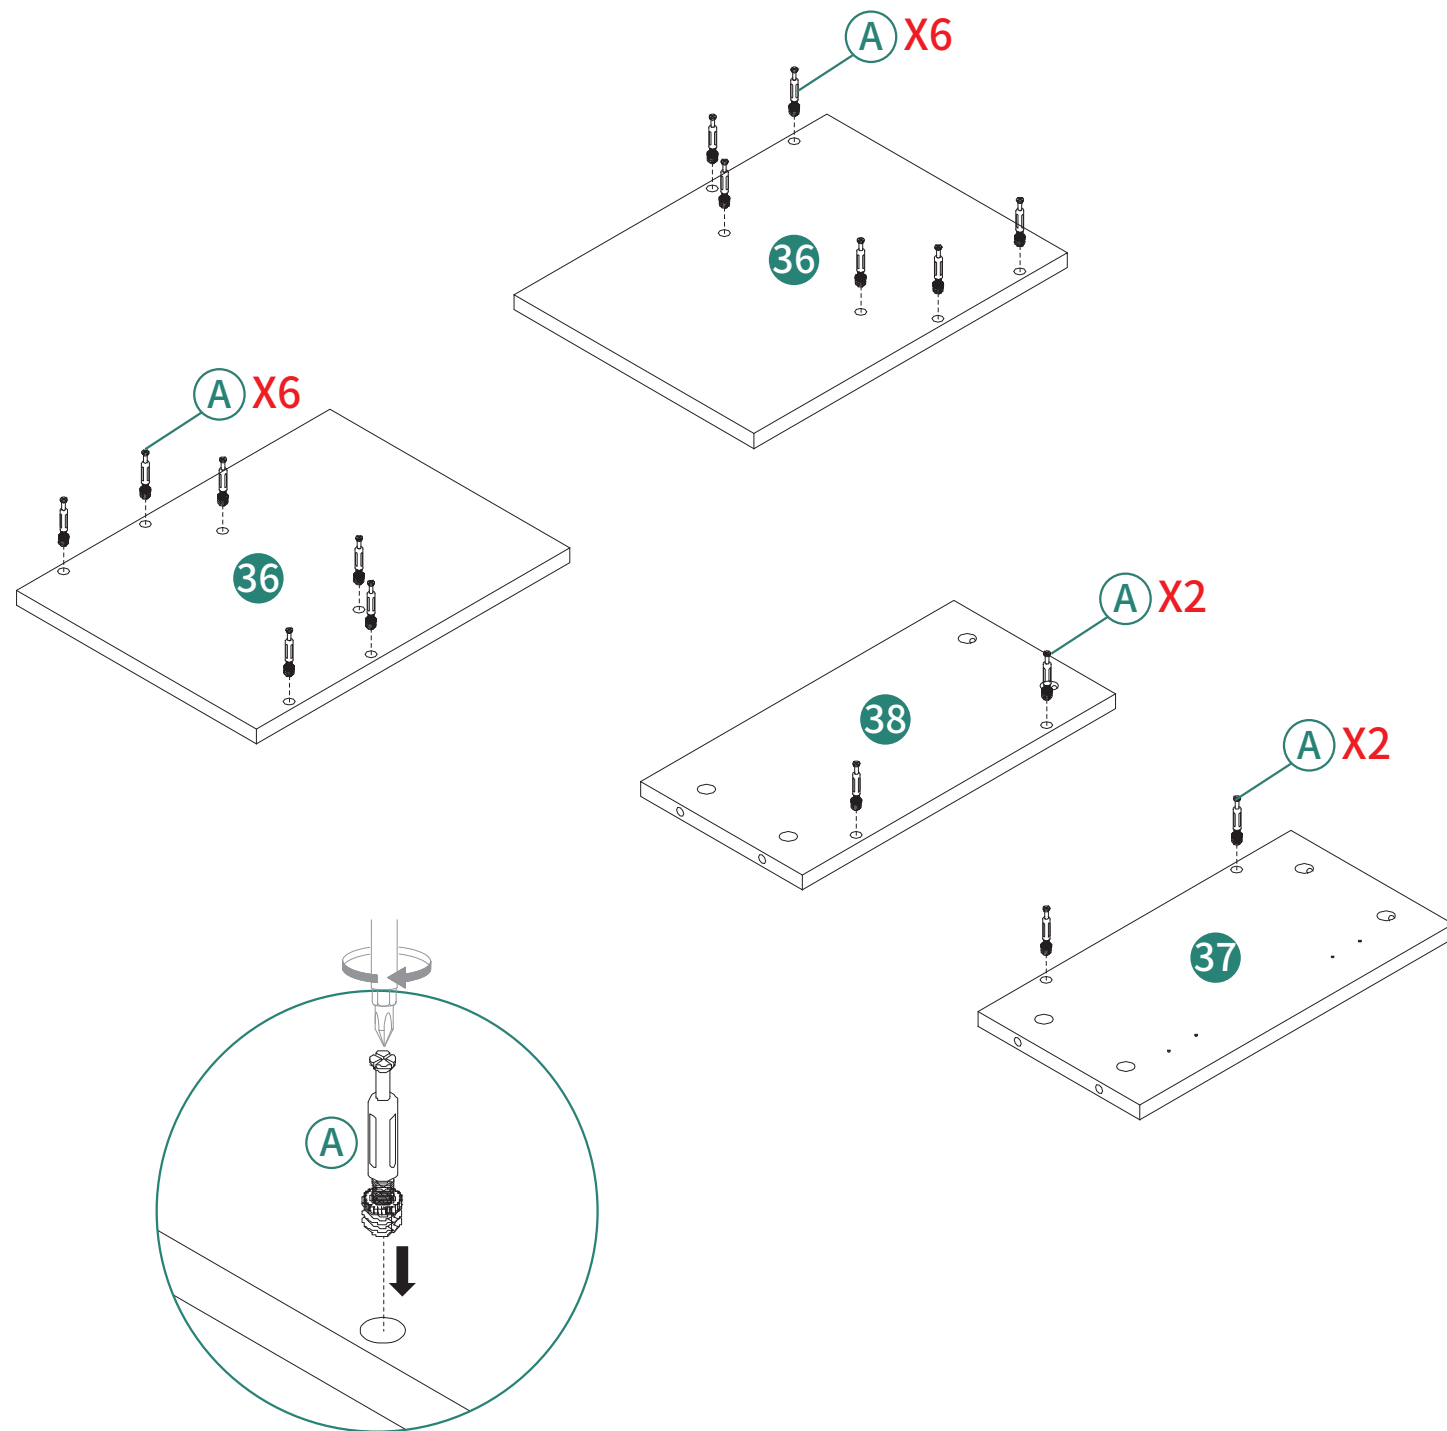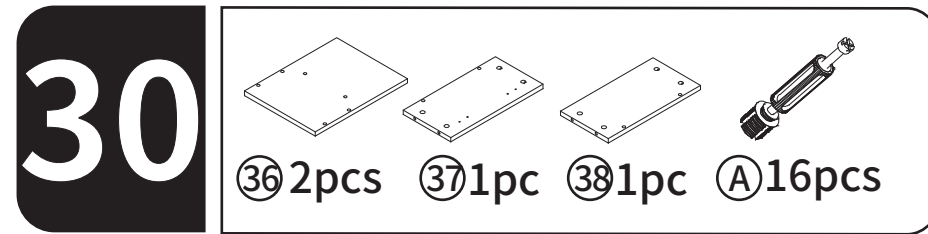


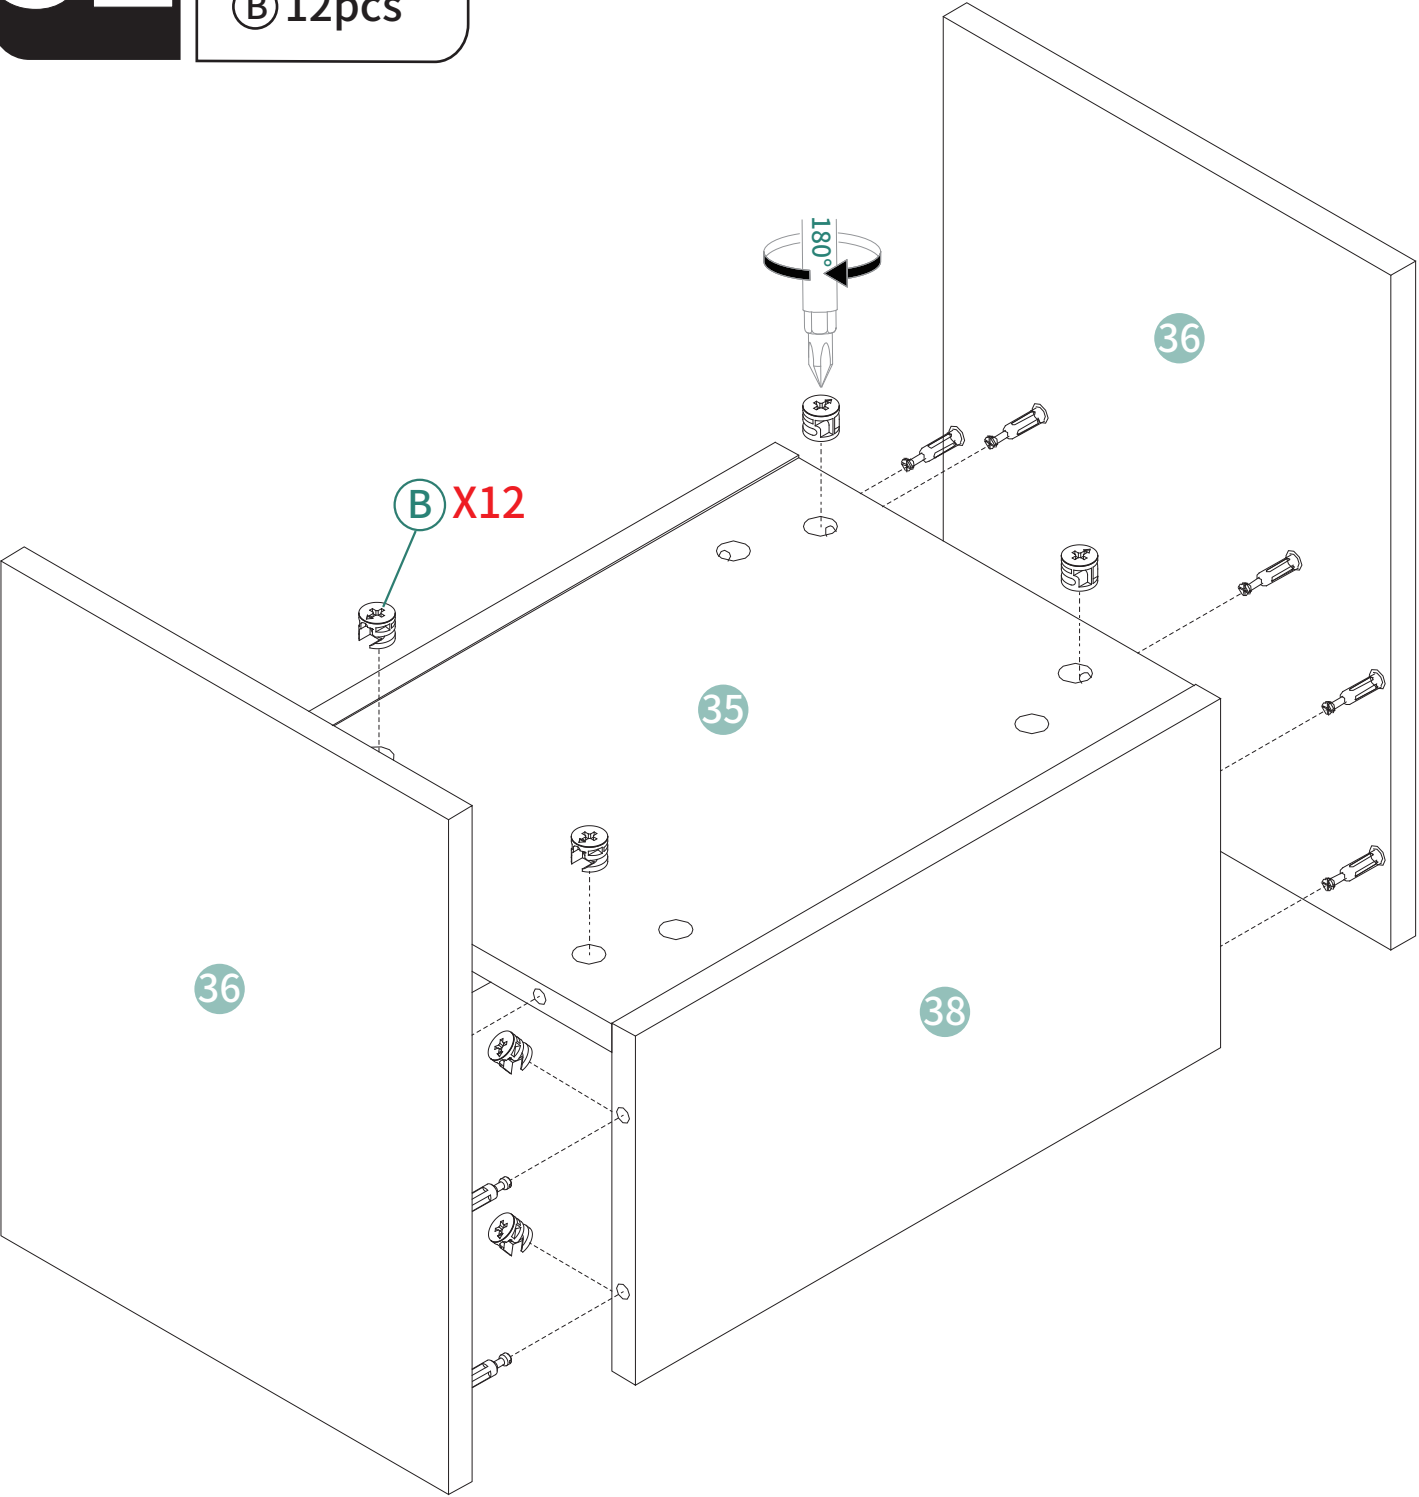
ASSEMBLY INSTRUCTIONS

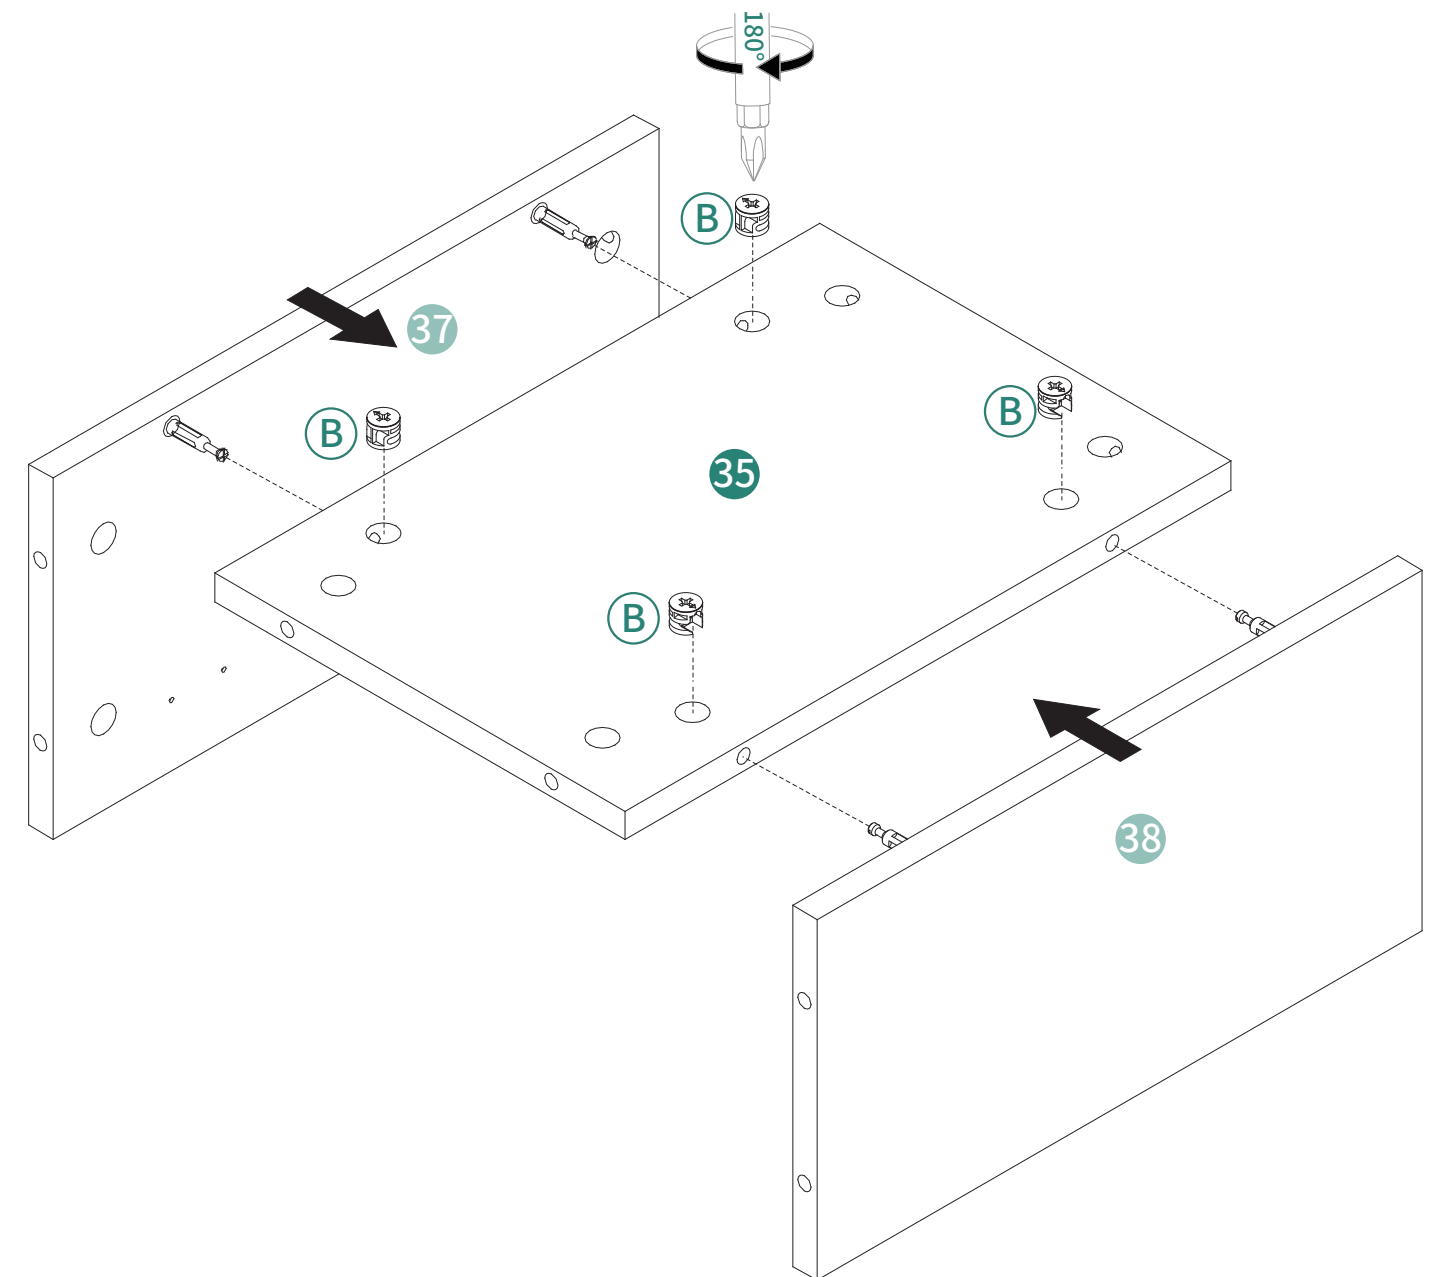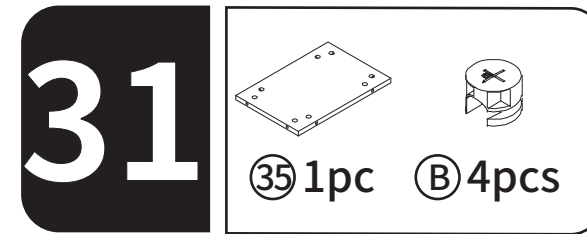

ASSEMBLY INSTRUCTIONS


32



Ⓑ 12pcs



ASSEMBLY INSTRUCTIONS


33

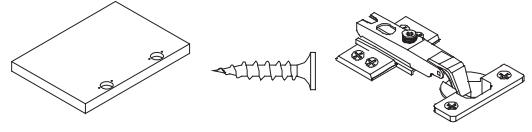
Ⓙ 1pc ⓓ 12pcs Ⓚ 2pcs

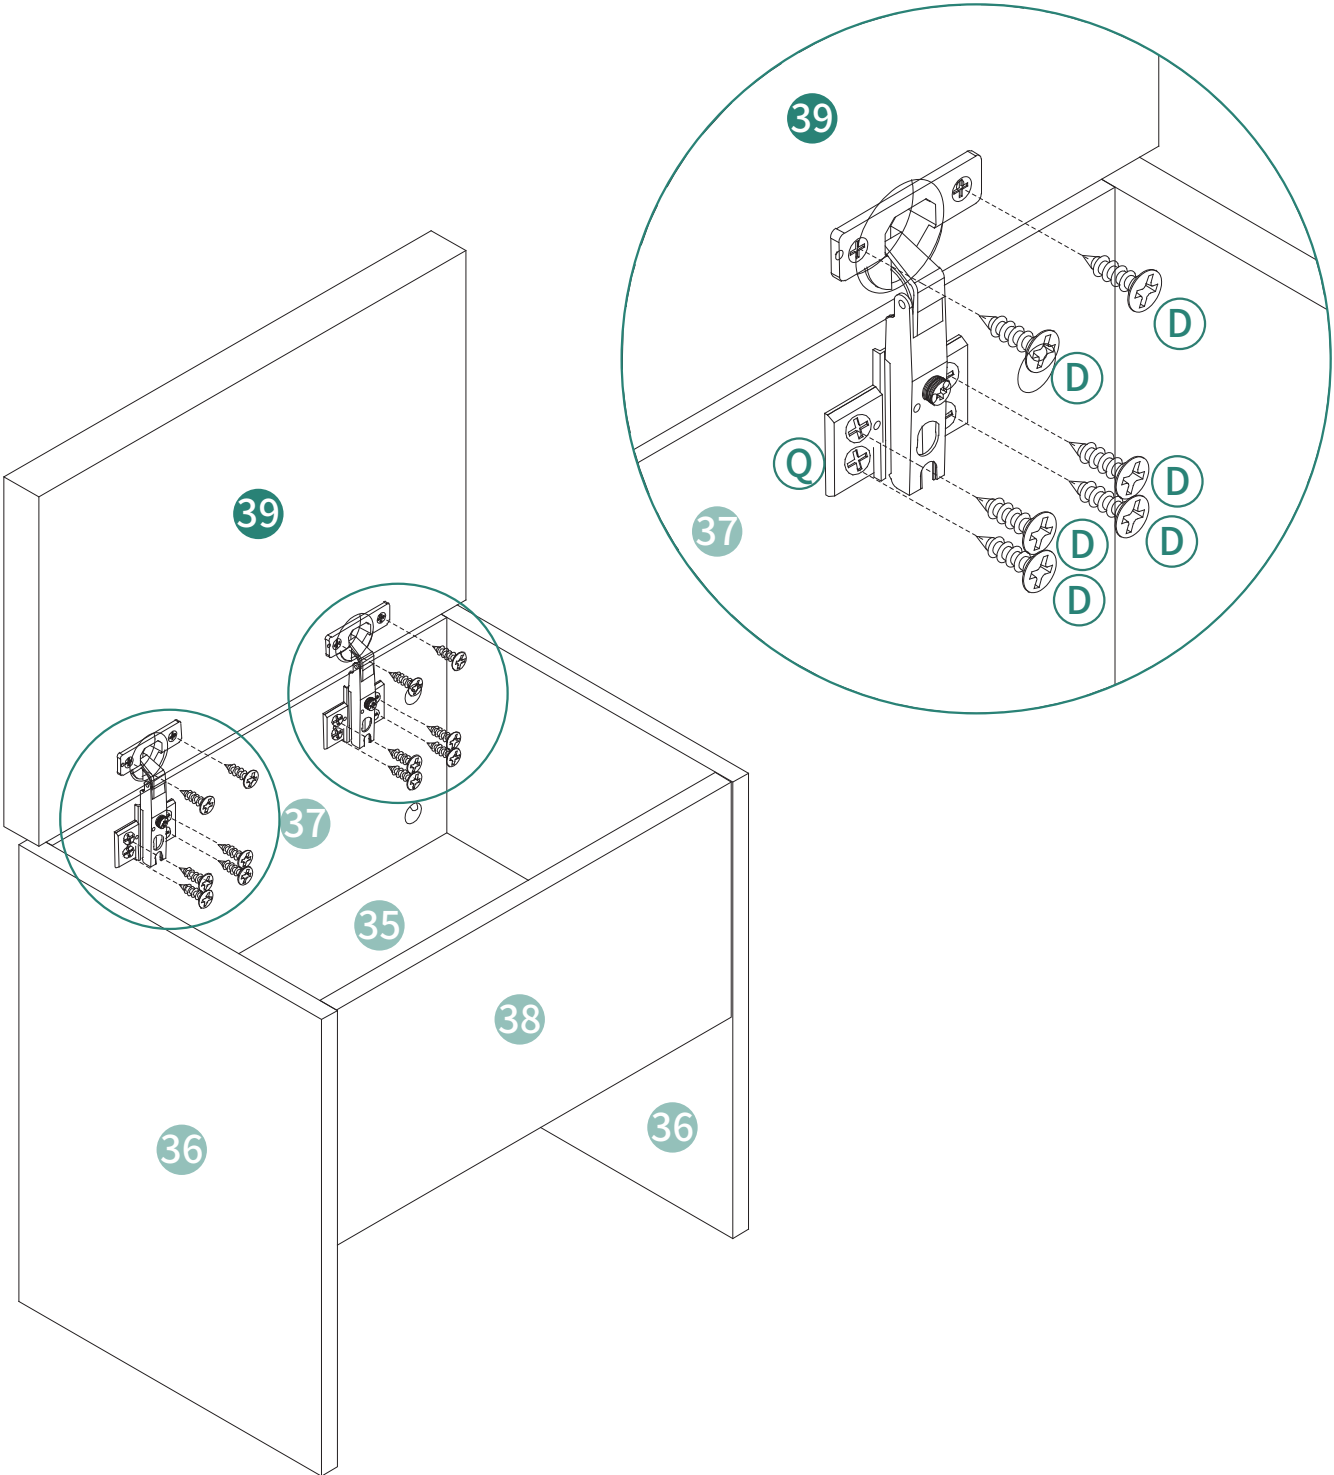

ASSEMBLY INSTRUCTIONS

34

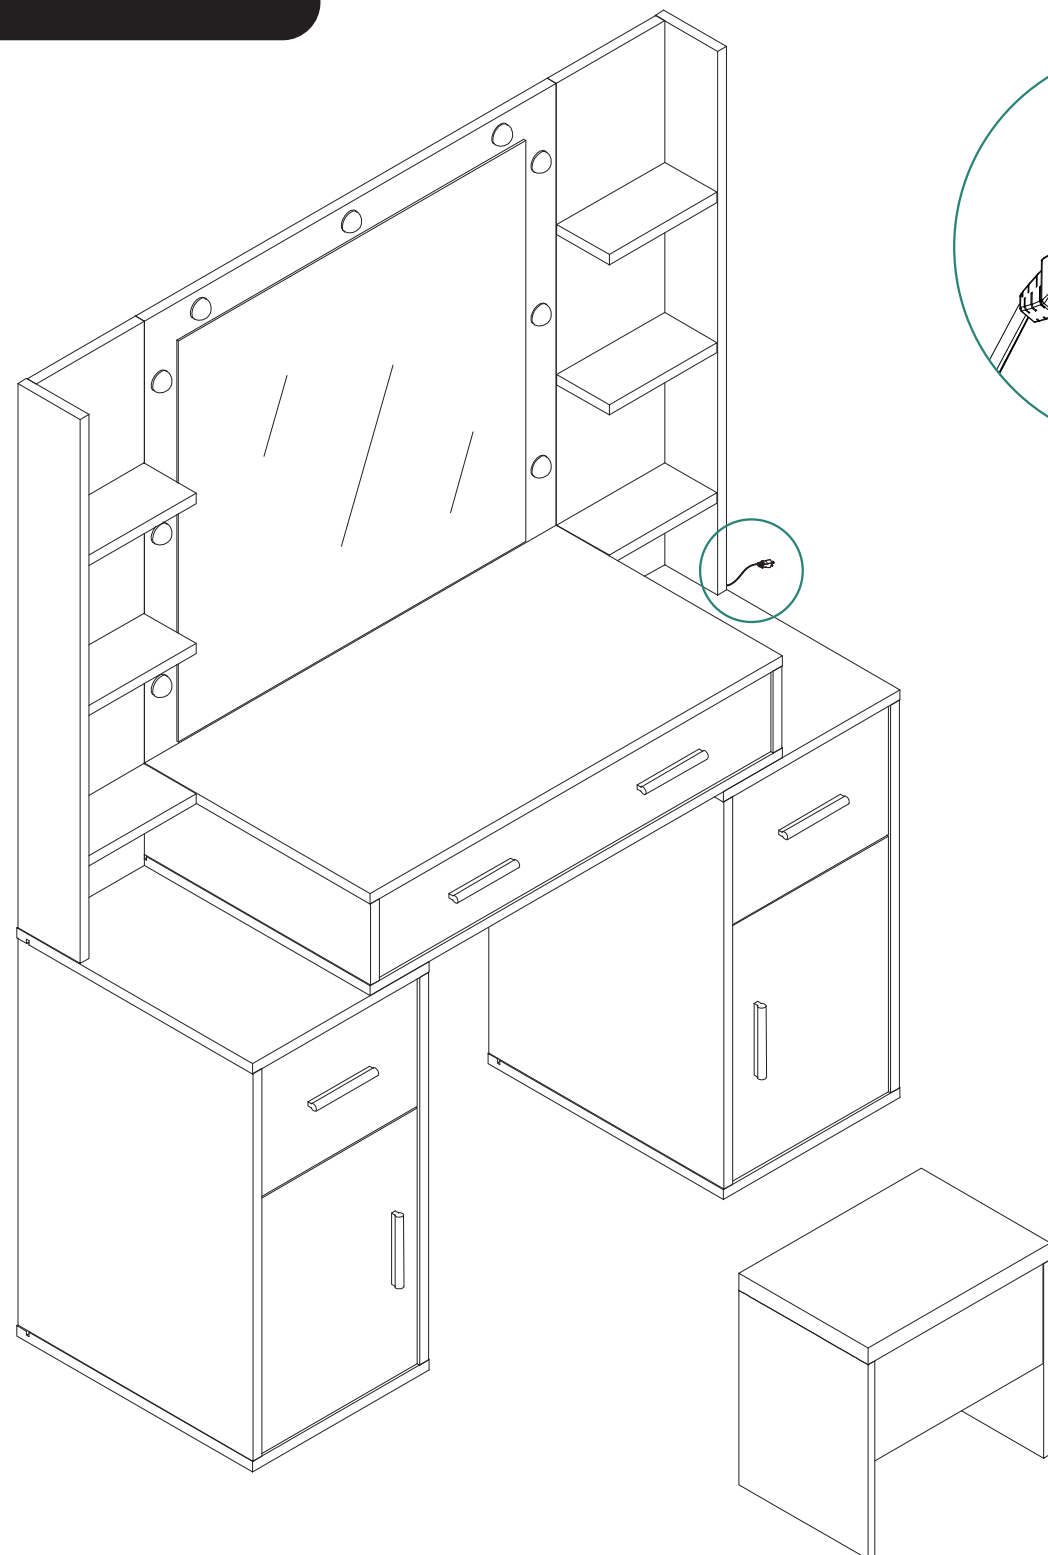

Not included

