

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. please email customersupport@safavieh.com

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 20-30 minutes.
- *Tools Required for Assembly (included): Allen Key, (not included): Phillips Screwdriver.

CARE AND MAINTENANCE

WOOD CARE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.


On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Please assemble the chair on a soft, clean surface to avoid scratching or damaging the finish. Do not drag or rub painted parts against each other during assembly.



Model # DCH6903

Product Dimensions: 18.5"W X 22"D X 40.5"H

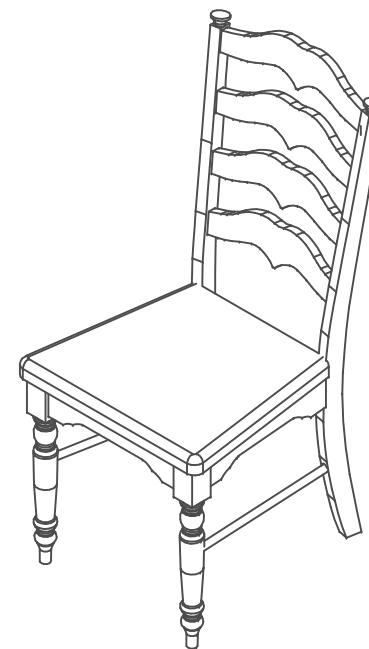

WARNING



Weight Capacity-275 LBS

Warning : Do not stand on Chair.

Warning : Do not over torque bolts.

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Backrest		1X
B	Box Seat With Panel		1X
C	Front Leg-1 (L)		1X
D	Front Leg-2 (R)		1X
E	Stretcher		2X
HW1	ALLEN KEY (M4 X 65mm)		1X
HW2	JCBC BOLT (M6 X 80mm)		4X
HW3	JCBC BOLT (M6 X 60mm)		4X
HW4	JCBC BOLT (M6 X 30mm)		2X
HW5	SPRING WASHER (M6 X 12mm)		10X
HW6	FLAT WASHER (M6 X 16mm)		8X
HW7	PAN HEAD SCREW (M4 X 38mm)		4X
HW8	WOOD KNOB		2X

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any parts is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 20-30 minutes.
- * Tools Required for Assembly (included): Allen Key, (not included): Phillips Screwdriver.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please e-mail customersupport@safavieh.com

STEP 1: USE ALLEN KEY (HW1), BOLT (HW3) AND WASHERS (HW5 AND HW6) TO SECURE FRONT LEGS (C AND D) TO THE SEAT BASE (B). DO NOT FULLY TIGHTEN YET.	STEP 2: POSITION THE STRETCHERS (E) TO ALIGN WITH PRE-DRILLED HOLE ON THE FRONT LEGS (C AND D) AND BACKREST (A). SECURE THE BACKREST (A) USING BOLT (HW4) AND WASHER (HW5) AT THE CENTER. ALSO, USING BOLT (HW2) AND WASHERS (HW5 AND HW6) AT THE SIDE. DO NOT TIGHTEN YET.
STEP 3: FASTEN BOTH SIDE STRETCHERS (E) INTO PLACE USING SCREW (HW7).	STEP 4: STAND THE CHAIR UPRIGHT. ENSURE ALL LEGS ARE LEVEL ON THE FLOOR, THEN USE THE ALLEN KEY (HW1) TO FULLY TIGHTEN ALL BOLTS. FINALLY, INSERT THE WOOD KNOB (HW8) INTO THE HOLES AT THE TOP OF THE BACKREST LEGS. THIS ITEM MAY REQUIRE PERIODIC TIGHTENING.