
Cabinet

Assembly Instructions - Please keep for future reference

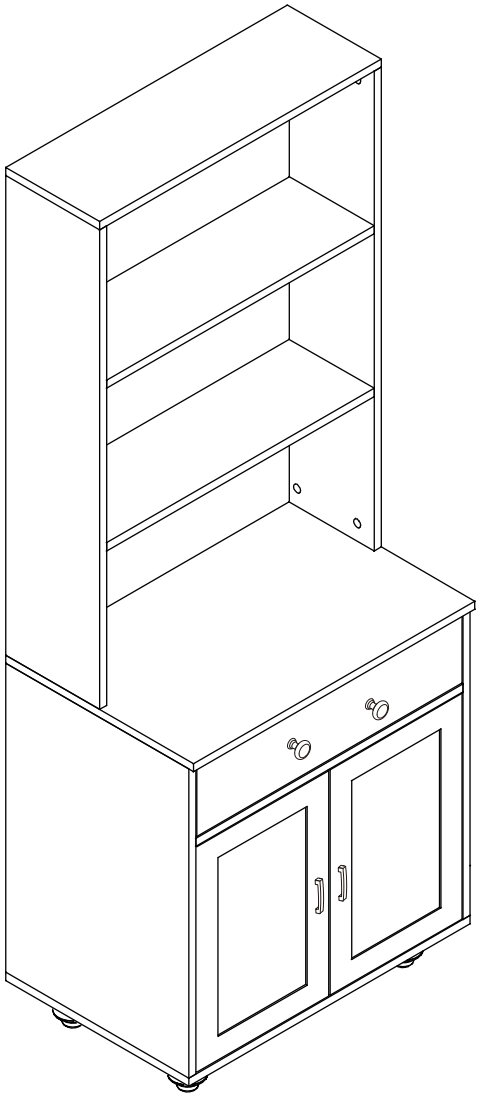

Dimensions
Width-23.6inch
Depth-15.7inch
Height-59.0inch

Important – Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – please follow these instructions


To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Using Camlocks


Step 1

Connect the male camlock as diect-ed in the assembly instructions using a scewdriver.

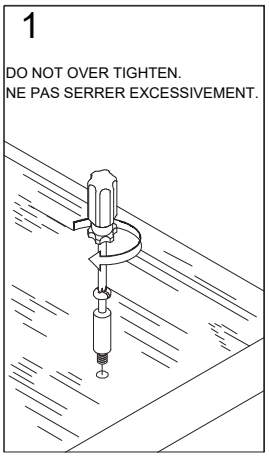

Step 2


Push the male camlock into the entry hole.

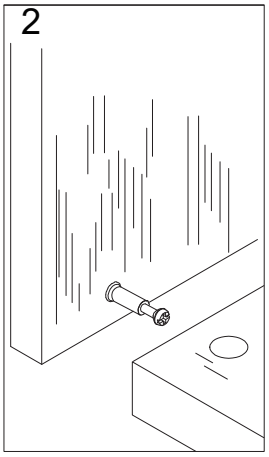

Step 3

Insert the female camlock as shown in the instruction.

Note:ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

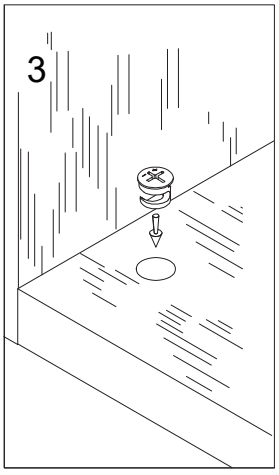


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

















The joint is now secure.

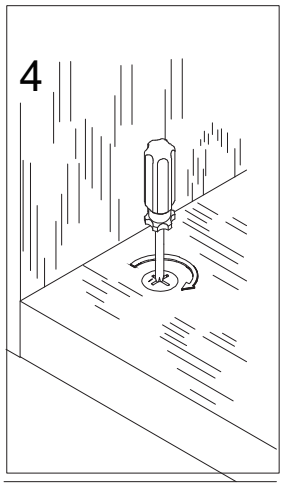





Assembly Instructions

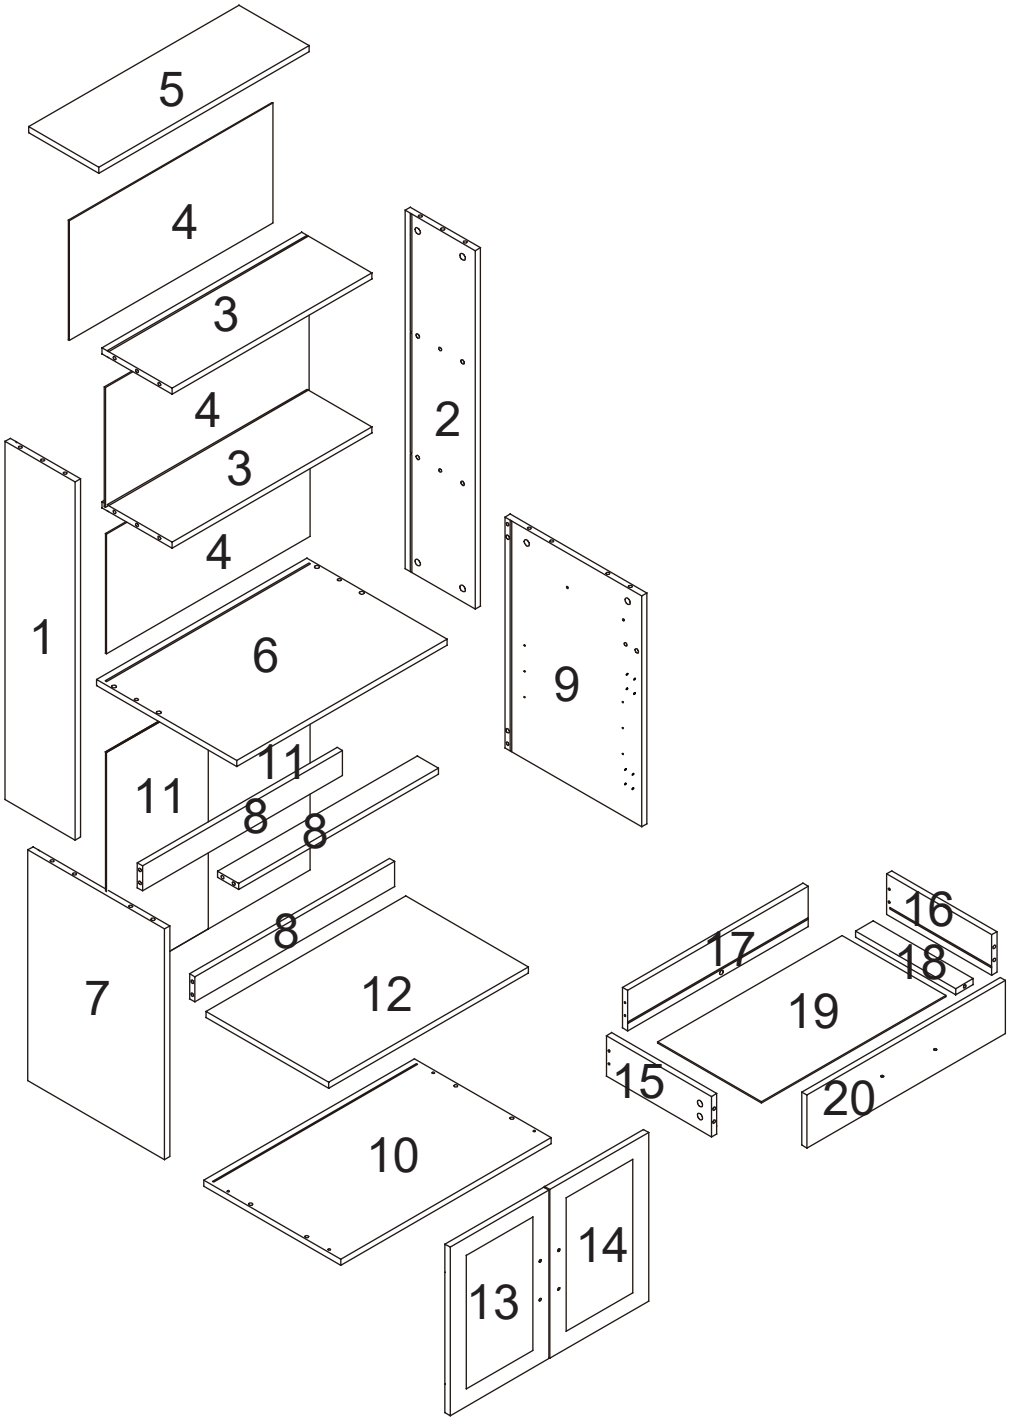

Assembly Instructions

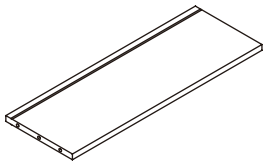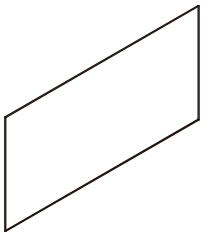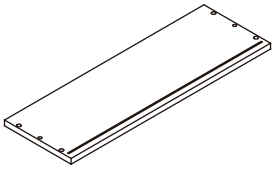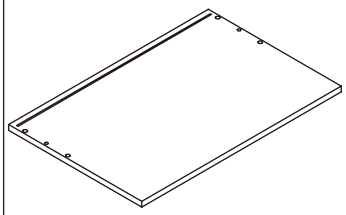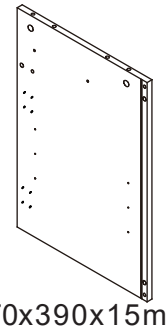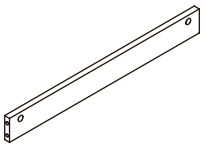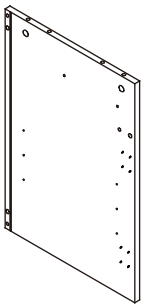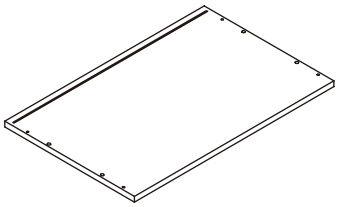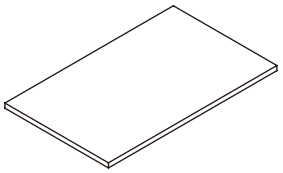 885x200x15mm	 885x200x15mm	 570x200x15mm	 581x296x3mm
① x 1	② x 1	③ x 2	④ x 3
 600x200x15mm	 600x400x15mm	 570x390x15mm	 570x60x15mm
⑤ x 1	⑥ x 1	⑦ x 1	⑧ x 3
 570x390x15mm	 600x390x15mm	 581x290.5x3mm	 570x350x12mm
⑨ x 1	⑩ x 1	⑪ x 2	⑫ x 1
 416x283x15mm	 416x283x15mm	 300x100x15mm	 300x100x15mm
⑬ x 1	⑭ x 1	⑮ x 1	⑯ x 1











Assembly Instructions

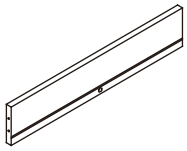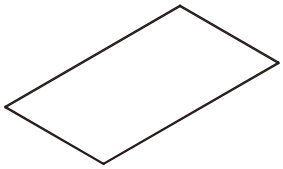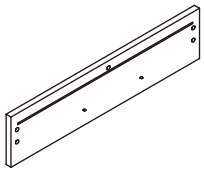
 515x100x15mm	 285x50x15mm	 526x296x3mm	 566x131x15mm
17 x 1	18 x 1	19 x 1	20 x 1


Components-Fittings

Please check you have all the panels listed below


Note:The quantitie below are the correcet amount to complete the assembly.In some cases more fittings may be supplied than are required.

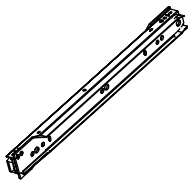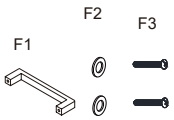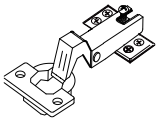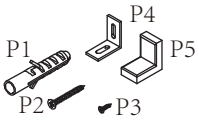Ⓐ  Cam Bolt x 32+2	Ⓑ  Cam Lock x 32+2	Ⓒ  8*30mm Dowel x 22+2	Ⓓ  3.5*14mm Screw x68+3
Ⓔ  300mm Drawer slide x 1	Ⓕ  Hole Pitch Handle x 2 set	Ⓖ  5*40mm Screw x 8+1	Ⓗ  Backboard buckle x 20+2
Ⓙ  Hinge x 4	Ⓚ  Bulkhead Pins x 4+1	Ⓛ  Anchor x 4 set	Ⓜ  Perfect Fit x 8+1
Ⓝ  Screwdriver x 1	Ⓟ  Anti dumping x 2 set	Ⓠ  Hole Pitch Handle x 2 set	

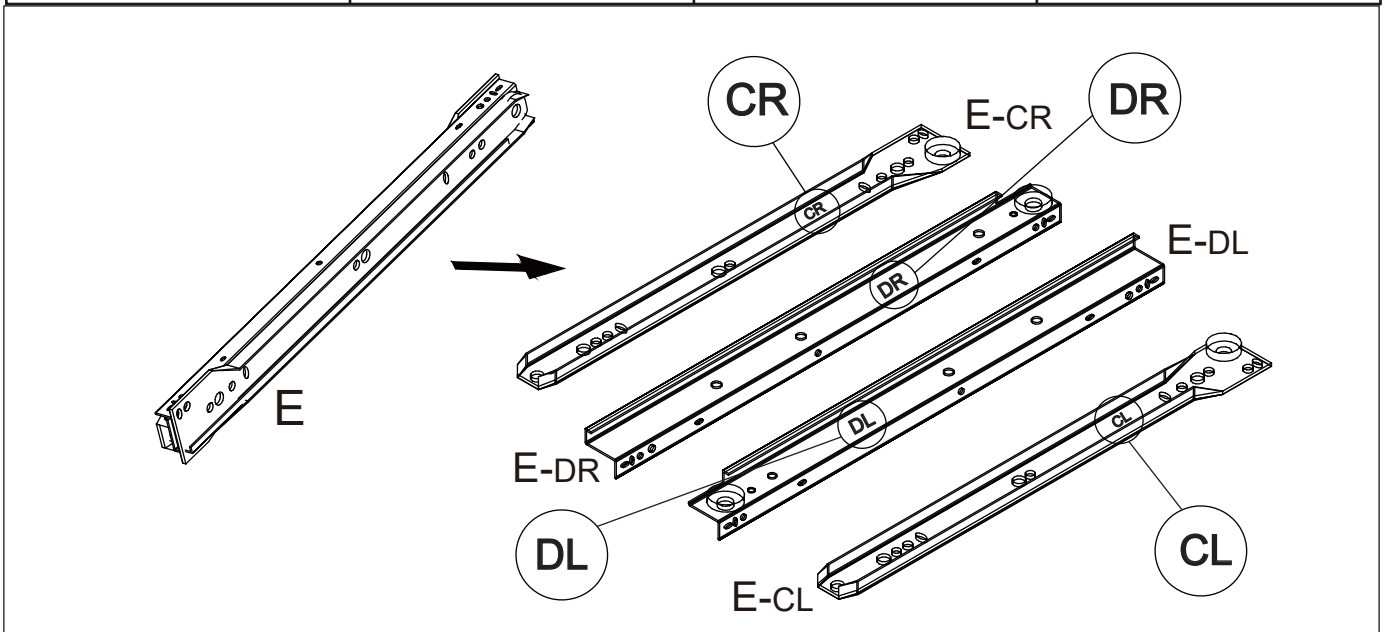

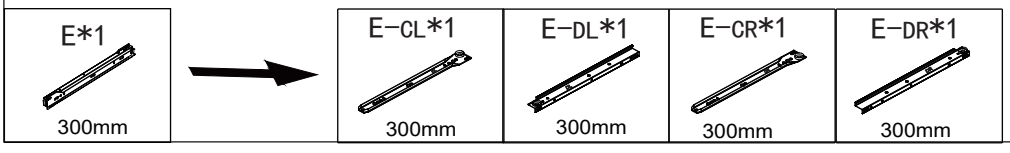


1.

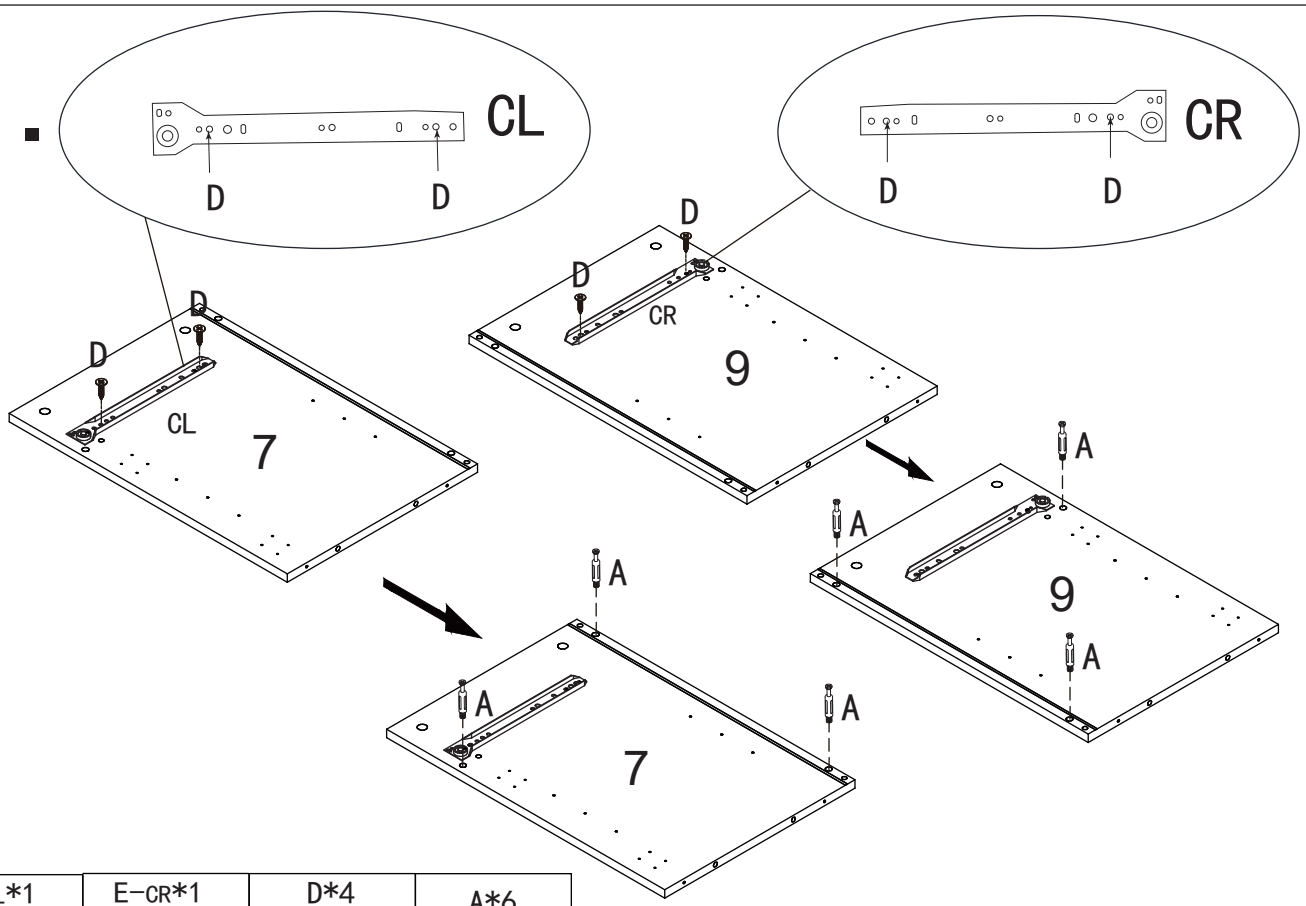


E-CL*1	E-CR*1	D*4	A*6
300mm	300mm	∅3.5 x 14 mm	


2.

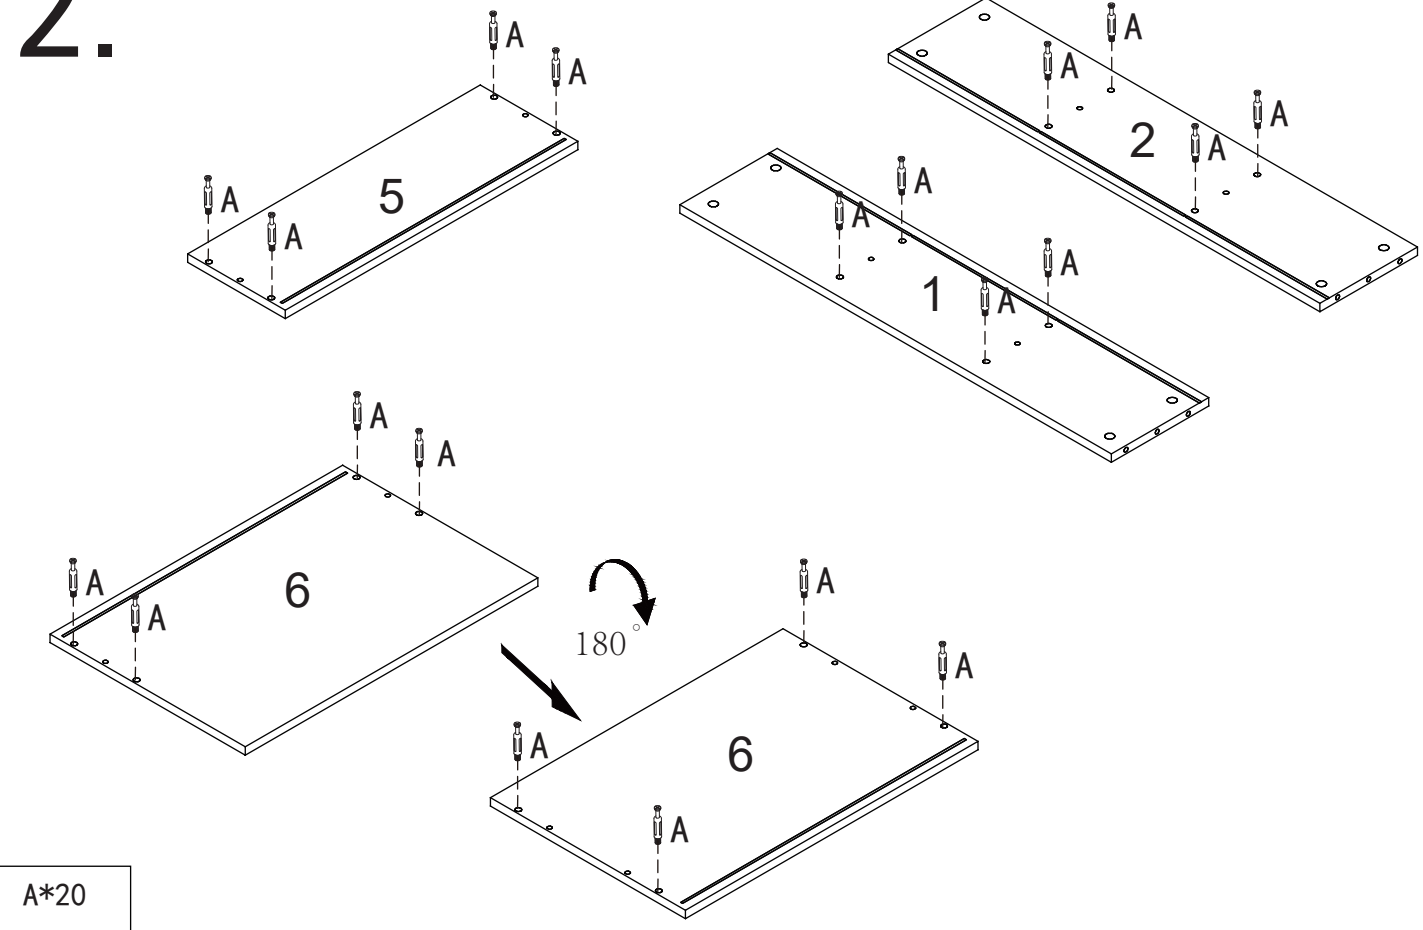

A*20


3.

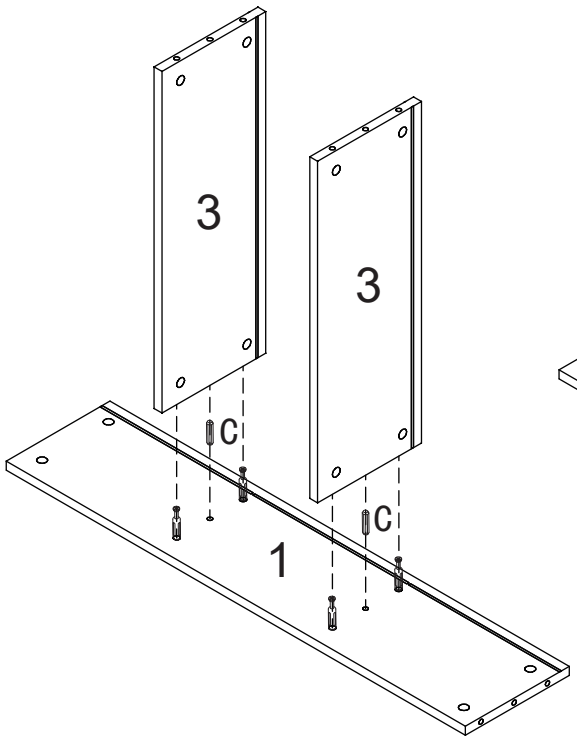

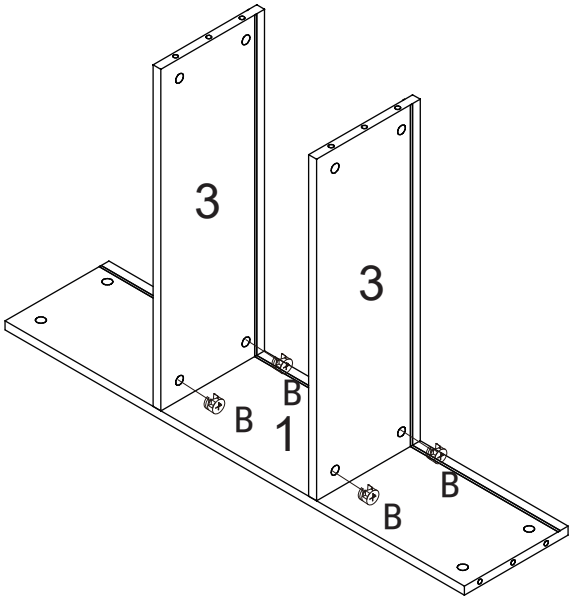



B*4	C*2
	 ∅8 x 30 mm

4.

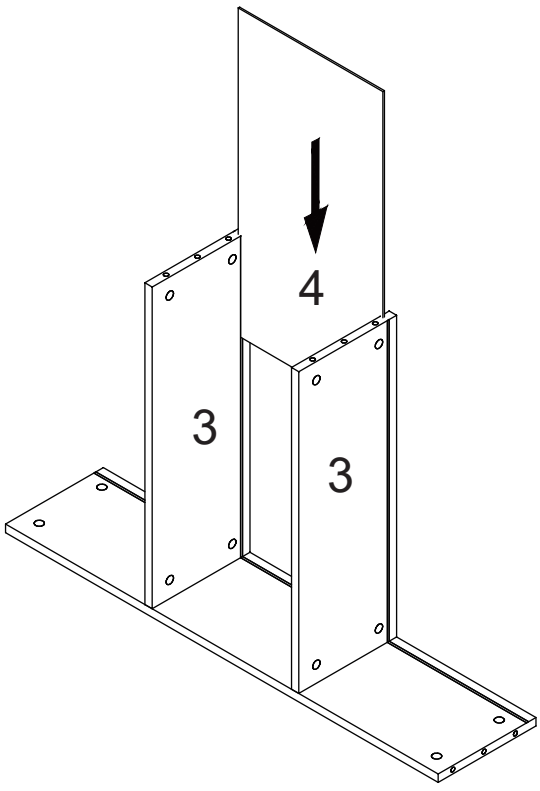


5.

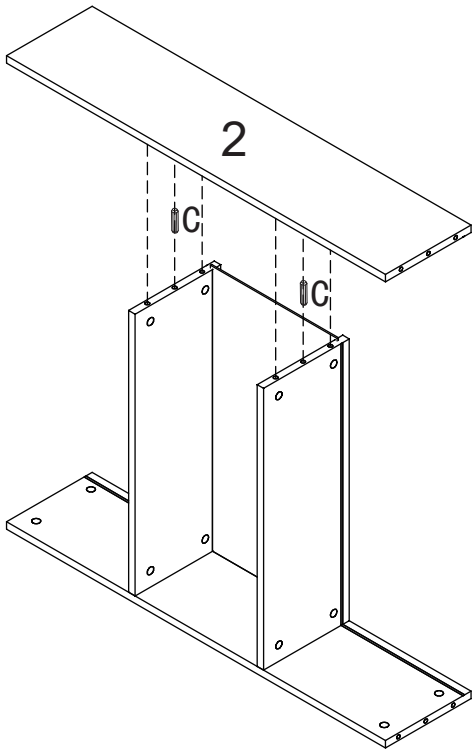


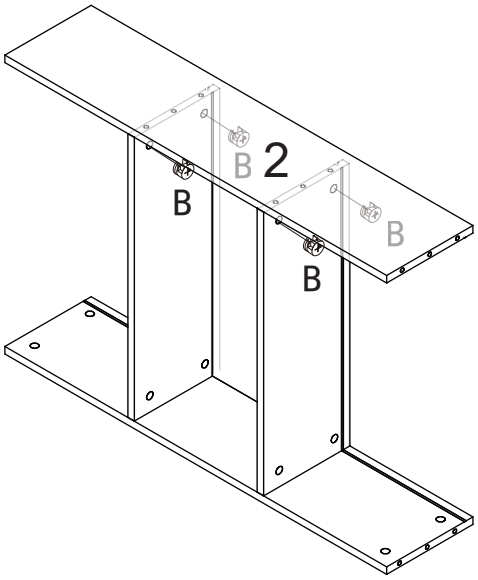

B*4	C*2
	 ∅8 x 30 mm


6.

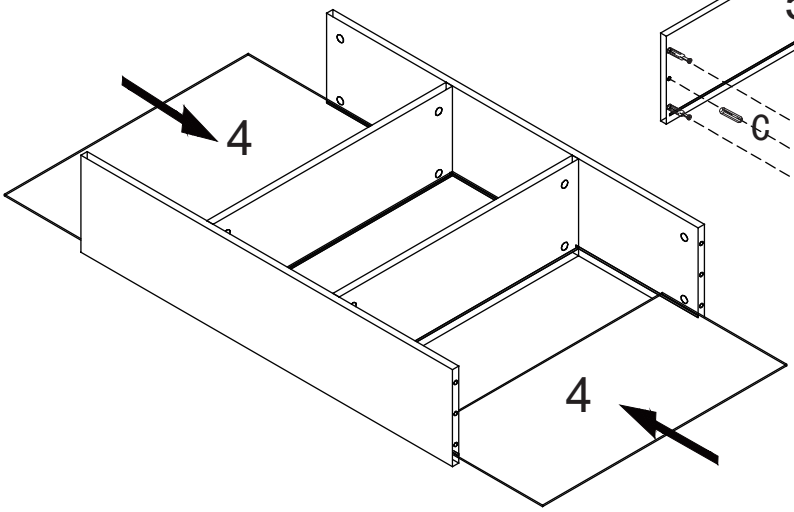

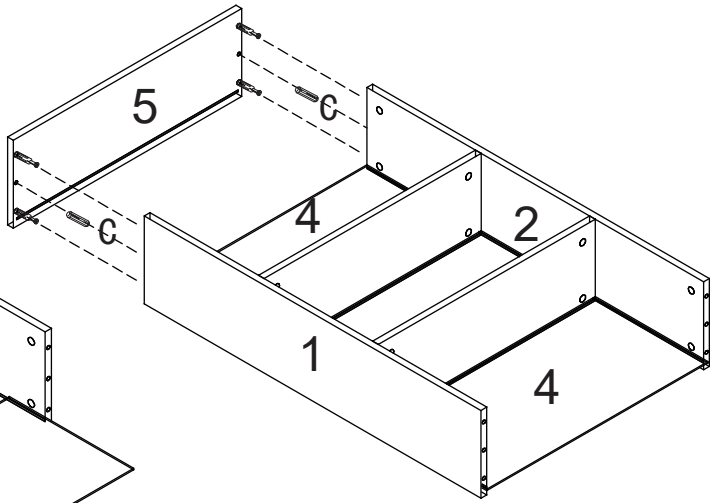


C*2
 ∅8 x 30 mm

7.

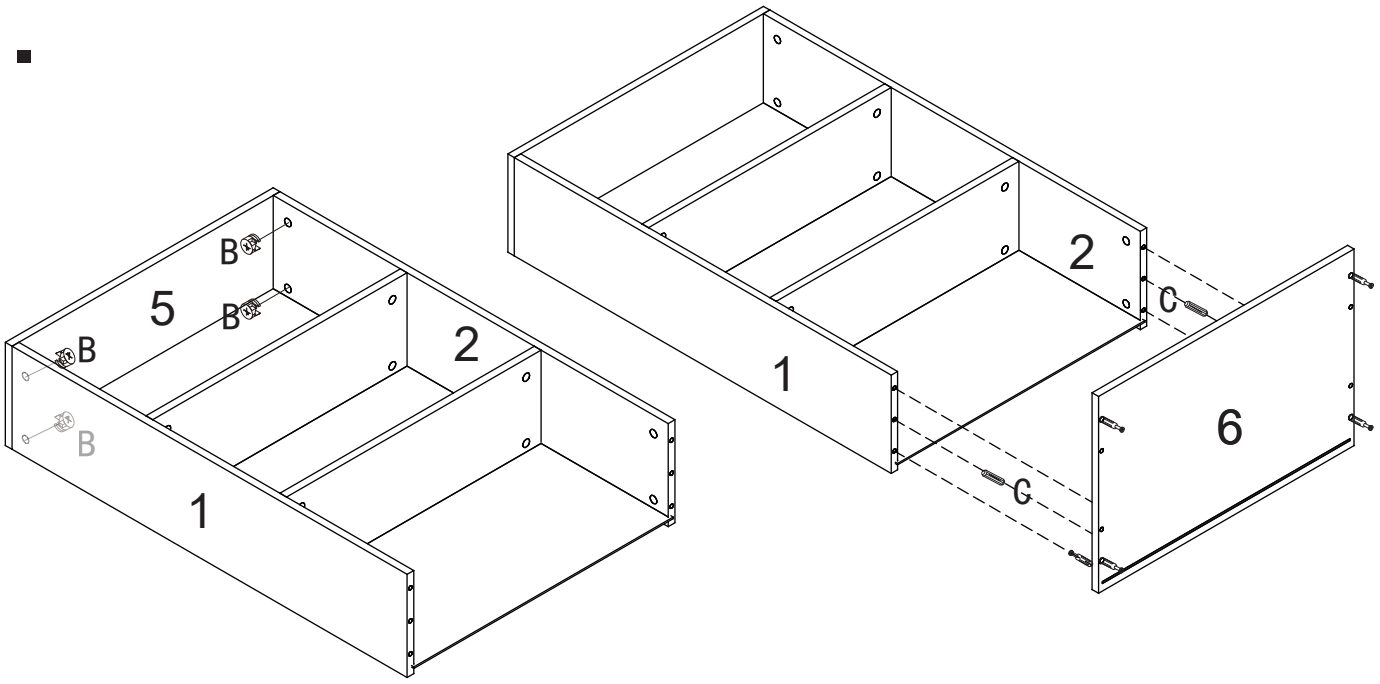


B*4	C*2
	 ∅8 x 30 mm


8.

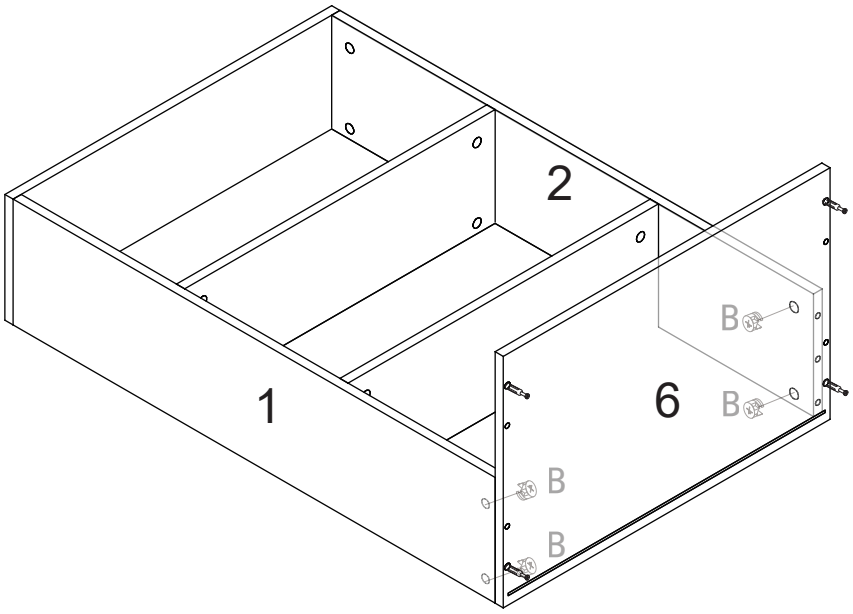

B*4



9.

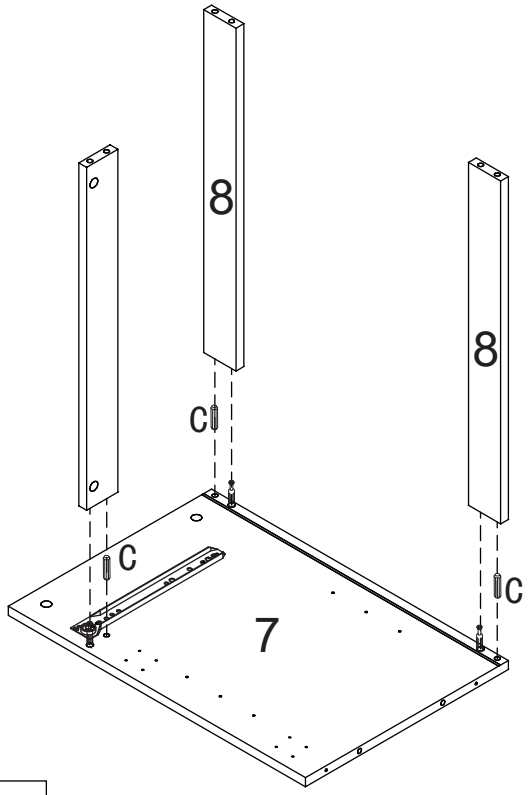


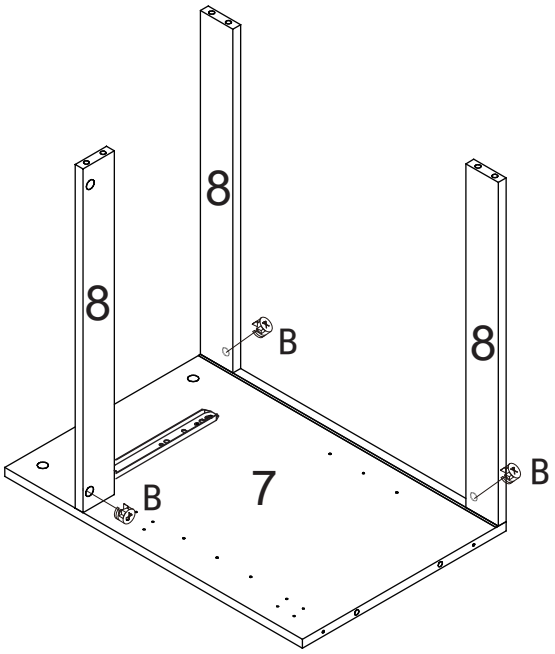

B*3	C*3
	 ∅8 x 30 mm


10.

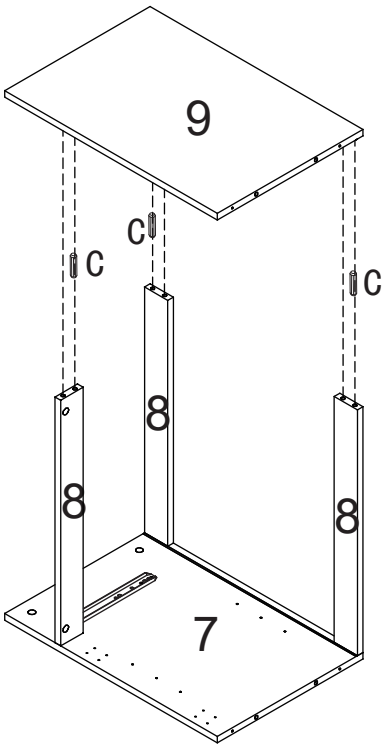

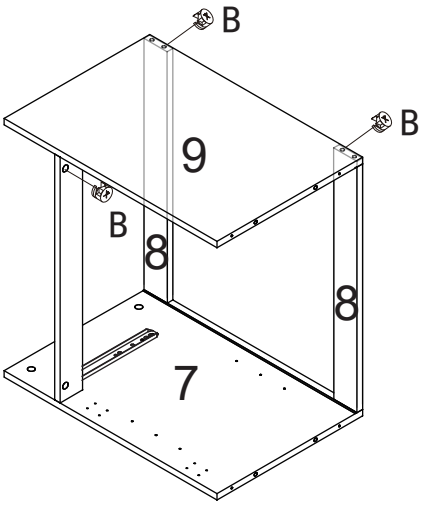


B*3	C*3
	 ∅8 x 30 mm

11.

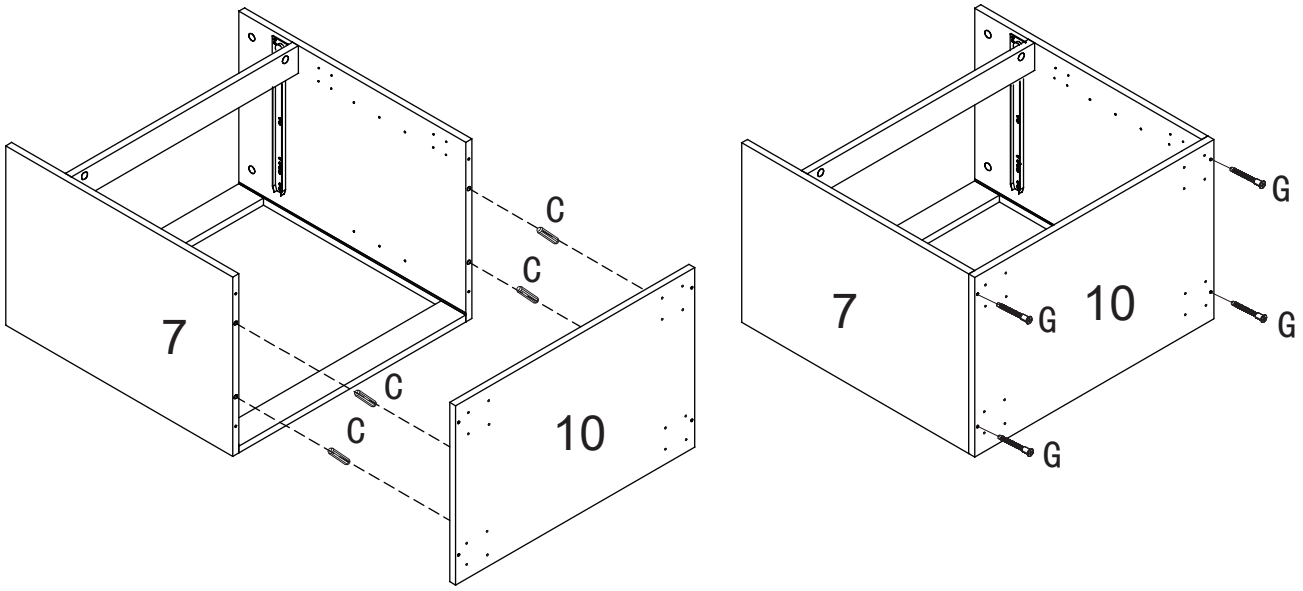


C*4	G*4
∅8 x 30 mm	∅5 x 40 mm


12.

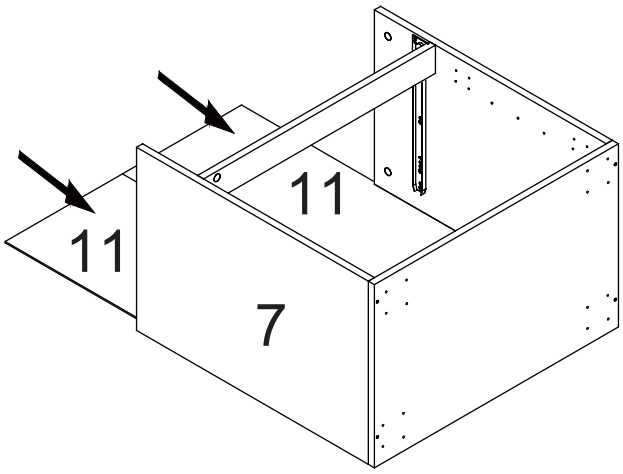


13.


Align the L2 intermediate hole with the L1 intermediate hole and tighten the other four holes

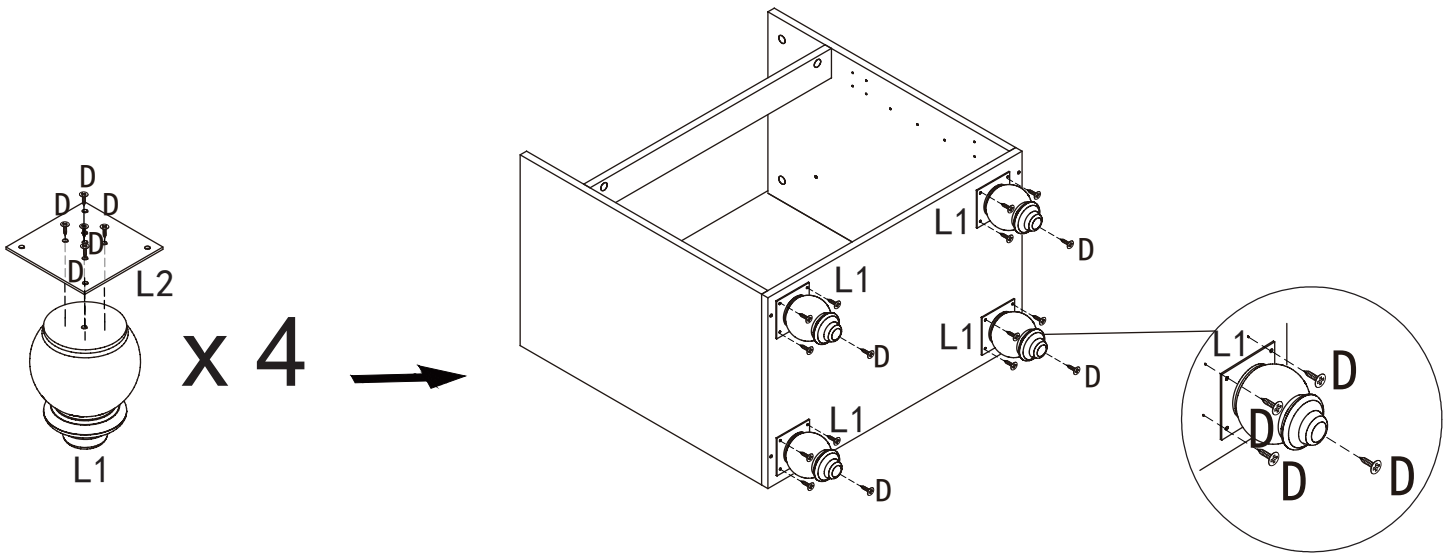

L*4	D*36
	
	∅3.5 x 14 mm


14.

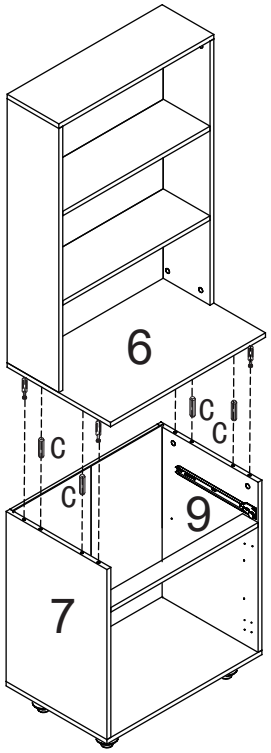

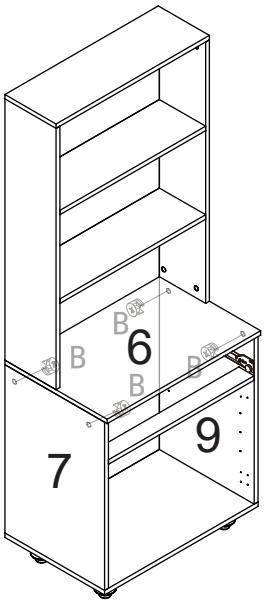


B*4	C*4
	
	∅8 x 30 mm

15.

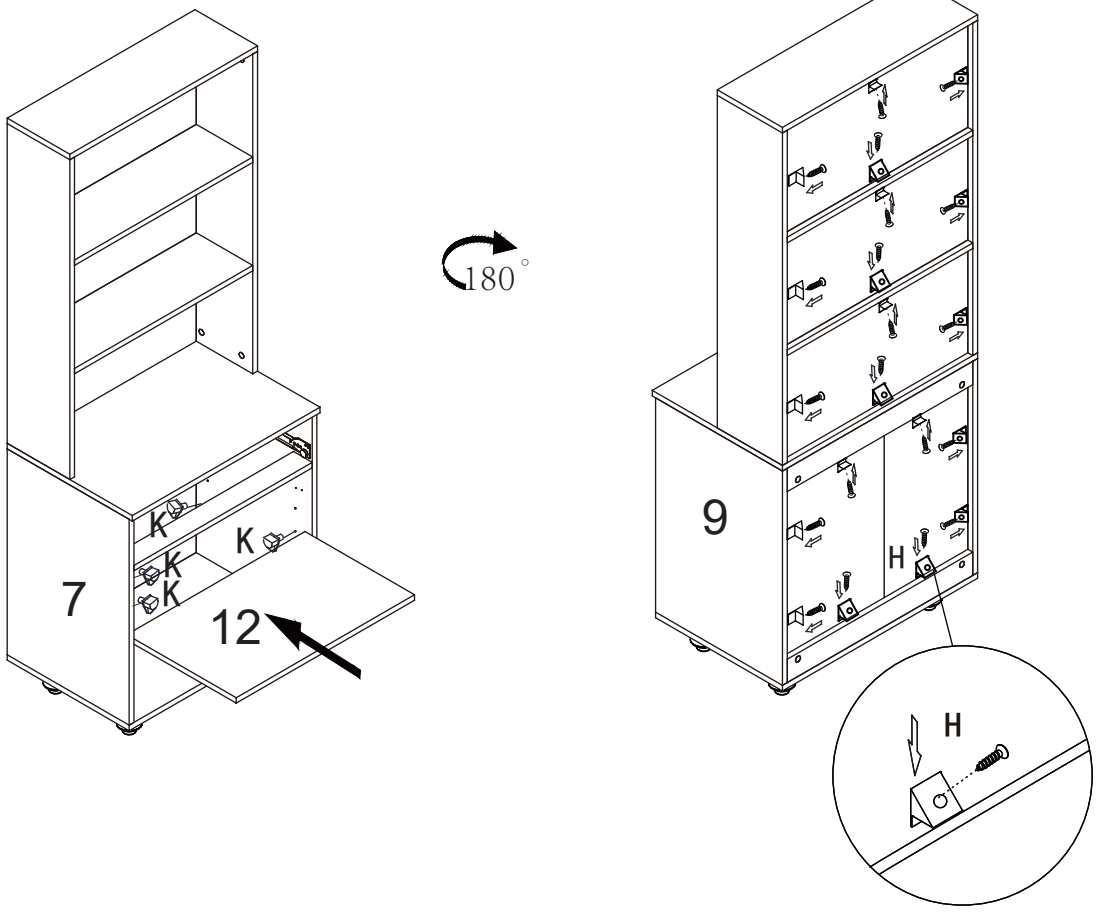


H*20	K*4


16.

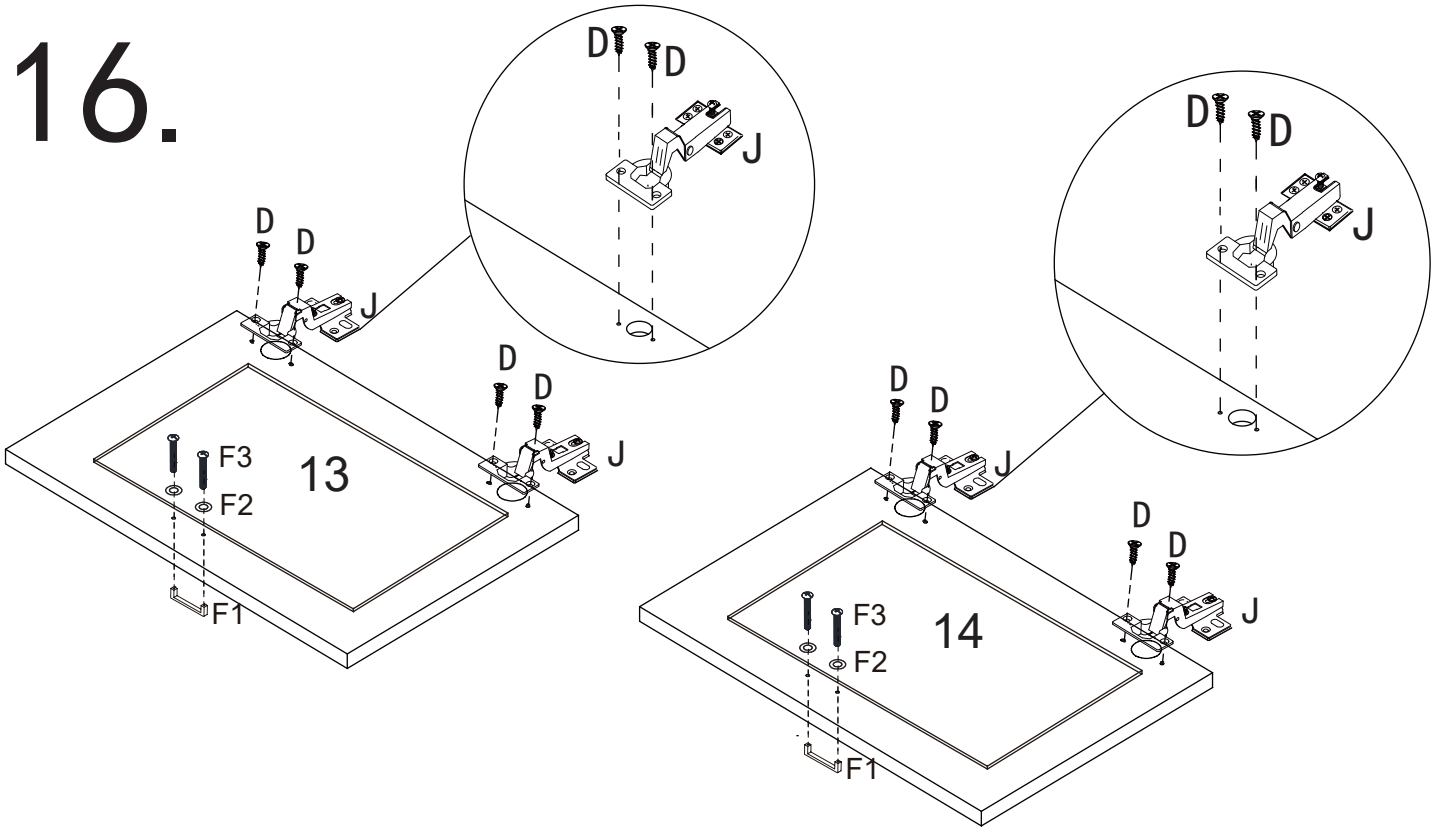



D*8	F*2	F1*2	F2*2	F3*2	J*4
∅3.5 x 14 mm	F1 F2 F3				


17.

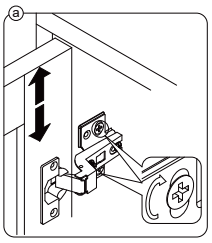

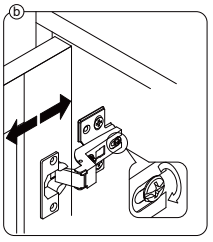

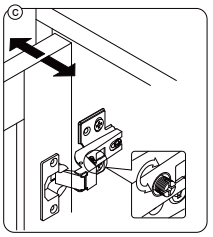


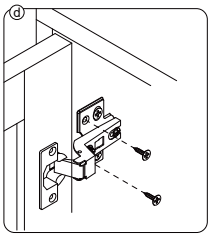


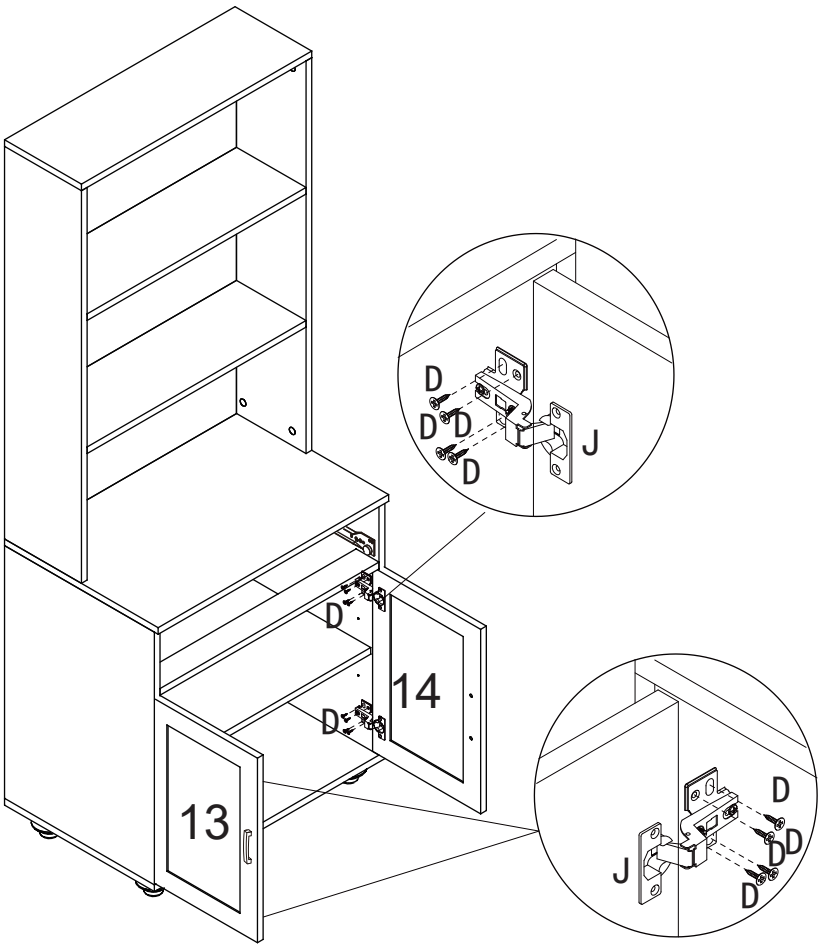



D*16
 ∅3.5 x 14 mm


18.

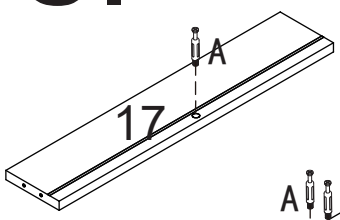

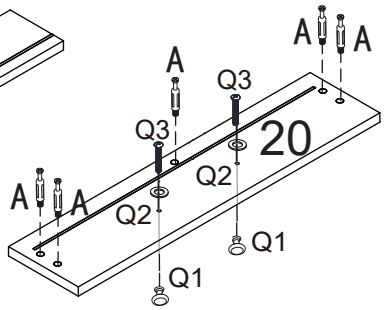


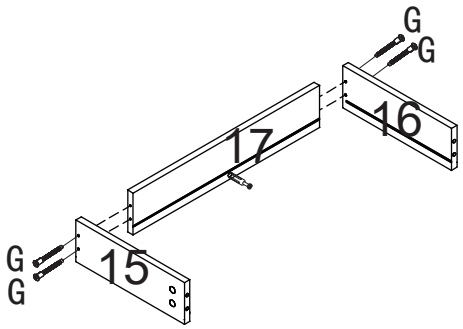

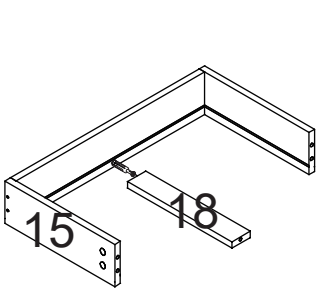


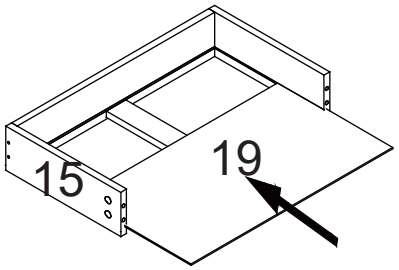

A*6	G*4
	 ∅5 x 40 mm


Q*2	Q1*2	Q2*2	Q3*2
 Q1 Q2 Q3			

19.

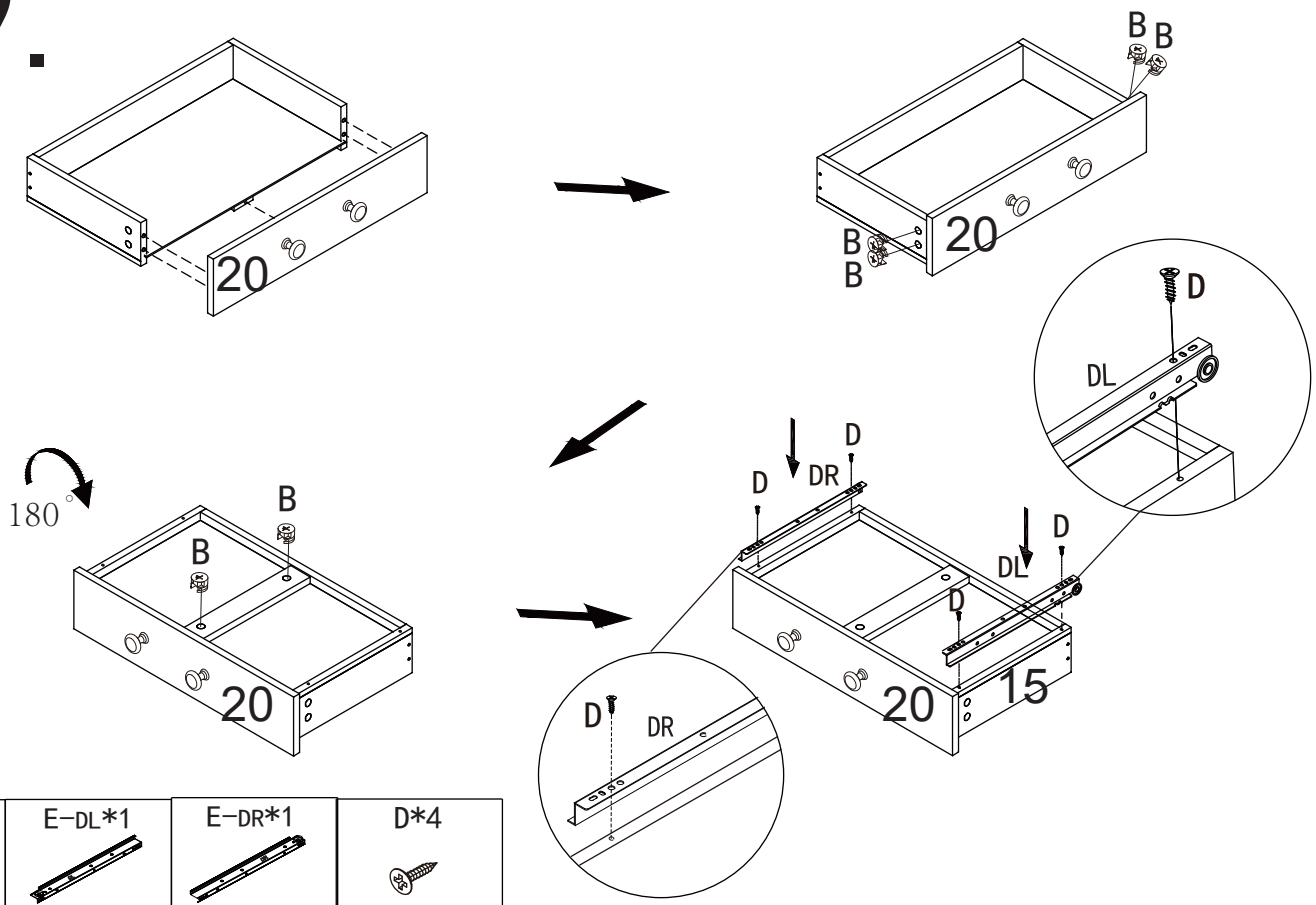


B*6	E-DL*1	E-DR*1	D*4
	300mm	300mm	∅3.5 x 14 mm

20.

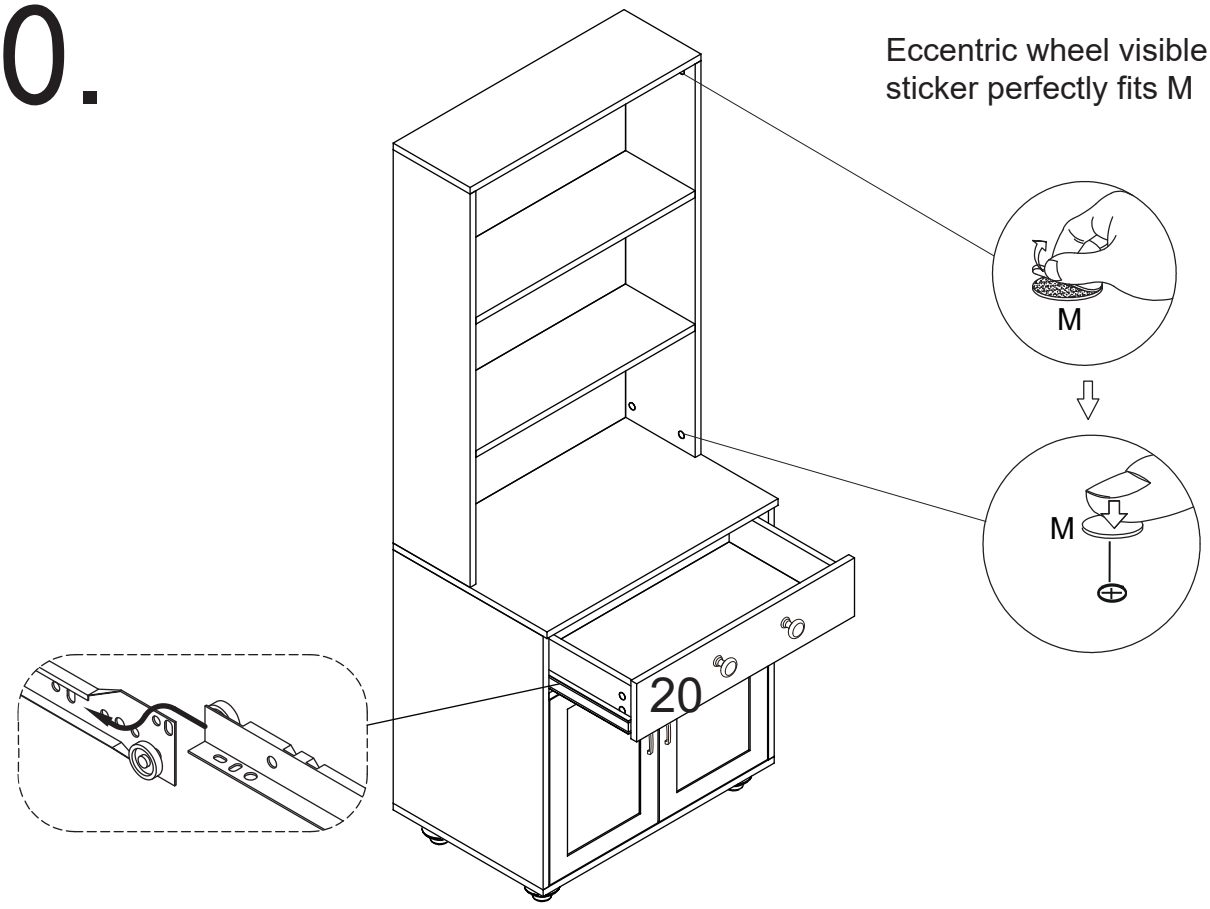


M*8

21.

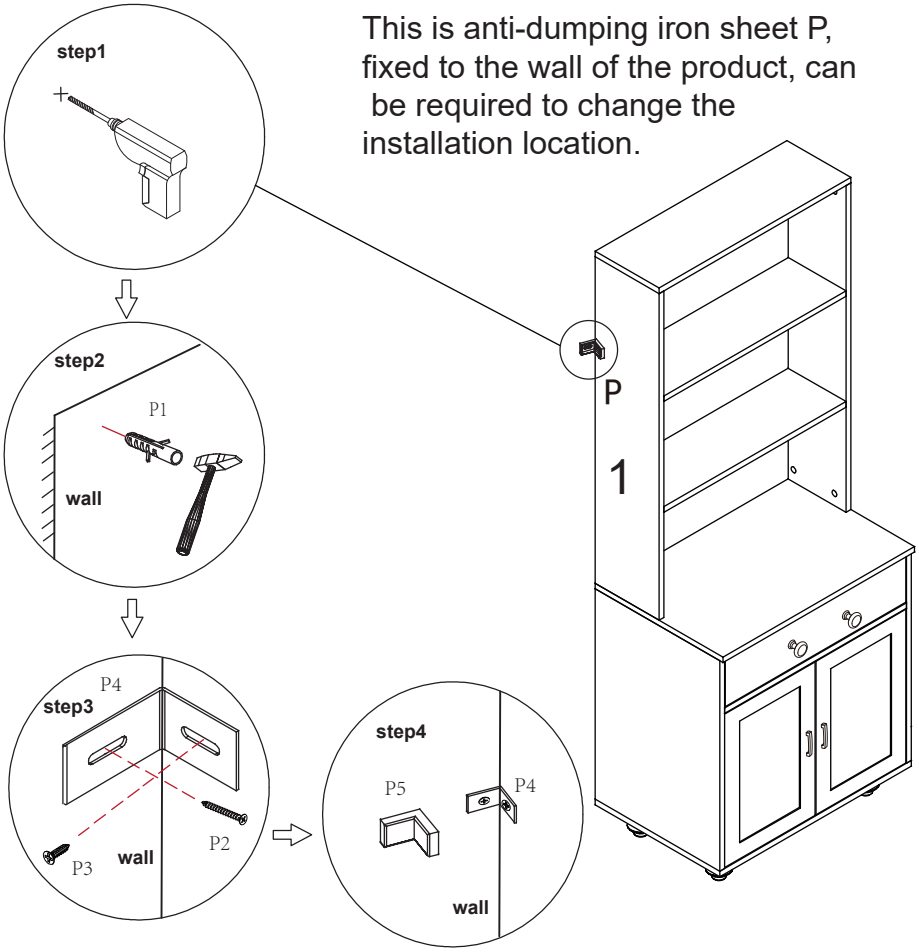

This is anti-dumping iron sheet P, fixed to the wall of the product, can be required to change the installation location.

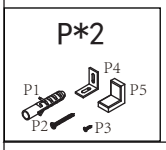

22.

