


ASSEMBLY INSTRUCTION


SIZE: Full/Queen

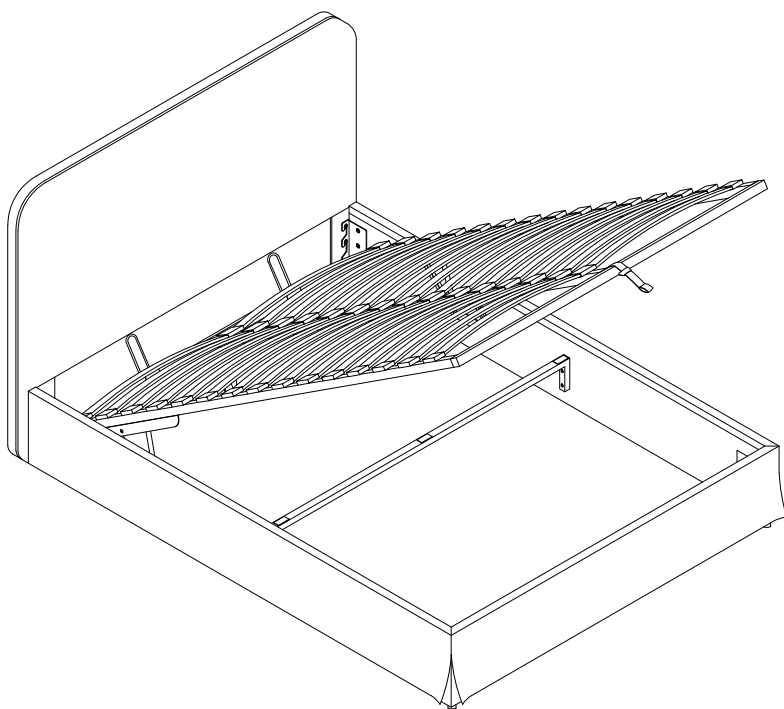


Please **TEAR OFF** this shrink film from side!
DO NOT USE CUTTER!

IMPORTANT NOTE


1. For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
2. Keep fittings out of children's reach and keep children well away from construction area.
3. When moving your assembled bed, it is best to lift the bed and never to drag it.
4. Do not use this product if parts are missing, damaged or worn.
5. This product should only be used on firm, level ground.
6. Please periodically check all fittings and re-tighten as necessary.
7. Do not use the bed unless all bolts and screws are firmly secured.
8. For further assistance, please provide a screenshot of your order and contact us via email

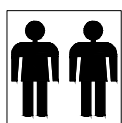















Minimum two
person assembly

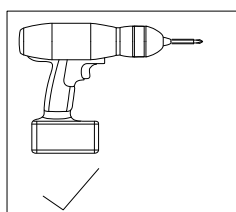








PART LIST

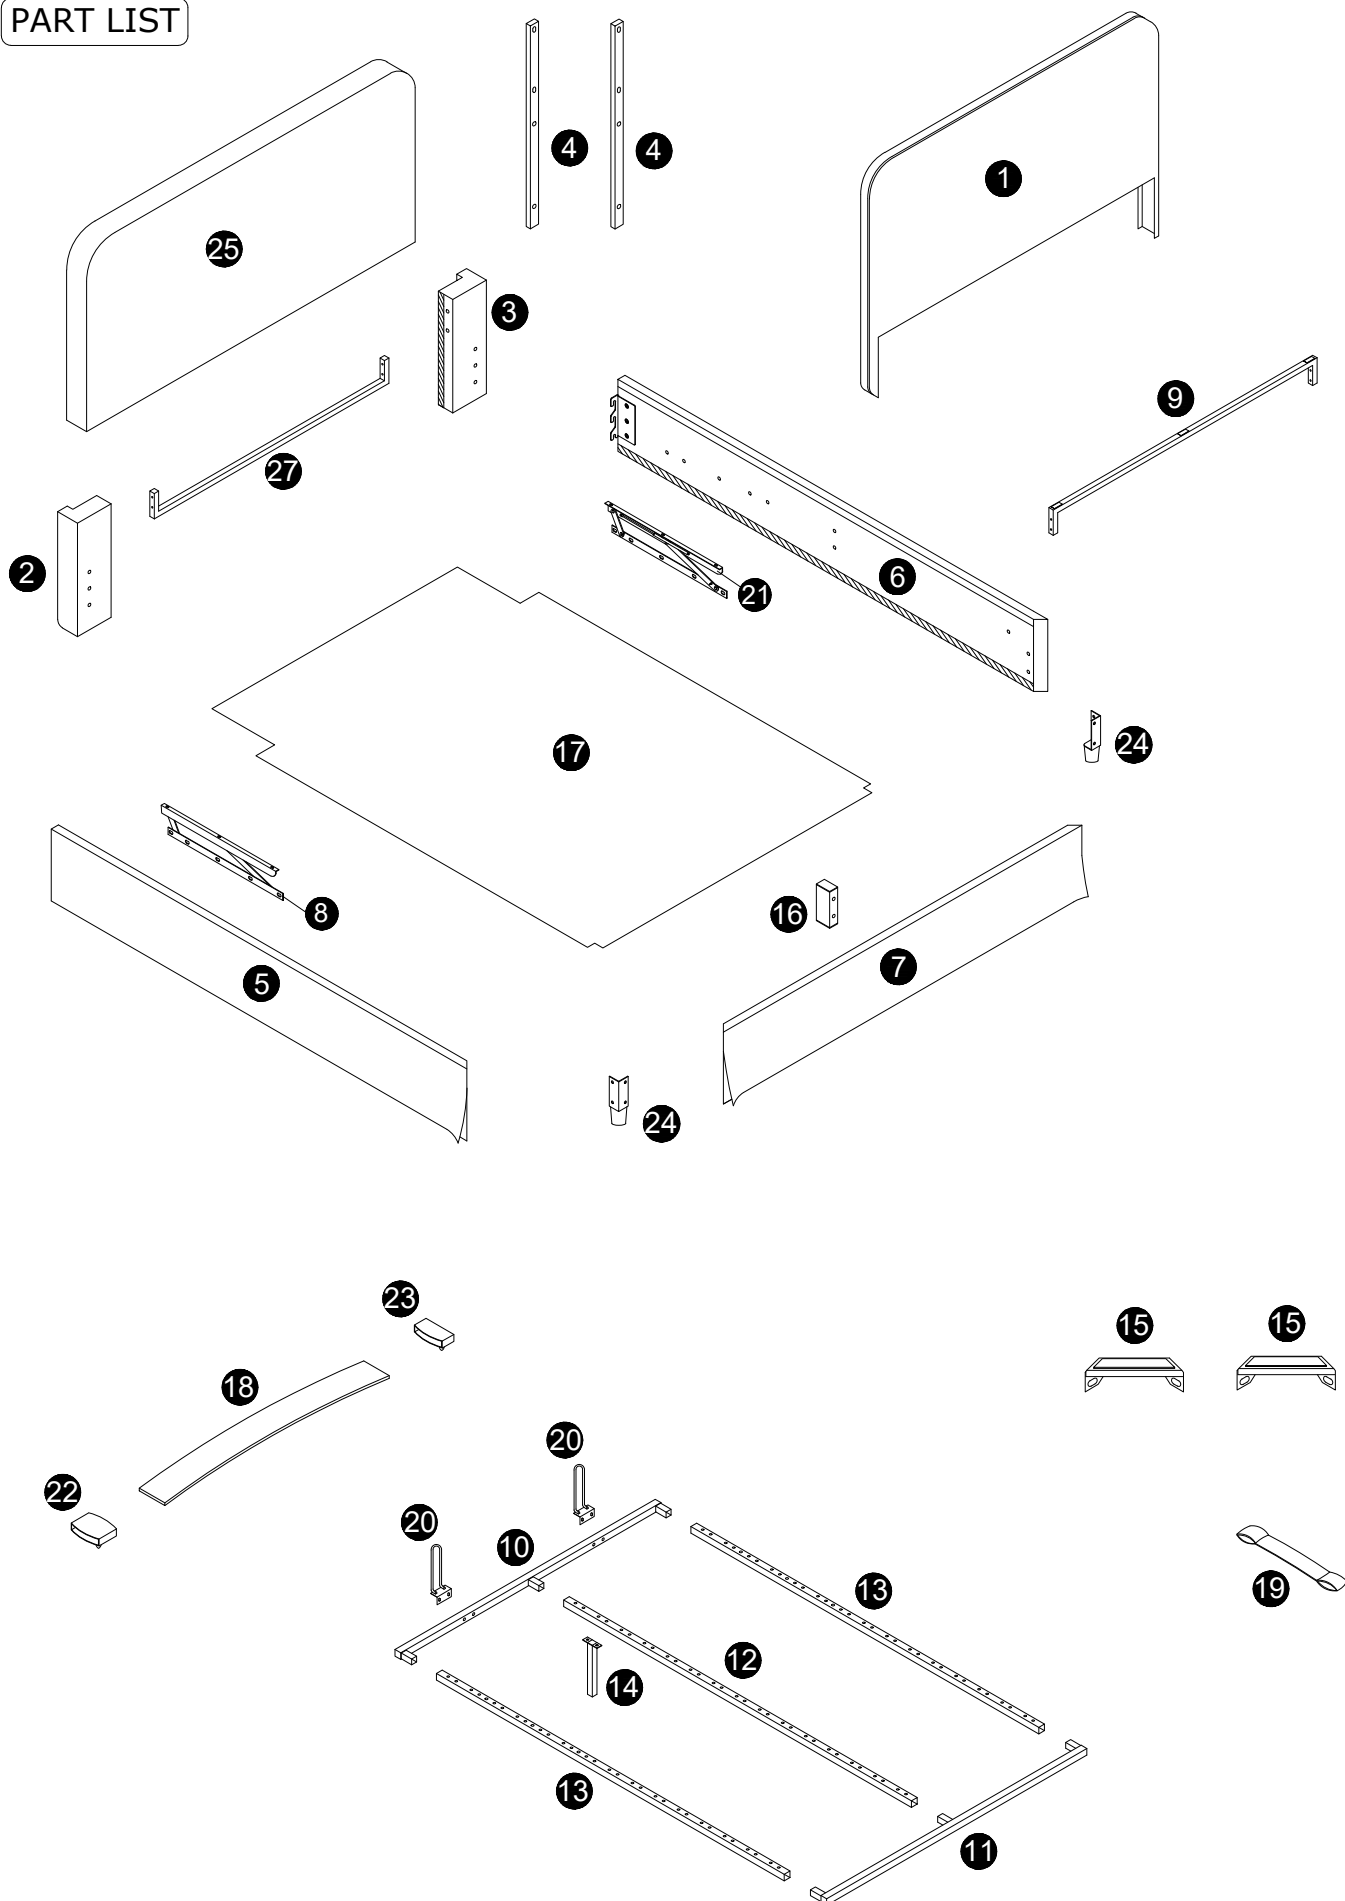

Components of Carton A

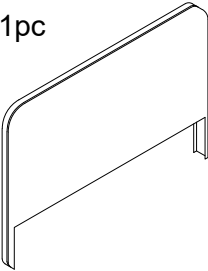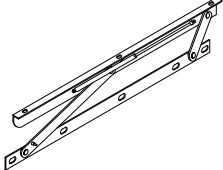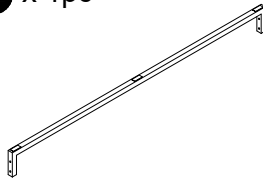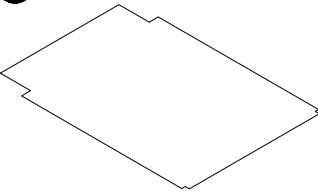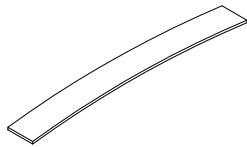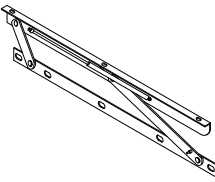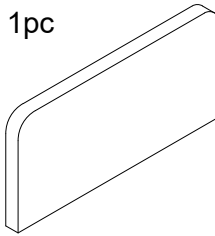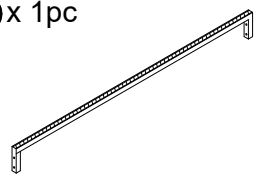1 x 1pc 	2 x 1pc 	3 x 1pc 	8 x 1pc 
9 x 1pc 	14 x 1pc (25x235mm) 	15 x 2pcs 	16 x 1pc 
17 x 1pc 	18 Full Size x 28pcs Queen Size x 30pcs 	19 x 1pc 	20 x 2pcs 
21 x 1pc 	22 Full Size x 14pcs Queen Size x 15pcs 	23 Full Size x 28pcs Queen Size x 30pcs 	24 x 2pcs 
25 x 1pc 	27 x 1pc 		

Components of Carton B

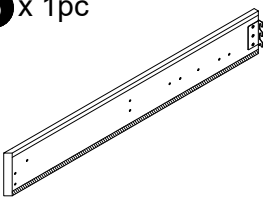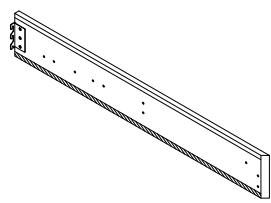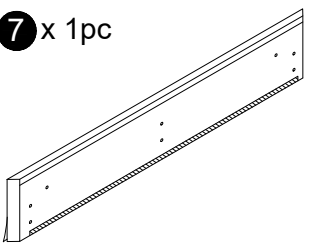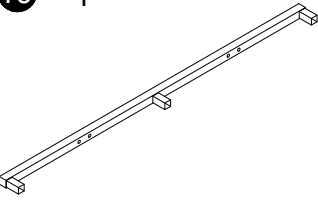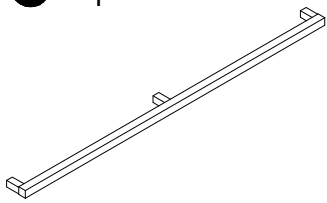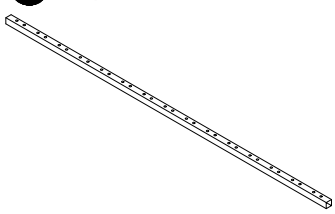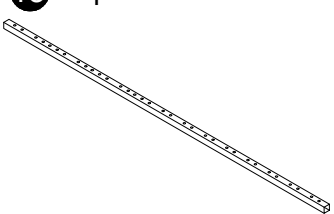
4 x 2pcs 	5 x 1pc 	6 x 1pc 	7 x 1pc 
10 x 1pc 	11 x 1pc 	12 x 1pc 	13 x 2pcs 

Please ensure to thoroughly inspect the small inner cardboard box containing the hardware, which are tied with a red string, before disposing of the box.


HARDWARE LIST

 H1 M5 x 1pc	 H2 M8x25mm x 40pcs	 H3 M8x45mm x 28pcs	 H4 M8x60mm x 2pcs
 H5 M8 x 14pcs	 H6 M8x22mm x 14pcs	 H7 M8 x 6pcs	 H8 M14 x 1pc


1 As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.

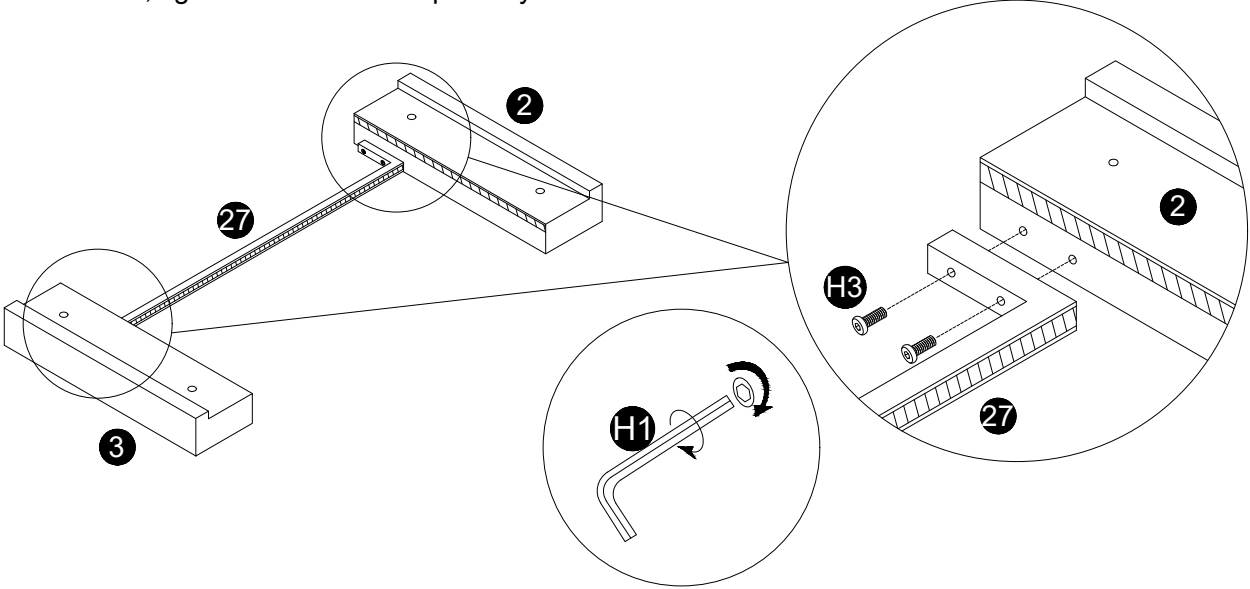

2 As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.

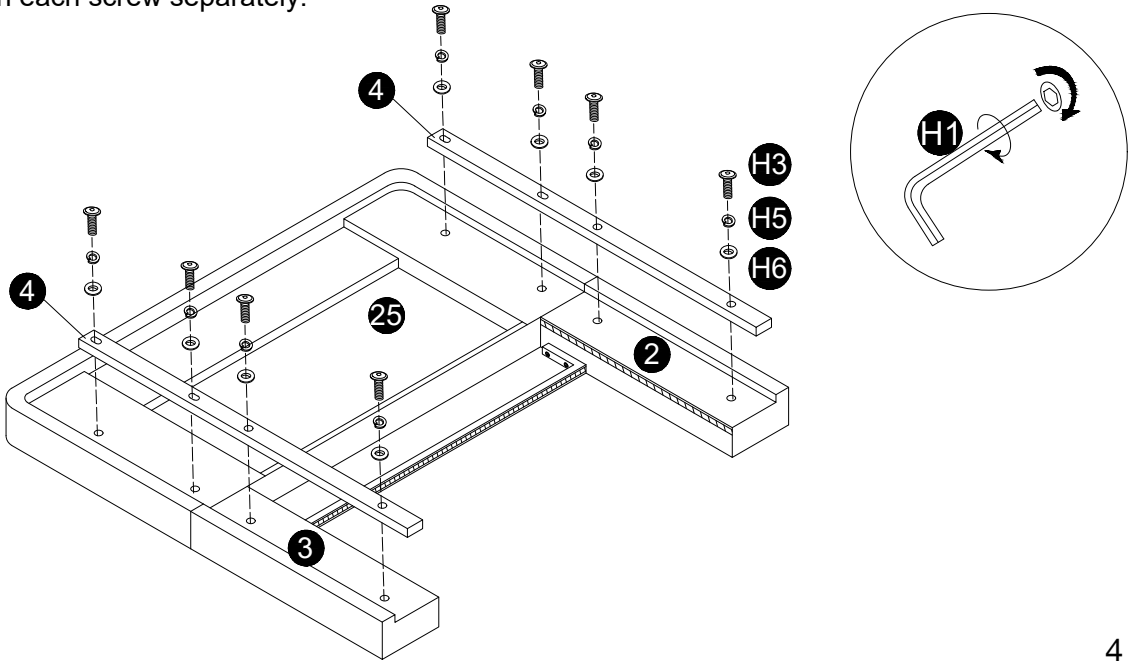


- 3** Slide the fabric cover (Part 1) over the headboard until it reaches the bottom, ensuring a full and secure fit.

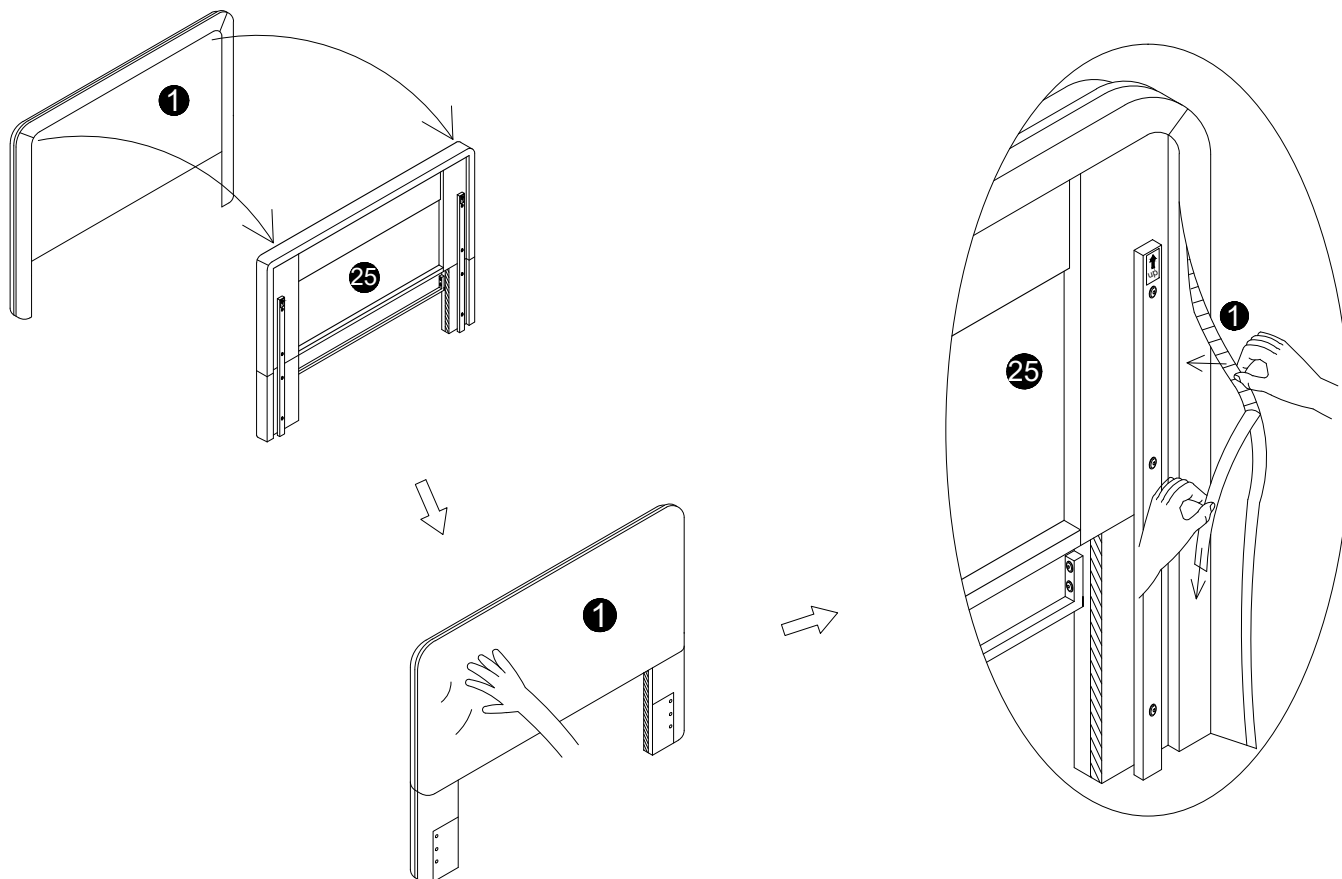


Smooth out any uneven areas or wrinkles by hand for a neat appearance.


4

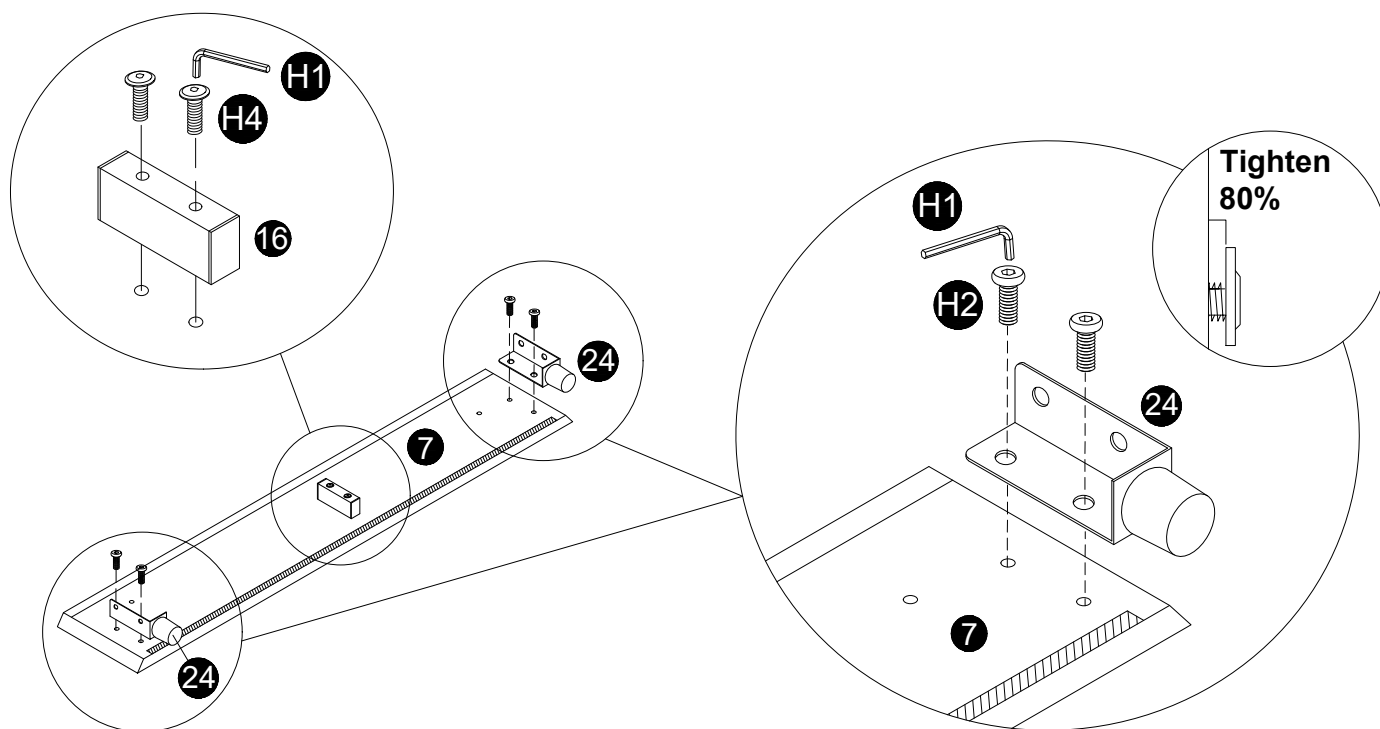


5

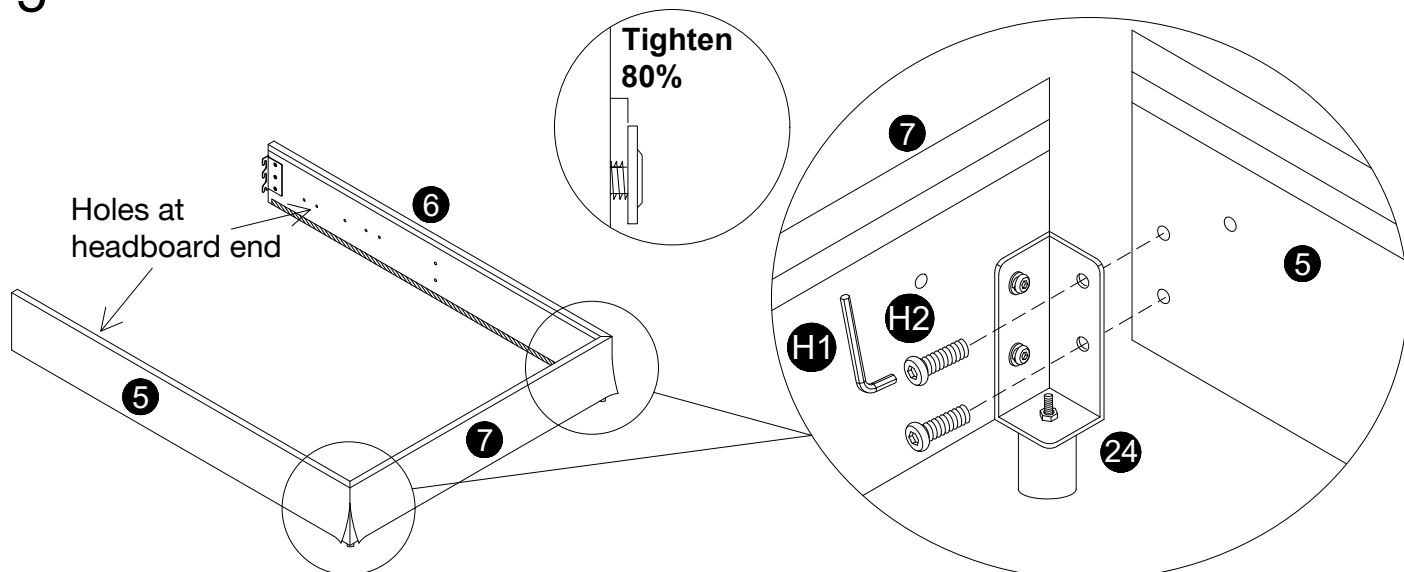


6

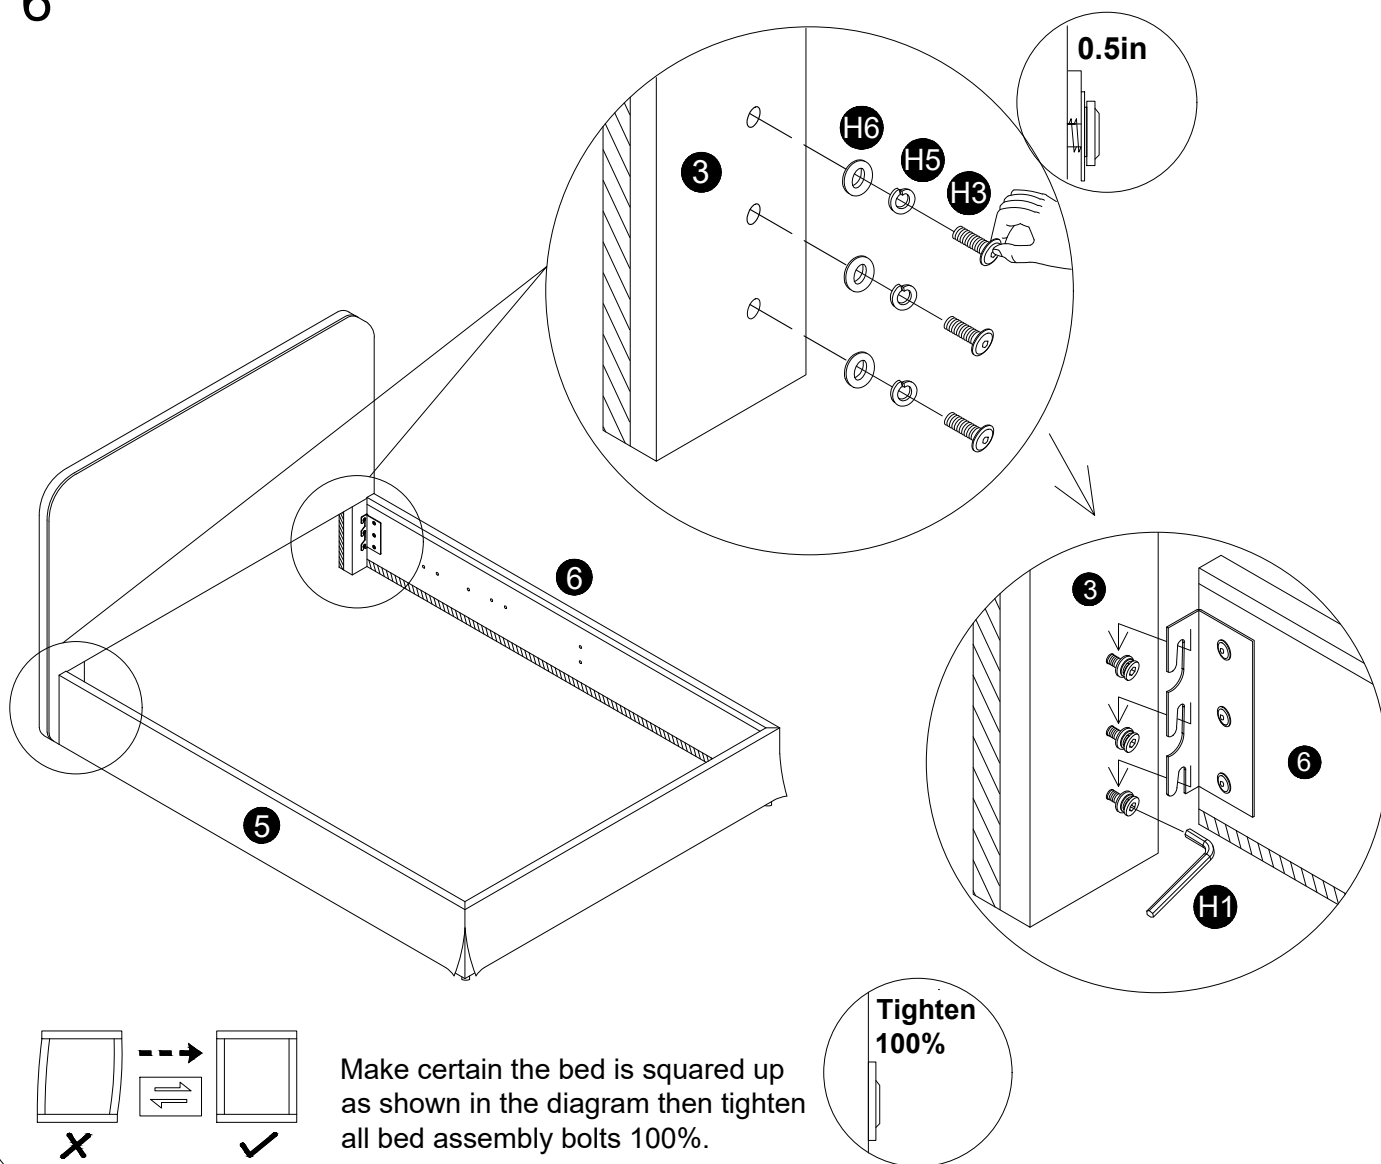

7

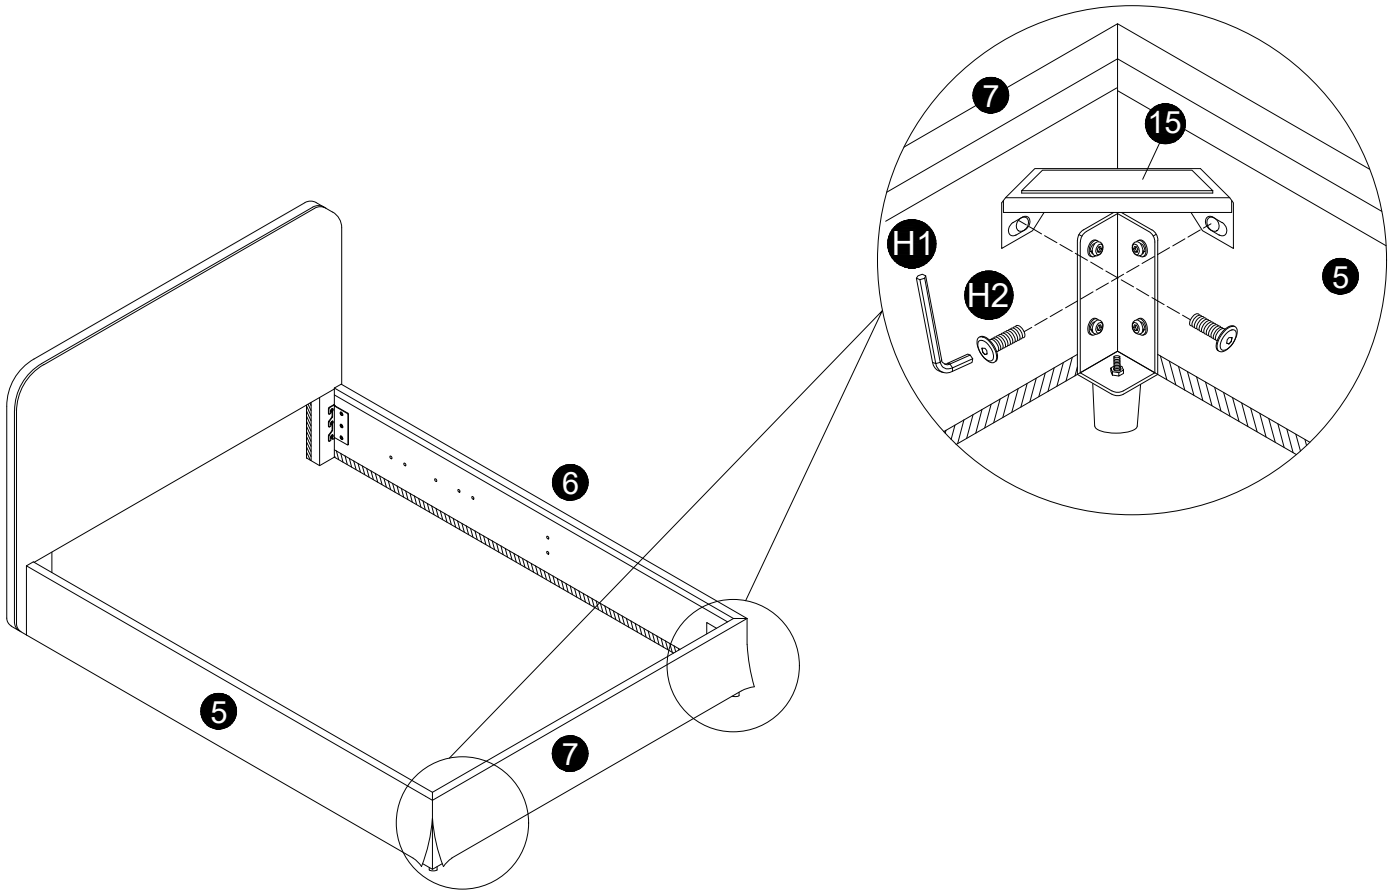


8

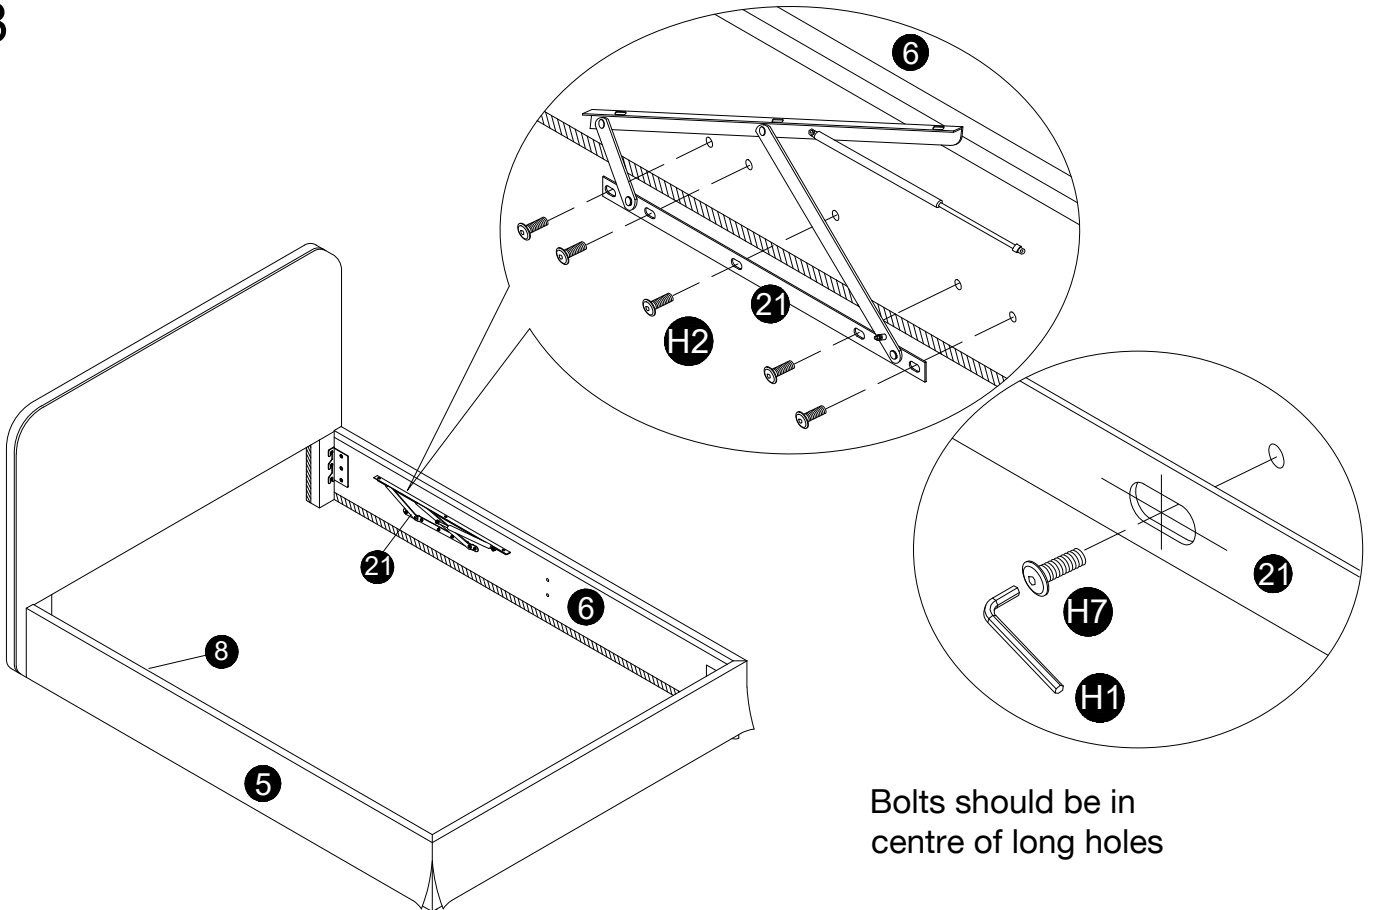


Bolts should be in
centre of long holes

9


Locate fabric base into position using the hook and loop strips around the inside of the frame.

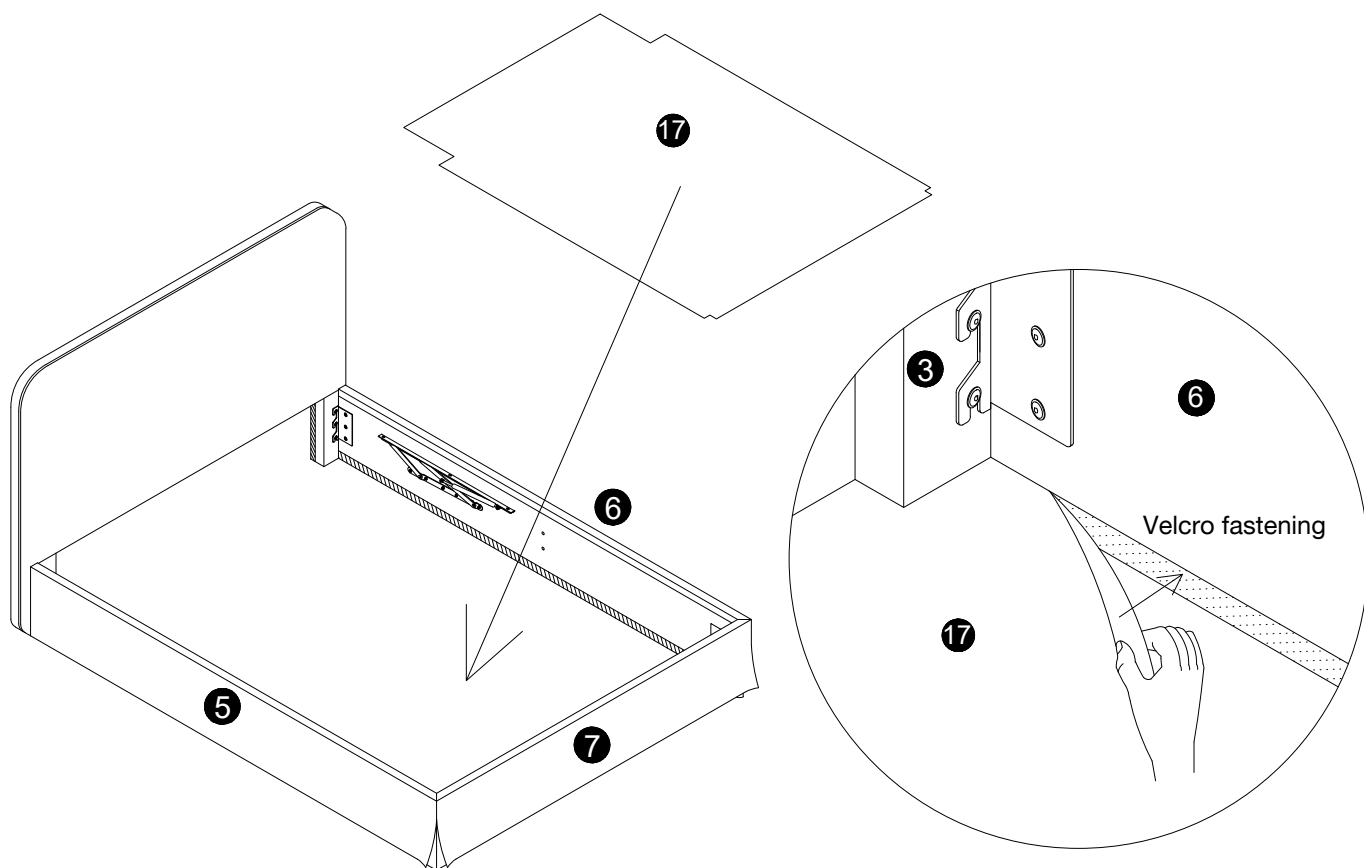


10

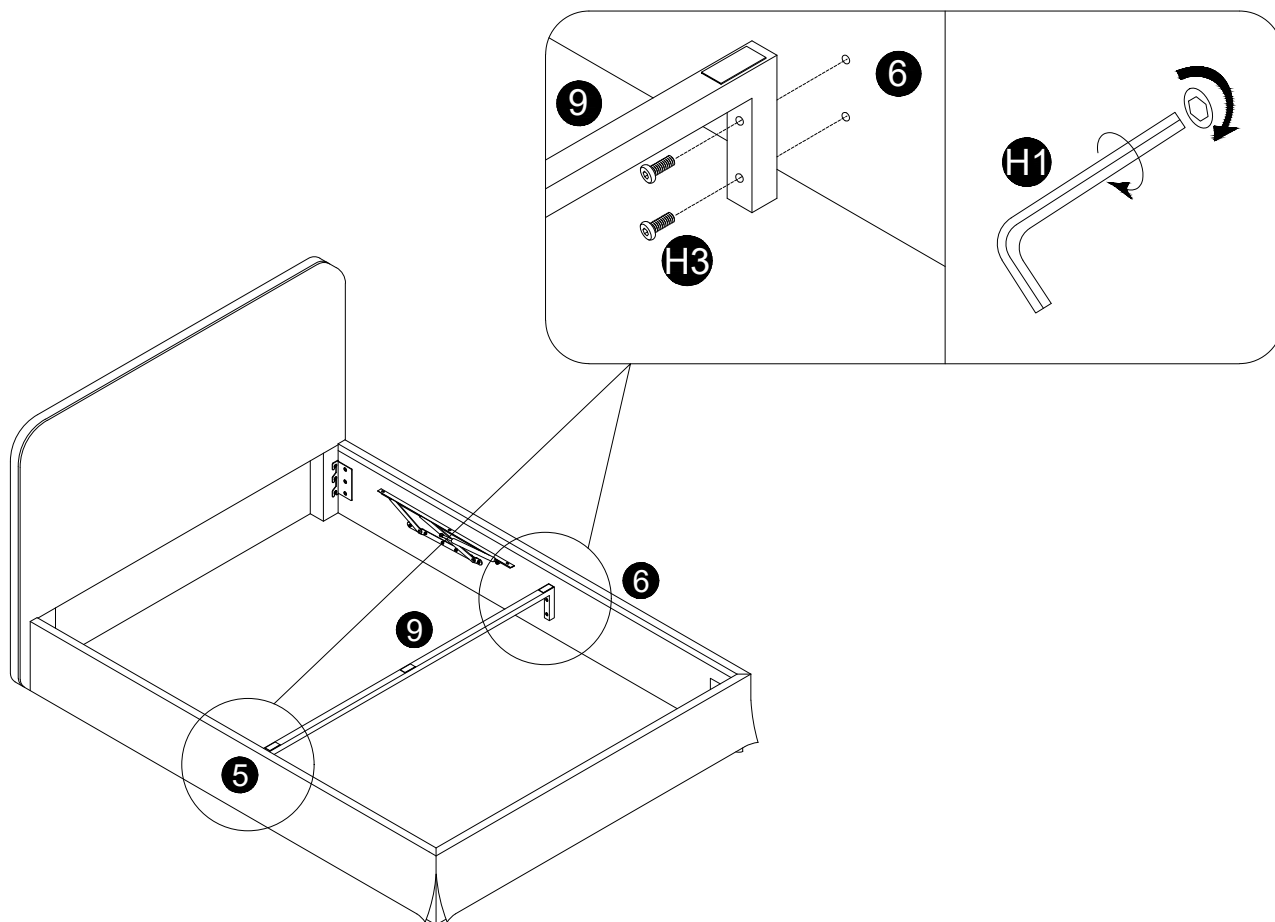


11

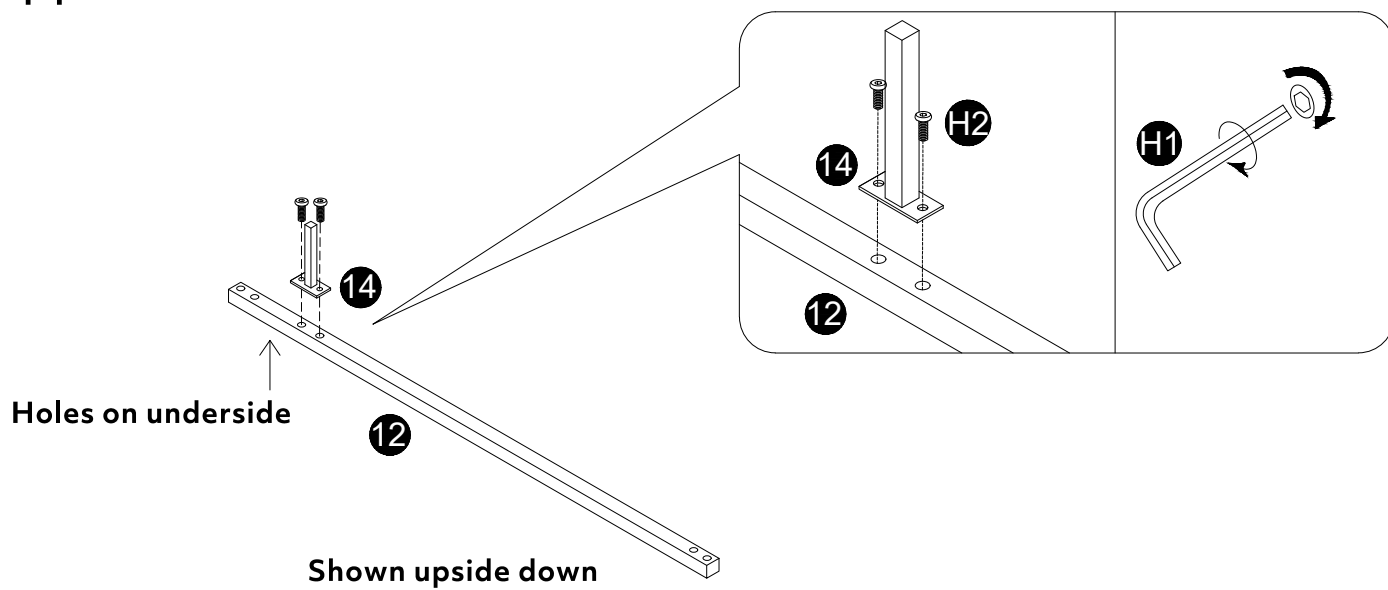


12

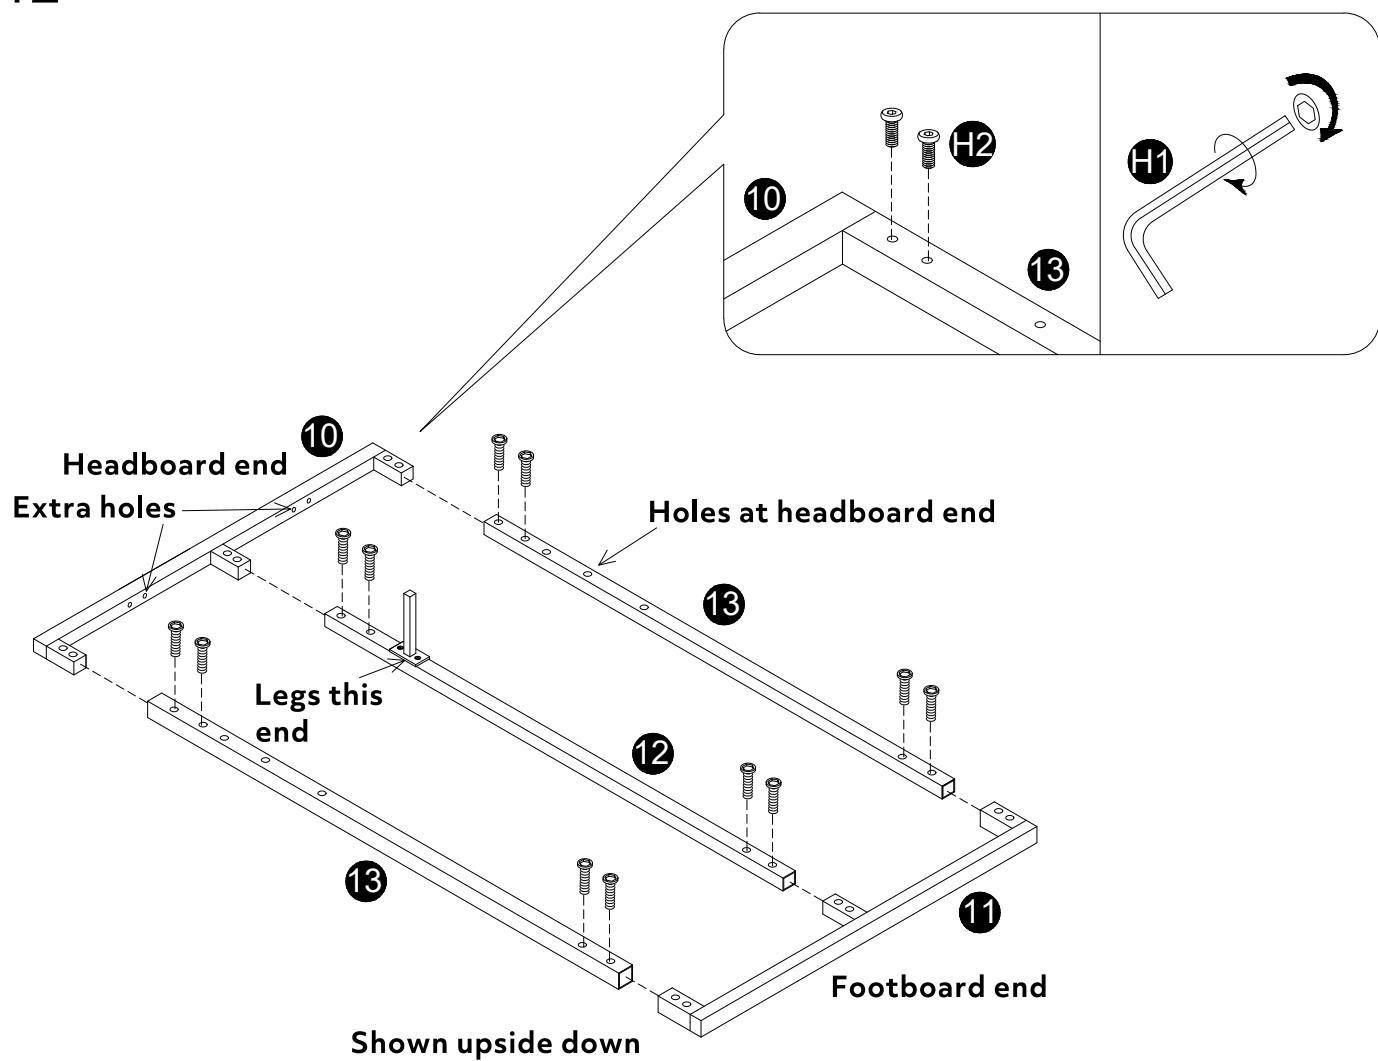


13

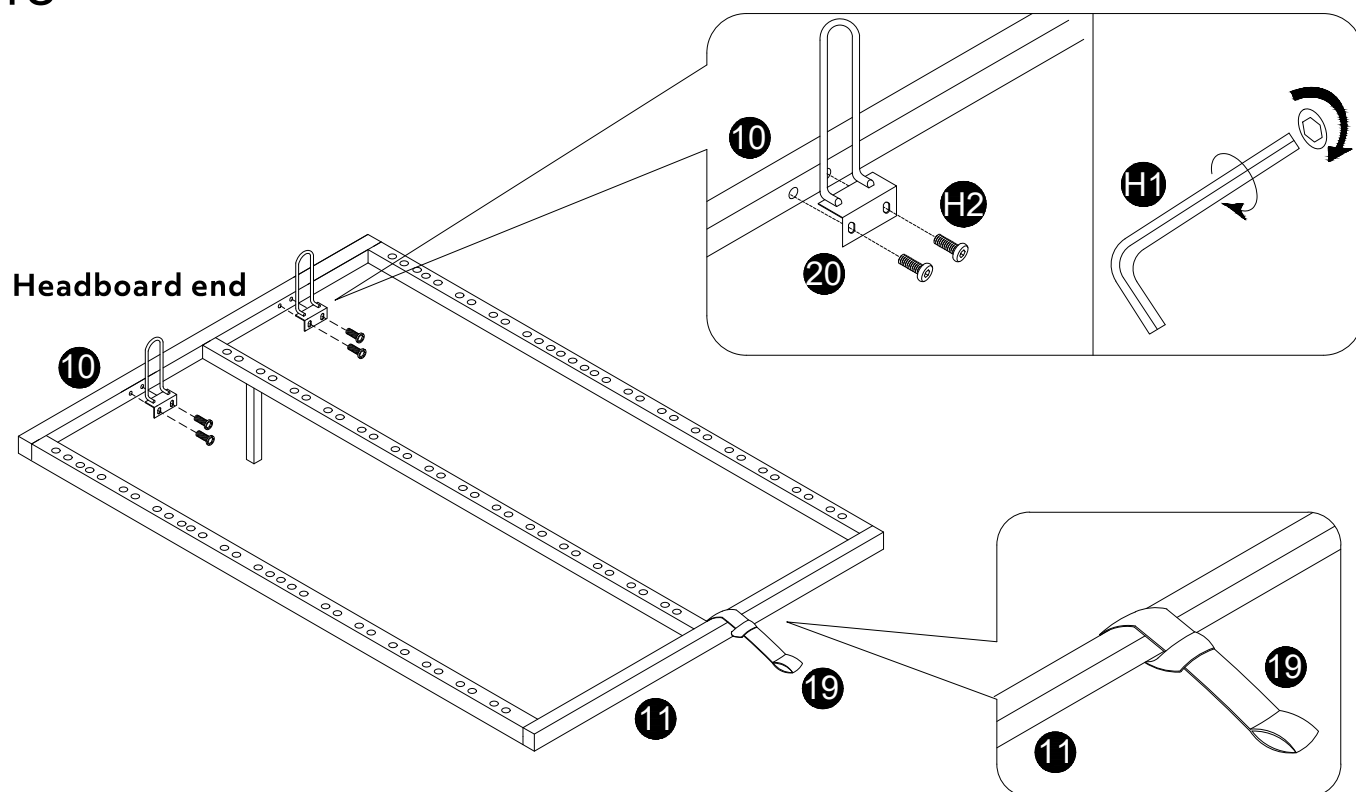



14

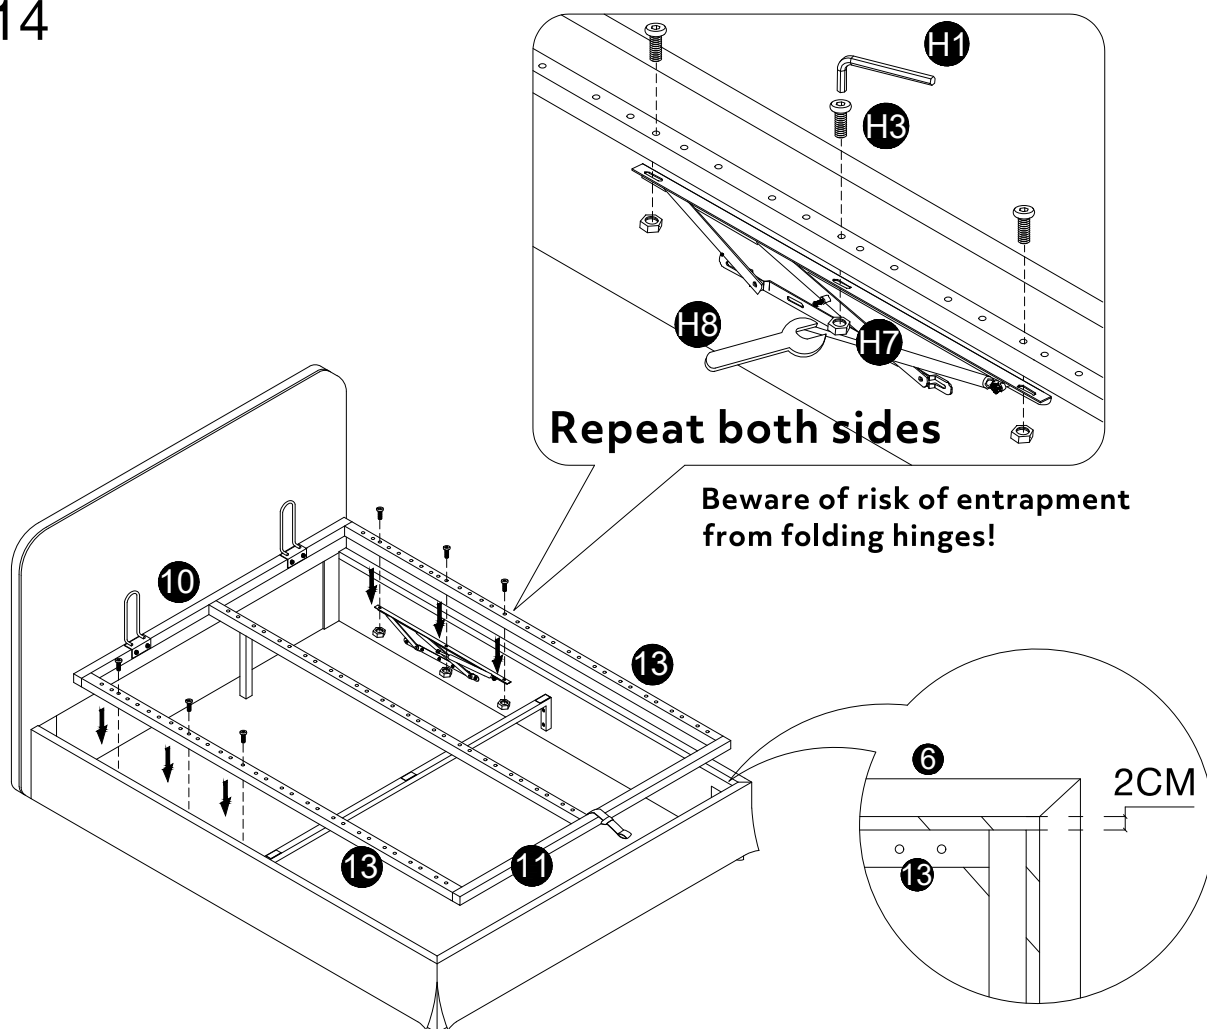

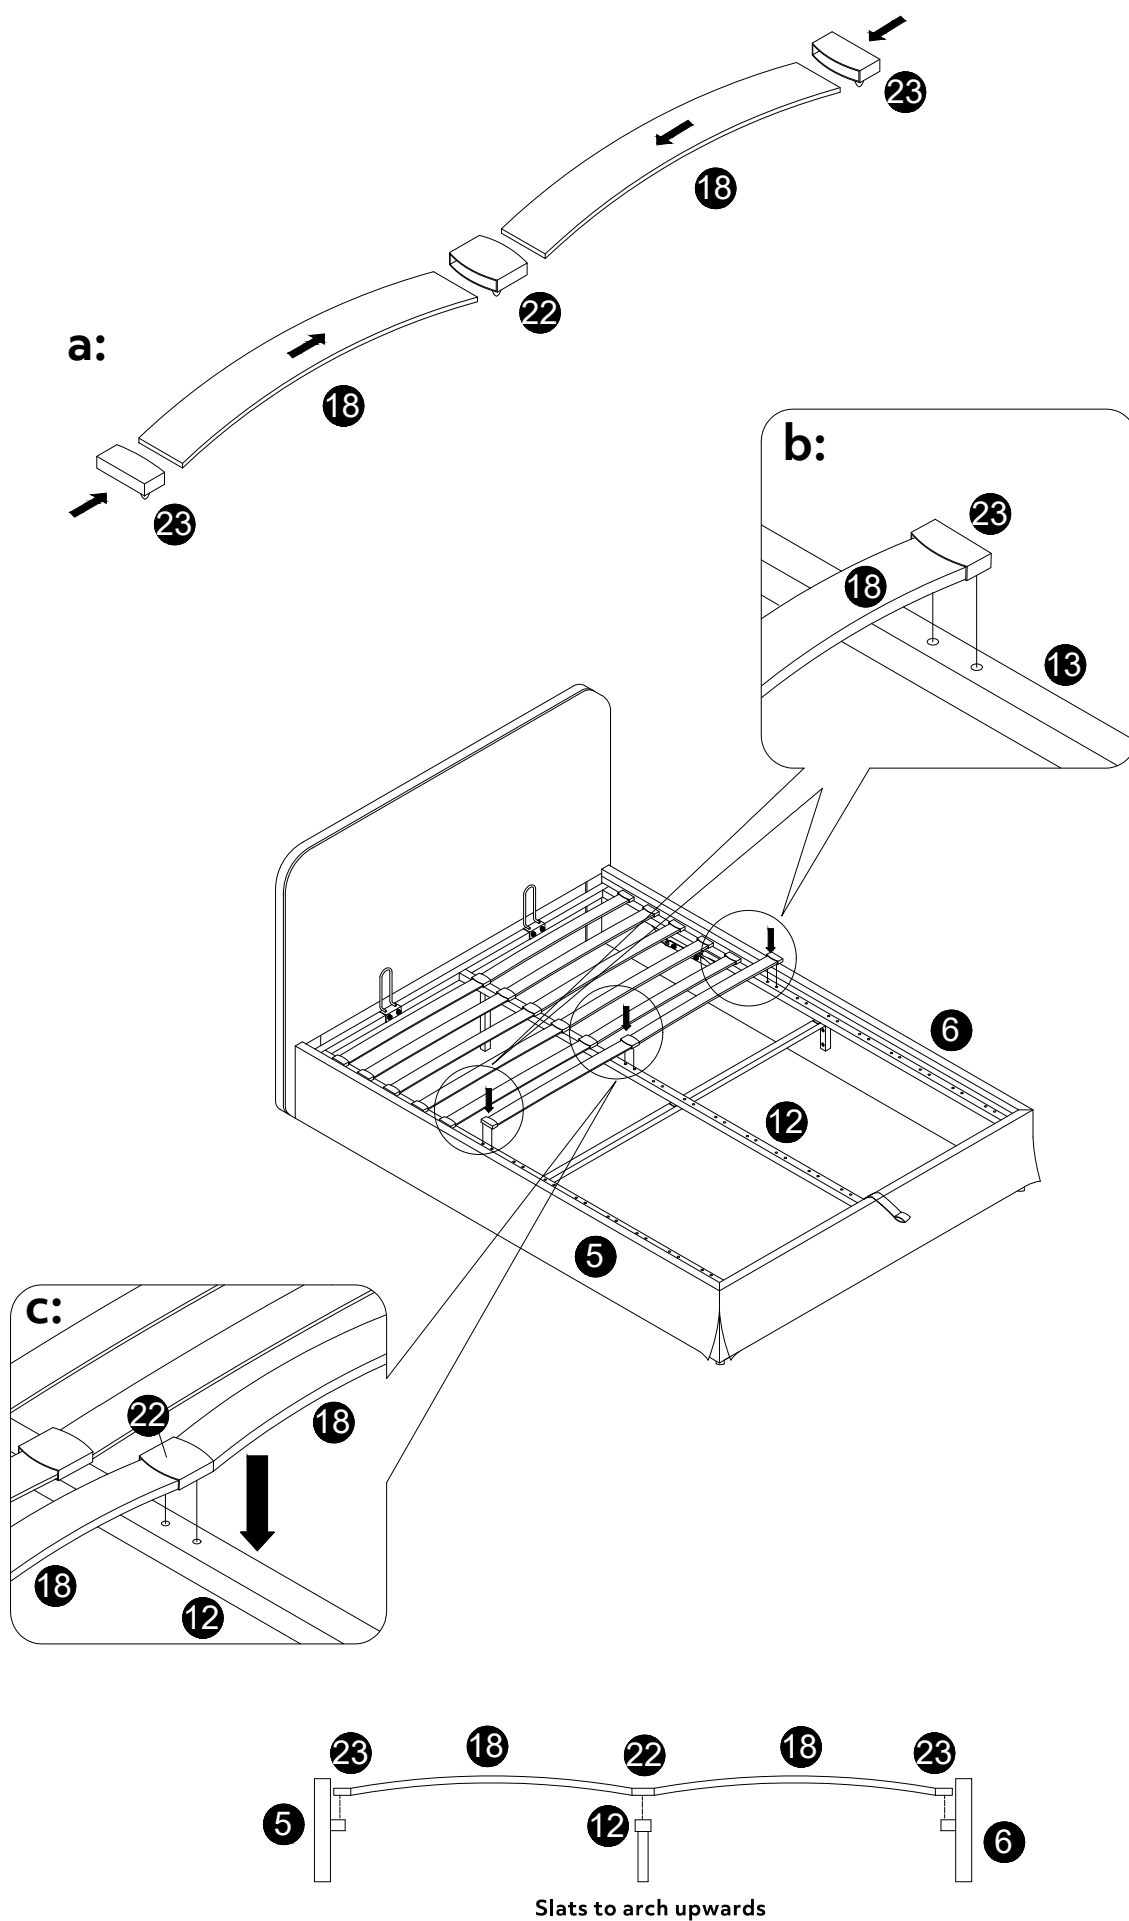



16

**Warning: Two people required.
Frame to be fully supported at all times!**

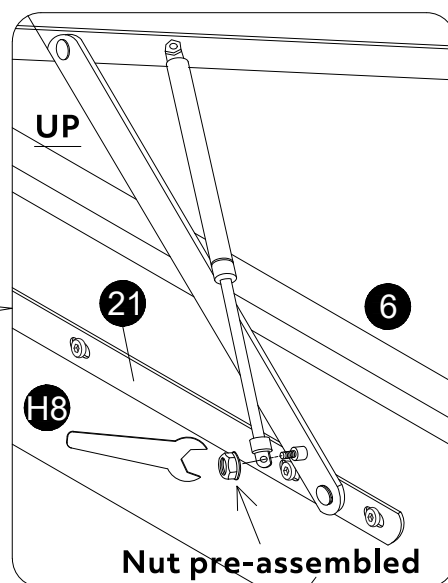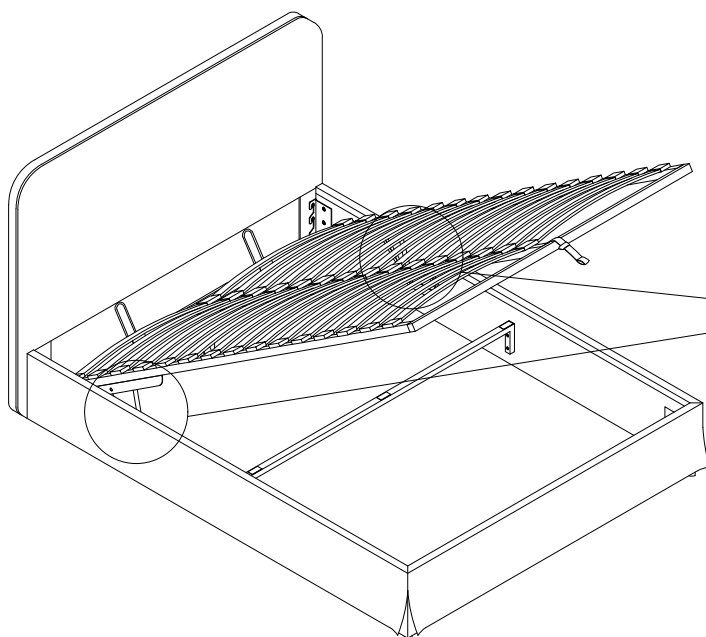

Important: Before proceeding, check and ensure all screws and fixings are fully tightened.

17

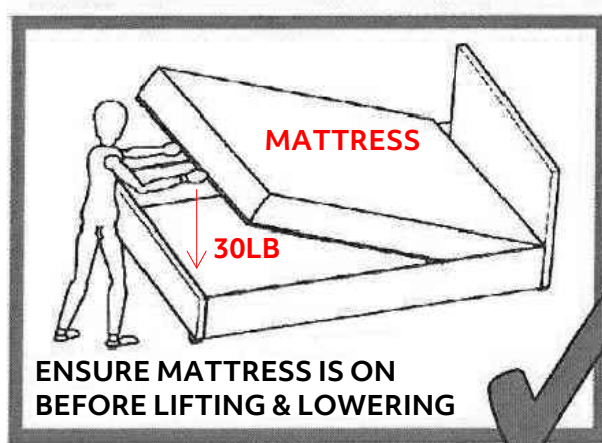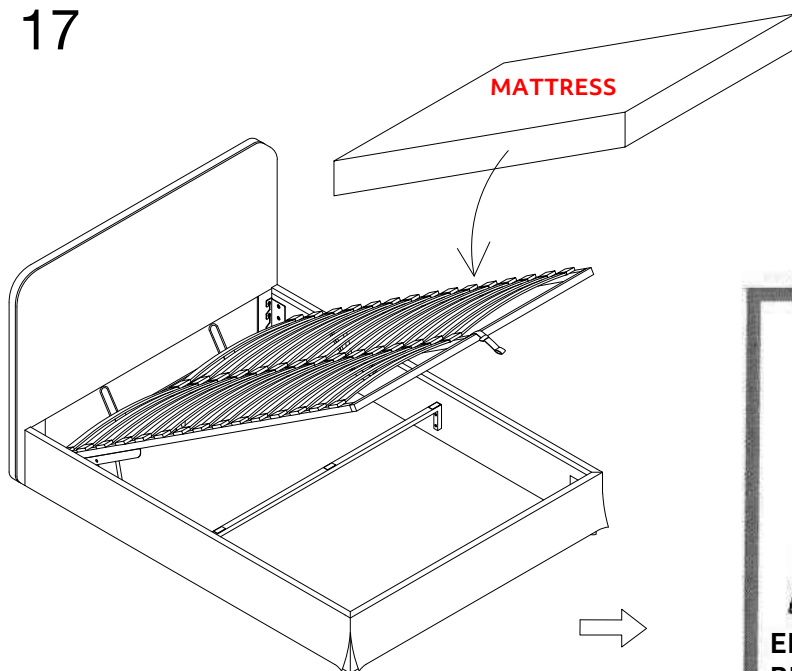

Place the mattress on frame & Carefully lower the frame down.
Keep objects/body part & children away from moving parts.

Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.