


ASSEMBLING INSTRUCTION

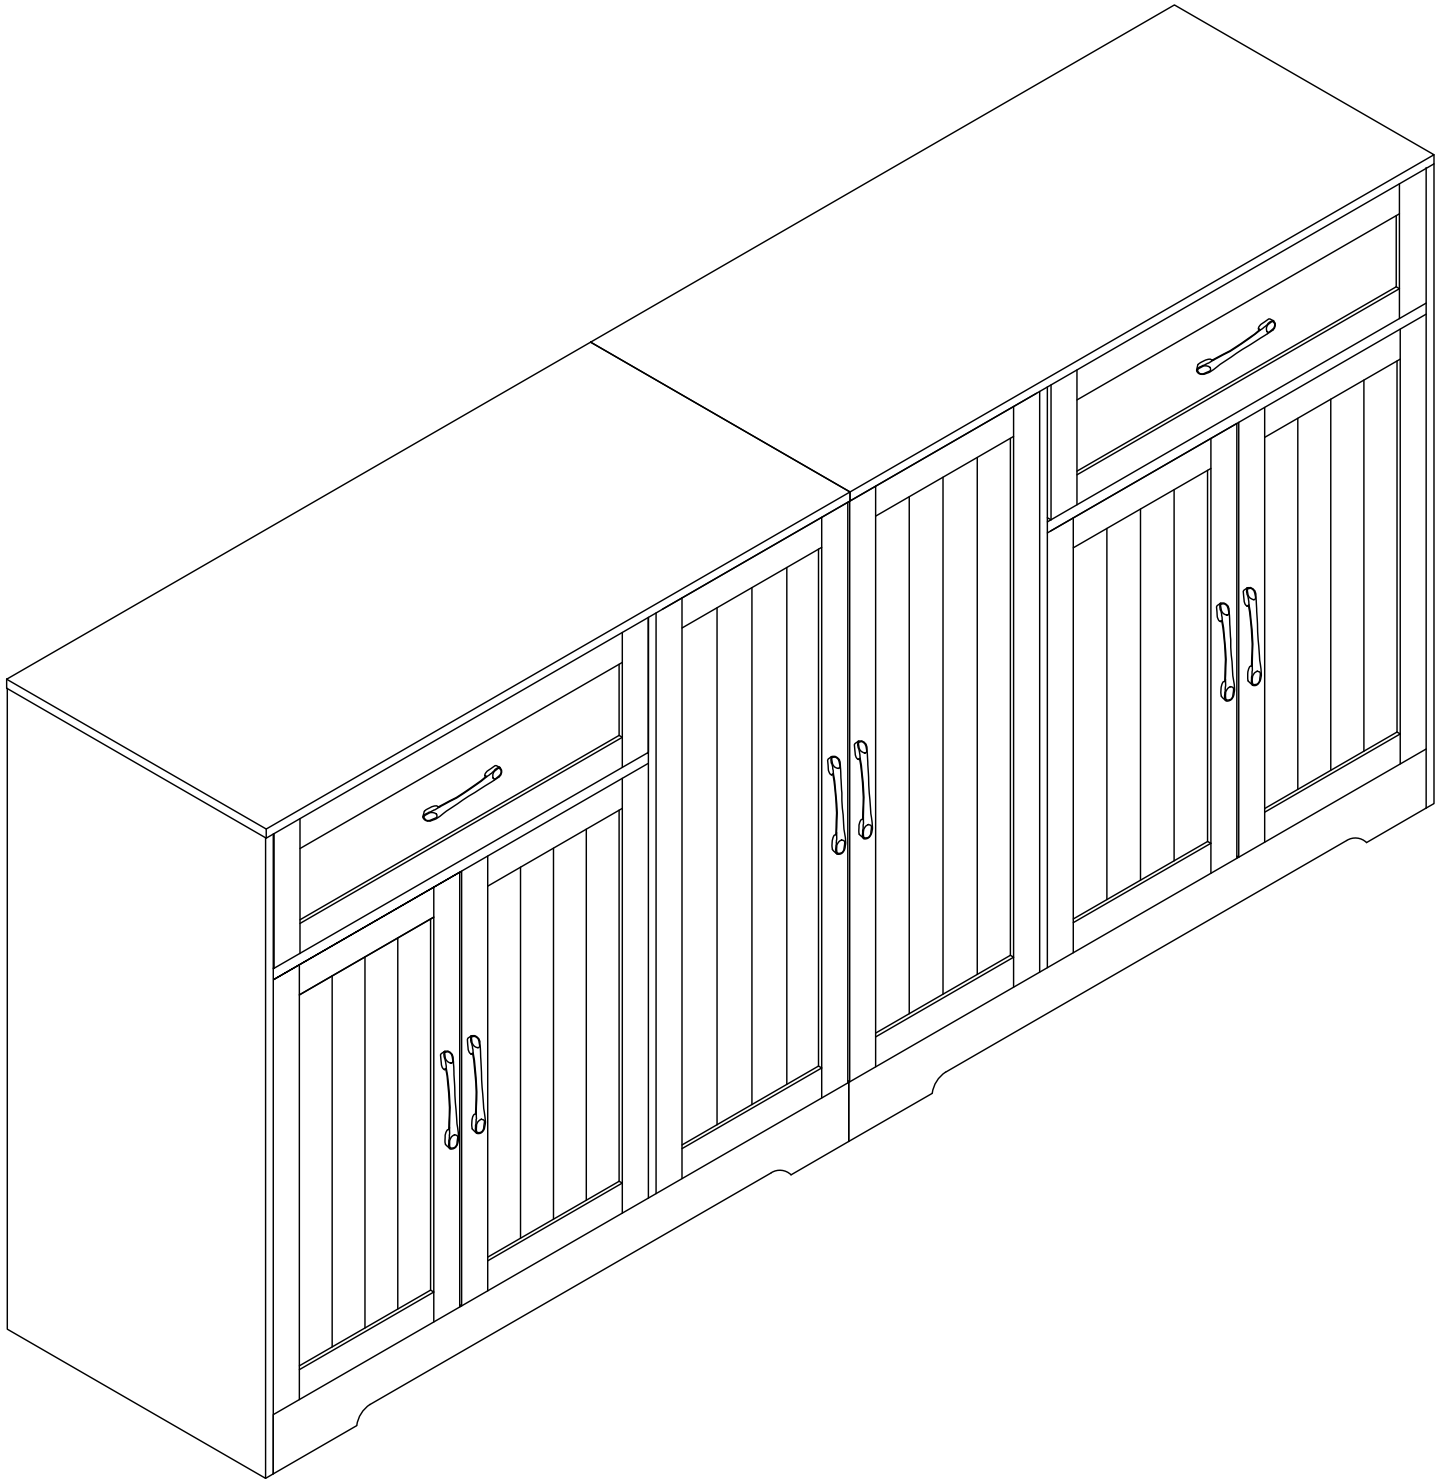

Warm Tips:

If you experience any issues with damaged or missing parts, or notice a quality defect, we kindly ask you to share the part number along with photos of the issue. Once we have reviewed and confirmed the details, we will provide appropriate solutions, including arranging a replacement. We sincerely appreciate your understanding and patience! This instruction booklet contains important safety information. please read and keep for future reference.

TIPS BEFORE YOU START


1. Before assembling your furniture, please check that all parts are present and laid out.
2. Before initiating each assembly step, please confirm required parts are identified.
3. Please ensure adequate space and assistance for safe assembly of large items.
4. We recommend assembling the product near its intended placement area to avoid relocation after assembly.
5. We recommend to place components on soft surfaces (e.g., carpet, blanket) during assembly to prevent damage of the item.
6. Please do not overtighten any fittings, as this may damage the product. We recommend hand-tightening rather than using power tools.
7. Please position fully assembled product on flat, stable surfaces with even support.
8. Please do not stand on or use this product as a step ladder.
9. Product is designed exclusively for indoor household use in non-industrial environments.
10. Please lift with proper body mechanics to prevent injury and product damage.


CARE AND MAINTENANCE OF YOUR FURNITURE


- ☑ Periodically inspect and retighten all fittings as needed to maintain structural integrity.
- ☑ Periodically inspect all screws and retighten if necessary to maintain product stability.
- ☑ For optimal glass cleaning, apply a dedicated glass cleaner using a microfiber cloth to prevent streaks.
- ☑ Avoid liquid contact to prevent structural warping and surface delamination; immediately wipe any spills.
- ☑ Avoid placing hot objects (e.g., hot beverages) directly onto surfaces to prevent thermal shock and permanent discoloration.
- ☑ Lift the unit with multiple personnel using proper technique; dragging or pushing risks structural failure and injury.

ASSEMBLY REQUIREMENTS

- ☑ Equipment: phillips head screwdriver.
- ☑ 2 x adults required.
- ☑ 2m x 2m assembly space required.
- ☑ 1.5 hour assembly time approx.

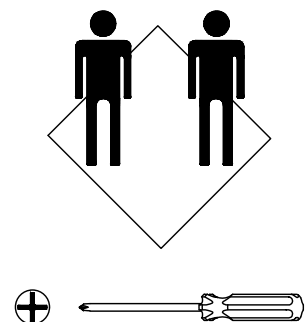

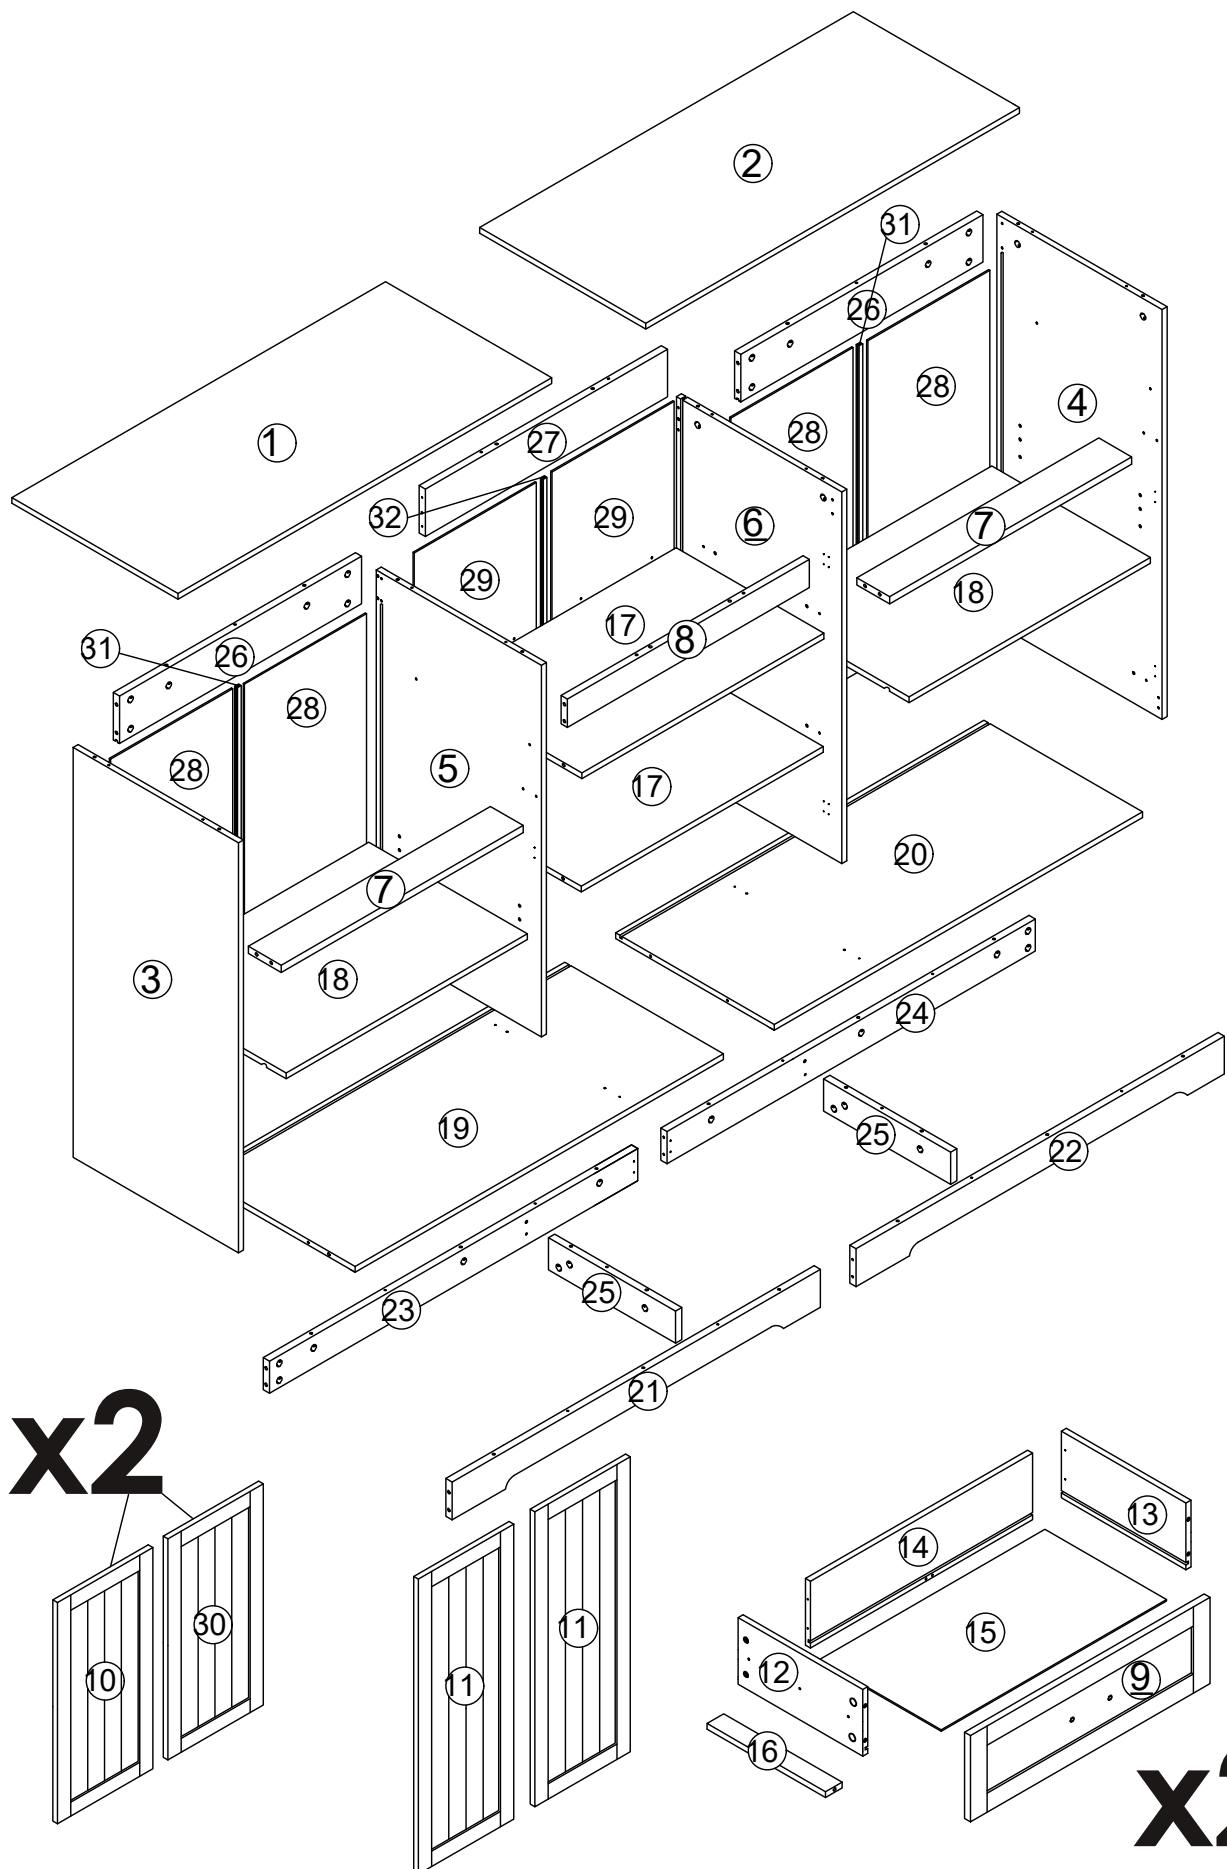



M6*35mm

A

X84



Ø15*10mm

B

X84



Ø6*30mm

C


X52



M3*12mm

D

X56



E


X8



M3*14mm


F

X28

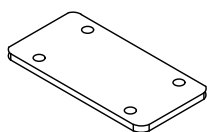

G

X6

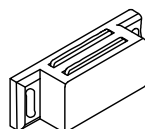


H

X2




I

X12



J


X8



M4*16mm


K

X12

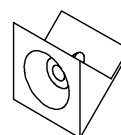

L

X24



M4*35mm

M

X20



M3.5*12mm

N

X24



M4*12mm

O


X24



M3*10mm

P

X8

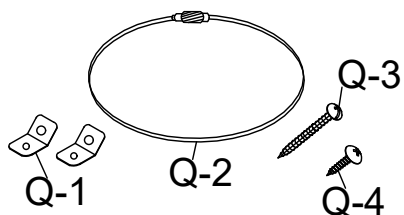

Q


X2



M6*30mm


R

X2

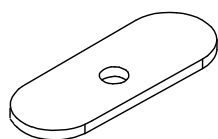

S

X4

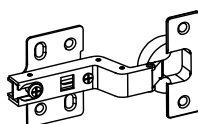

Ø26mm

T


X4



M4*8mm

U


X4

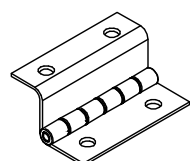

M41*12mm


V

X8




W

X1

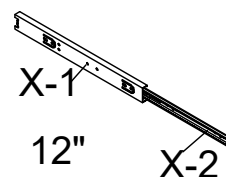
















X
















X4





Y

X2

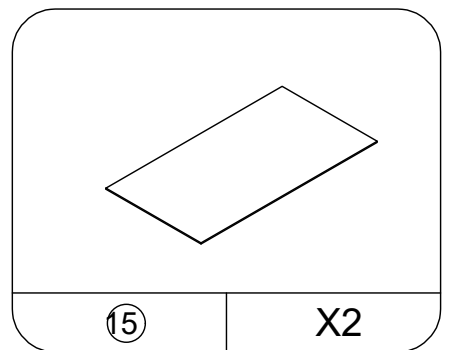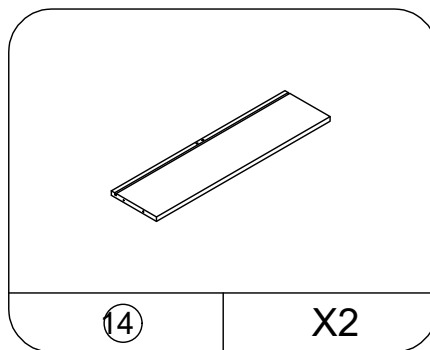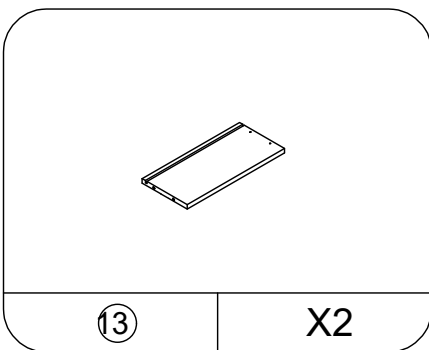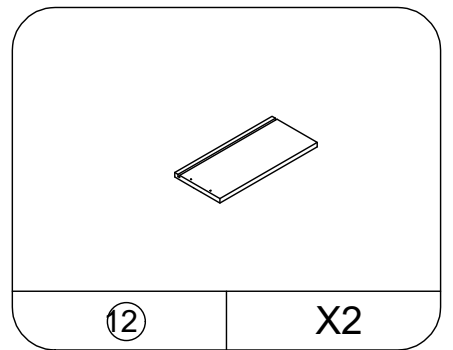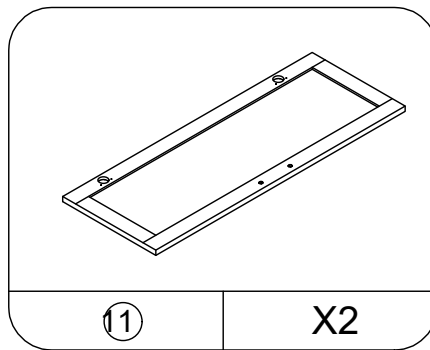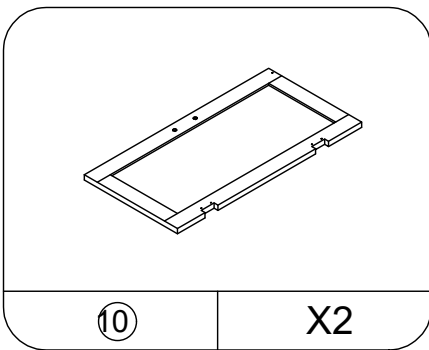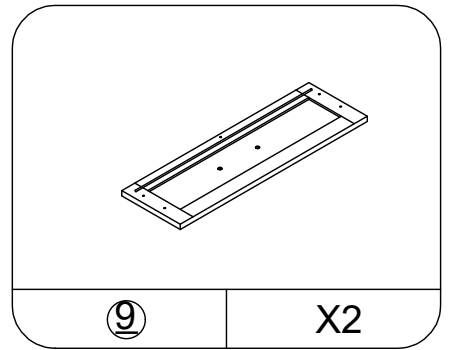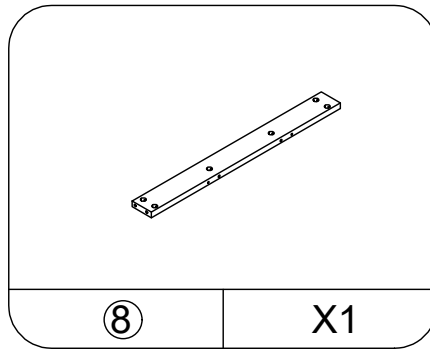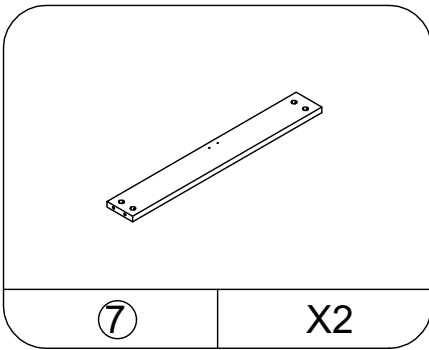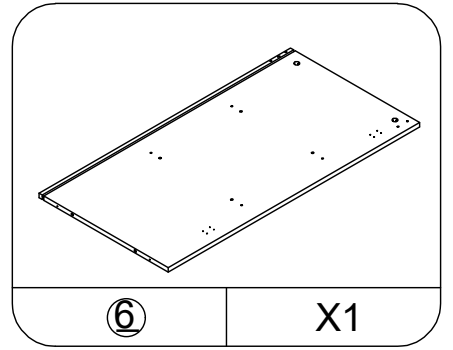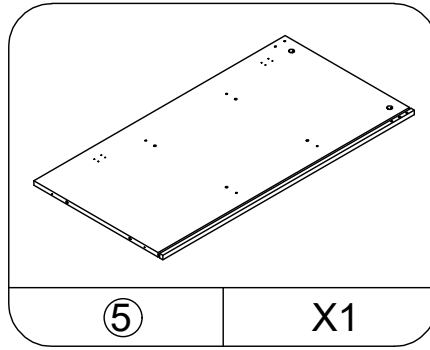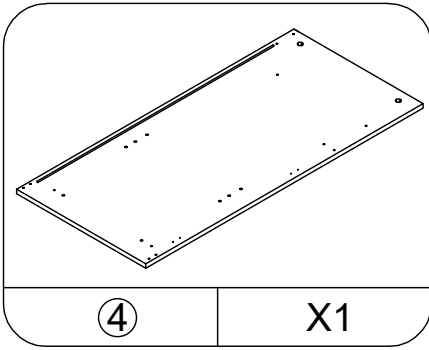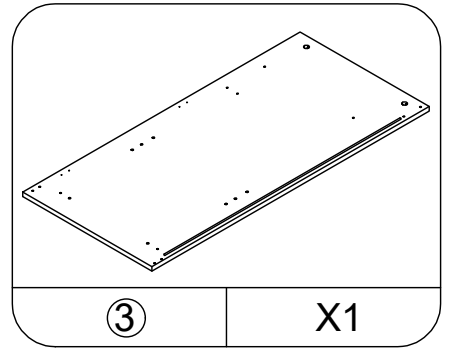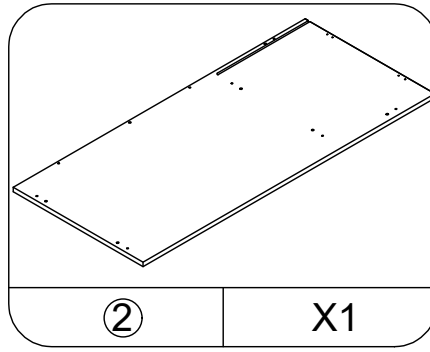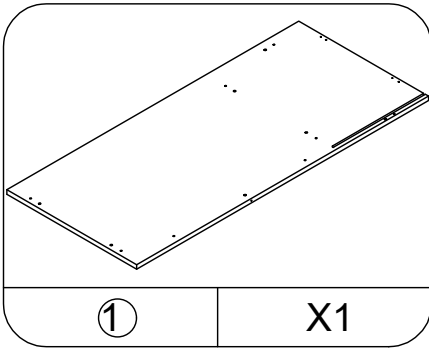

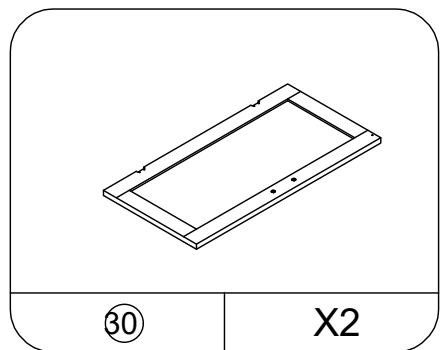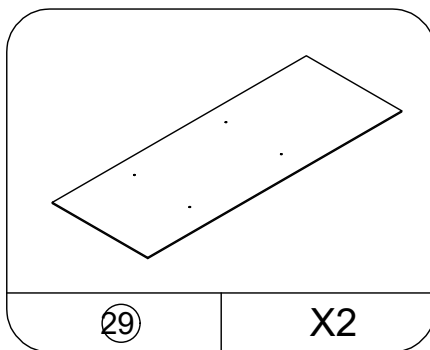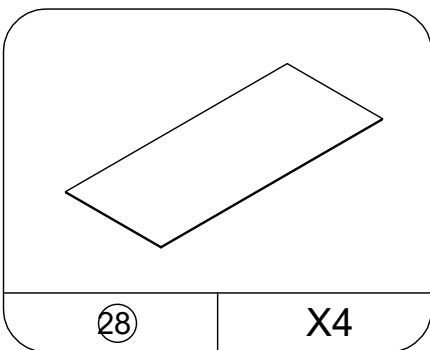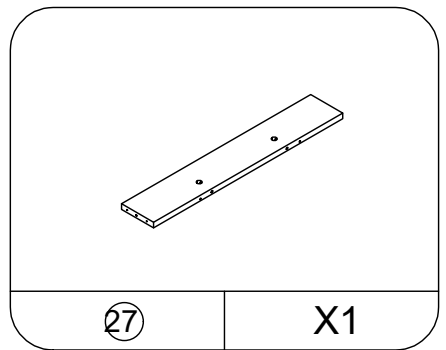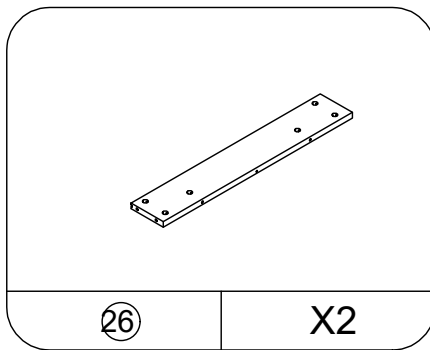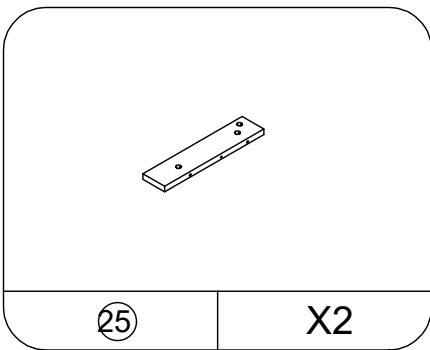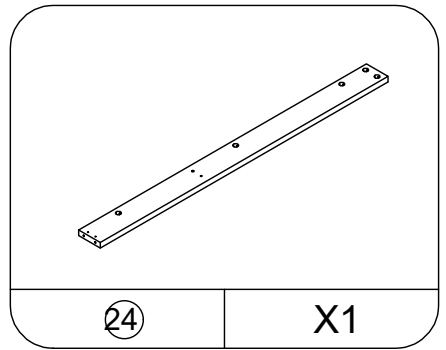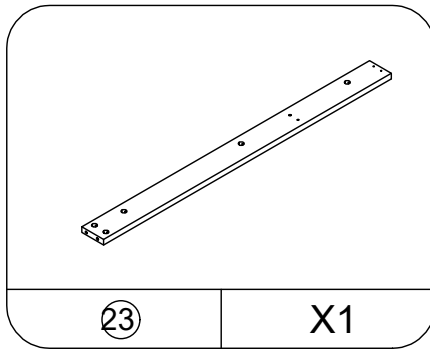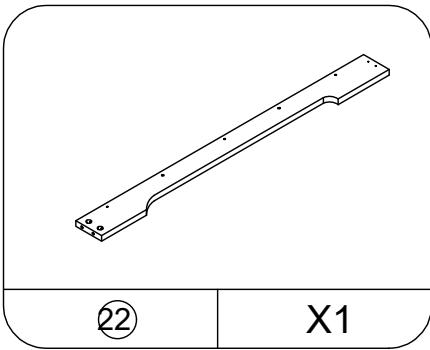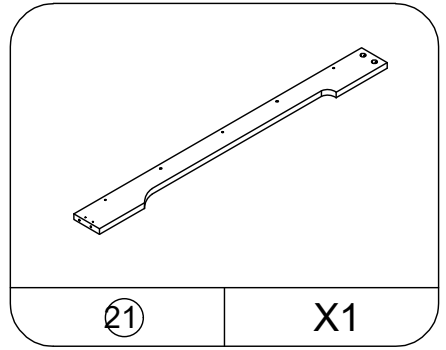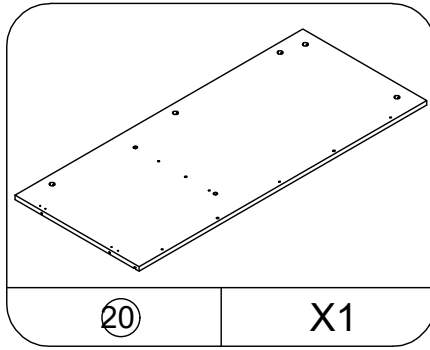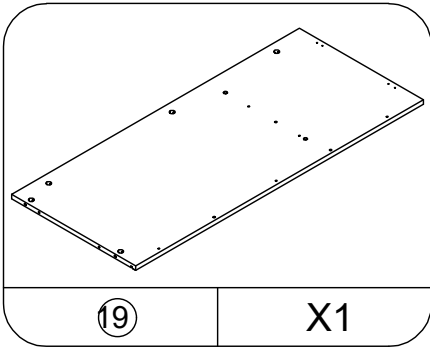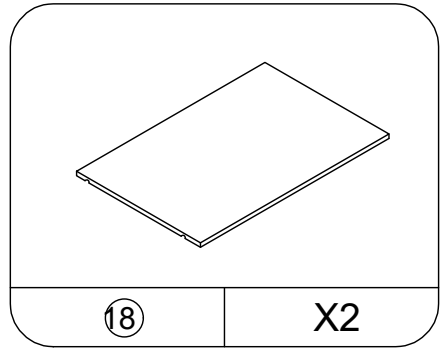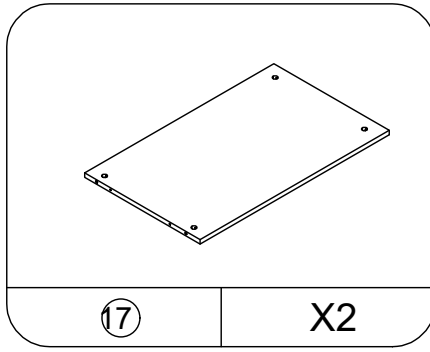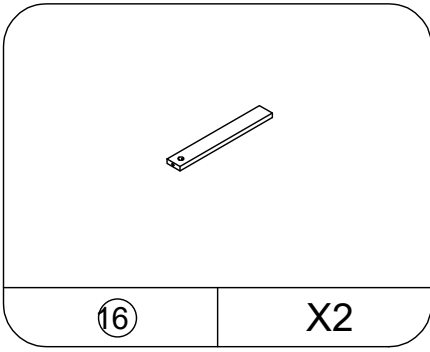


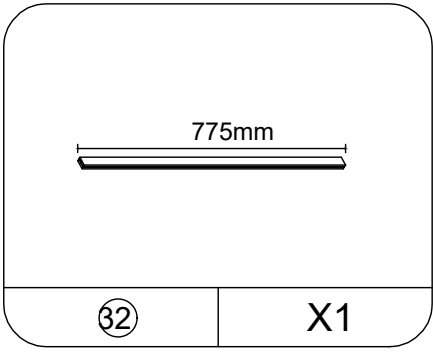
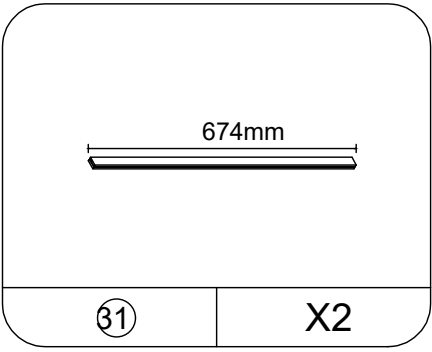


Step:1

X	12"	X4
---	-----	----


To separate slide rail,

- 1) Pull the slide fully open so levers are visible.
- 2) Push DOWN the lever as shown.
- 3) Holding levers in place, pull two sections until separation.

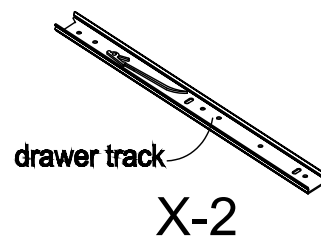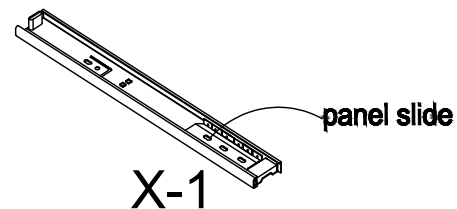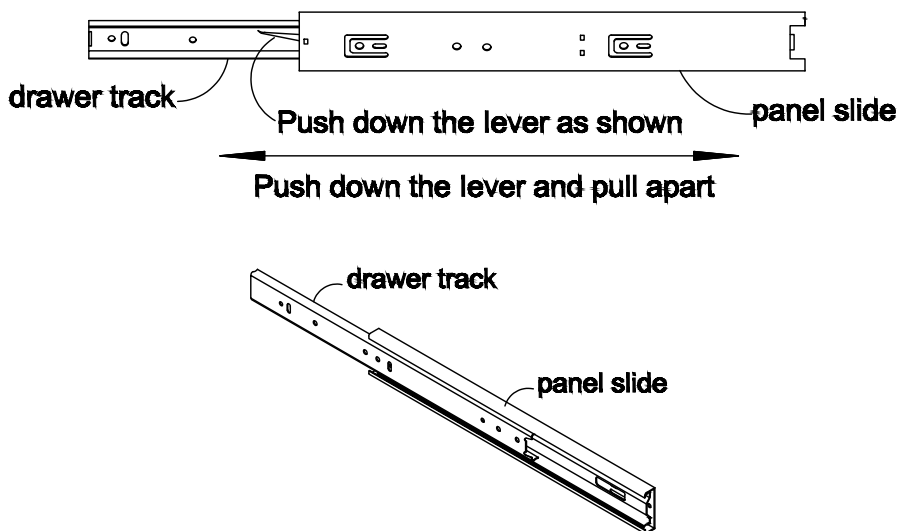



Step:2

A		X10
X-1		X1
D	 M3*12mm	X2

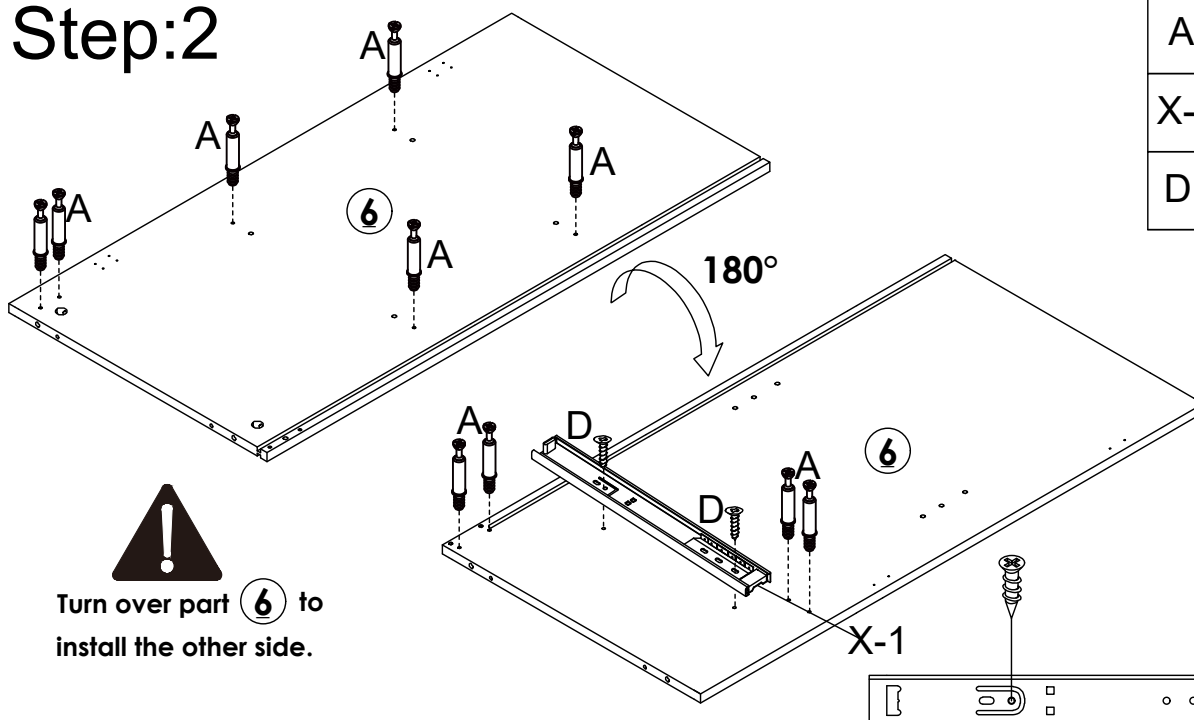



Step:3

A		X10
X-1		X1
D	 M3*12mm	X2

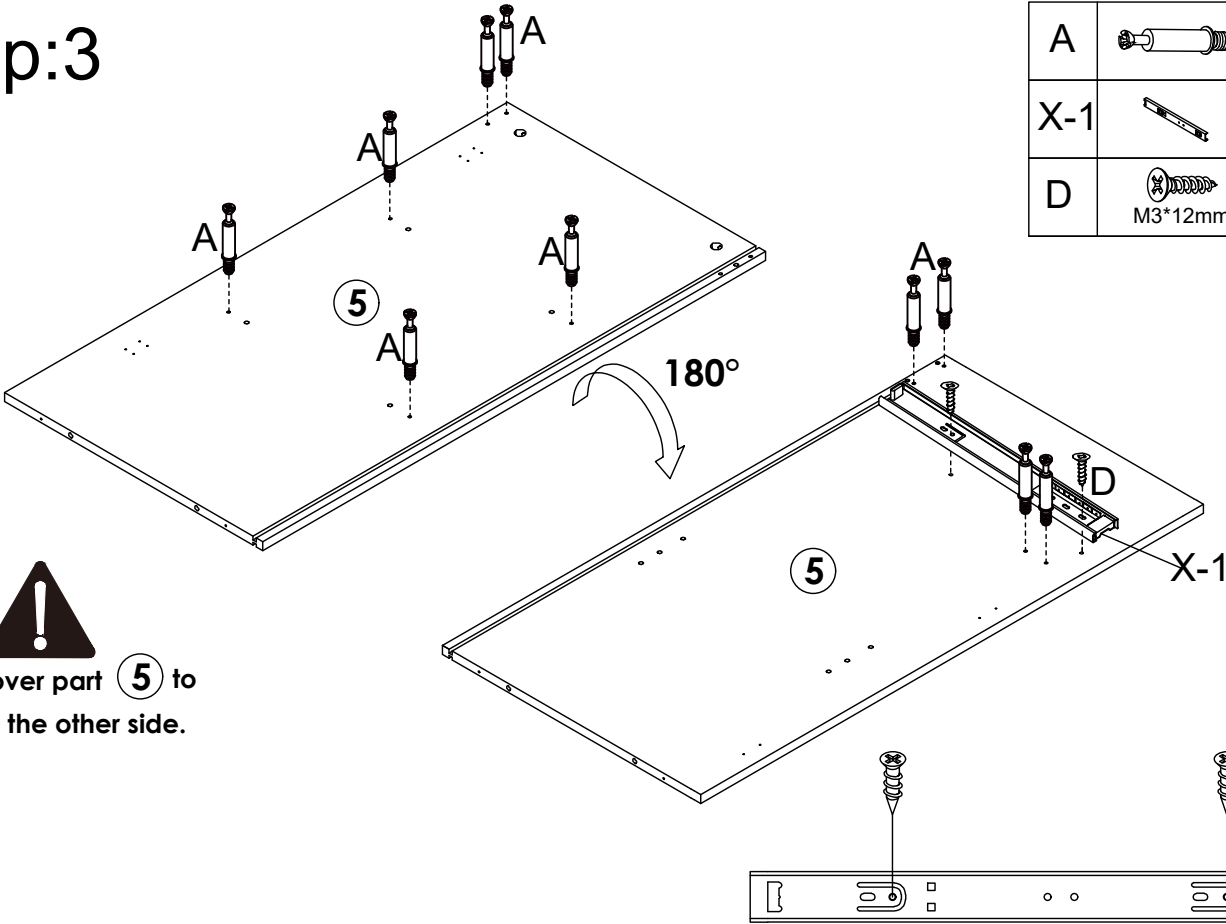


Step:4


B		X6
C		X5
M	 M4*35mm	X2
W		X1

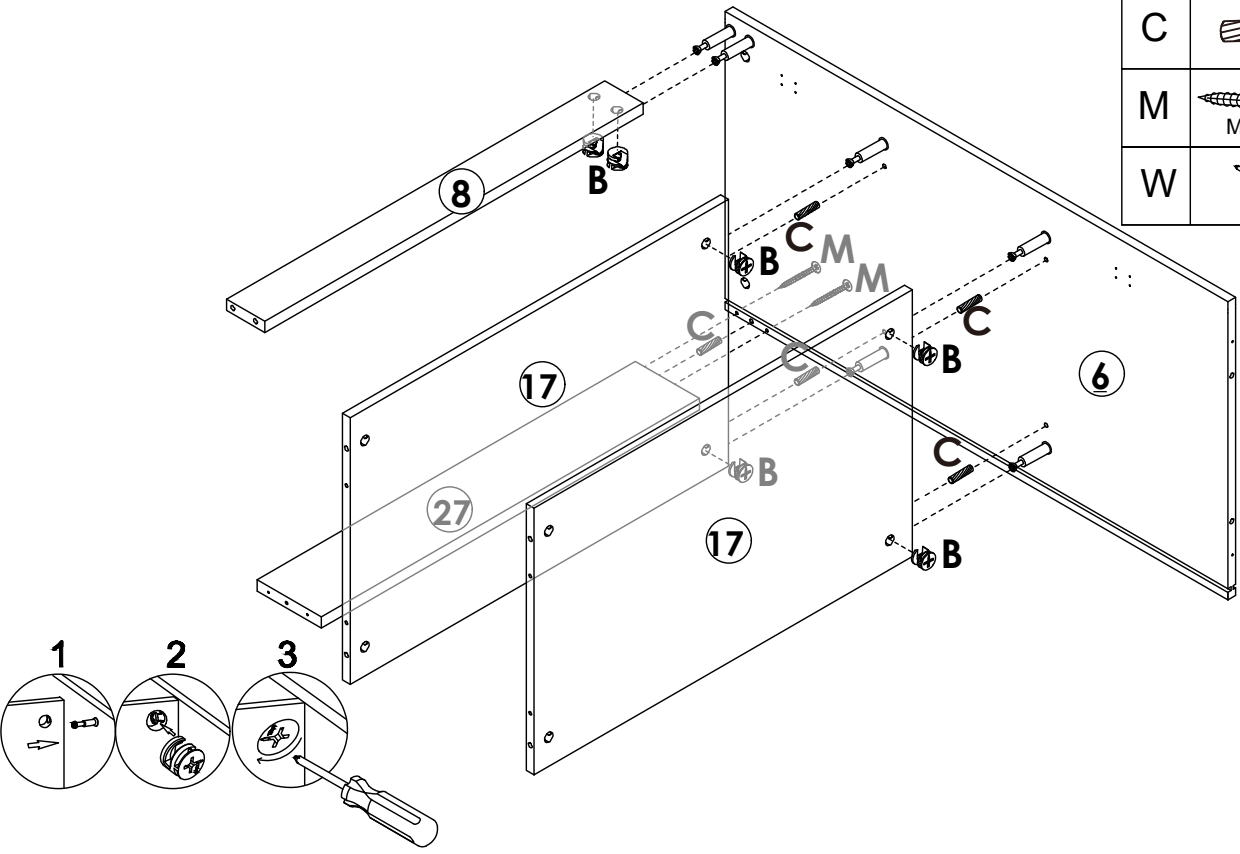


Step:5

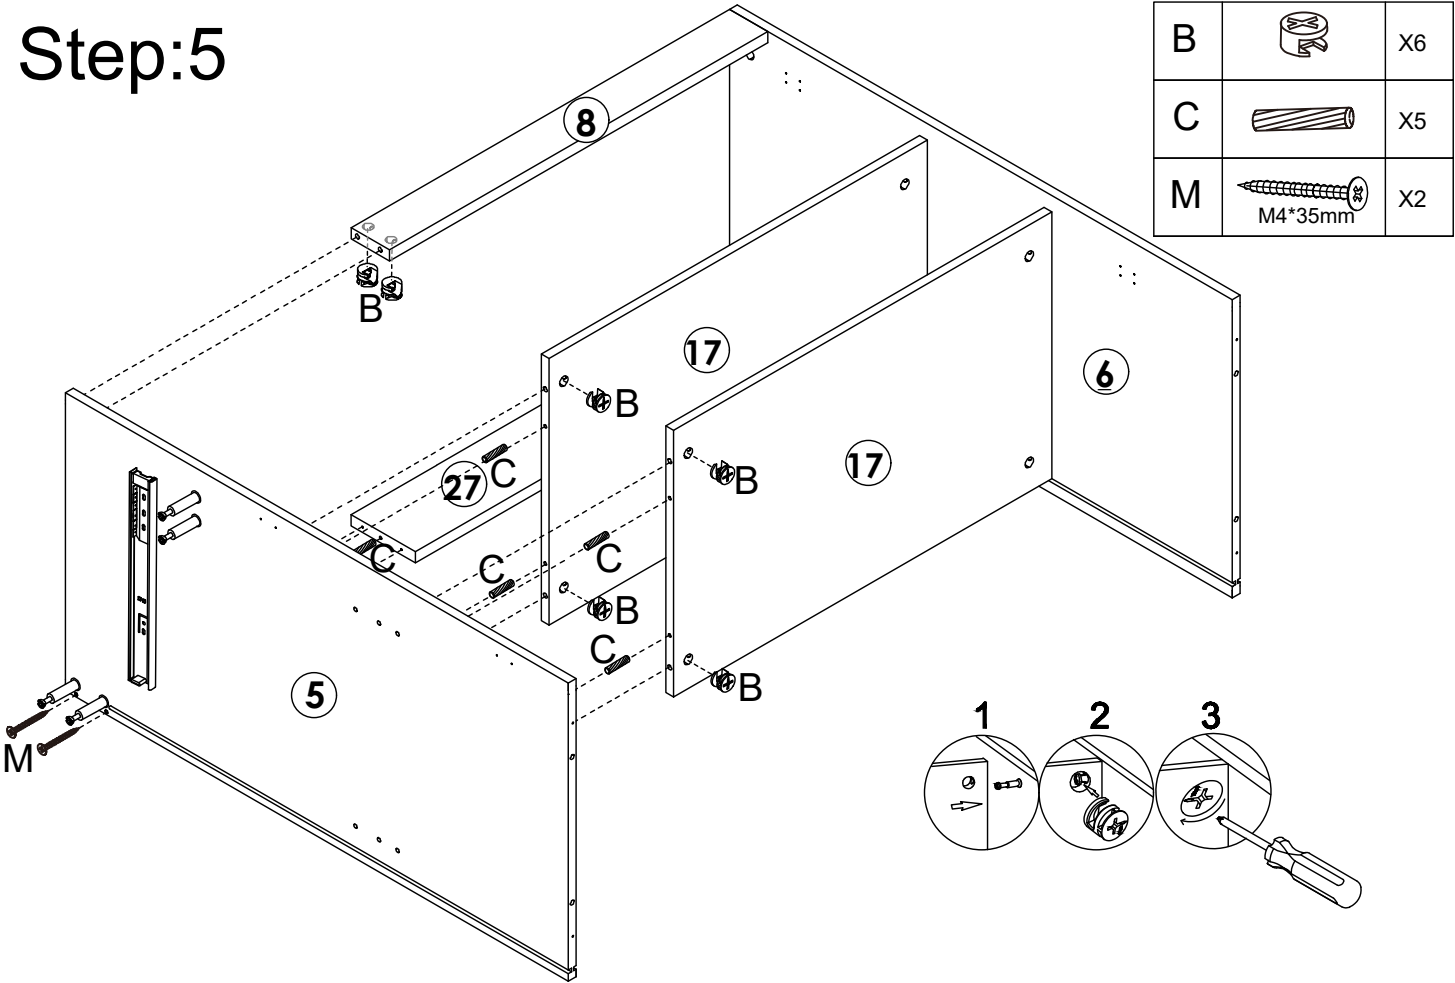


Step:6

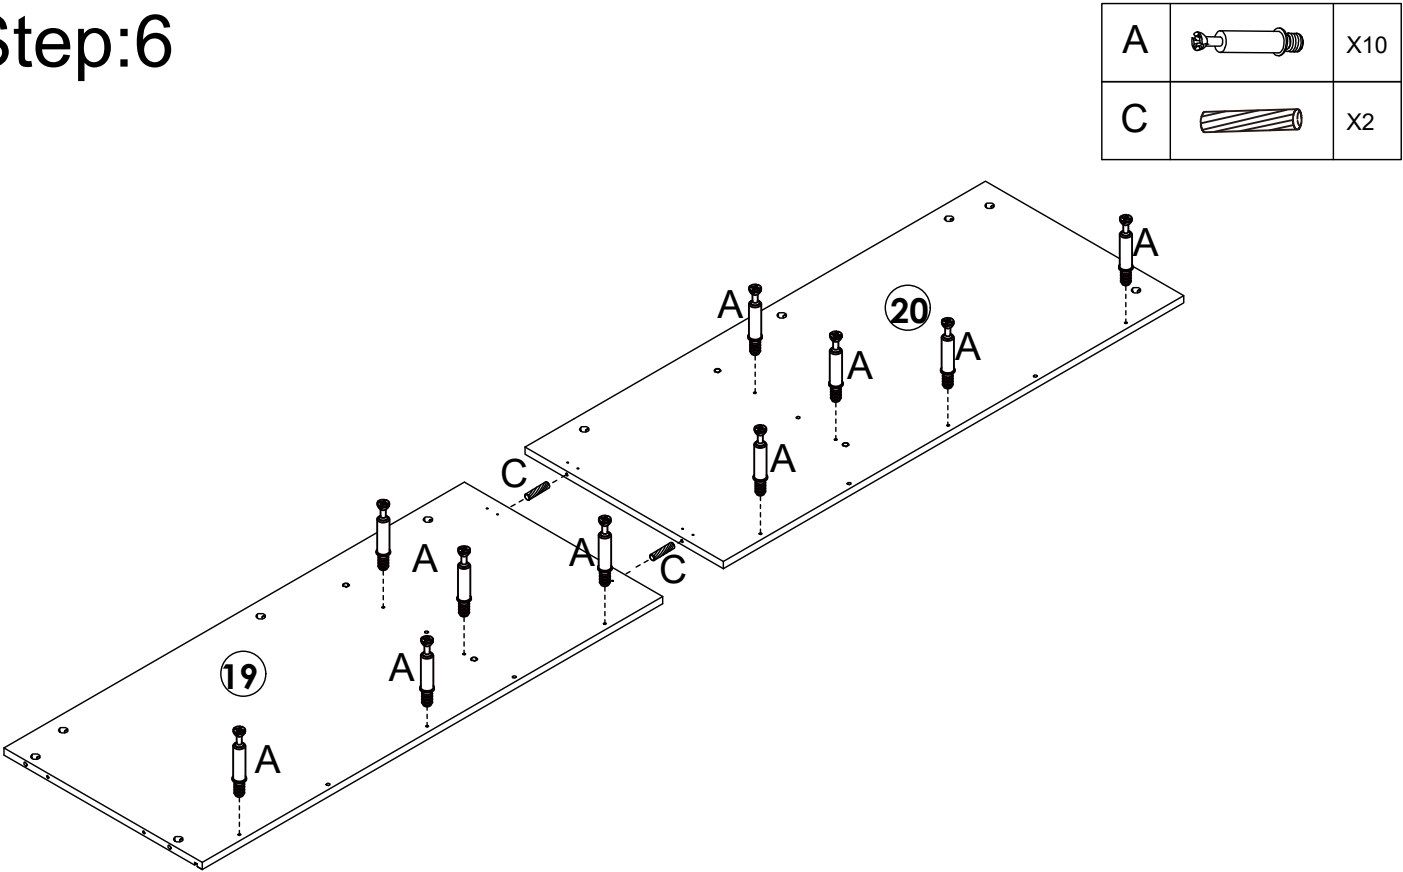

Step:7

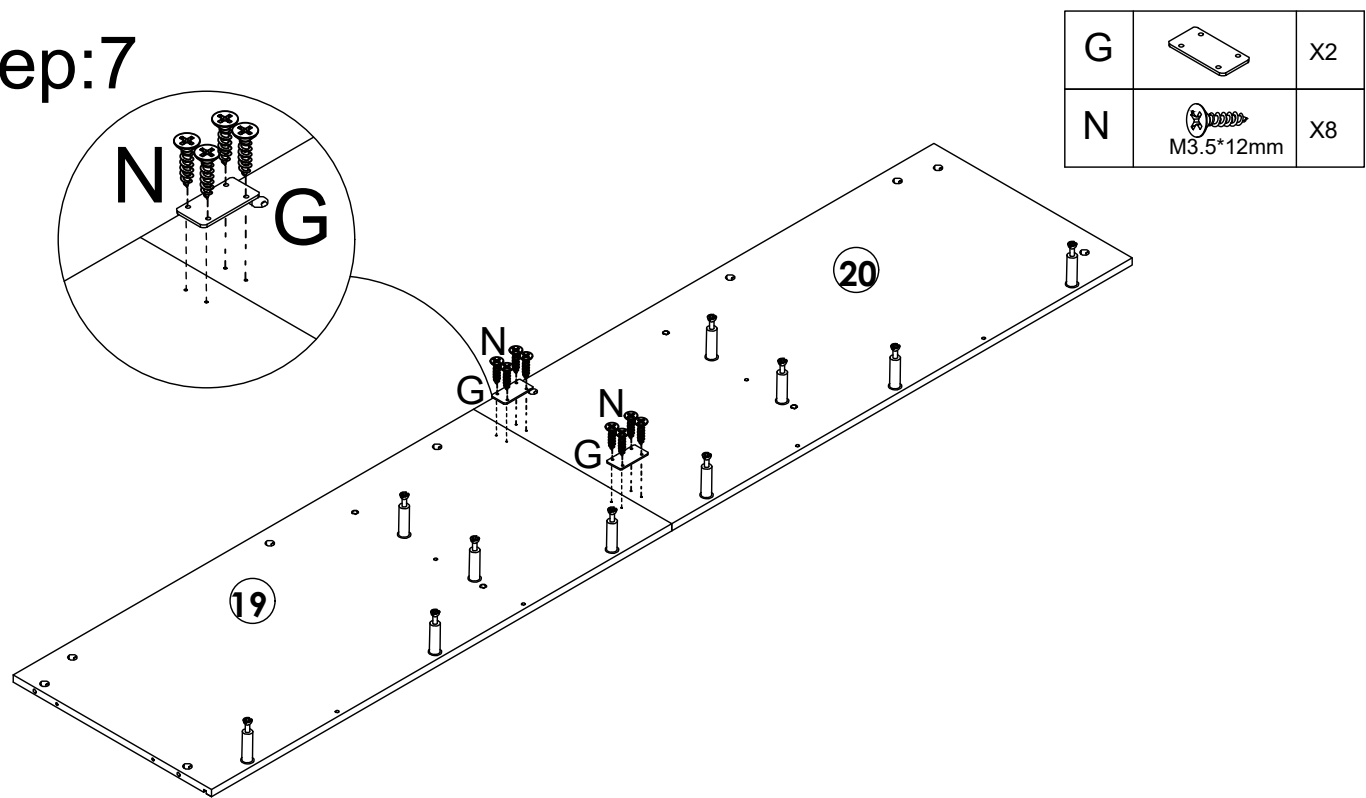


Step:8

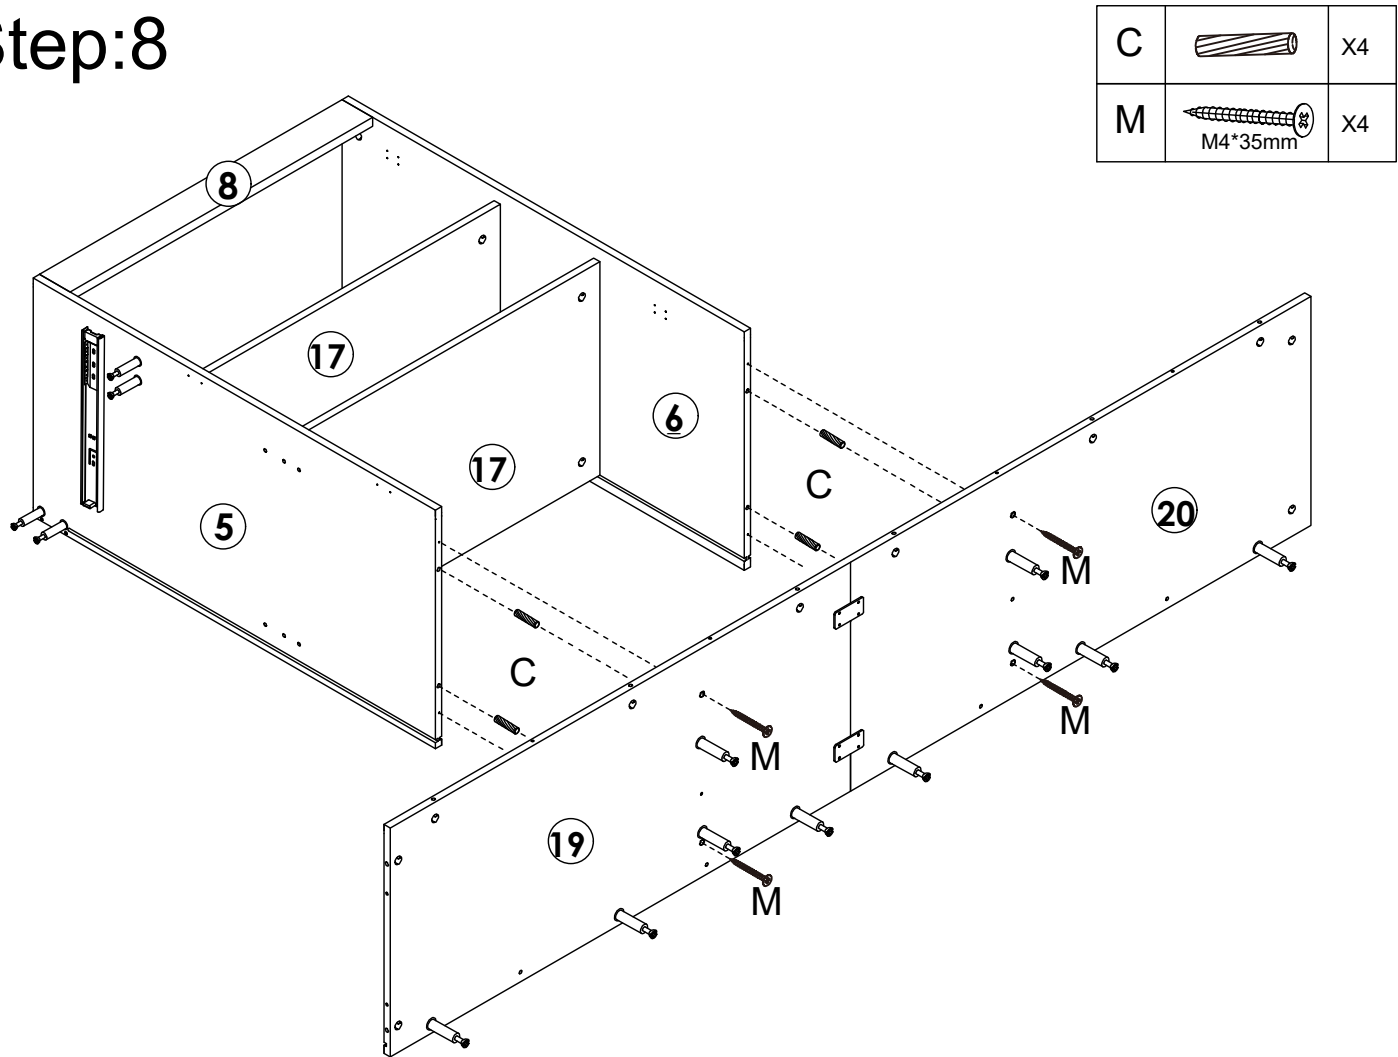




Step:9

C		x2
---	---	----

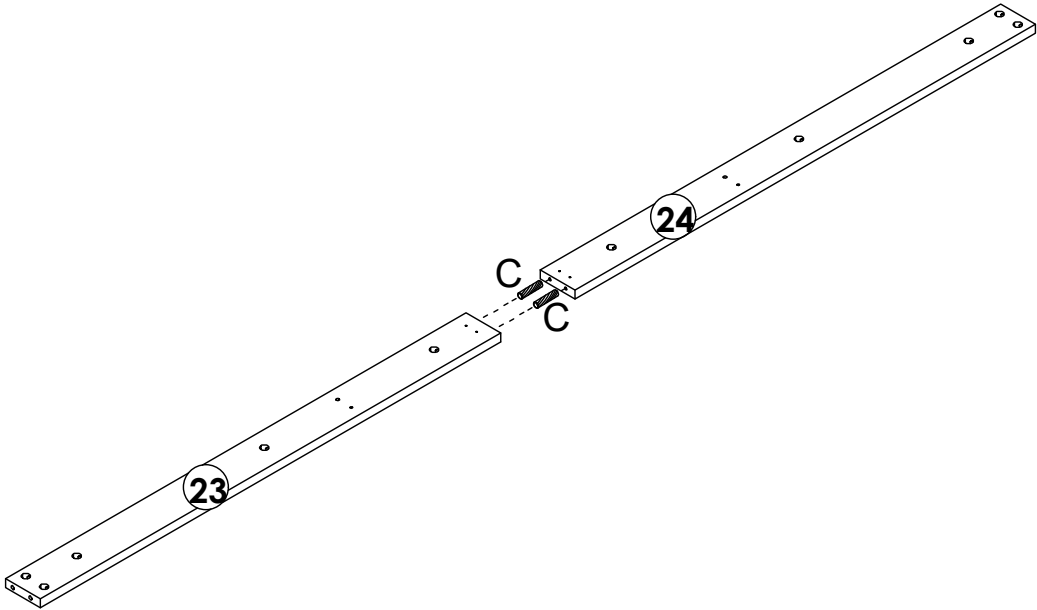


Step:10


A		x2
B		x2
C		x2
G		x1
N	 M3.5*12mm	x4

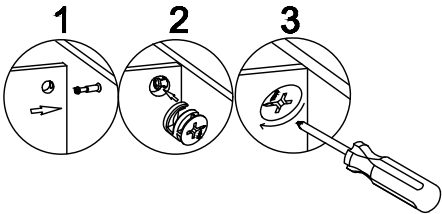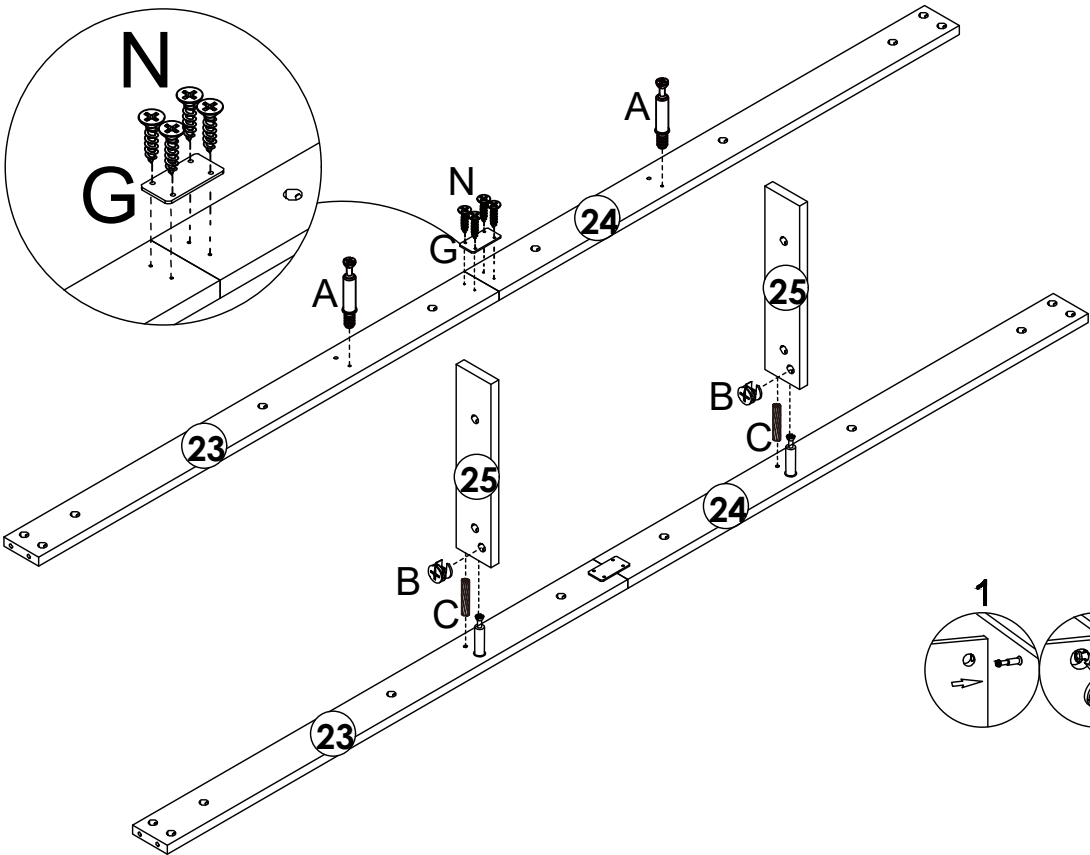

Step:11


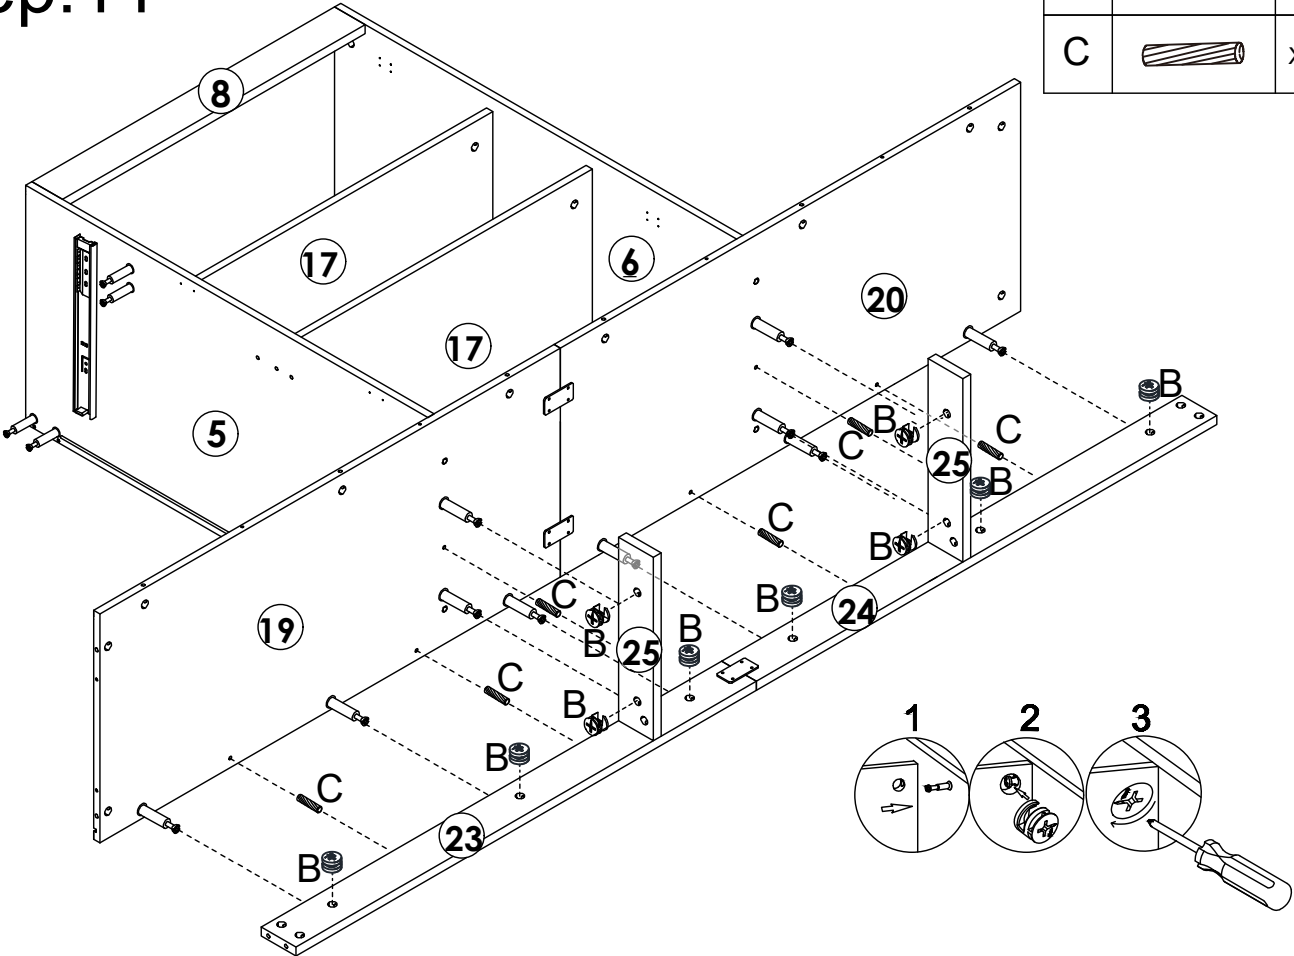


Step:12

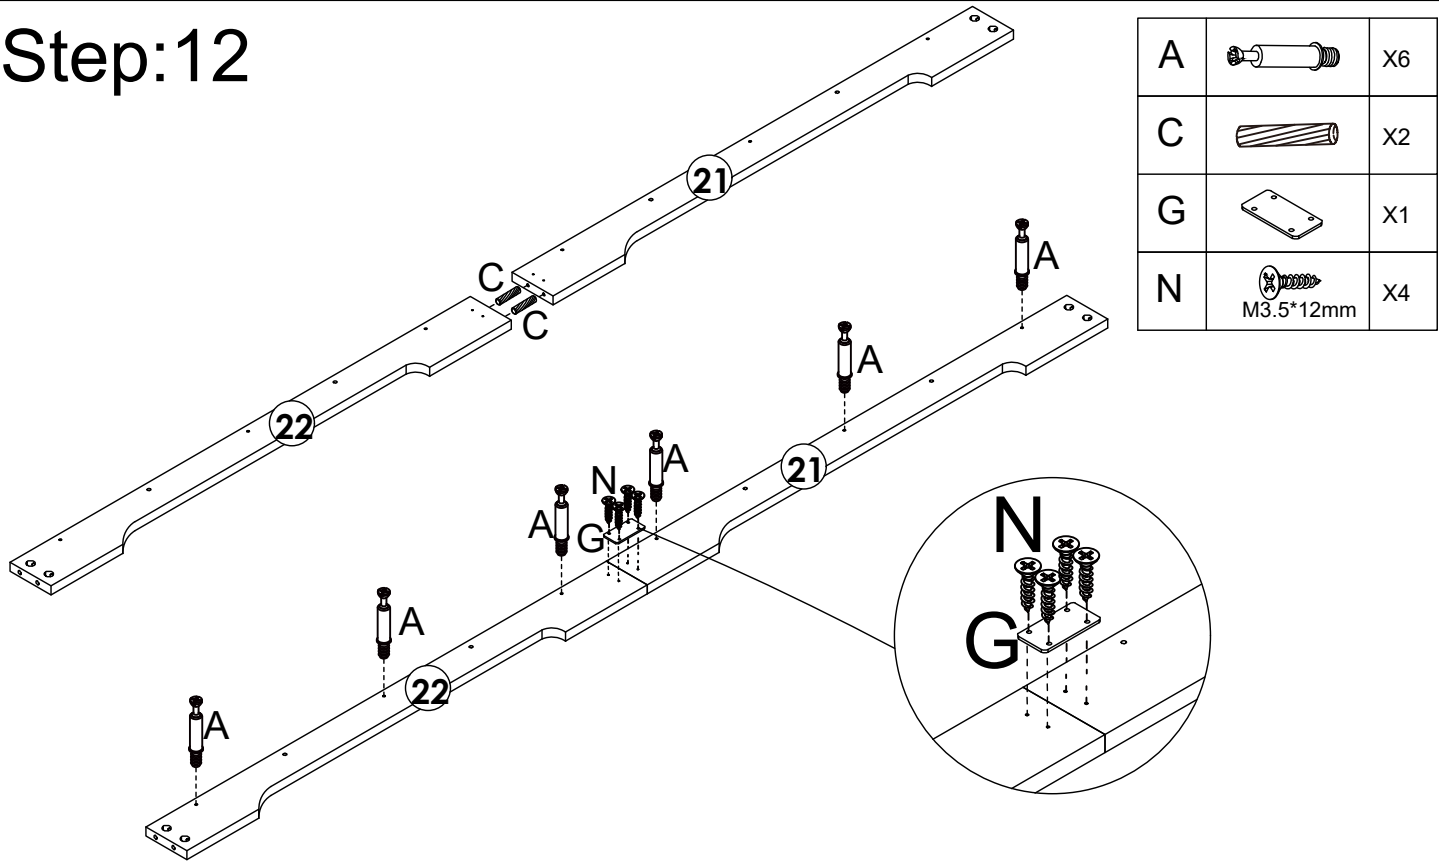


Step:13

B		X6
C		X4

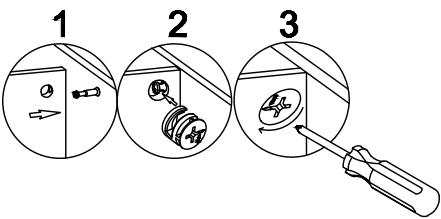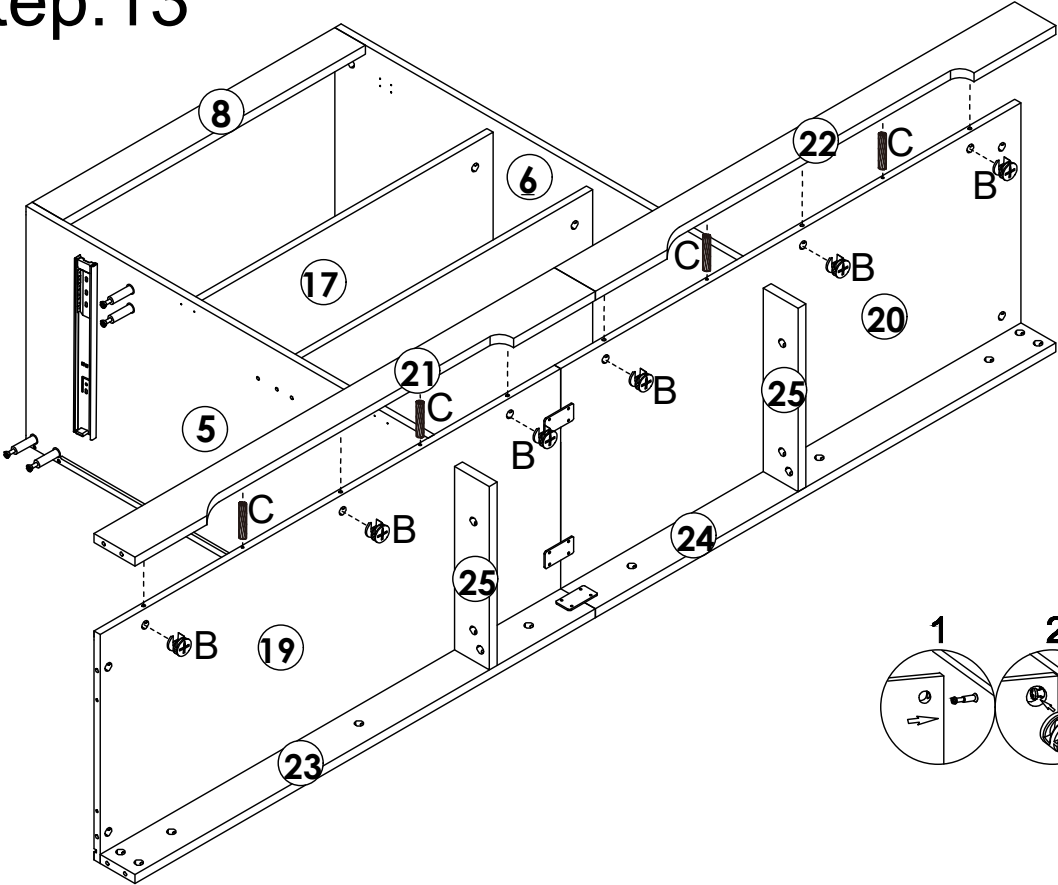


Step:14

F	 M3*14mm	X4
H		X2

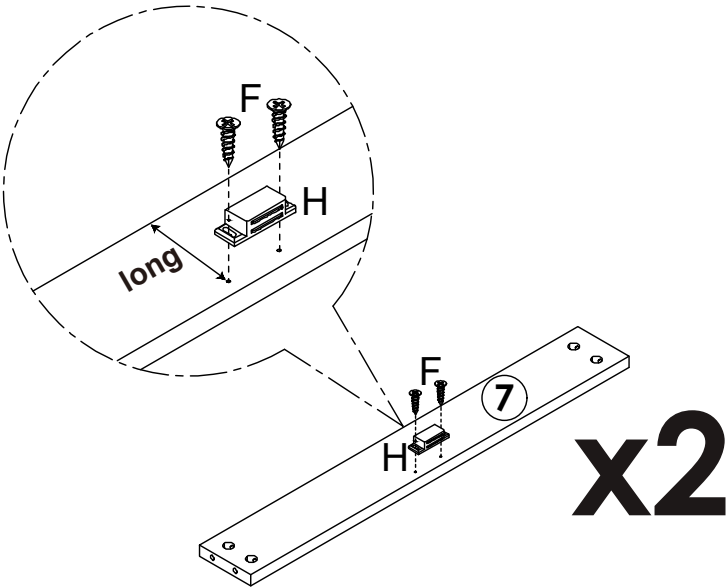


Step:15


B		X4
---	---	----

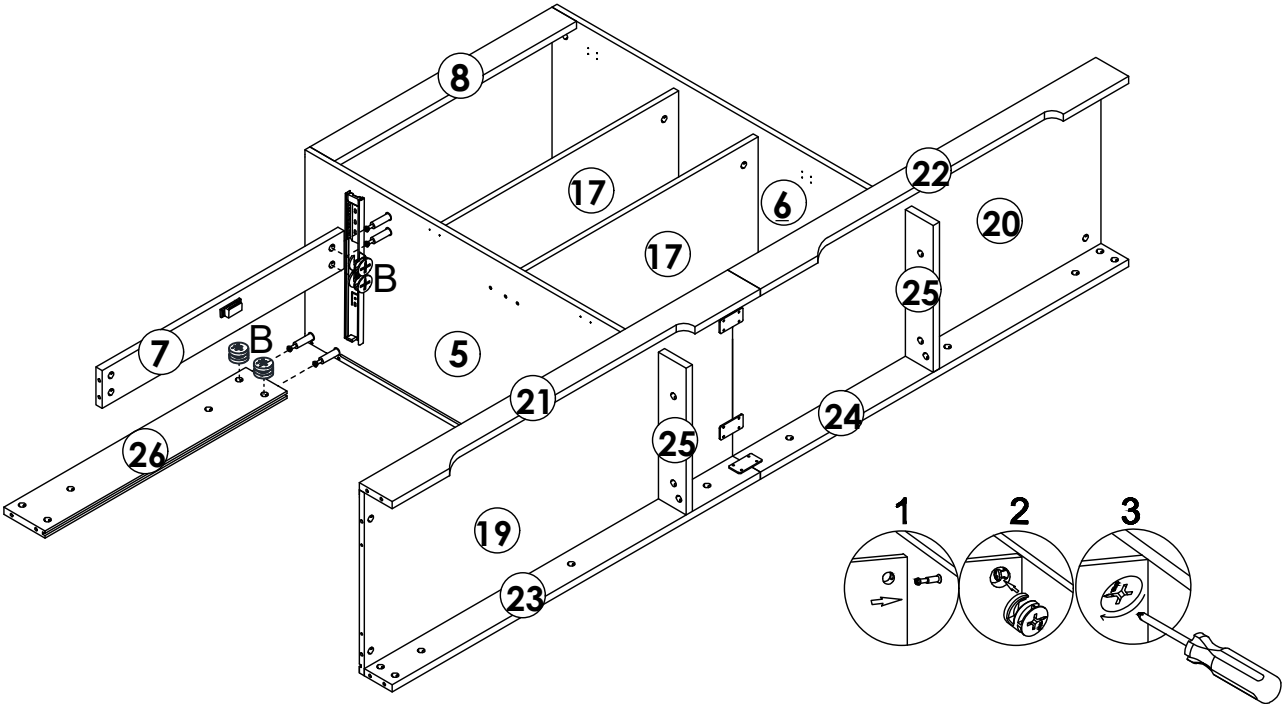


Step:16

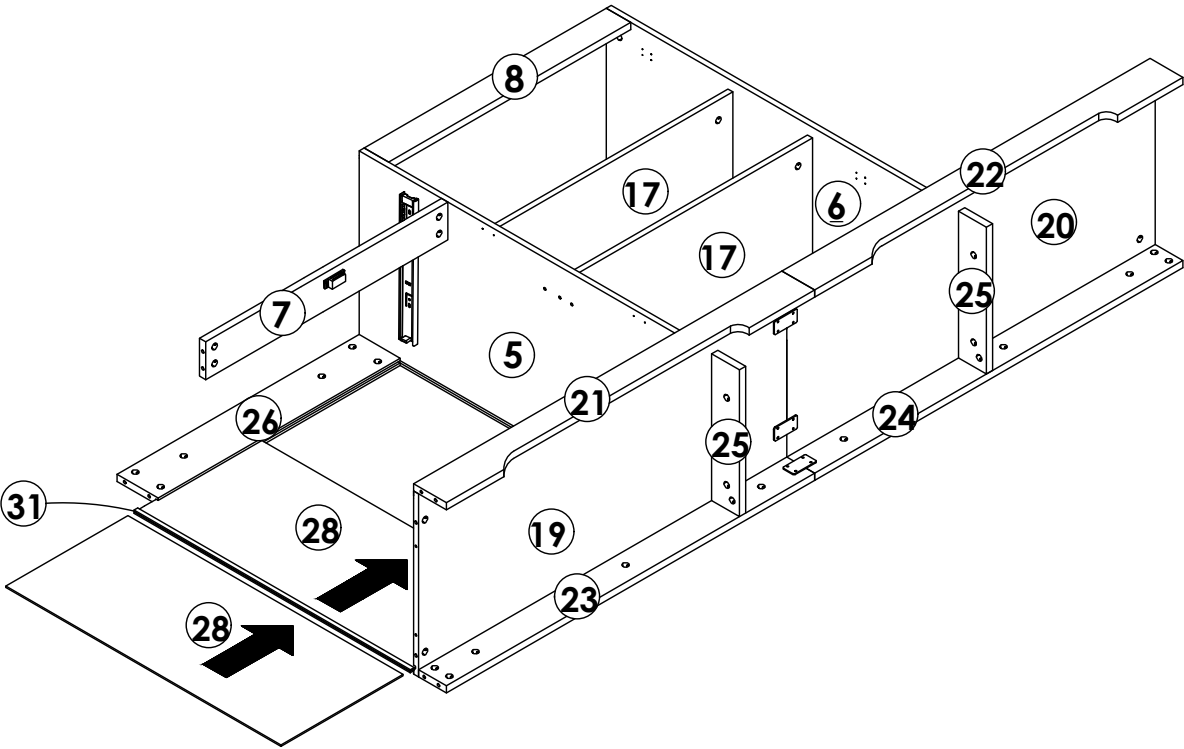

Step:17

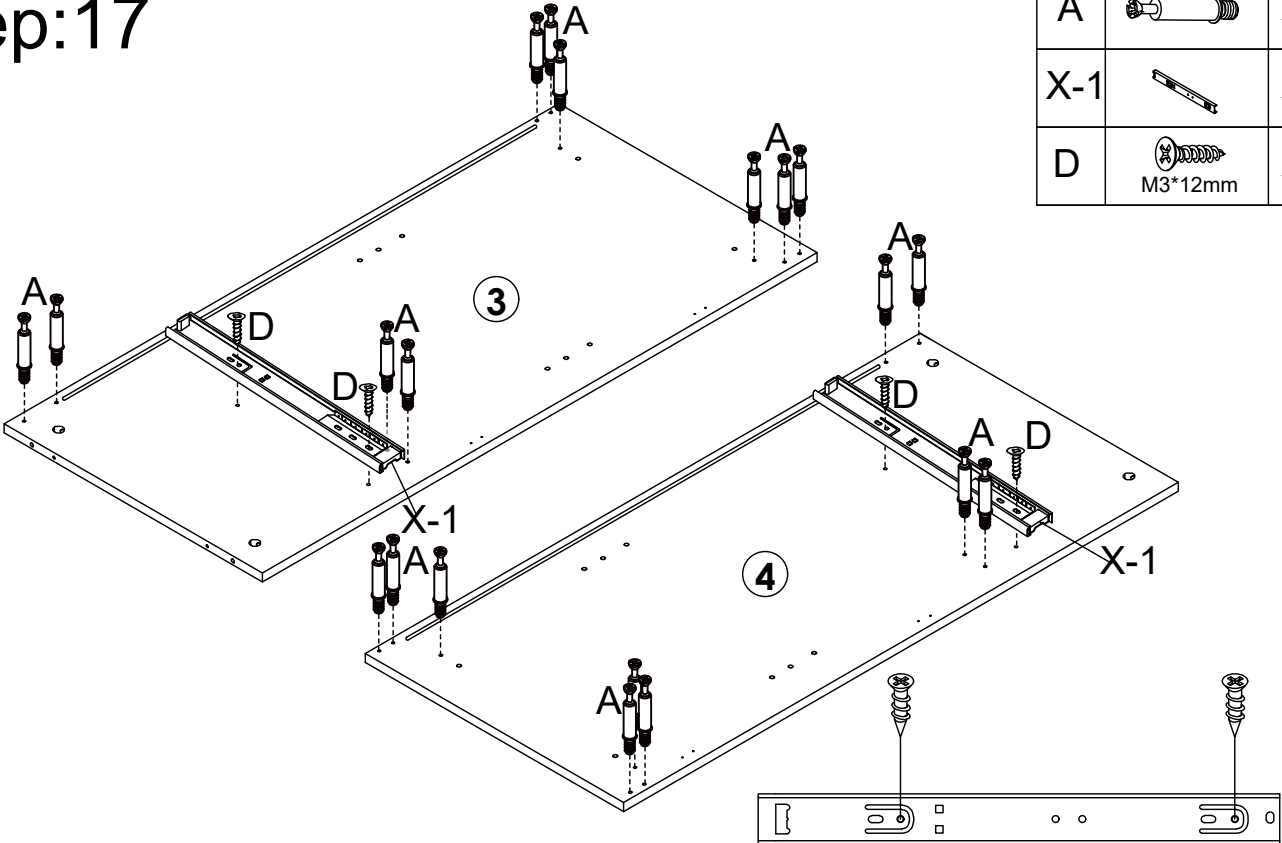


Step:18

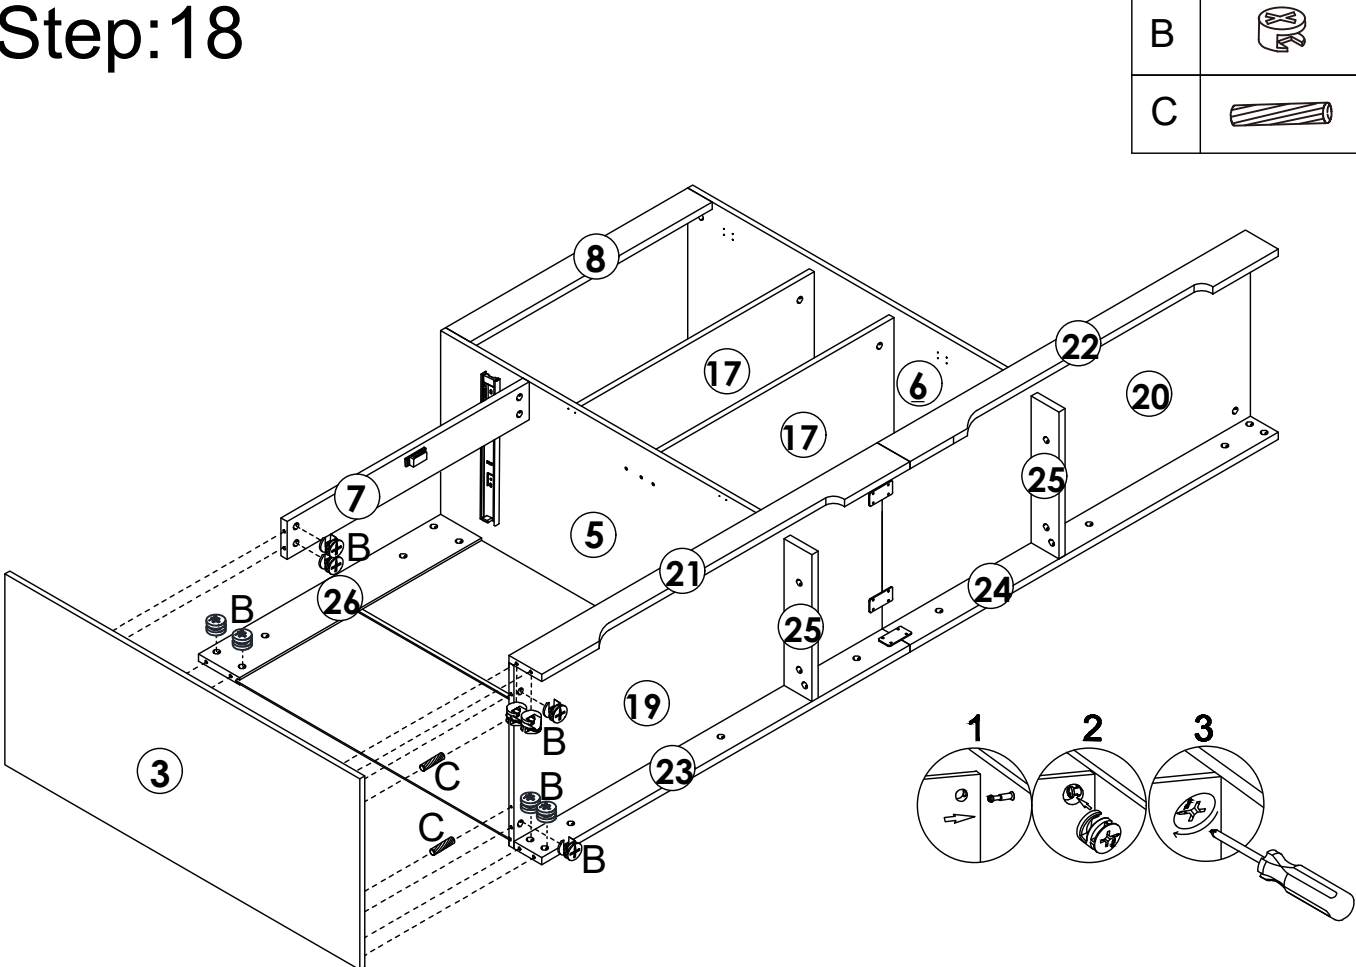


Step:19


B		X4
---	---	----

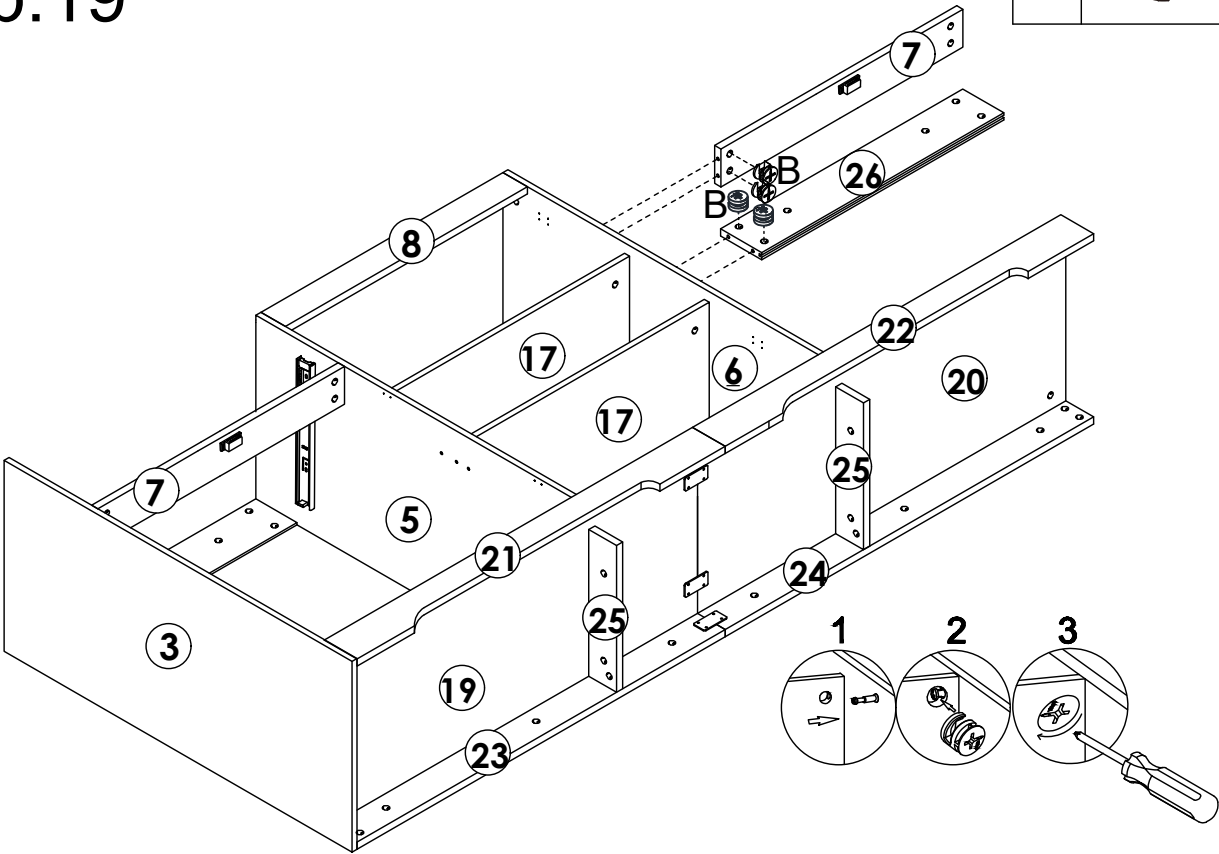


Step:20

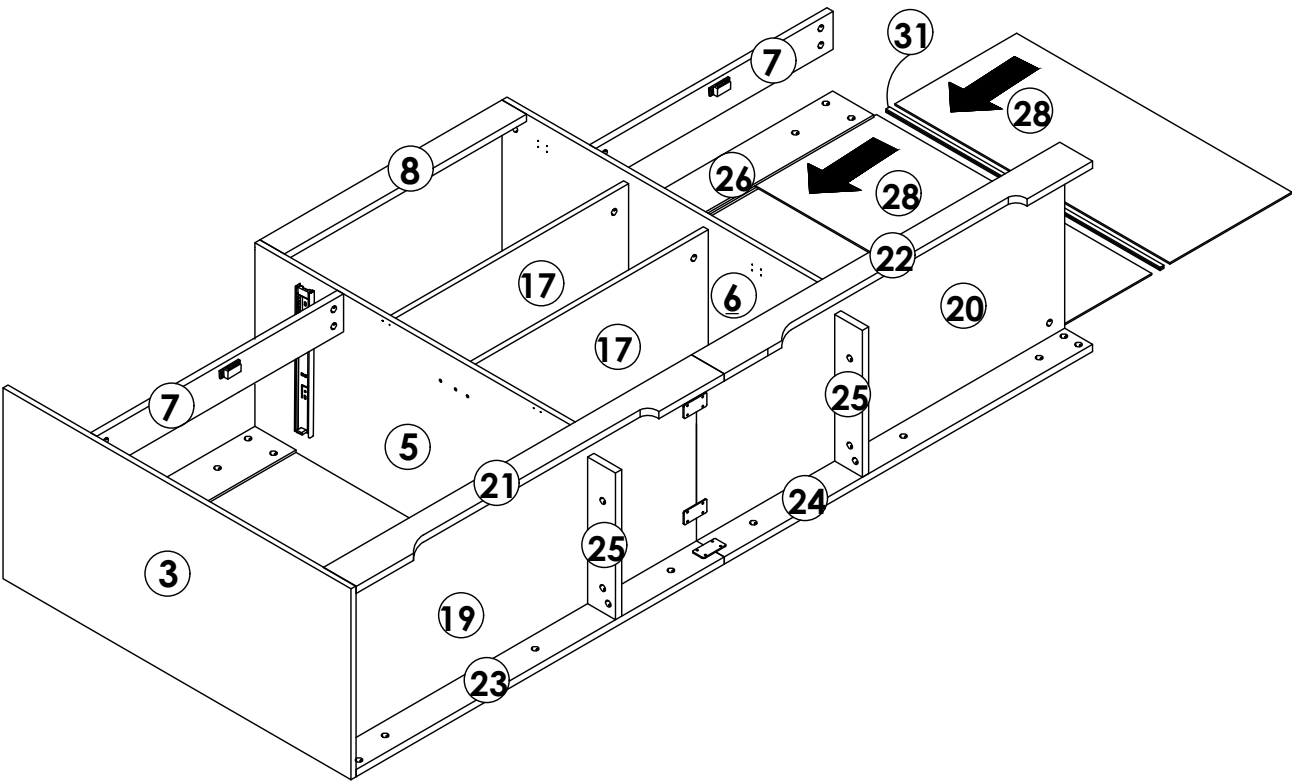


Step:21

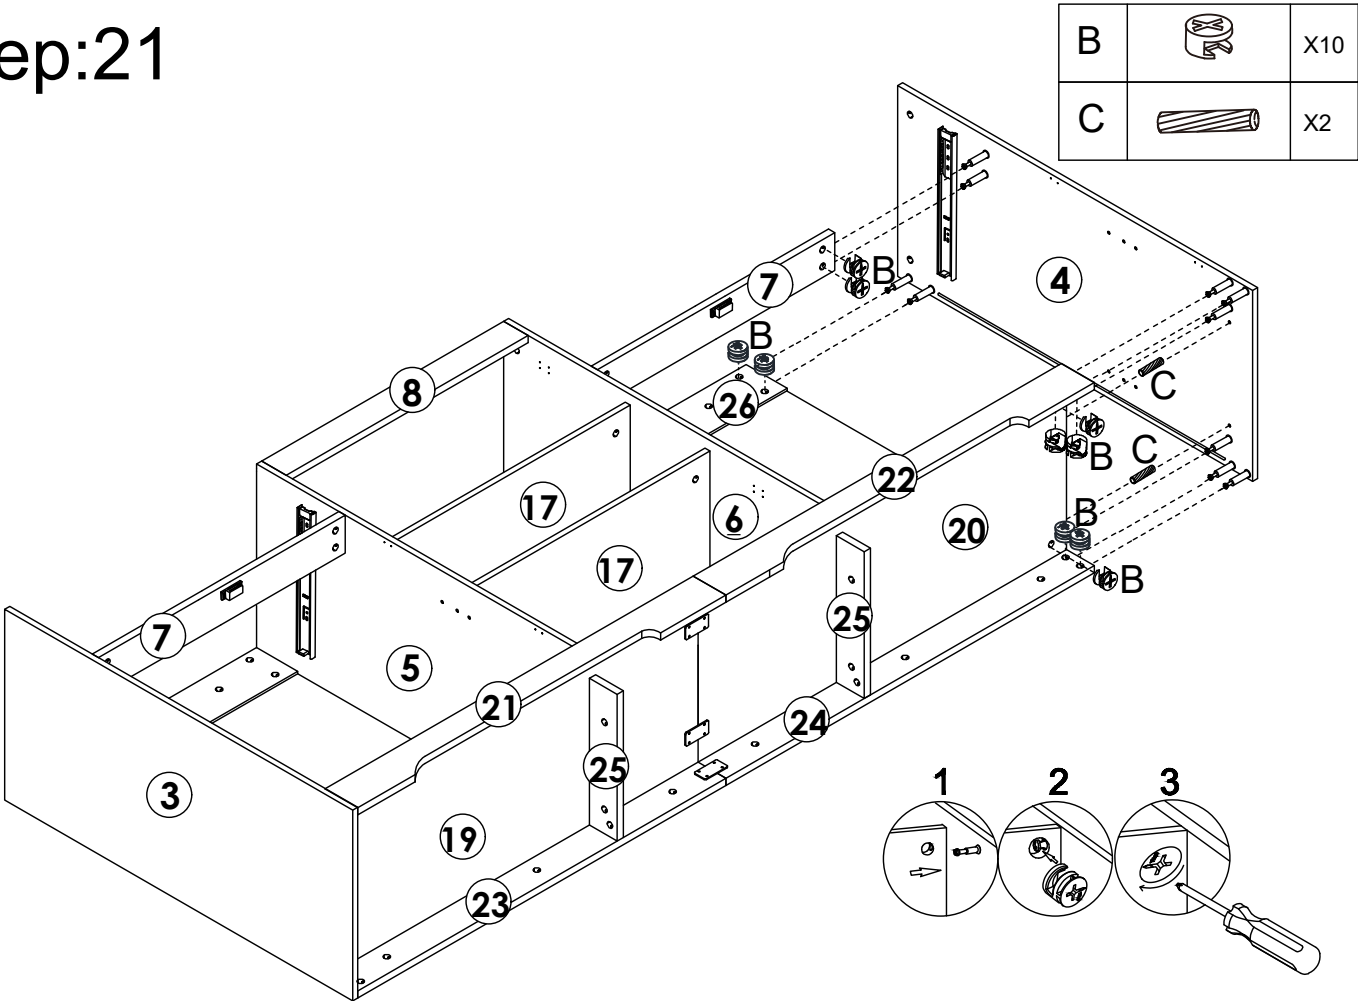

Step:22


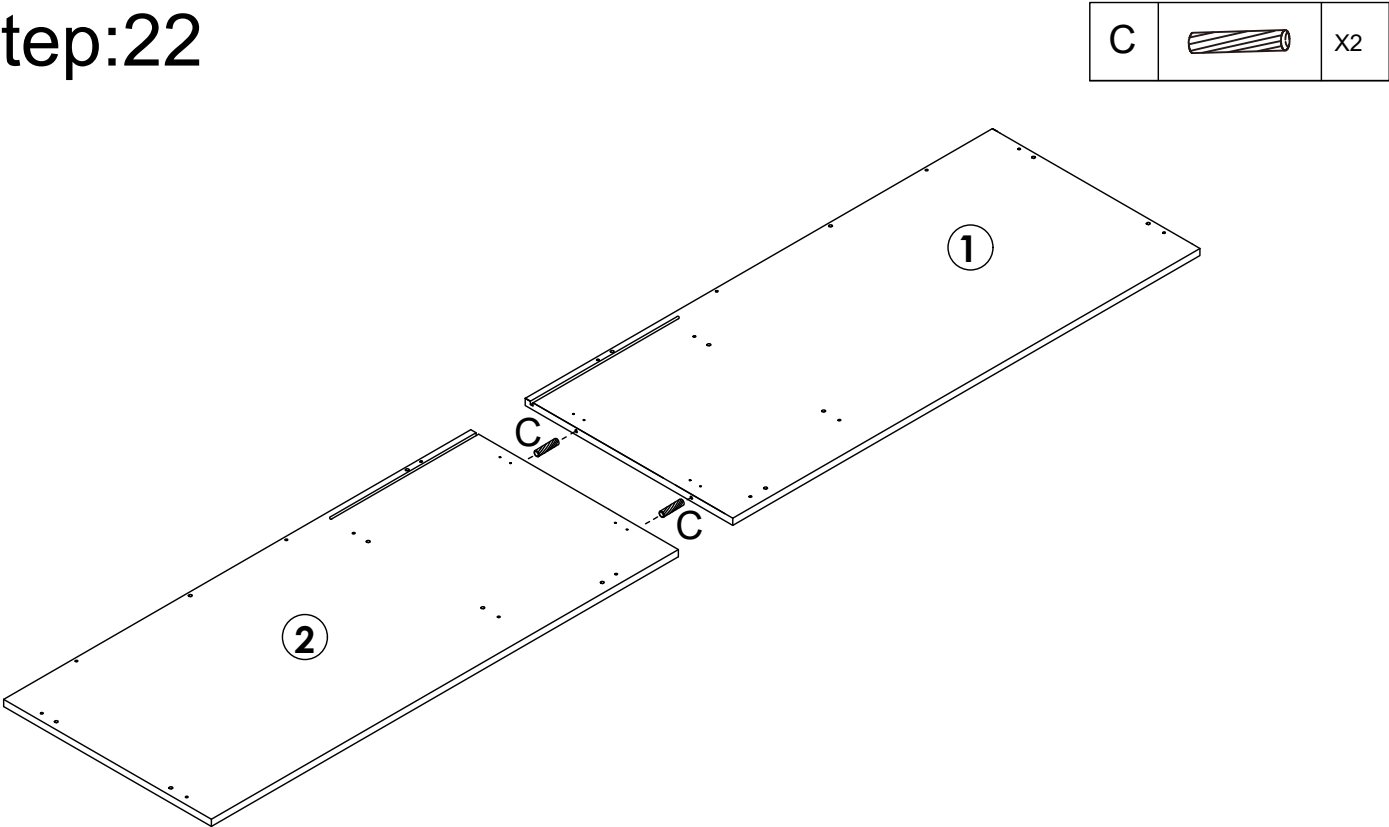


Step:23

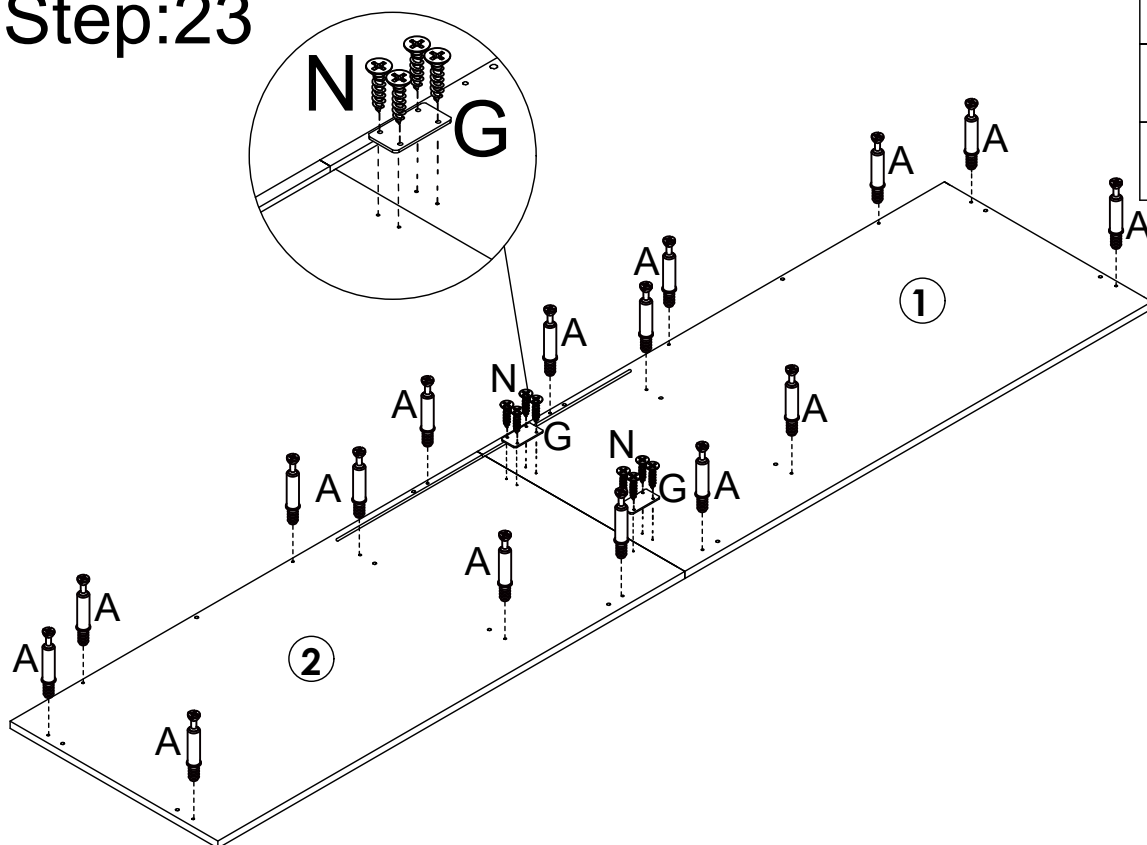


A		X16
G		X2
N	 M3.5*12mm	X8

Step:24

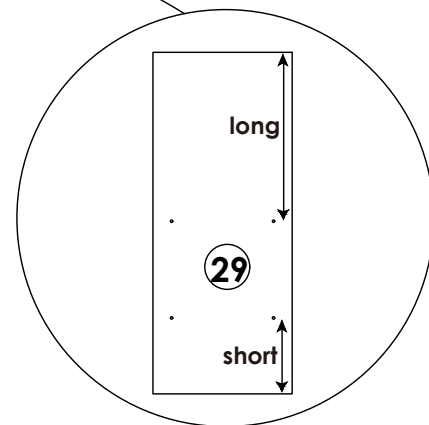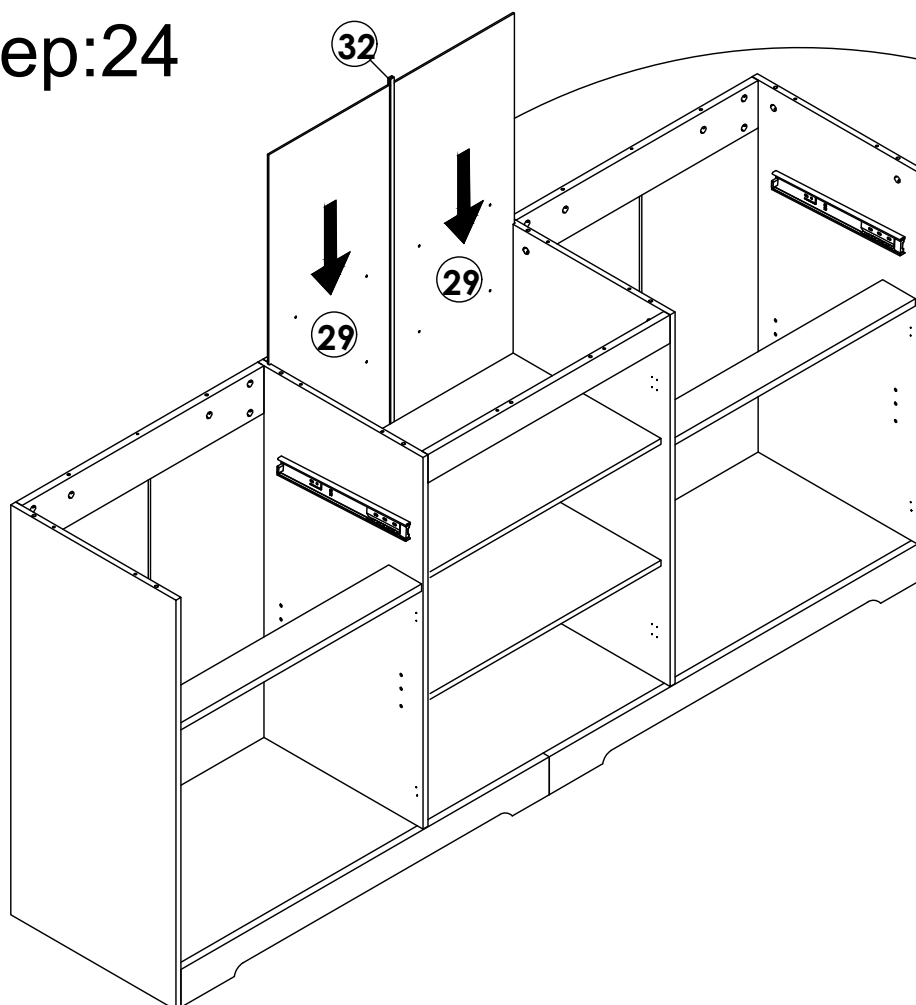

Step:25


B		X14
C		X14
I		X4

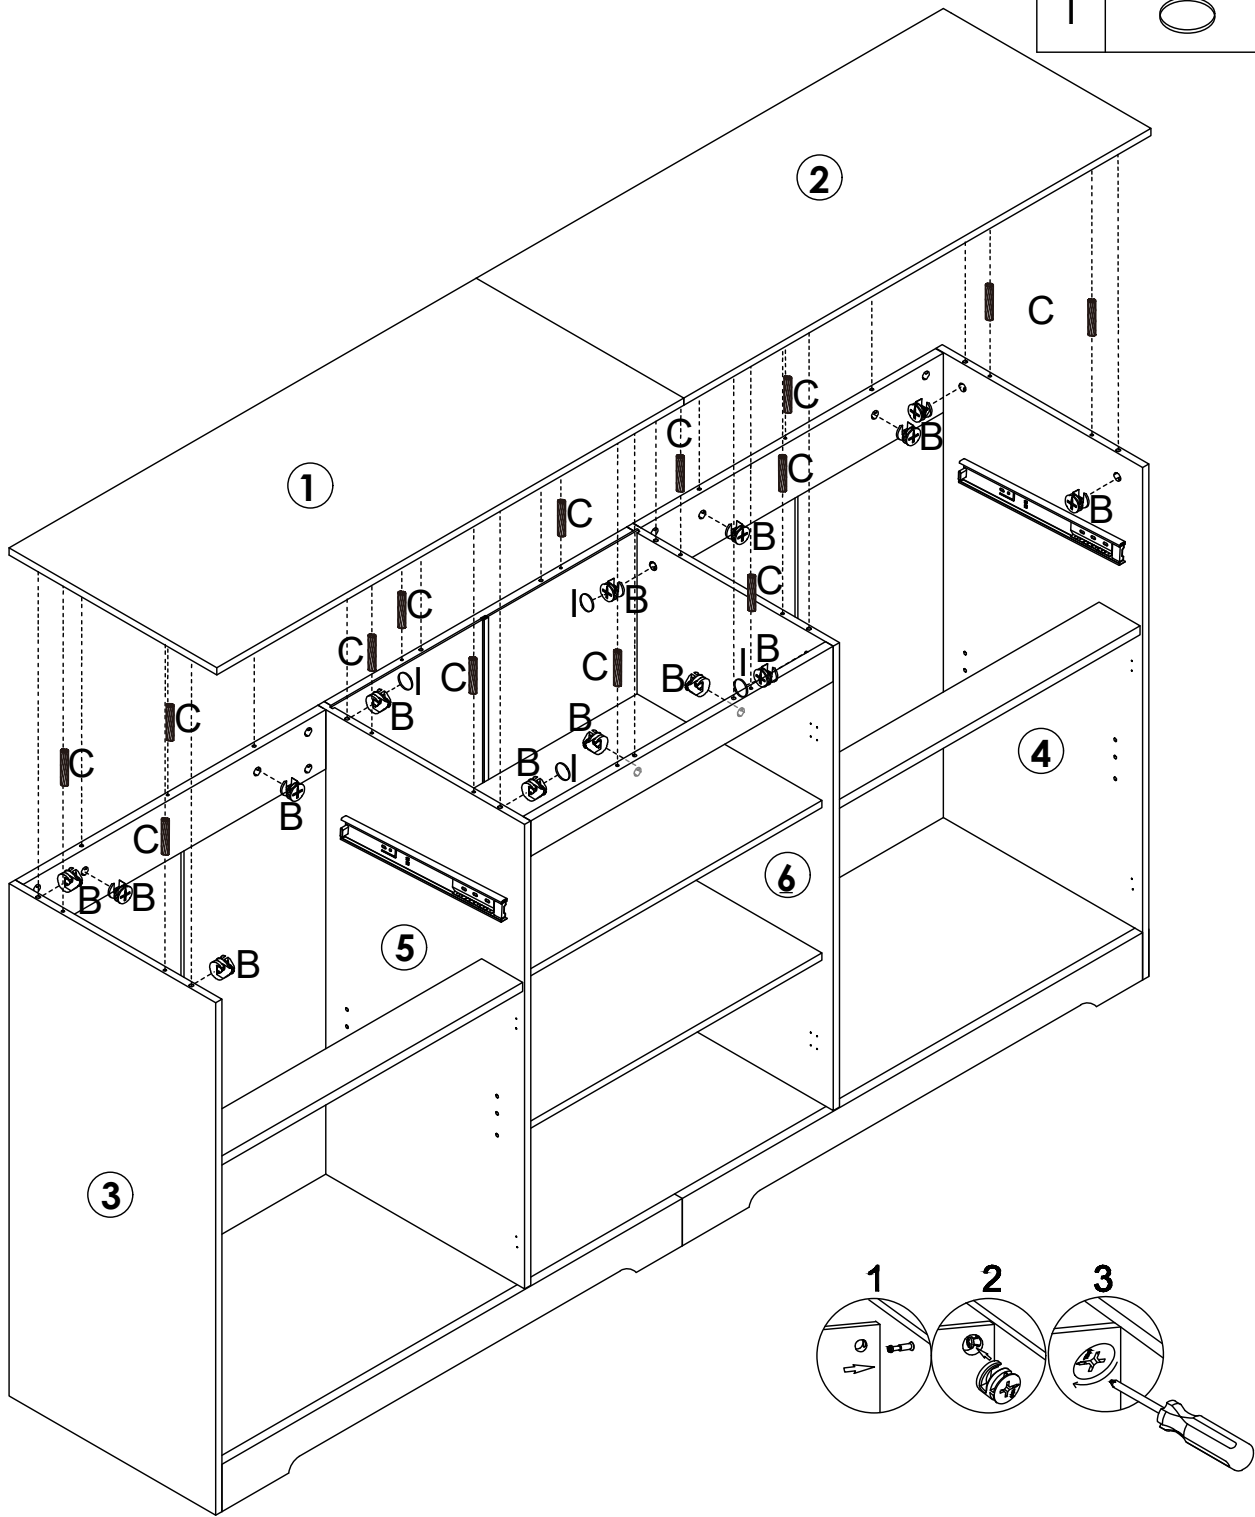

This step requires two persons to install. One person holds the body, the other person installs.


Step:26

B		X2
F	 M3*14mm	X24
L		X24
P	 M3*10mm	X8
Q-1		X2
Q-4		X2

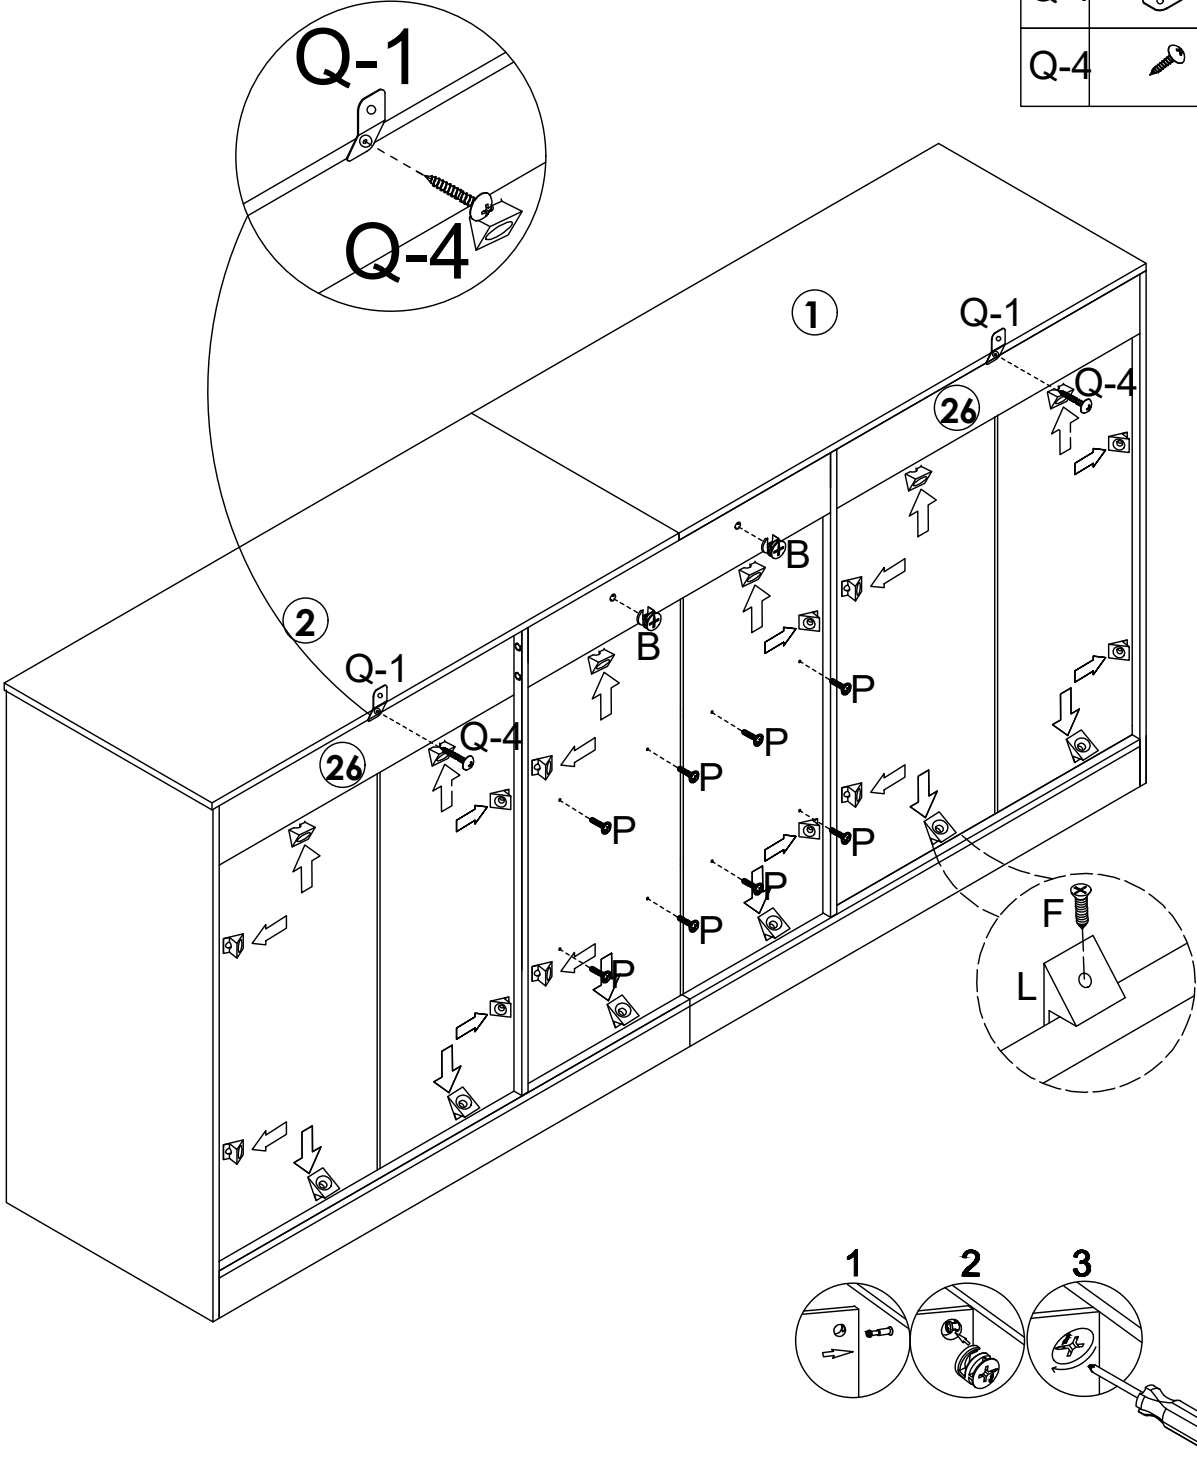

Step:27


R		X2
---	---	----

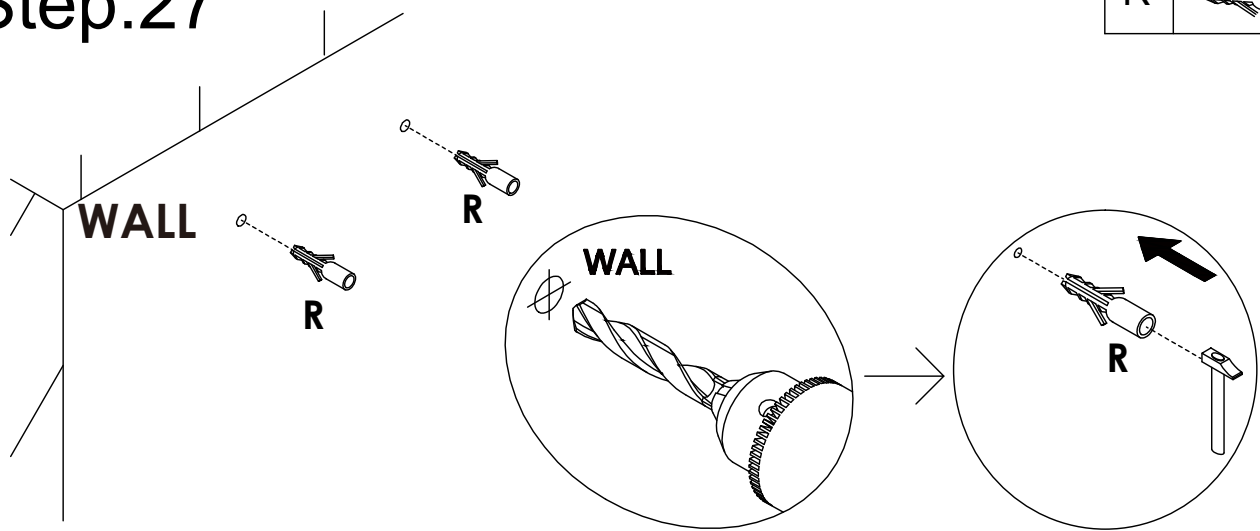

Drill 2 holes on the wall at the required position for anti-falling device installation.


Step:28

Q-1		X2
Q-3		X2

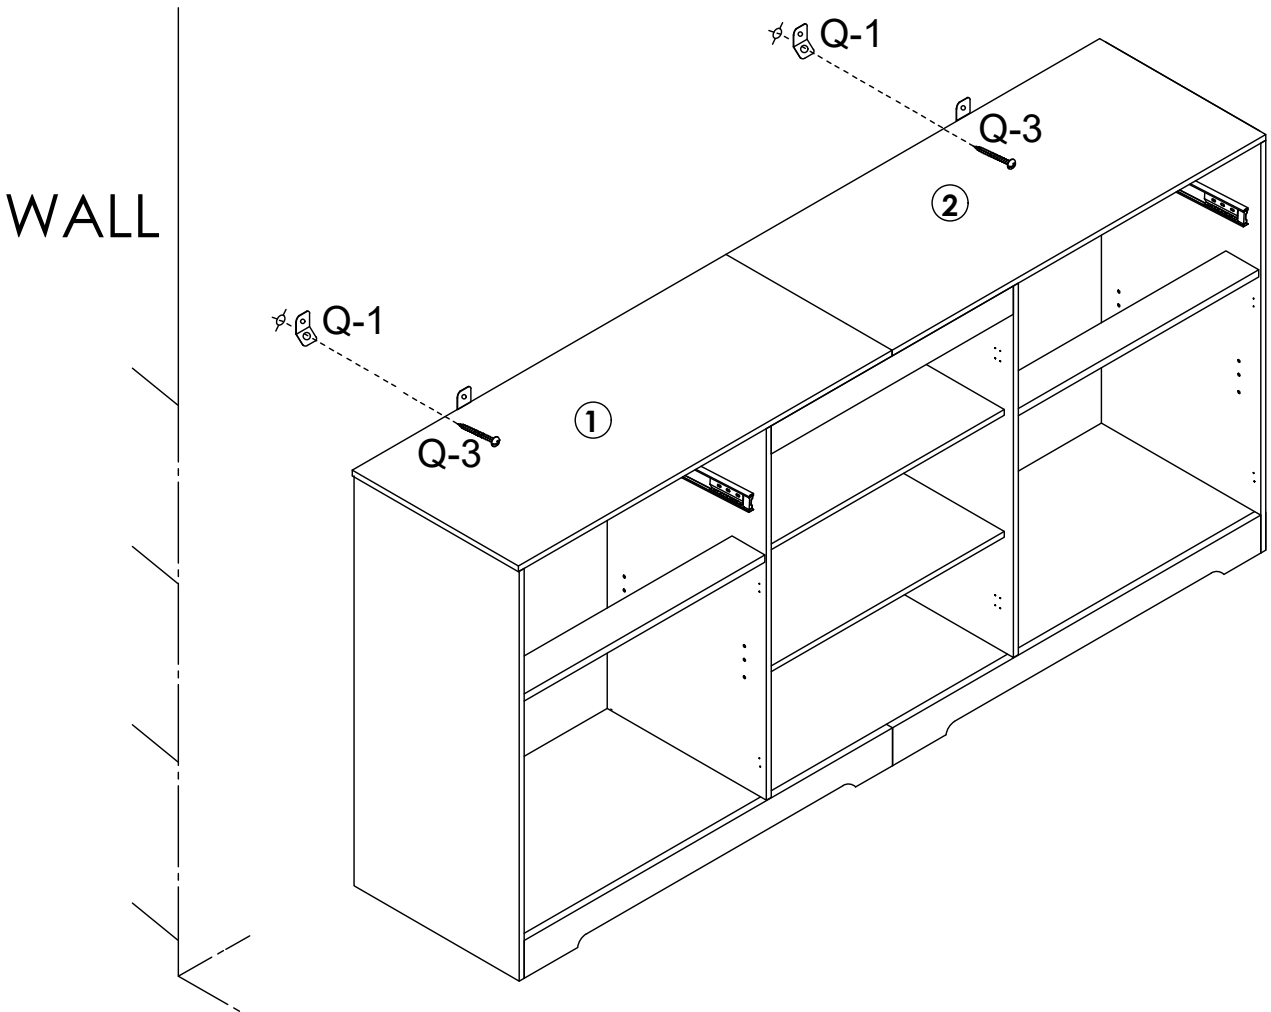


Step:29


Q-2		x2
-----	---	----

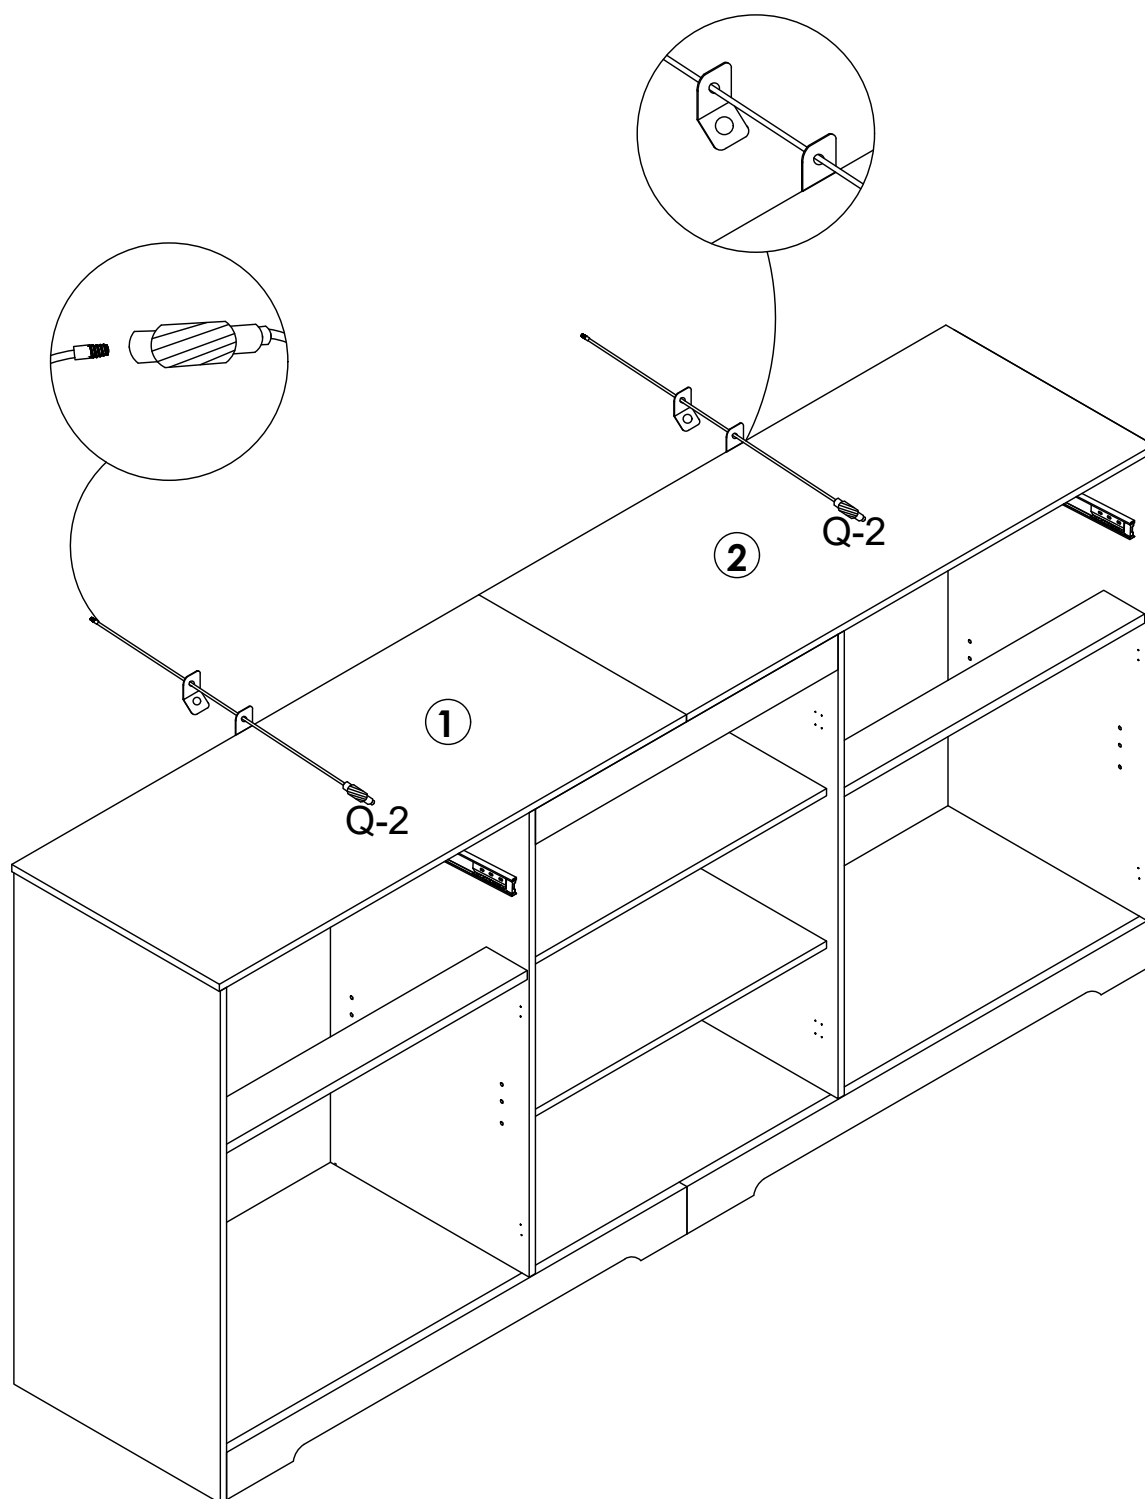


Move the cabinet to the required position, use the "Q-2" iron-core coil to fix the cabinet to the wall.

Step:30


M	 M4*35mm	X12
---	--	-----

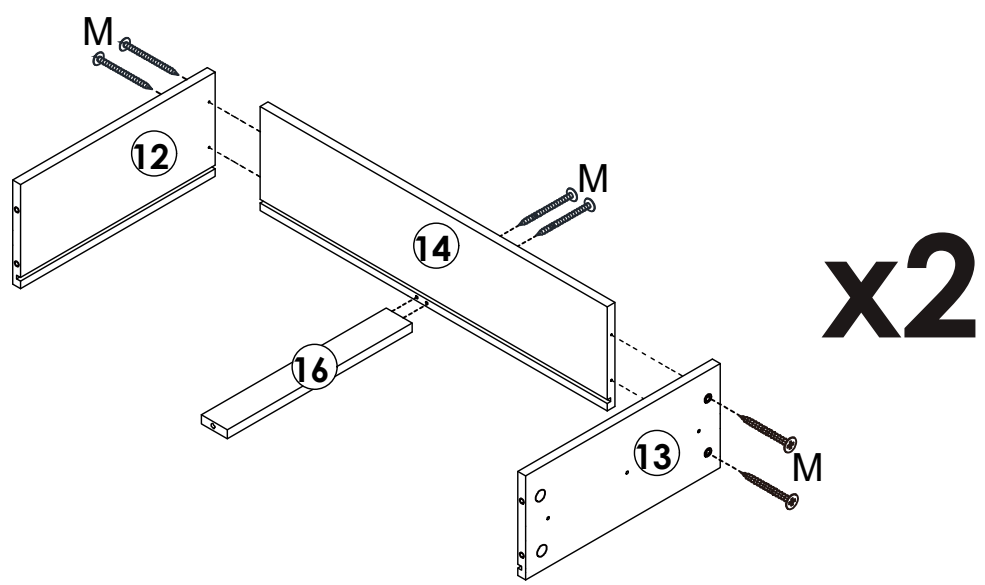


Step:31

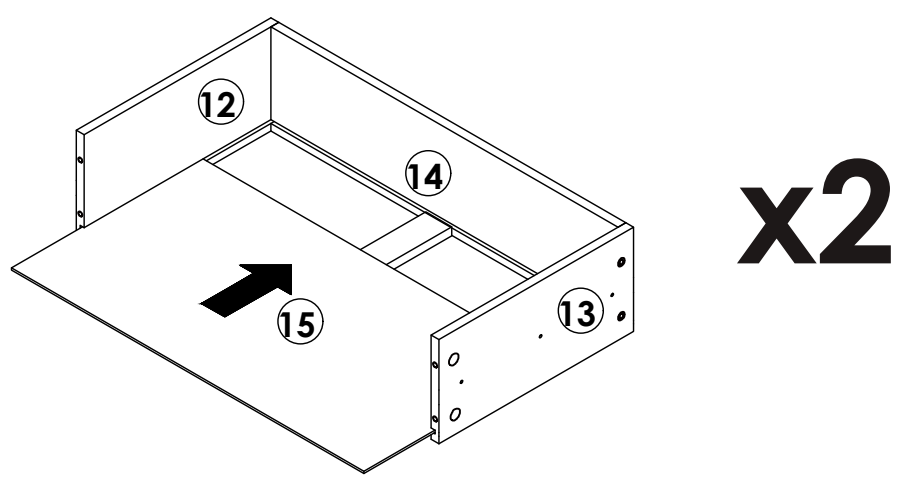

Step:32


A		X10
J		X2
U	 M4*8mm	X4

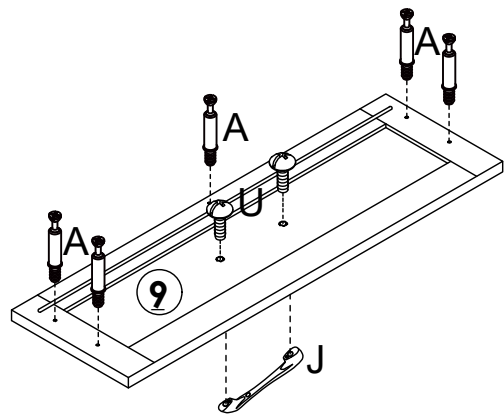

x2

Step:33


B		X10
I		X8

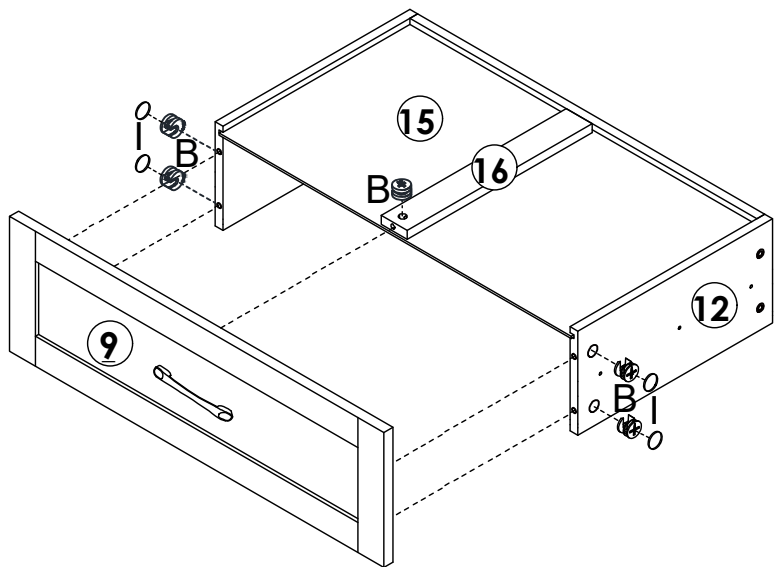

x2

Step:34


D	 M3*12mm	X12
X-2		X4

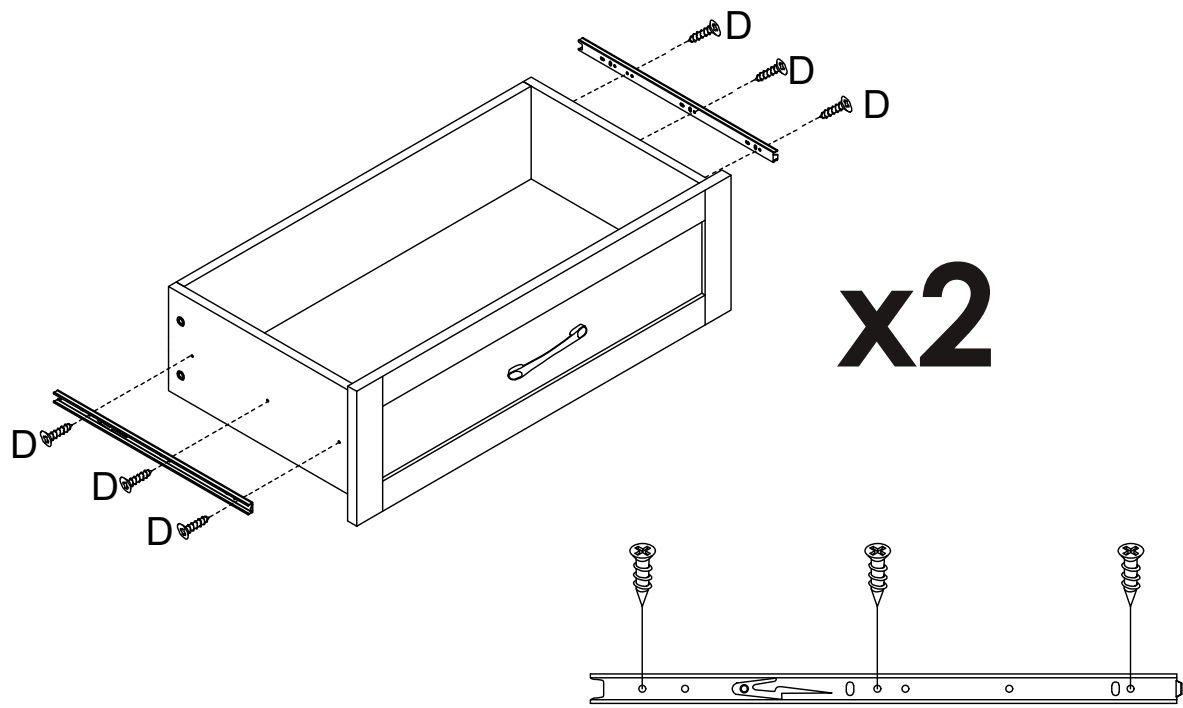

x2

Step:35


D	 M3*12mm	X10
J		X2
K	 M4*16mm	X4
S		X2
V		X4

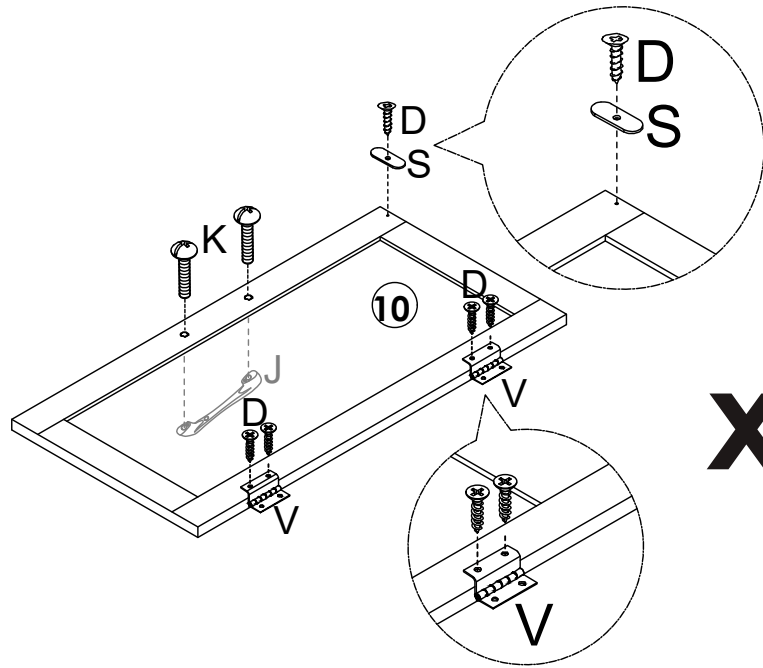

x2


Step:36

D	 M3*12mm	X10
J		X2
K	 M4*16mm	X4
S		X2
V		X4

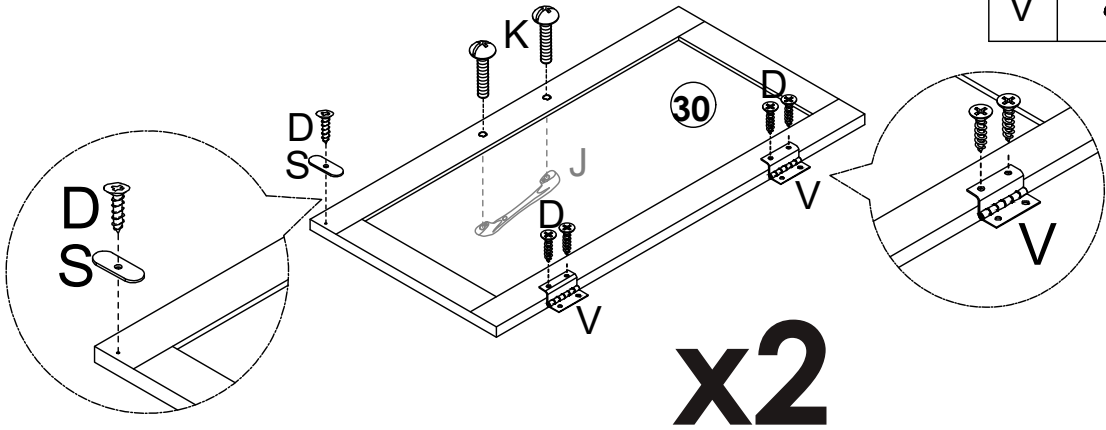


Step:37

J		X2
K	 M4*16mm	X4
O	 M4*12mm	X8
T		X4

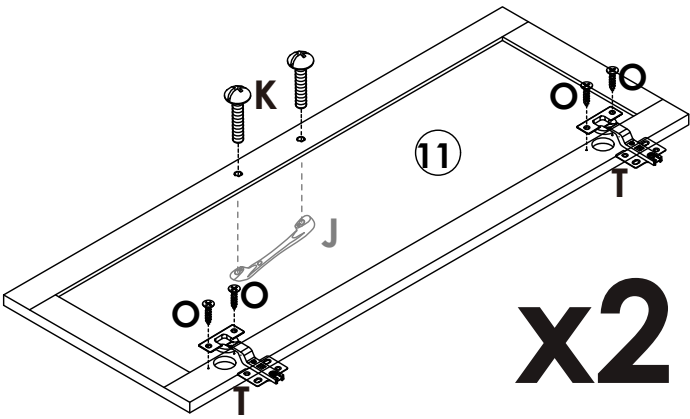


Step:38

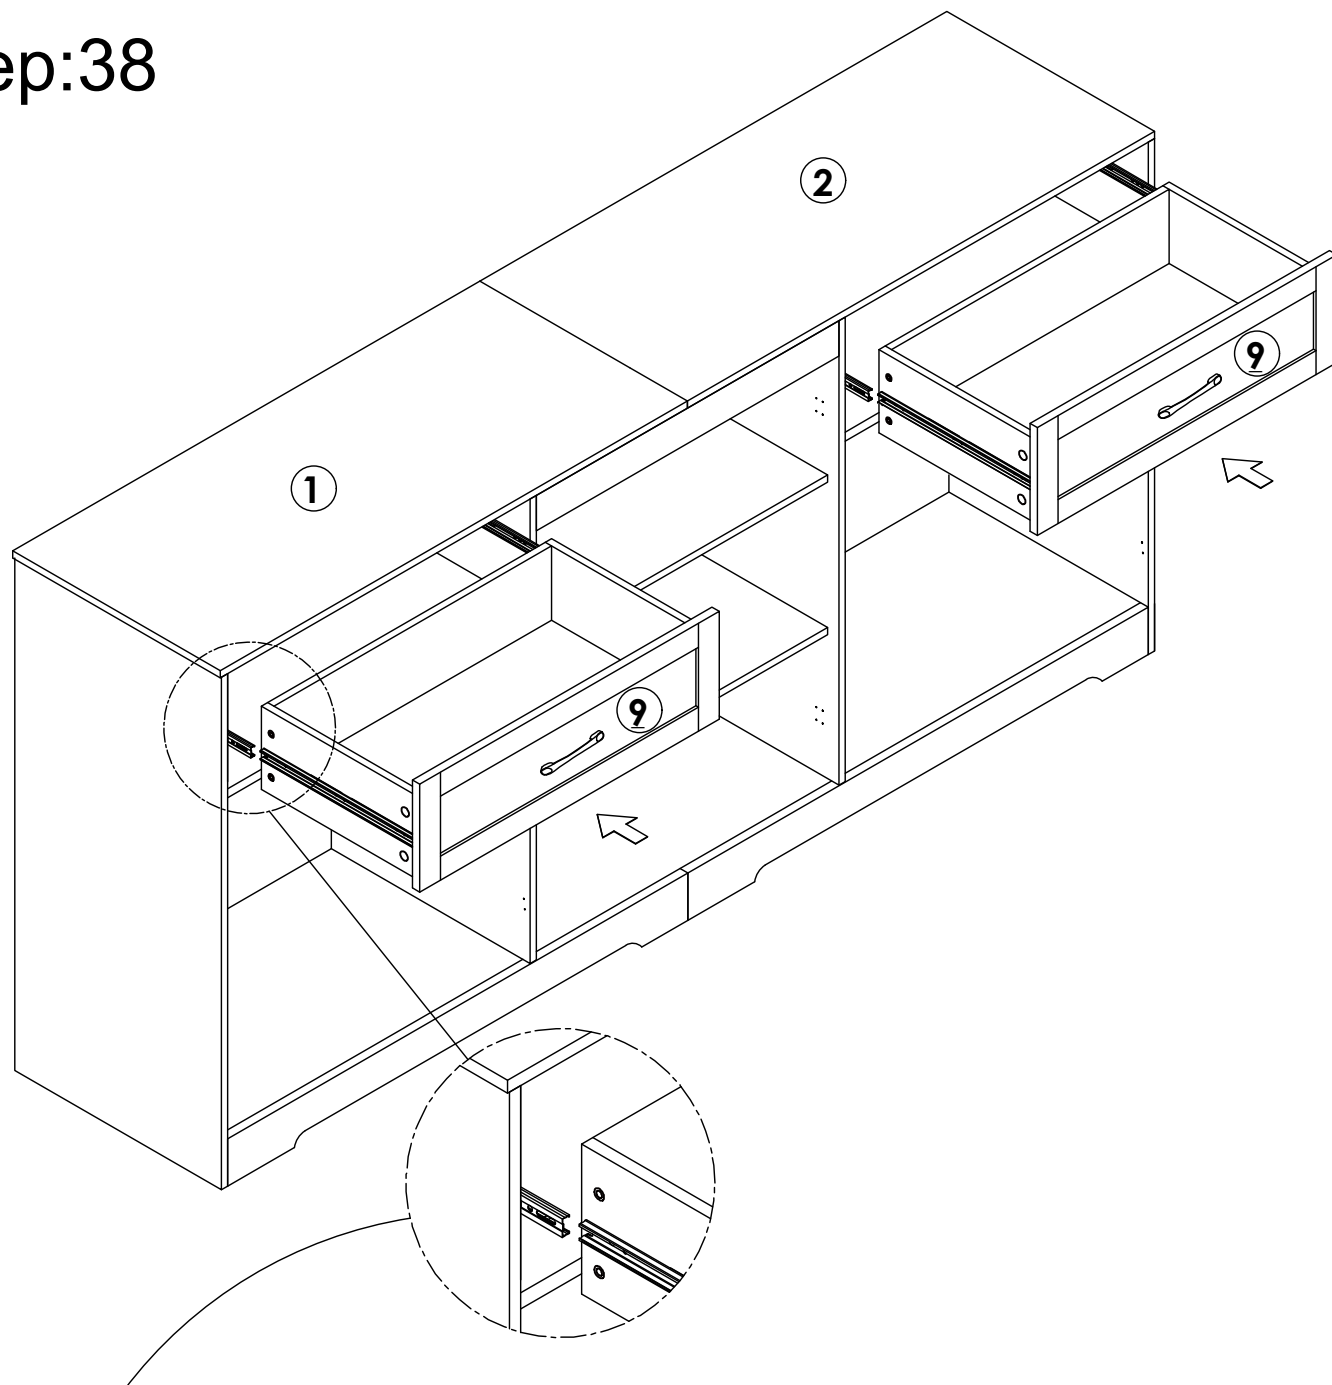

REMARK: Align the slide runners on the drawer with the unit and push it carefully inside until it stops.

▲ If the drawer does not go in smoothly please take it out and repeat the step.

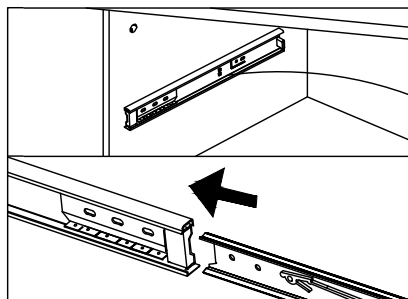


Please push the steel ball to the front first, then install the drawer

REMARK:

1. First, slide the end ball on both sides of the slide to the outside.
2. When installing the drawer, align both sides first, and then push both sides inward at the same time.


Step:39

E		X8
---	---	----

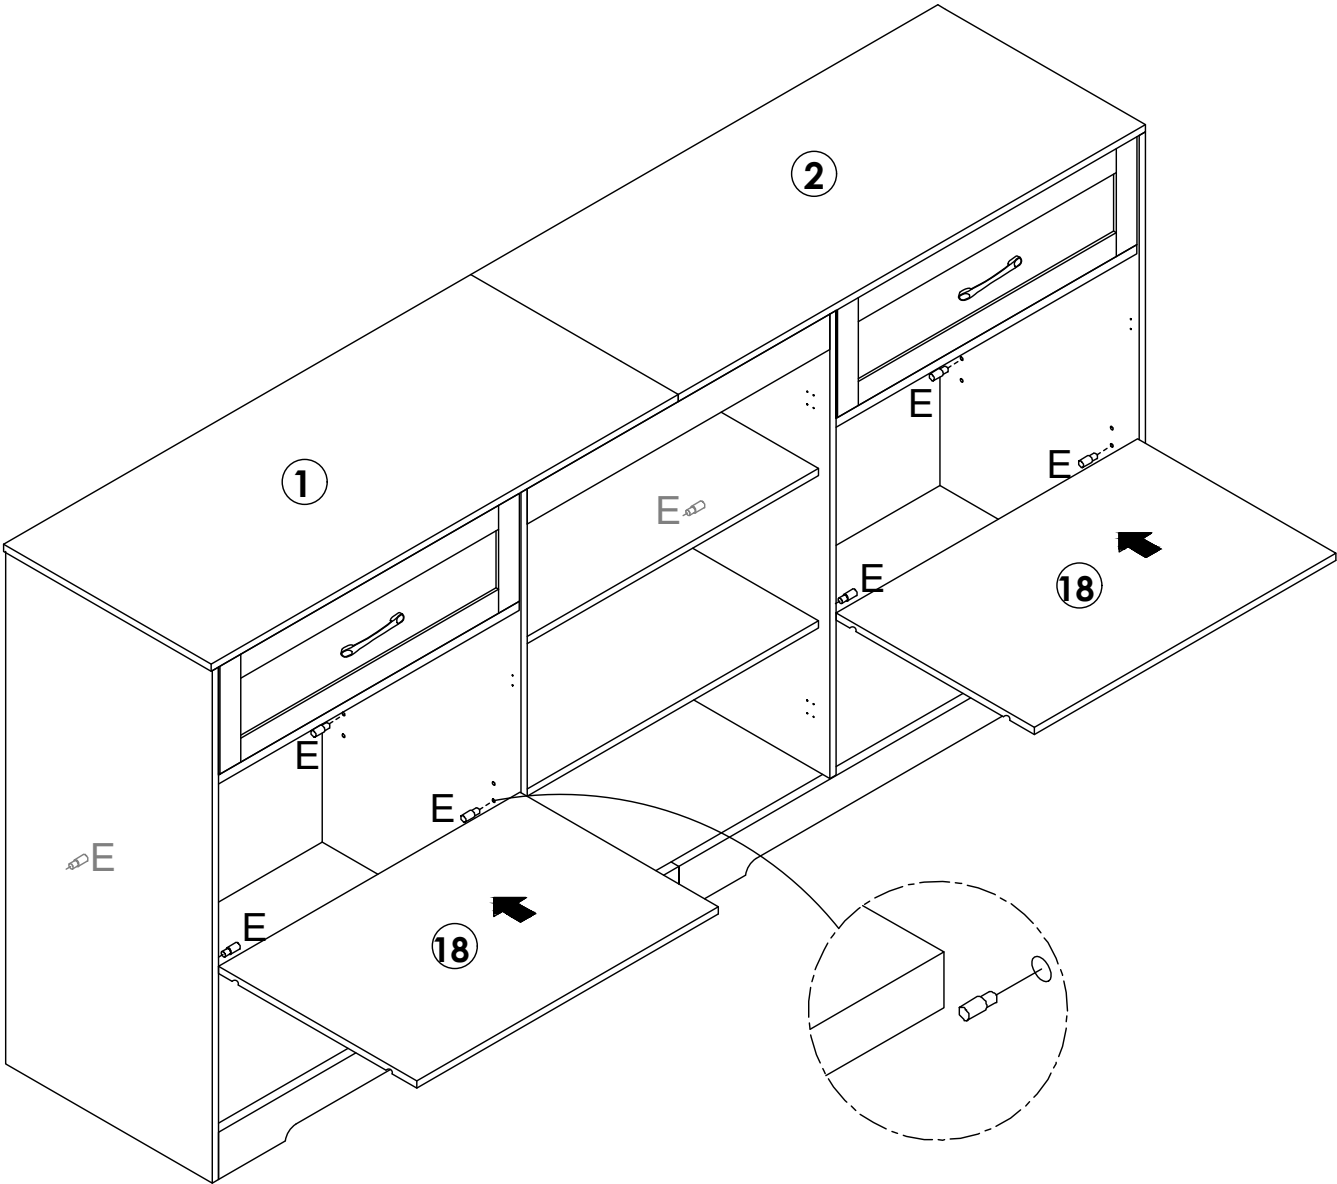


Step:40

D	 M3*12mm	X8
O	 M4*12mm	X8

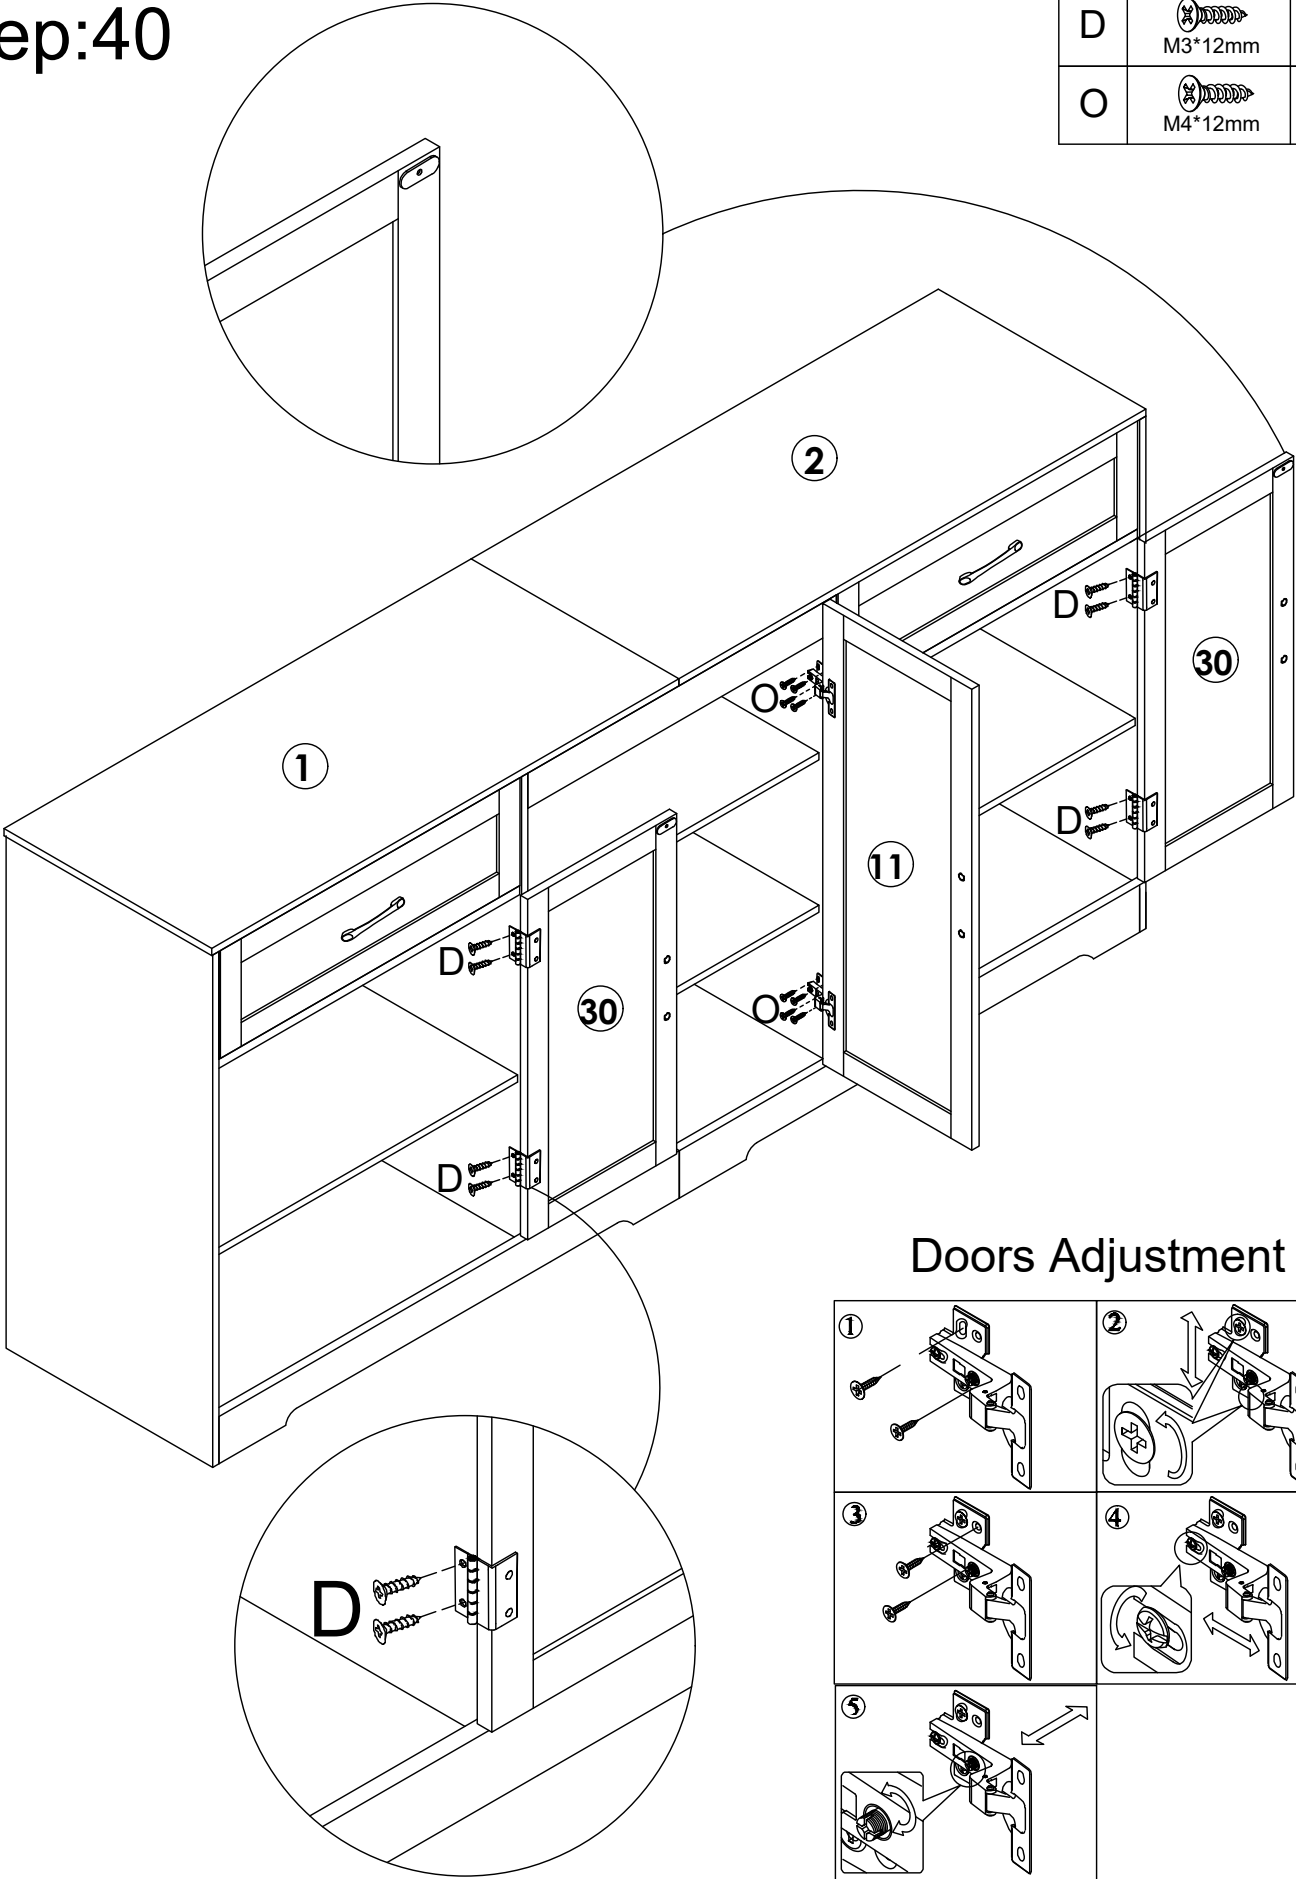


Doors Adjustment

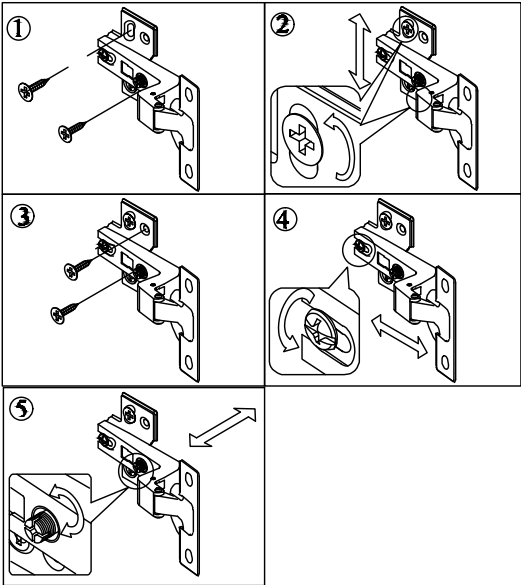


Step:41

D	 M3*12mm	X8
O	 M4*12mm	X8

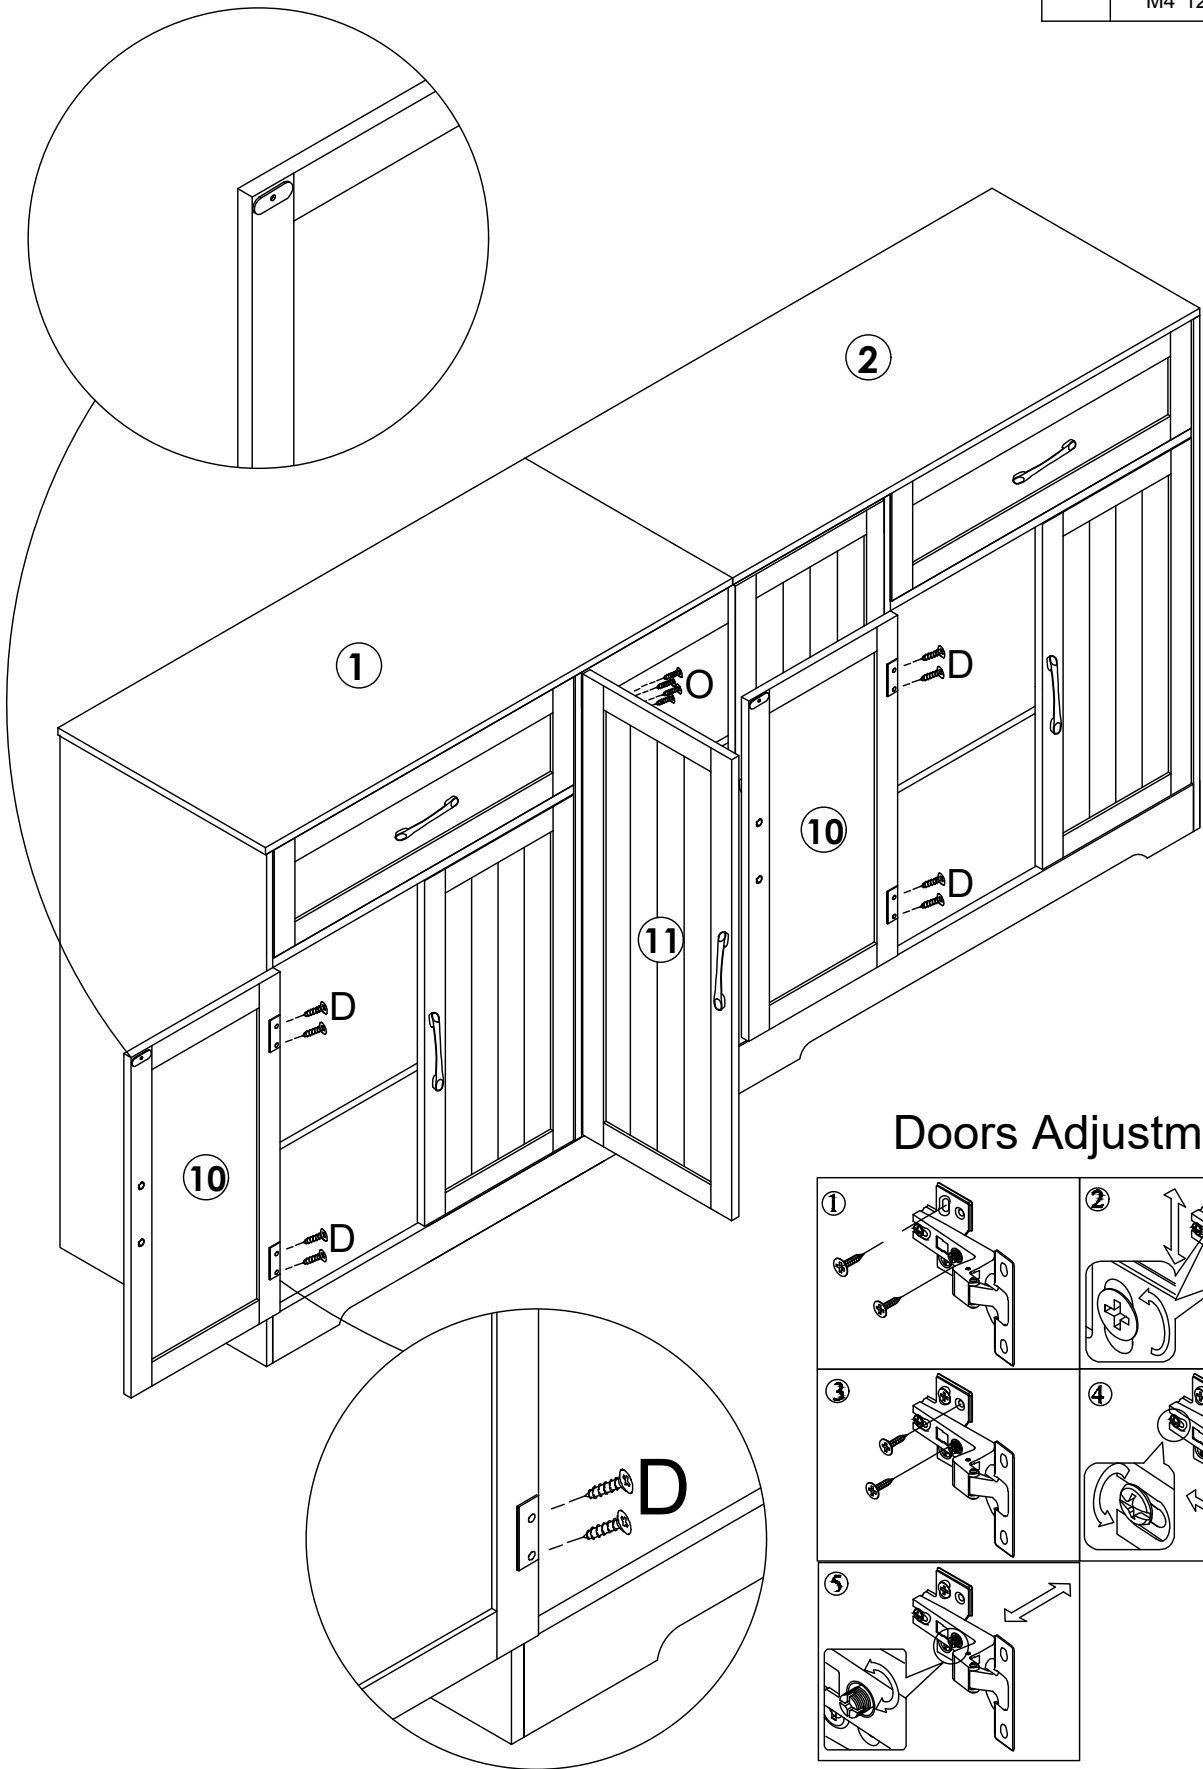

Doors Adjustment

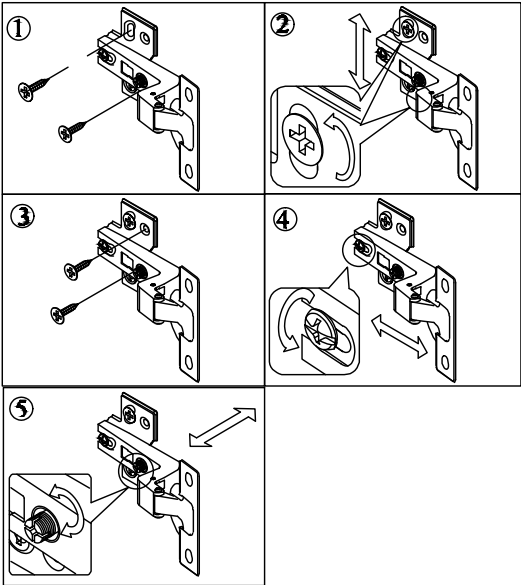

Step:42

Y



X2

