
ASSEMBLY INSTRUCTIONS

Dining Chair

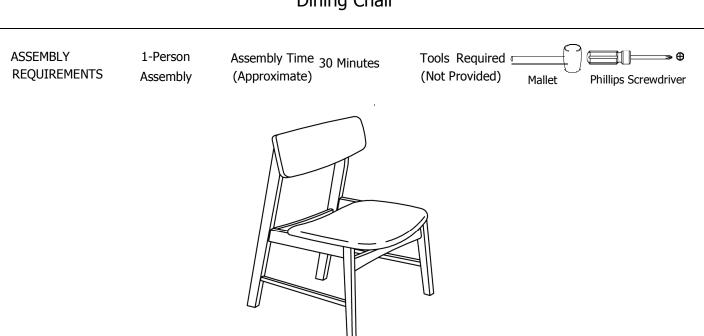

ASSEMBLY PREPARATION

- . Remove all packaging materials, staples and packing straps from the carton.
- . Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly. Contact customer service for missing parts.
- . Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.

SAFETY PRECAUTION

- 1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY

- . Allow ample room for assembly and in close proximity to where product will be placed.
- . Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
- . Identify all of the parts, hardware and quantities required for each step.
- . During assembly, do not over-tighten any fittings as this may cause damage.
- . DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
- . Always place the product on a flat, level surface.
- . Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.


This product is for indoor and household use only - not for commercial use.

HARDWARE LIST			EXTRA
Α	JCBC M6 x 30mm + S/W M6 + F/W M6 x 13mm	4PCS	1PC
В	ALLEN KEY M4 (Ball Shape)	1PC	
С	FH SCREW #8 x 32mm <(%)	4PCS	1PC
D	L BRACKET	4PCS	
Е	PH SCREW M4 x 12mm	8PCS	1PC
F	WOOD DOWEL M8 x 25mm	2PCS	1PC
G	PVC NAIL 5/8" (WITH PIN)	4PCS	1PC

PART LIST				
1	RIGHT SIDE FRAME	1PC		
2	LEFT SIDE FRAME	1PC		
3	STRETCHER	2PCS		
4	TOP REST	1PC		
5	CUSHION SEAT	1PC		


*EXTRA HARDWARE FOR SPARE USE

STEP 1

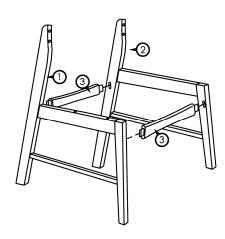


Attach Stretcher (3) to Right Side Frame (1) and Left Side Frame (2). Check that the screw hole on (3) is not facing up.

STEP 2

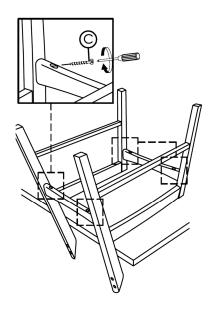

- a) Place assembly from STEP 1 on a flat elevated surface (e.g. table top) as shown to access screw holes on Stretcher.
- b) Use FH Screw (C) to fasten Stretcher to Side Frames. Use a Phillips screwdriver to drive (C). Do not over-tighten (C).

STEP 3

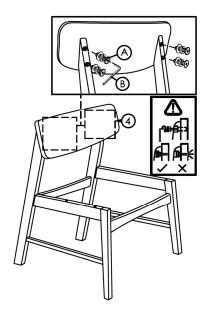


- a) Set assembly from STEP 2 right-side up.
- b) Position Top Rest (4) to align screw holes on (4) to screw holes on rear leg of each Side Frame.
- c) Use Screw (A) fitted with Flat and Spring Washer to fasten (4) to upper rear leg of Side Frame.
- d) Use Allen Key (B) to drive (A).

 Do not tighten (A) completely until all 4 screws are in place.


 Do not over-tighten (A).

STEP 4

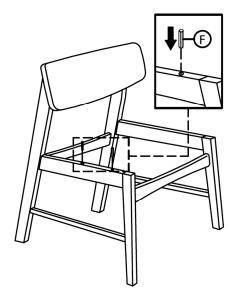


 a) Insert Wood Dowel (F) into the designated hole on top rail of Side Frame.

STEP 6

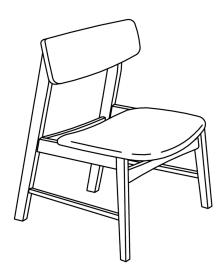

Set the chair right-side up. The assembly of the chair is complete.

STEP 5

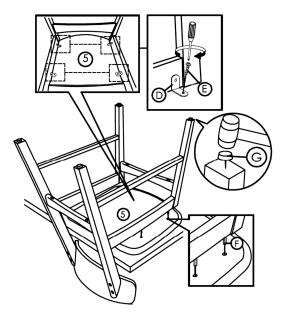

- a) Place Cushion Seat (5) bottom-side up on a flat elevated surface (e.g. table top) as shown
- b) Attach Side Frames to (5) via Wood Dowel (F) on top rail of Side Frame installed in STEP 4.
- c) Fasten Side Frame to (5) using L-Bracket(D) and Screw (E). Do not tighten (E)completely until all the screws are in place.
- d) Use a mallet to gently nail PVC Nail (G) to bottom of leg.