



Assembly Instructions

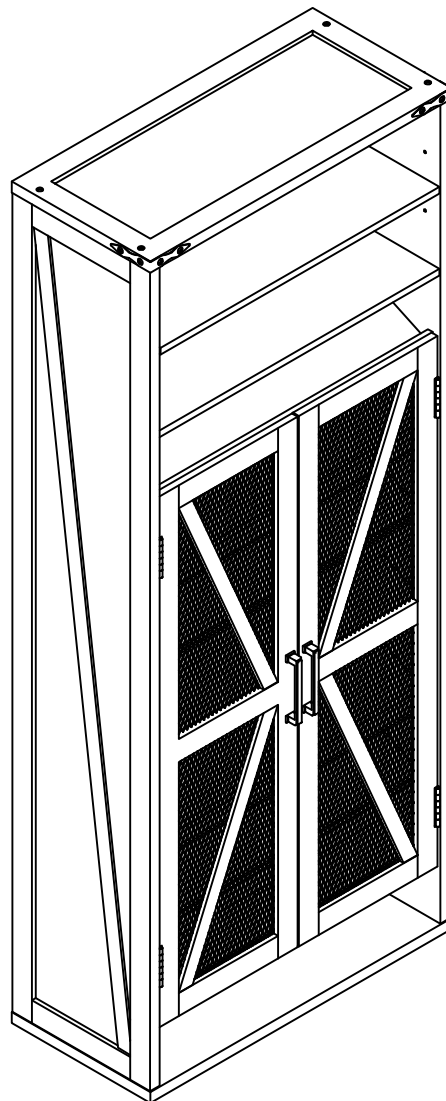


General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

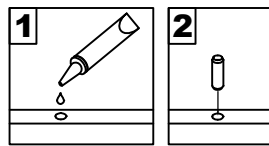


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

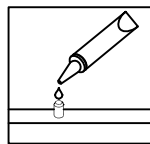


- VI. A Phillips head screwdriver is required for the assembly of this product .

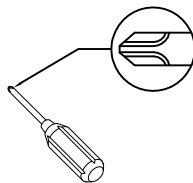



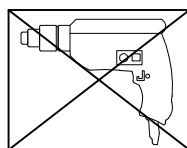



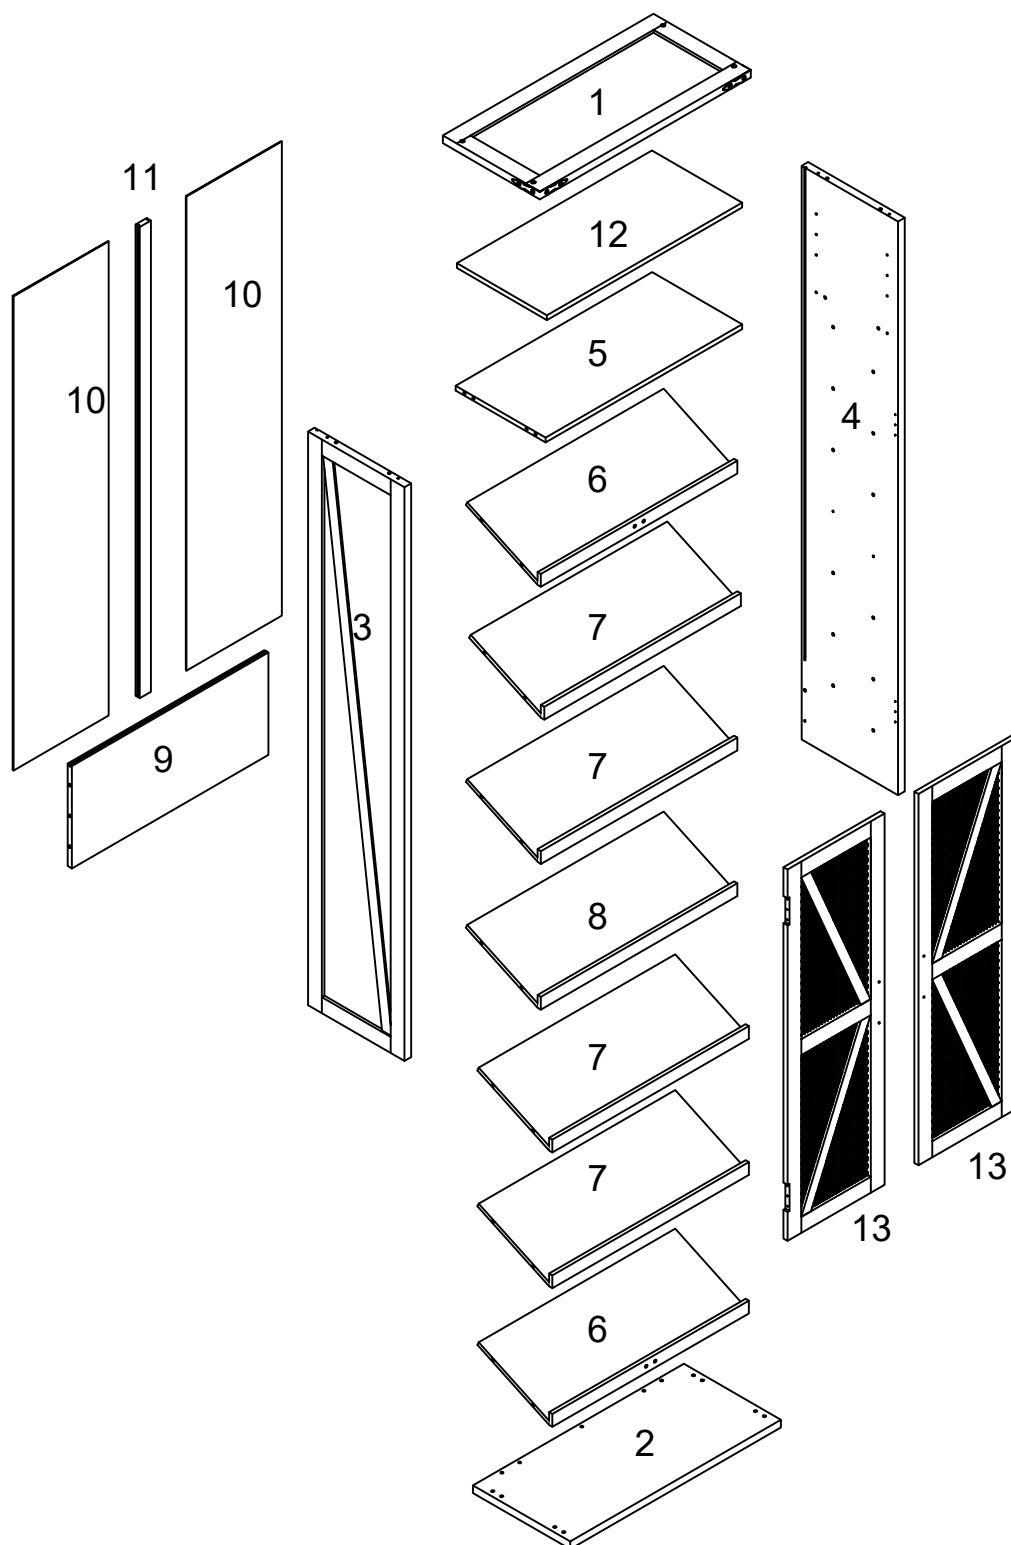
















- VII. Power tools should not be used to assemble this product .




Parts List



Hardware List


A		Ø8x30mm	Wooden dowel	41 pcs
B		Ø6x35mm	Cam bolt	12 pcs
C		Ø15x11mm	Cam lock	8 pcs
D		Ø15x9mm	Cam lock	4 pcs
E		Ø30mm	Sticker	12 pcs
F		M 4	Hex Key	1 pc
G		Ø6x50mm	Screw	10 pcs
H			Screw	4 pcs
I		Ø3.5x19mm	Screw	12 pcs
J			Handle	2 pcs
K		Ø4x19mm	Bolt	4 pcs
L			Three fold hinge	4 pcs
M		Ø3.5x15mm	Screw	20 pcs
N		Ø5x13x26mm	Shelf holder	4 pcs
O			Plastic wedge	12 pcs
P		Ø3x17mm	Screw	12 pcs
Q			Anti-inversion hardware	4 pcs
R		Ø4*15mm	Screw	4 pcs
S			House lizard	4 pcs
T		Ø4x35mm	Screw	4 pcs
U			Strip	2 pcs
V		Ø3*12mm	Screw	2 pcs
W			Glue tube	1 pcs

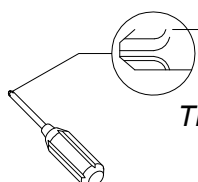


Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*


Step 1

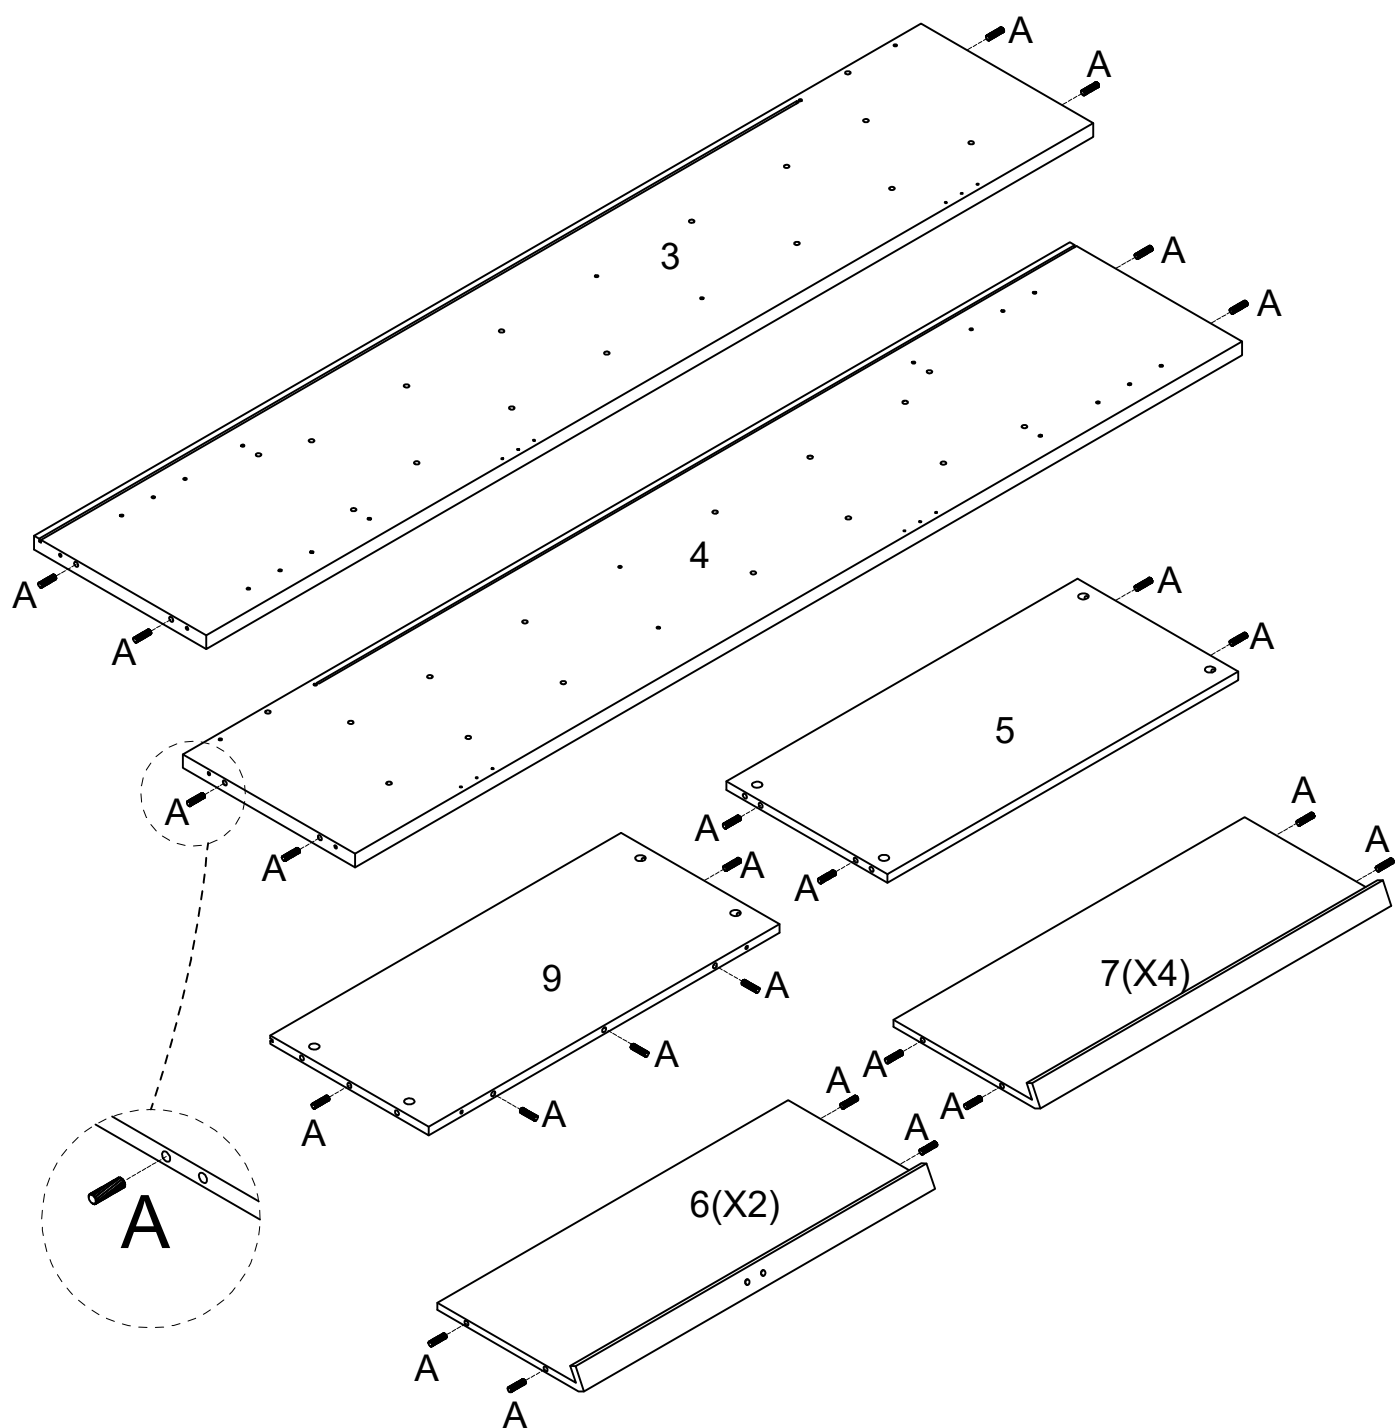



A

X41

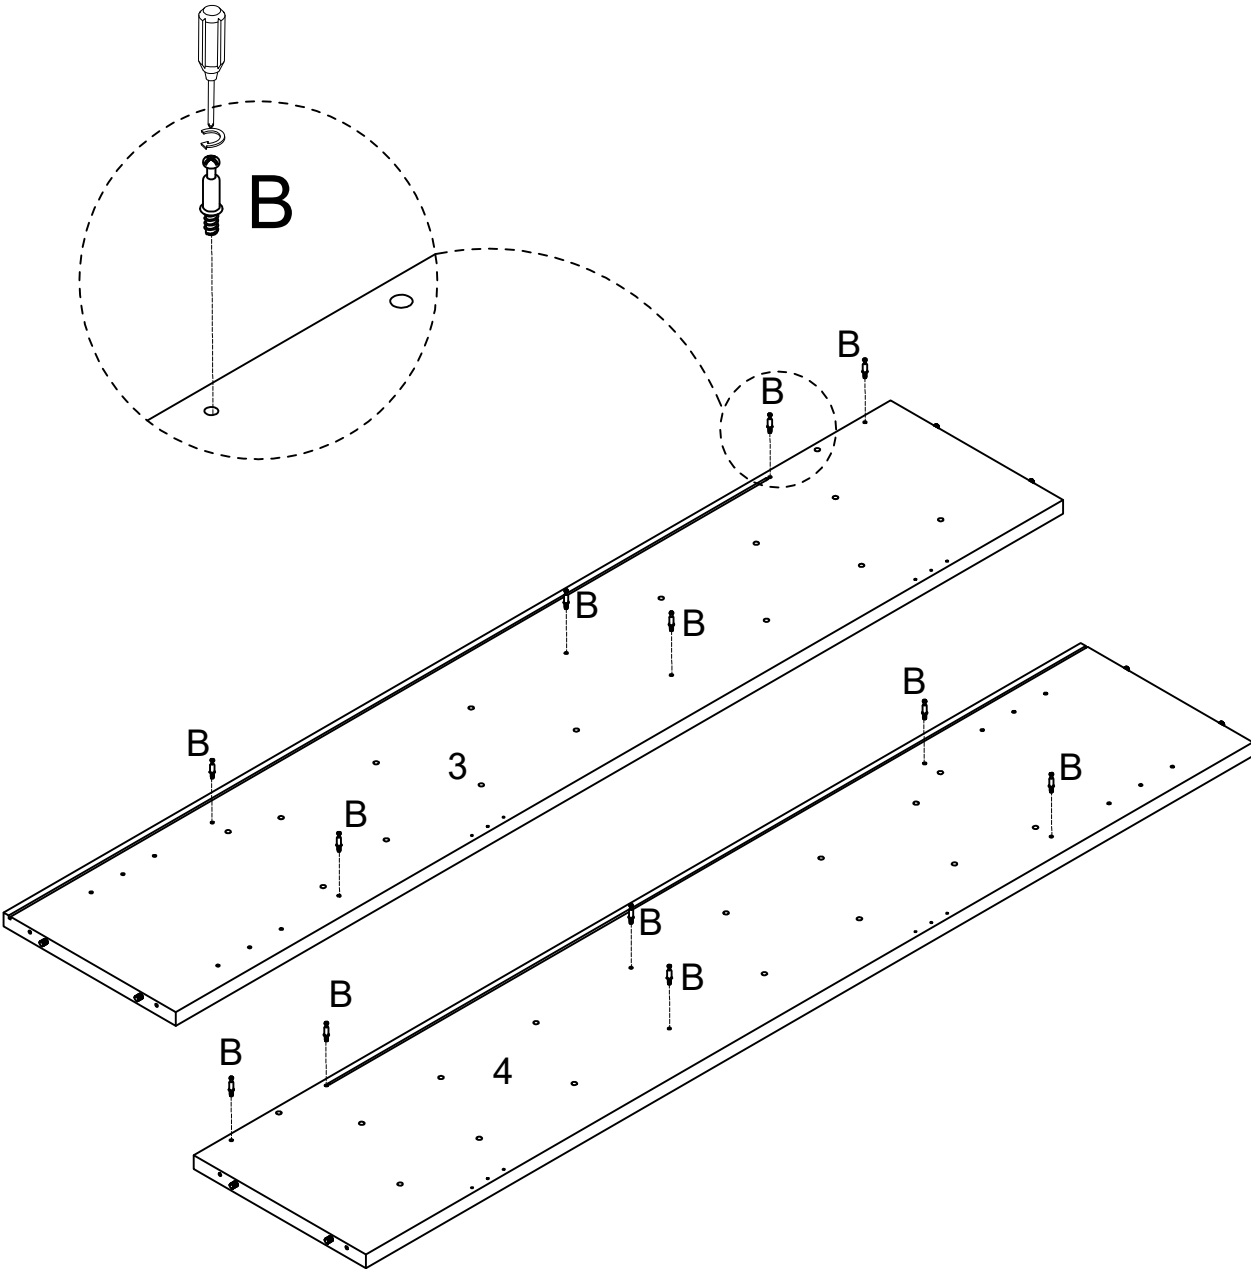

Step 2

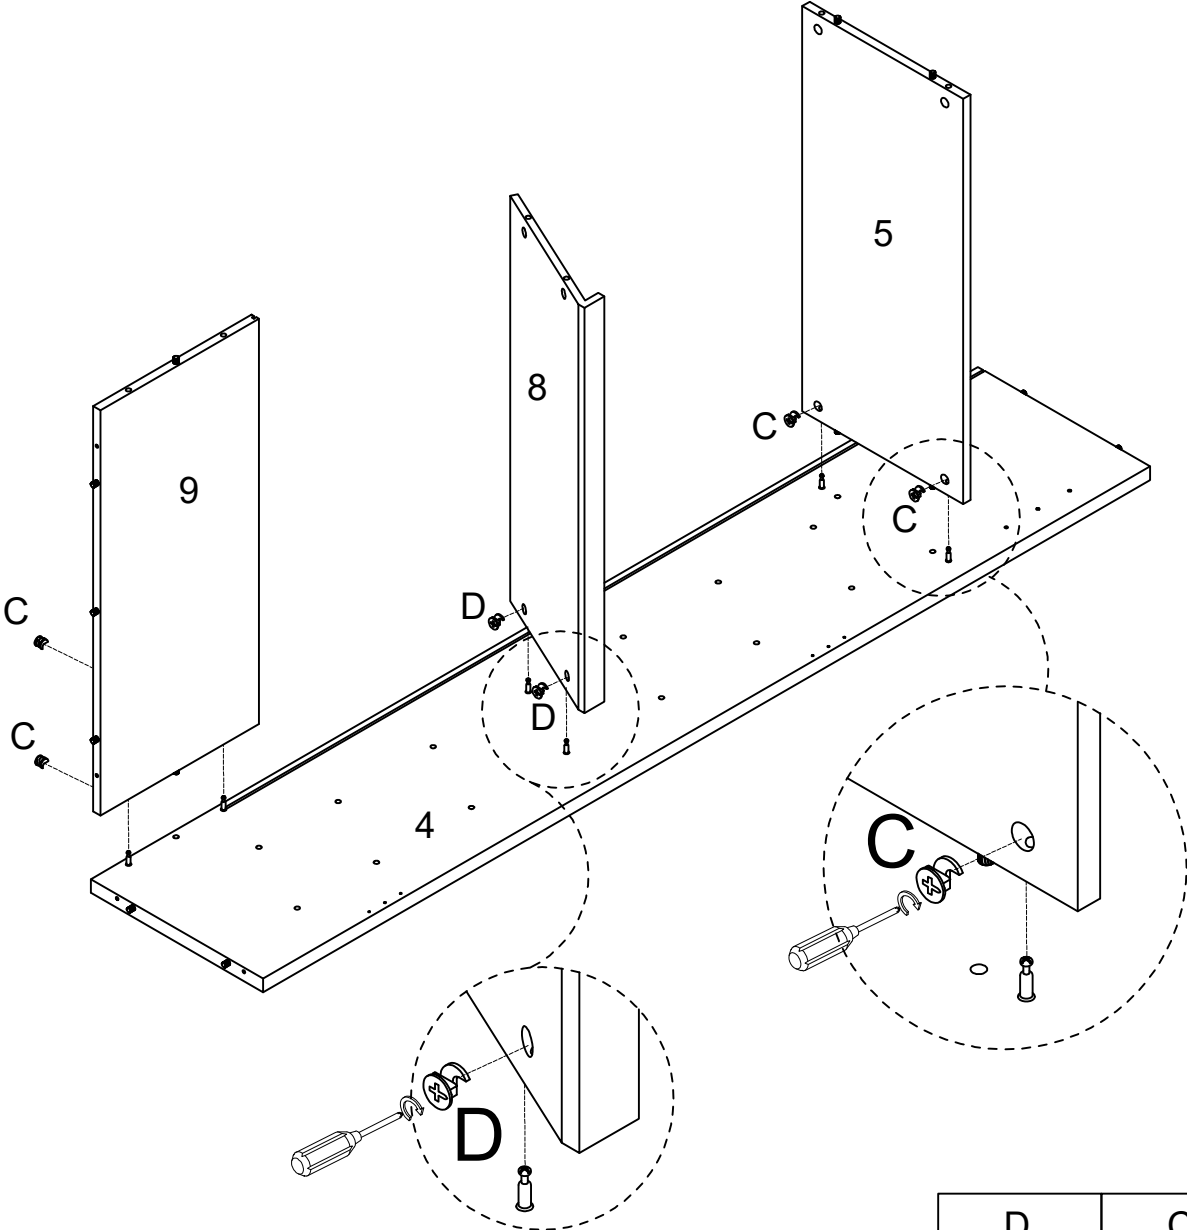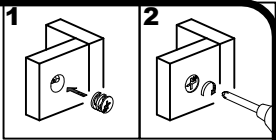


B

X12

Step 3





D	C
	
X2	X4

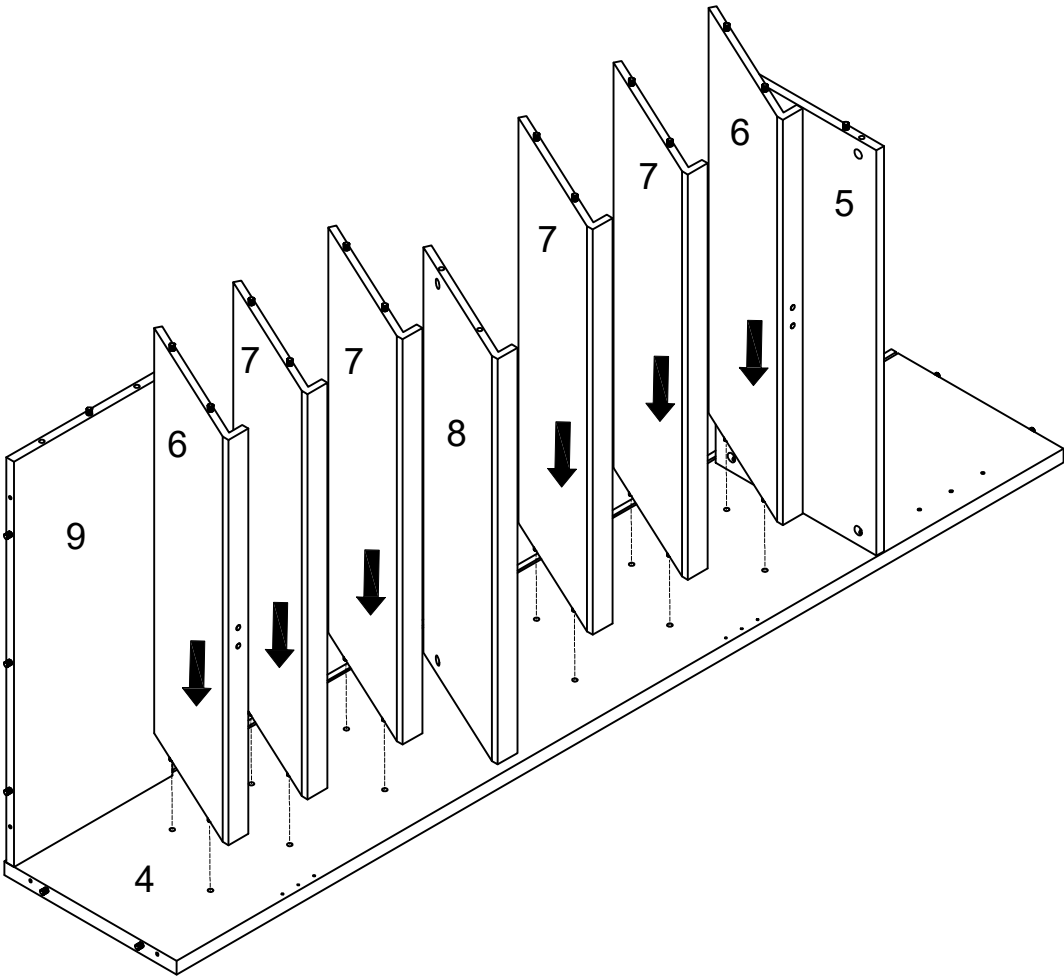Step 4






Step 5

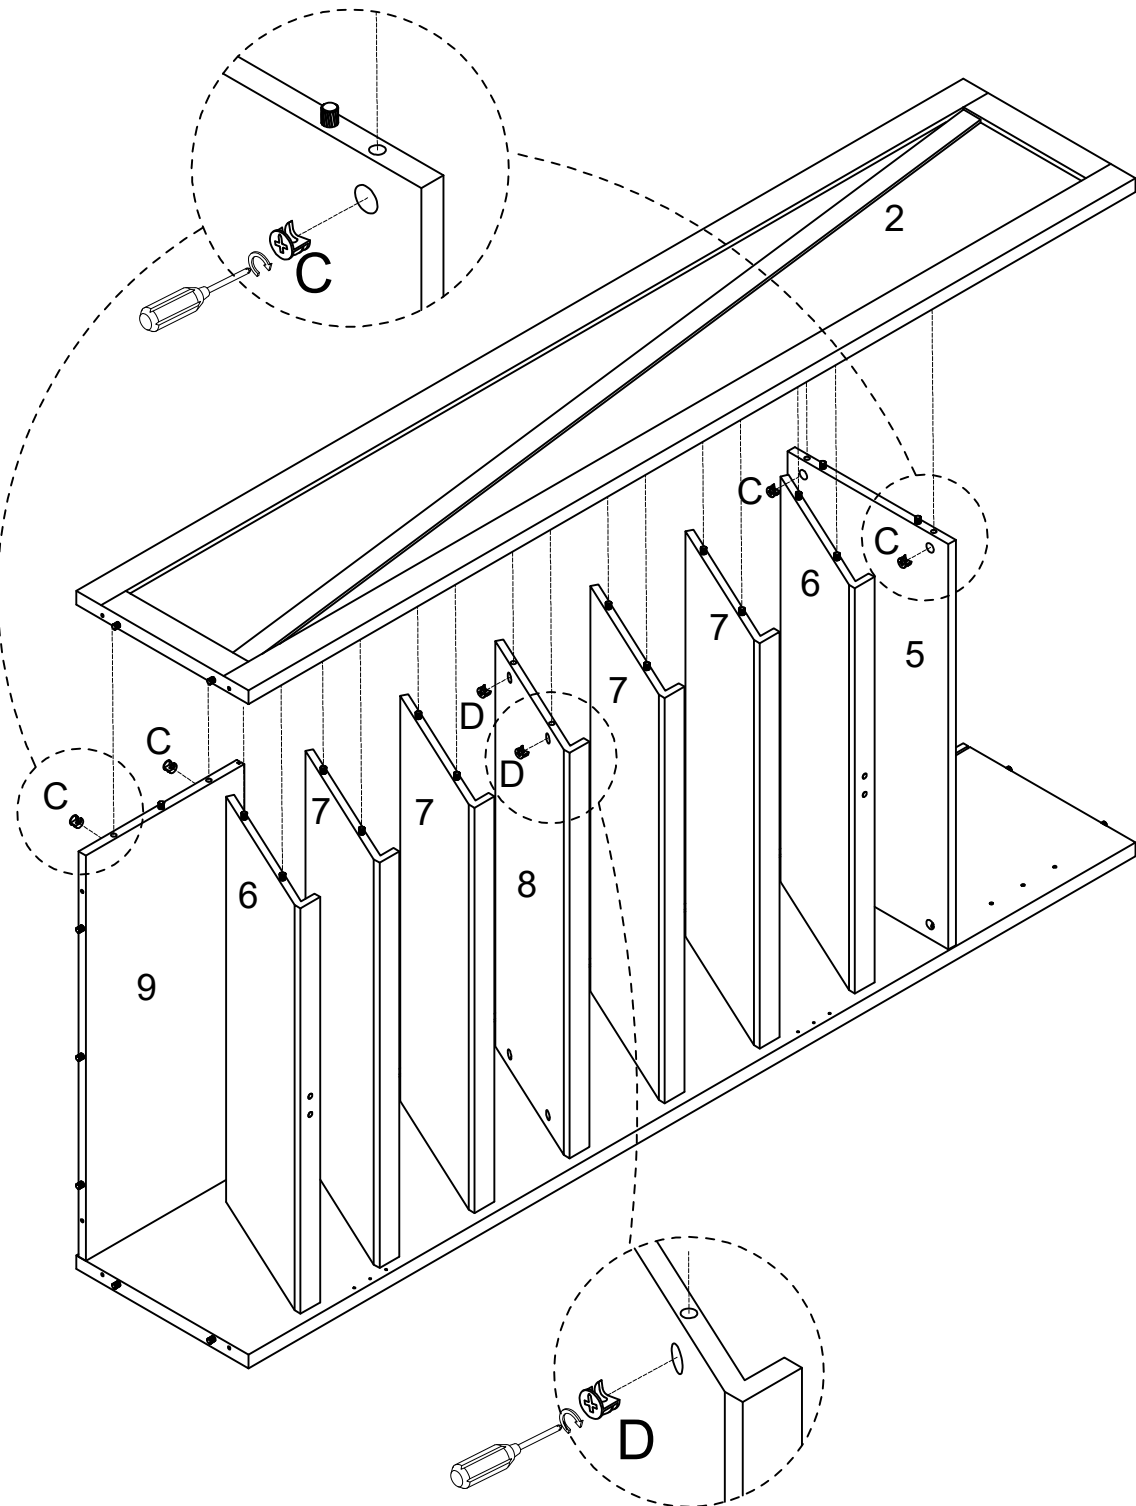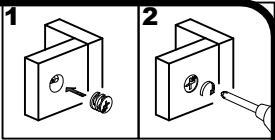


D	C
X2	X4

Step 6

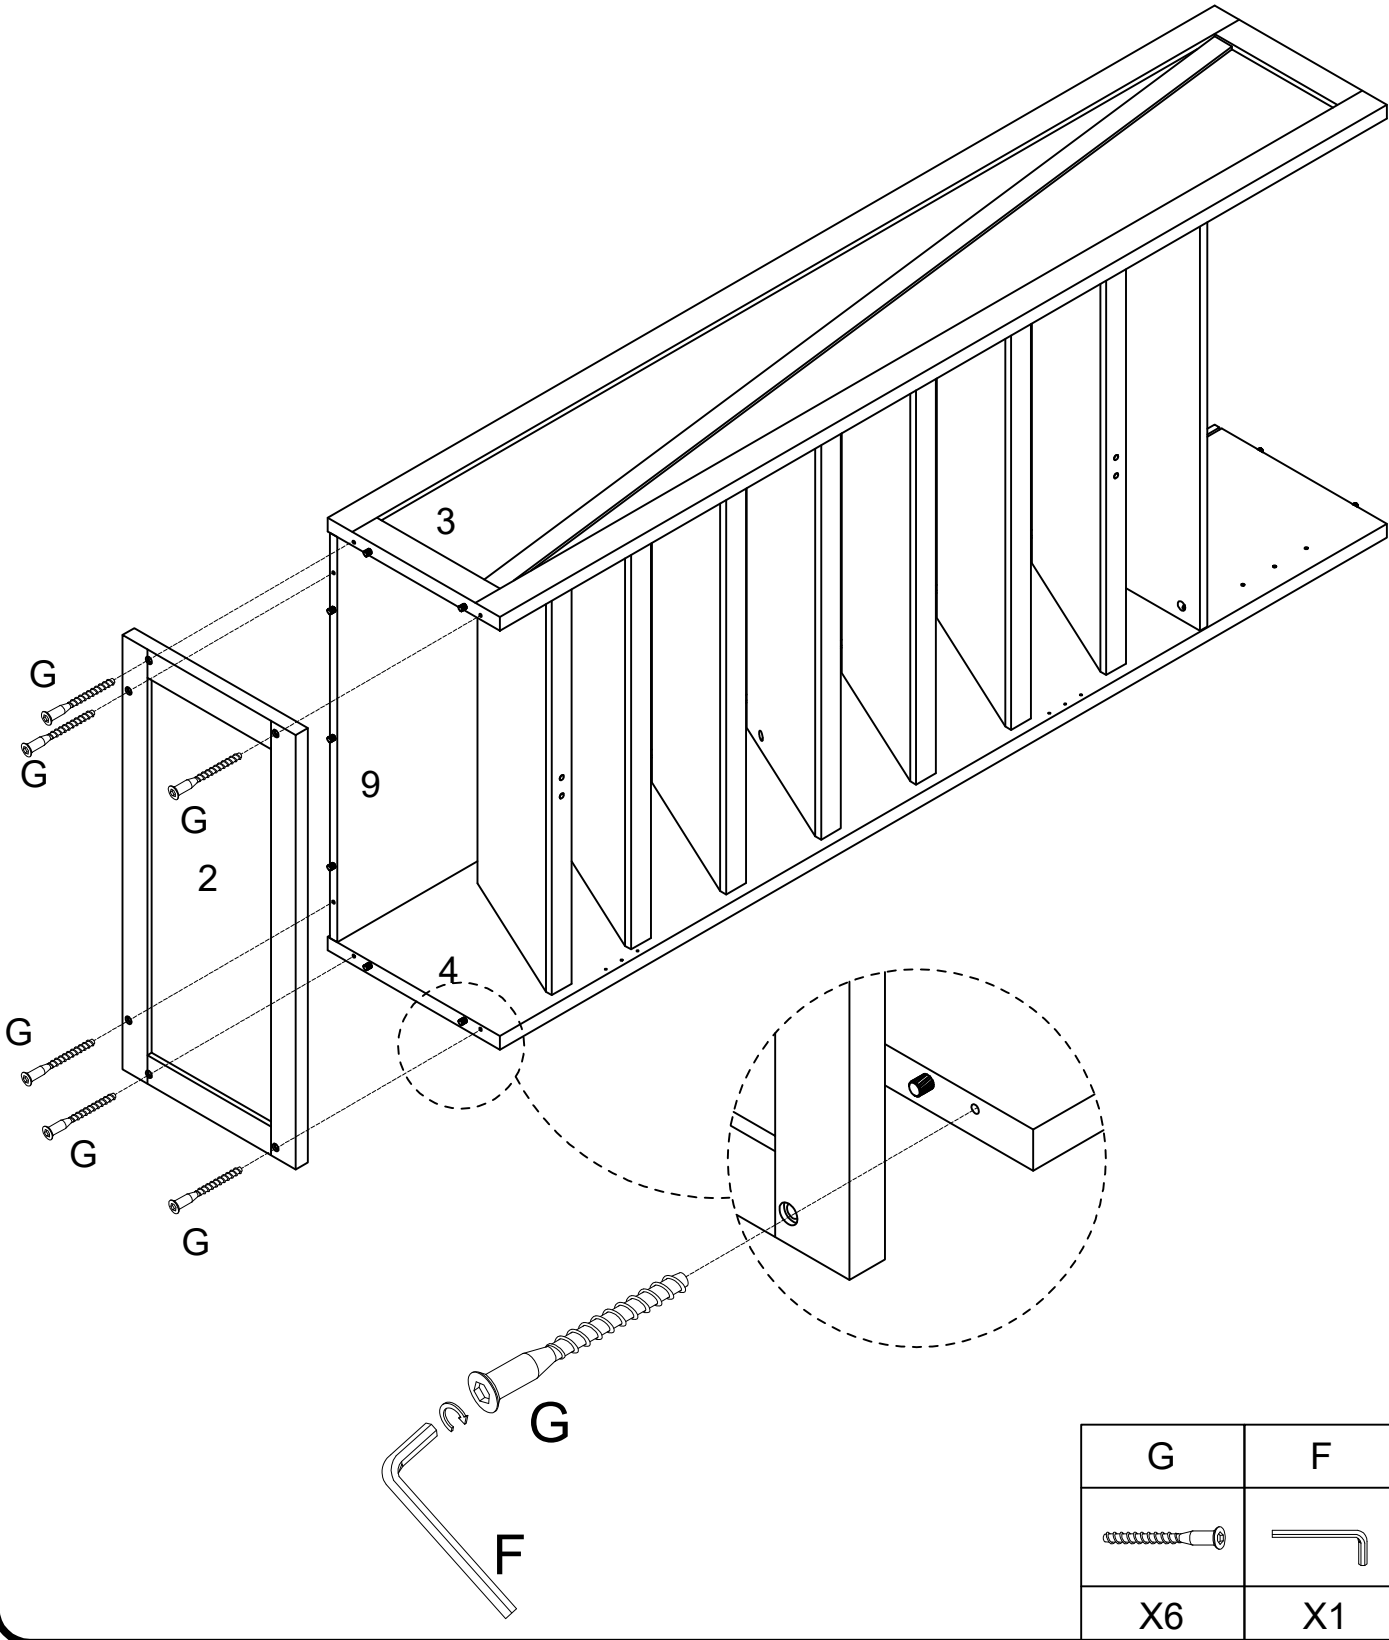




G	F
	
X6	X1

Step 7

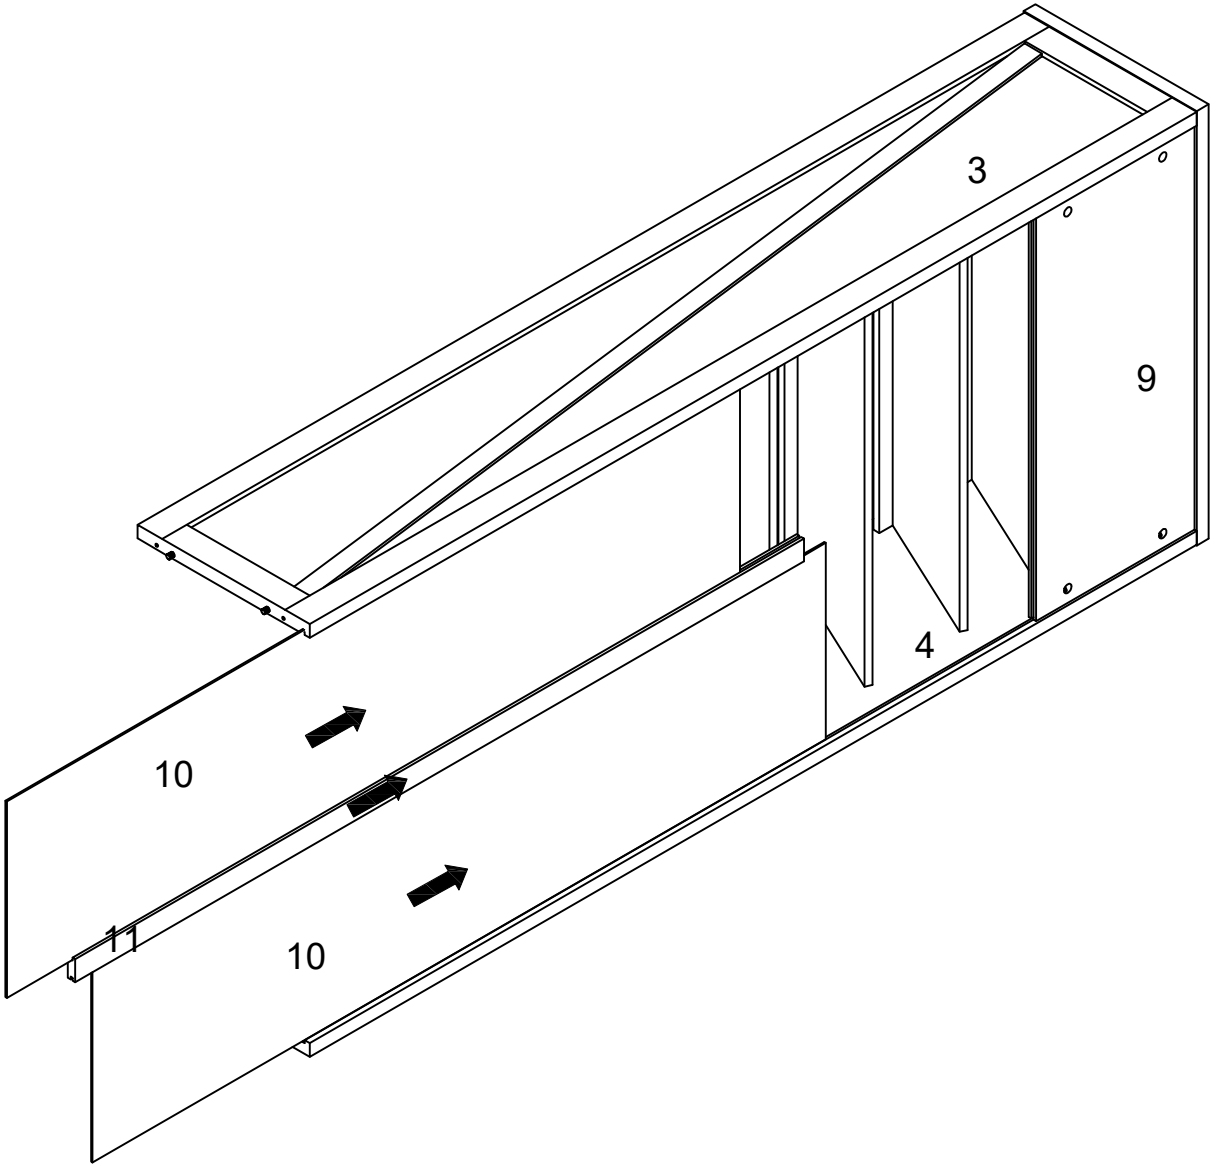


Step 8

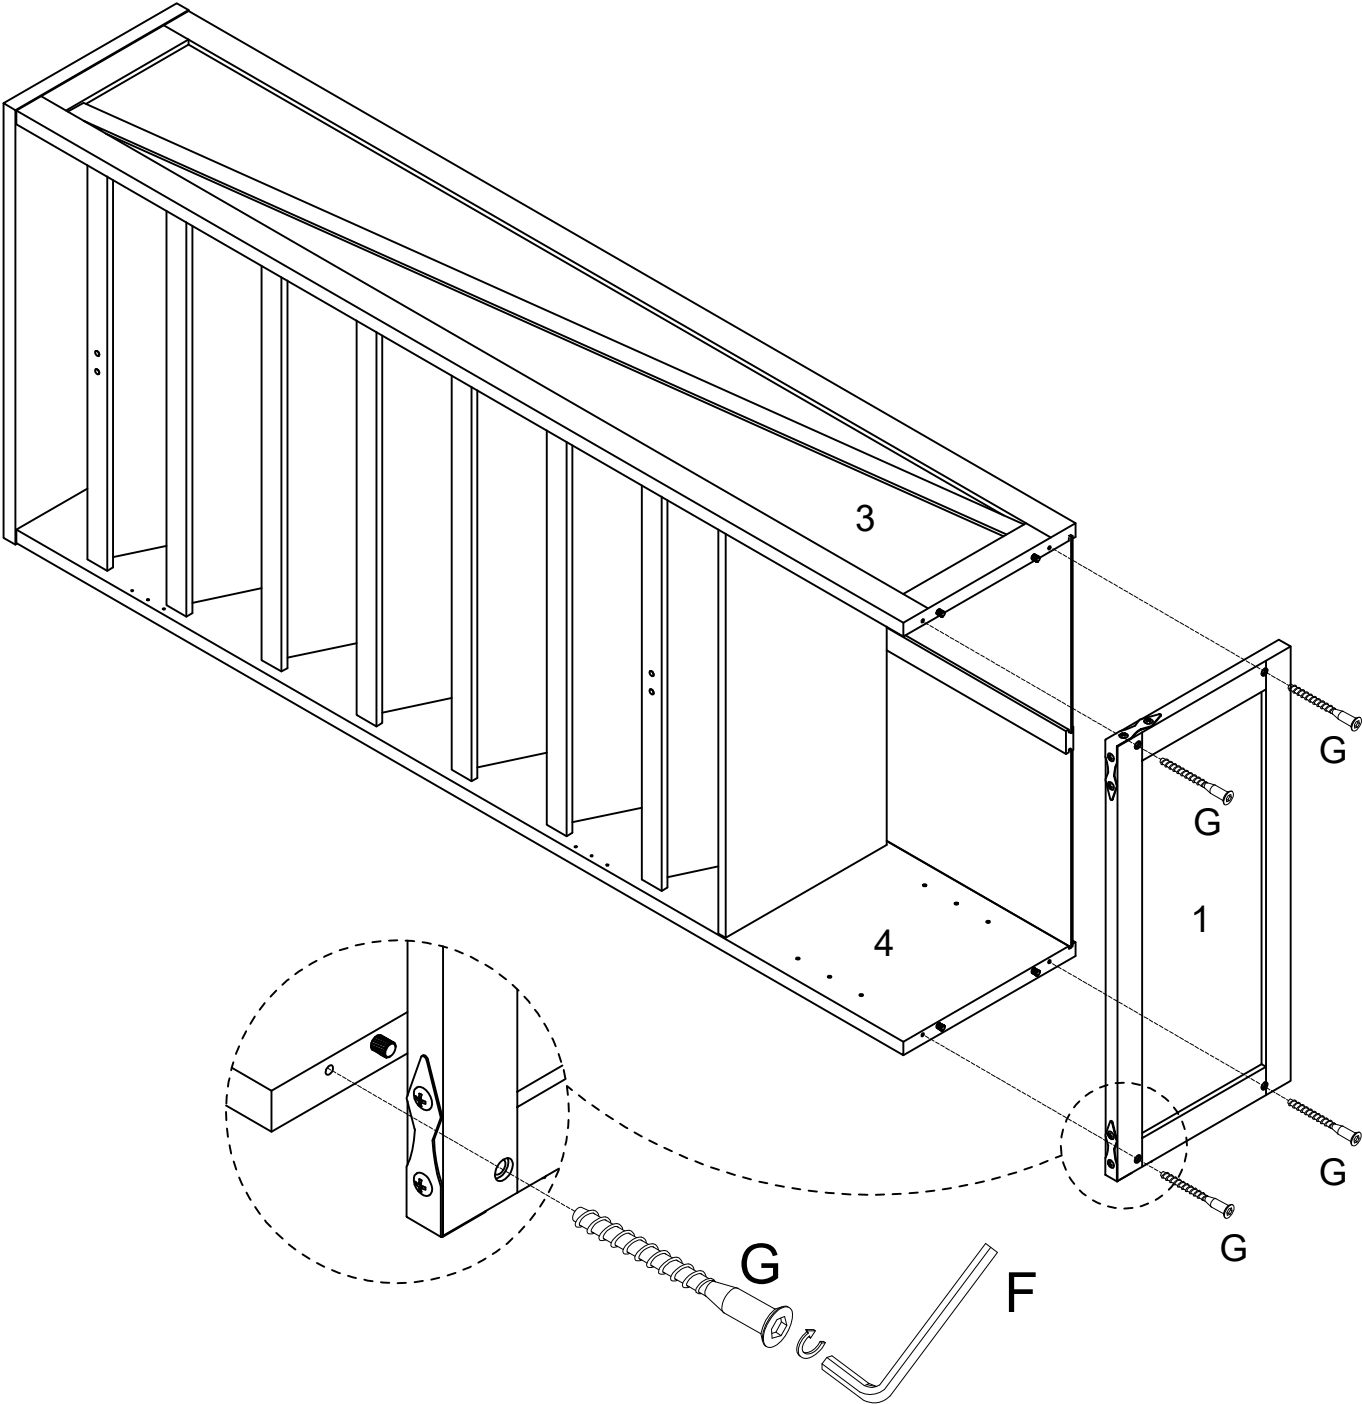


G	F
	
X4	X1



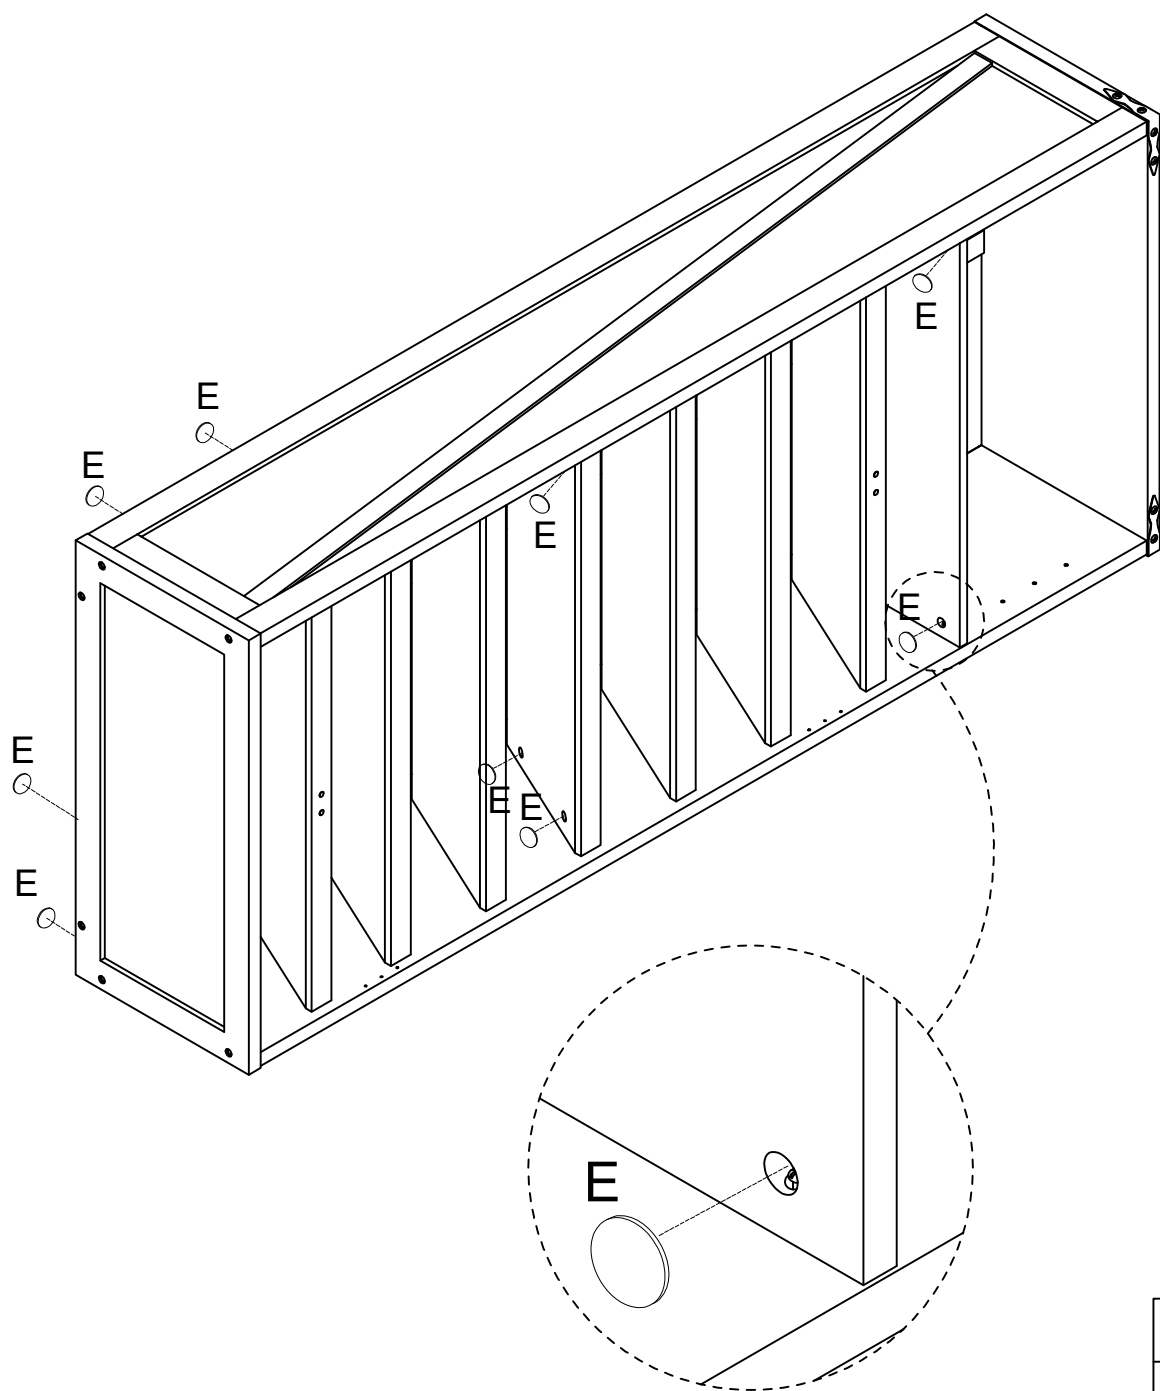

Step 9

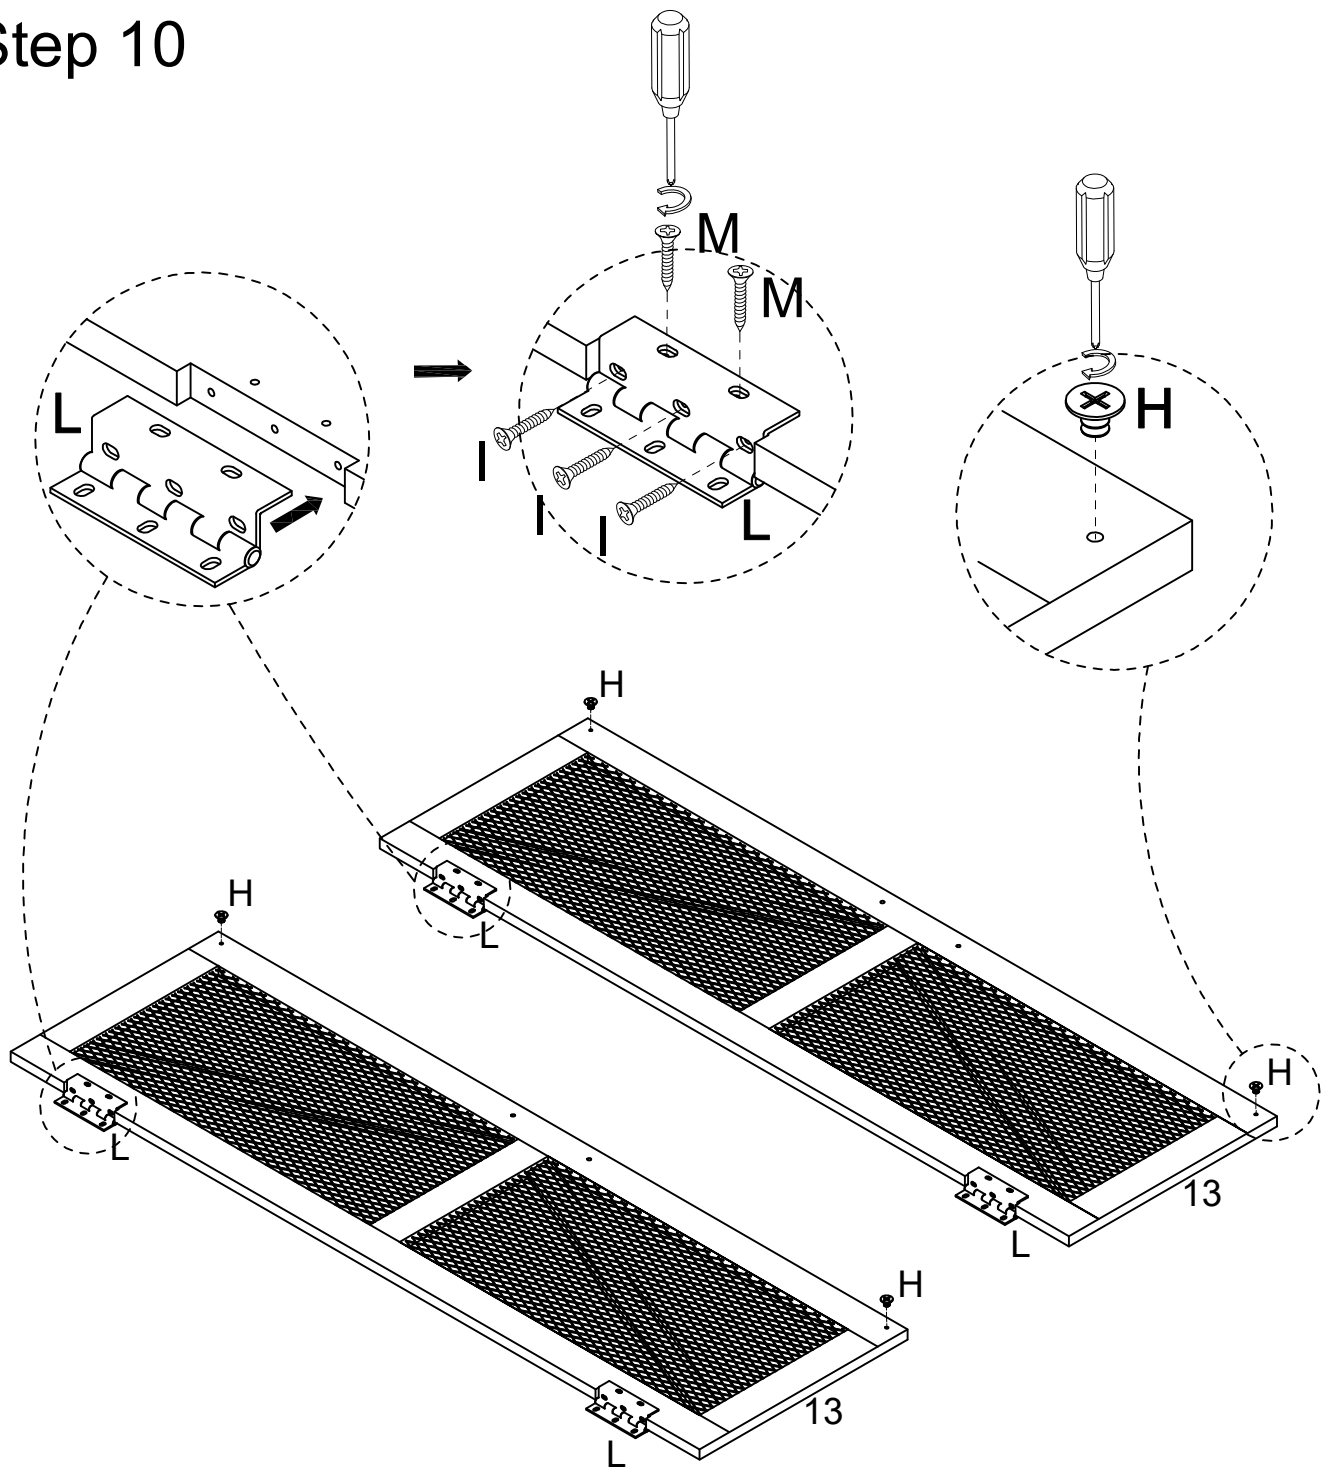



E
O
X12


Step 10




I	H	L	M
			
X12	X4	X4	X8

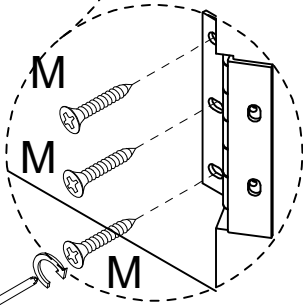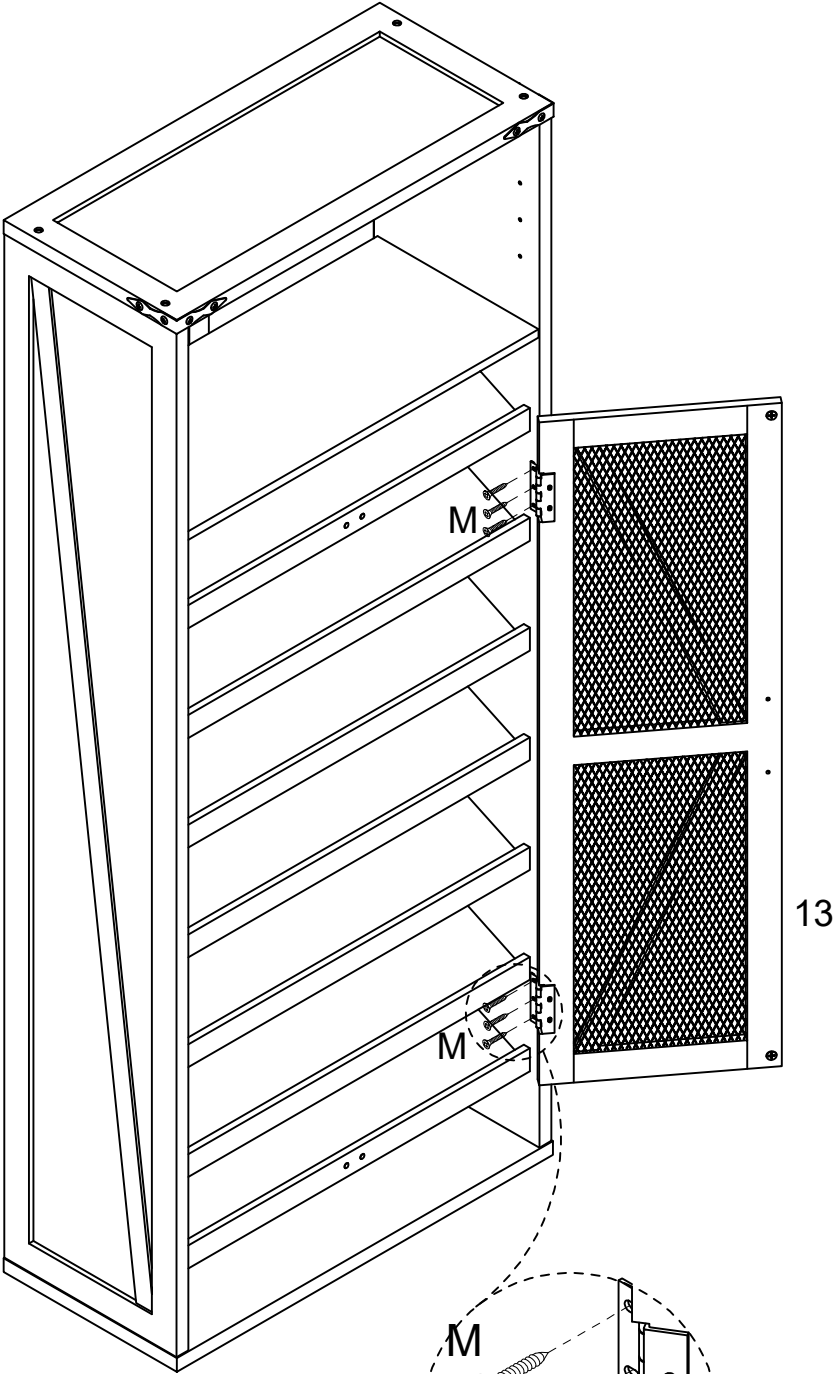

Step 11




M

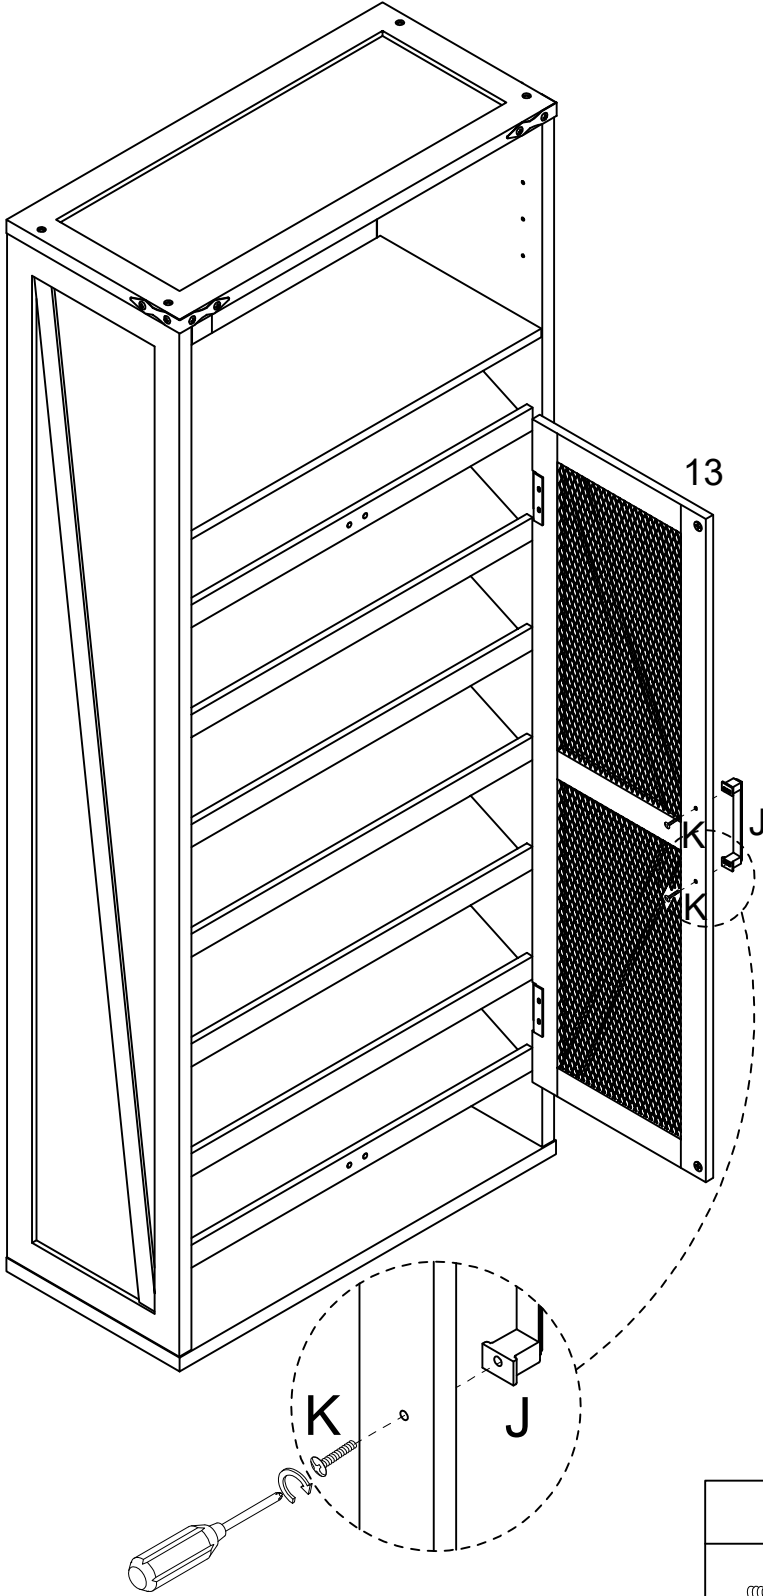X6


Step 12




K	J
	
X2	X1

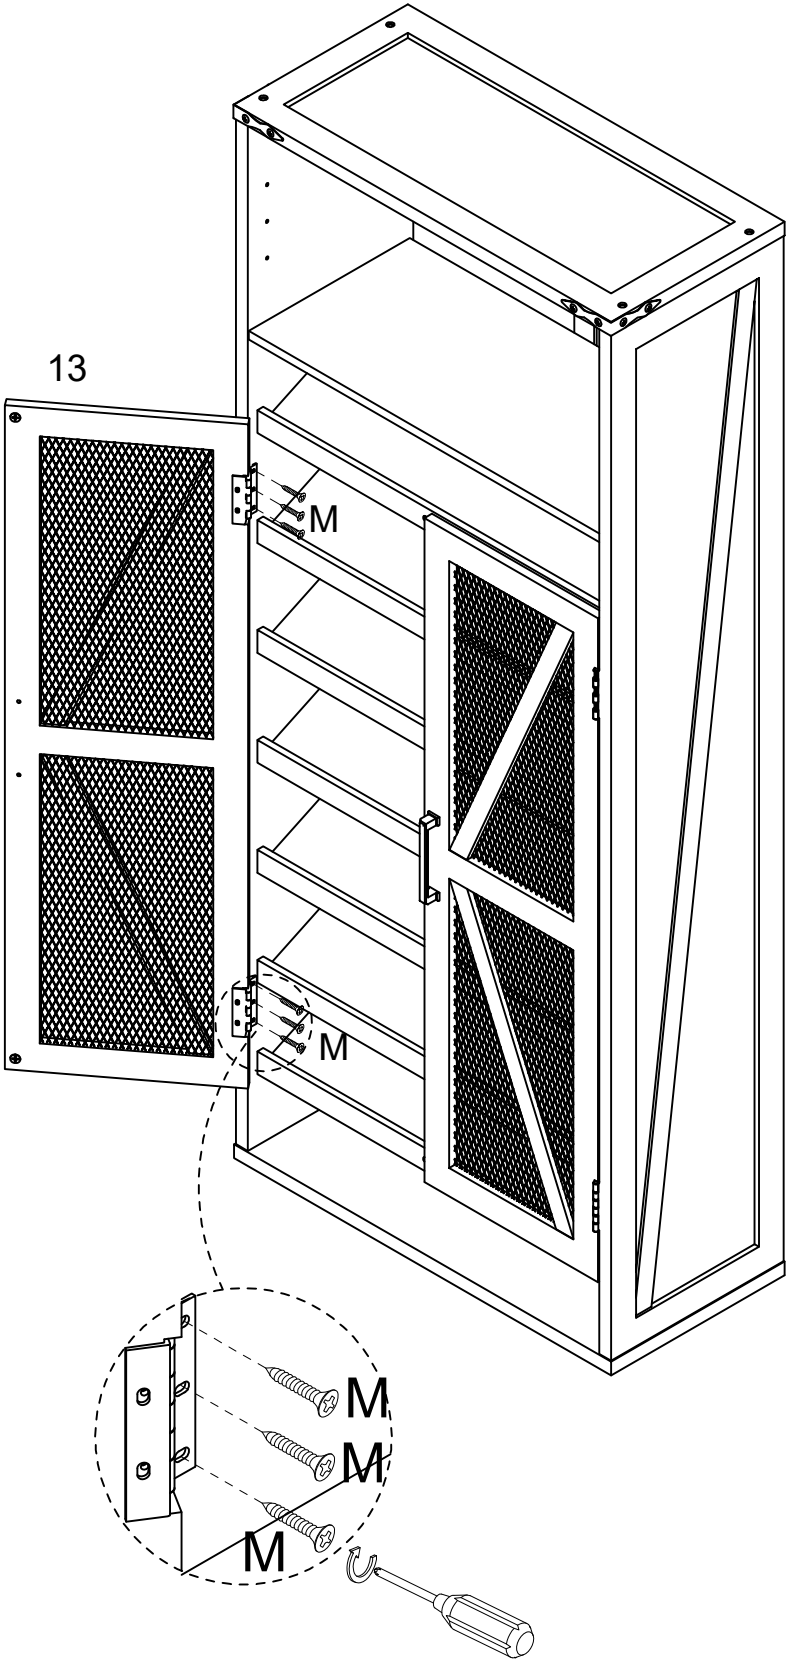

Step 13




M

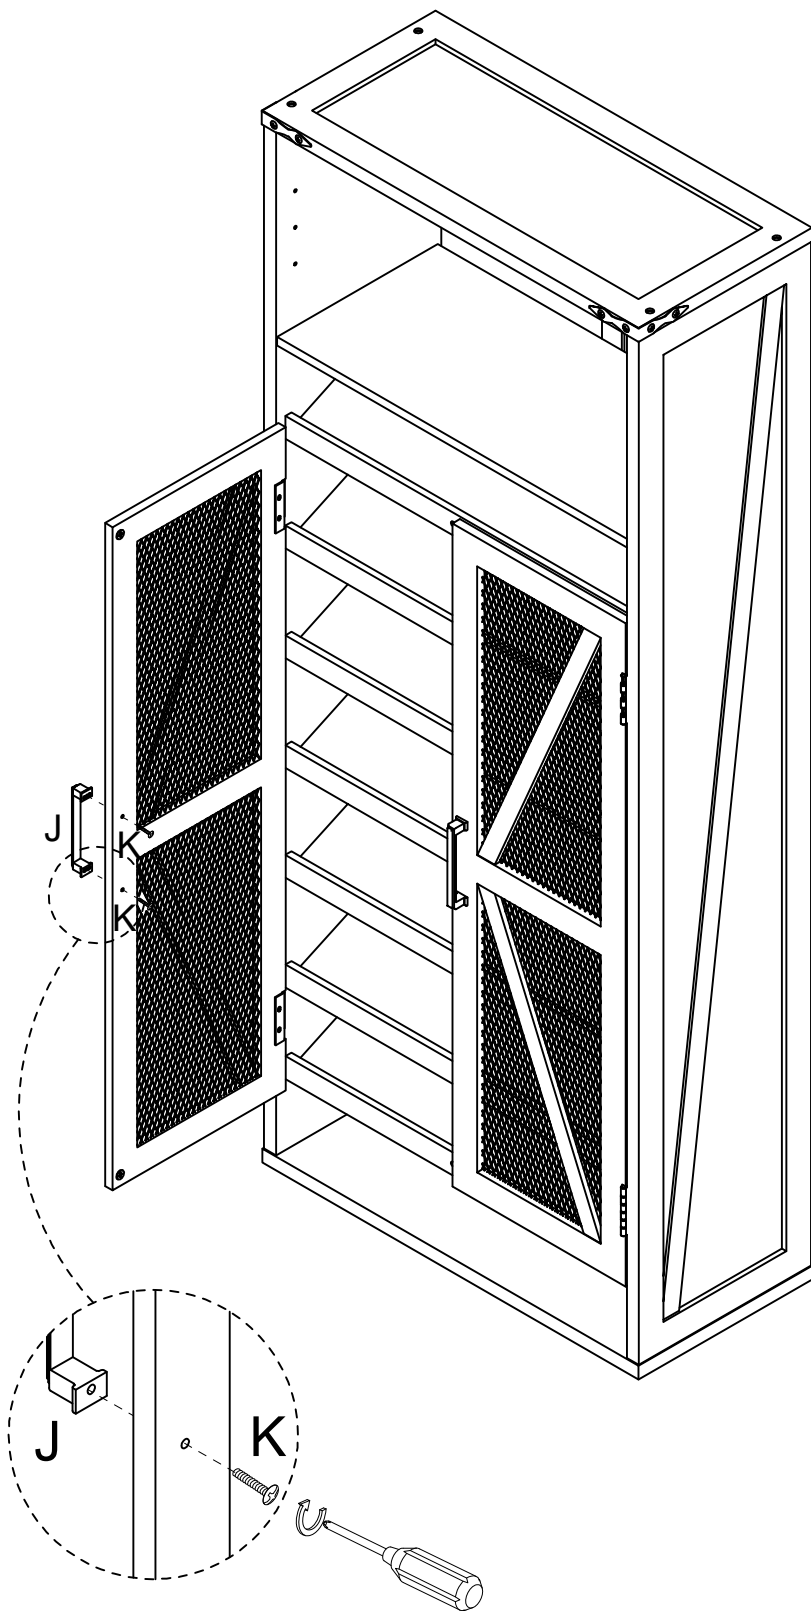X6


Step 14




K	J
	
X2	X1

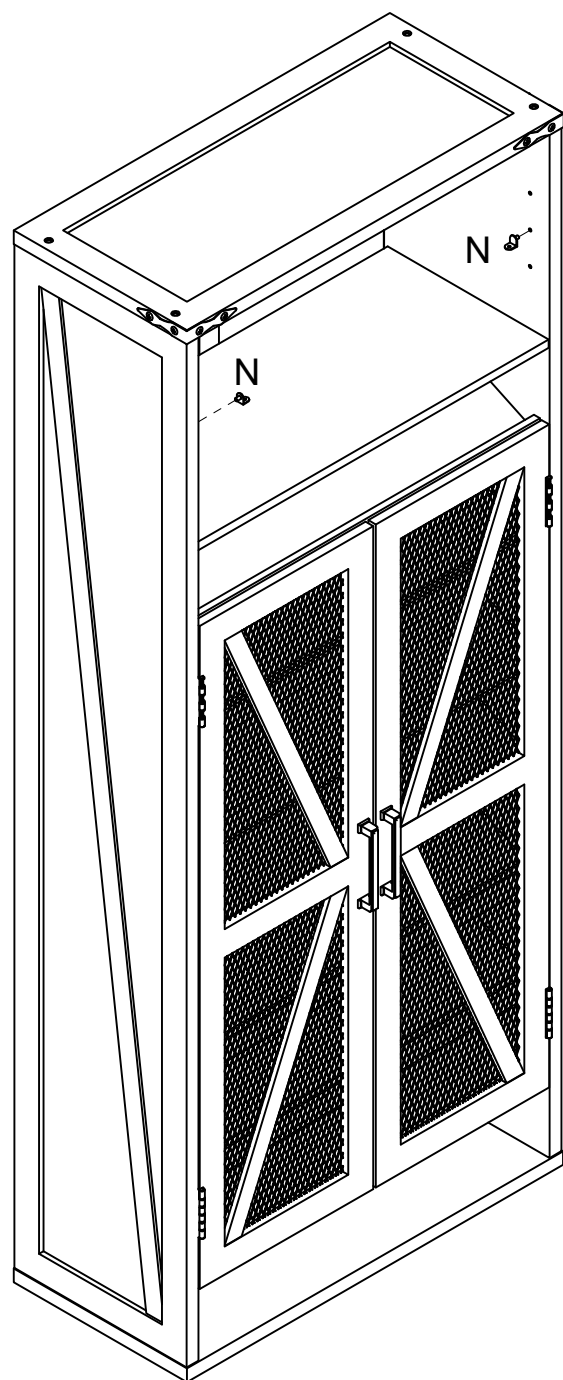Step 15





N

X4

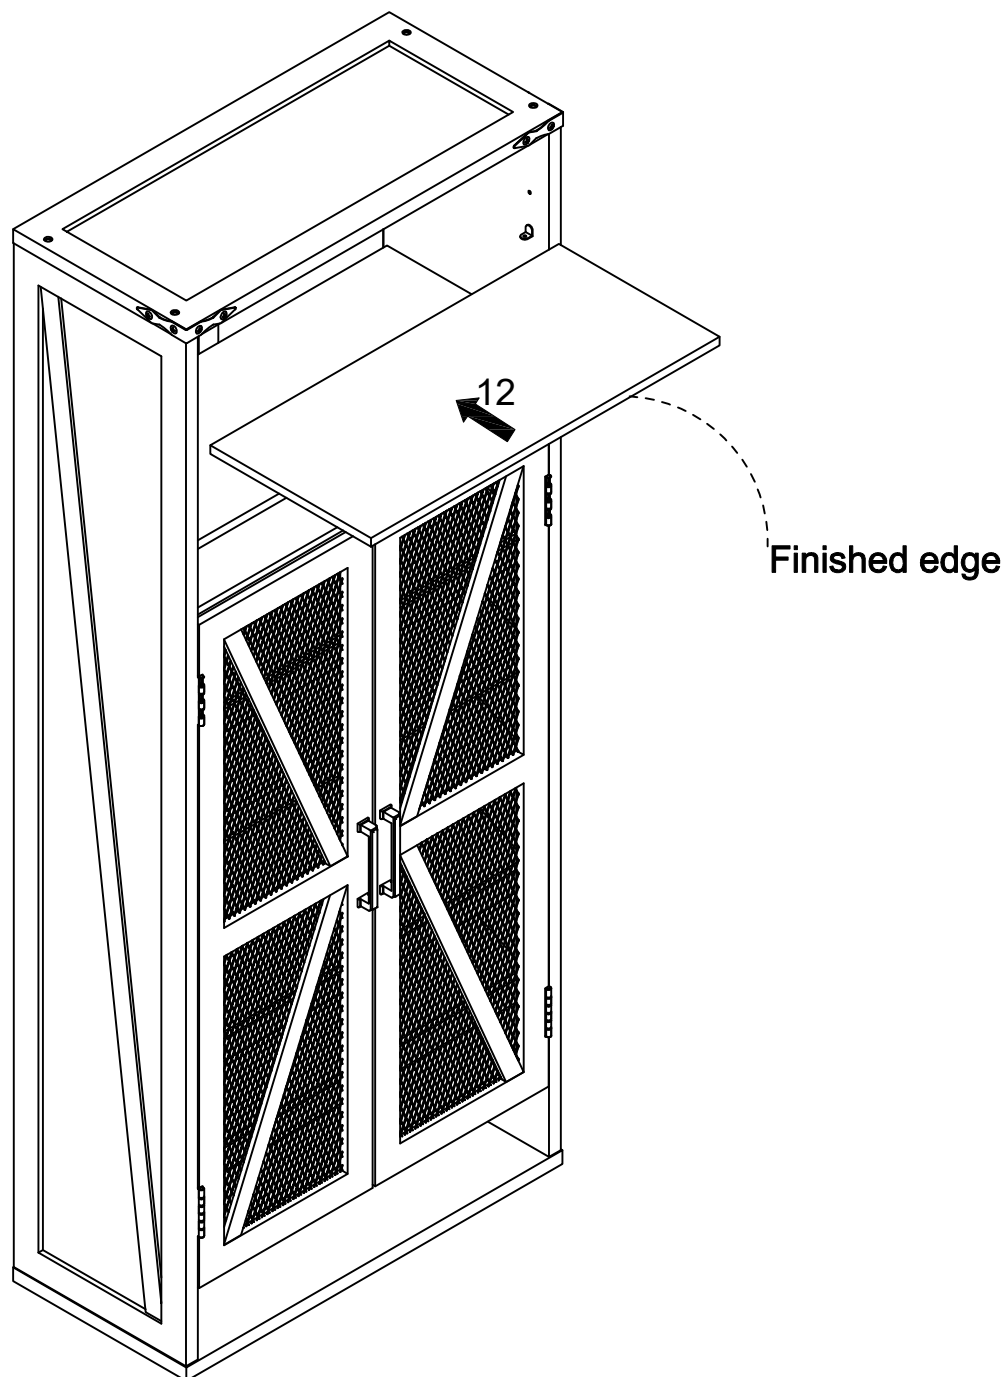Step 16

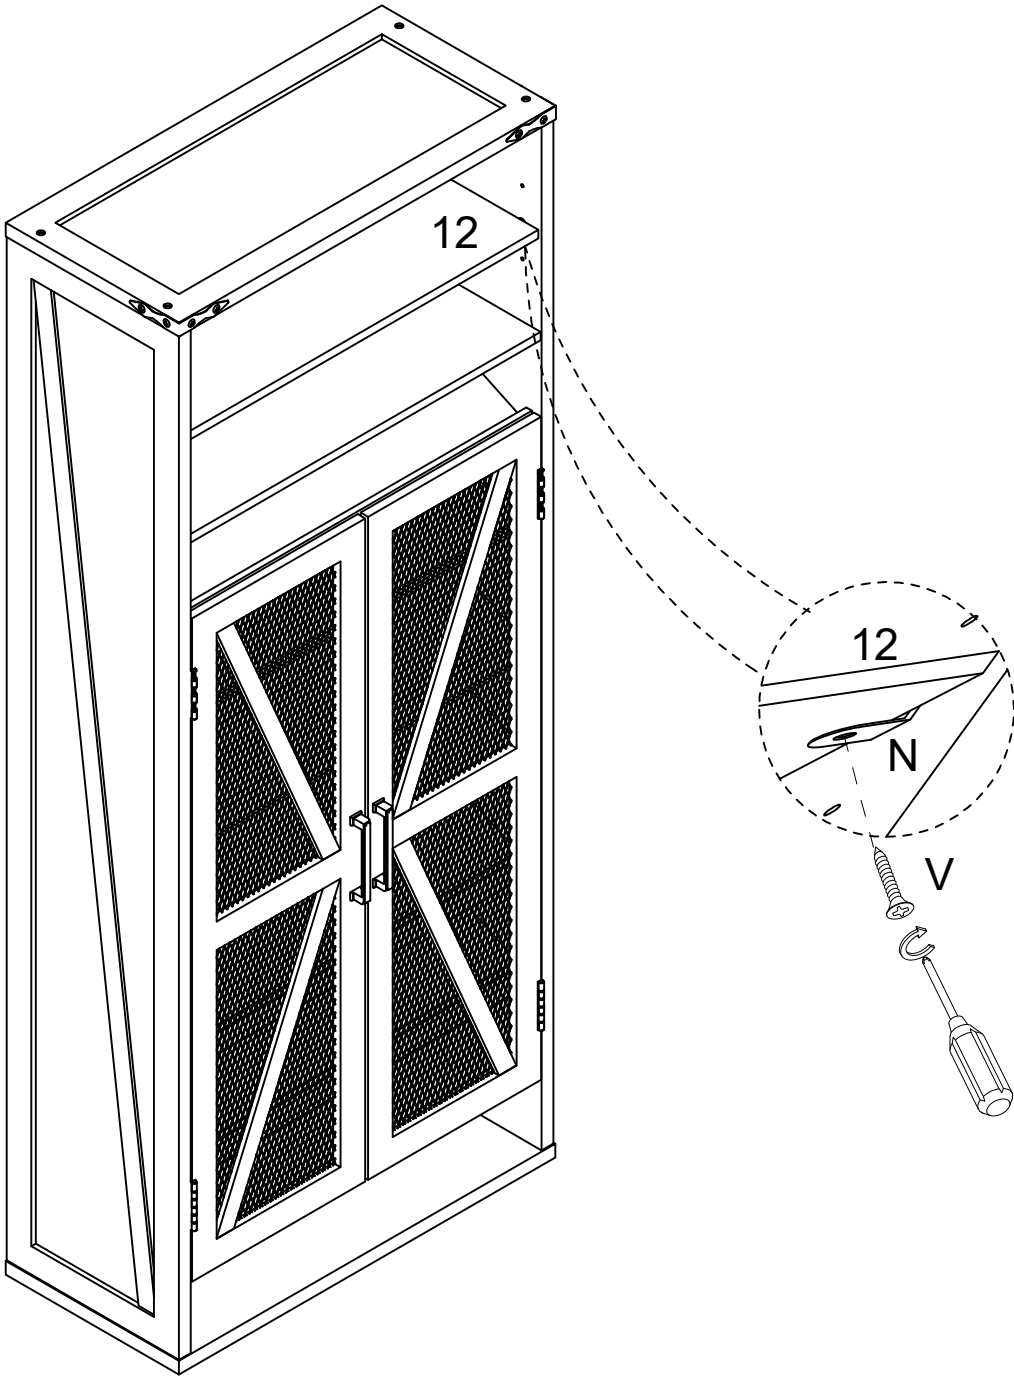


Step 17




V

X2

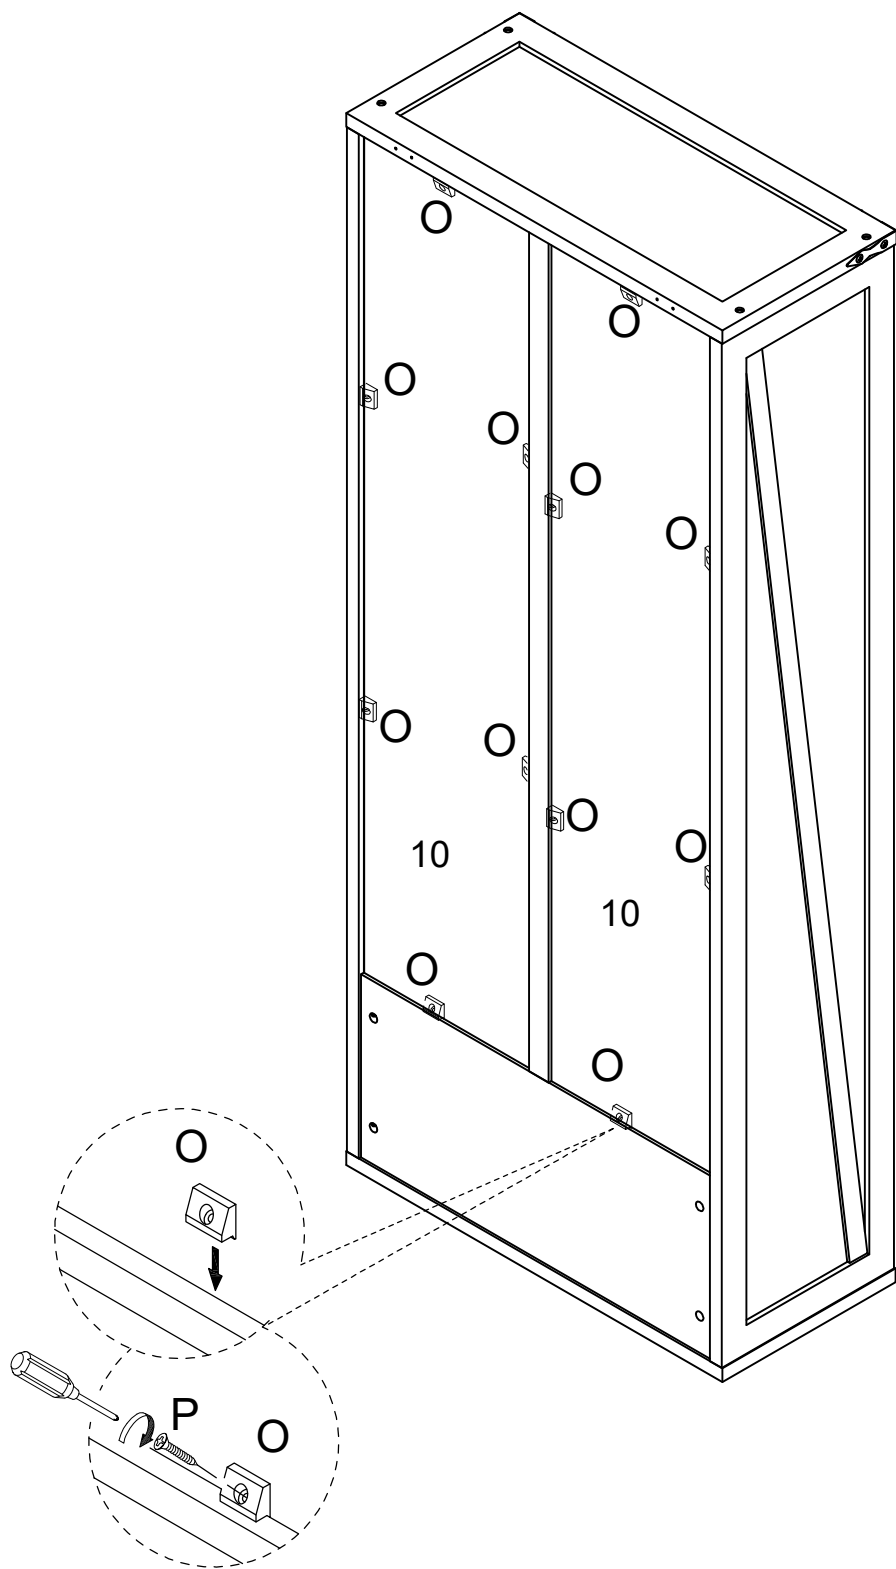

Step 18



O	P
X12	X12

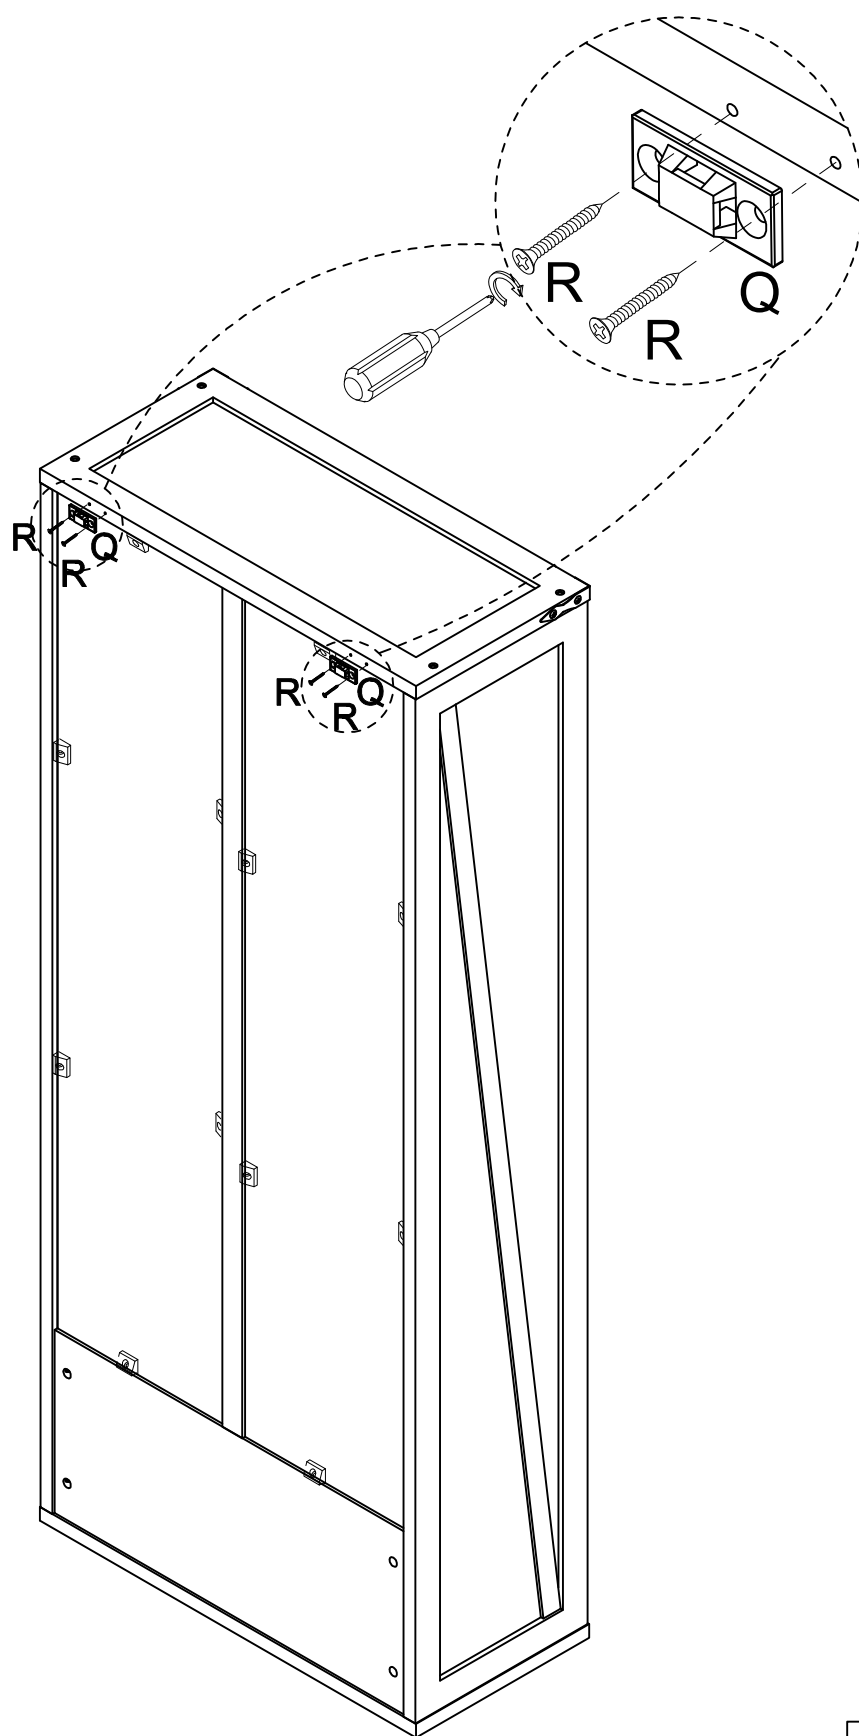
Step 19




Q	R
	
X2	X4

Step 20


Make Four holes 45MM deep

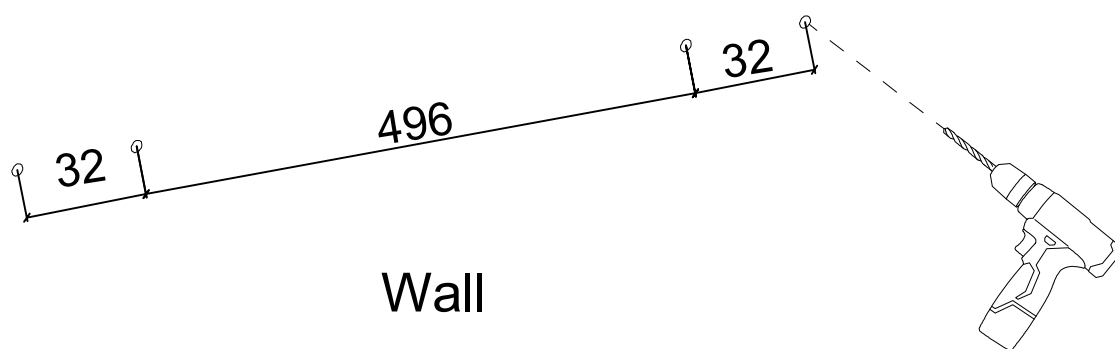


Step 21

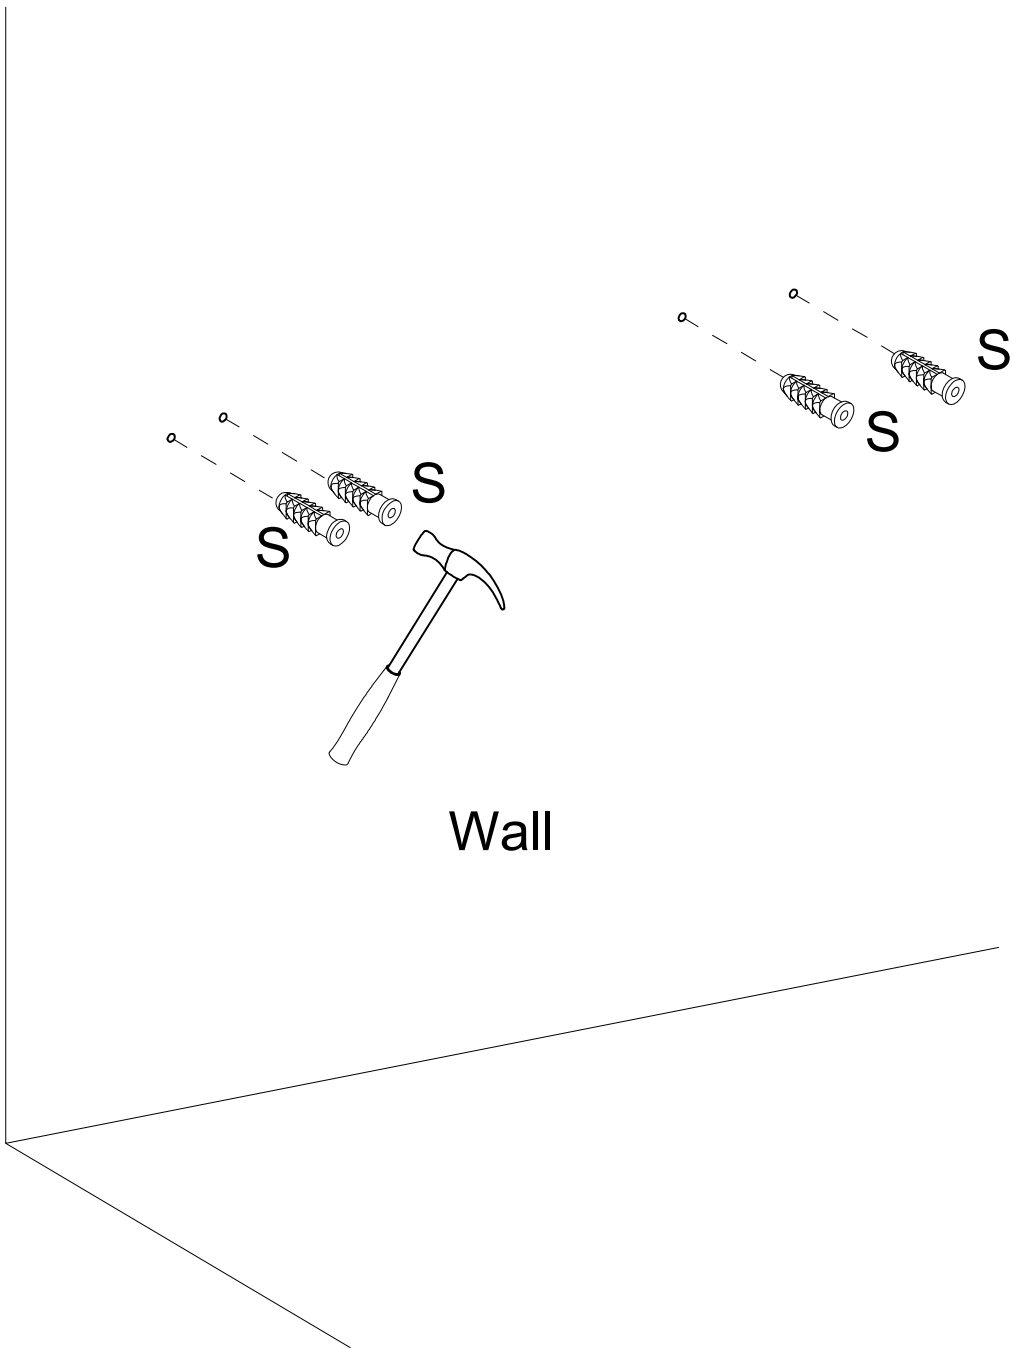



Wall

S

X4

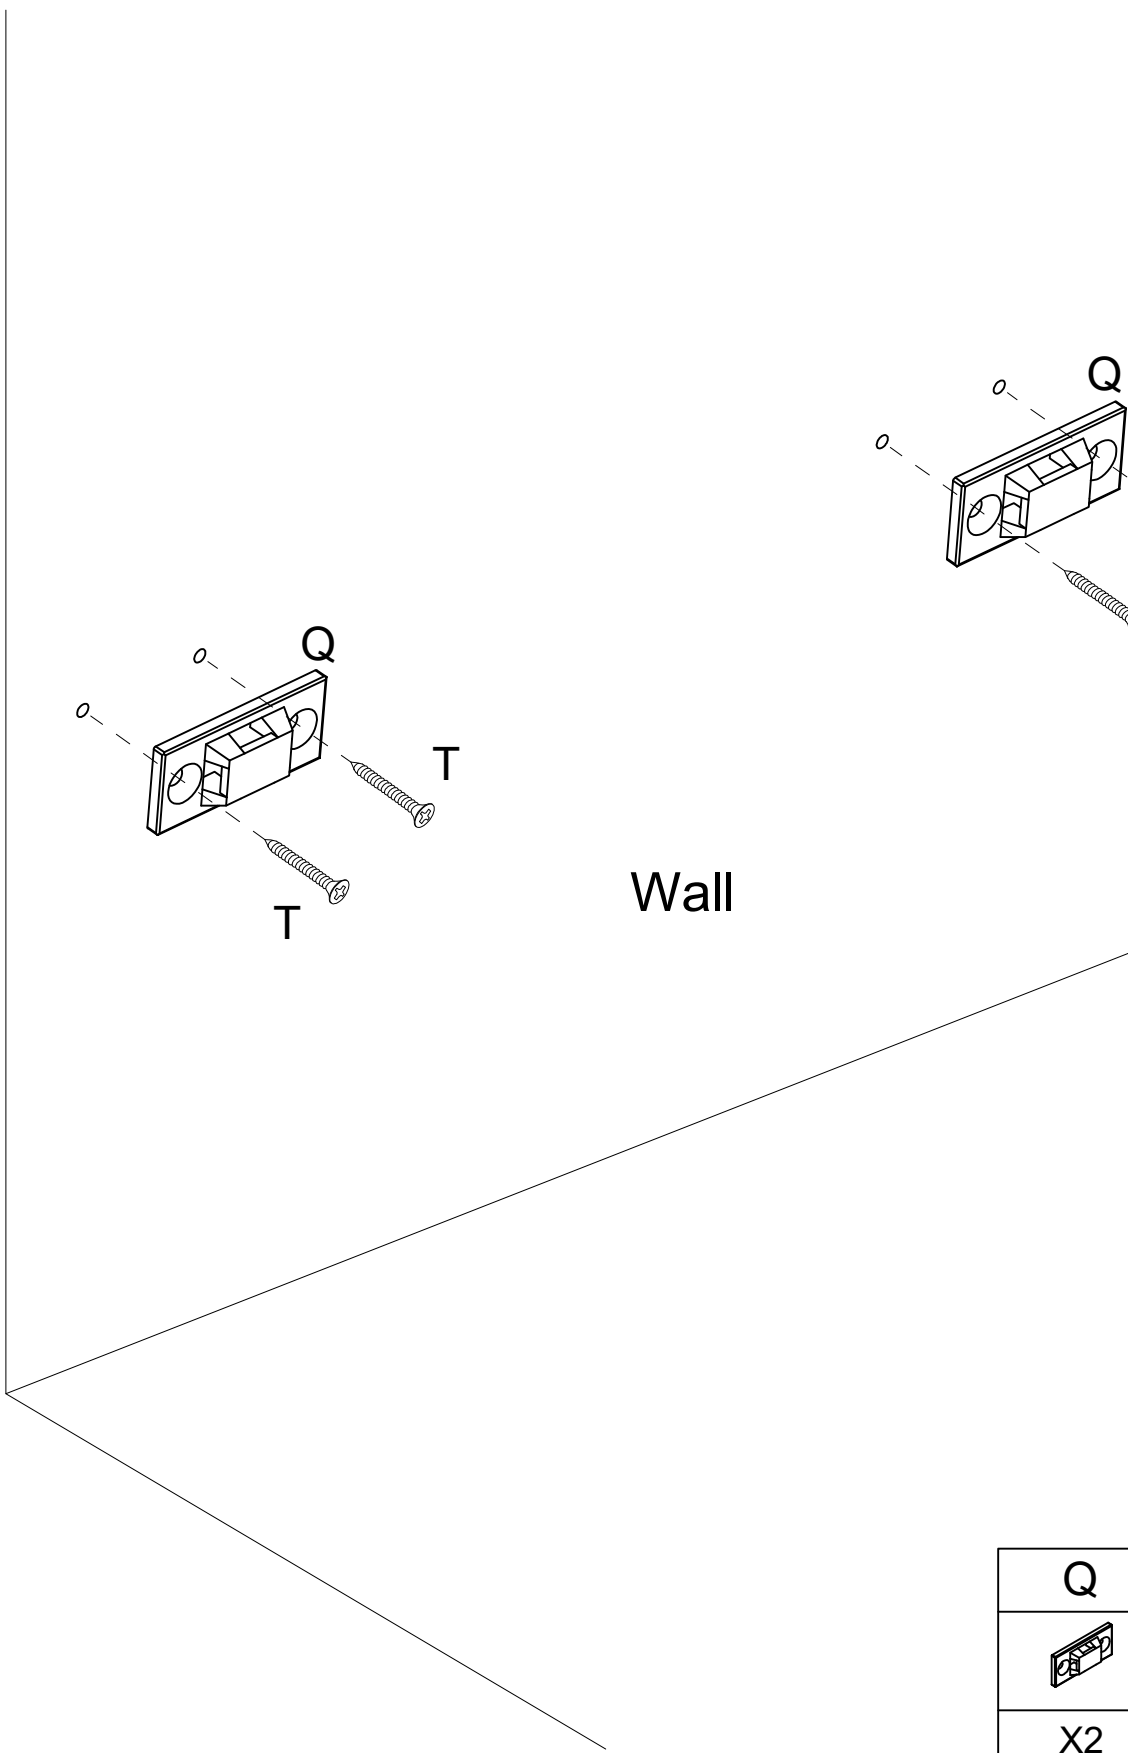
Step 22




Wall

Q	T
	
X2	X4

Step 23

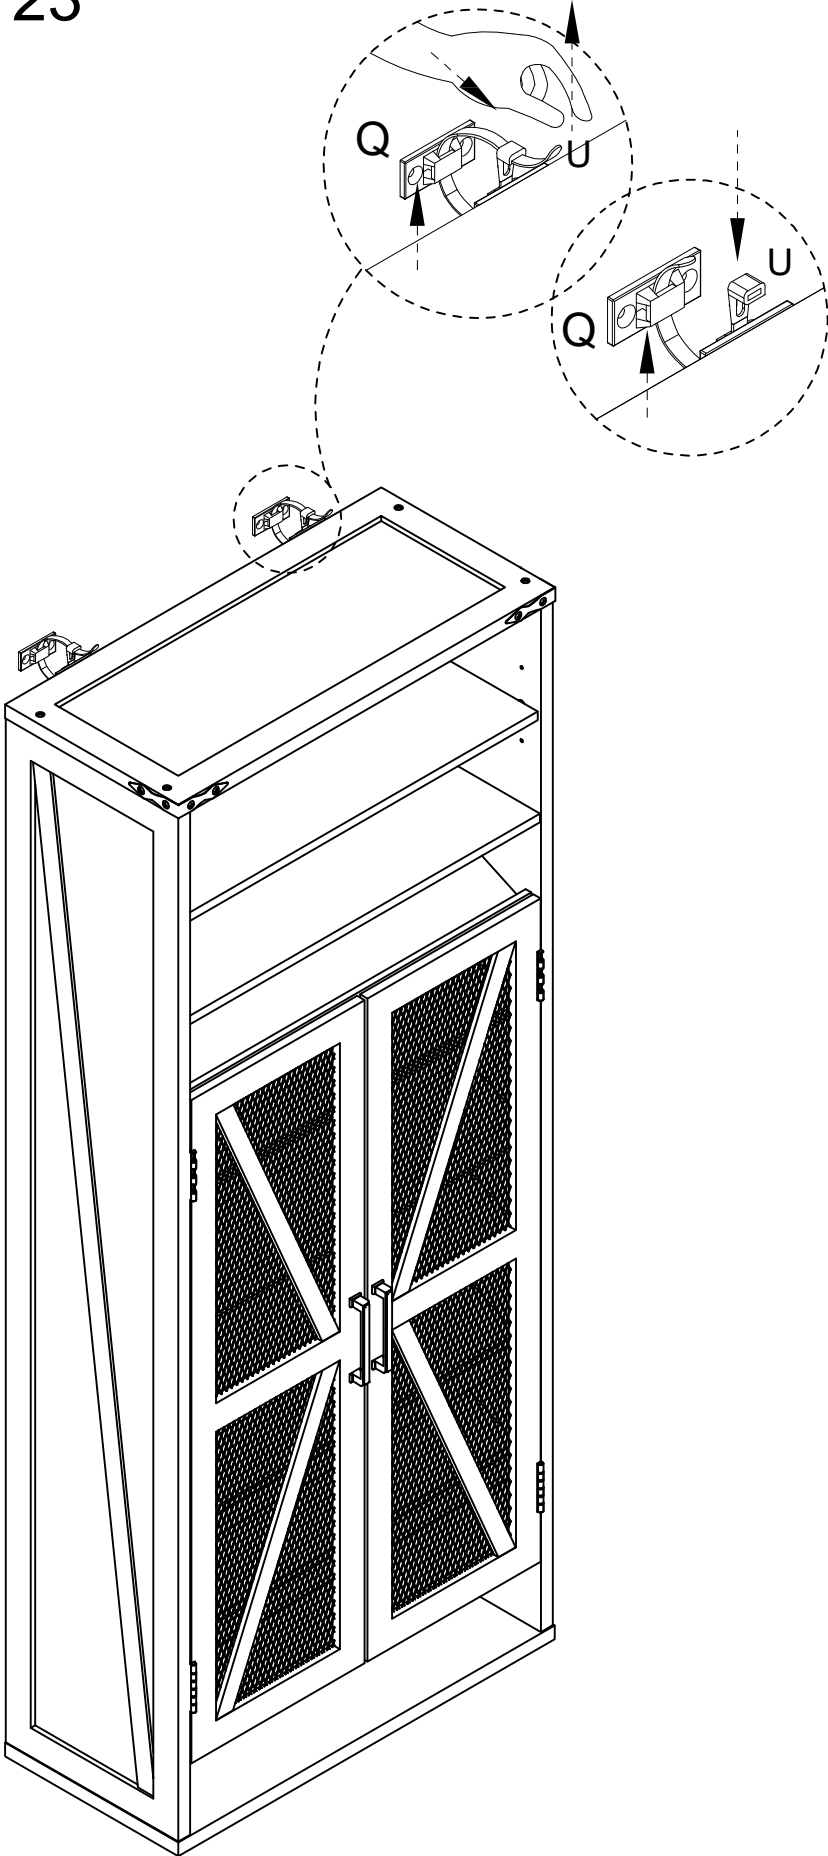

U

X2

Step 24

