



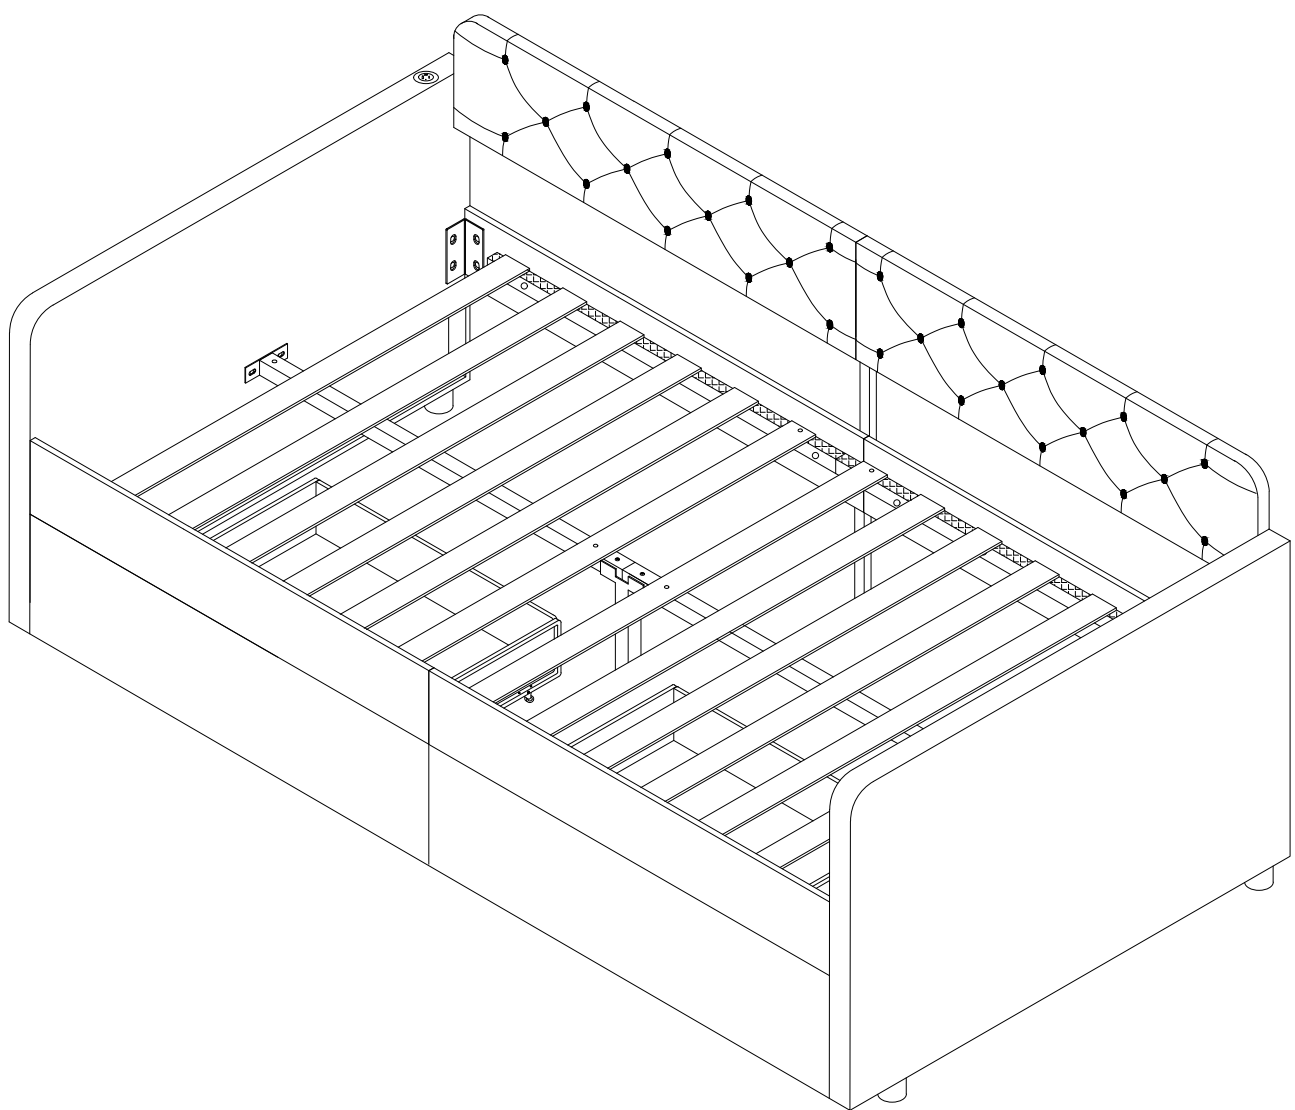

Note:


- 1.Should be assembled on flat ground to keep balance.
- 2.Before completing the installation, do not tighten the screws.

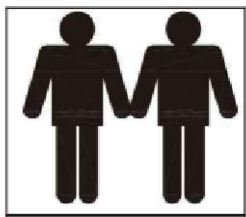


It needs at least Before starting the two people to install.




Before starting the assembly, you must read the whole manual and follow the instructions

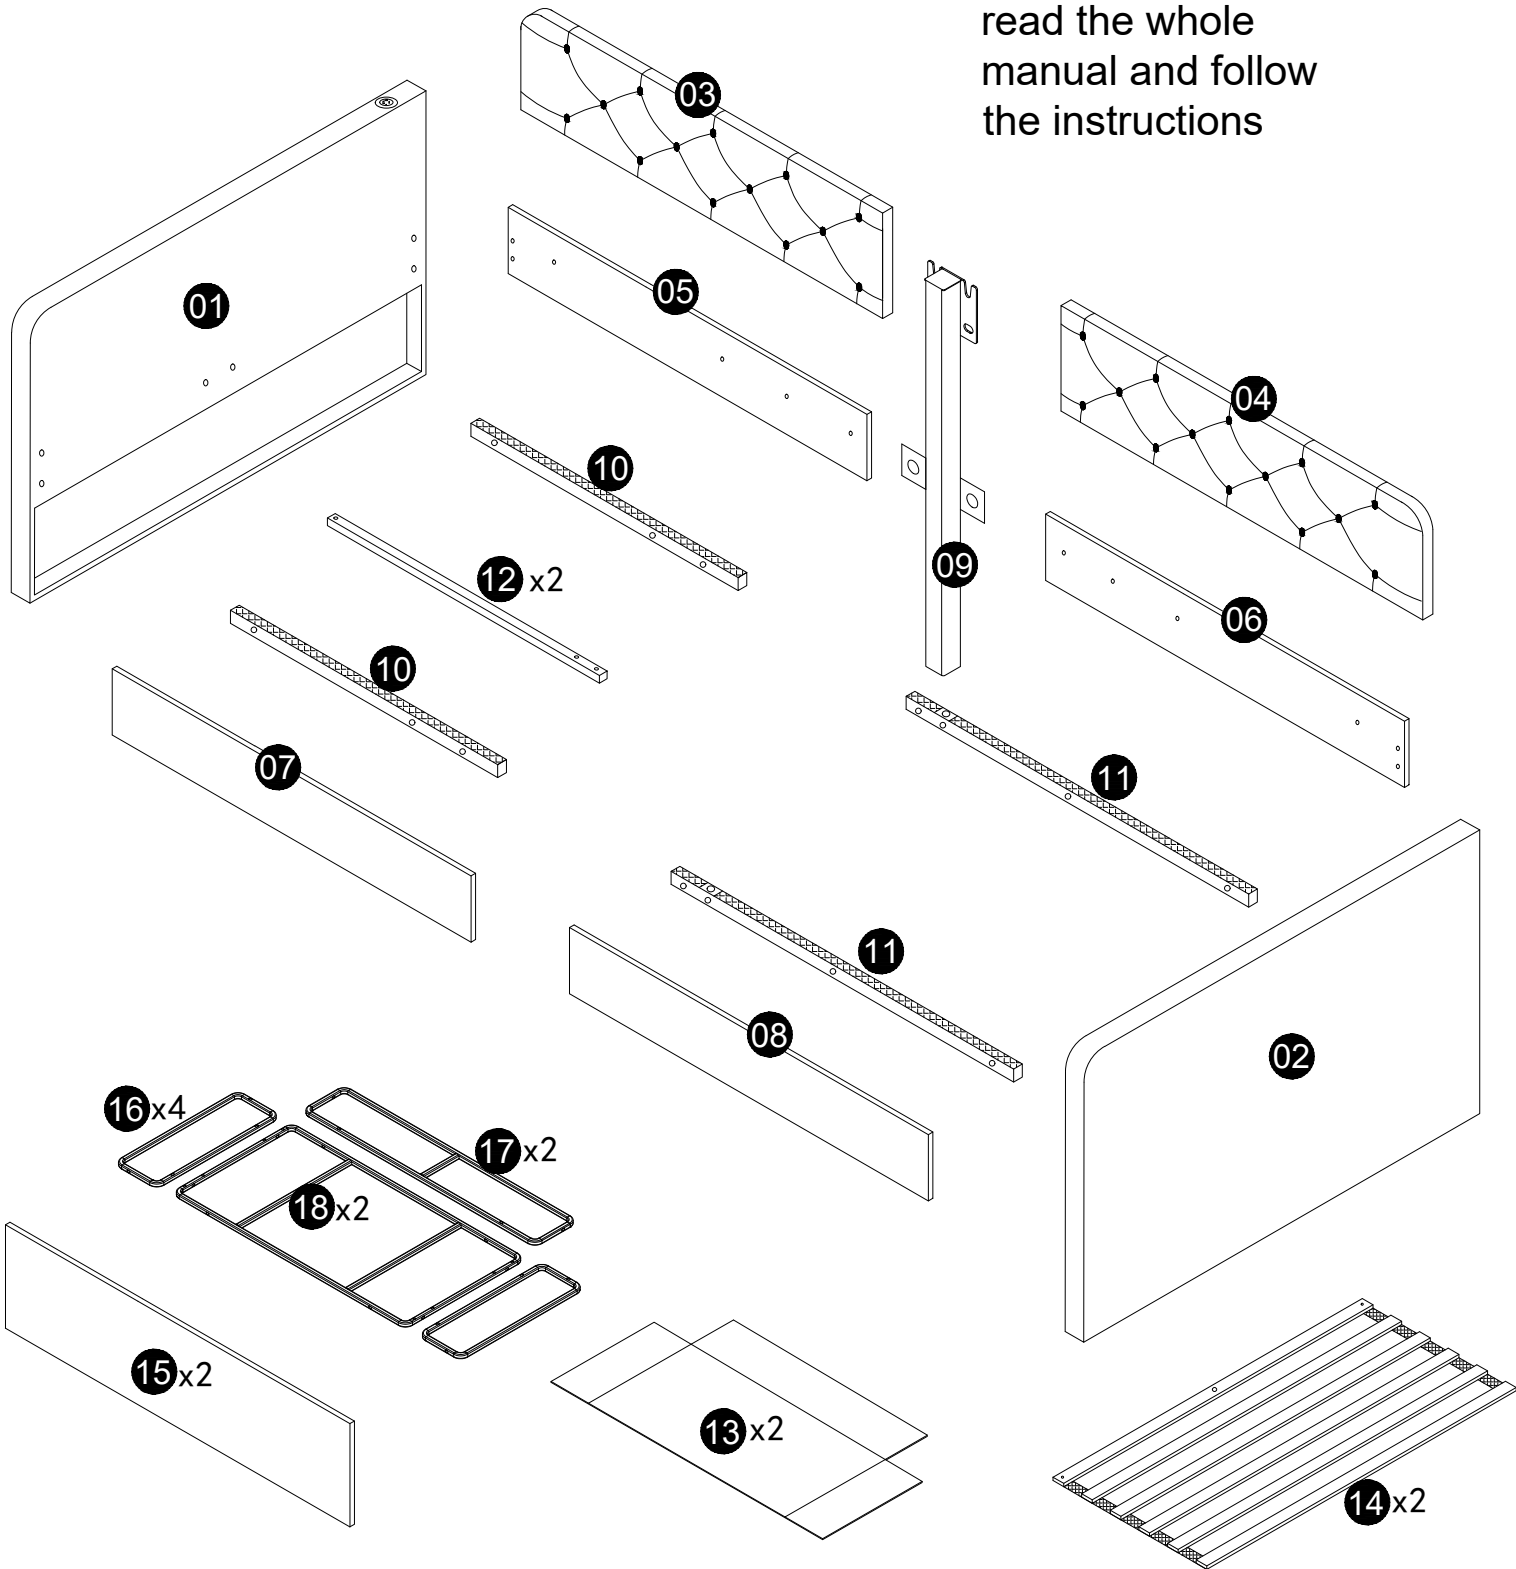



01

C		8*40mm	4pcs
T		2.5cm	4pcs
V		m8	1pc

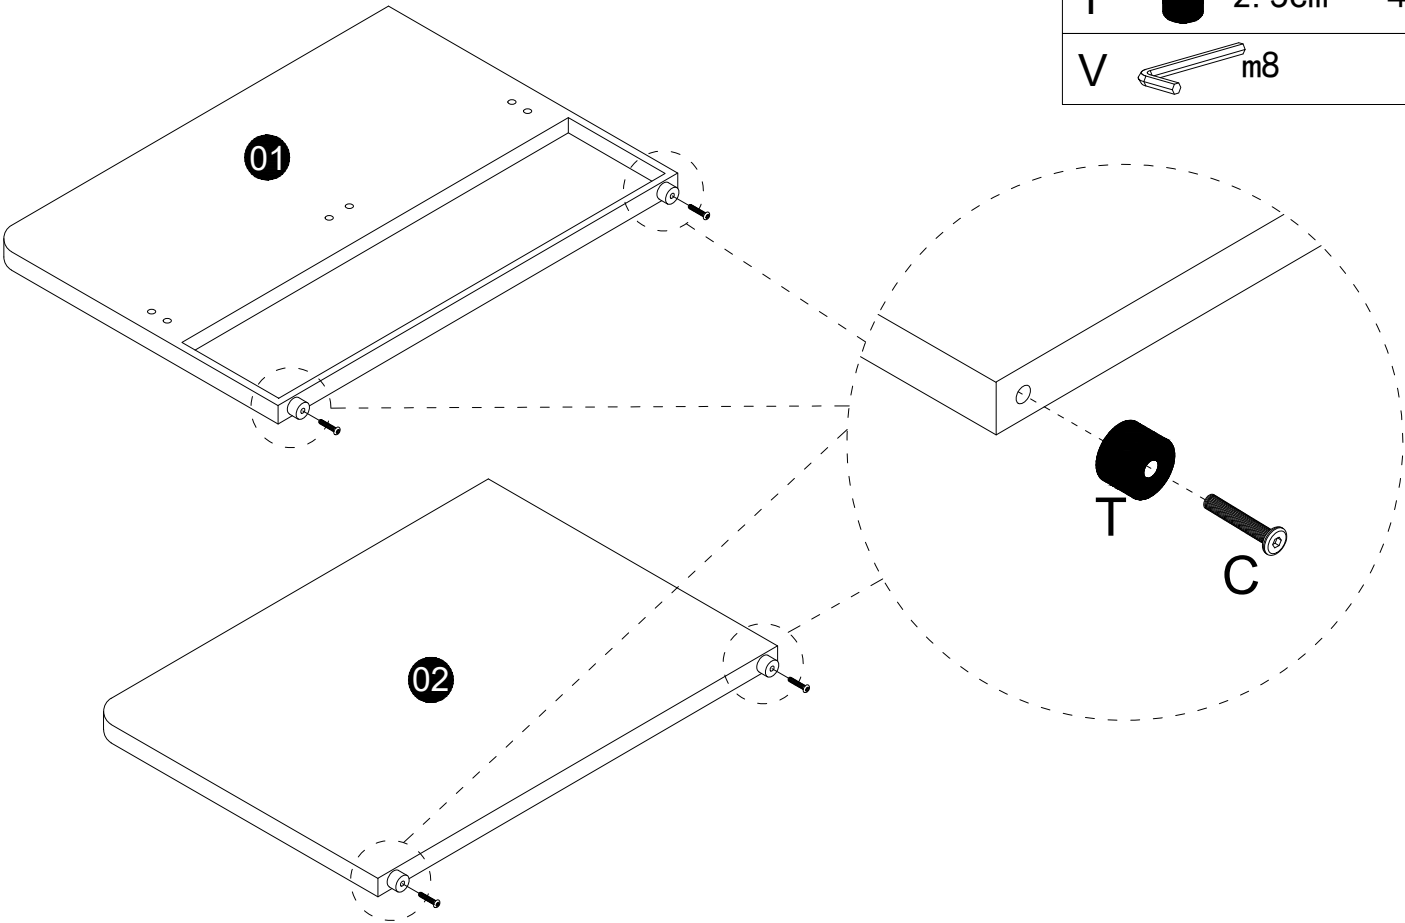



02

B		8*45mm	14pcs
V		m8	1pc

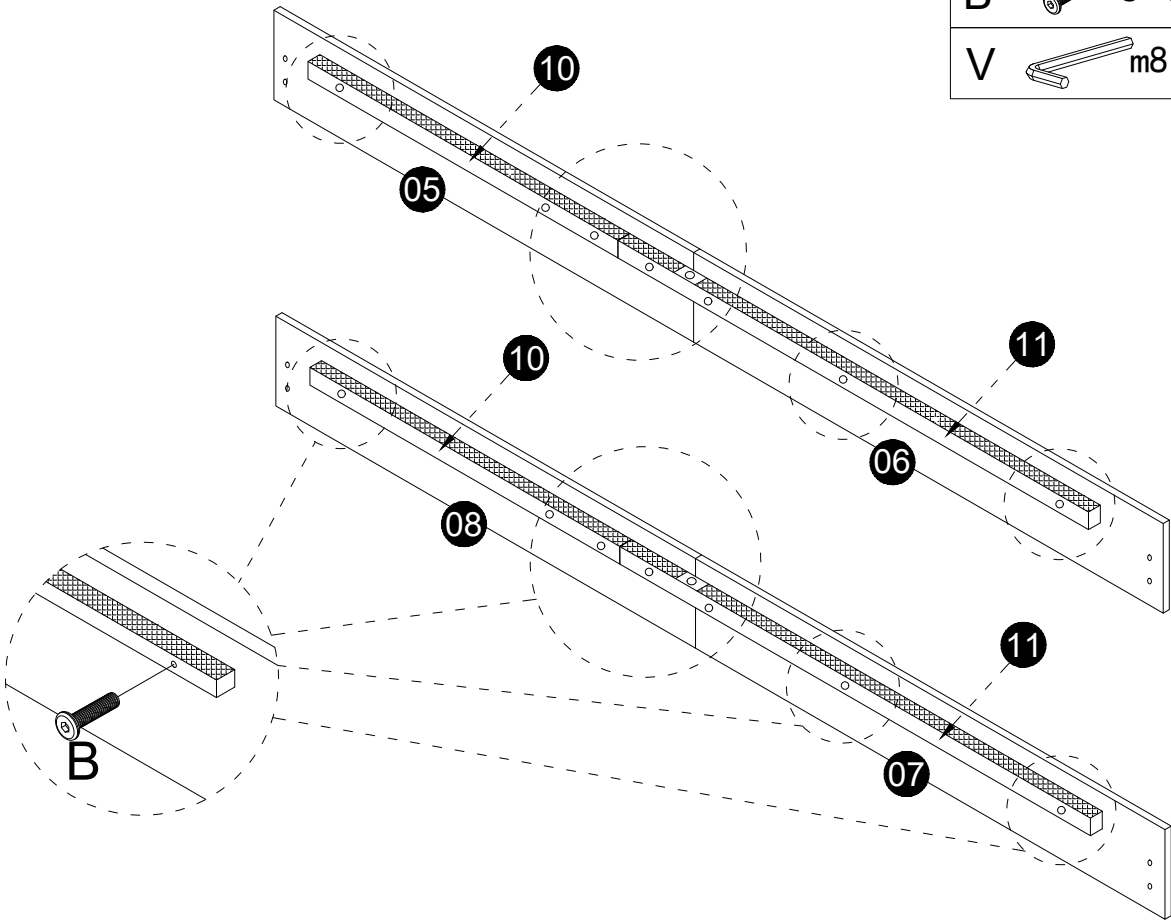



03

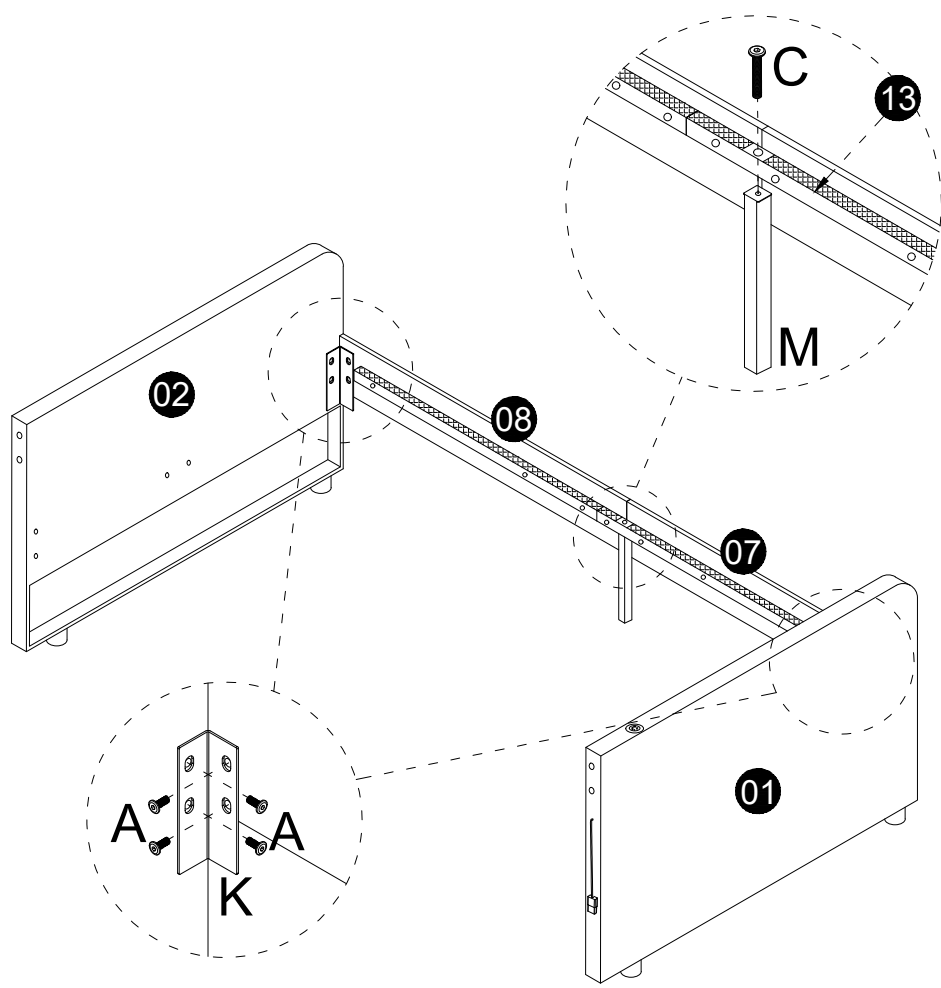


A		8*15mm	8pcs
C		8*40mm	1pc
K			2pcs
M		34.5cm	1pc
V		m8	1pc


04

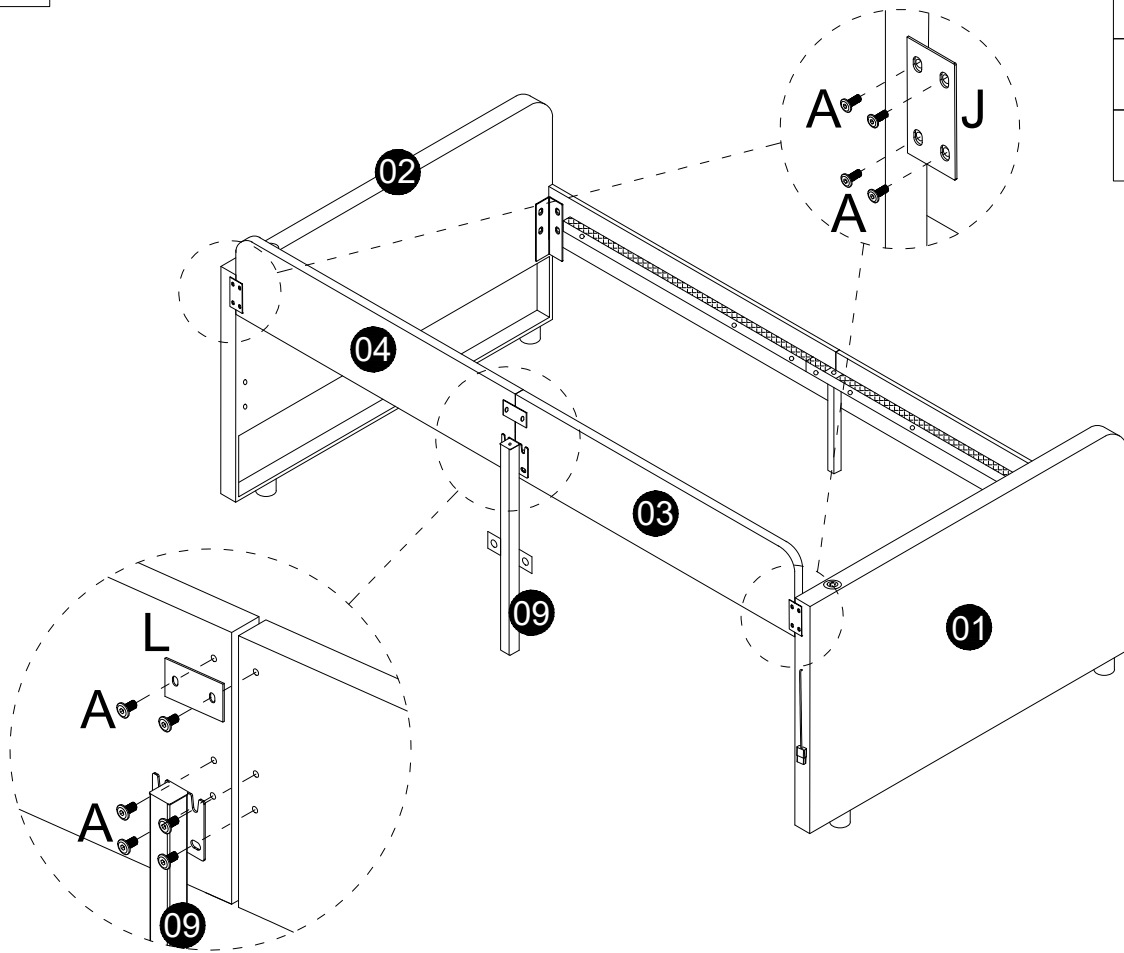


A		8*15mm	14pcs
J			2pcs
L			1pc
V		m8	1pc


05

A		8*15mm	8pcs
I			2pcs
V		m8	1pc

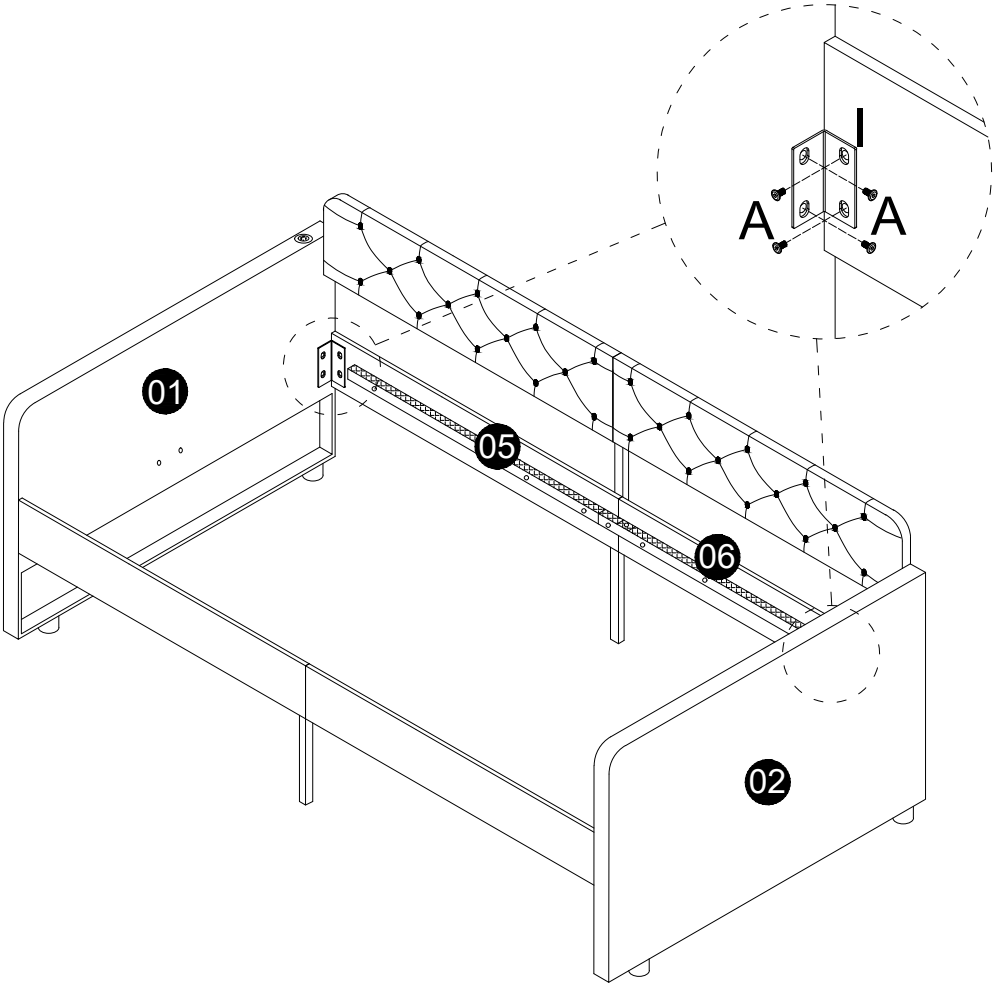



06

A		8*15mm	2pcs
V		m8	1pc

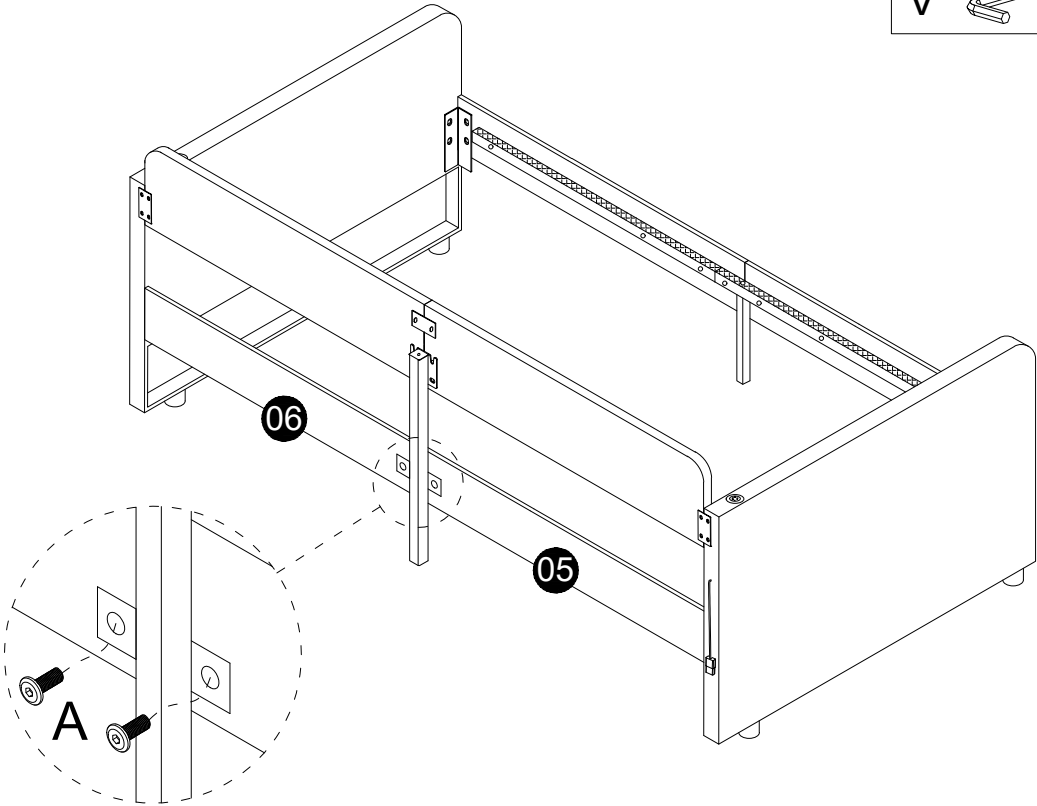



07

Y		m6	1pc	C		8*40mm	2pcs
Z		m8	1pc	E		6*35mm	2pcs
				N		34.7cm	1pc
				O			2pcs
				Q		m8	2pcs

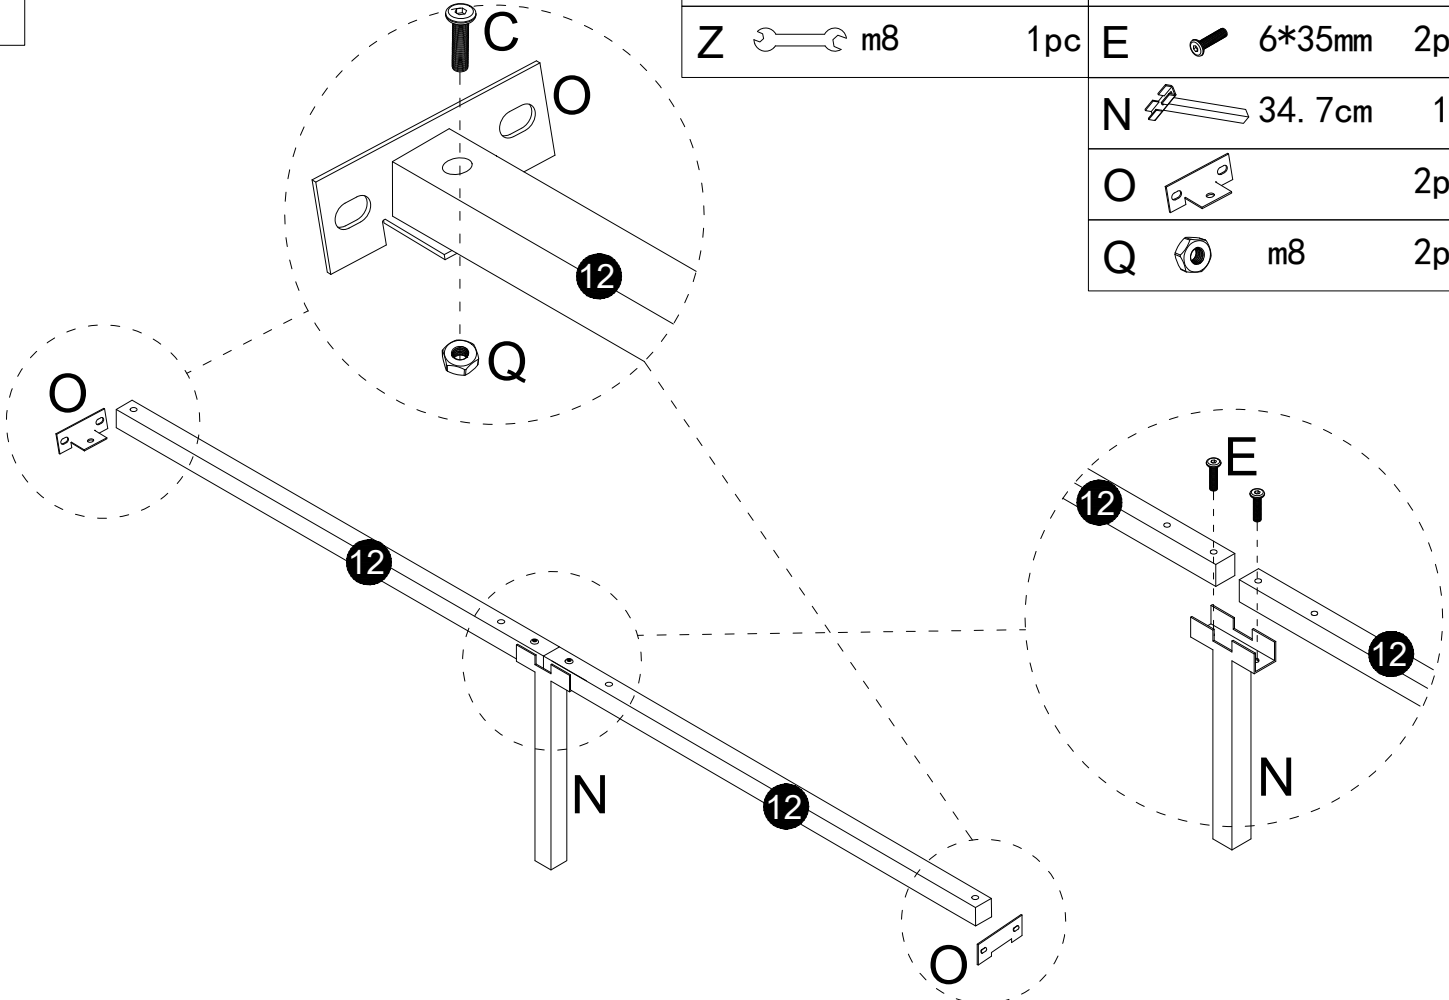


08

A		8*15mm	4pcs
V		m8	1pc

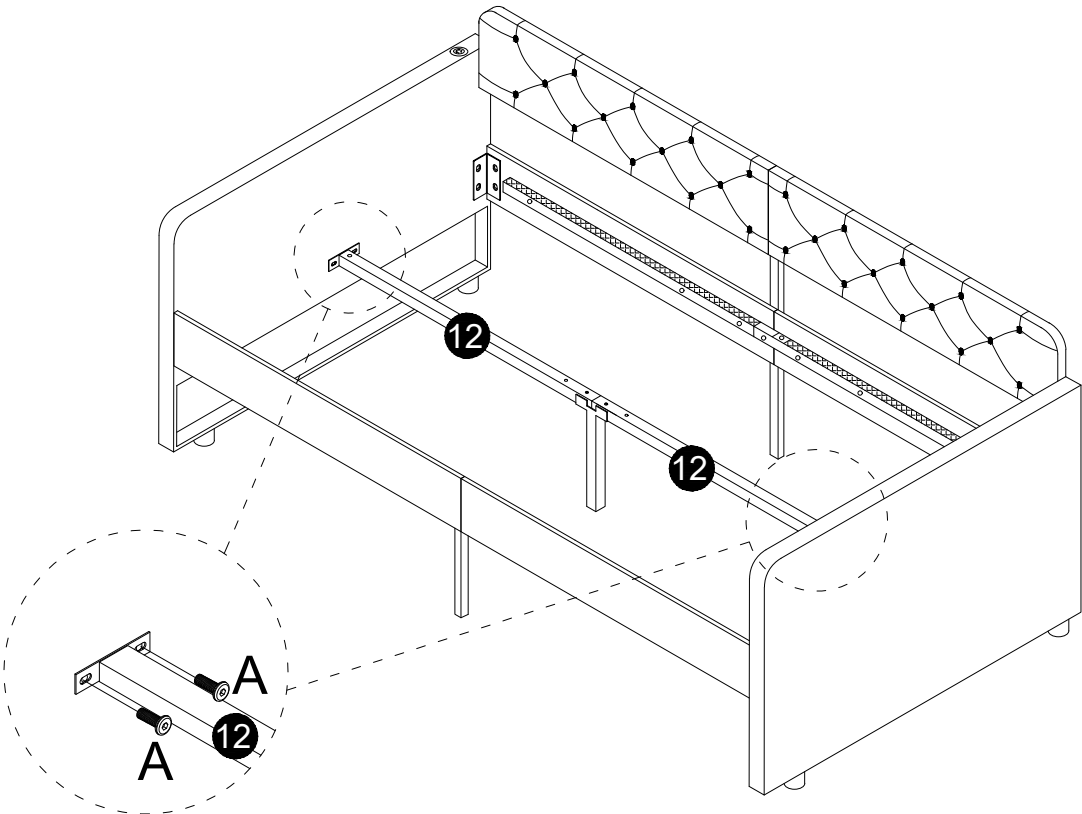


09


R  2pcs

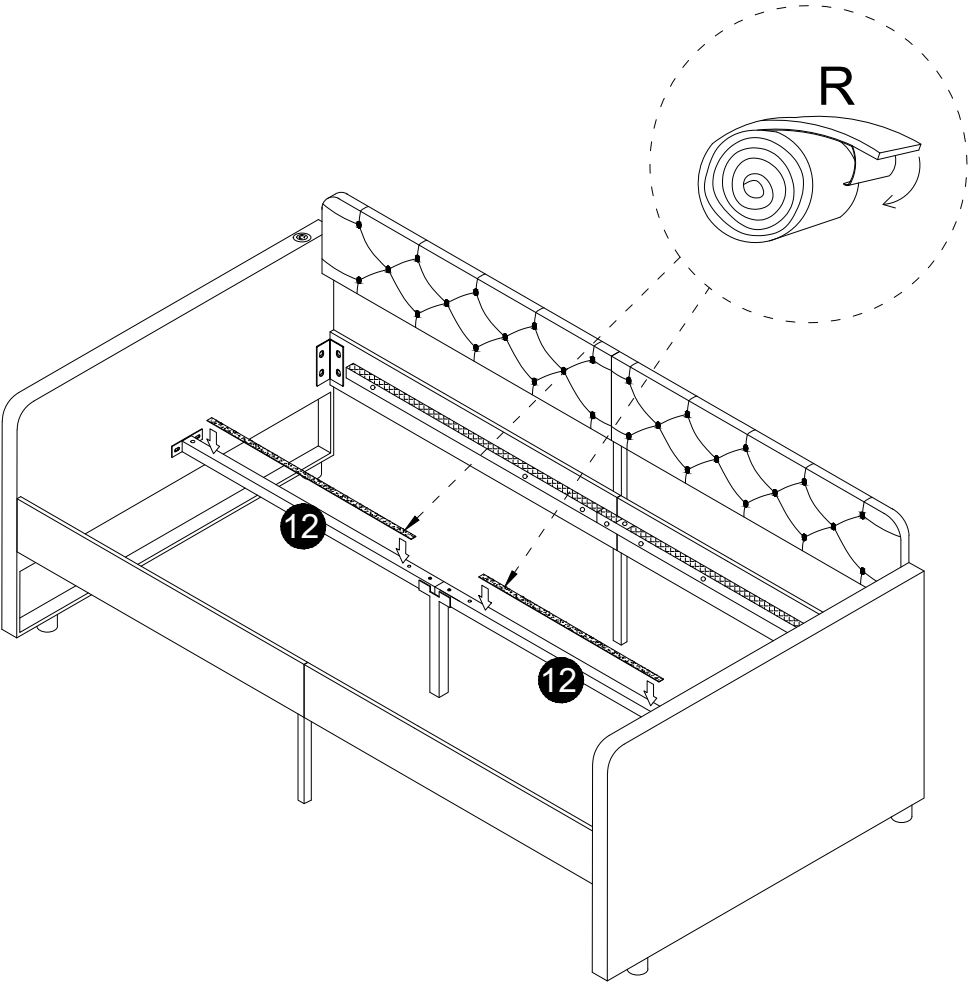


10

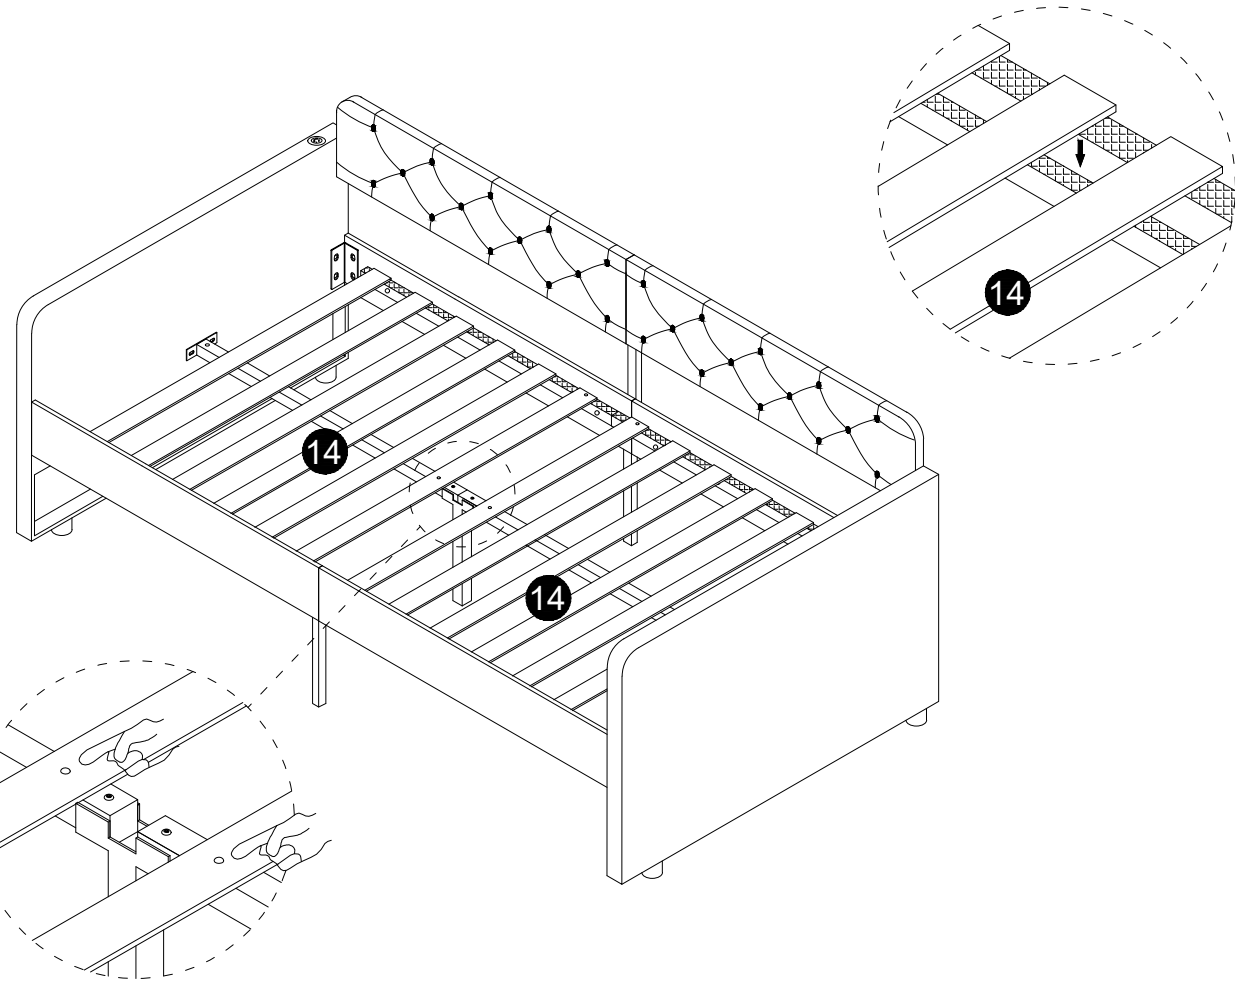


11

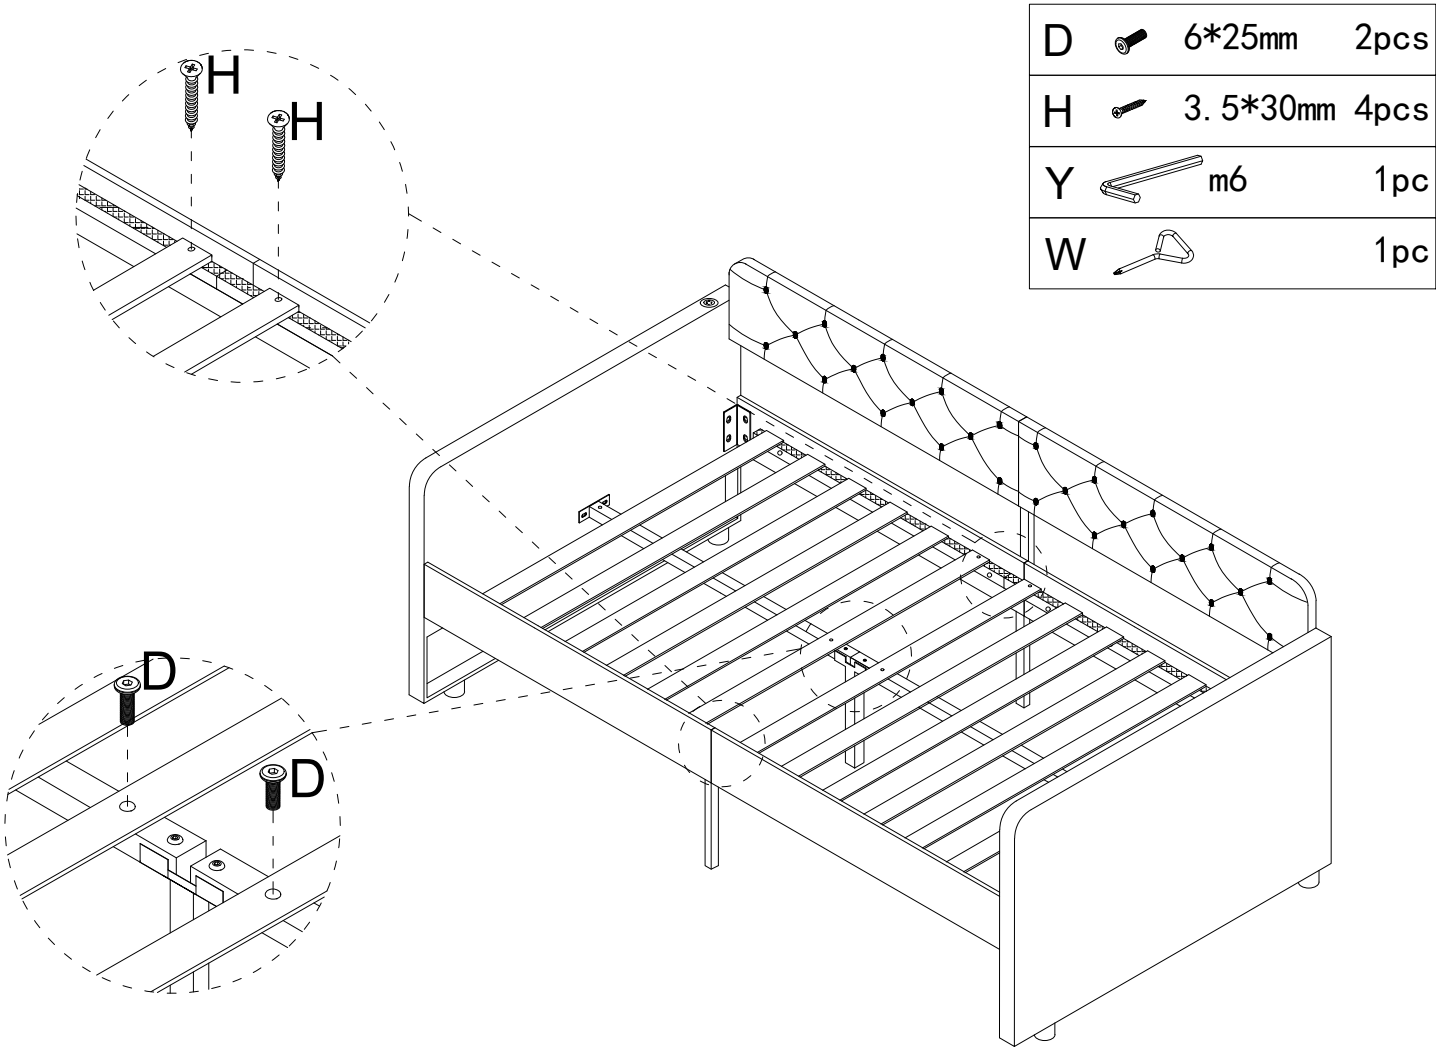

12

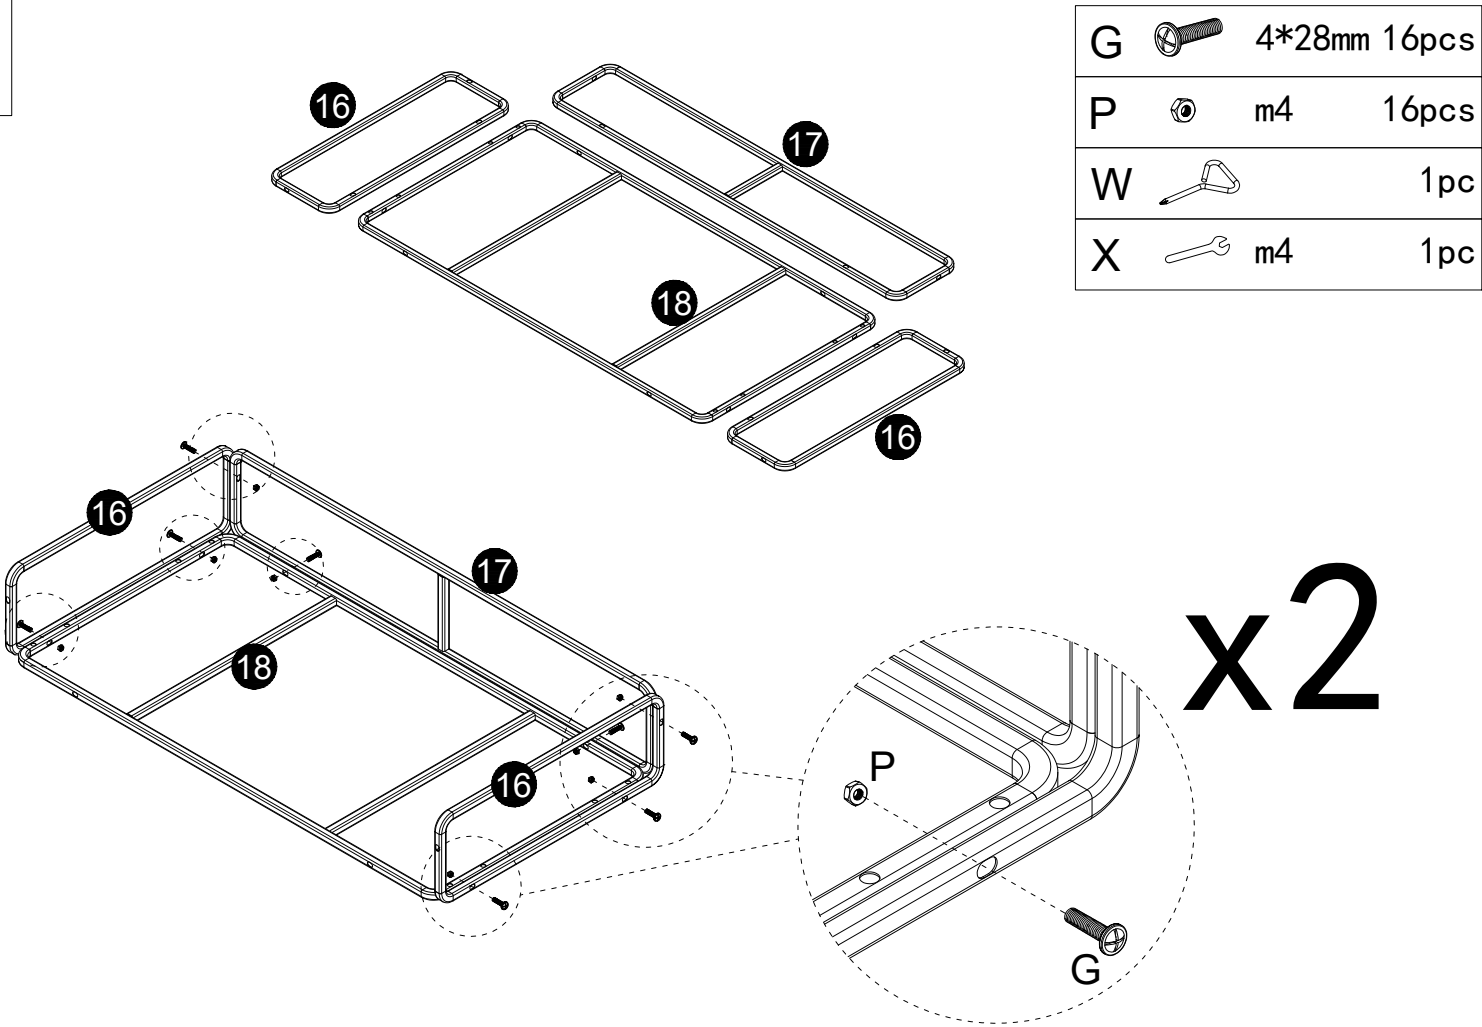


13

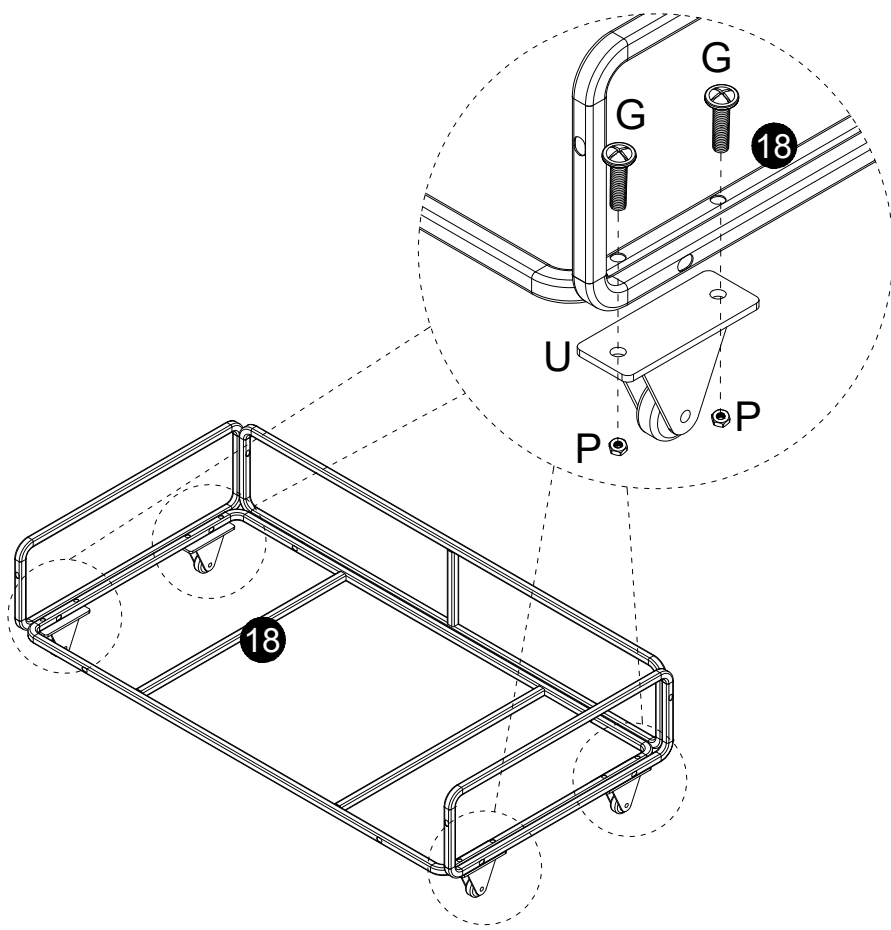

G		4*28mm	16pcs
P		m4	16pcs
U		1.0	8pcs
W			1pc
X		m4	1pc

x2


14

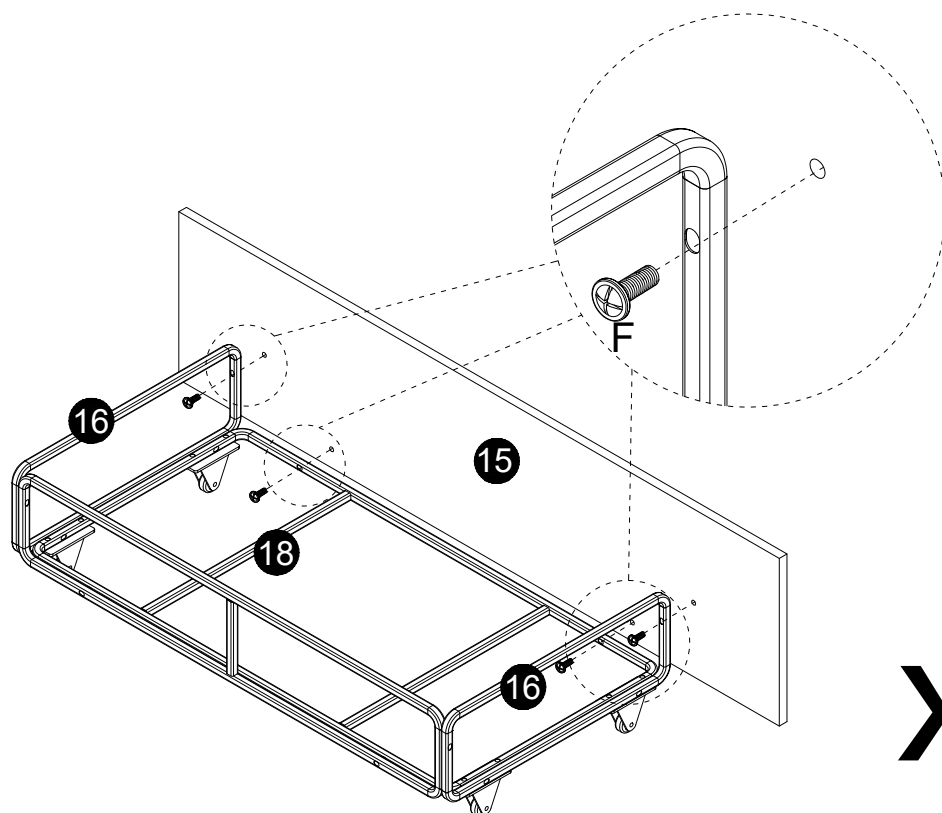


F		4*25mm	8pcs
W			1pc

x2

15

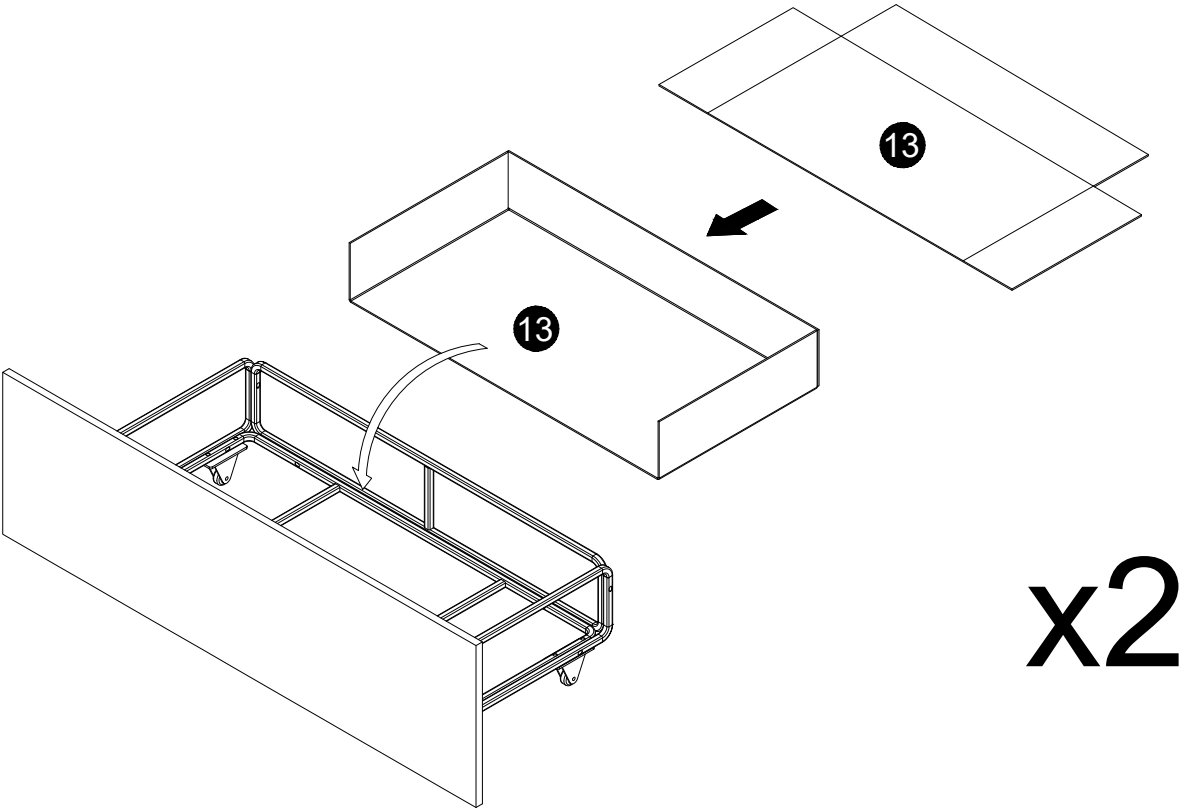


16

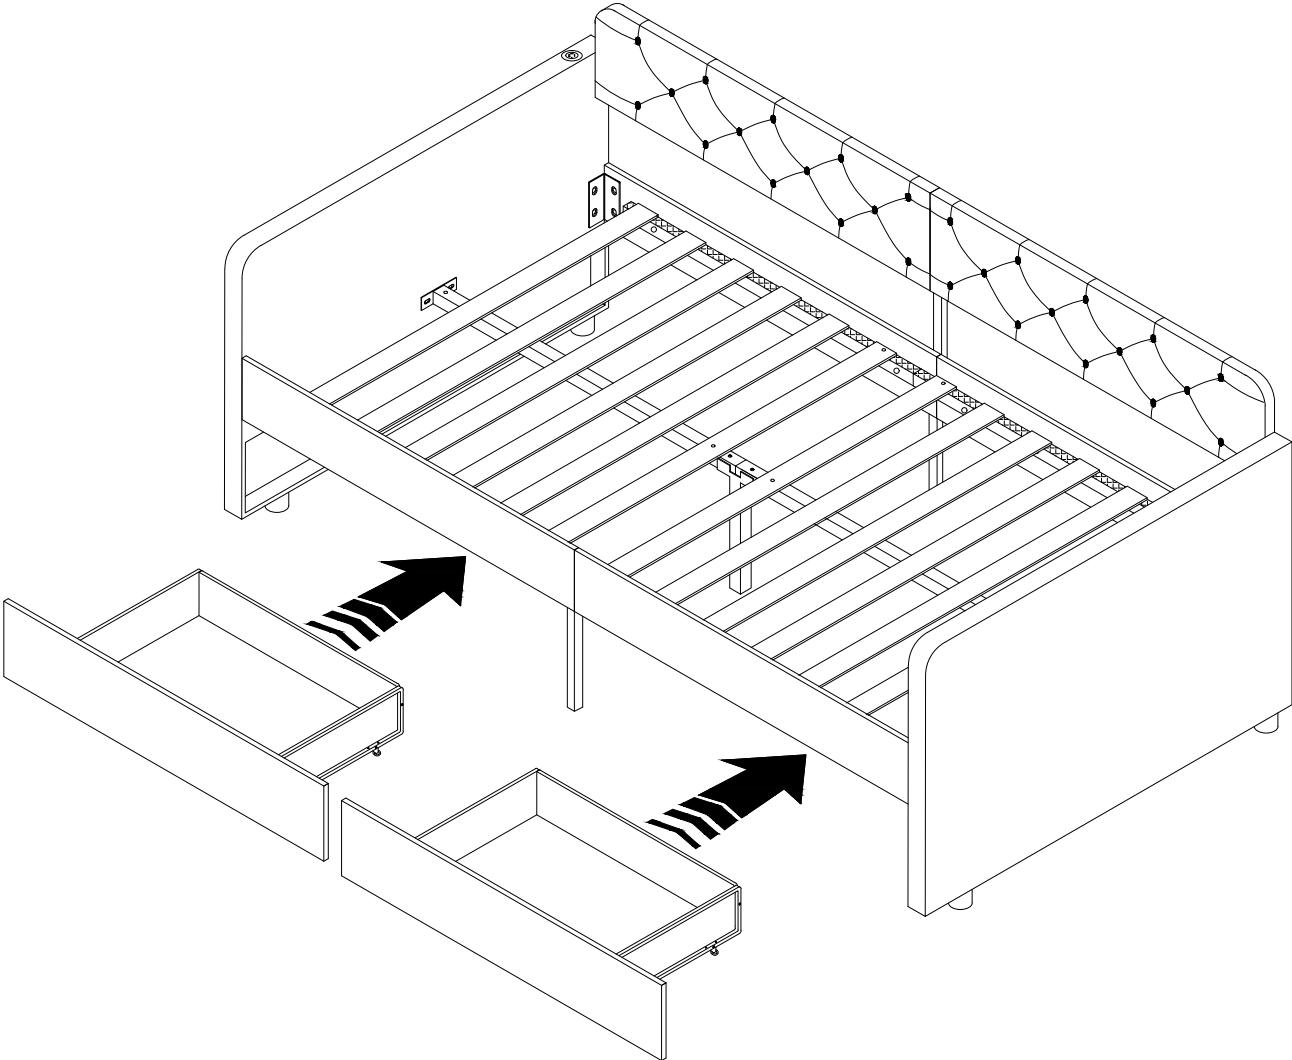

17

S  1pc

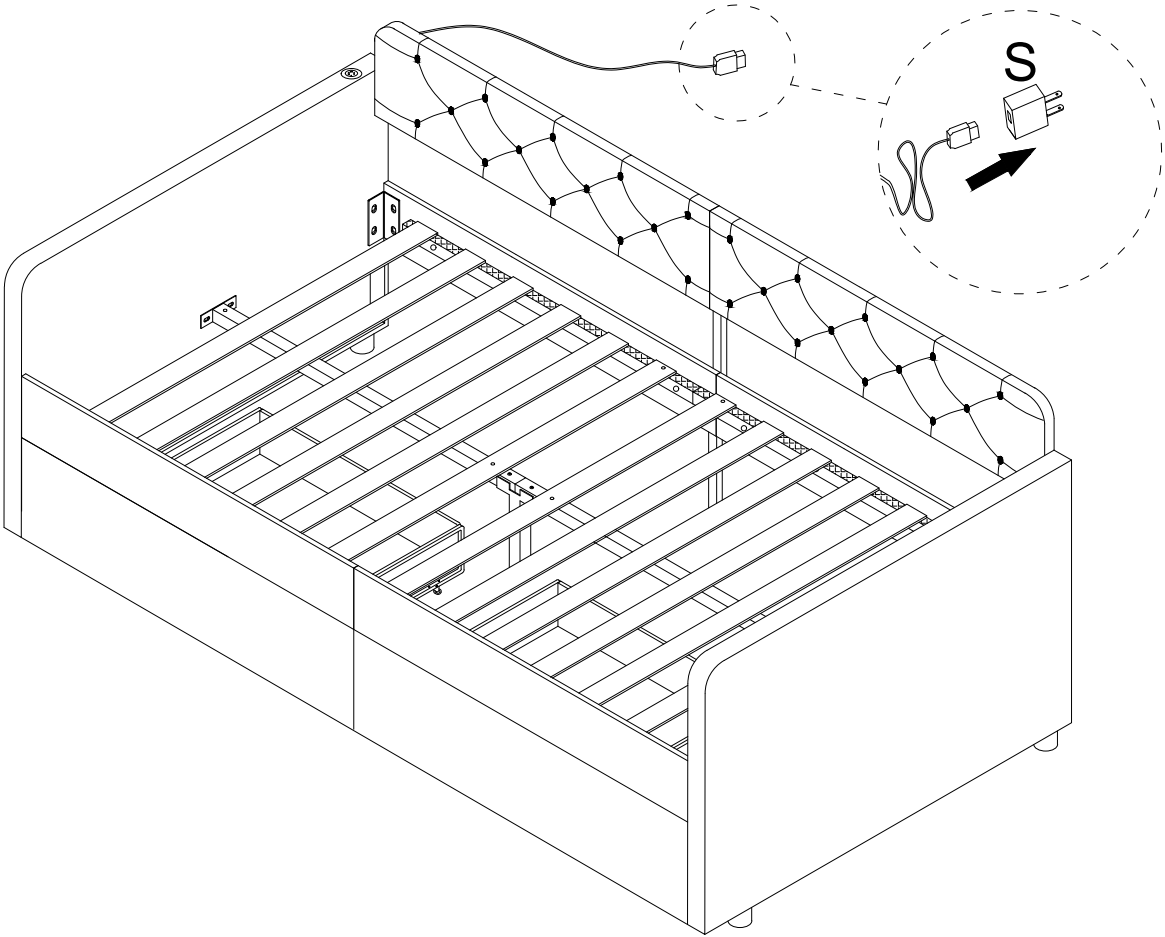

18

