



BARNDOORHARDWAREKIT  
MF15SN-3FT  
INSTALLATION GUIDE

Main Components


x1 Rail

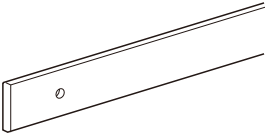


x1 Roller Hanger



x1 Hex Bolts




x1 Nut




M5x26mm  
13/64" x 1 1/32"

x1 Fixed connector




x2 Screw




M5x6mm  
13/64" x 15/64"

x2Hanger roller bracket




x4 Hex Bolts




M4.8x50mm  
3/16 " x 1 31/32"


x3 Wall Spacer




x3 25/64" (10mm)  
Anchor Floor




x3 (8mm x 90mm)  
5/16" x 3 35/64"  
Wall Screw




x3 Washers




x4 (4.2mm x 32mm)  
11/64" x 1 17/64"  
Floor Screws




x4 5/16"(8mm)  
Floor Anchor




x1 Internal  
Floor -Mounted  
Door Guide




x1 Socket



x3 hinge




x12 (6mmX25mm)  
15/64"X63/64"  
hinge Screws




To provide feedback on a particular part, please mark it by circling in the instruction manual and kindly send us a photo.

Tools Required


Tape Measure

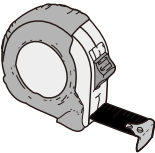


Pencil




Cordless Drill




Phillips Screwdriver



Wrench




1/4"  
Mortise Router Head

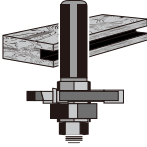


Required for  
Floor-Mounted Door  
Guide InstallationAllen


level



Speed Square



x 1Allen Key



IMPORTANT: BEFORE YOU BEGIN


IF INSTALLING DIRECTLY INTO A NON-CONCRETE WALL, DO NOT ATTEMPT TO INSTALL THE RAIL SOLELY TO THE DRYWALL OR ANY WALL SURFACE AS THIS MAY NOT SUPPORT THE WEIGHT OF THE RAIL AND MOUNTED DOOR. THE RAIL MUST BE INSTALLED ONTO A PIECE OF SOLID WOOD BLOCKING (PACKAGE NOT INCLUDED) USING MOUNTING SCREWS ( PACKAGE NOT INCLUDED). ENSURE THE SOLID WOOD BLOCKING IS SECURED INTO THE STRUCTURAL SURFACE. USE A STUD FINDER WHERE NECESSARY TO LOCATE STUDS AND SECURE SAFELY. TYPICAL SOLID WOOD BLOCKING SHOULD BE 81 3/4" x 5 1/2" x 7/8".

NOTE, SEPARATEBOLTSAREPROVIDEDFOR13/8"DOORSANDLONGERBOLTS PROVIDEDFOR13/4"DOORS. IF INSTALLINGWITHTHEINTERNALFLOOR-MOUNTEDDOORGUIDE,THEDOORMUSTBEMORTISED1/4"WIDEX3/4" DEEPCENTRALLY.

Fit door panel width:  $9 \frac{27}{32}" \sim 11 \frac{13}{16}"$


### Step 1. CONCRETE Wall Preparation1

Position the rail by measuring up from the door height (H)  $+1 \frac{17}{32}"$  to the centre of the track. Also ensure a gap of  $\frac{25}{64}" - \frac{1}{2}"$  at the bottom. Ensure the rail is level and leave a minimum of 2" from the end of the rail to the side of the opening.

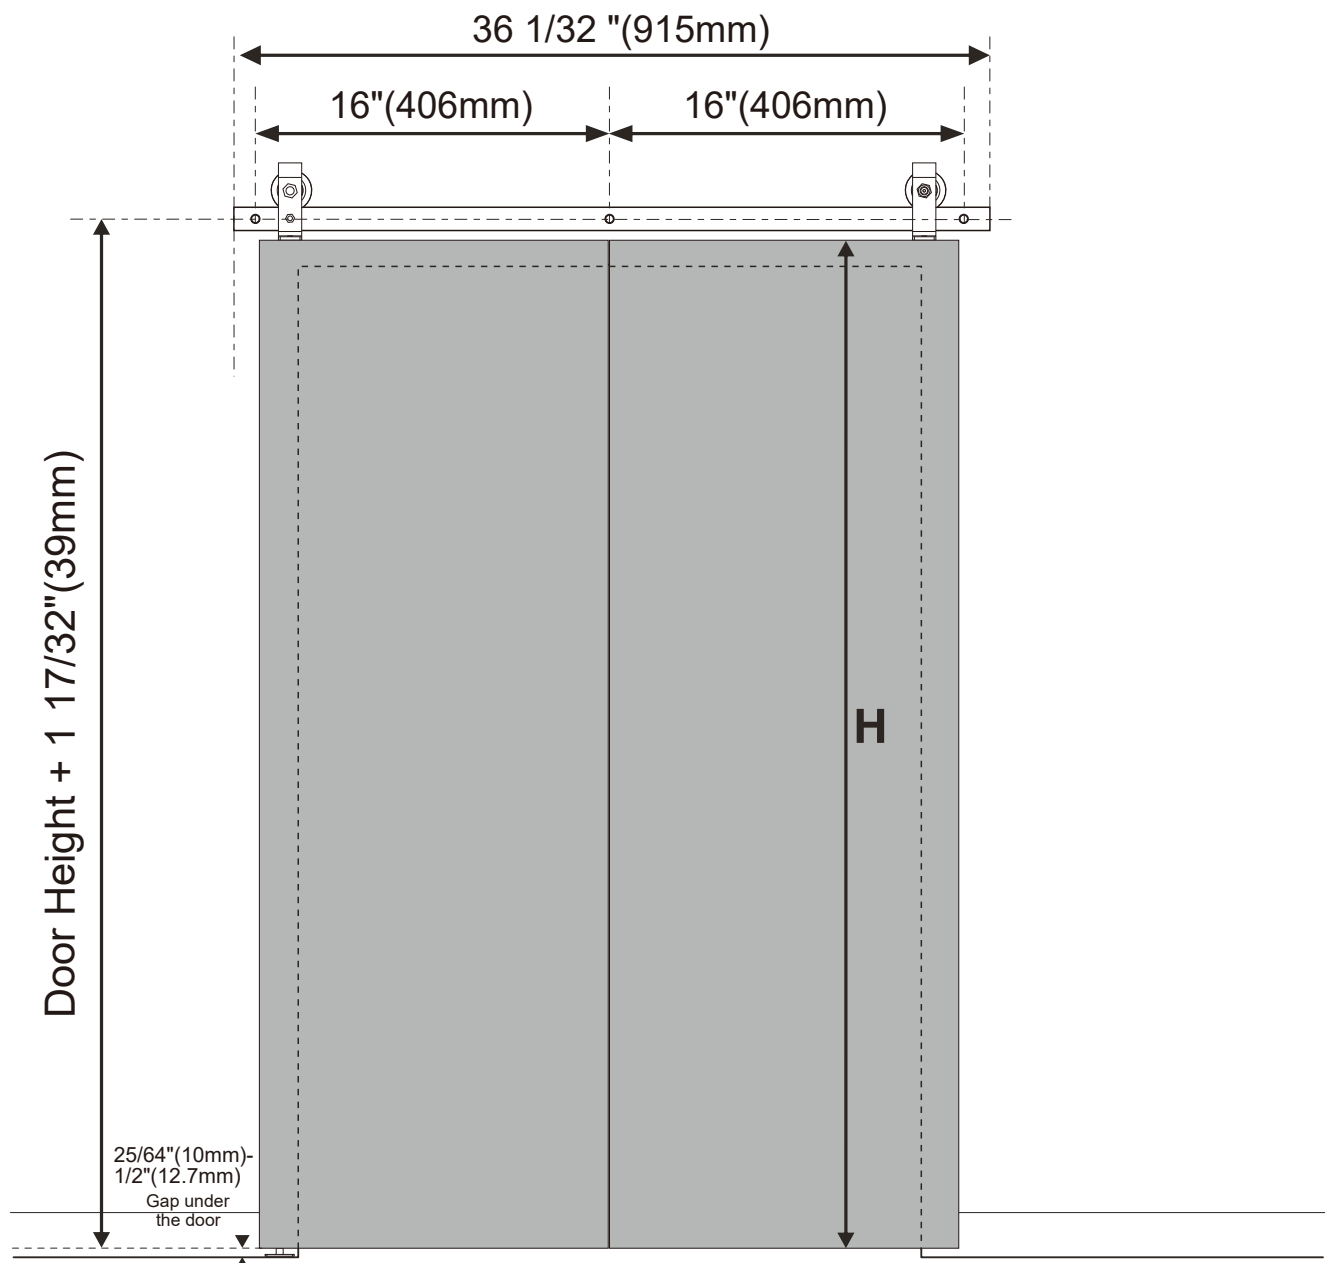


## Step 2. CONCRETE Wall Preparation

Position the rail in place ensuring that it is level, mark the holes on the rail using a pencil and pre-drill  $\frac{3}{8}$ " holes into the concrete.

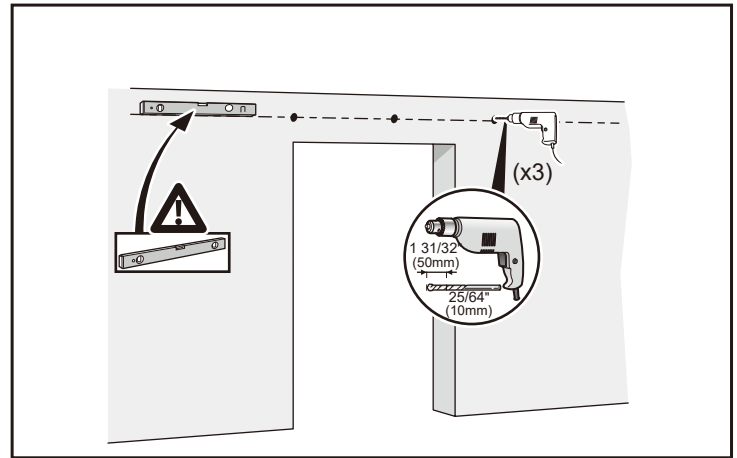


## Step 3. CONCRETE Rail Installation

When installing directly into concrete, align the spacers to holes, insert using the provided anchors and hex bolts (with washers). Ensure the nut-screw to separate the hex bolt and anchor to install correctly, securing with a wrench.

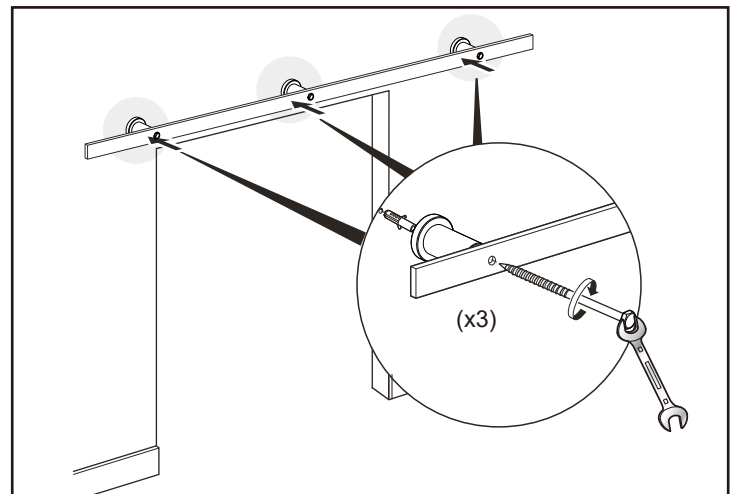

## Step 4. DRYWALL Wall Preparation


Position the rail on top of the wood blocking ensuring levelness, mark the holes using a pencil and pre-drill  $\frac{3}{16}$ " holes into the wood blocking.

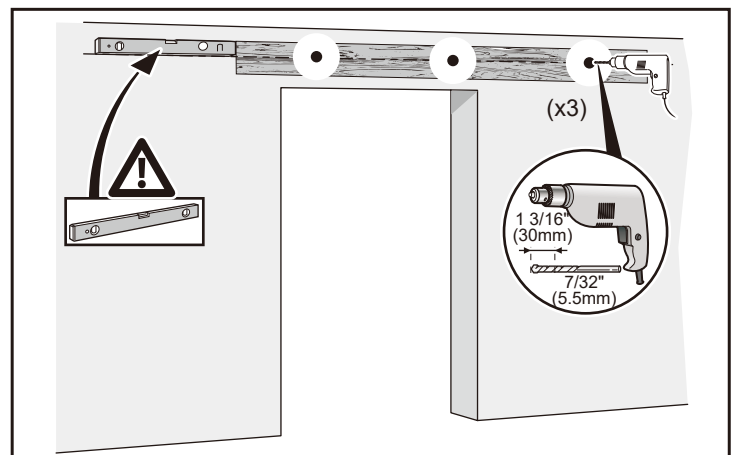

BARNDOORHARDWAREKIT  
**MF15SN-3FT**  
INSTALLATION GUIDE


### Step 5. DRYWALL Rail Installation

When installing into the solid wood block and wall, insert using the provided wall screws. Align each spacer to the rail holes, inserting screws (with washers), securing with a wrench.

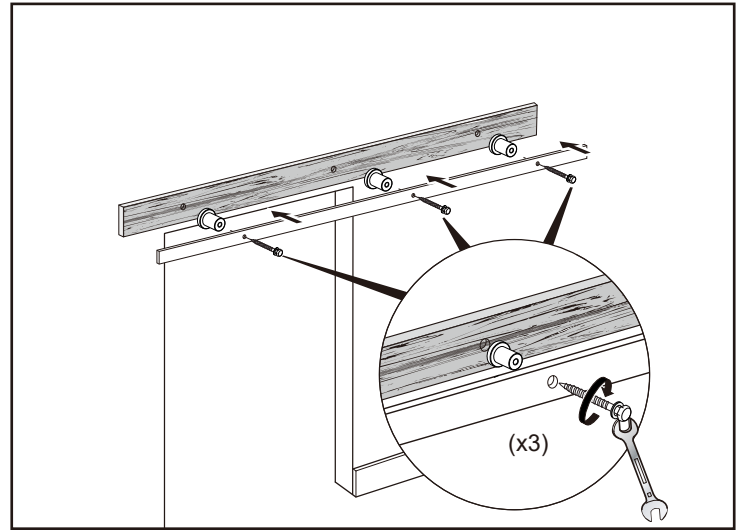


### Step 6. Fit the hinge

Fit the hinge to the door in the proper position

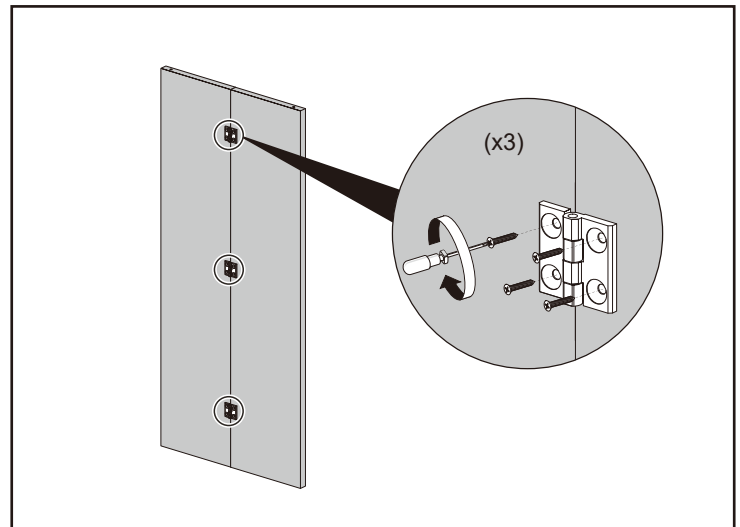


### Step 7. Door Preparation – Strap Installation

Install the hanger roller bracket on the reserved hole of the top of door by 3/16" x 1 17/64 screw.

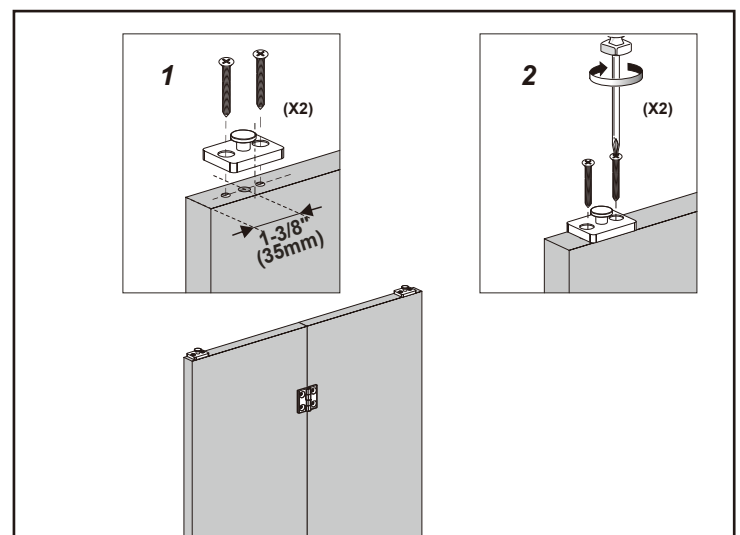


## Step 8. Hanging the rollers

Put the 4 rollers on the rail

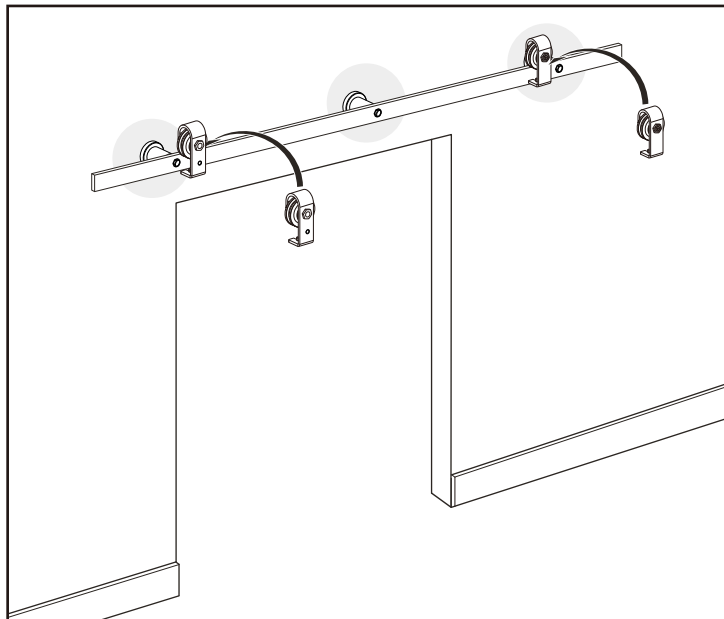





## Step 9. Floor-Mounted Door Guide Installation

Mark the hole position on the bottom of the door with a pen, punch a hole with diameter 5/16" depth 29/32". Then put the socket on the hole, and knock it in with a wooden hammer. Finally, put the floor guide into the socket.

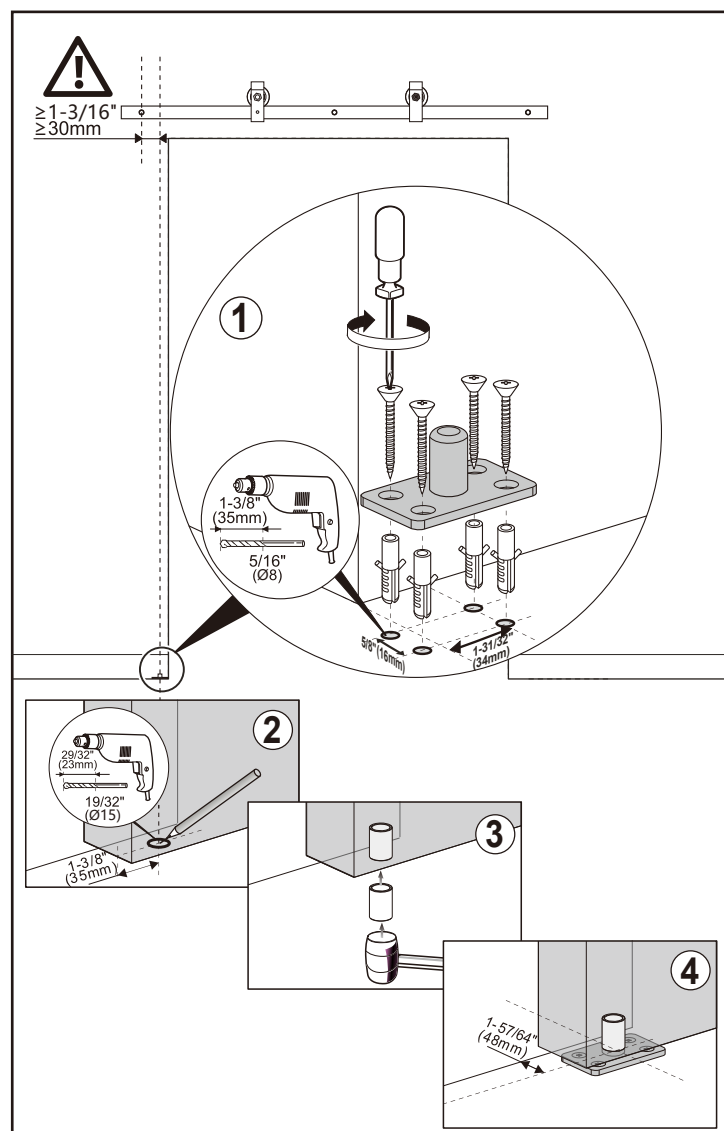

**Step 10. Install hanger roller 1**


Unscrew the screw, adjust the position of the door and the floor guide, then push in the hanger roller slot, and fix it with screw.

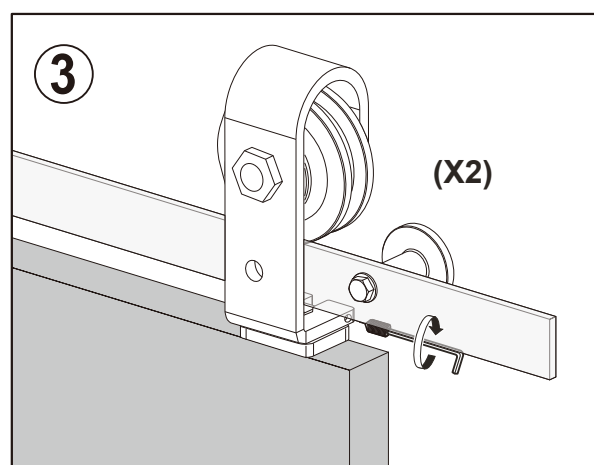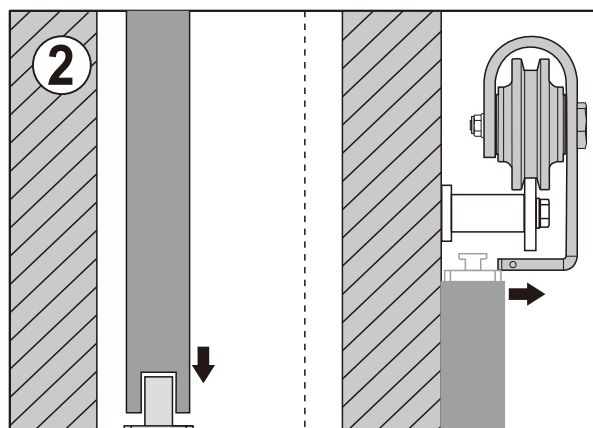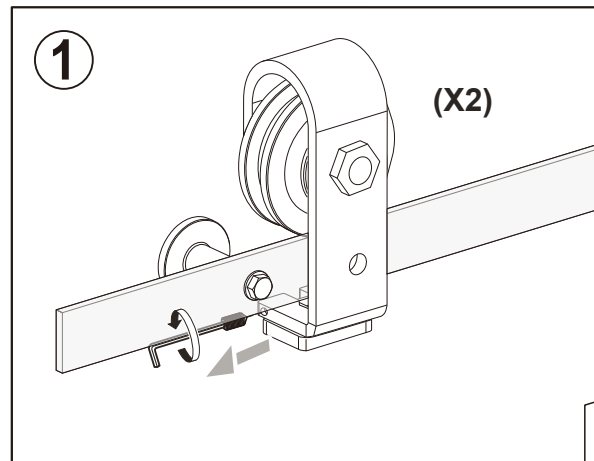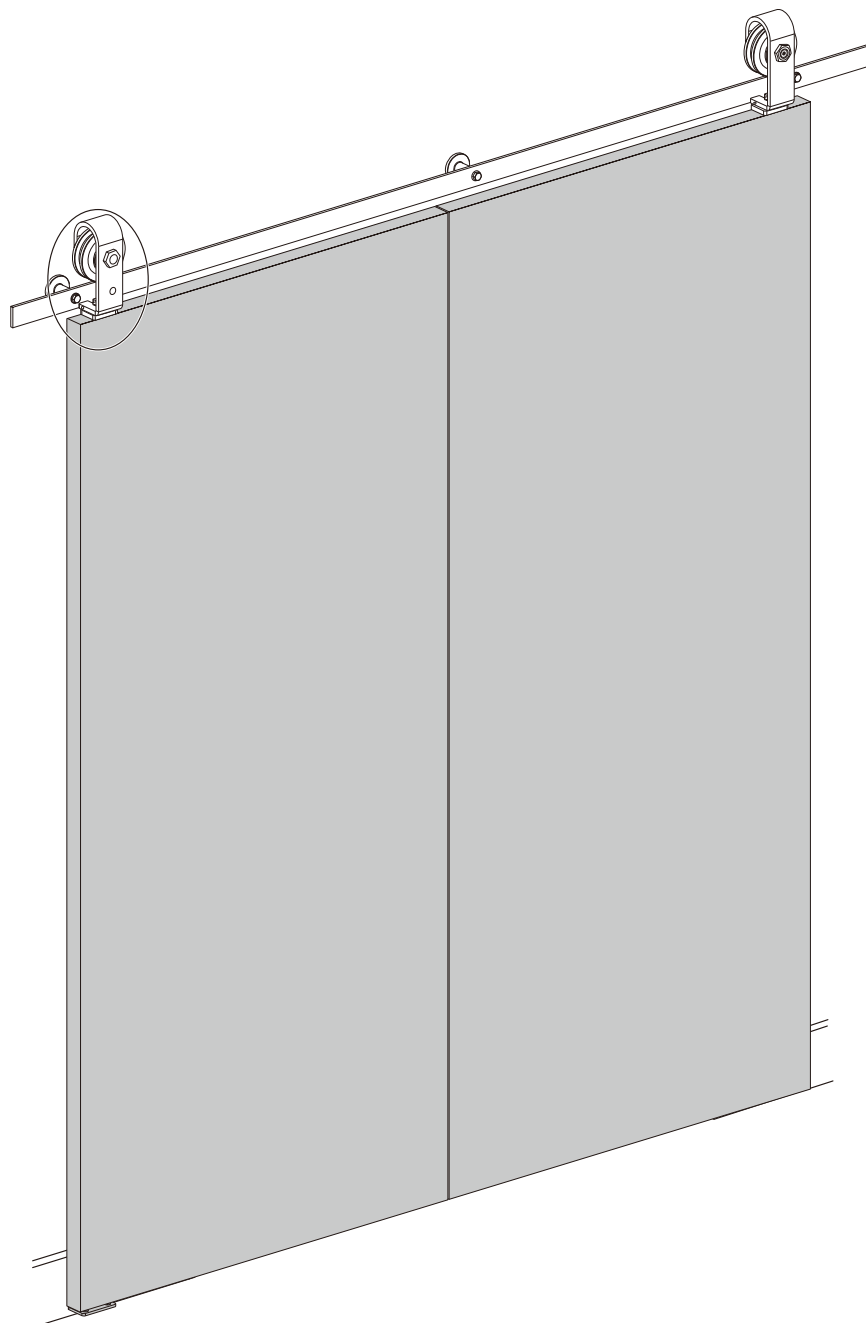

### Step 11. Install hanger roller 2

Unscrew the screw, adjust the position of the door and the floor guide then push in the hanger roller card slot, fix it with screws.

Using a wrench to adjust the height of the hanger roller to a suitable position, and tighten it.

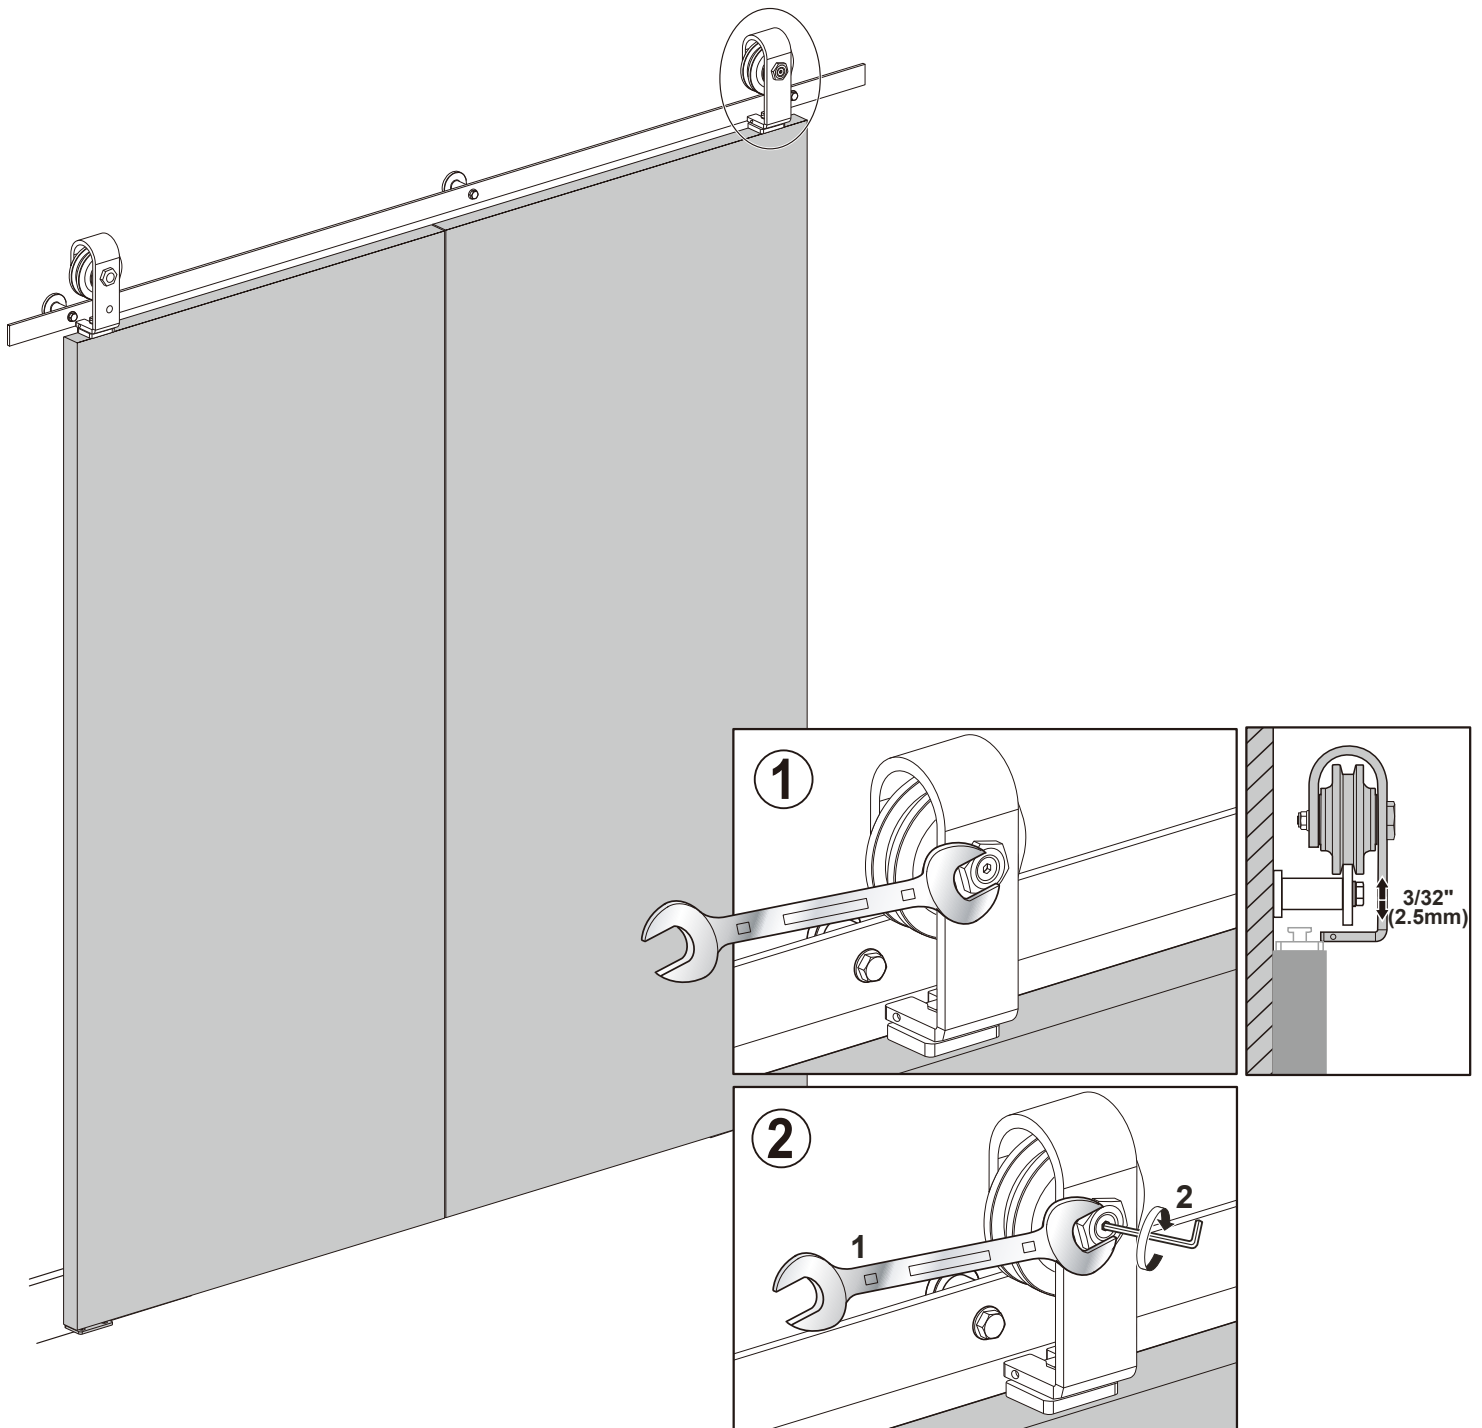

### Step 12. Install the fixed connector

Align the hole of the connecting piece with the lower hole of the hanger roller plate.

Using a wrench to pass through the hanger roller plate and the connecting piece.

Tighten the other two holes of the connector with a screw. Then install the nut with the wrench.

