


# U-Shaped Sofa


## Instruction Manual

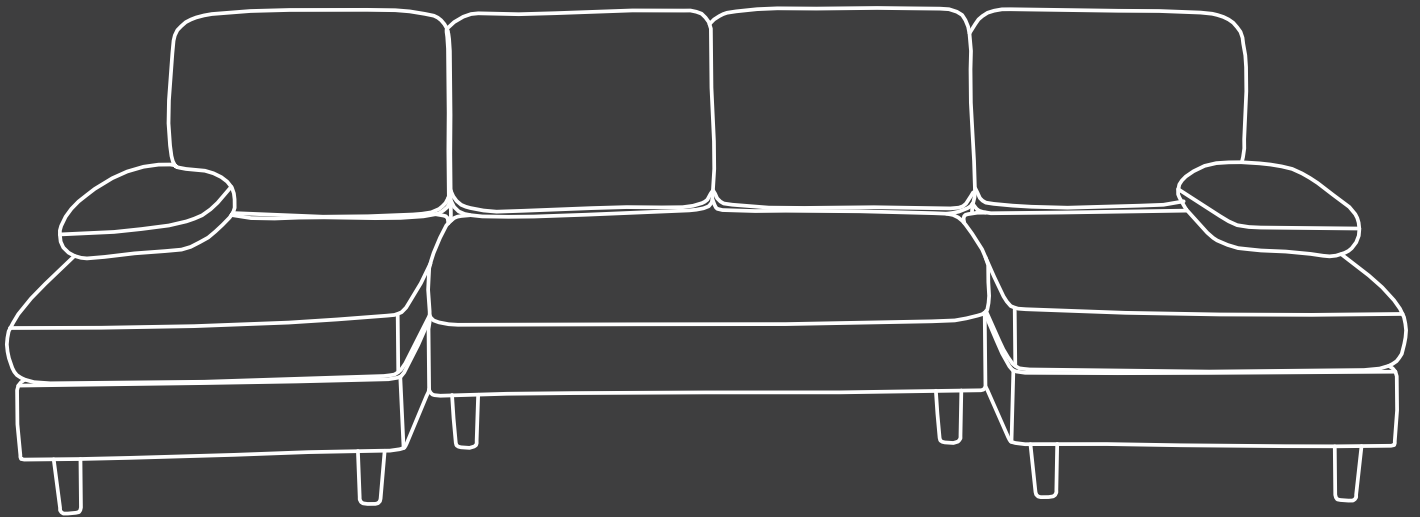


# 1 Component List

---


**A1** x1

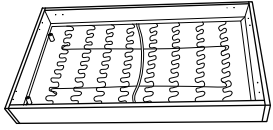


**A2** x1

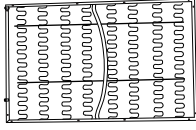

**B** x1

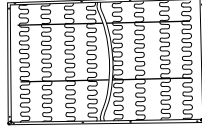

**C** x2



**D** x2




**E** x2




**F** x2




**G** x2

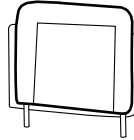

**H** x1



**I1** x1



**I2** x1



**J** x1



**K** x2



**L1** x1



**L2** x1



**M** x2



**N** x12



**O** x1



M6

**P** x24



8\*45mm

**Q** x54



8\*20mm

**R** x12



**S** x4



**T** x12





Felt Pads

**U** x6




Split Lock Washer

# Exploded View

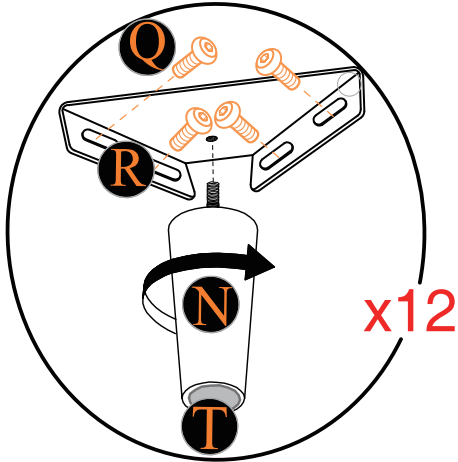
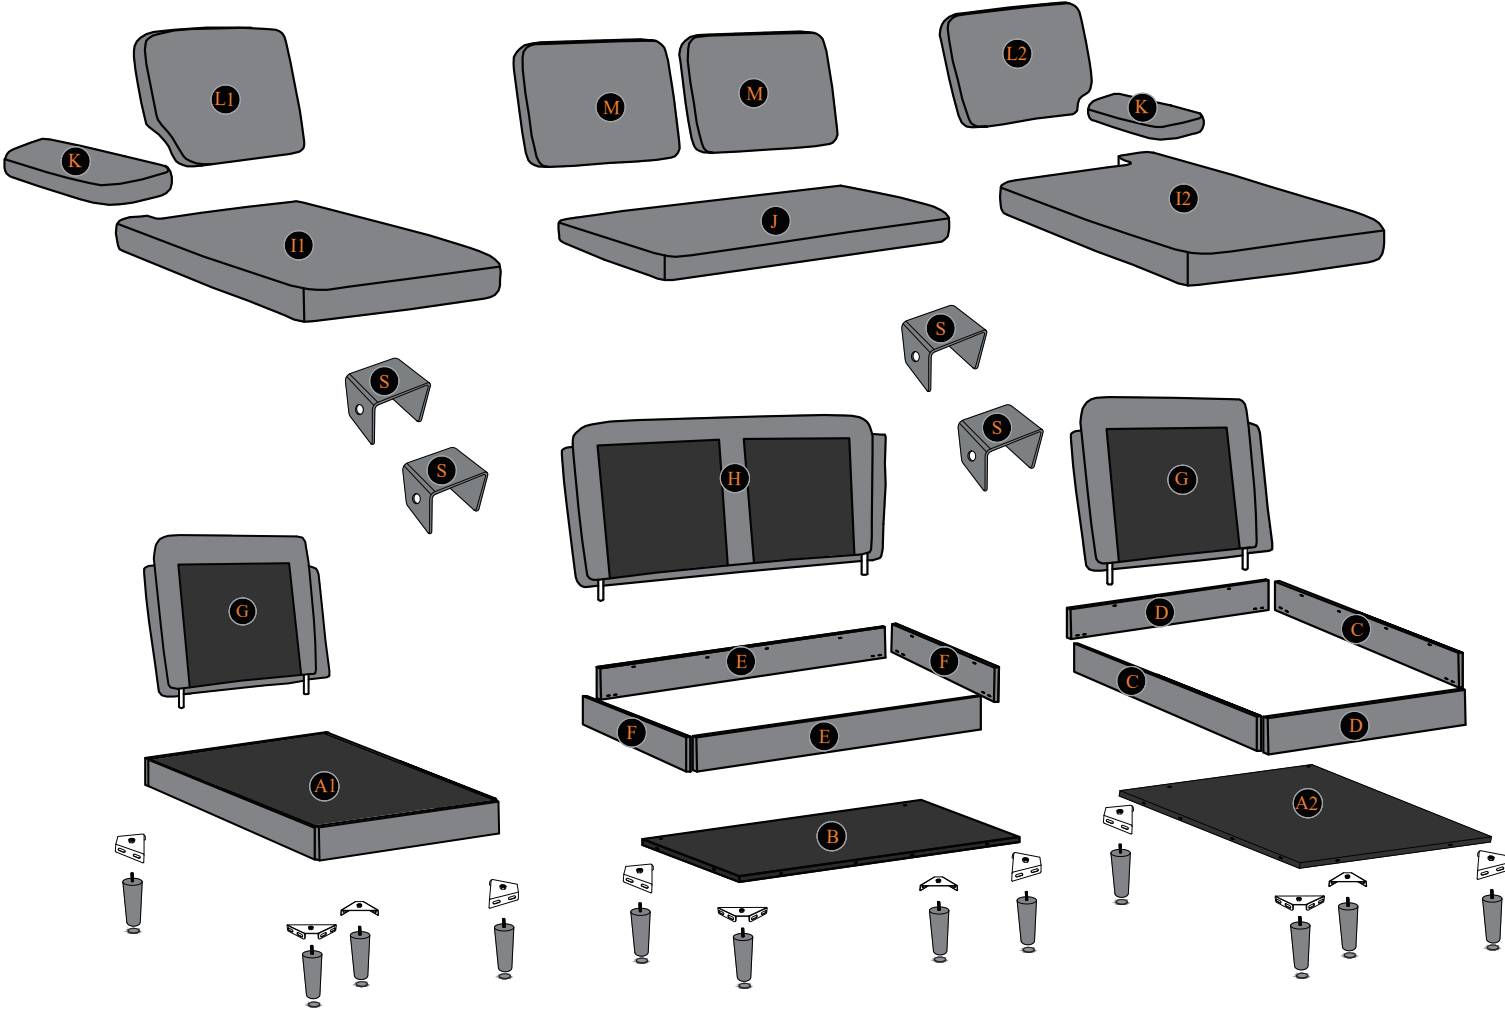





# Step 1

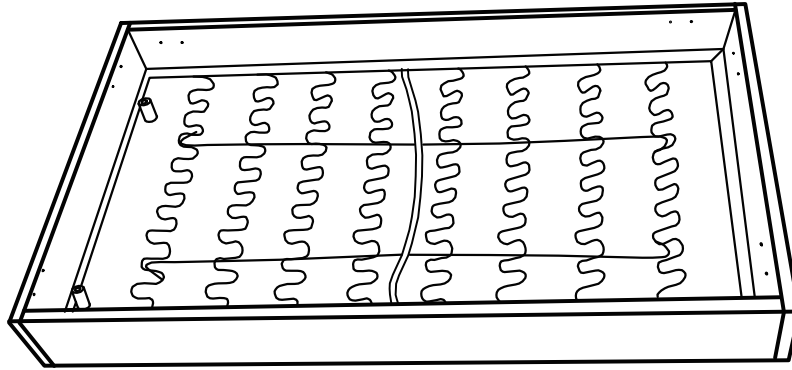
A1

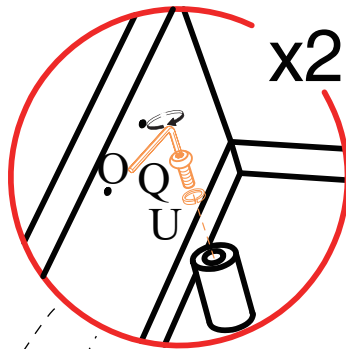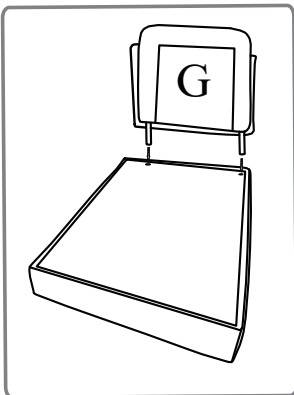


# Step 2




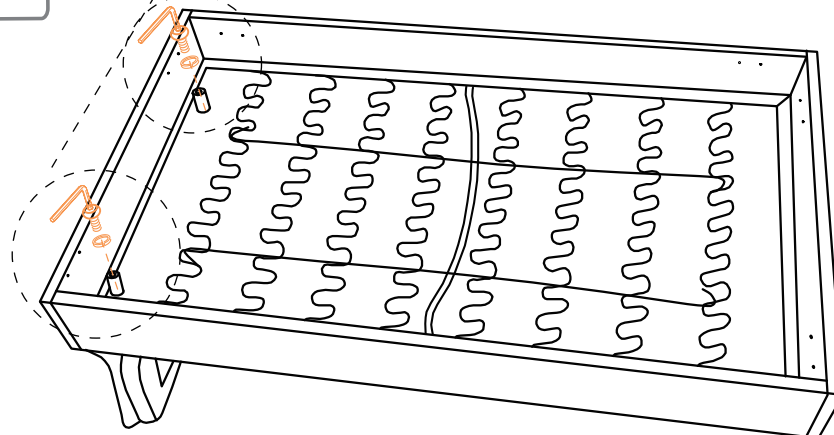


 M6 O*1	 8*20mm Q*2	 U*2
--	--	--

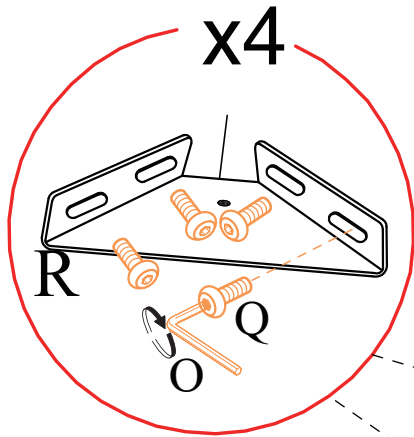



# Step 3



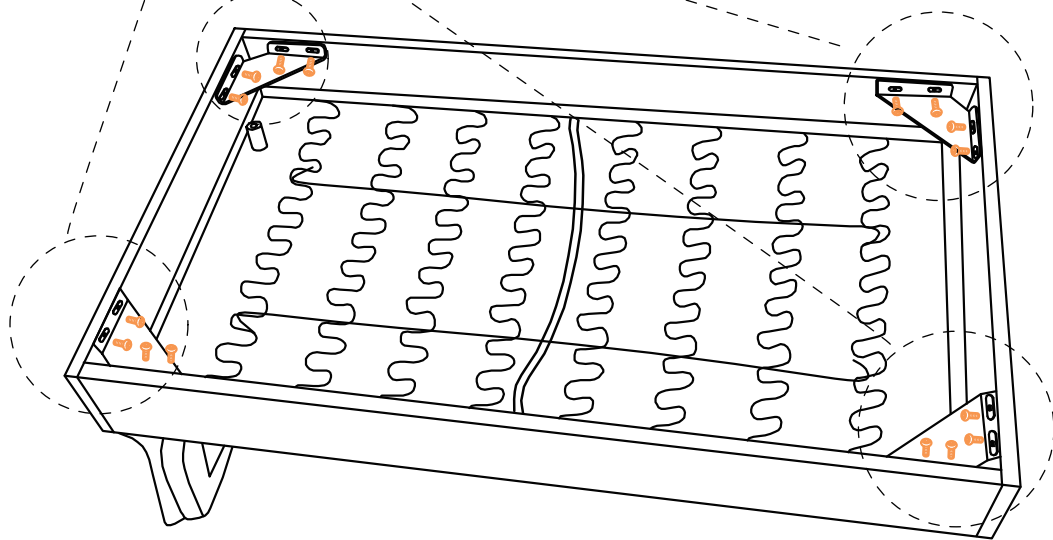


		
R*4	M6 O*1	8*20mm Q*16



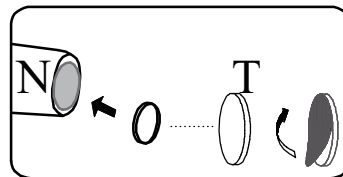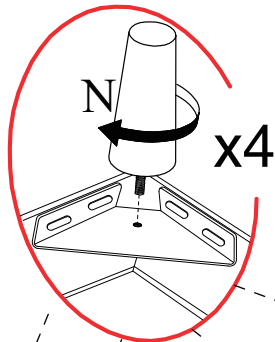

# Step 4


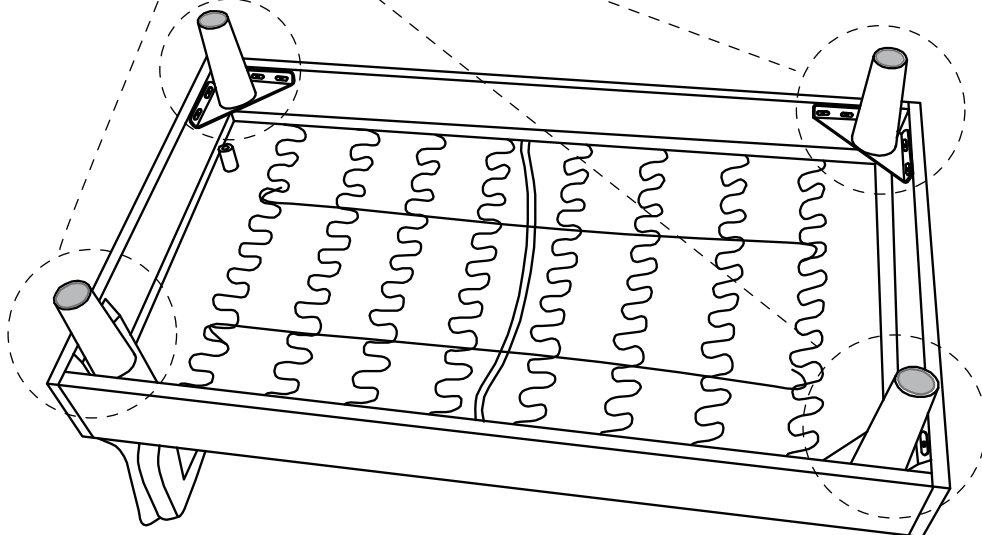


	
N*4	T*4








# Step 5

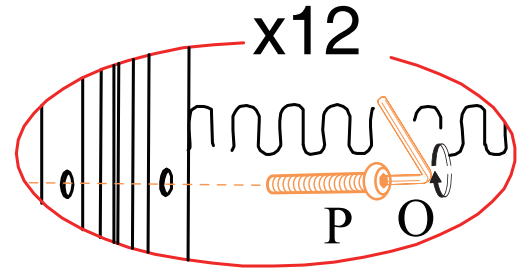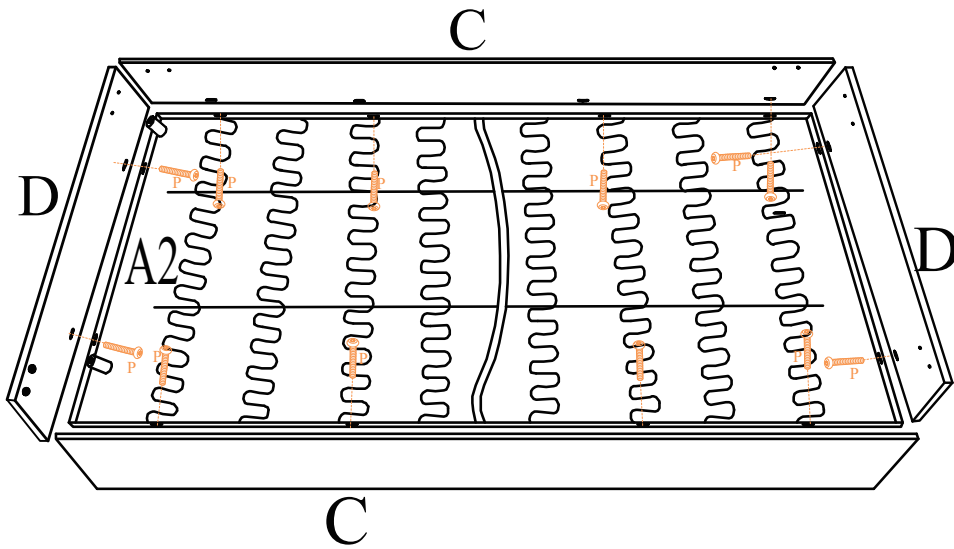
	
M6	8*45mm
O*1	P*12

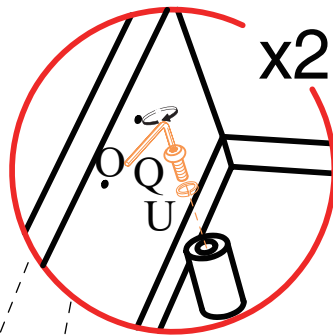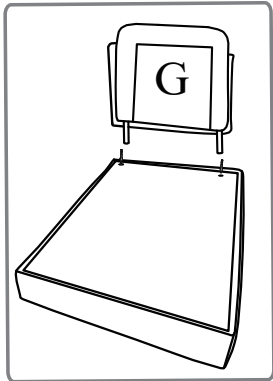


# Step 6




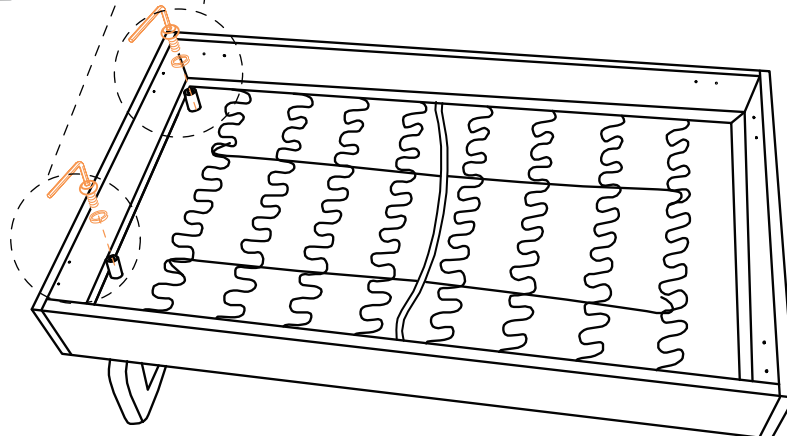


		
M6	8*20mm	
O*1	Q*2	U*2

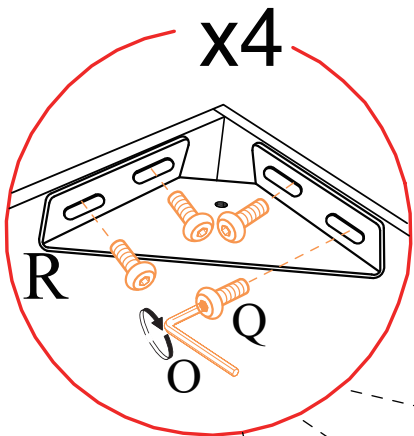



# Step 7





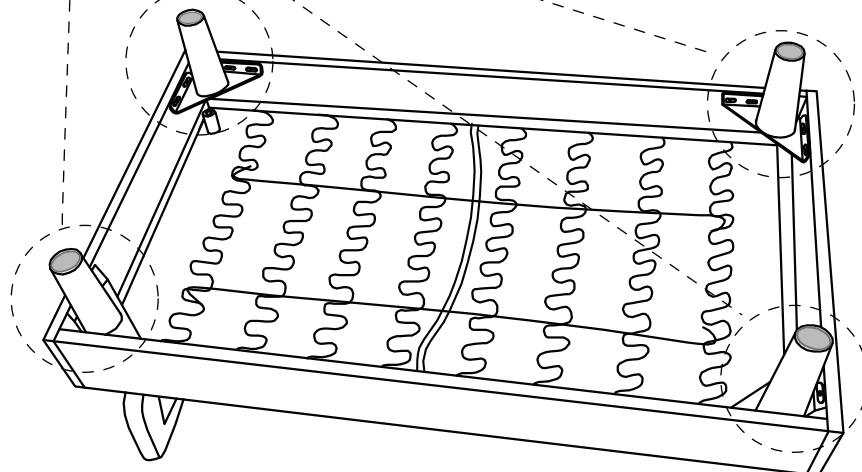
		
R*4	M6 O*1	8*20mm Q*16

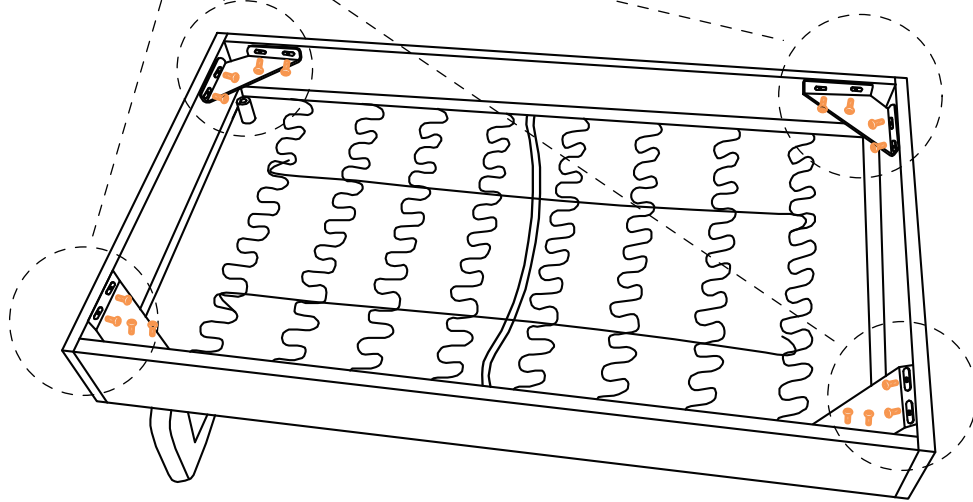


# Step 8

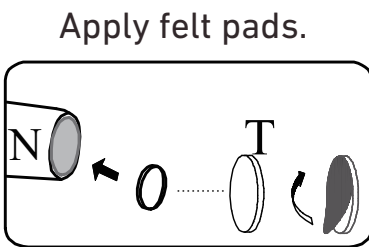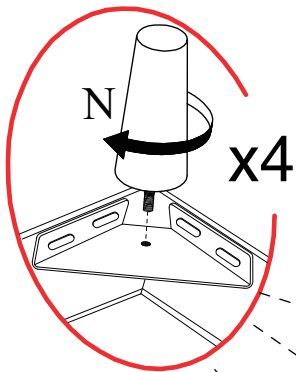




	
N*4	T*4

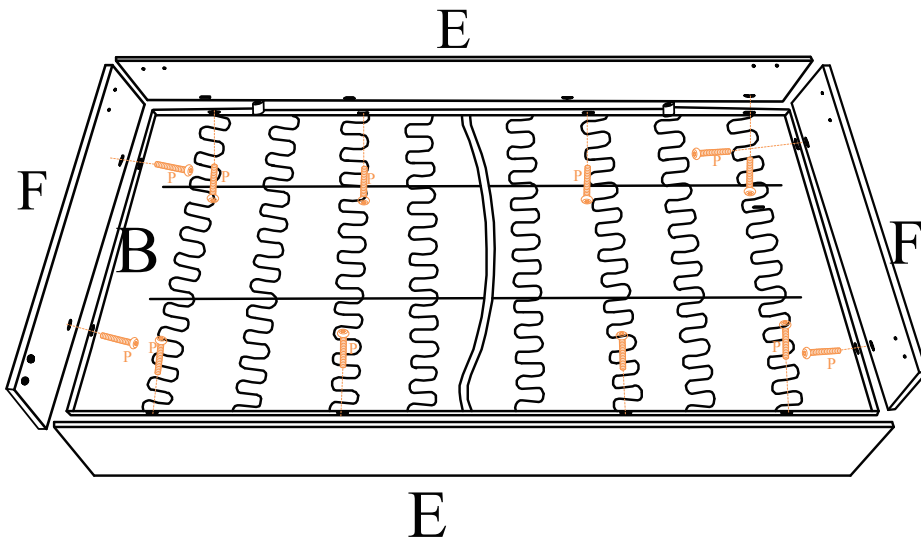


# Step 9



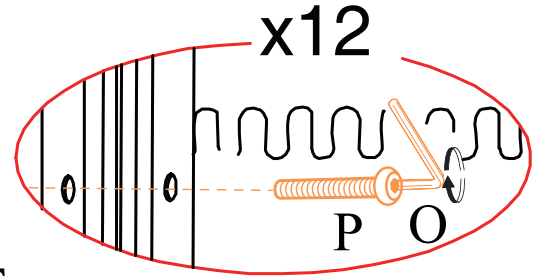


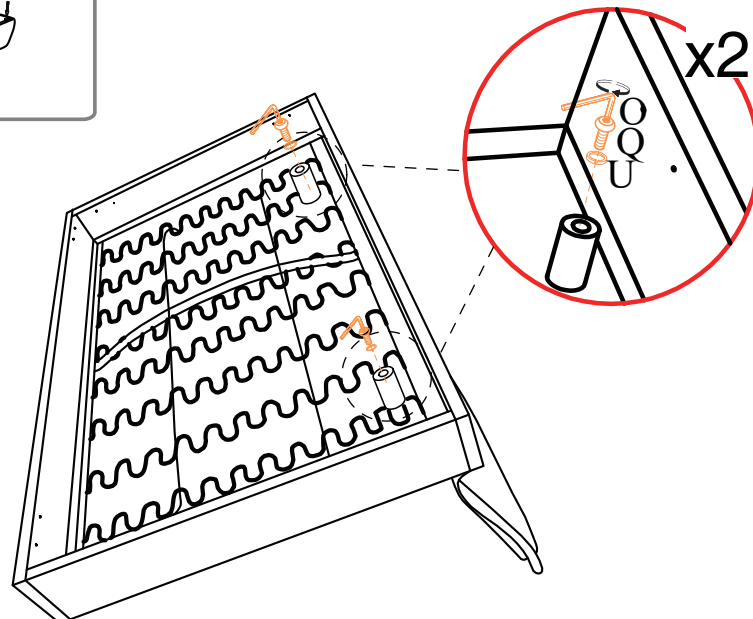
	
M6	8*45mm
O*1	P*12

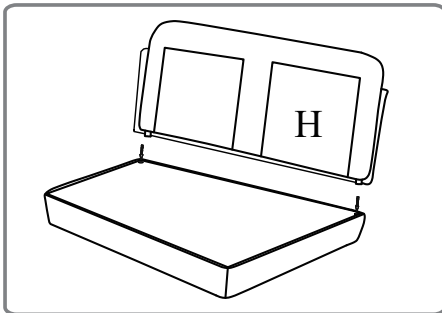


# Step 10






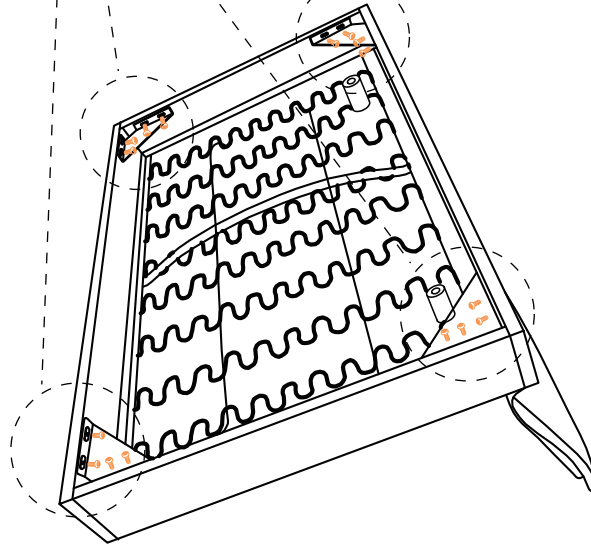
		
M6	8*20mm	
O*1	Q*2	U*2

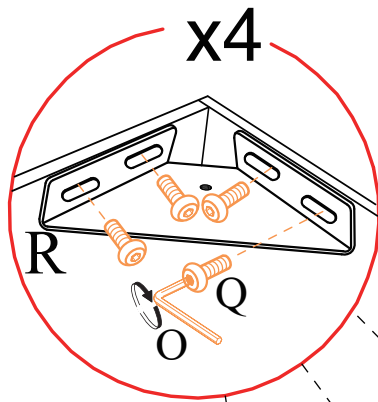


# Step 11




		
R*4	O*1	Q*16





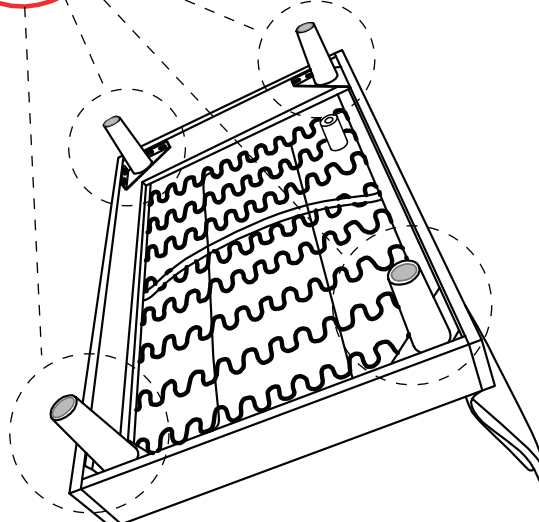
# Step 12

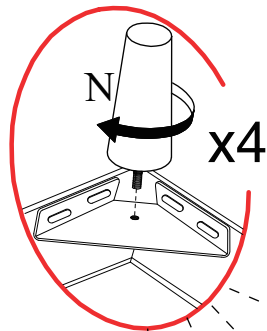



Apply felt pads.

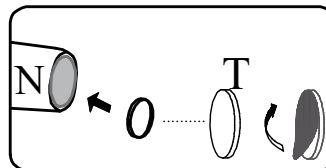


	
N*4	T*4




# Step 13


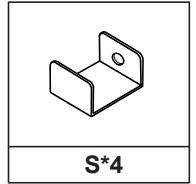
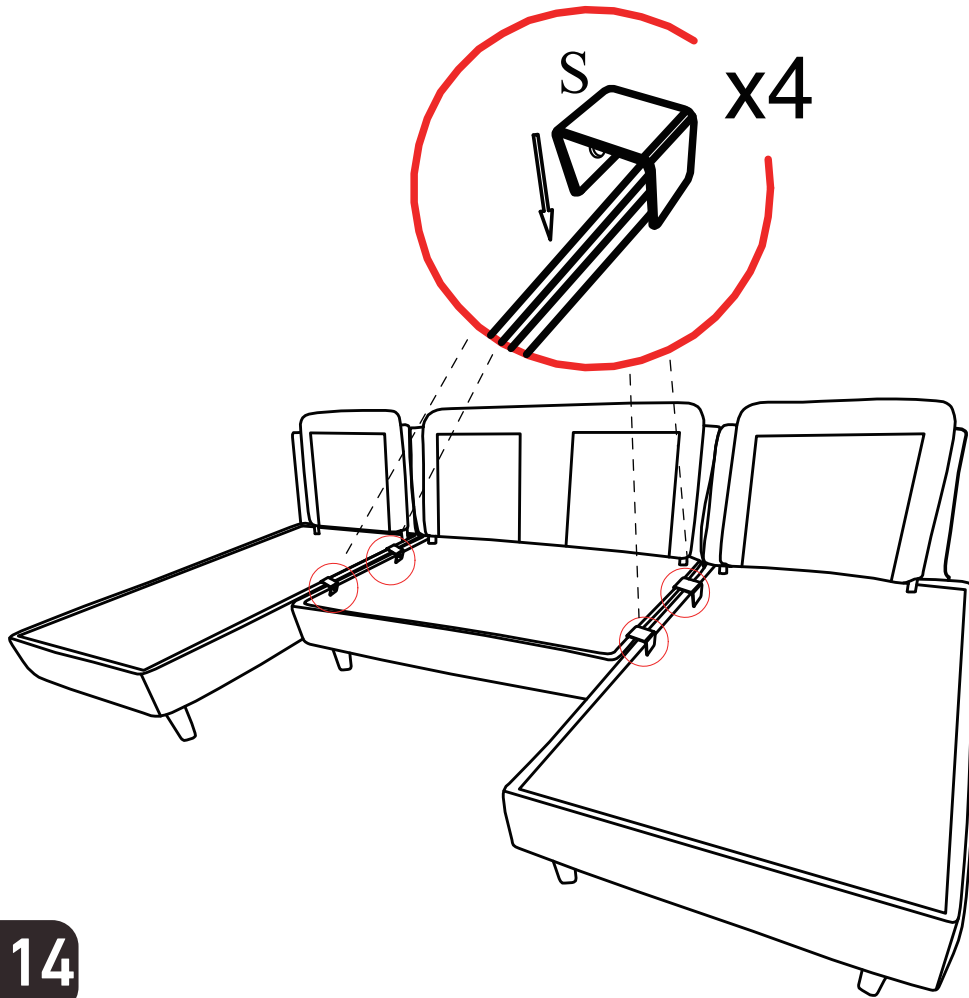


# Step 14

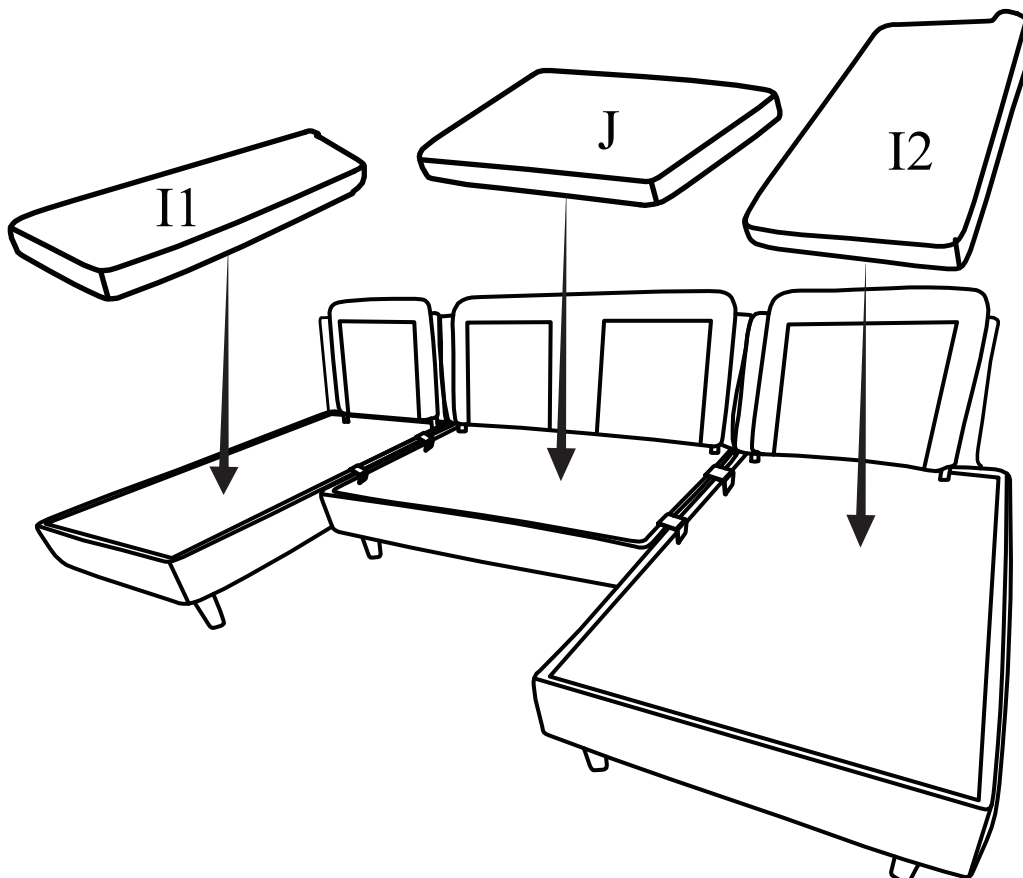


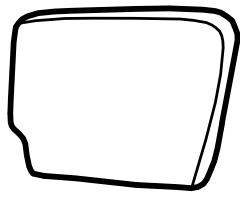





Pat the back cushion/armrest cushion 3 times along with longitude direction

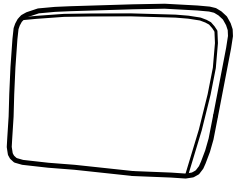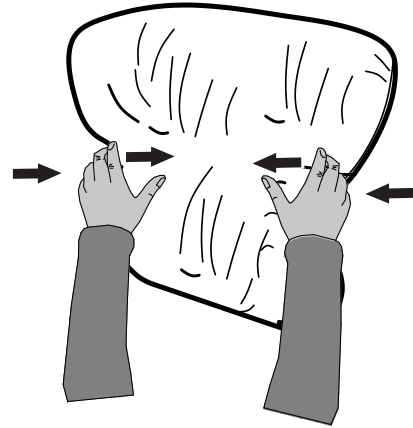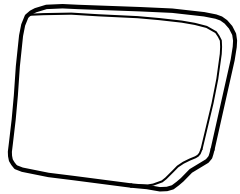

Pat the back cushion/armrest cushion 3 times along with latitude direction

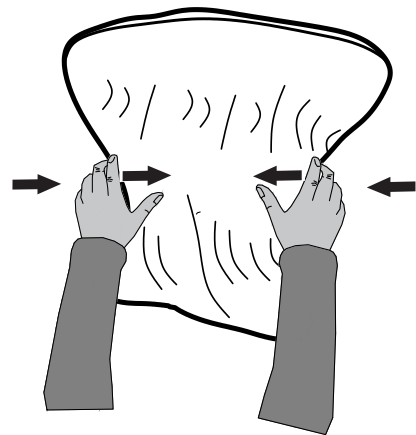


Pat the back cushion/armrest cushion surface 3 times

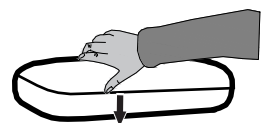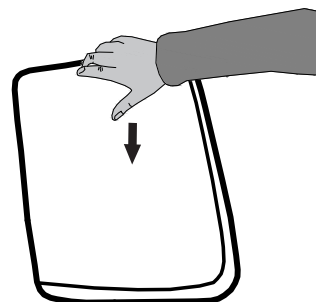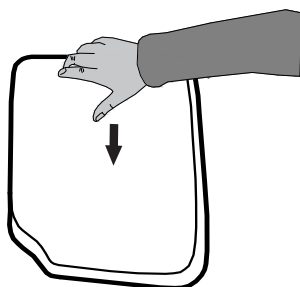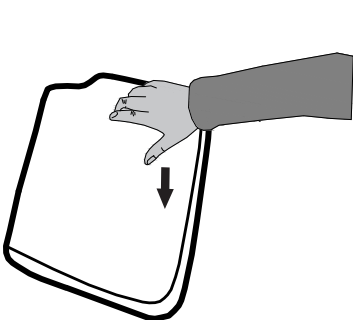


## Step 15

---

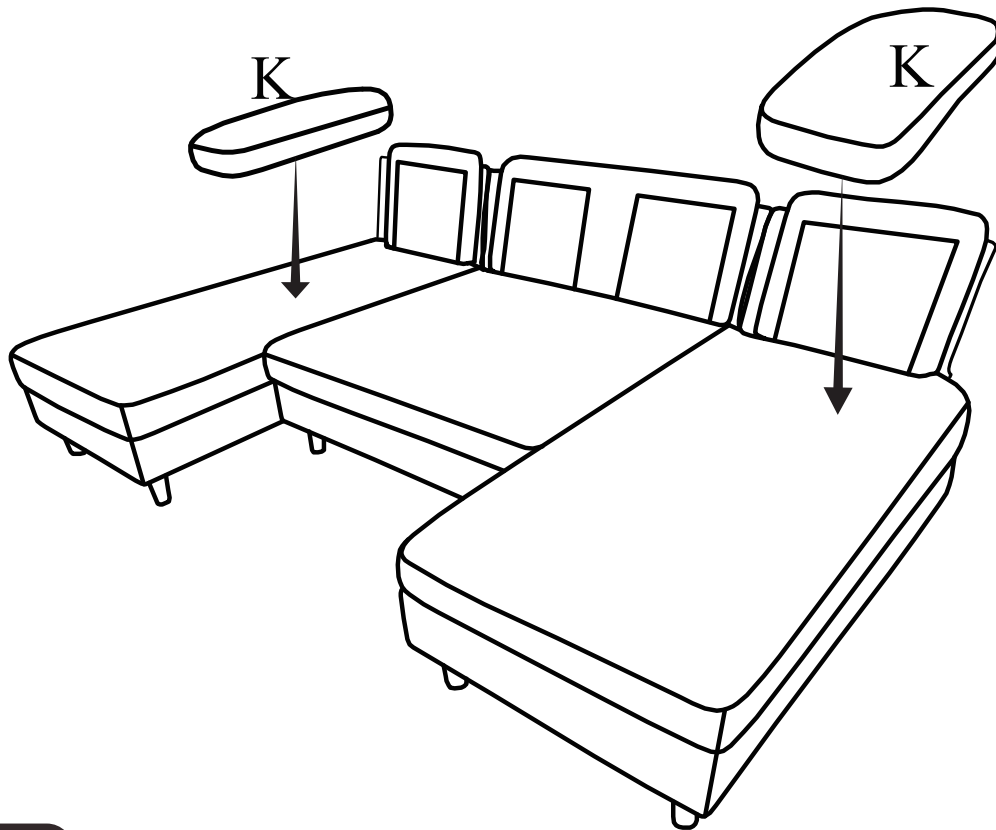


## Step 16

---

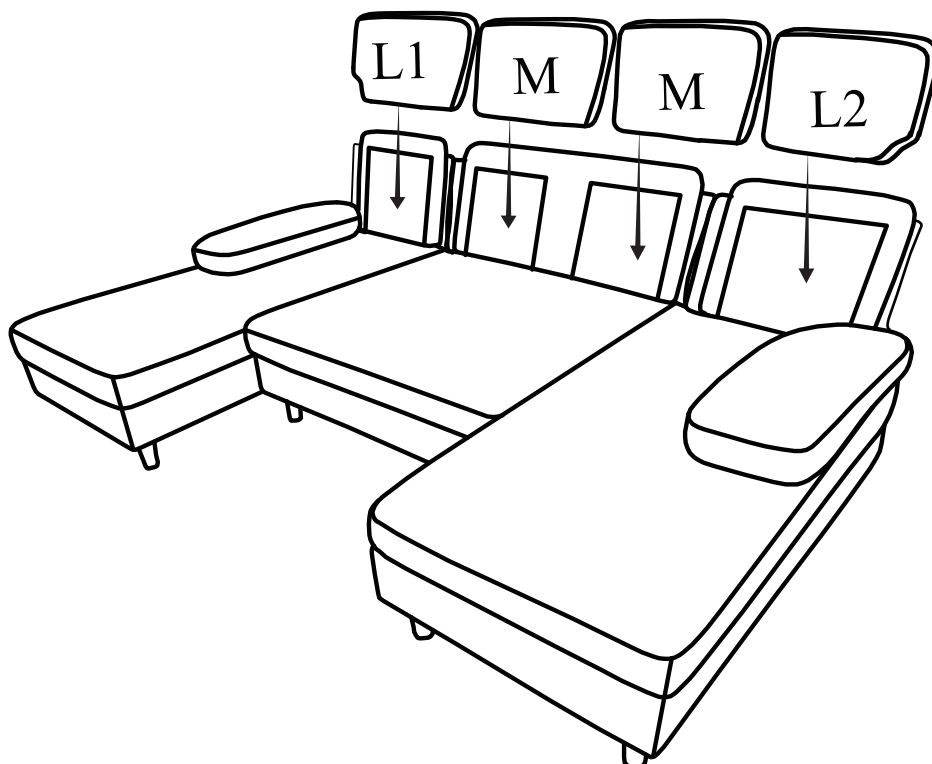

## Step 17

---

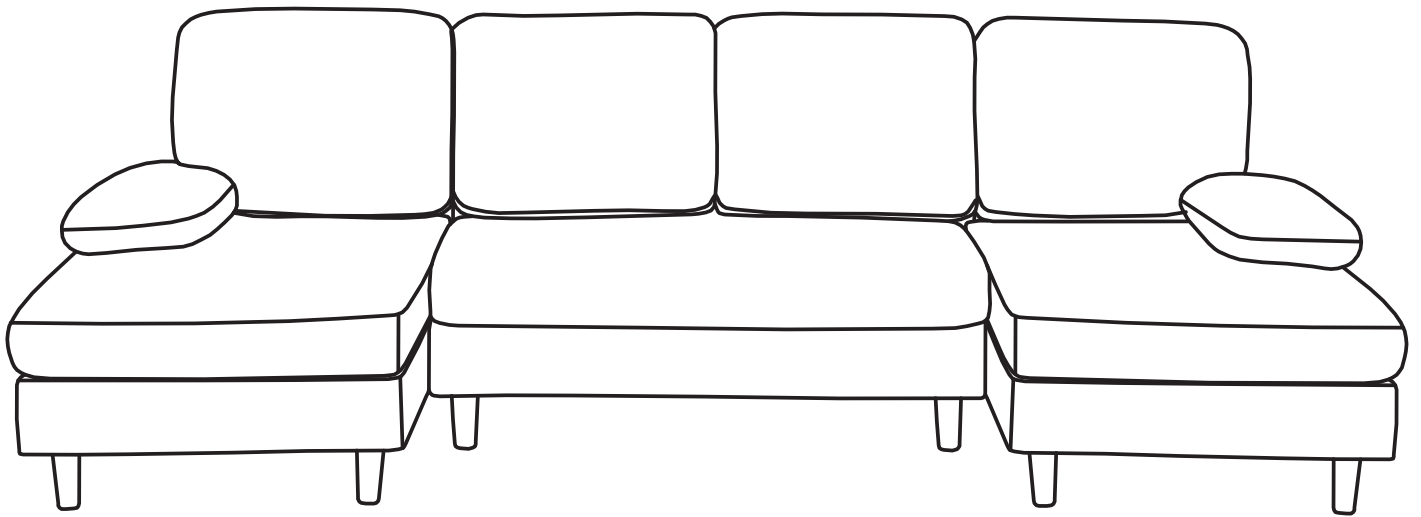

### **Note:**

After assembly, there may be visible compression marks on the surface. Gently pat the affected areas and allow the sofa to rest for 1-2 weeks. The surface will gradually return to its original shape.

