


Assembly instruction

Bed Frame With LED & Power Outlet


V-BF23-0166B-Q/F

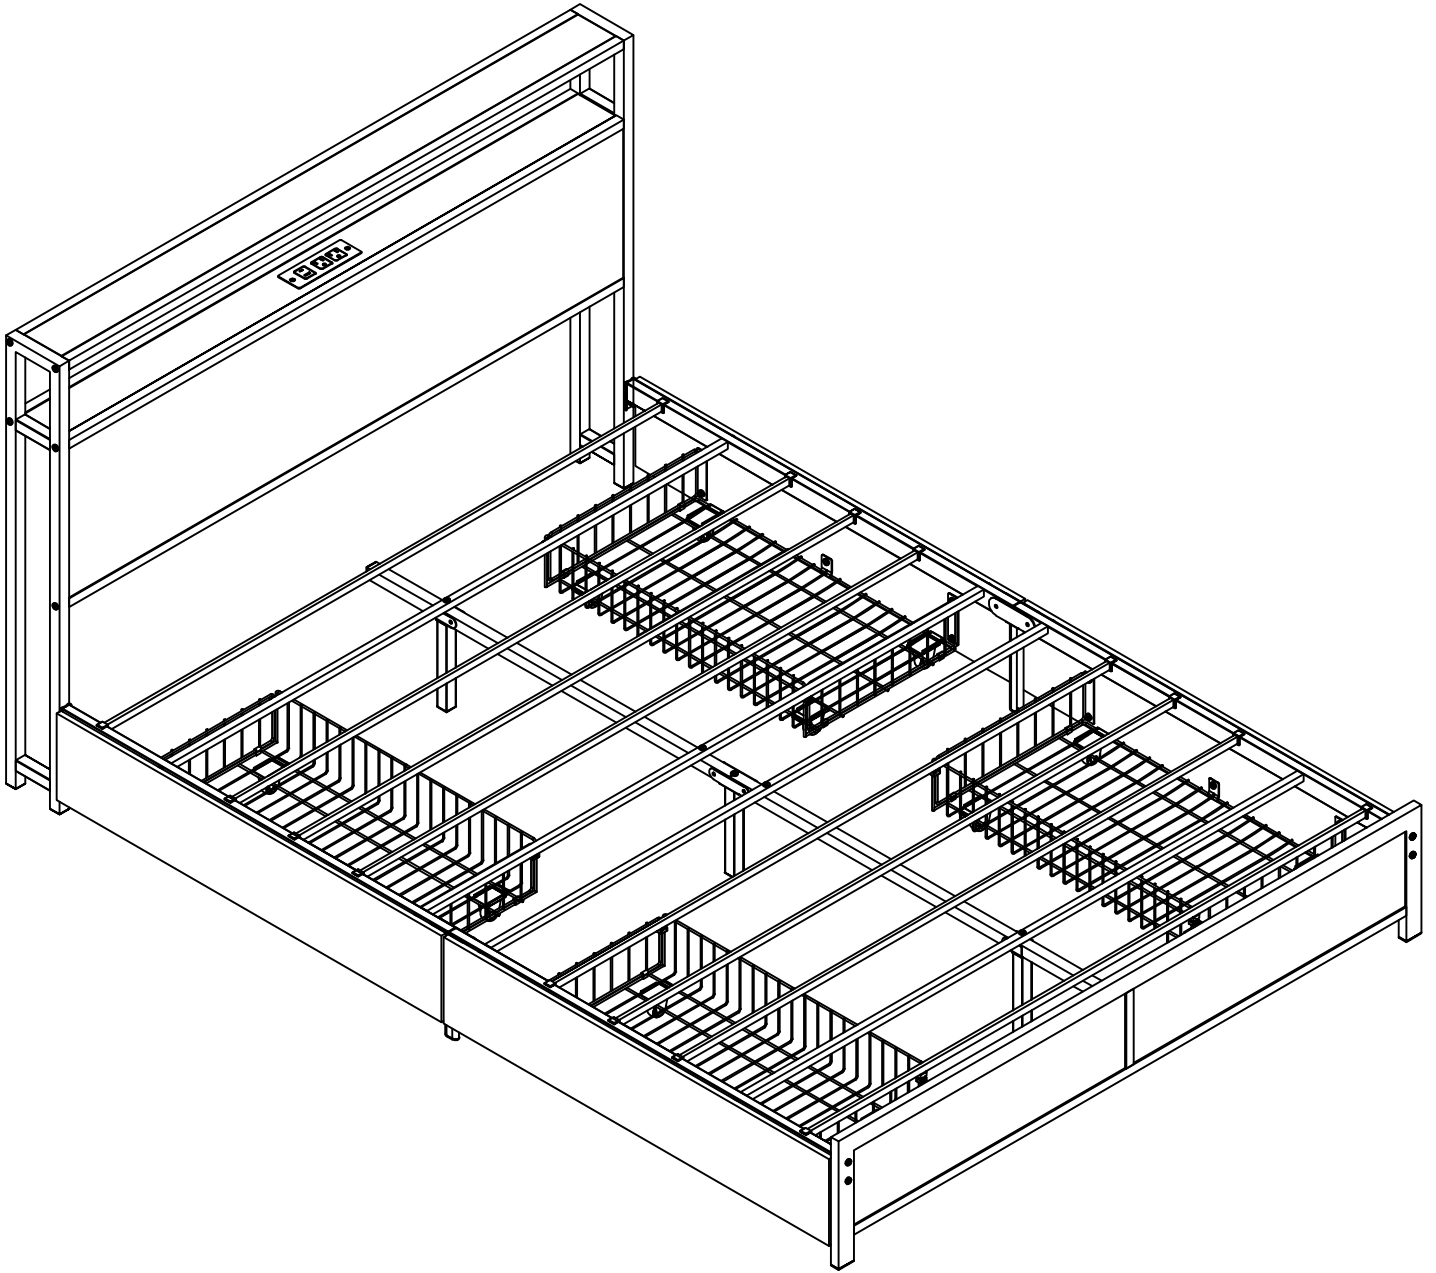













NEED HELP? Here is a detailed installation video. If you need visual installation guide, please scan the QR code to view the installation video. For more product inquiries and after-sales assistance, please feel free to contact our Customer Service Team by emailing at homeaftersales86@gmail.com.













Installation Manual

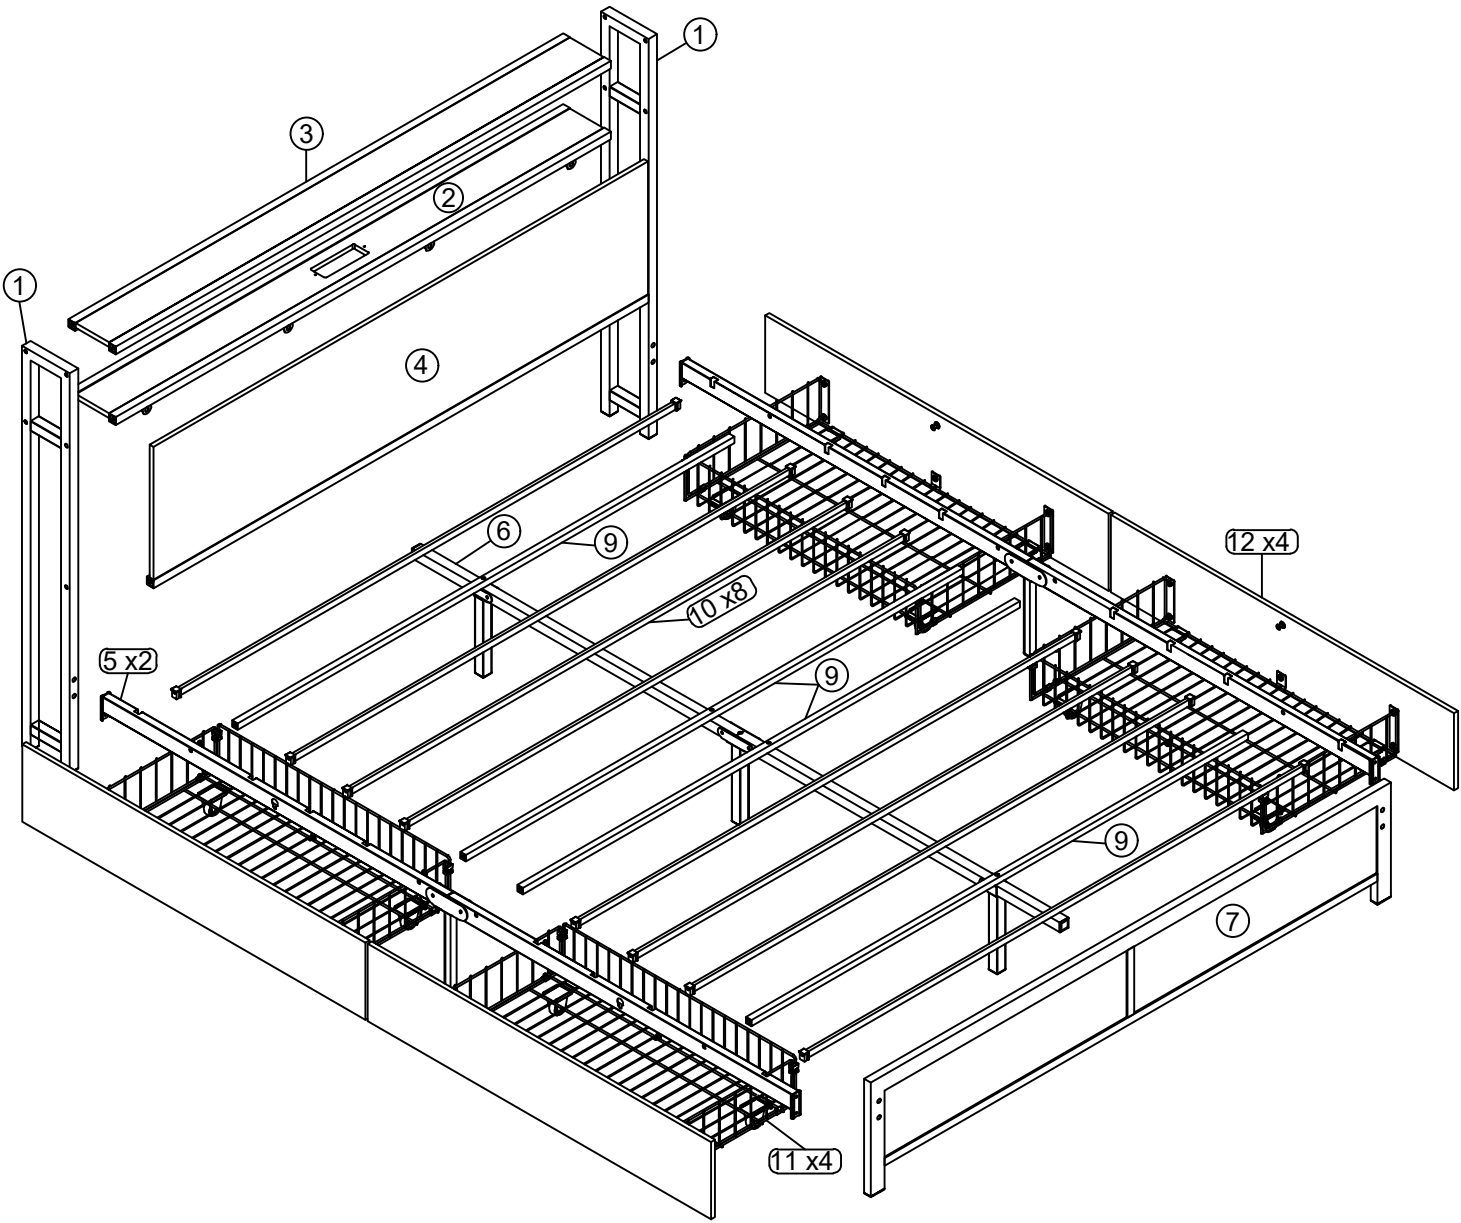

PART LIST

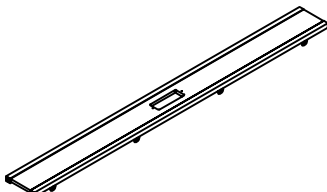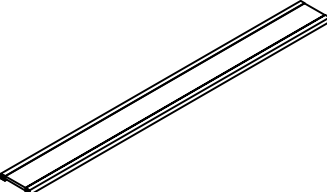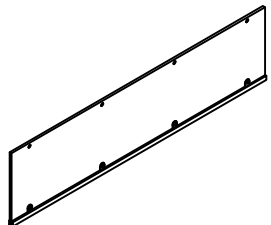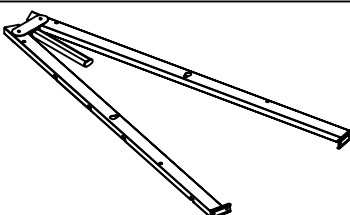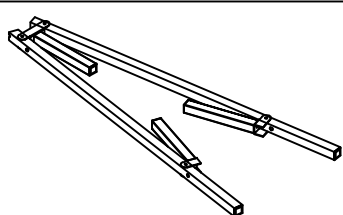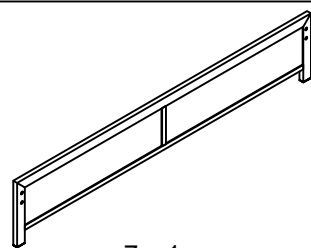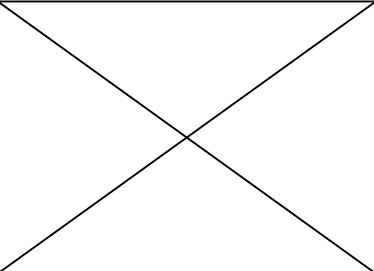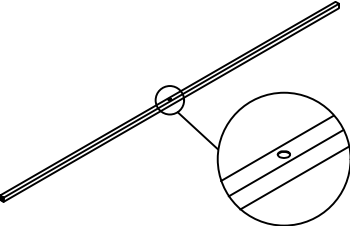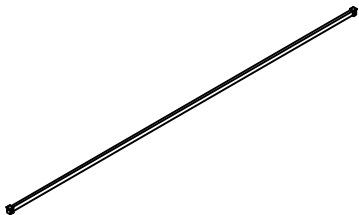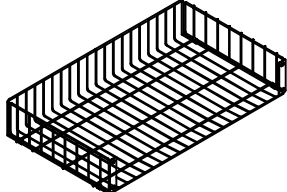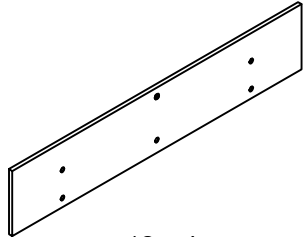			
1 x 2pcs	2 x 1pc	3 x 1pc	4 x 1pc
			
5 x 2pcs	6 x 1pc	7 x 1pc	
			
9 x 4pcs	10 x 8pcs	11 x 4pcs	12 x 4pcs

HARDWARE LIST

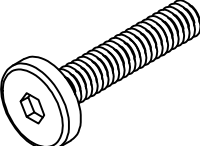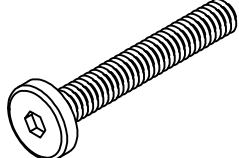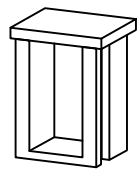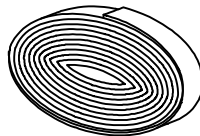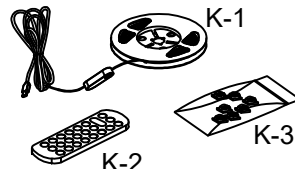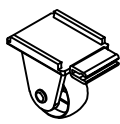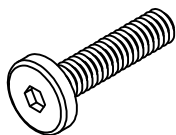			
M8x40mm Ⓐ x8pcs+1pc	M6x50mm Ⓑ x21pcs+2pcs	M6x10mm Ⓒ x24pcs+2pcs	Ø3.5x12mm Ⓓ x2pcs+1pc
			
M8x19mm Ⓔ x4pcs+1pc	4mm Ⓕ x1pc	Ⓖ x2pcs	Ⓗ x1pc
			
Ⓘ x4pcs+2pcs	Ⓙ x1pc	Ⓚ x1pc	Ⓛ x8pcs+2pcs
			
Ⓜ x16pcs	M6x30mm Ⓝ x2pcs+1pc		

1

Note: For easy setup intention,
do not tighten screws during
the installation process




ⓐ x1pc



Ø3.5x12mm
ⓓ x2pcs





4mm
ⓕ x1pc

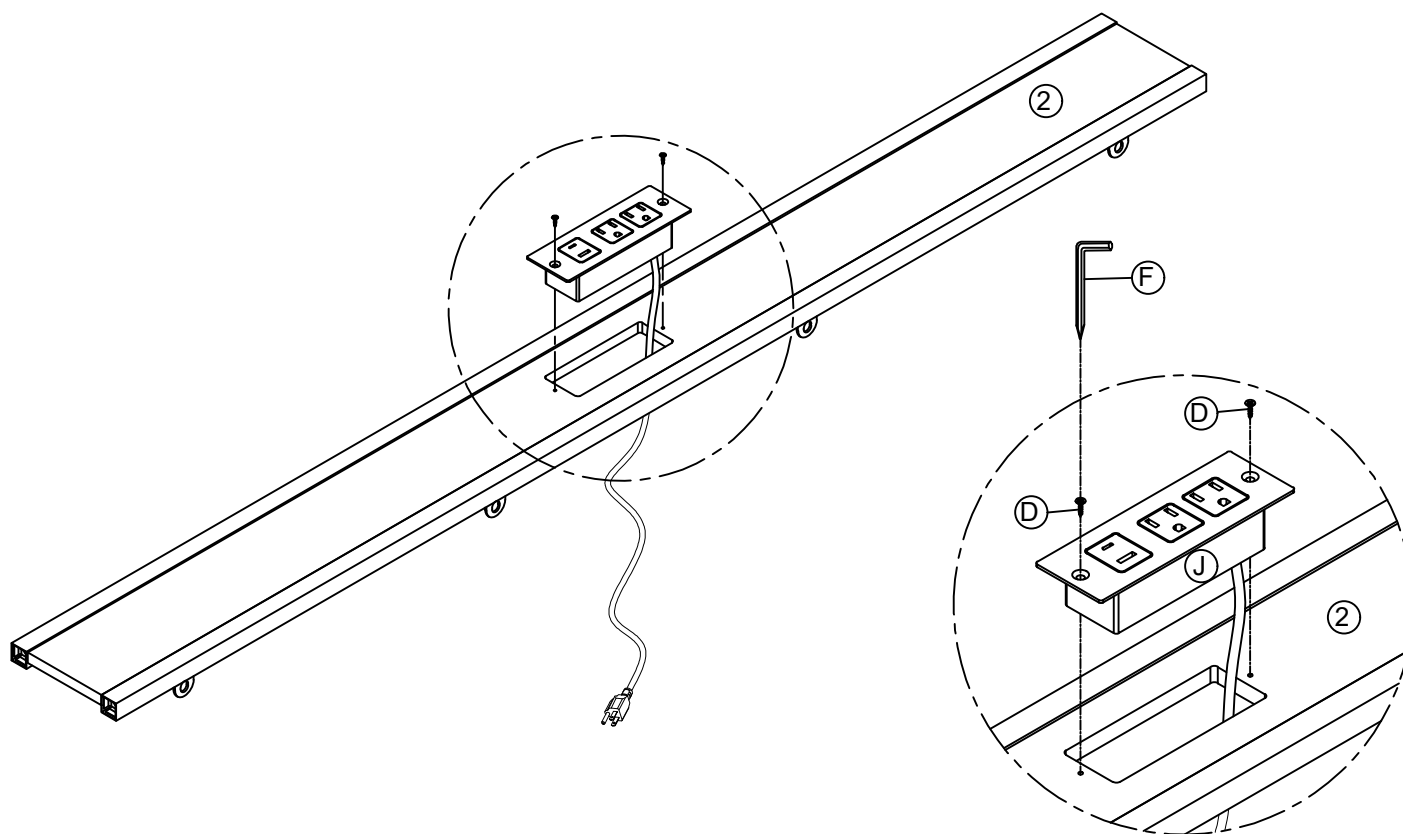

2

Glue K-3 self-adhesive ties evenly to parts 3 for future use.

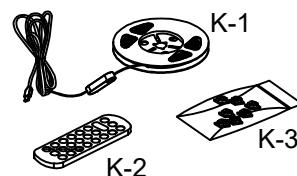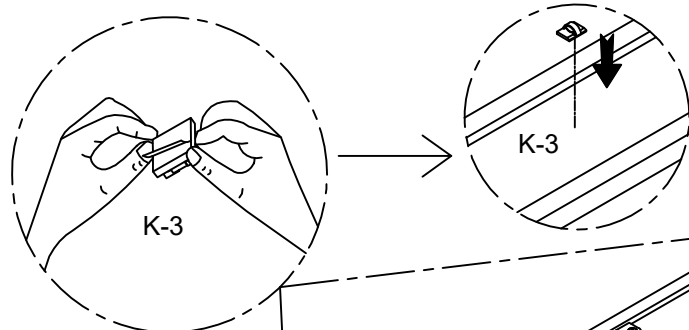


Ⓚ x1pc


Step 1

Installing the light strip


Step 2

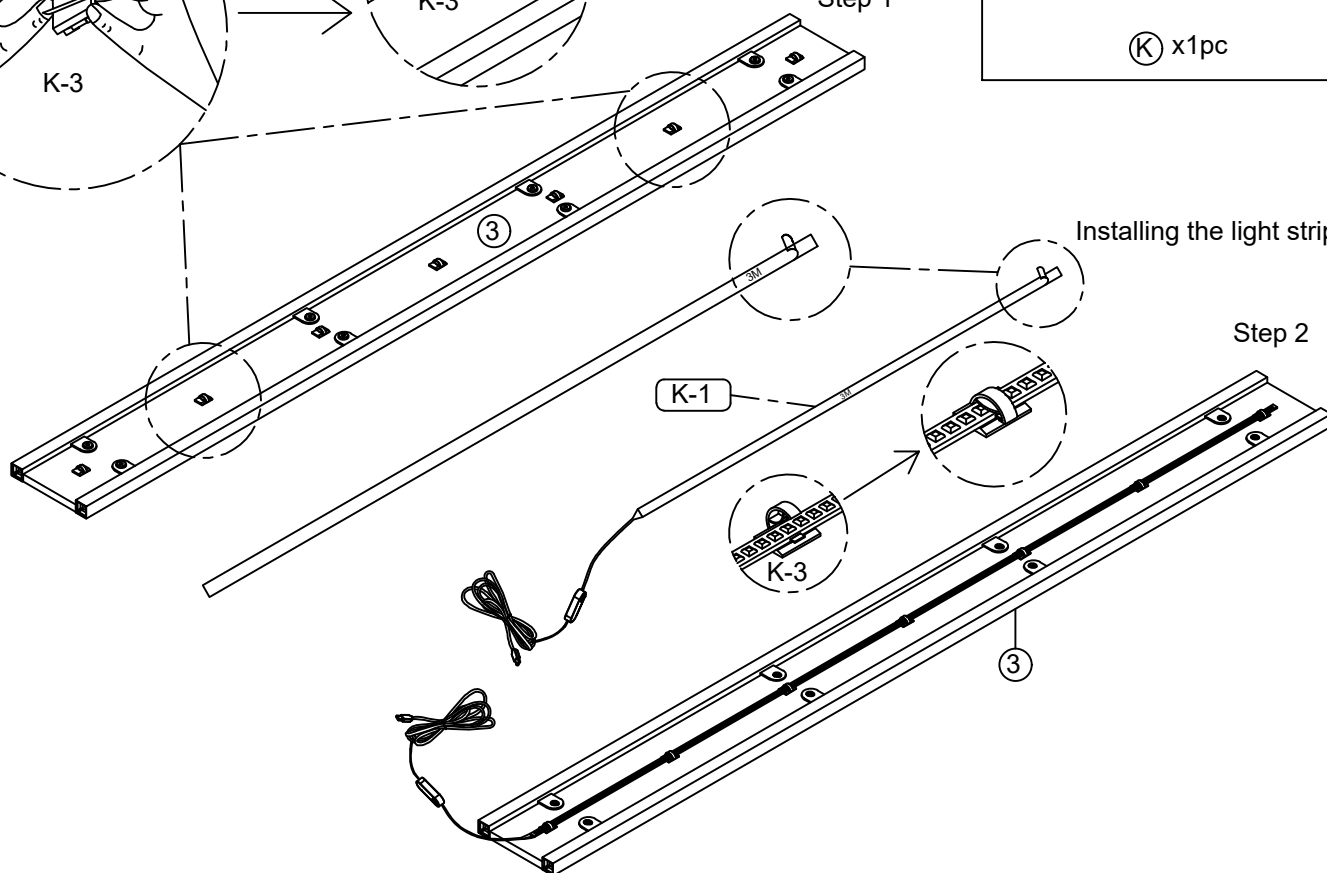


3

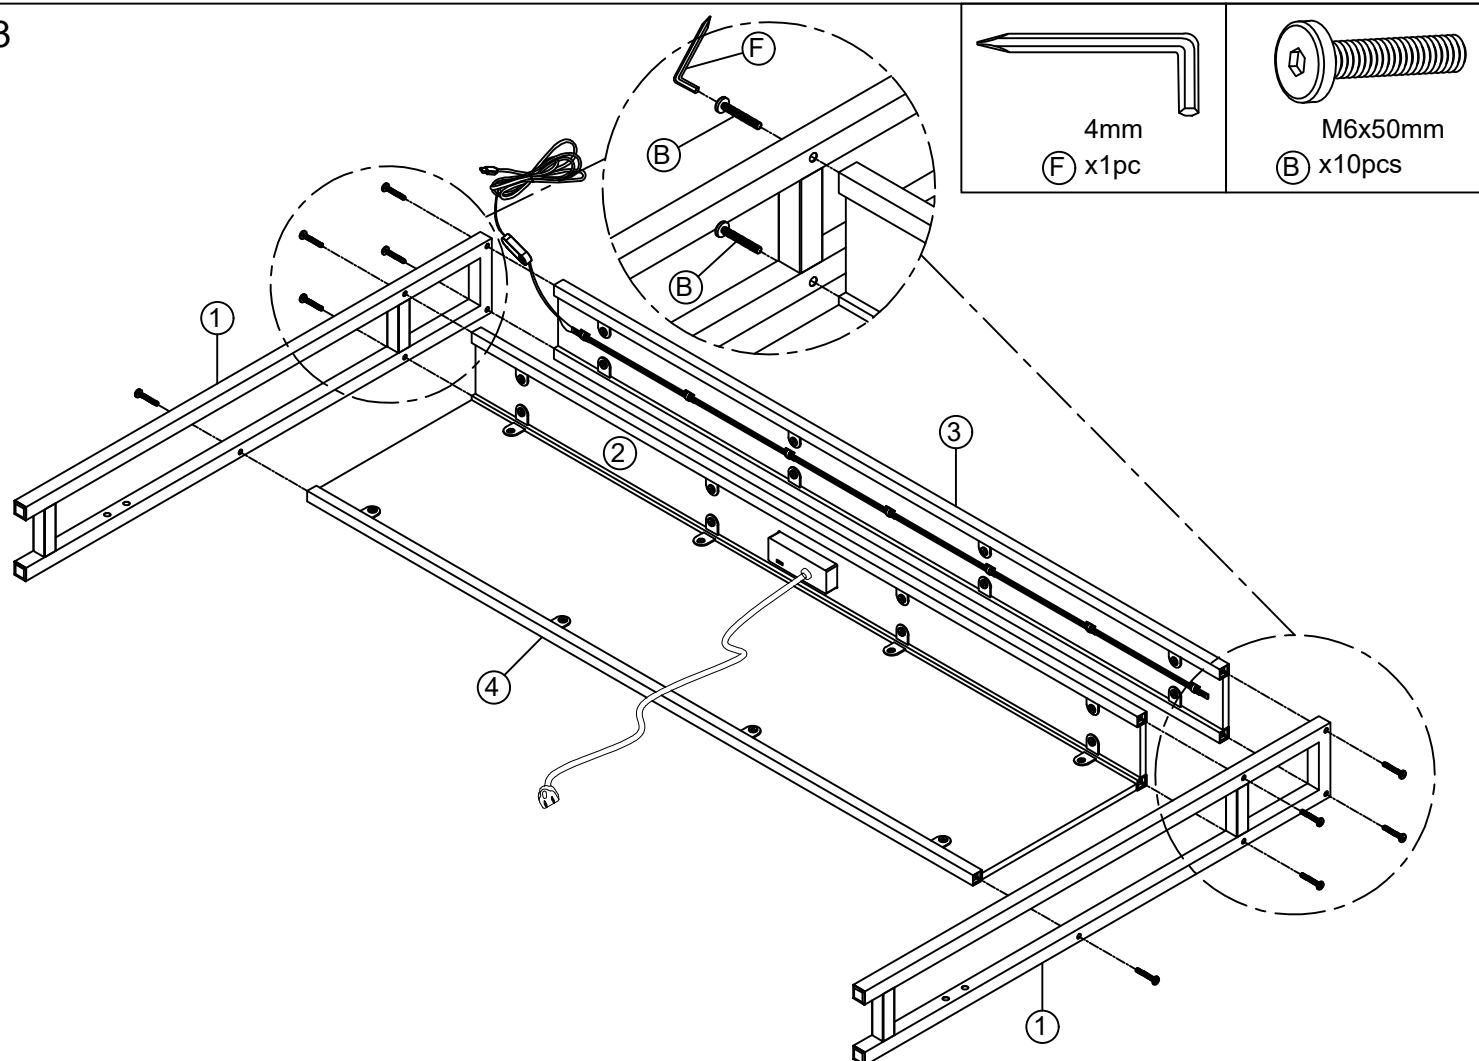


4

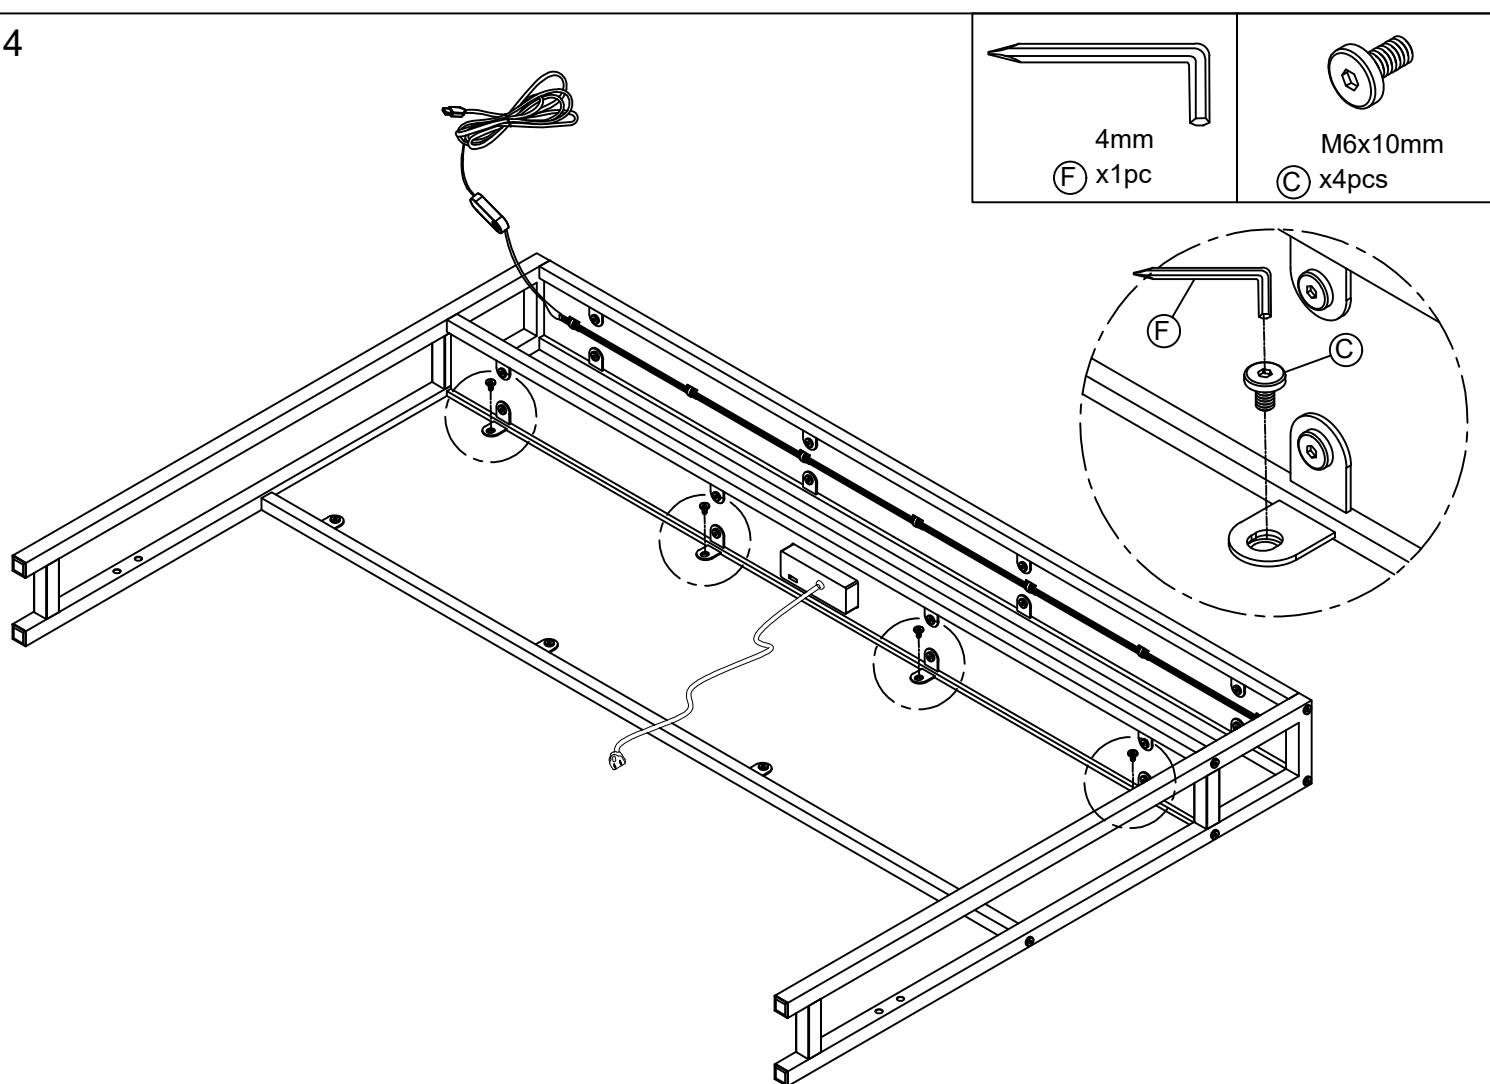



5

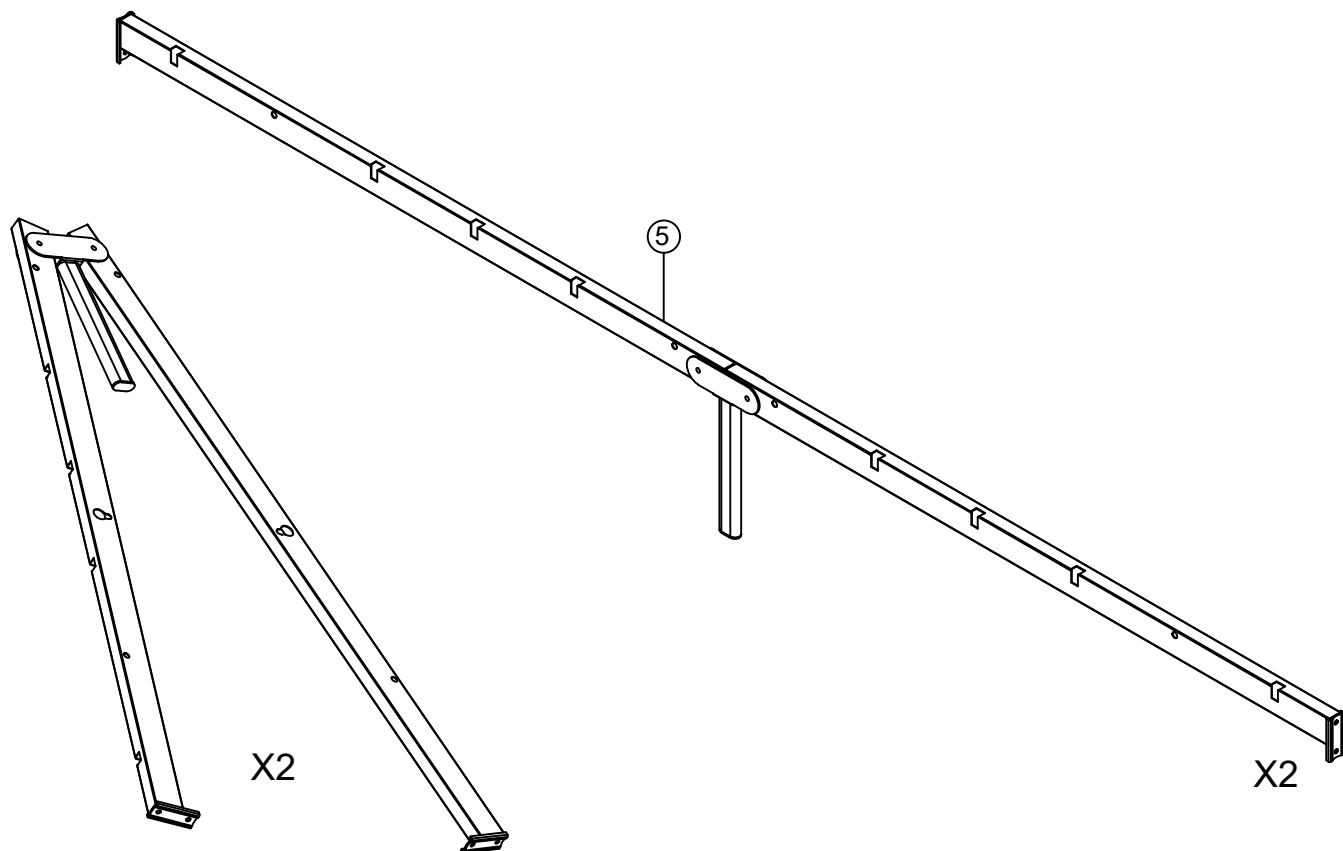


6

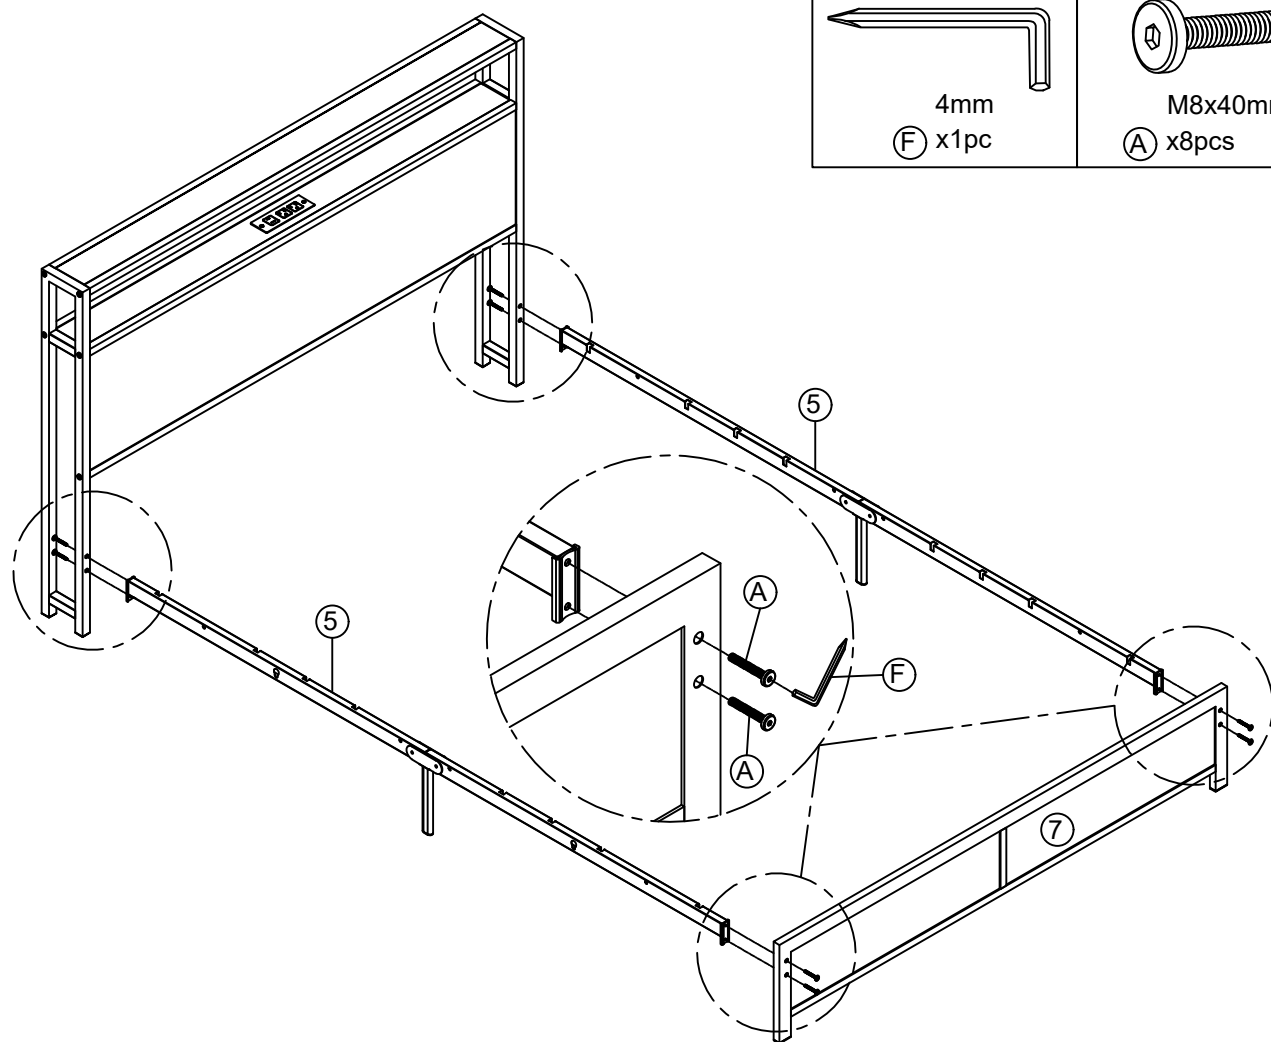

7

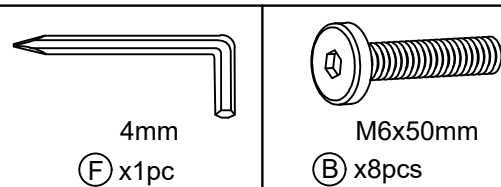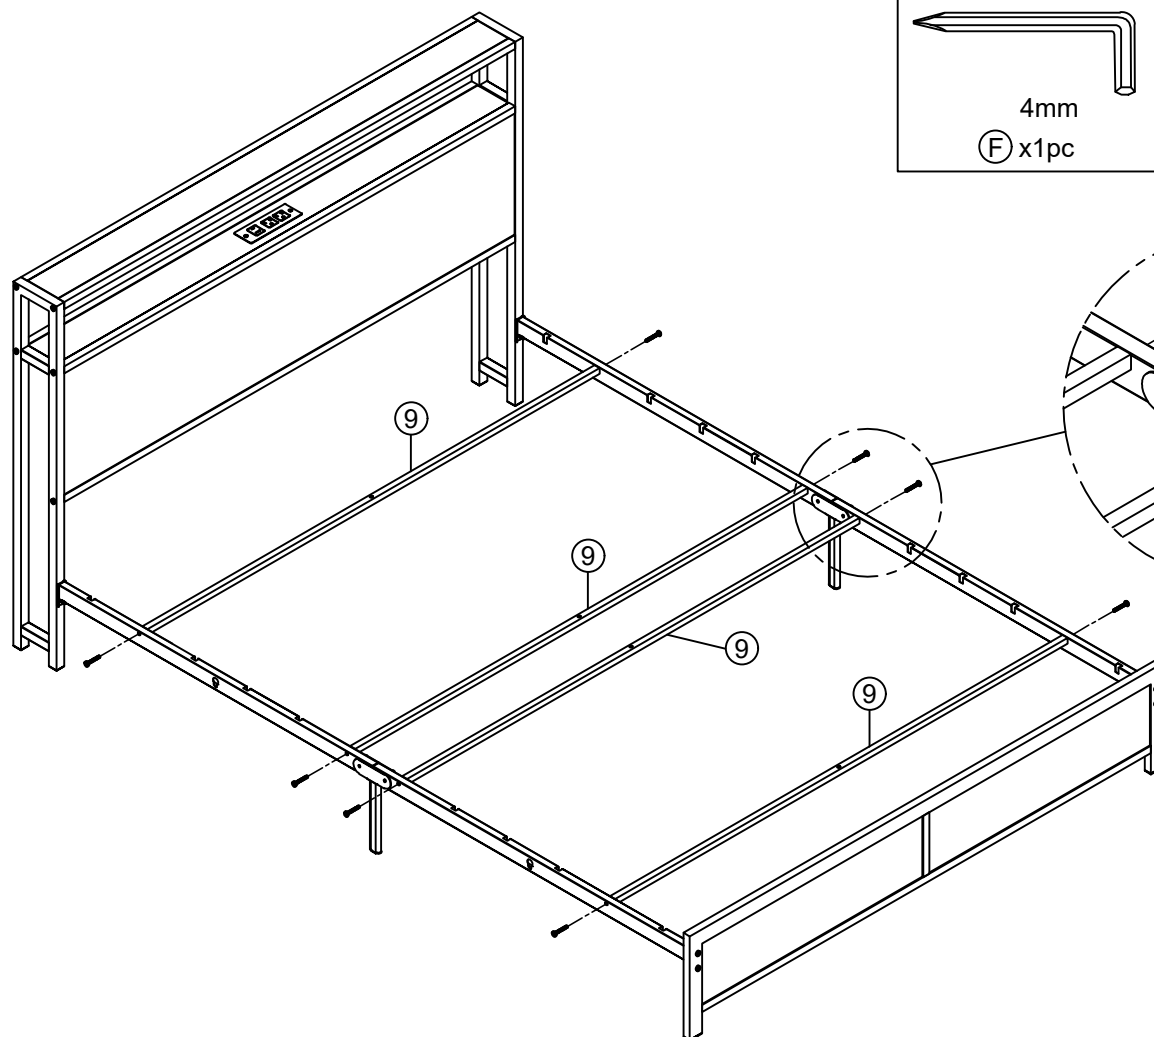

8

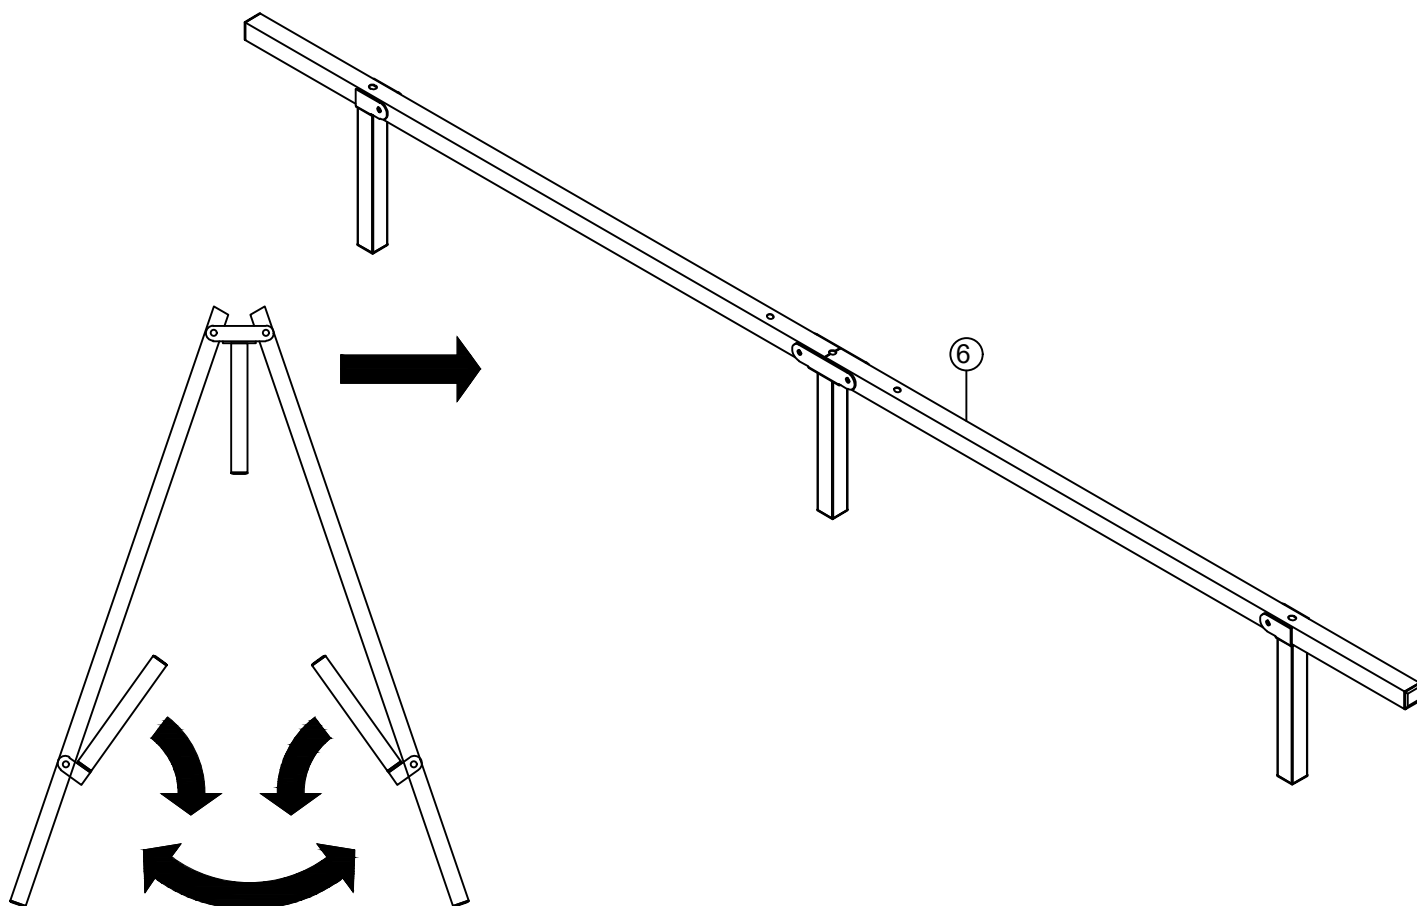


9




4mm
(F) x1pc



(H) x1pc






M6x50mm
(B) x3pcs




M6x30mm
(N) x2pcs

step2.To prevent friction noise,
unroll part H and fit it on part 6 ,the
length of part H can cut as you will.

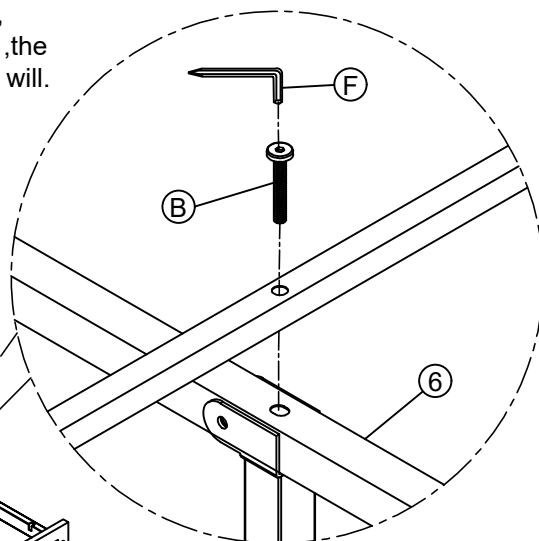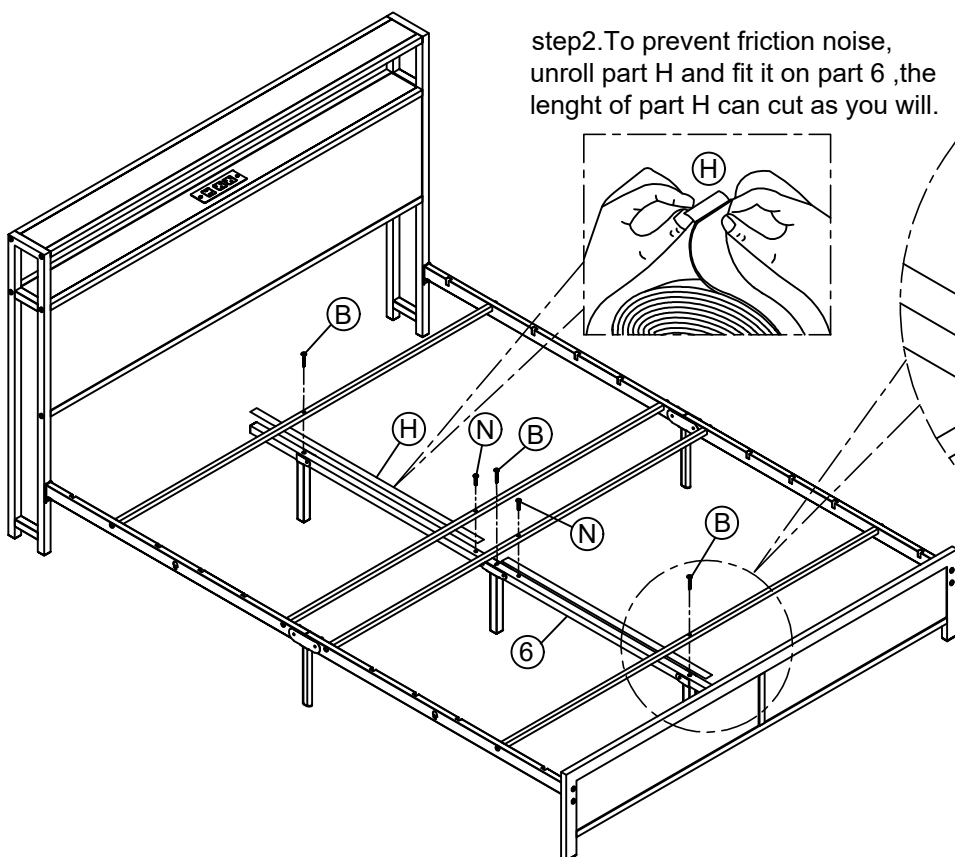
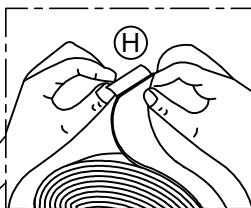


step1.Tighten screw B.





10

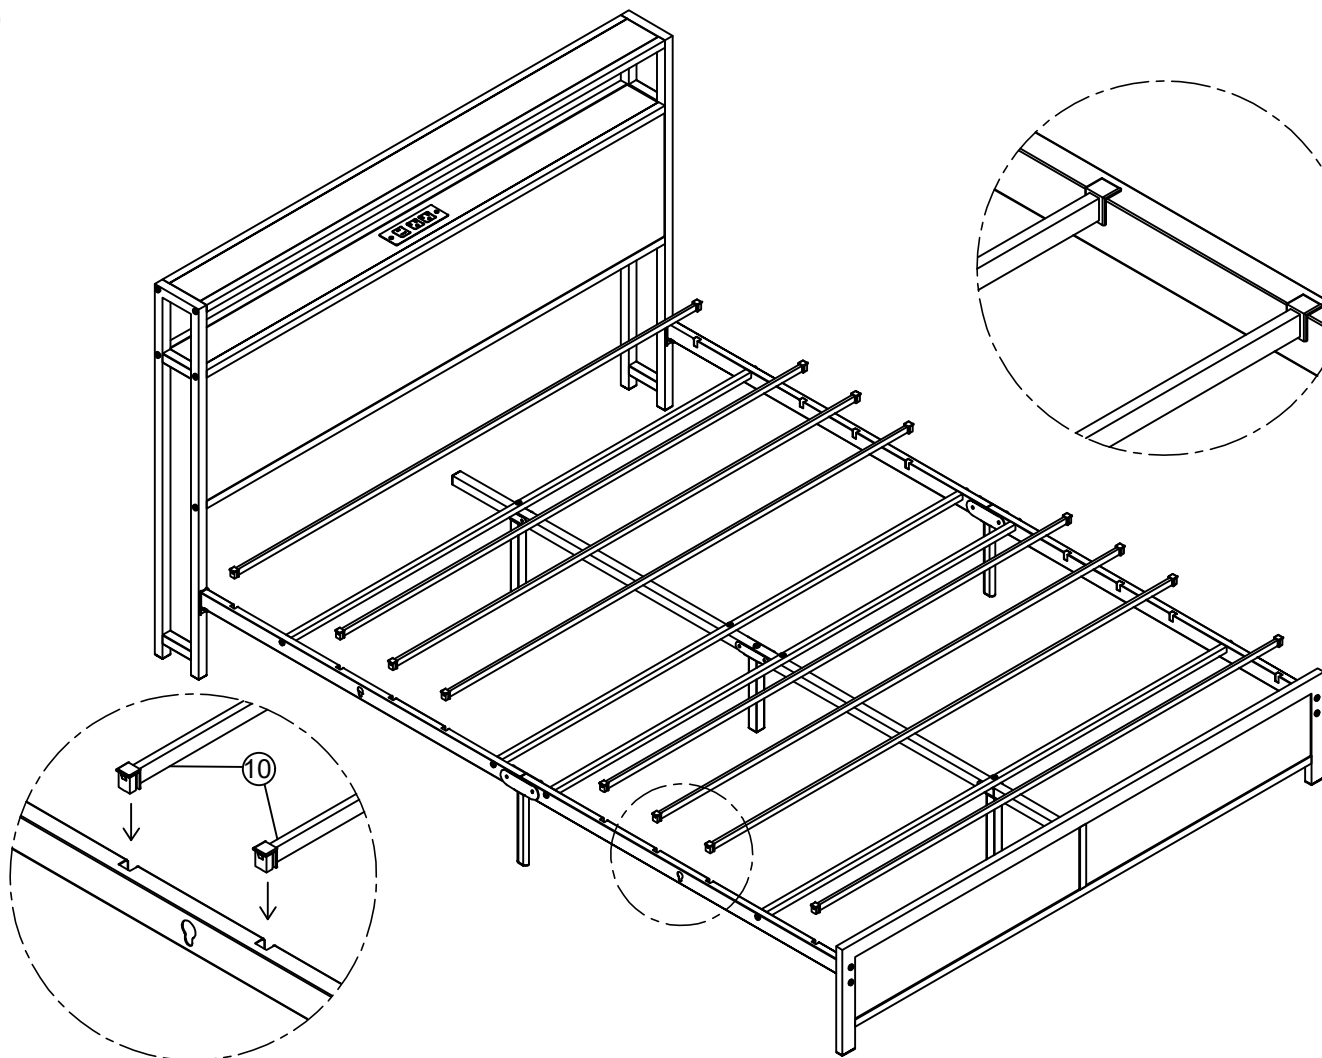




11

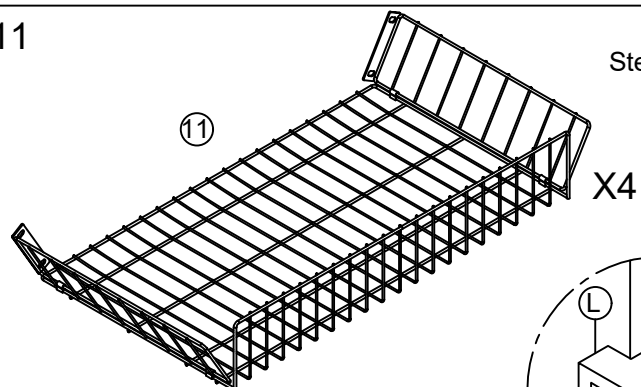


L x8pcs

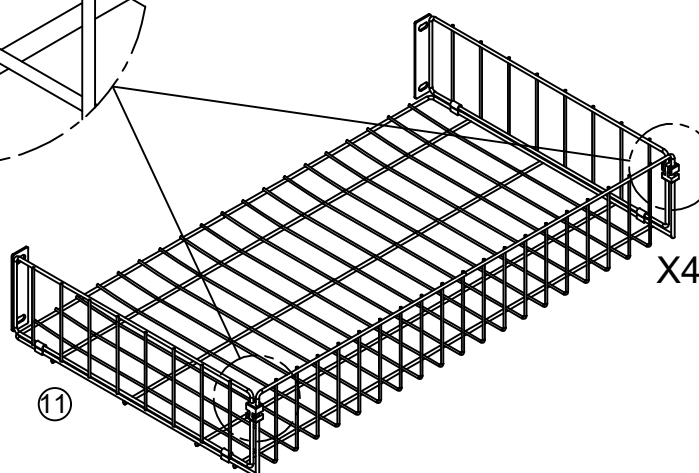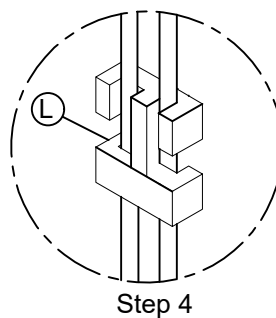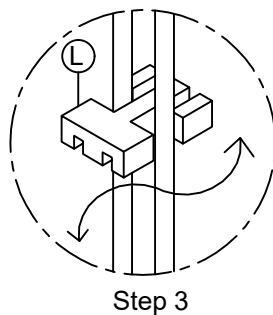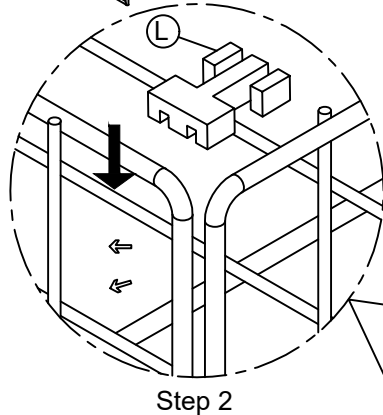


12

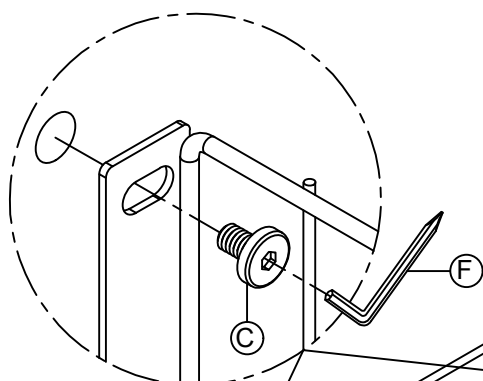4mm
F x1pcM6x10mm
C x20pcs


I x4pcs

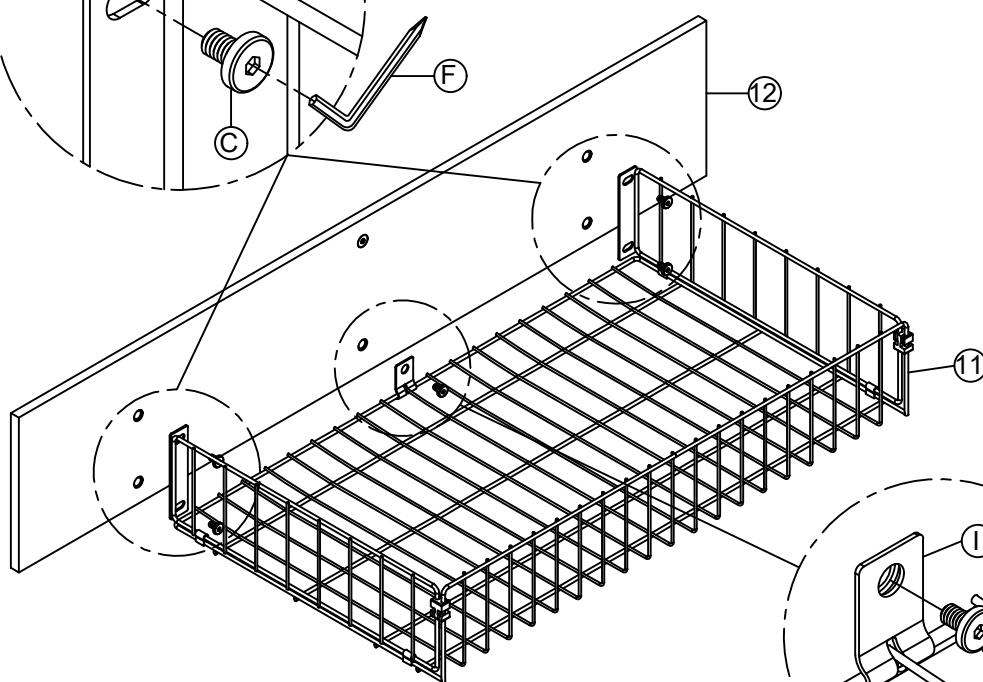


X4

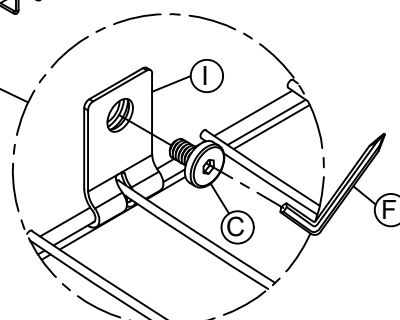


Clamp the wire with the opening of the front end of the wheel and press down to tighten the wire.




M x16pcs

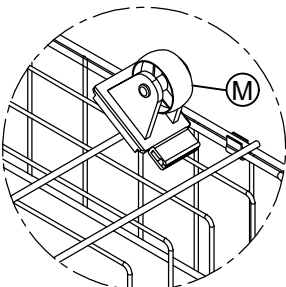



Step 1

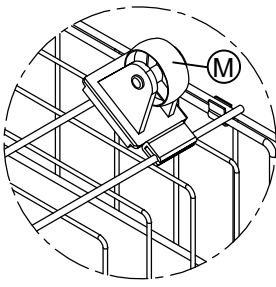


Step 2

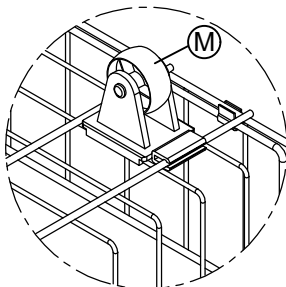



Step 3

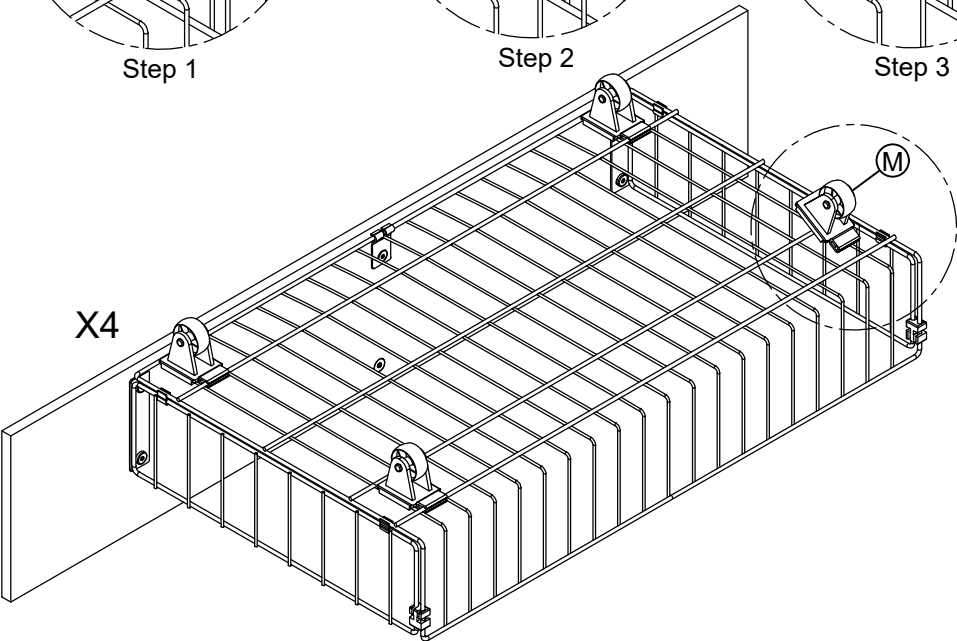


4mm
F x1pc



M8x19mm
E x4pcs

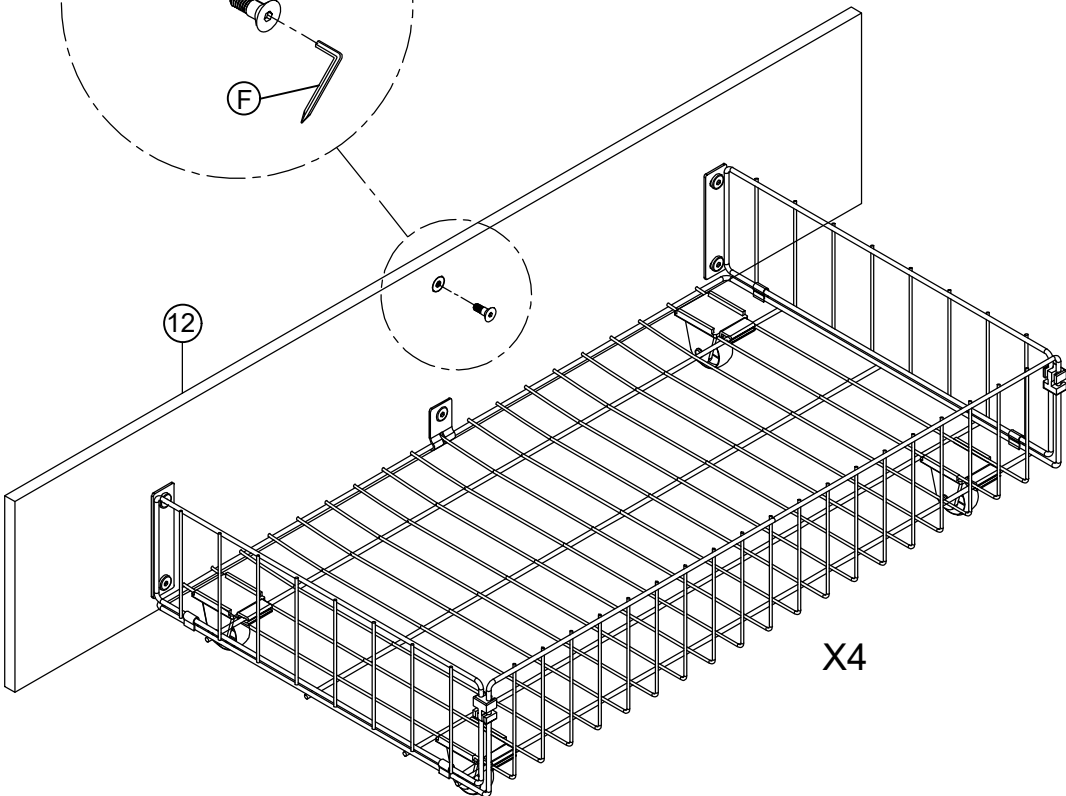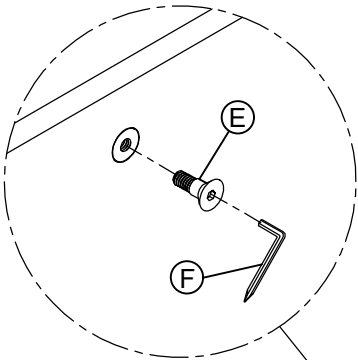

15

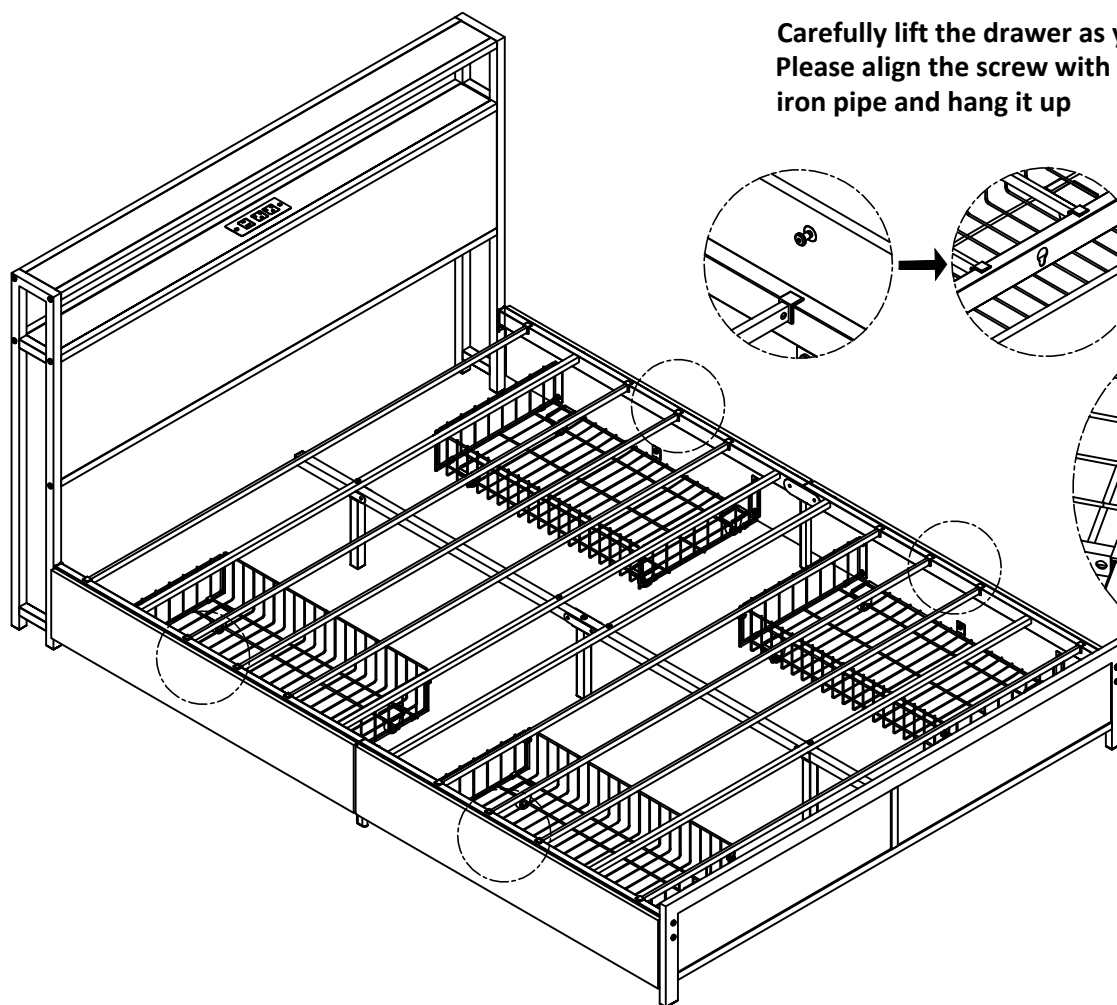

16

